






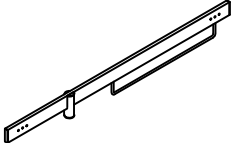
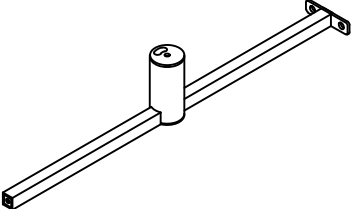
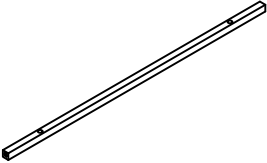
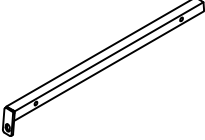
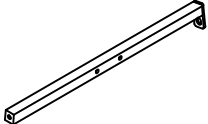
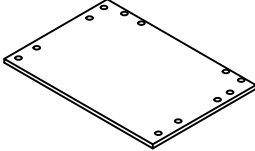
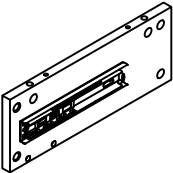
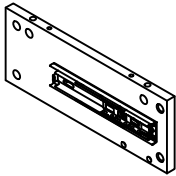
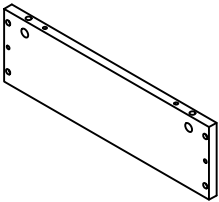
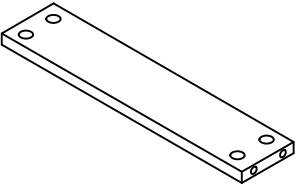
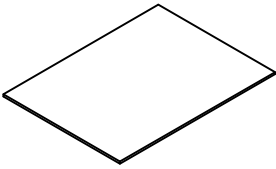
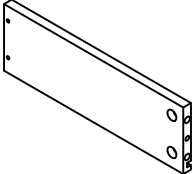
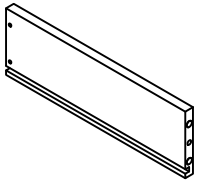
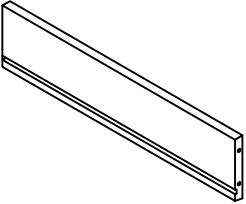
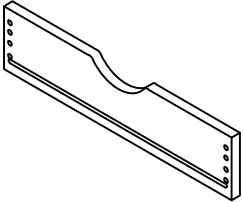
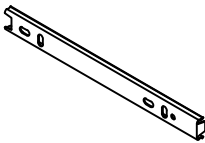










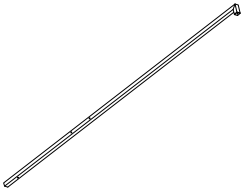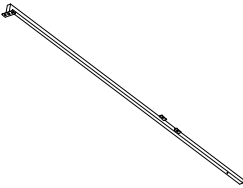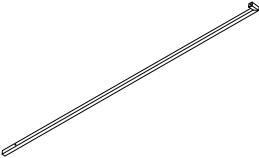


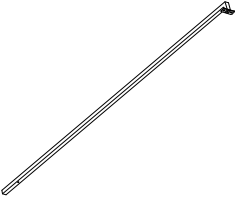


# ASSEMBLY INSTRUCTION

## HALL TREE WITH 1-DRAWER & MIRROR

<b>A</b> Post - Left Front	<b>B</b> Post - Left Back	<b>C</b> Post - Right Front	<b>D</b> Post -Right Back
			
1pc	1pc	1pc	1pc
<b>E</b> Mirror	<b>F</b> Middle Frame	<b>G</b> Shelf Board	<b>H</b> Top Panel
			
1pc	1pc	1pc	1pc
<b>I</b> Bottom Support	<b>J</b> Cross Bar - Bottom	<b>K</b> Cross Bar - Left	<b>L</b> Cross Bar - Right
			
1pc	2pcs	1pc	1pc
<b>M</b> Drawer Board - Top	<b>N</b> Drawer Side Board - LSF	<b>O</b> Drawer Side Board - RSF	<b>P</b> Drawer Board - Back
			
1pc	1pc	1pc	1pc
<b>Q</b> Support Panel	<b>R</b> Drawer Board - Bottom	<b>S</b> Drawer Left Panel	<b>T</b> Drawer Right Panel
			
1pc	1pc	1pc	1pc
<b>U</b> Drawer Back Panel	<b>V</b> Drawer Board - Front	<b>W</b> Slide Rail	<b>X</b> Bolt Ø1/4"x1-1/2"
			
1pc	1pc	2pcs	7pcs

<b>Y</b>	Bolt Ø1/4"x1-1/8"	<b>Z</b>	Bolt Ø1/4"x1/2"	<b>AA</b>	Bolt Ø1/4"x21mm	<b>AB</b>	Screw M4x22mm
							
	6pcs		12pcs		2pcs		4pcs
<b>AC</b>	Screw M4x25mm	<b>AD</b>	Screw M4x10mm	<b>AE</b>	Flat washer Ø1/4"x16mm	<b>AF</b>	Allen Key M4
							
	4pcs		4pcs		12pcs		1pc
<b>AG</b>	Bolt M6x25mm	<b>AH</b>	Nut Ø11.5x8mm	<b>AI</b>	Wood Dowel Ø6x40mm	<b>AJ</b>	Screwdriver (Not Provided)
							
	18pcs		18pcs		10pcs		1pc

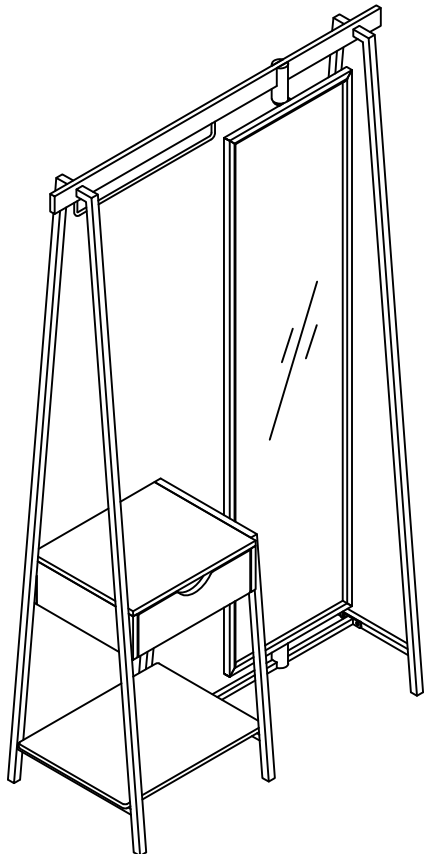


First page and second page list all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.



- 1** Assemble Post - Left Front (A) & Post - Right Front (C) to Top Panel (H), using Bolt (Y) to fasten by Allen Key (AF).

#### ASSEMBLY


Do not fully tighten all bolts until assembly is complete. This will help all parts to assemble properly.

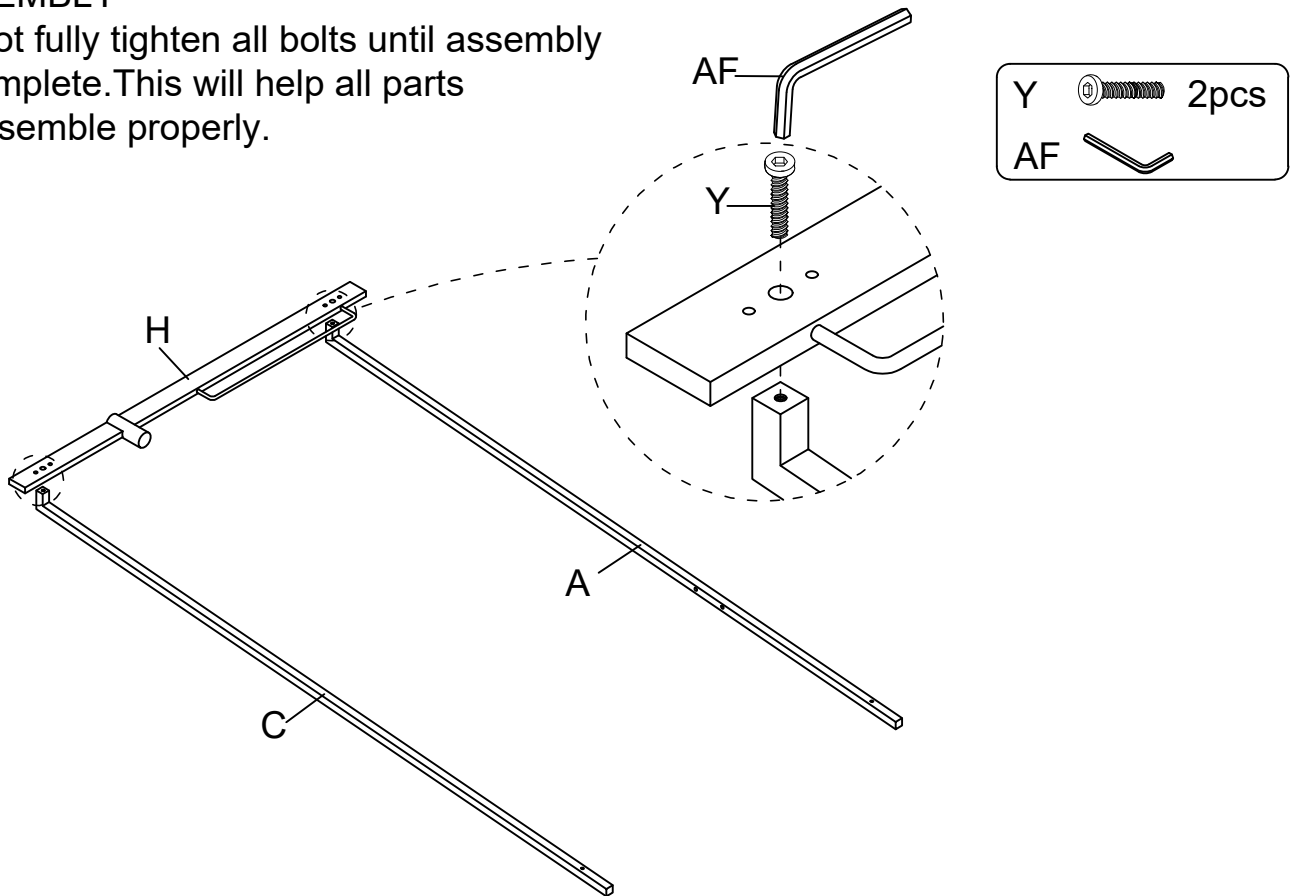


- 2** Assemble Cross Bar - Left / Right (K, L) to Post - Left Front (A) & Post - Right Front (C), using Bolt (Z) & Flat Washer (AE) to fasten by Allen Key (AF).

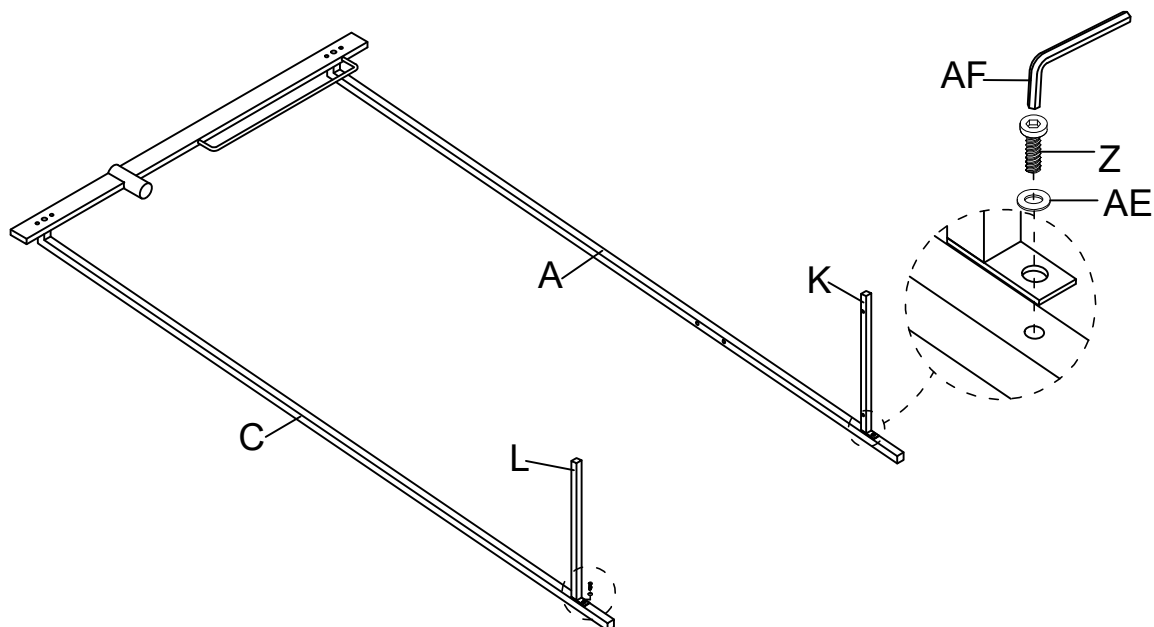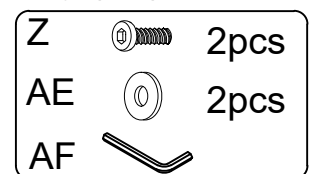

- 3** Assemble Post - Left Back (B) & Post - Right Back (D) to Cross Bar - Left / Right (K, L) and Top Panel (H), using Bolt (Z), Bolt (X) & Flat Washer (AE) to fasten by Allen Key (AF).

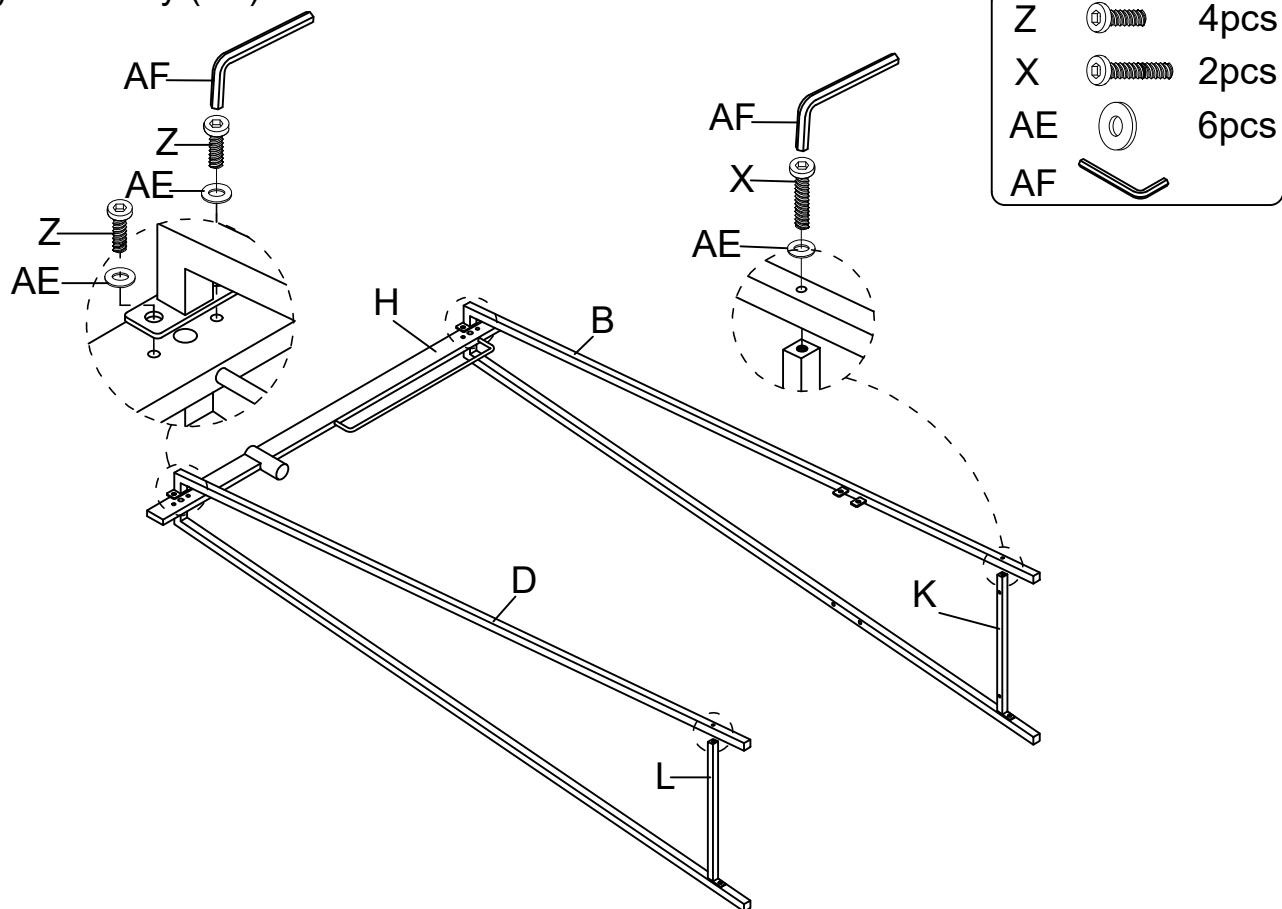

- 4** Assemble Bolt (AG) to Drawer Side Board - LSF (O) & Drawer Side Board - RSF (N) by Screwdriver (AJ).

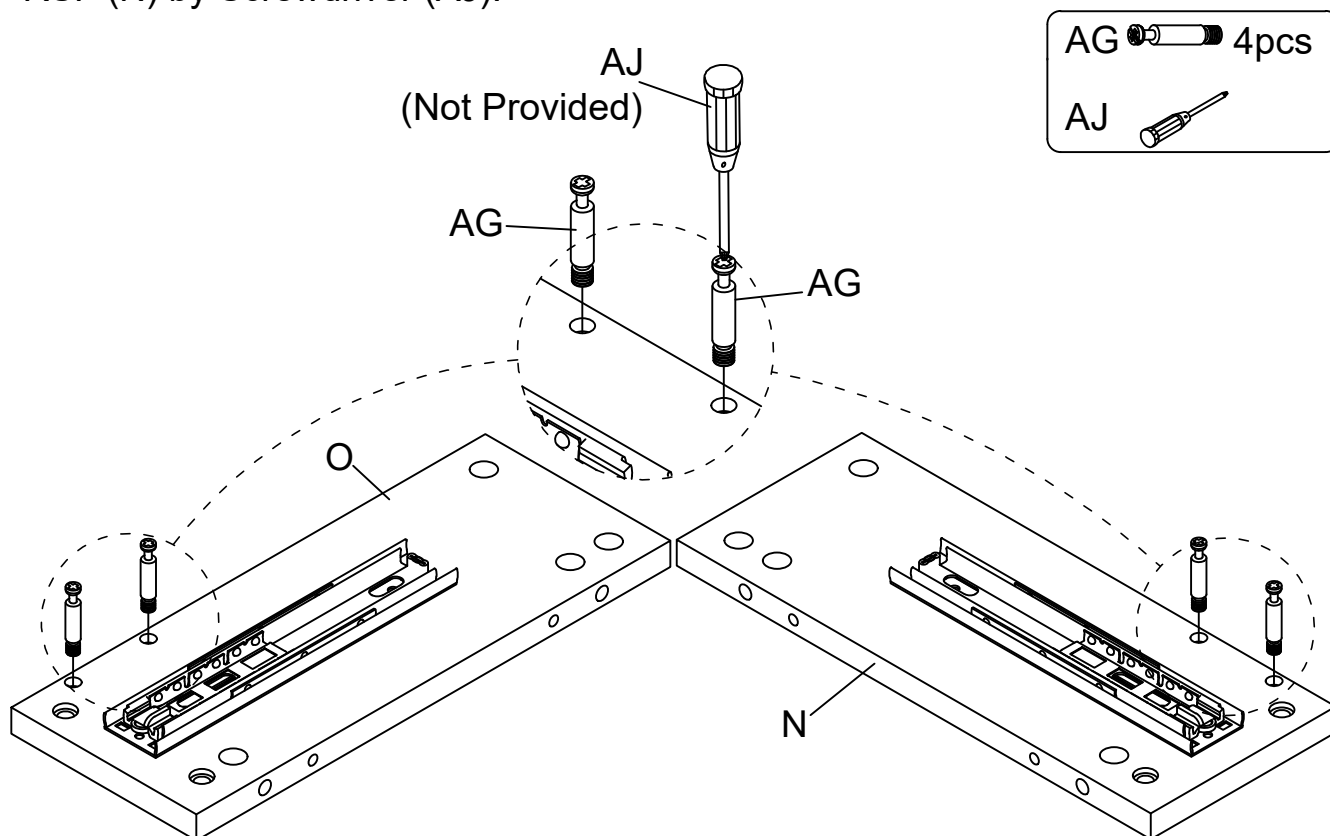


5

Assemble Drawer Side Board - LSF (O) & Drawer Side Board - RSF (N) to Support Panel (Q), using Nut (AH) to lock with Bolt (AG), then fasten by Screwdriver (AJ).

AH  4pcs

AJ  1pc

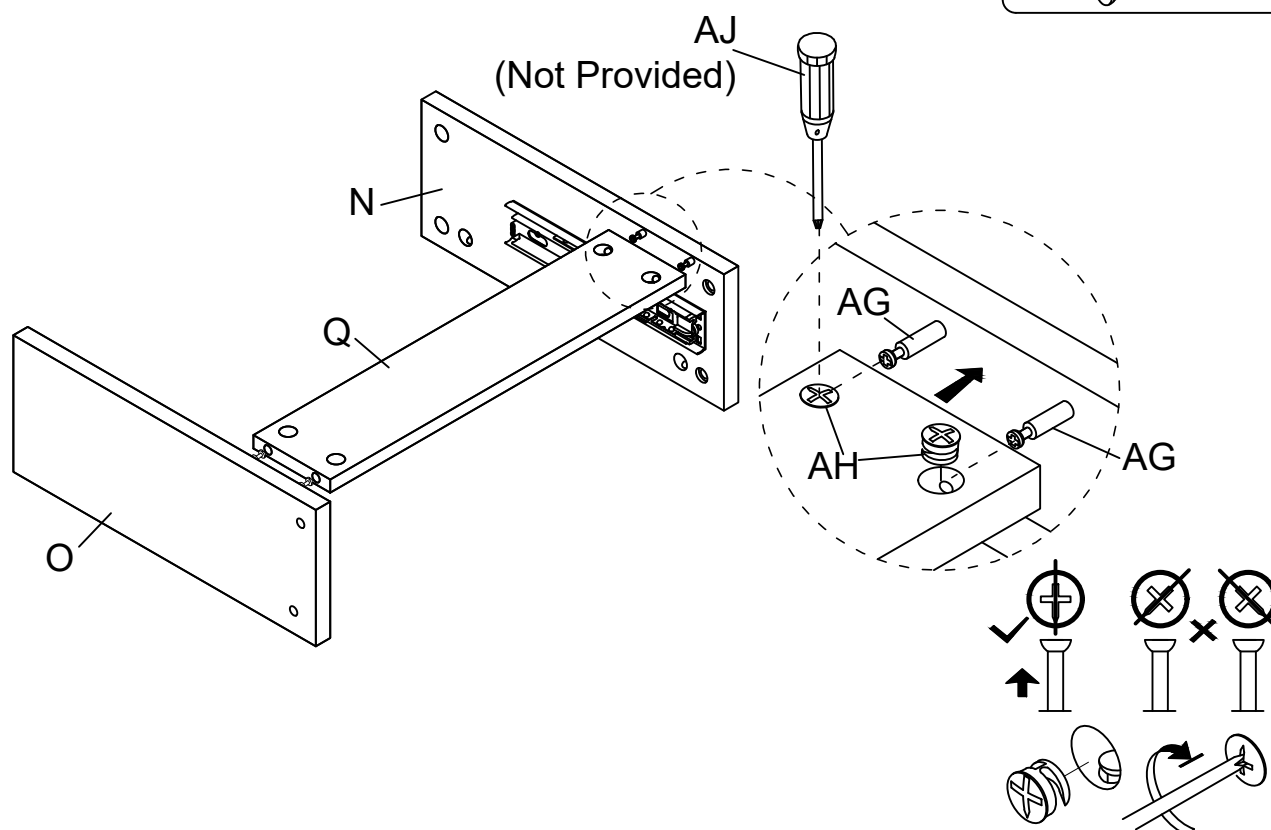


6

Assemble Bolt (AG) & Wood Dowel (AI) to Drawer Board - Back (P) by Screwdriver (AJ).


AG  4pcs

AI  2pcs


AJ 

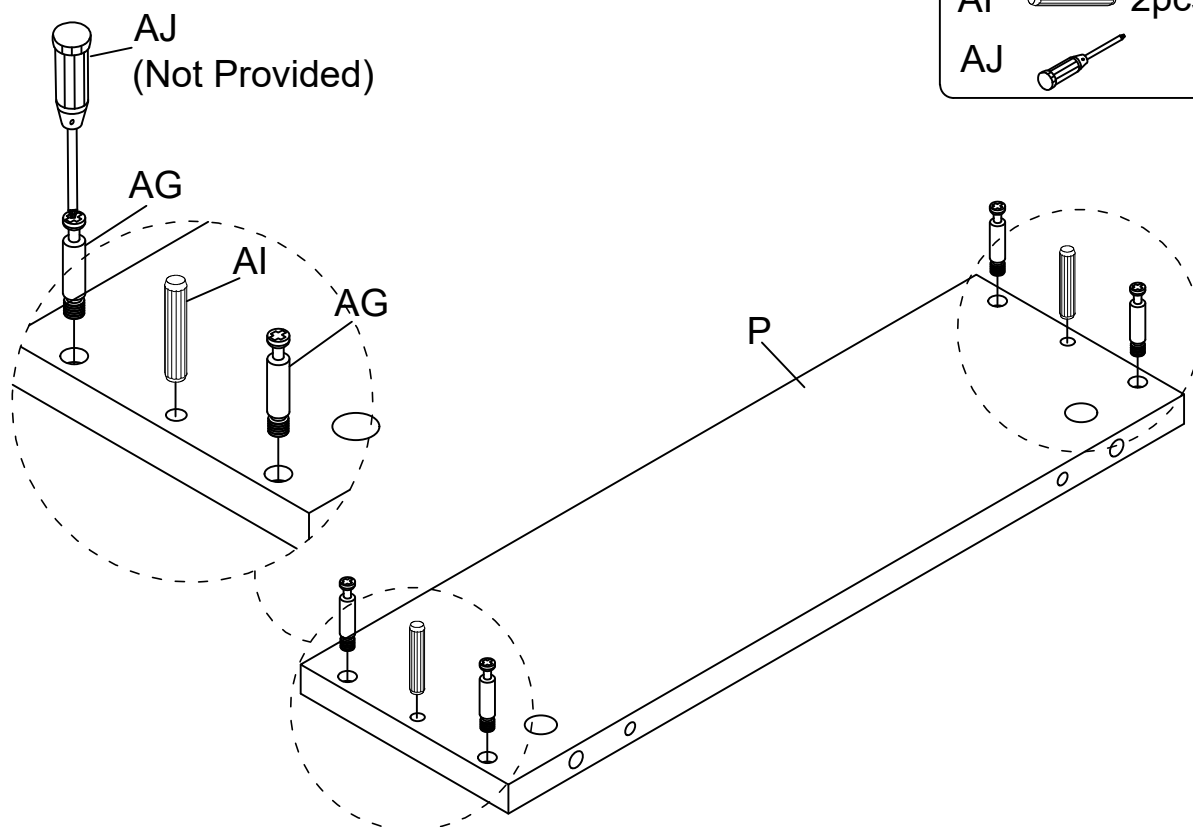


**7** Assemble Drawer Board - Back (P) to Drawer Side Panel - LSF (O) & Drawer Side Panel - RSF (N), using Nut (AH) to lock with Bolt (AG), then fasten by Screwdriver (AJ).

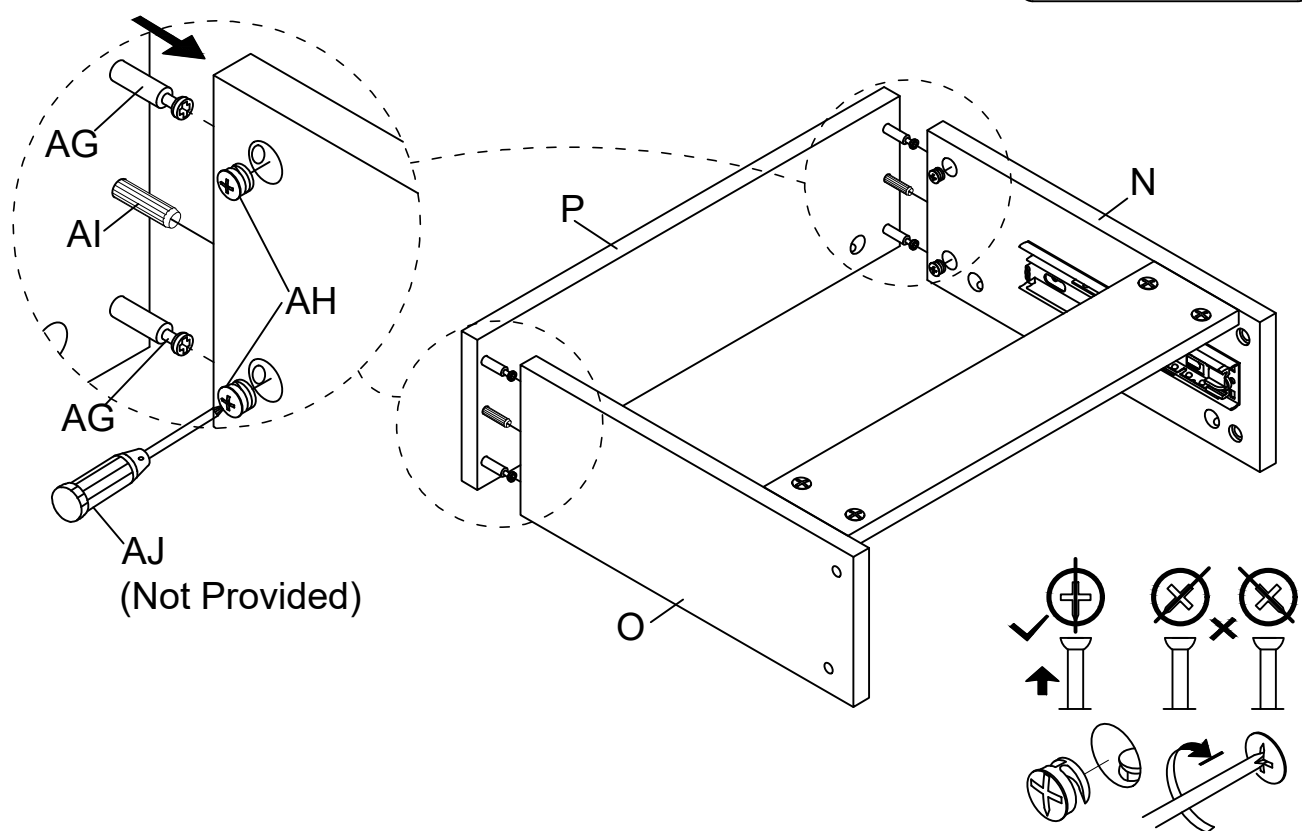


**8** Assemble Bolt (AG) & Wood Dowel (AI) to Drawer Board - Top (M) by Screwdriver (AJ).

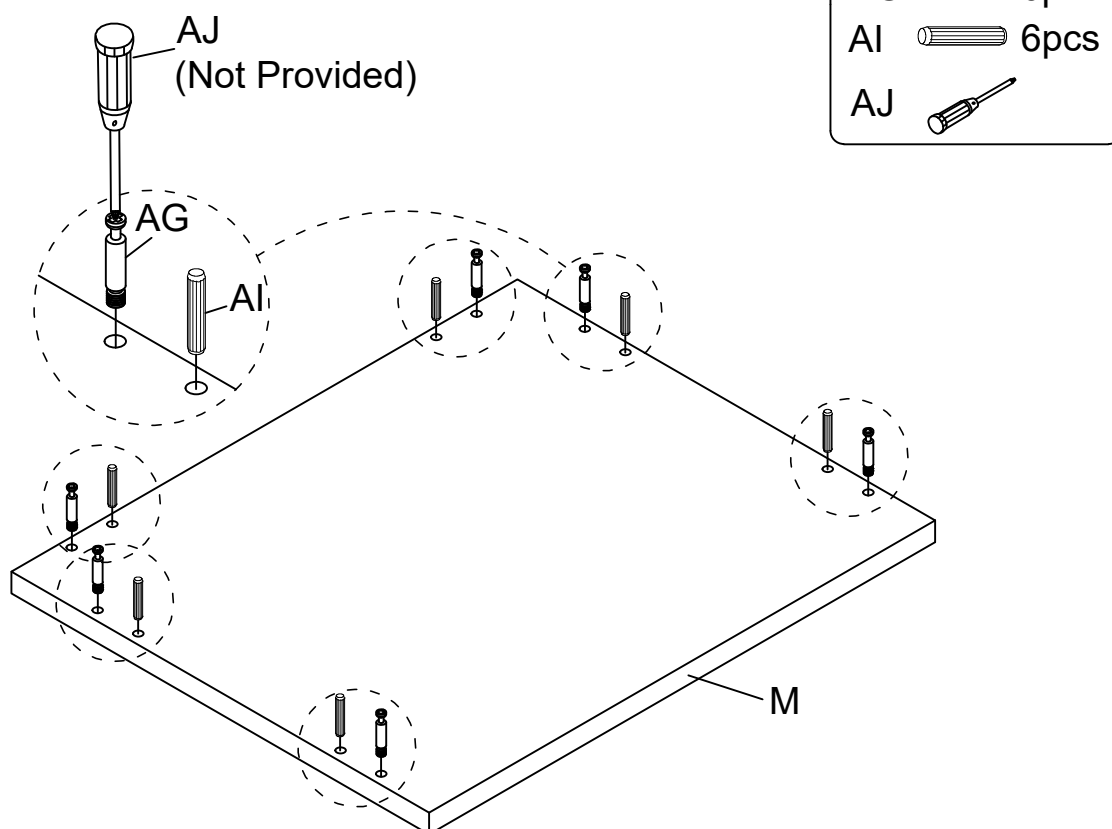


- 9** Assemble Drawer Board - Top (M) to Drawer Side Panel - LSF (O), Drawer Side Panel - RSF (N) & Drawer Board - Back (P), using Nut (AH) to lock with Bolt (AG), then fasten by Screwdriver (AJ).

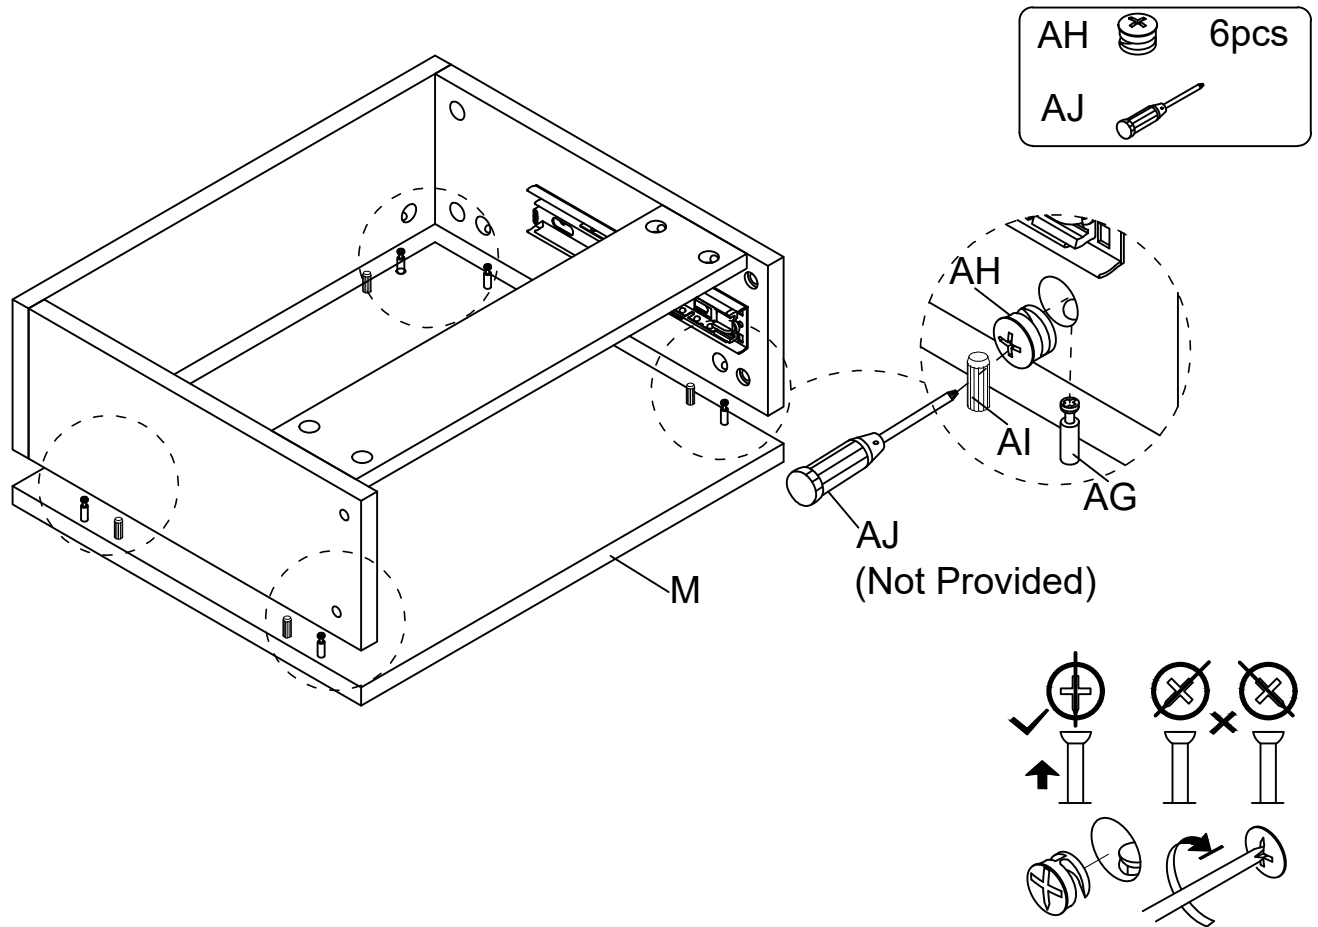


- 10** Assemble the pre-assembled drawer frame to Middle Frame (F) and Post - Left Back (B), using Bolt (Z) & Flat Washer (AE) to fasten by Allen Key (AF).

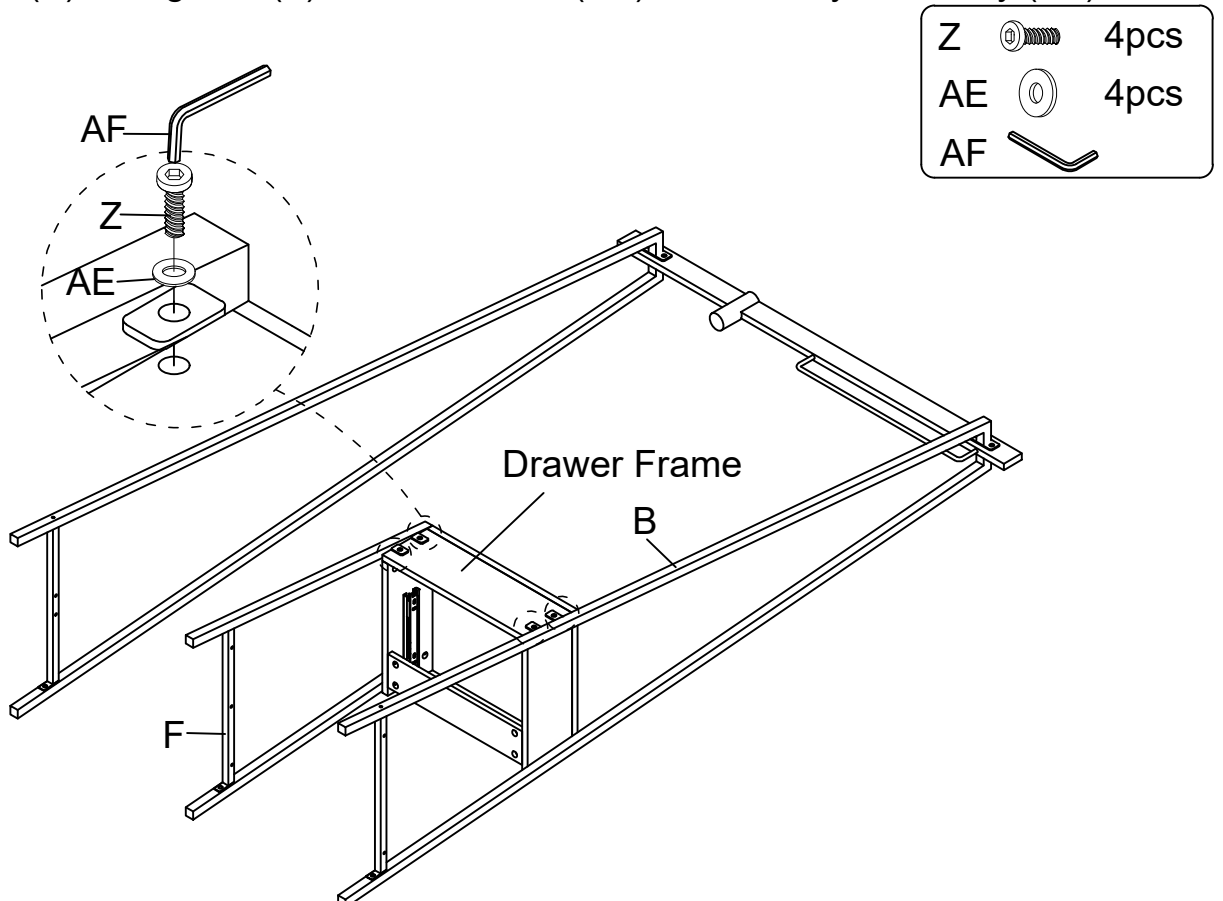

- 11** Assemble Bottom Support (I) & Cross Bar - Bottom (J) to Middle Frame (F) and Cross Bar - Left / Right (K, L), using Bolt (Z) & Bolt (X) to fasten by Allen Key (AF).

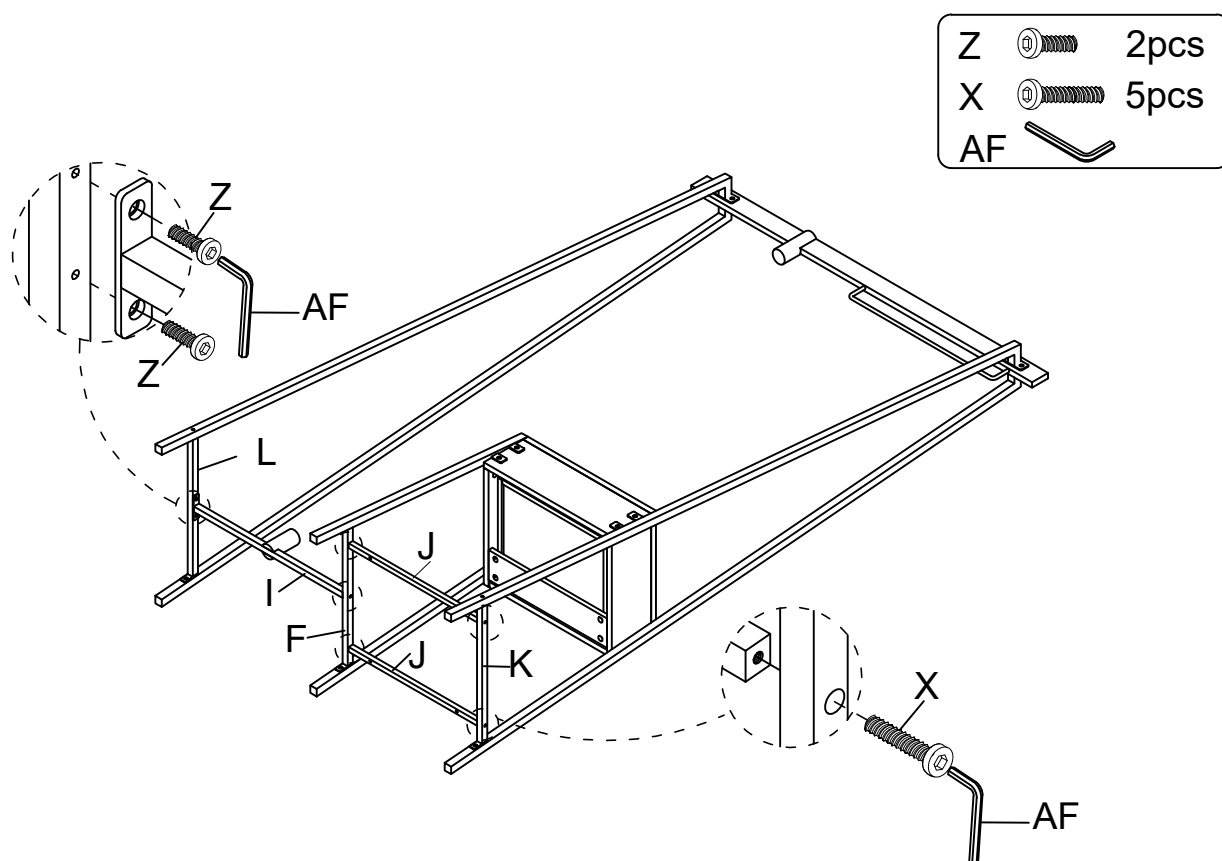


- 12** Assemble Shelf Board (G) to Cross Bar - Bottom (J), using Screw (AB) to fasten by Screwdriver (AJ).

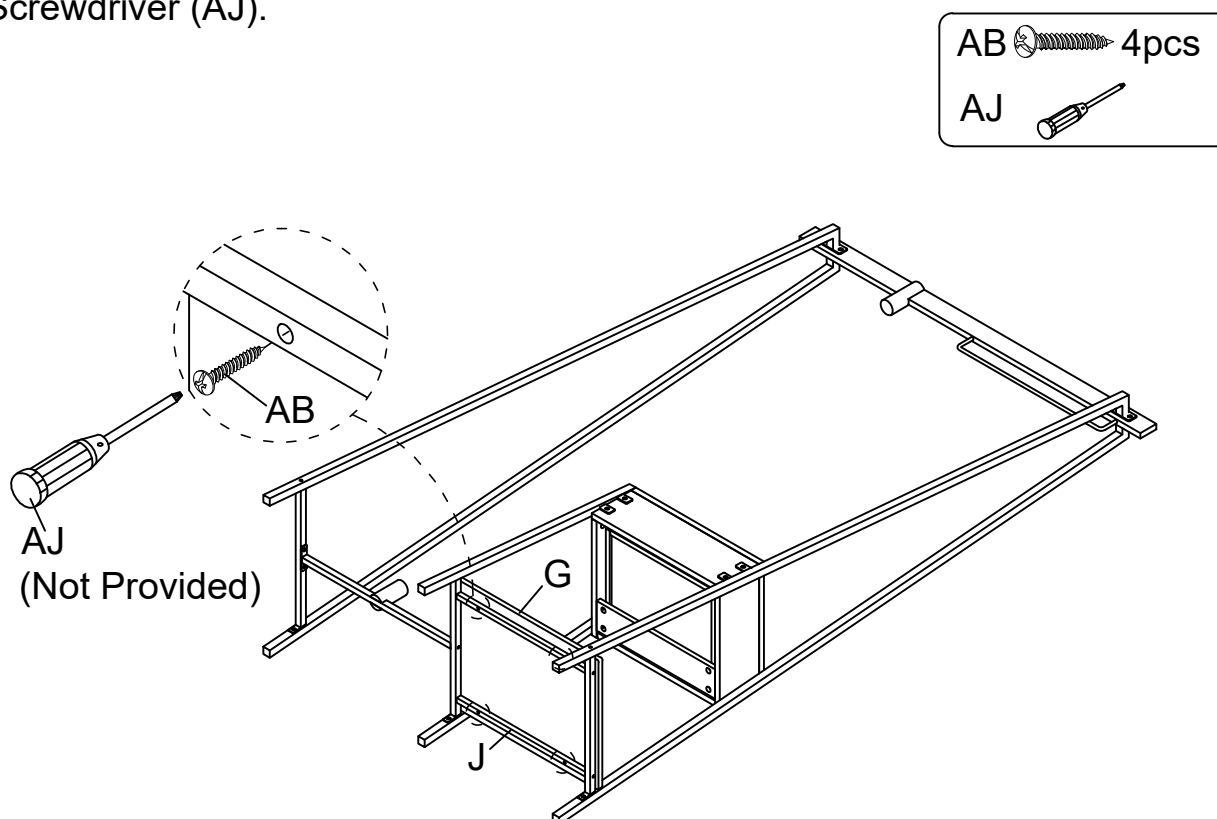





**13** Assemble Drawer Frame to Middle Frame (F) and Post - Left Front (A), using Bolt (Y) to fasten by Allen Key (AF).

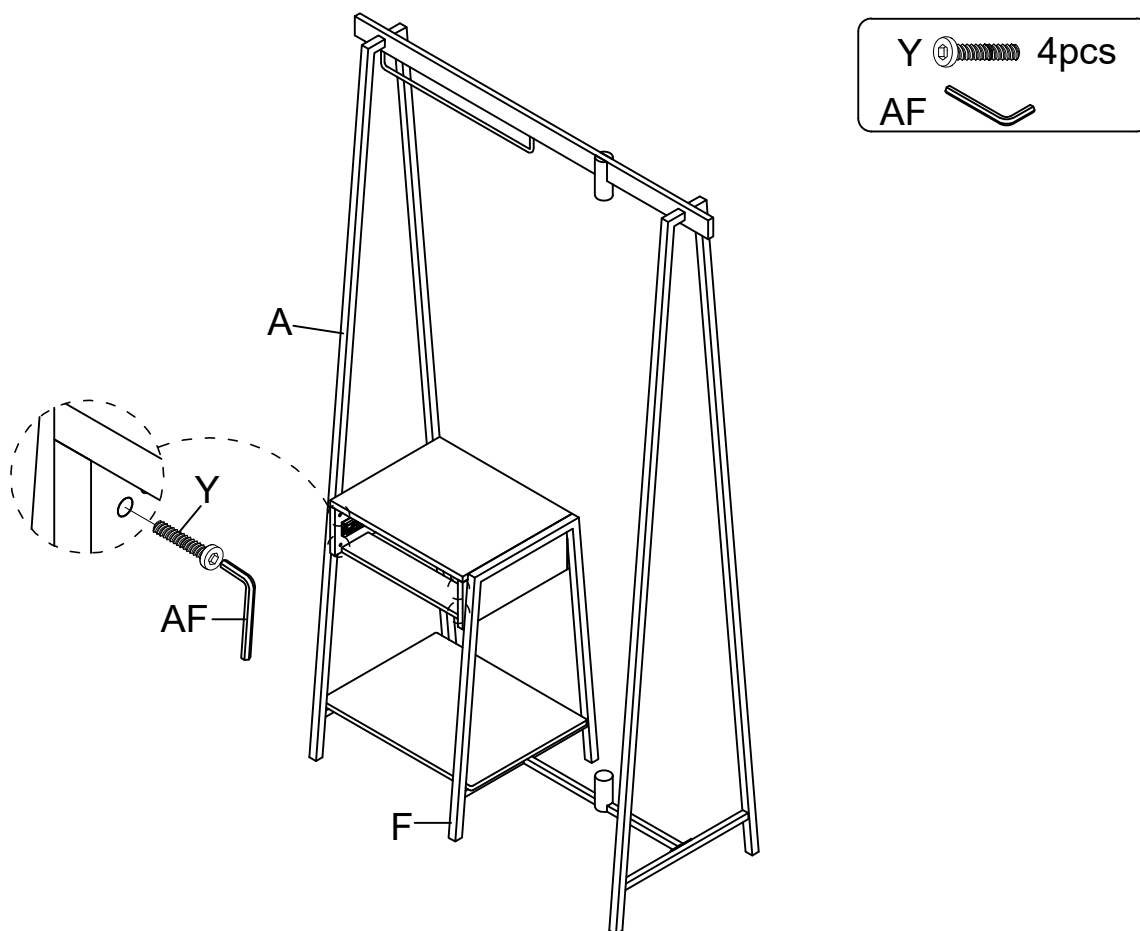


**14** Assemble Slide Rail (W) to Drawer Left Panel (S) & Drawer Right Panel (T), using Screw (AD) to fasten by Screwdriver (AJ).

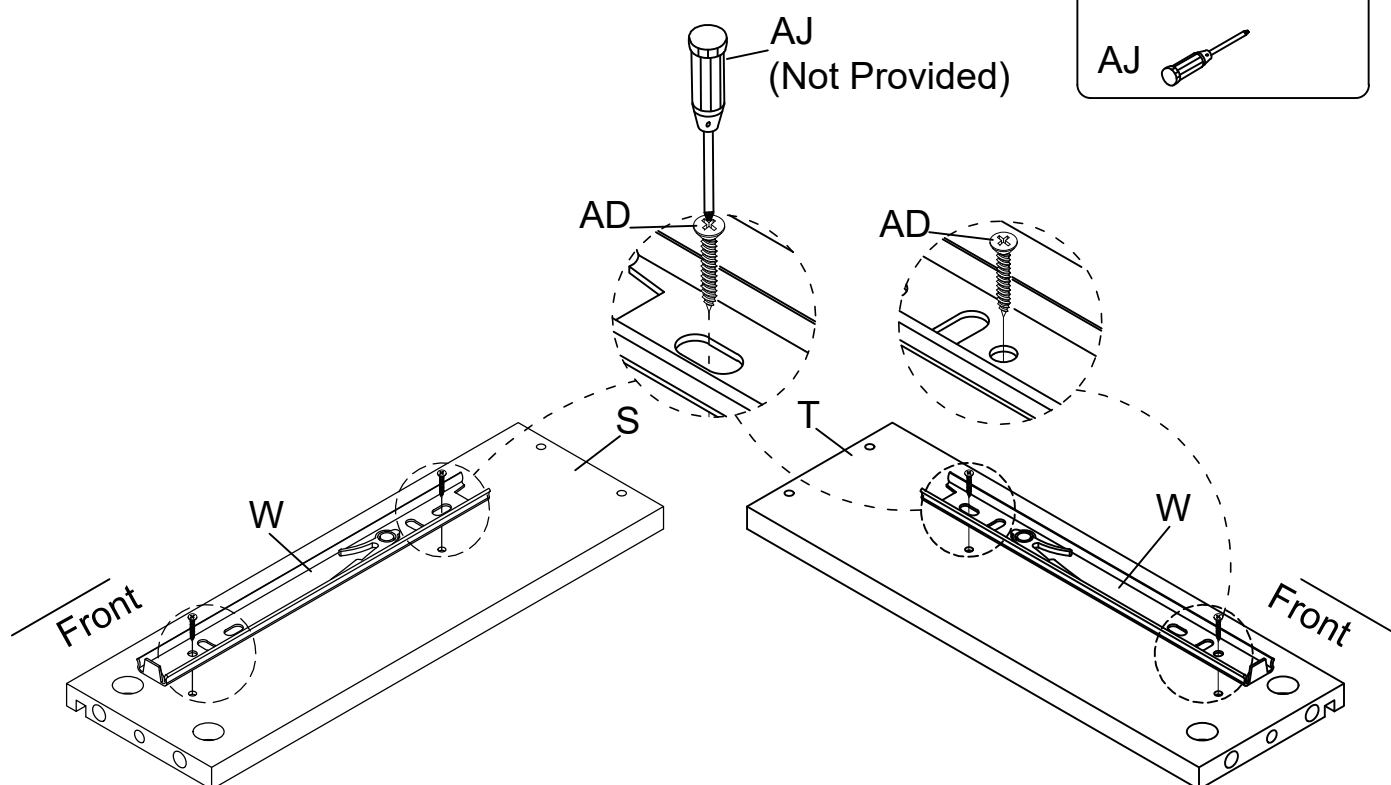


**15** Assemble Drawer Back Panel (U) to Drawer Left Panel (S) & Drawer Right Panel (T), using Screw (AC) to fasten by Screwdriver (AJ).

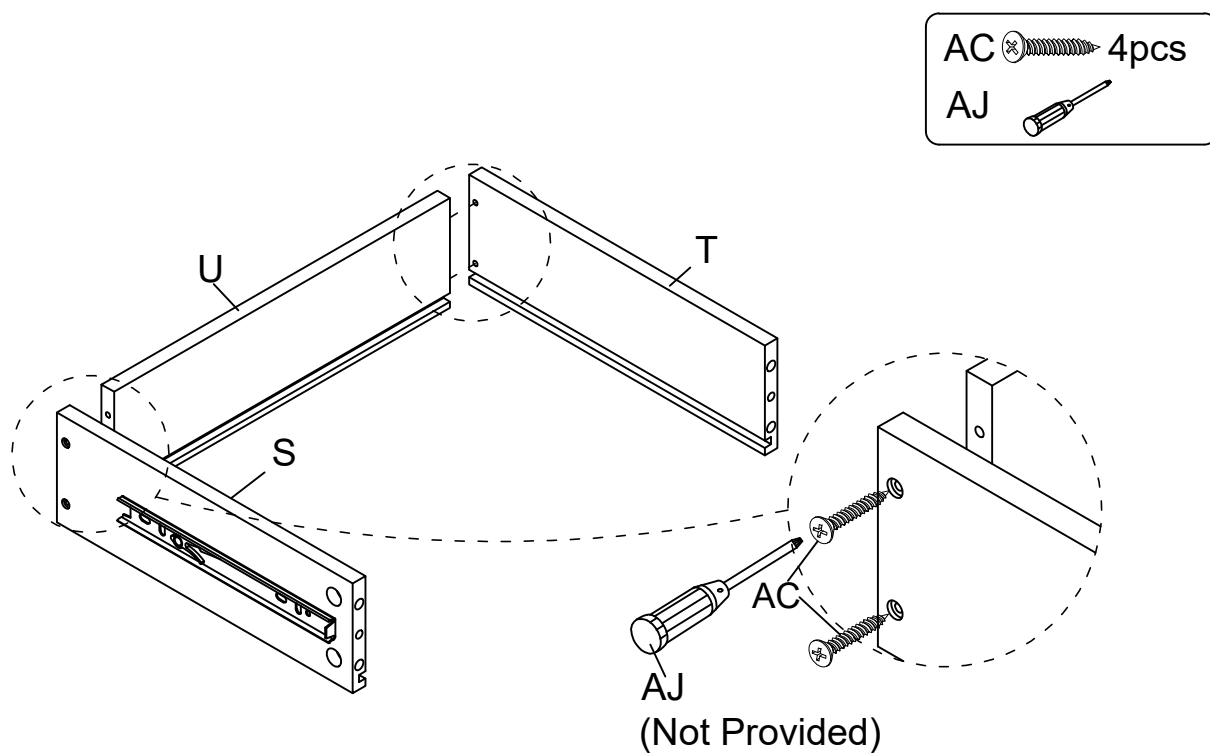


**16** Assemble Drawer Board - Bottom (R) to Drawer Left Panel (S), Drawer Right Panel (T) & Drawer Back Panel (U).

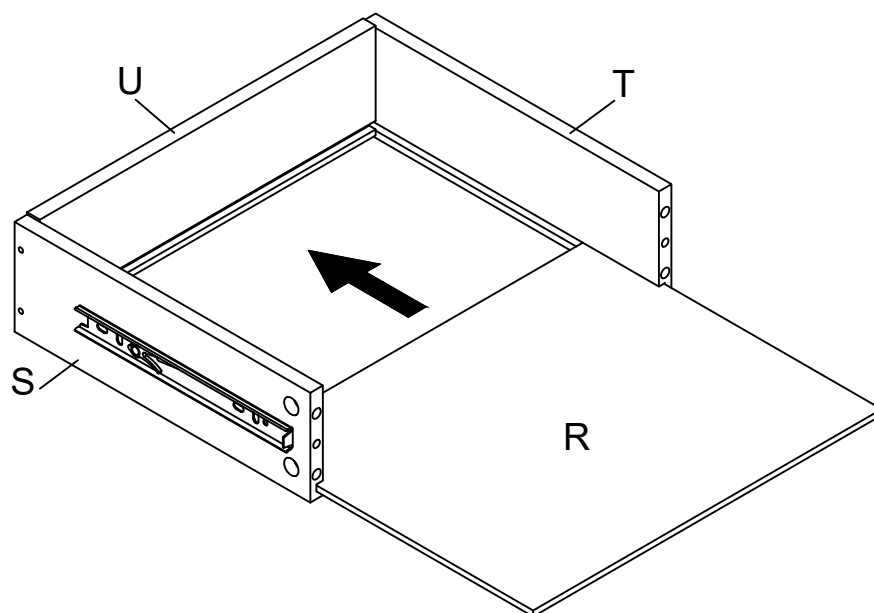


**17** Assemble Bolt (AG) & Wood Dowel (AI) to Drawer Board - Front (V) and fasten by Screwdriver (AJ).

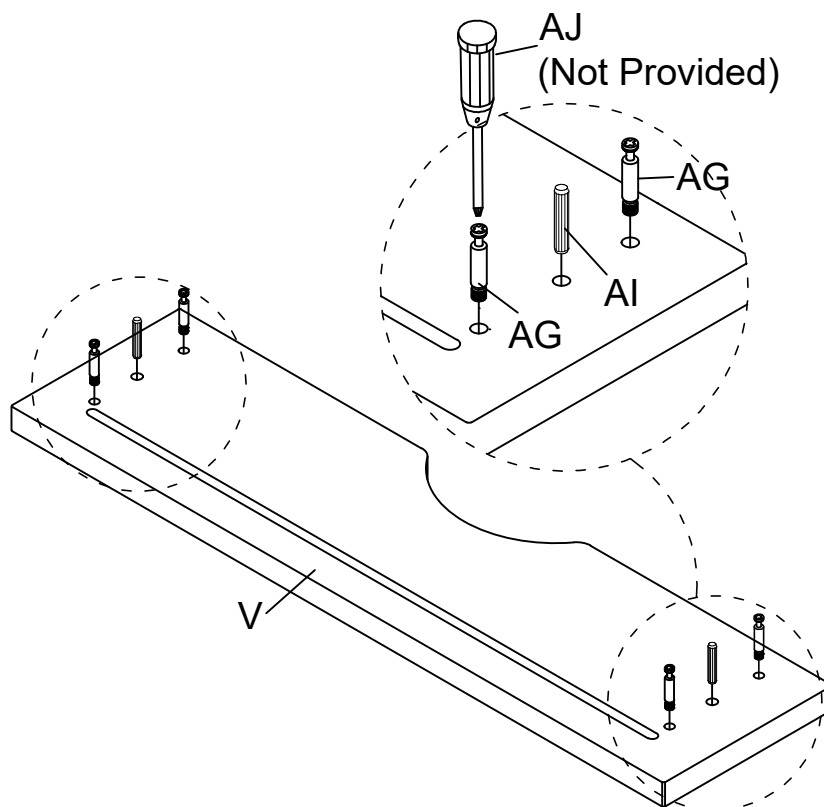

**18** Assemble Drawer Board - Front (V) to Drawer Left Panel (S) & Drawer Right Panel (T), using Nut (AH) to lock with Bolt (G), then fasten by Screwdriver (AJ).

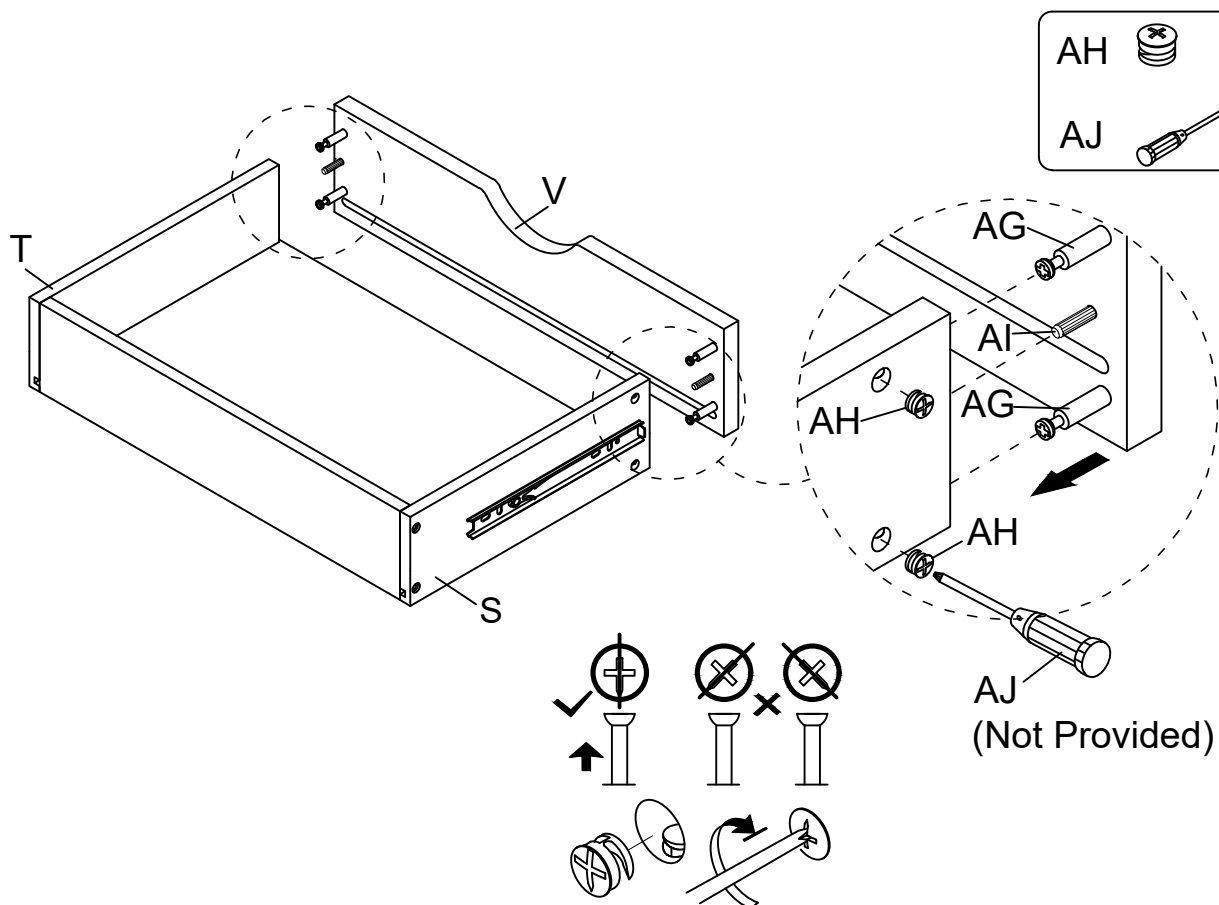


- 19** Assemble the pre-assembled drawer box by using Slide Rail (W) into the pre-assembled drawer frame. Move Slide ball spacers the front. Hold drawer horizontally, and slide runners into ball spacers.

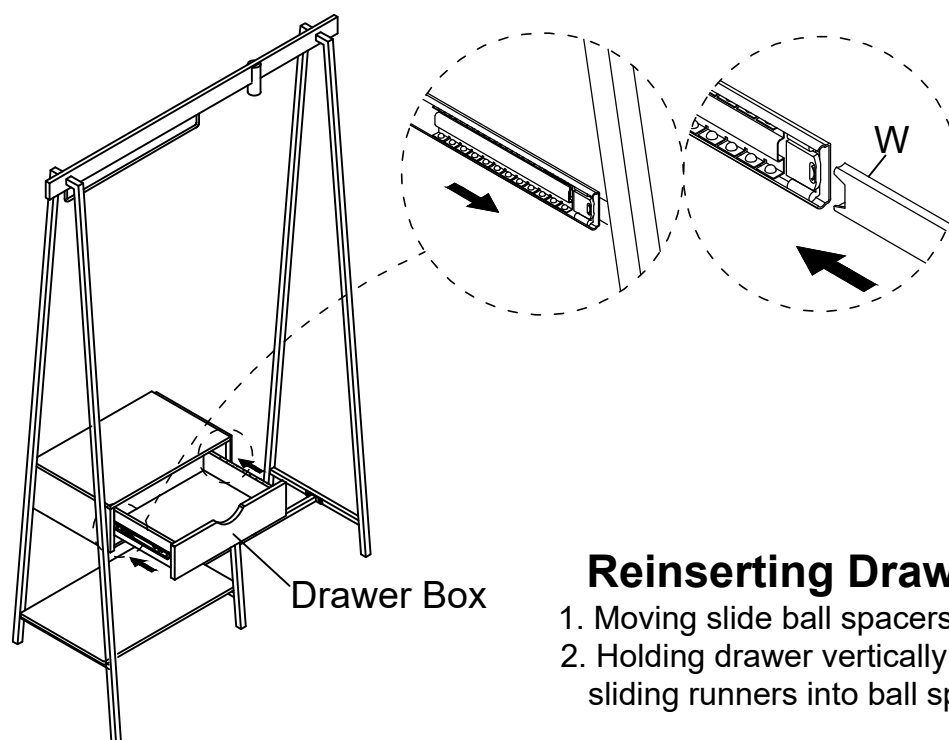

### Reinserting Drawers

1. Moving slide ball spacers to front.
2. Holding drawer vertically, and sliding runners into ball spacers.

- 20** Assemble Mirror (E) to Top Panel (H) & Bottom Support (I), using Bolt (AA) to fasten by Allen Key (AF).

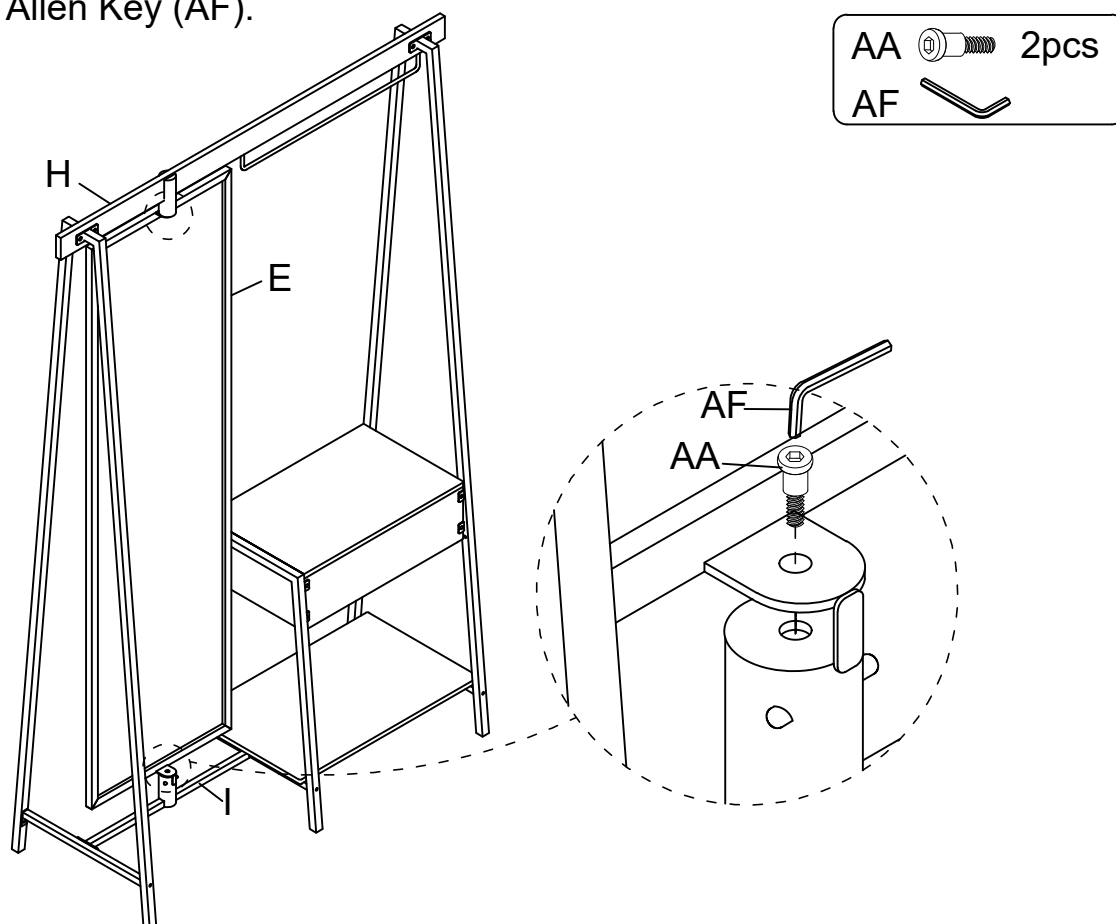

### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.