


### TOOLS NEEDED:




### PARTS:



#6 x 3/8" Flat Head Screw

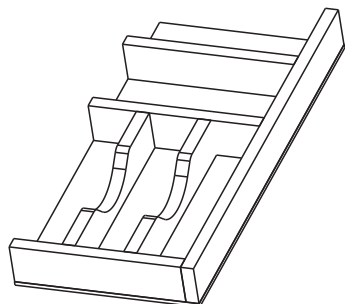


Base Insert

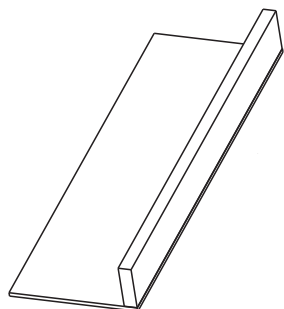


Insert Extension

1

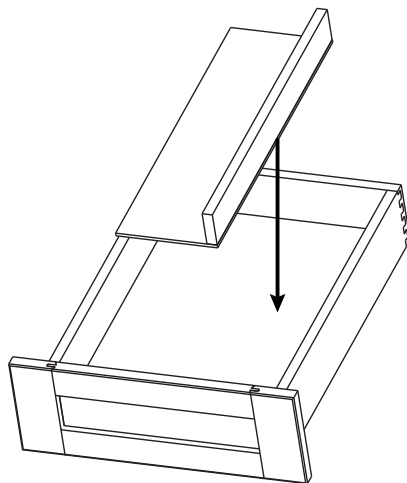


Place the Extension in the drawer first toward the right side of the drawer box.

2

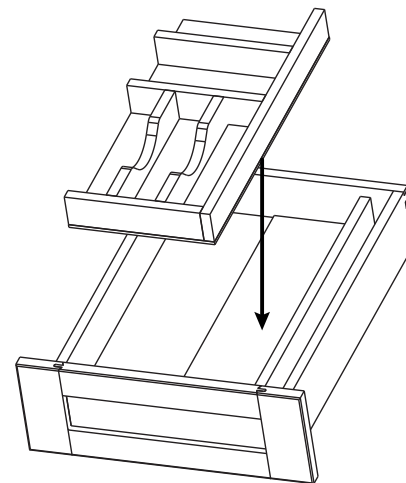


Next, place the Base Insert in the drawer overlapping the Extension.

3

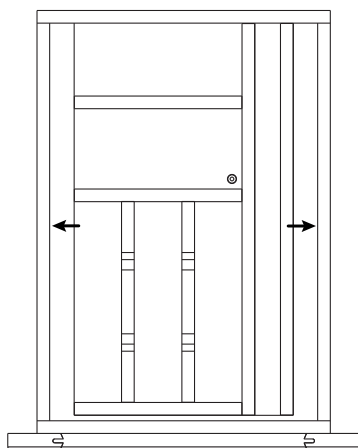

Push the Base Insert to the left drawer box wall while also pushing the Extension to the right drawer box wall.

4

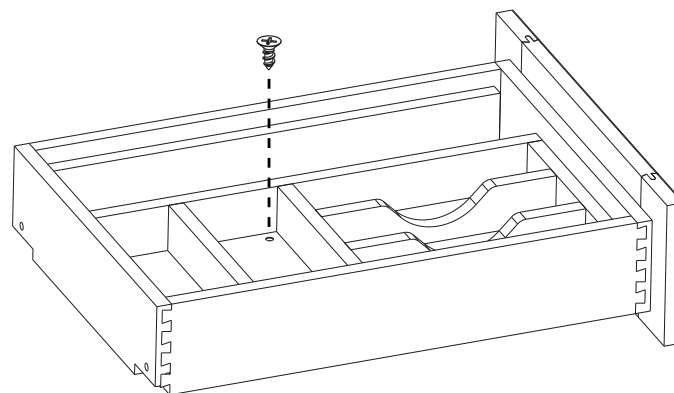

With the two parts of the insert properly positioned, drive the #6 x 3/8" Flat Head Screw through the pre-drilled hole in the Base Insert and into the Extension.

**Note: Do not overtighten the screw.**