









HEKMAN


A HOWARD MILLER COMPANY

ASSEMBLY INSTRUCTIONS


23324 - Arm Chair Upholstered

Page 1


A		5/16" x 12.5 x 8.5mm	4Pcs
B		5/16	10Pcs
C		5/16 x 19mm	10Pcs
D		5/16 x 45mm	2Pcs
E		5/16 x 76mm	4Pcs
F		Ø8 x 35mm	2Pcs
G		4mm	1Pc
H			1Pc

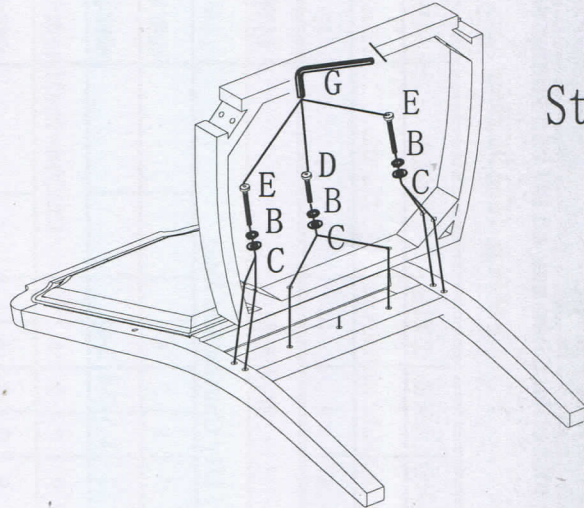

Step 1

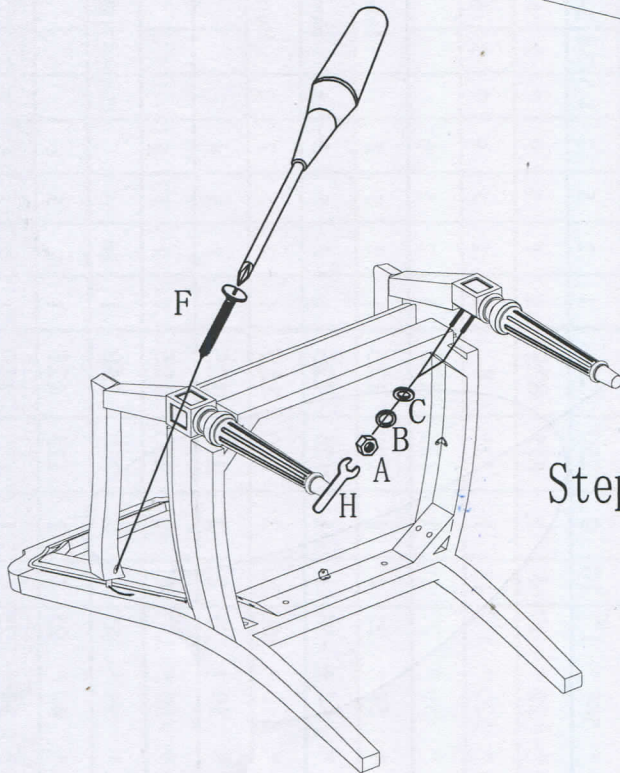

Step 2

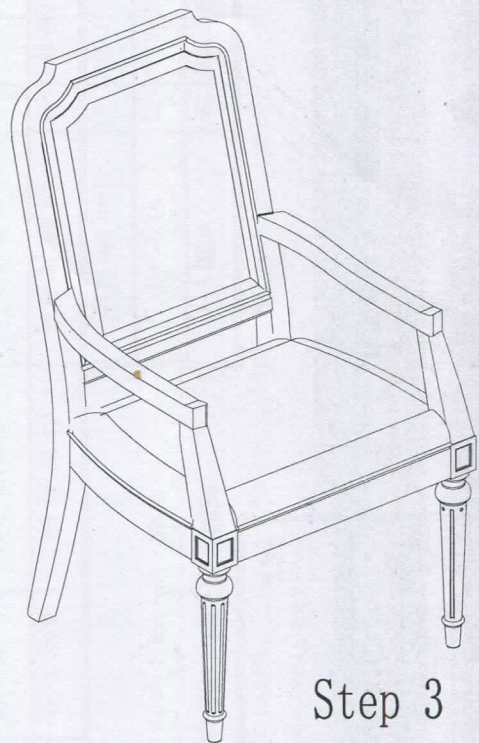

Step 3

Assemble the chair on soft and clean surface to prevent scratching

Step 1: Assemble the back frame and the chair seat together with Bolt (E, D), Lock Washer (B) and Flat washer (C) using Wrench (G).

Step 2: Assemble the front legs to the chair with Nut (A), Lock Washer (B) and Flat washer (C) using Wrench (H). Attach the arm to back legs with screw (F). Do not tighten screw or nuts completely

Step 3: Set the chair upright on a flat surface. Adjust front legs so all four chair legs touch the floor, tighten nut completely on front legs. (The seat cushion may need to be loosen to adjust front legs).

Step 4: Tighten screw that attached arms to back legs.

MADE IN VIETNAM