

Scan to watch the installation video
<https://delivr.com/27xzg>



IMPORTANT:

Before you begin, make sure you familiarize yourself with all the parts and fully read the instructions.


CUSTOMER SERVICE:

Toll free customer help line available weekdays between 7:00am and 6:00pm Central Time at 800-463-0660.

TOOLS NECESSARY:

Screw gun or Phillips screwdriver, level and tape measure. NOTE: If screw gun has a clutch, set to lowest setting so as not to over tighten and/or strip screws.

PARTS IDENTIFICATION:

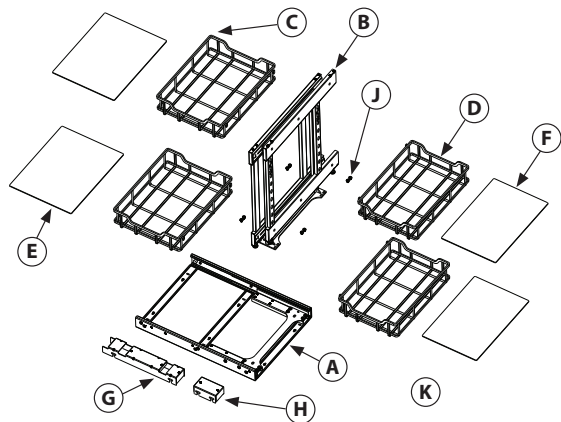


A	Base Assembly	1 pc
B	Basket Assembly	1 pc
C	Primary Basket	2 pcs
D	Secondary Basket	2 pcs
E	Primary Liner	2 pcs
F	Secondary Liner	2 pcs
G	Roller Guide Bracket	1 pc
H	Installation Hinge Spacer	1 pc
J	M6 x 8 mm Pan Head Machine Screw	8 pcs
K	#8 Pan Head Wood Screw	8 pcs

Installation Instructions for the SWS-BC Series

Storage with Style Blind Corner Organizer Left-handed


(Ships left-handed)

STEP 1 - Install Guide and Spacer

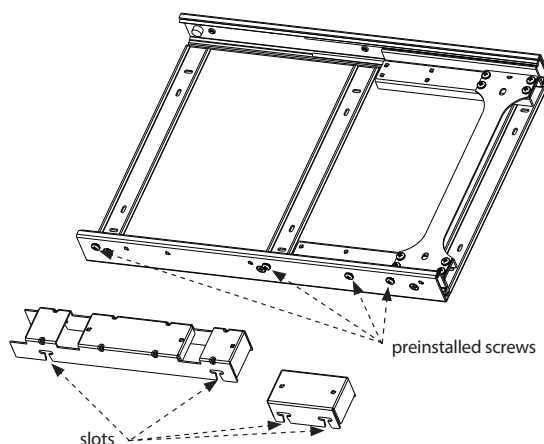


Loosen the preinstalled screws on the Base Assembly. Align the slots on the Roller Guide Bracket and Installation Hinge Spacer with the screws and slide into place. Tighten screws.

STEP 2 - Install Base Assembly

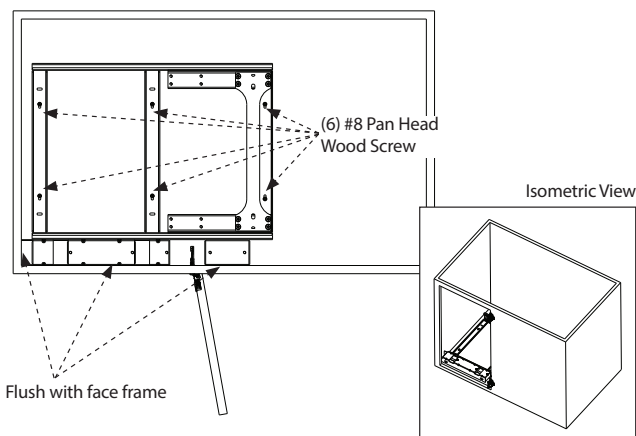


Position the Roller Guide Bracket and Installation Hinge Spacer against the back of the face frame or 3/4" behind opening on frameless application. Install completed Base Assembly to the cabinet floor with (6) #8 Pan Head Wood screw. Remove all tie wraps securing the assembly.

STEP 3 - Secure Basket Assembly-Left

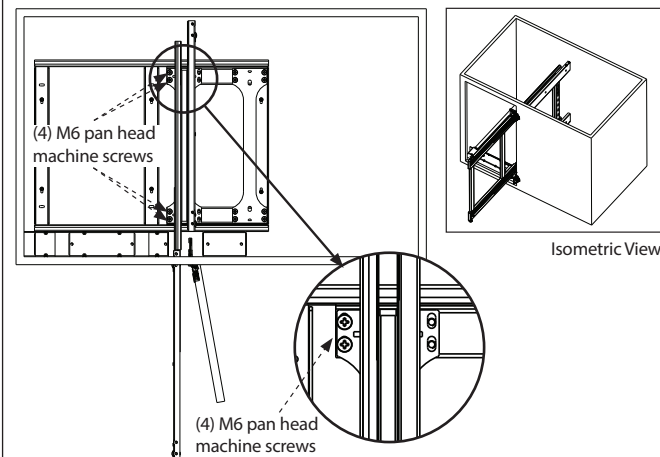

Align the Basket Assembly on to the base assembly as shown. Remove all tie wraps that secure the assembly. Extend the left side of the basket assembly to the outside of the cabinet. Firmly secure using (4) M6 pan head machine screws.

STEP 4 - Secure Basket Assembly-Right

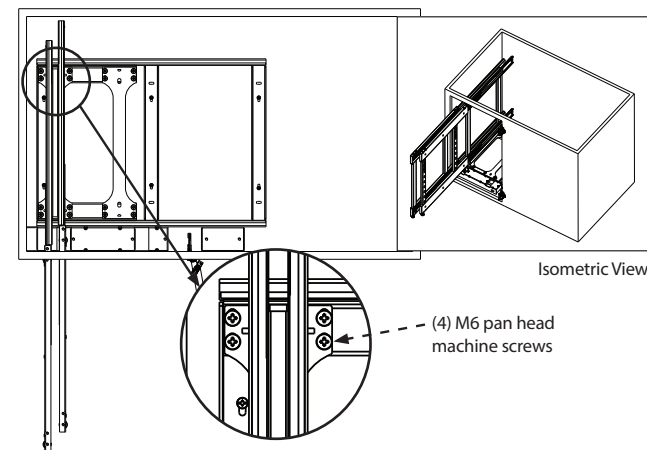

With the left side of the basket assembly is still extended, slide the complete assembly to the left side of the cabinet. Extend the right side of the basket assembly to the outside of the cabinet. Install the remaining (4) M6 pan head machine screws as shown.


Storage with Style Blind Corner Organizer

Installation Instructions for the SWS-BC Series


hardware
resources®

STEP 5


Overhead View

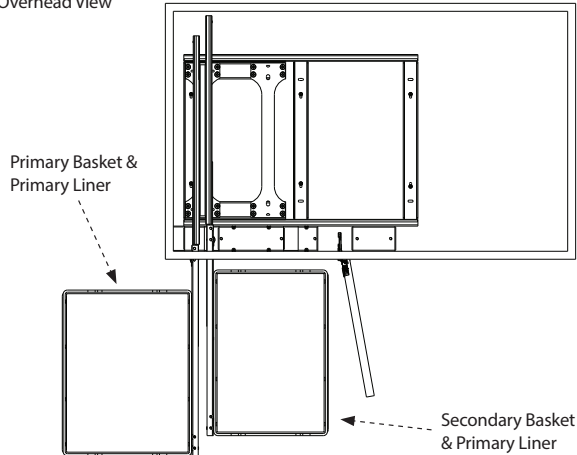

Front View

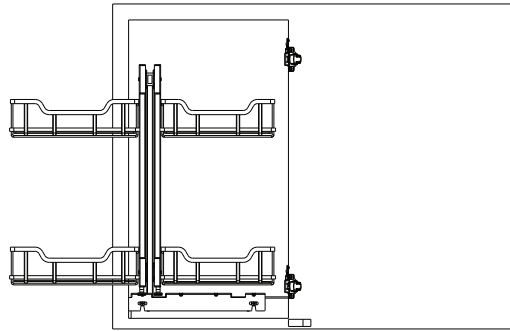


Isometric View

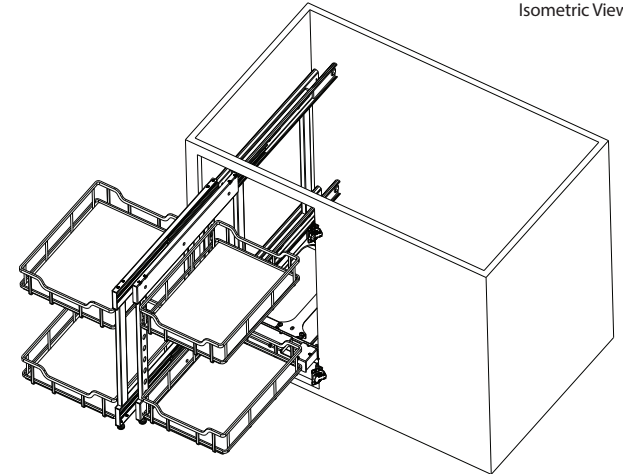


With both sides of the basket assembly in position, attach the baskets to the basket assembly. Install the basket liners to their corresponding baskets.

STEP 6


Overhead View

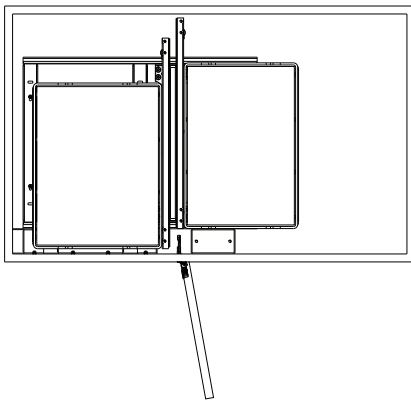

Front View

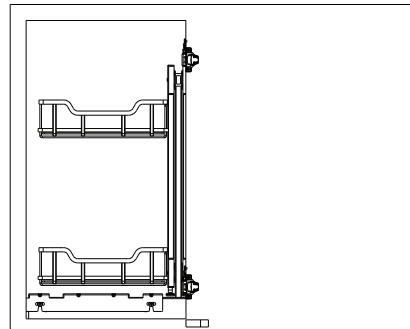

Isometric View

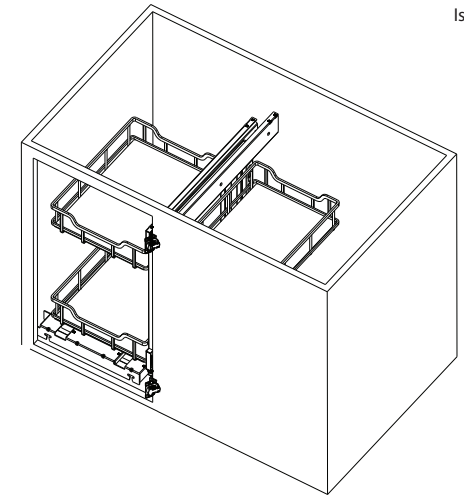

Slide the right basket assembly into the cabinet. Slide the completed assembly to the right. Slide the left baskets assembly into the cabinet to complete the installation.

Scan to watch the installation video

<https://delivr.com/27xzg>



IMPORTANT:

Before you begin, make sure you familiarize yourself with all the parts and fully read the instructions.


CUSTOMER SERVICE:

Toll free customer help line available weekdays between 7:00am and 6:00pm Central Time at 800-463-0660.

TOOLS NECESSARY:

Screw gun or Phillips screwdriver, level and tape measure. NOTE: If screw gun has a clutch, set to lowest setting so as not to over tighten and/or strip screws.


PARTS IDENTIFICATION:

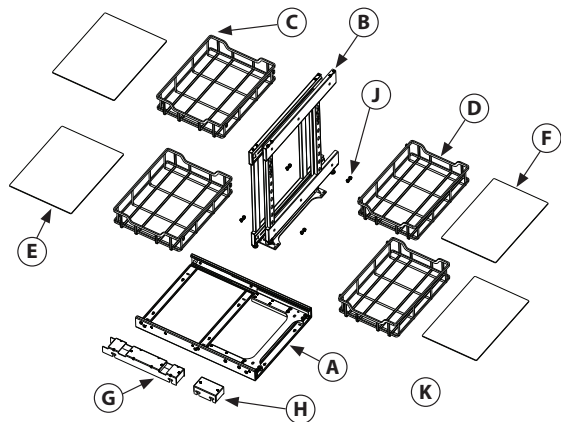

A	Base Assembly	1 pc
B	Basket Assembly	1 pc
C	Primary Basket	2 pcs
D	Secondary Basket	2 pcs
E	Primary Liner	2 pcs
F	Secondary Liner	2 pcs
G	Roller Guide Bracket	1 pc
H	Installation Hinge Spacer	1 pc
J	M6 x 8 mm Pan Head Machine Screw	8 pcs
K	#8 Pan Head Wood Screw	8 pcs


Installation Instructions for the SWS-BC Series

STEP 1 - Install Guide and Spacer

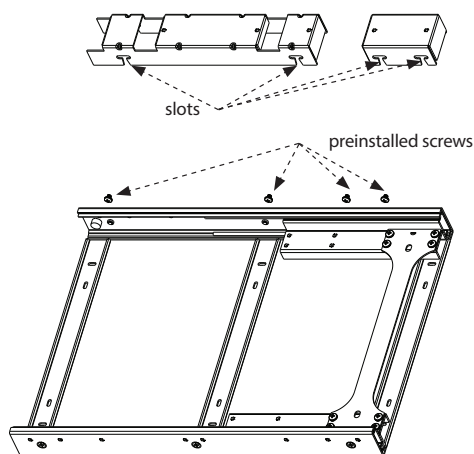

Loosen the preinstalled screws on the Base Assembly. Align the slots on the Roller Guide Bracket and Installation Hinge Spacer with the screws and slide into place. Tighten screws.

STEP 2 - Install Base Assembly

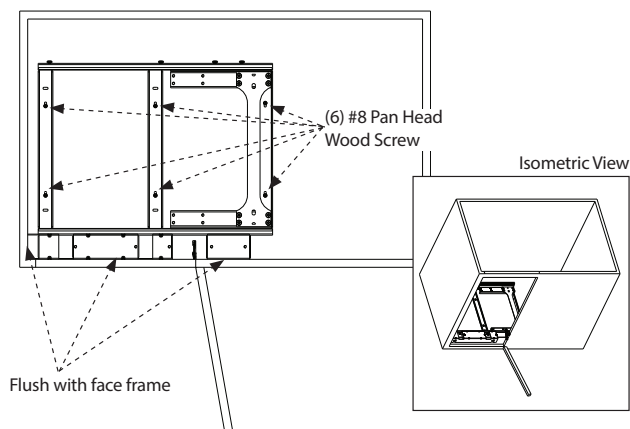


Position the Roller Guide Bracket and Installation Hinge Spacer against the back of the face frame or 3/4" behind opening on frameless application. Install completed Base Assembly to the cabinet floor with (6) #8 Pan Head Wood screw. Remove all tie wraps securing the assembly.


Storage with Style Blind Corner Organizer Right-handed

(Ships left-handed)

STEP 3 -

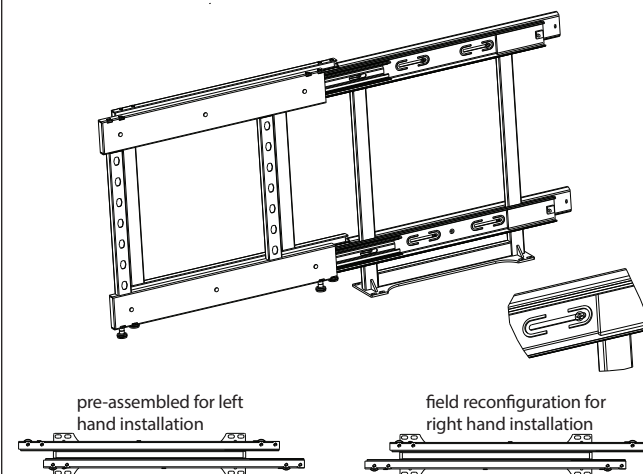




STEP 4 - Secure Basket Assembly-Left

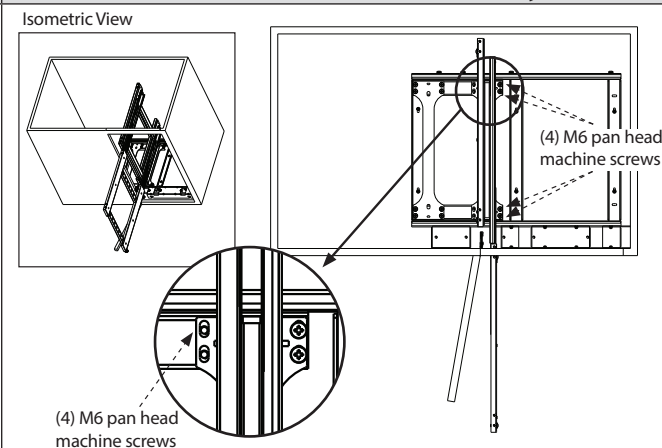

Storage with Style Blind Corner Organizer

Installation Instructions for the SWS-BC Series

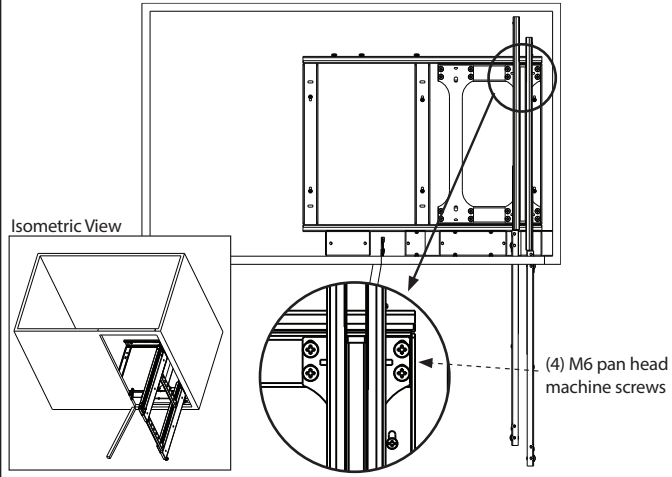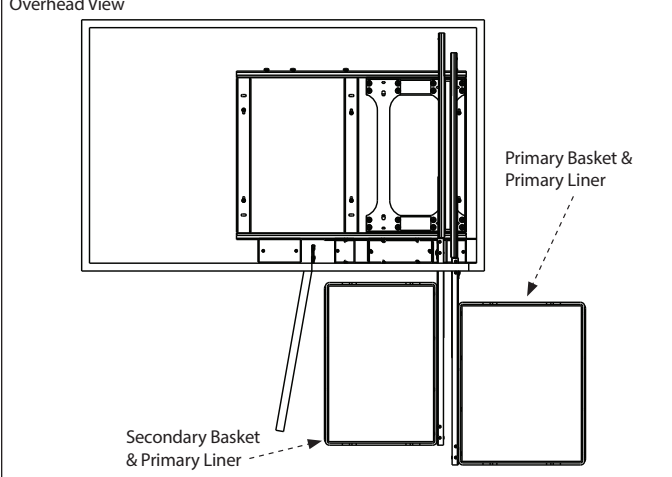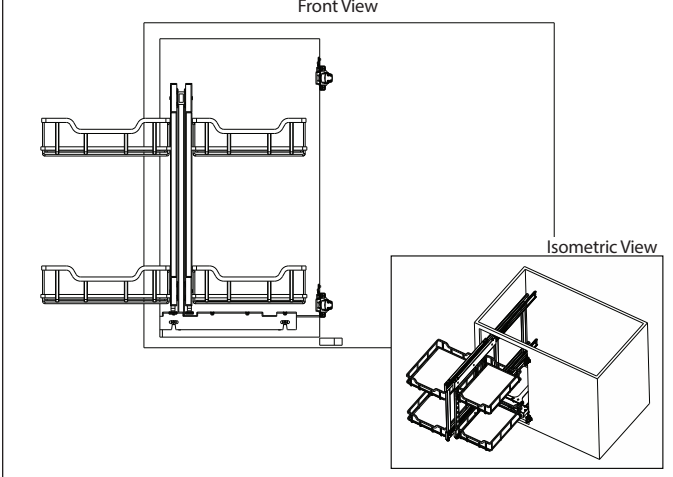

STEP 5 - Secure Basket Assembly- Right	STEP 6	
 <p>Isometric View</p> <p>(4) M6 pan head machine screws</p>	 <p>Overhead View</p> <p>Primary Basket & Primary Liner</p> <p>Secondary Basket & Primary Liner</p>	 <p>Front View</p> <p>Isometric View</p>
<p>With both sides of the basket assembly in position, attach the baskets to the basket assembly. Install the basket liners to their corresponding baskets.</p>		