
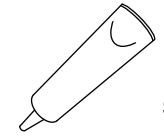


# KALLISTA®

Installation Guide

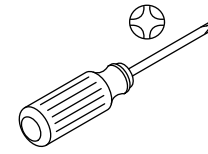


100% Silicone Sealant

**Record your model number.**


**Important Information**

Follow all local plumbing and building codes.


**1** Install the spline adapters to the valve stems.

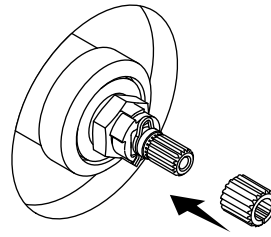


**2** Secure the spline adapters with the screws.

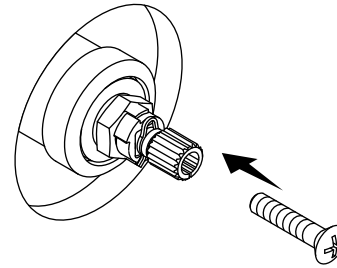

**3** Turn the valves to the closed position.

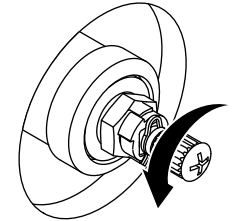

**4** Apply a ring of 100% silicone sealant to the handle escutcheons.

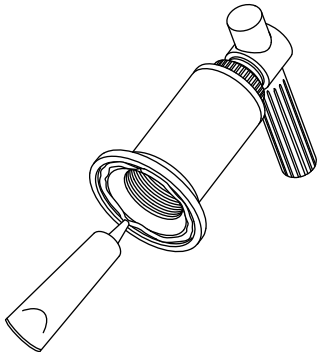

**5** Position the handles on the valves. Thread the bonnet onto the valve until secure.

