







# HEKMAN

## ASSEMBLY INSTRUCTIONS


**X** A HOWARD MILLER COMPANY

### 7-9328 WRITING DESK

NO.	Hardware List	Qty
A	 Bolt 5/16" * 5-7/8"L	2
B	 Lock Washer 5/16" Dia	2
C	 Flat Washer 5/16" Dia	2
D	 Wrench 3/16" Dia* 4-3/4"L	1

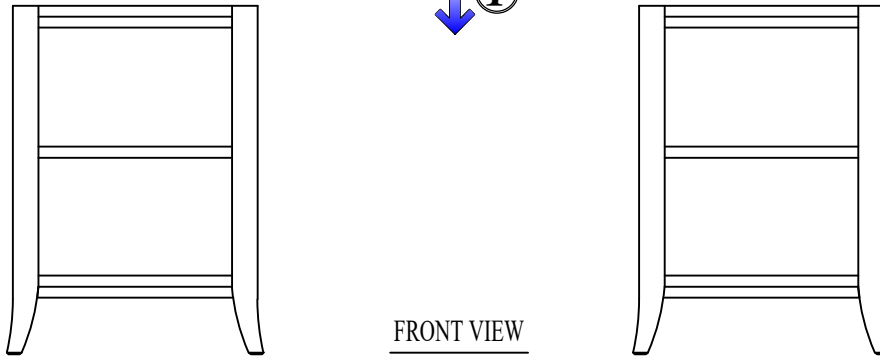

FRONT VIEW

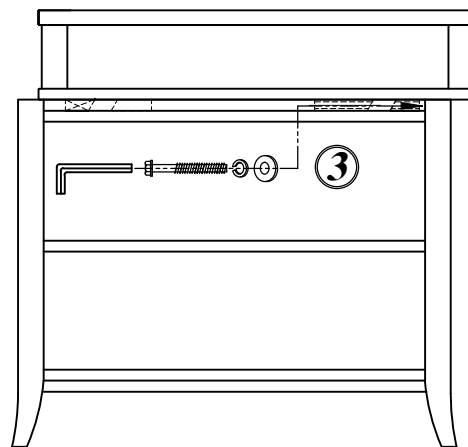

SIDE VIEW

1. Place the top assembly on the pedestals.
2. As shown in the side view the top assembly is set a little forward on the pedestals then pushed back to lock the french cleats.
3. Screw the top assembly and pedestals with Bolt(A), Lock washer(B) and Flat washer(C) by using Wrench(D).