

Step 1


1. Position Template

- Fold the template as indicated.
- Place it on the door edge at the desired latch height.
- Hold firmly and mark the latch height and handle fixing holes according to the template.

2. Mark and Drill Holes

- Measure the door thickness and mark the centre.
- Drill a 25mm hole in the door edge for the latch.
- Drill a 54mm hole through the door face at the 60mm backset.

Tip: Drill squarely for proper alignment.

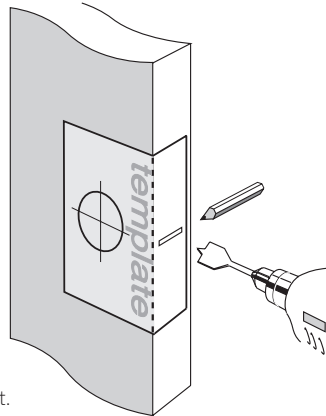

Step 2

1. Prepare the Door Edge


- Use the latch faceplate as a guide.
- Mark and chisel a recess 2mm deep (or until flush) for the latch plate.

2. Insert the Latch Support

- Insert latch support into hole as shown (suitable and required for 54mm hole prep).

3. Insert and Secure the Latch

- Ensure the bevelled latchbolt (B) faces the direction the door closes.
- The threaded drive bar (A) should stick out slightly on both sides.
- Pre-drill screw holes.
- Fasten the latch with the screws provided.

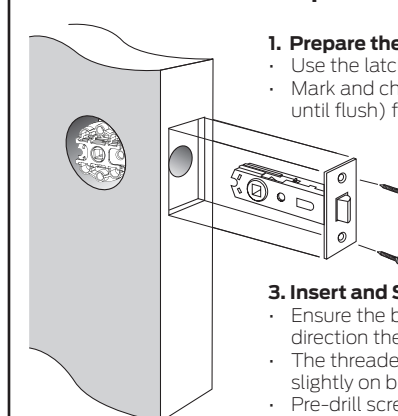

Step 3

1. Insert the Spindle


- Insert the square drive spindle (1) through the latch.
- Press the retaining button (2) and continue pushing until it appears on the other side.

2. Attach the Levers

- Remove the rosette covers (3) from both lever assemblies.
- Slide one lever (4) onto the spindle.
- Attach the second lever (5) on the opposite side.

3. Secure the Levers

- Use the screws (6) provided to fasten both levers together.
- Use long screws for thick doors (40-45mm) and short screws for thin doors (32-39mm).
- Each under-rose has one countersunk hole and one threaded hole.
- Insert a screw from each side through the countersunk hole into the opposite threaded hole.
- Ensure lever is level, then tighten both screws securely.

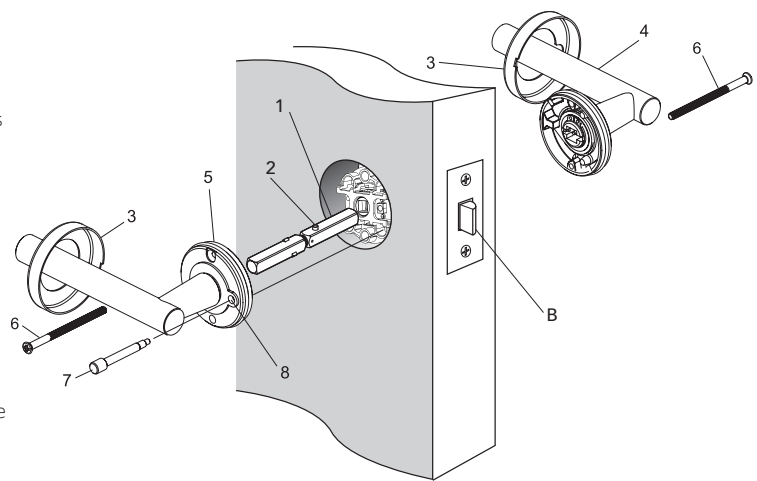

NOTE: Carefully follow these instructions when installing. Screws to be hand tightened to a recommended 2.5Nm torque.

Continued on next page



PRINT TO SCALE

FOLD HERE

Mark centre-line of latch hole

Mark centre-line of latch hole

Fit here on door edge

Fit here on door edge

BACKSET 60mm

54mm hole – refer Step 1.

Hole pitch

Optional hole pattern
3 x 10mm hole

Optional hole pattern
25mm hole

Suits doors 32mm to 45mm thick.



ALLEGION™

Allegion (New Zealand) Limited
Freephone 0800 477 869
Email nzinfo@allegion.com
www.allegion.co.nz



01/2026
PDSC0024-R2


Step 4

1. Replace Rosette Covers

- Push the covers (3) over the rubber rings until flush with the door.

2. Install the Privacy Button

- Press the latchbolt in (B).
- Insert the privacy button (7) through the privacy button / emergency release hole (8) on the inside of the door.
- Screw it in tightly.
- Release the latchbolt once the button is secure.

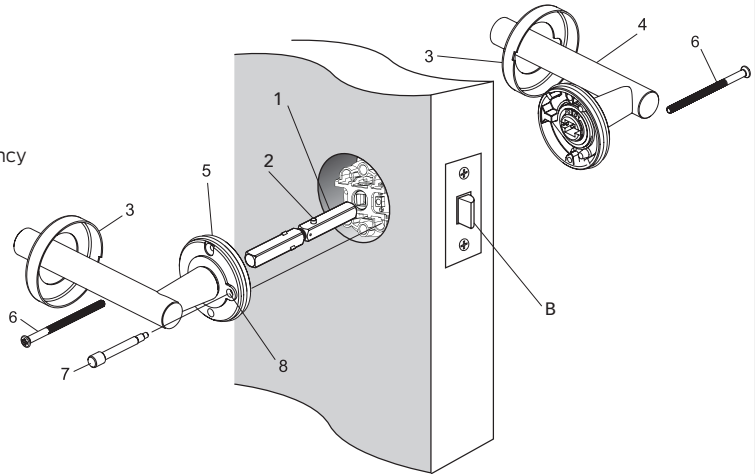

NOTE: Carefully follow these instructions when installing.
Screws to be hand tightened to a recommended 2.5Nm torque.



⚠️ PRINT TO SCALE

FOLD HERE

Mark centre-line
of latch hole

Mark centre-line
of latch hole

Fit here on door edge

Fit here on door edge

BACKSET 60mm

54mm hole – refer Step 1.

Hole pitch

Optional hole pattern
3 x 10mm hole

Optional hole pattern
25mm hole

Suits doors 32mm to
45mm thick.



ALLEGION™

Allegion (New Zealand) Limited
Freephone 0800 477 869
Email nzinfo@allegion.com
www.allegion.co.nz



01/2026
PDSC0024-R2