


FRANK UPHOLSTERED QUEEN PLATFORM BED

ASSEMBLY INSTRUCTIONS



BOX#1

- A. HEADBOARD 1 PC
- B. LEFT WING 1 PC
- C. RIGHT WING 1 PC

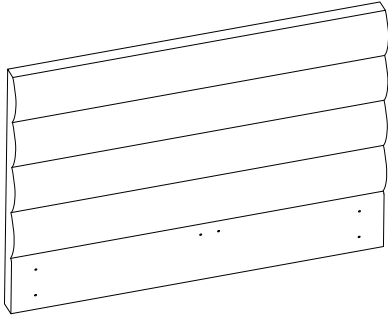

A




B




C

BOX#2

- D. FOOTBOARD 1 PC
- E. SLAT ROLL 1 SET
- F. CENTER SLAT SUPPORT CLEAT 2 PCS

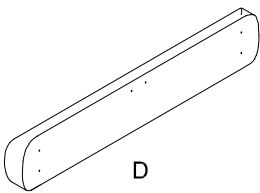

D

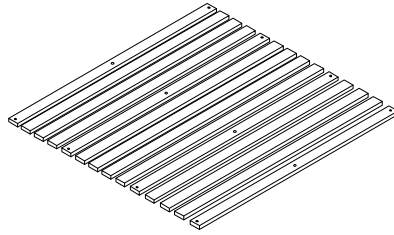


E




F

BOX#3

- G. SIDE RAIL 2 PCS
- H. CENTER SLAT SUPPORT 1 PC
- I. SUPPORT LEG 4 PCS

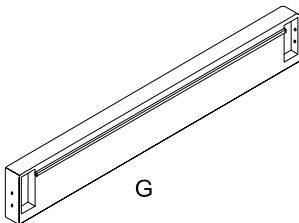

G

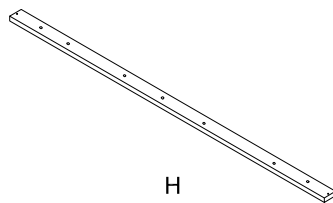


H





I



HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (5/16"x 2")		8 PCS
2	FLAT WASHER (5/16")		8 PCS
3	LOCK WASHER (5/16")		8 PCS
4	ALLEN KEY (5/16")		1 PC

HARDWARE KIT PACKED IN BOX #2

5	THREADED BOLT (5/16"x 3-1/2")		8 PCS
6	ALLEN BOLT (5/16"x 2-1/2")		4 PCS
7	ALLEN BOLT (1/4"x 1-1/4")		4 PCS
8	FLAT WASHER (5/16")		12 PCS
9	FLAT WASHER (1/4")		4 PCS
10	LOCK WASHER (5/16")		12 PCS
11	LOCK WASHER (1/4")		4 PCS
12	HEX NUT (5/16")		8 PCS
13	PHILLIPS SCREW (M4 x32mm)		10 PCS
14	ALLEN KEY (5/16")		1 PC
15	WRENCH		1 PC
16	CONNECTING BRACKET		4 PCS

FULLY ASSEMBLED

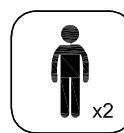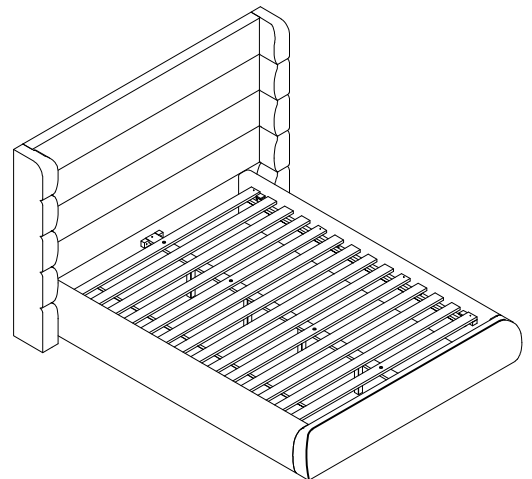


FRANK UPHOLSTERED QUEEN PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 1:

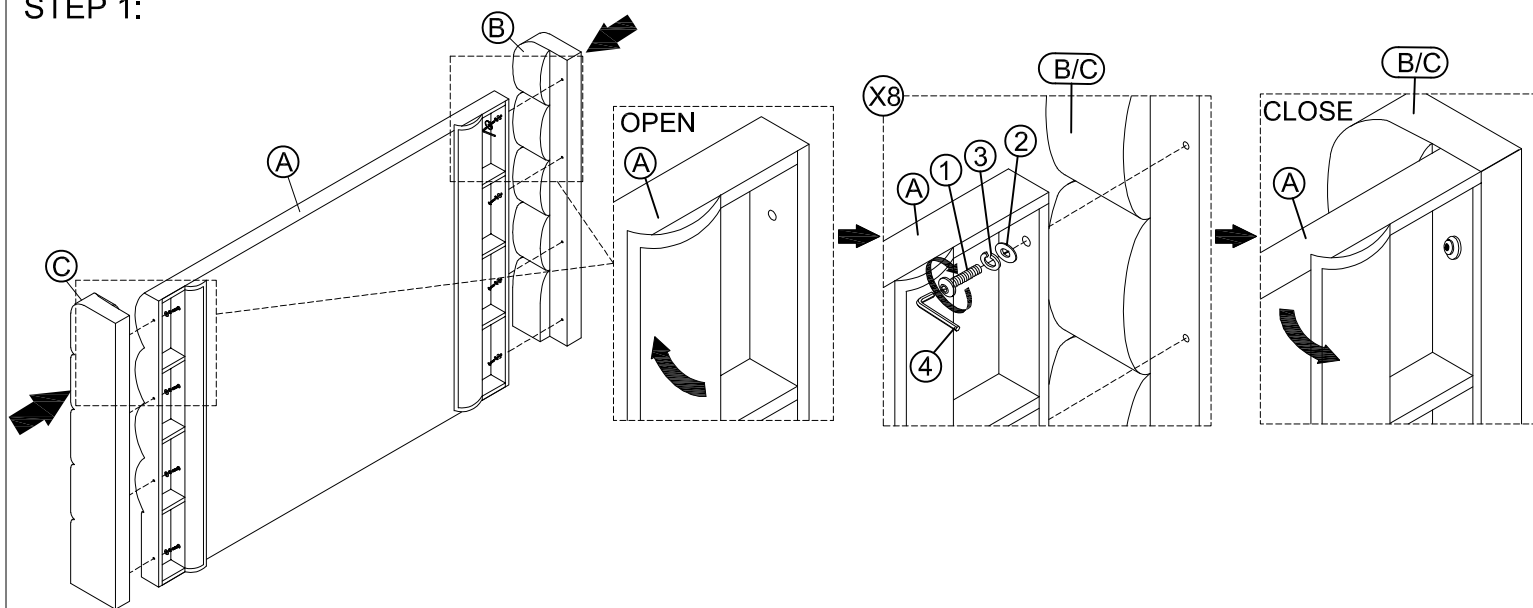

STEP 2:

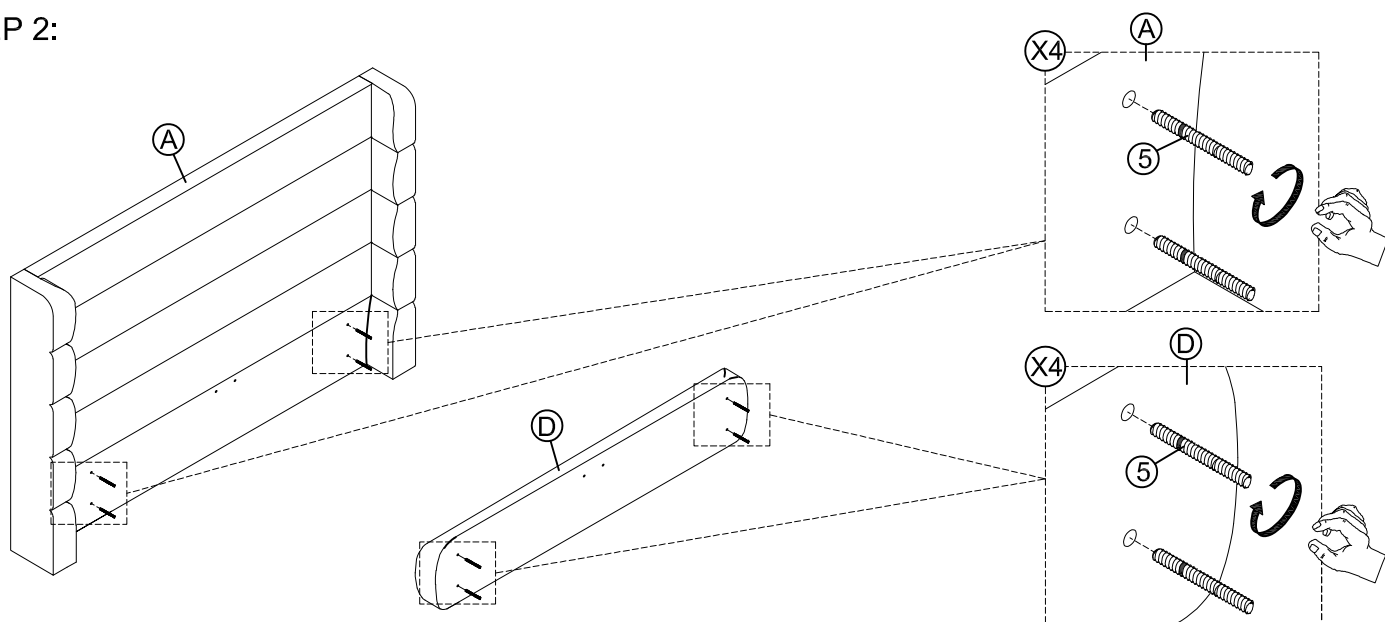

STEP 3:

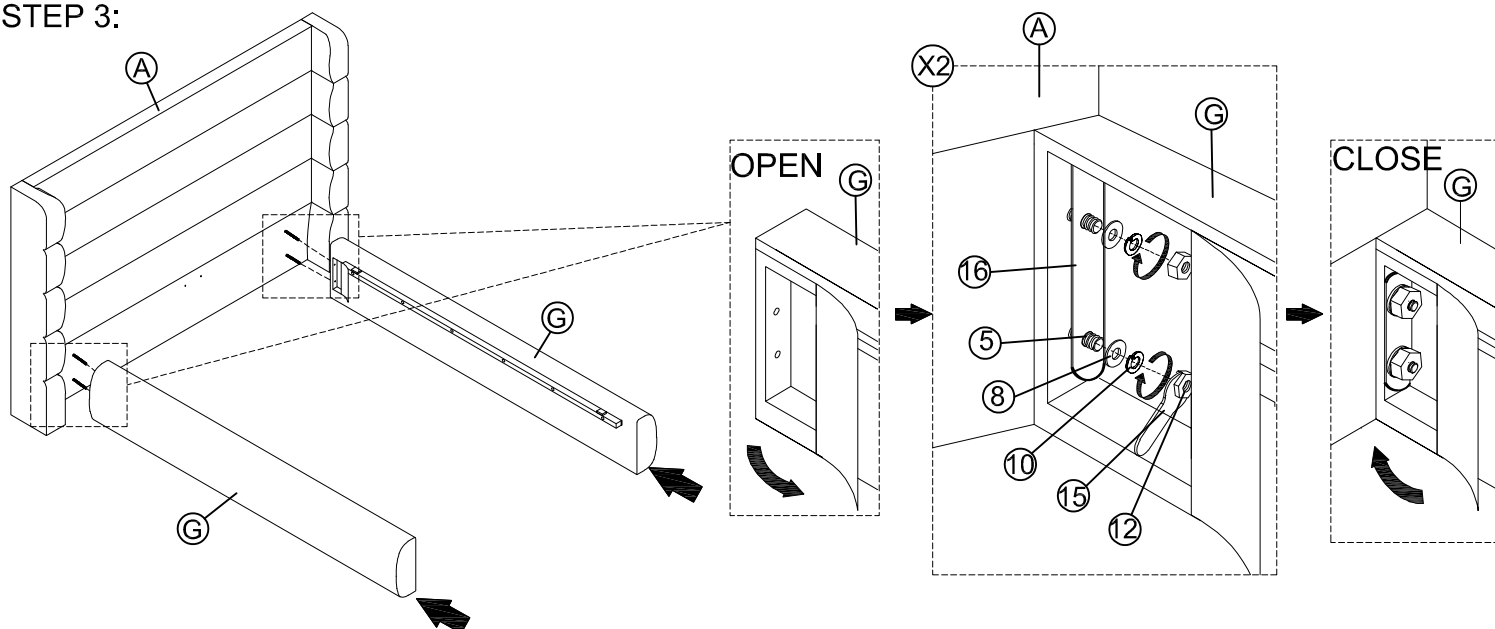


FRANK UPHOLSTERED QUEEN PLATFORM BED

ASSEMBLY INSTRUCTIONS




STEP 4:

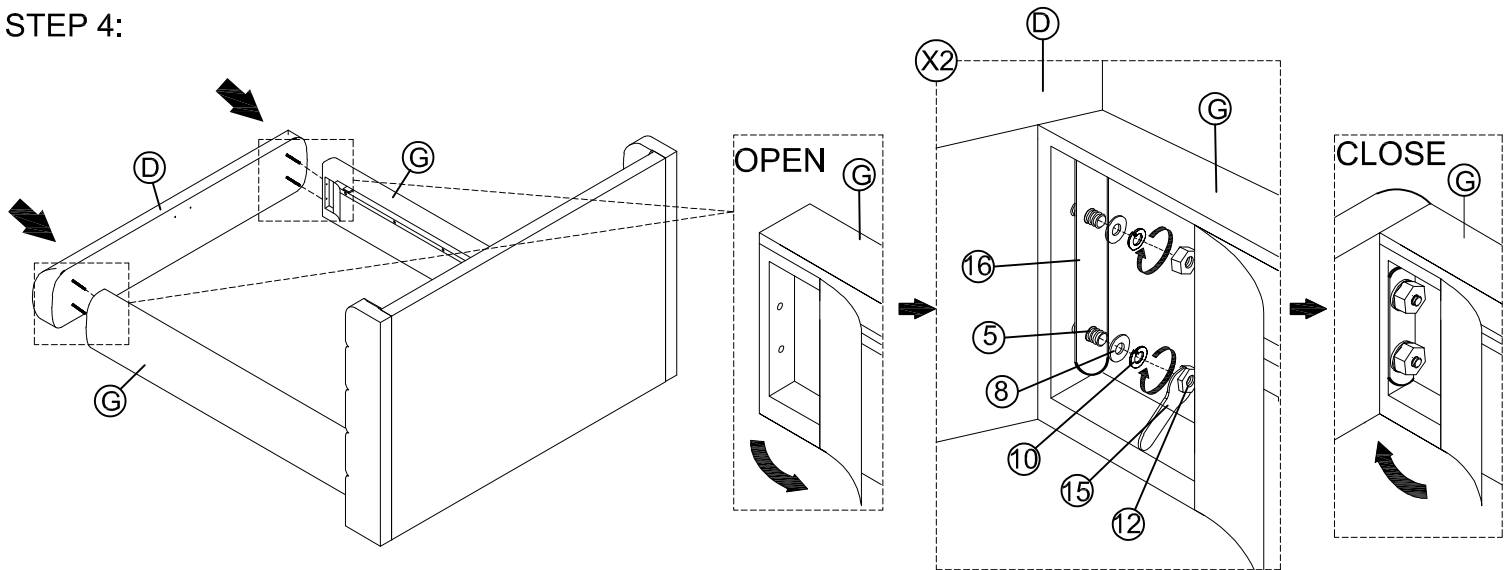


STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5-9 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5

STEP 5:

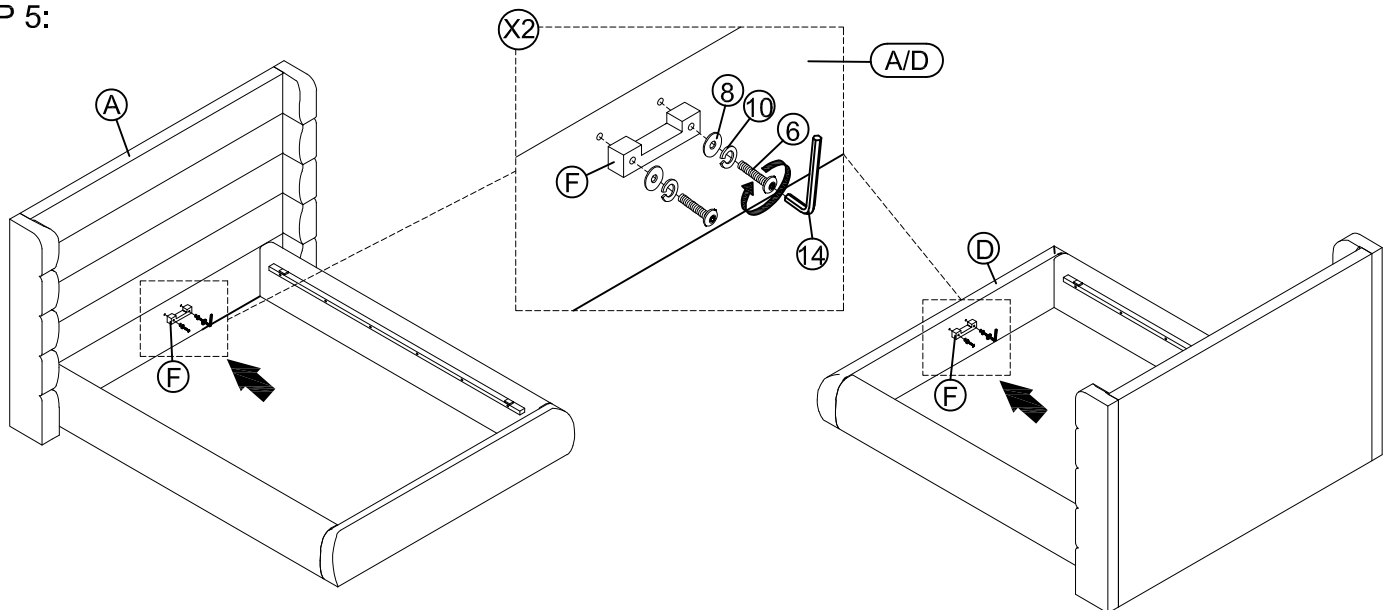

STEP 6:

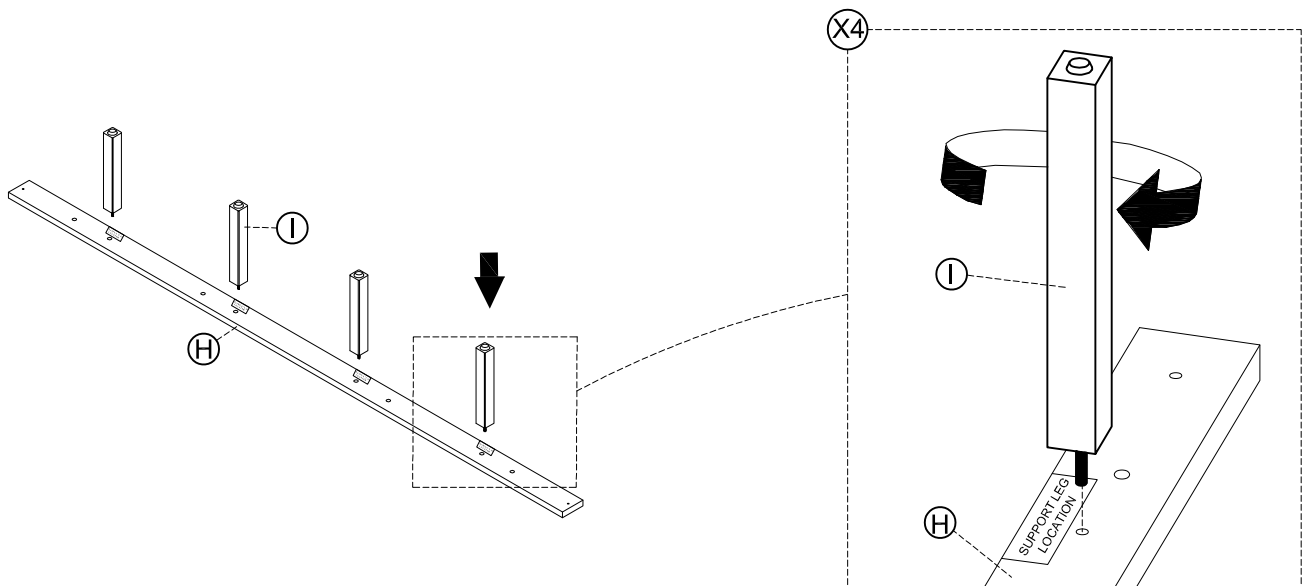


FRANK UPHOLSTERED QUEEN PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 7:

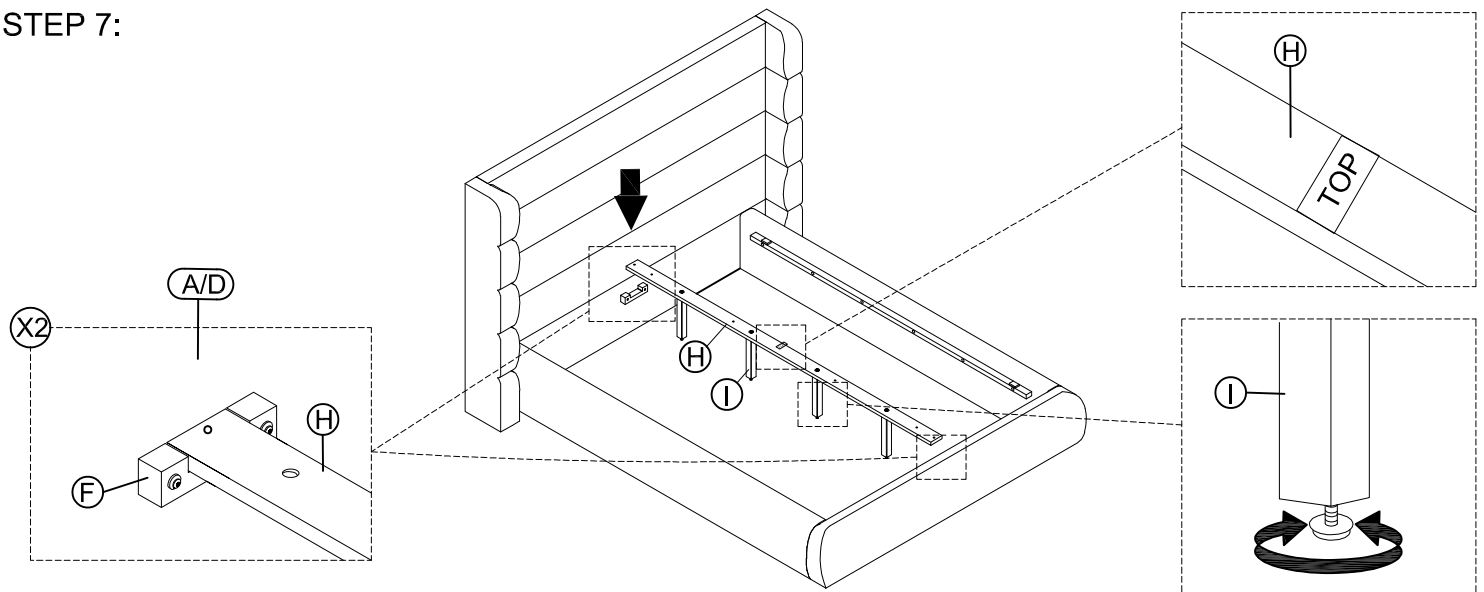

STEP 8:

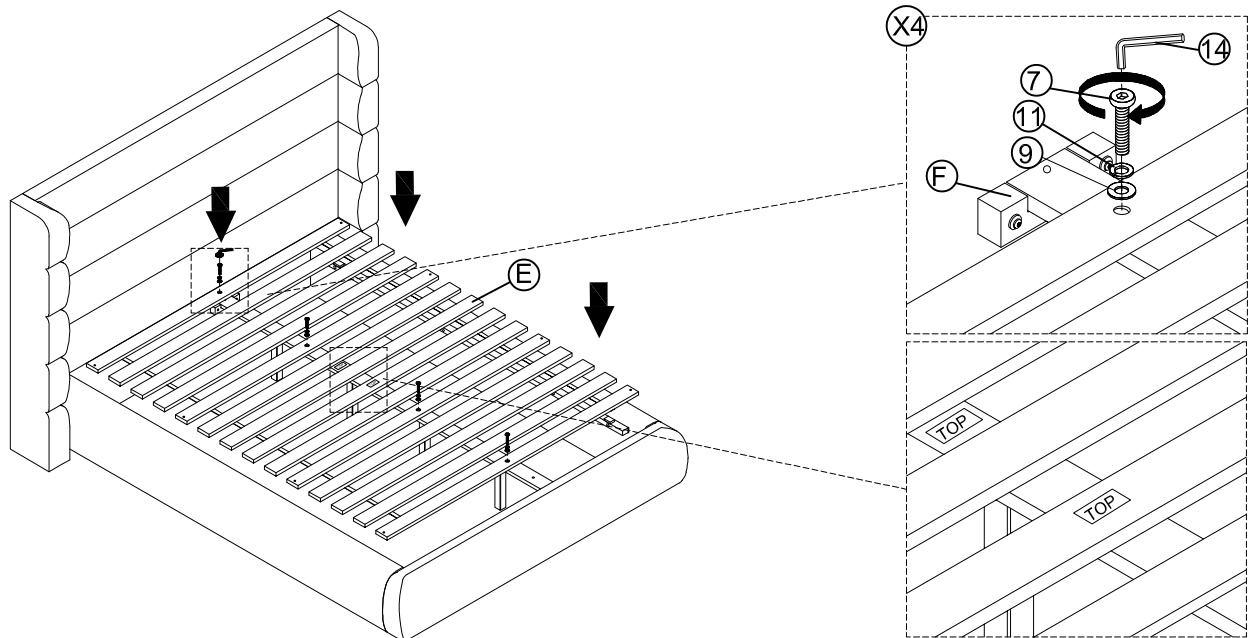


STEP 9:

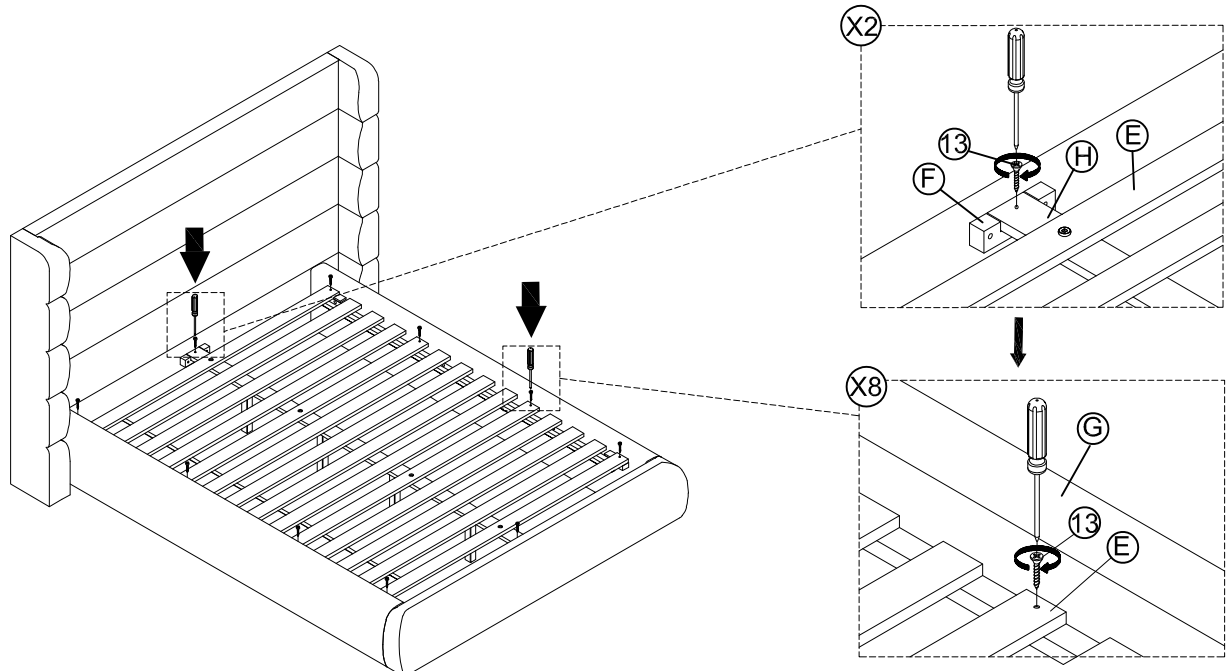

FRANK UPHOLSTERED QUEEN PLATFORM BED

ASSEMBLY INSTRUCTIONS

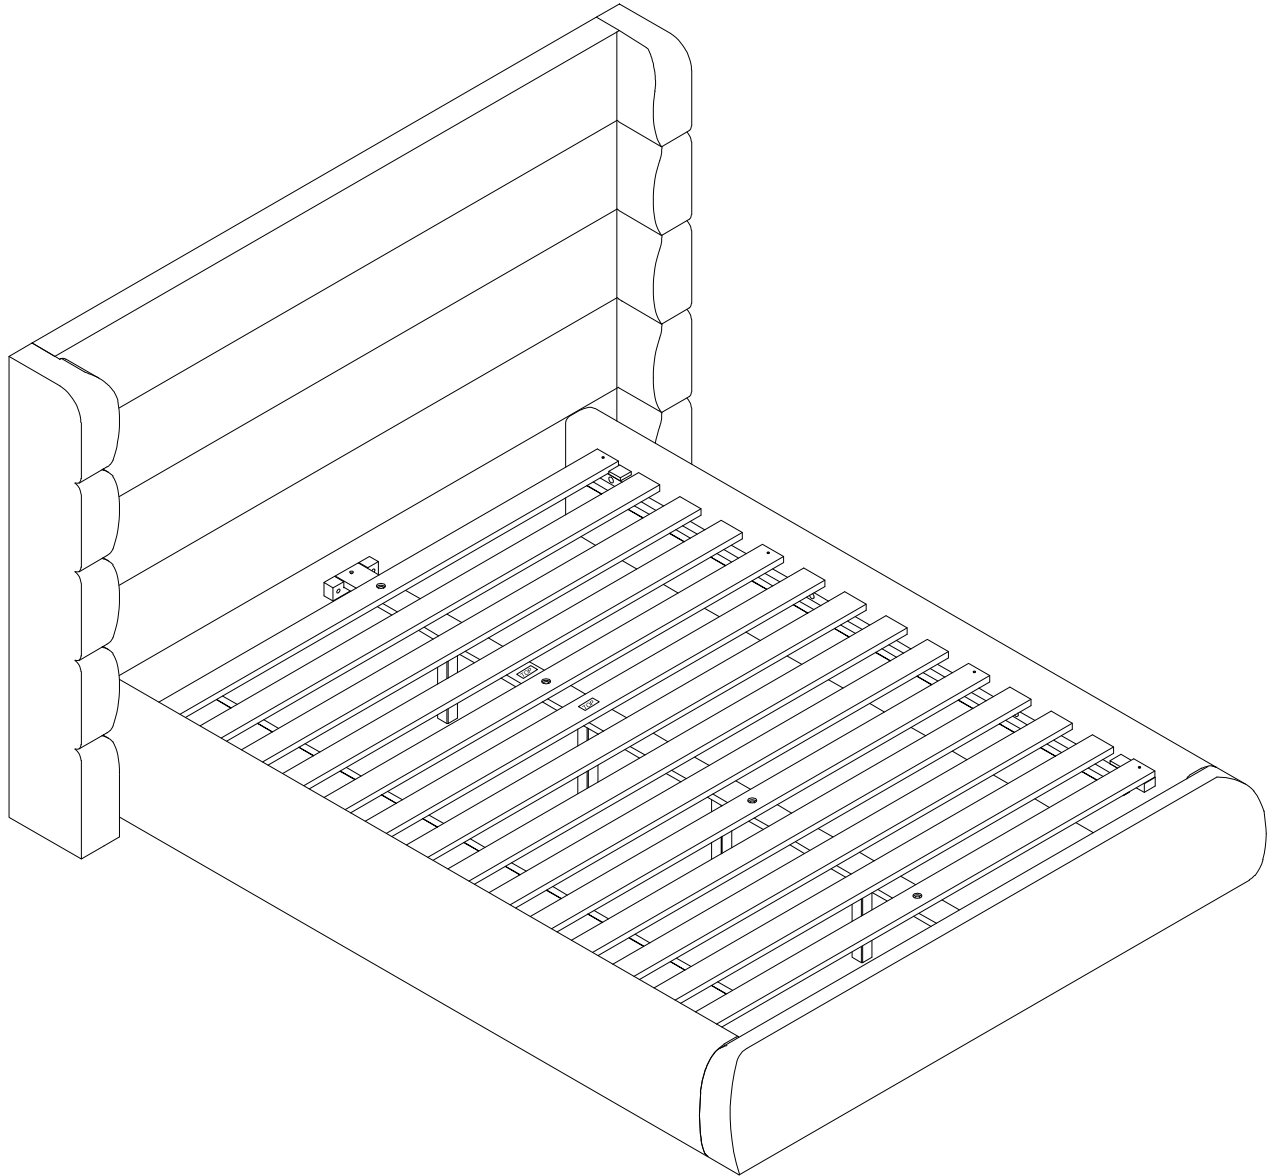


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

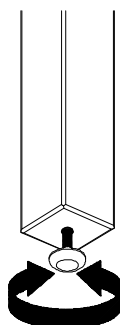

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

FRANK UPHOLSTERED QUEEN PLATFORM BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

E. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT CLEAT	2 PCS
H. CENTER SLAT SUPPORT	1 PC
I. SUPPORT LEG	4 PCS

STEP 1:

USE ALLEN KEY (14) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

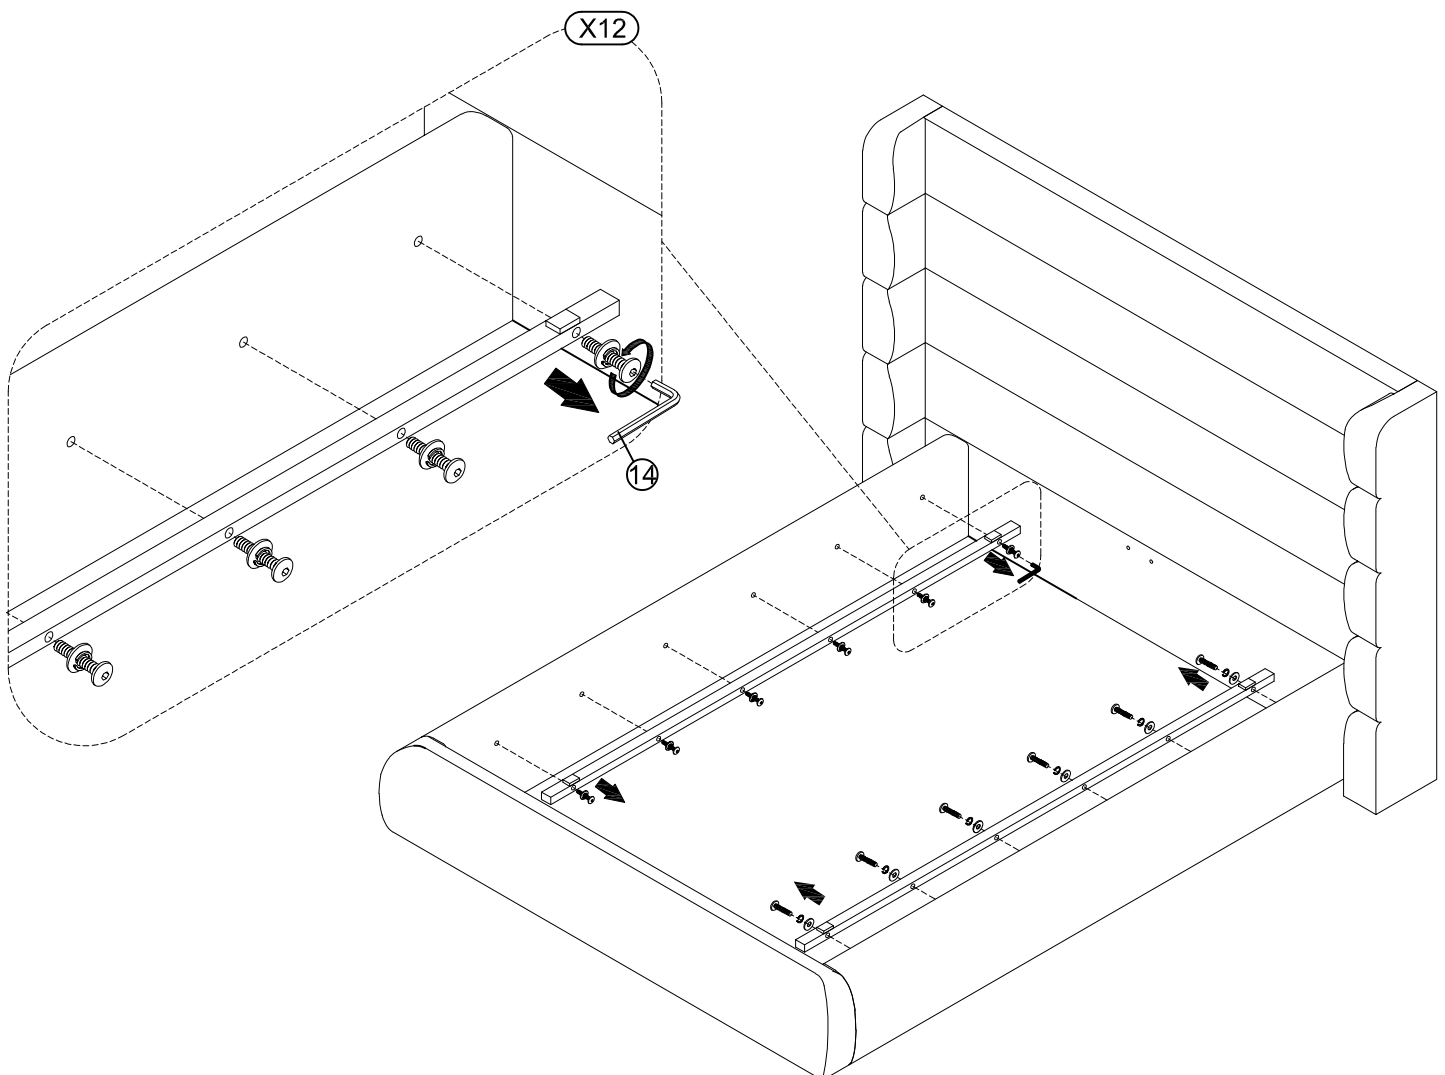

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION


FRANK UPHOLSTERED KING PLATFORM BED

ASSEMBLY INSTRUCTIONS



BOX#1

- A. HEADBOARD 1 PC
- B. LEFT WING 1 PC
- C. RIGHT WING 1 PC

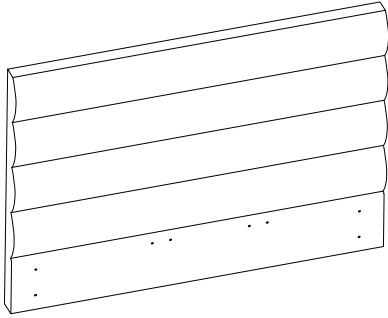

A




B




C

BOX#2

- D. FOOTBOARD 1 PC
- E. SLAT ROLL 1 SET
- F. CENTER SLAT SUPPORT CLEAT 4 PCS

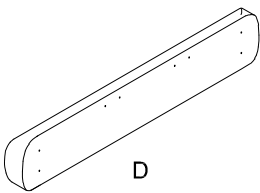

D

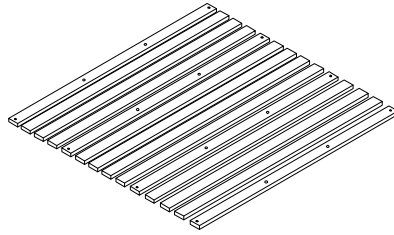


E




F

BOX#3

- G. SIDE RAIL 2 PCS
- H. CENTER SLAT SUPPORT 2 PCS
- I. SUPPORT LEG 8 PCS

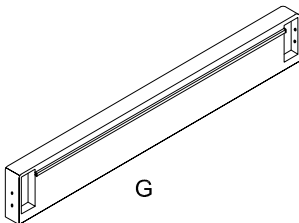

G

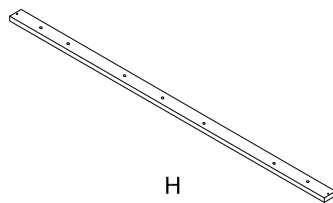


H





I



HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (5/16"x 2")		8 PCS
2	FLAT WASHER (5/16")		8 PCS
3	LOCK WASHER (5/16")		8 PCS
4	ALLEN KEY (5/16")		1 PC

HARDWARE KIT PACKED IN BOX #2

5	THREADED BOLT (5/16"x 3-1/2")		8 PCS
6	ALLEN BOLT (5/16"x 2-1/2")		8 PCS
7	ALLEN BOLT (1/4"x 1-1/4")		8 PCS
8	FLAT WASHER (5/16")		16 PCS
9	FLAT WASHER (1/4")		8 PCS
10	LOCK WASHER (5/16")		16 PCS
11	LOCK WASHER (1/4")		8 PCS
12	HEX NUT (5/16")		8 PCS
13	PHILLIPS SCREW (M4 x32mm)		12 PCS
14	ALLEN KEY (5/16")		1 PC
15	WRENCH		1 PC
16	CONNECTING BRACKET		4 PCS

FULLY ASSEMBLED

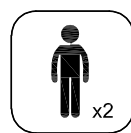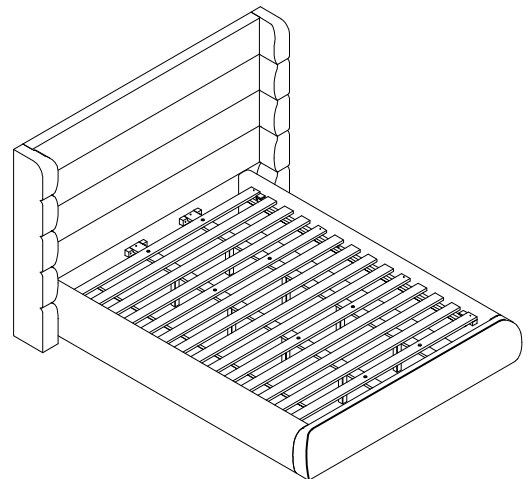


FRANK UPHOLSTERED KING PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 1:

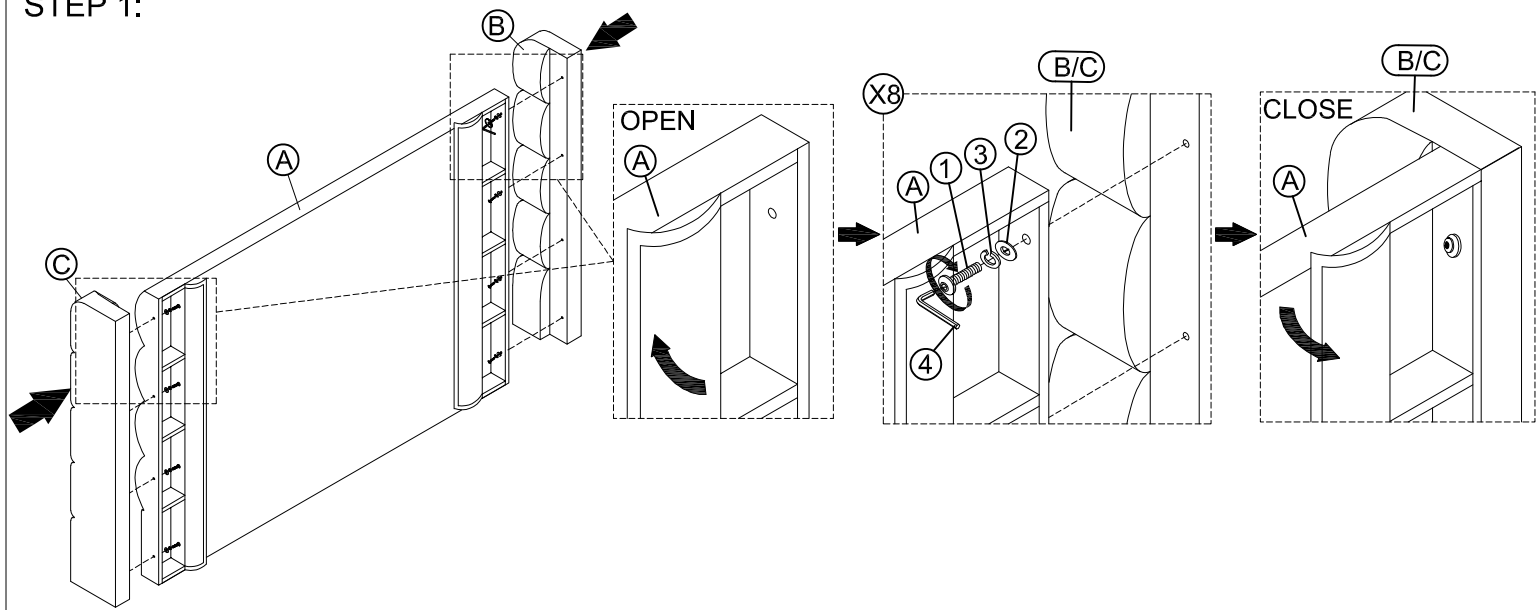

STEP 2:

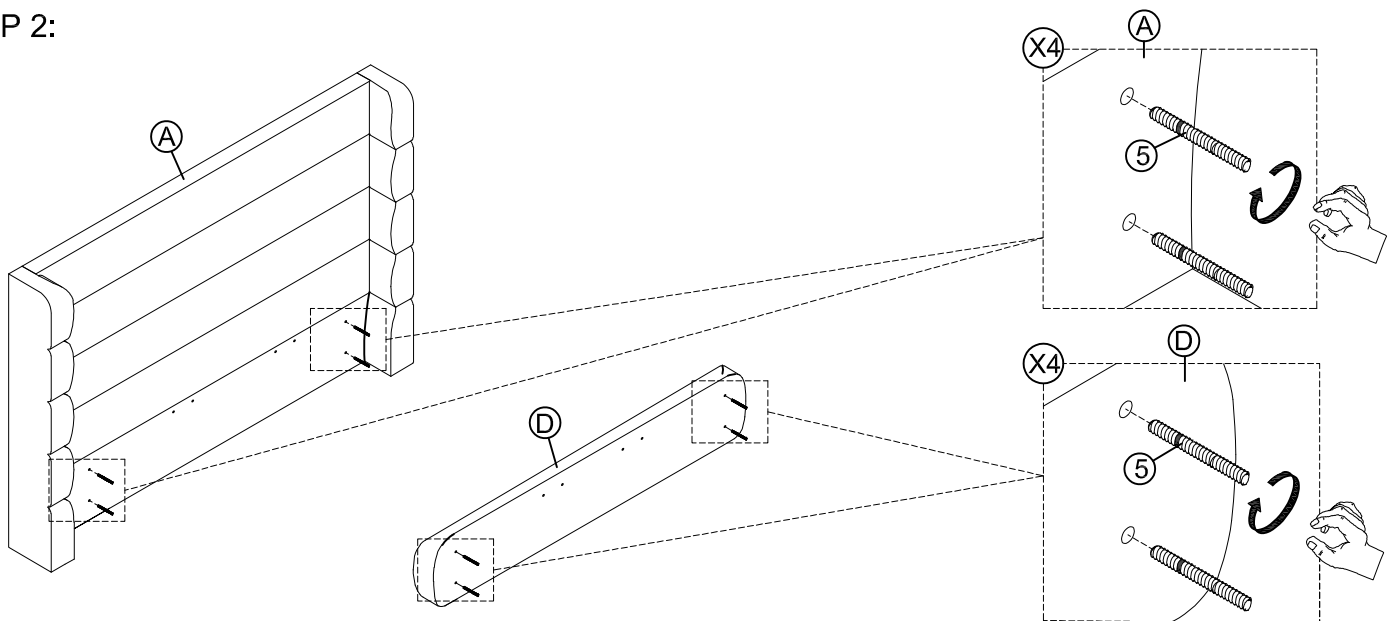


STEP 3:

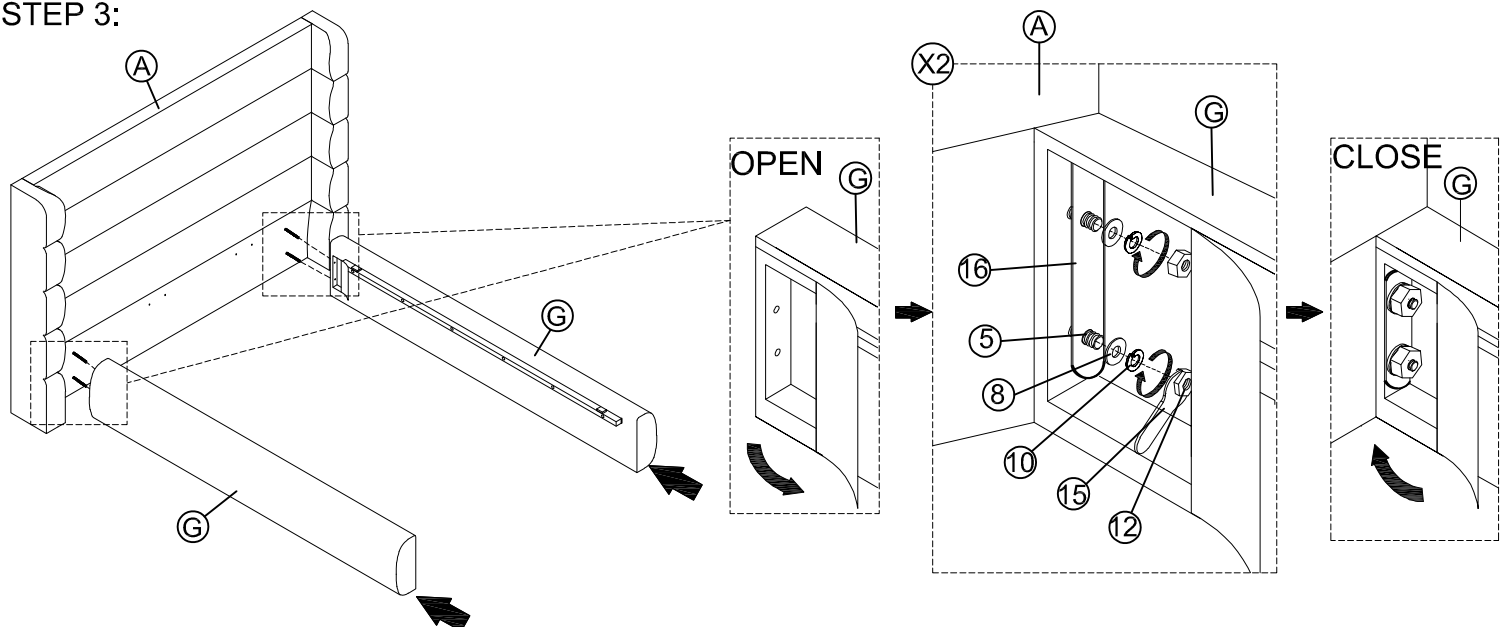

FRANK UPHOLSTERED KING PLATFORM BED

ASSEMBLY INSTRUCTIONS


STEP 4:

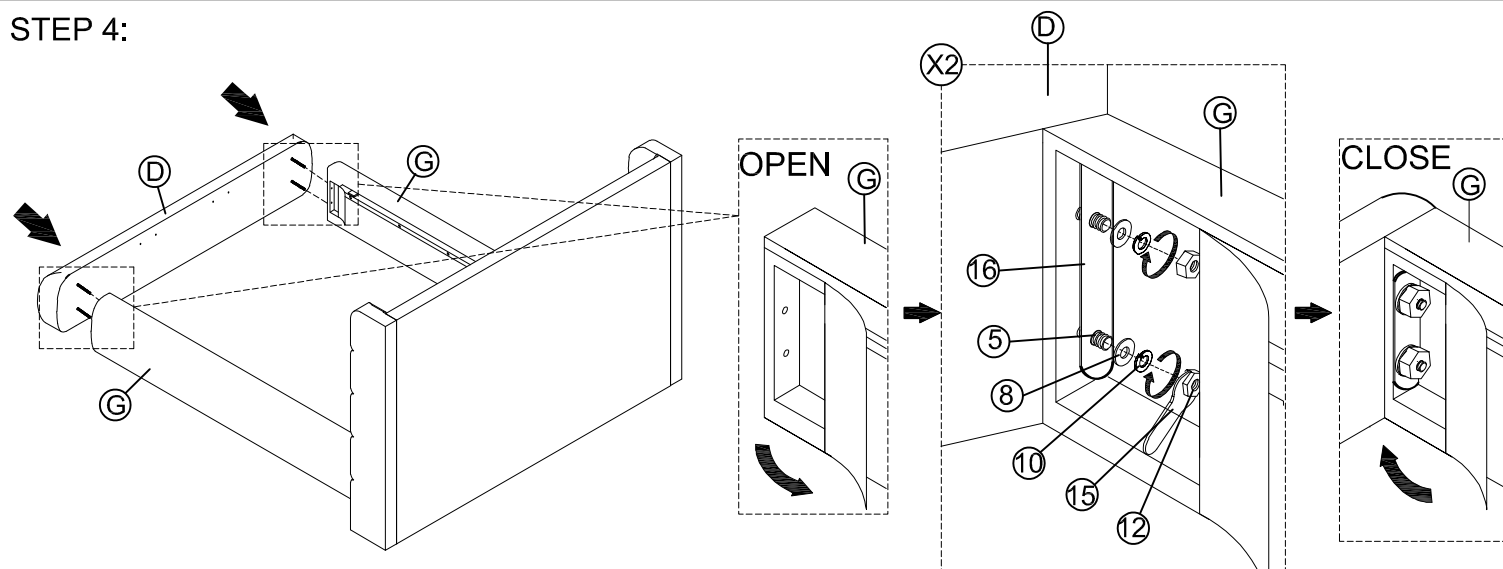


STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5-9 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5

STEP 5:

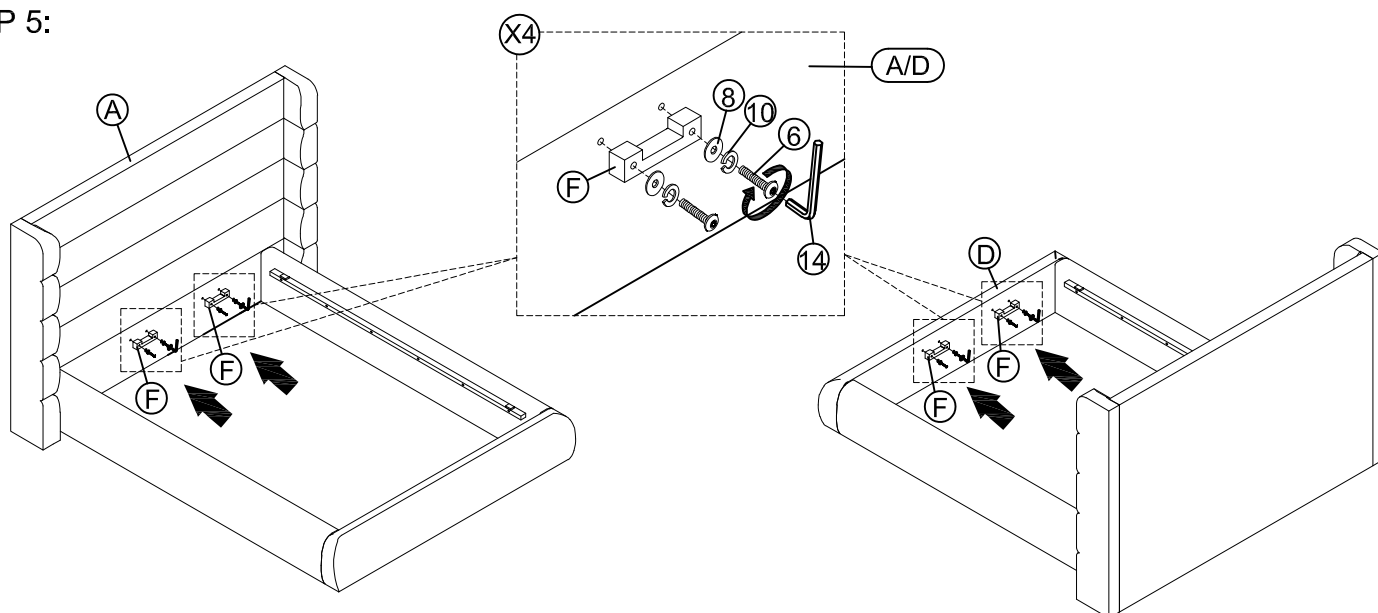

STEP 6:

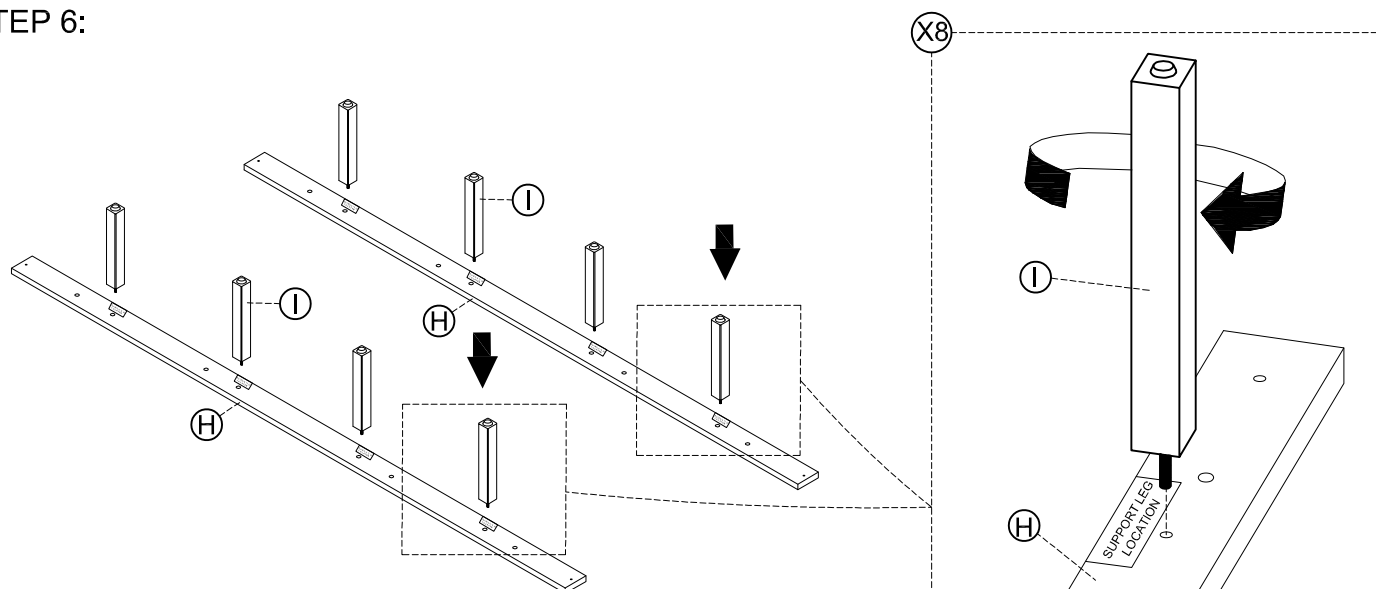


FRANK UPHOLSTERED KING PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 7:

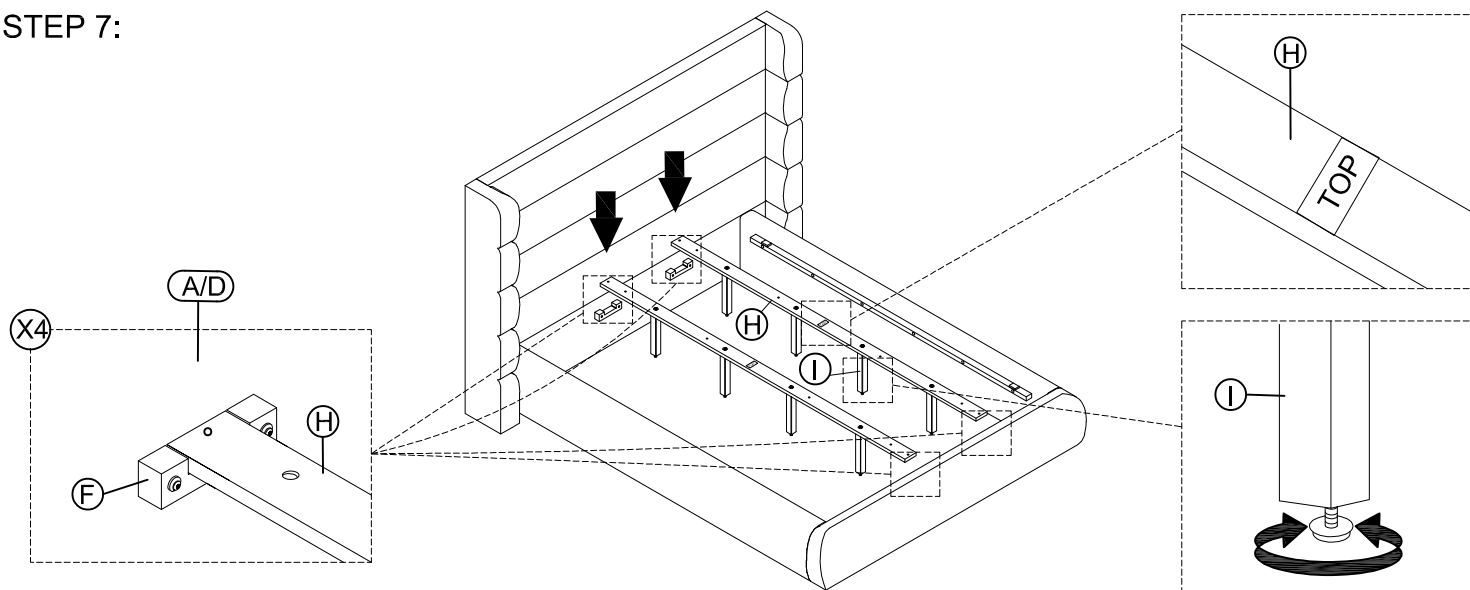

STEP 8:

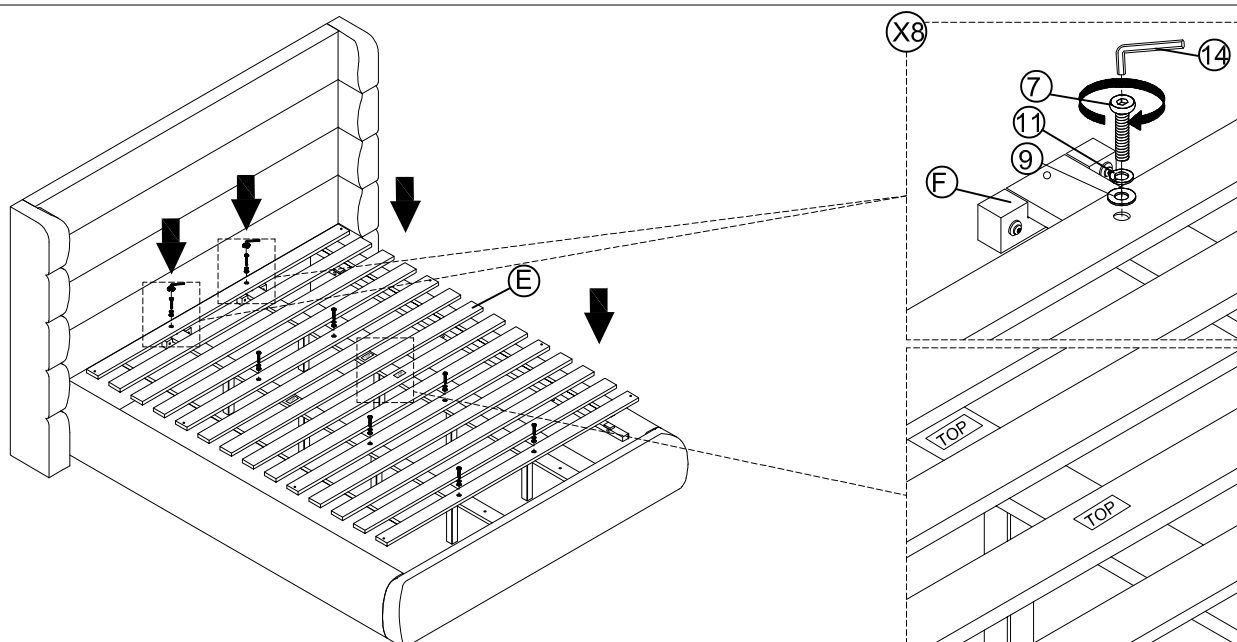


STEP 9:

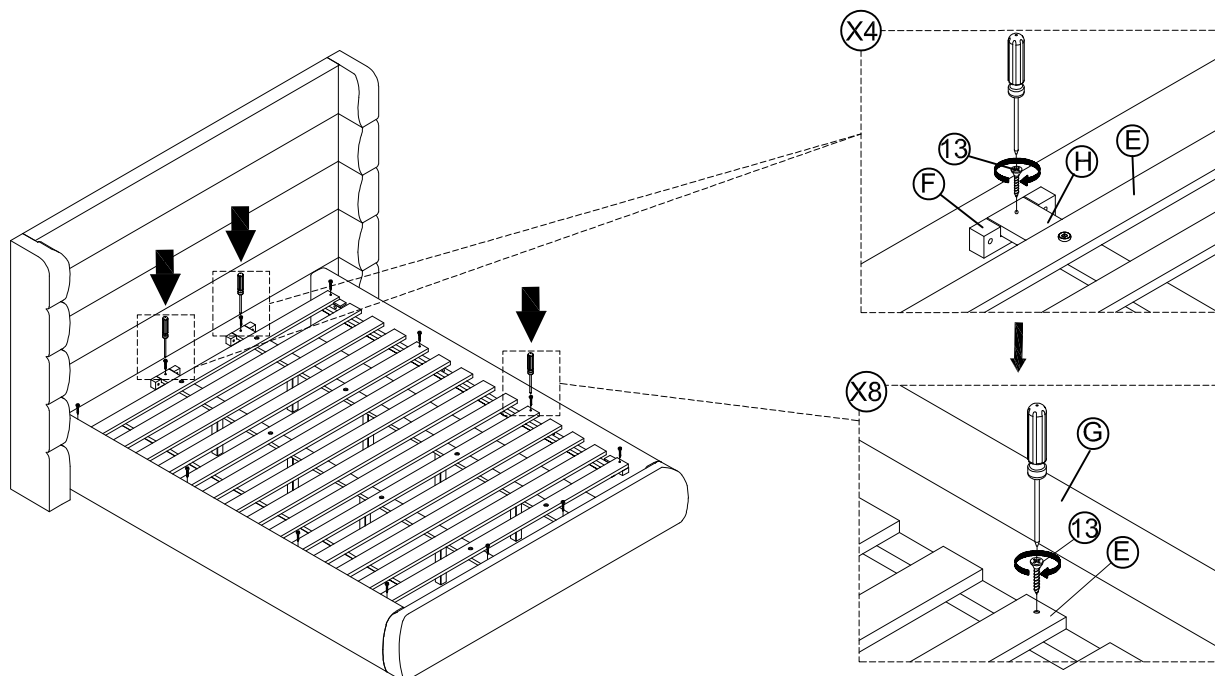

FRANK UPHOLSTERED KING PLATFORM BED

ASSEMBLY INSTRUCTIONS

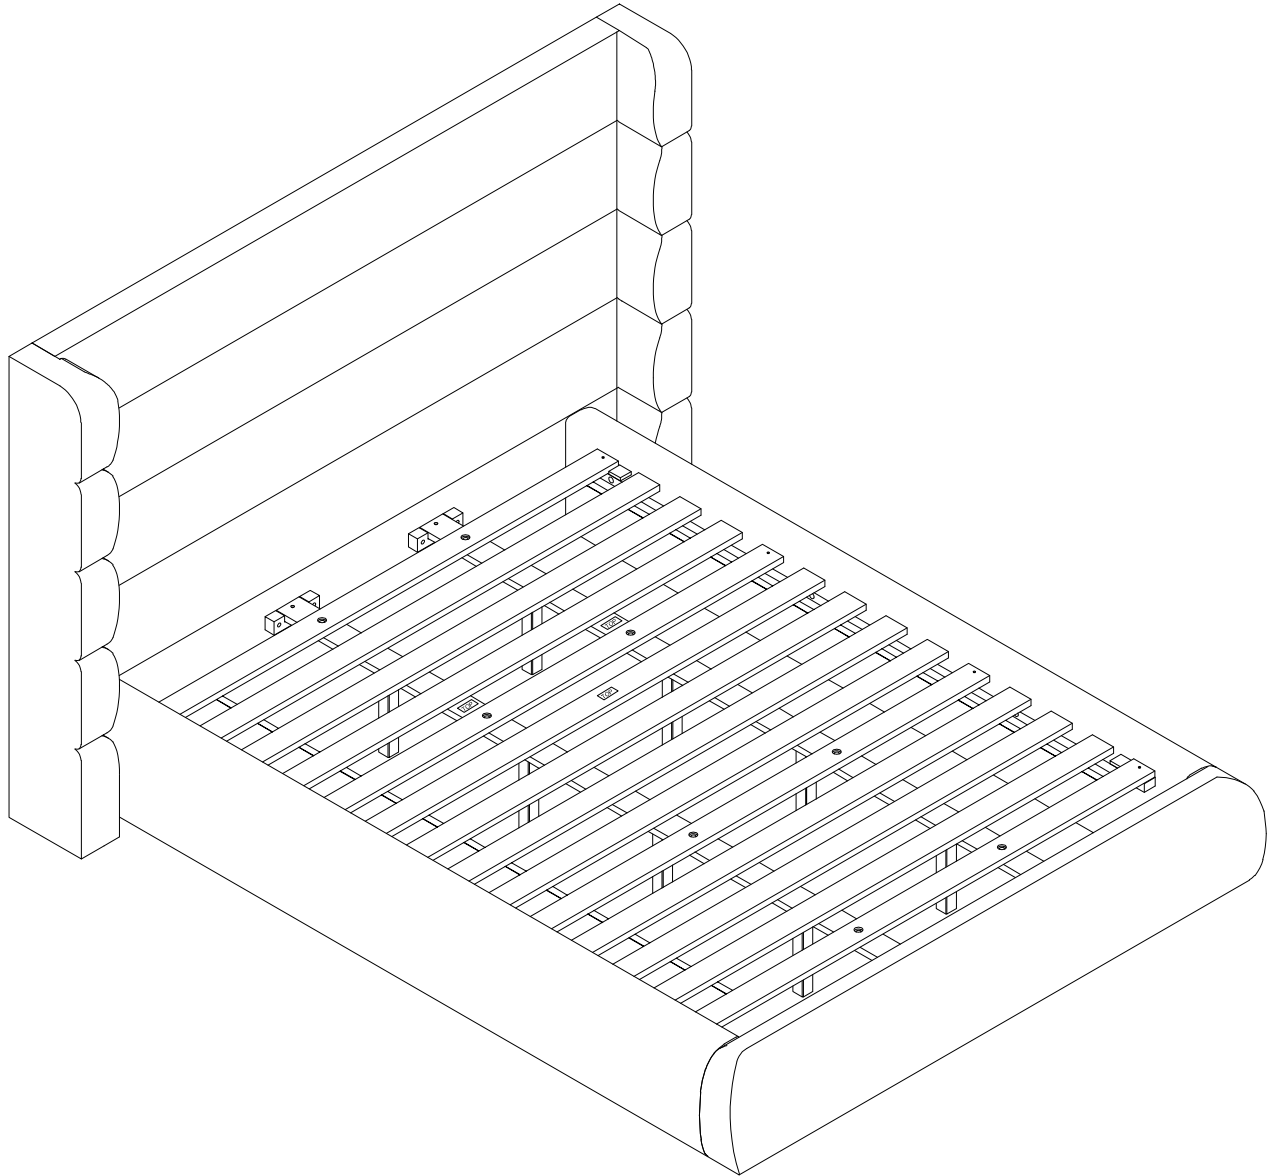


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

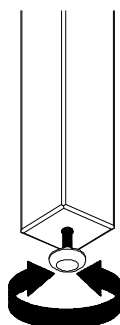

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

FRANK UPHOLSTERED KING PLATFORM BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

E. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT CLEAT	4 PCS
H. CENTER SLAT SUPPORT	2 PCS
I. SUPPORT LEG	8 PCS

STEP 1:

USE ALLEN KEY (14) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

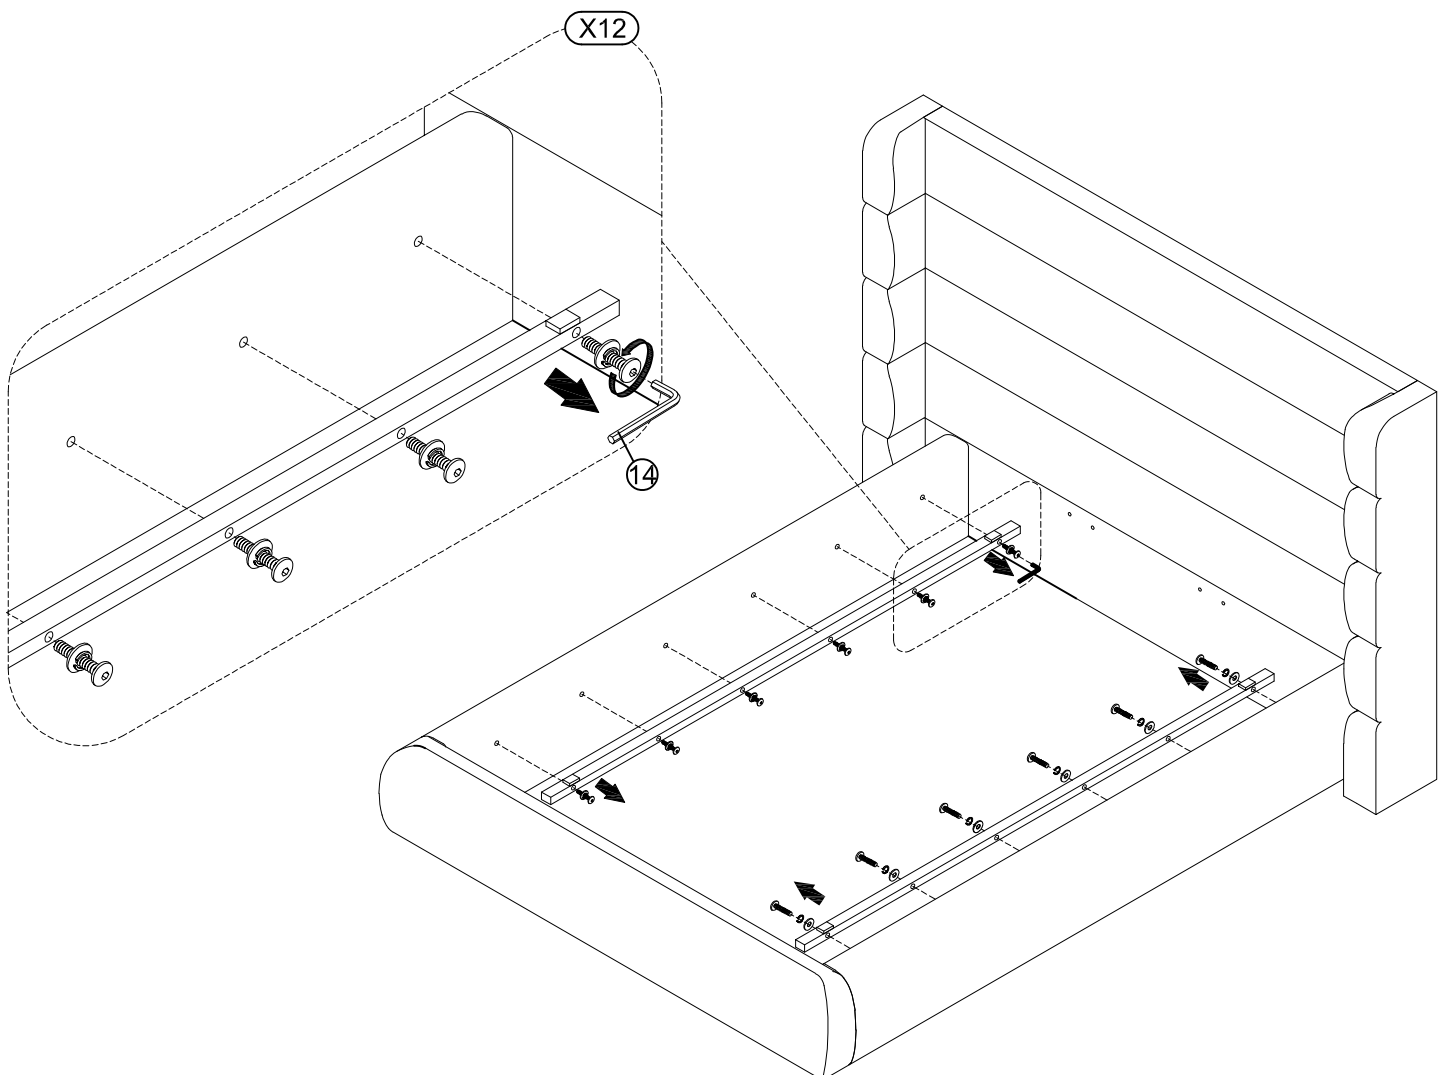

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION


FRANK UPHOLSTERED C.KING PLATFORM BED

ASSEMBLY INSTRUCTIONS



BOX#1

- A. HEADBOARD 1 PC
- B. LEFT WING 1 PC
- C. RIGHT WING 1 PC

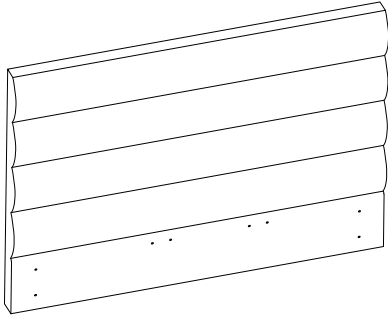

A




B




C

BOX#2

- D. FOOTBOARD 1 PC
- E. SLAT ROLL 1 SET
- F. CENTER SLAT SUPPORT CLEAT 4 PCS

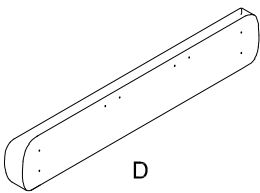

D

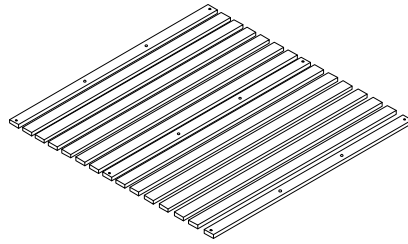


E




F

BOX#3

- G. SIDE RAIL 2 PCS
- H. CENTER SLAT SUPPORT 2 PCS
- I. SUPPORT LEG 8 PCS

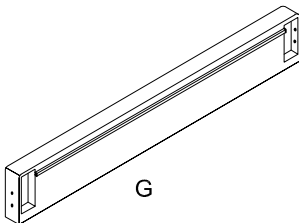

G

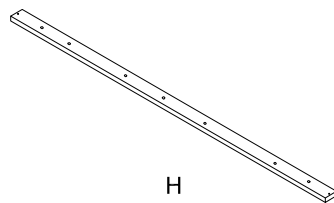

H



I



HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (5/16"x 2")		8 PCS
2	FLAT WASHER (5/16")		8 PCS
3	LOCK WASHER (5/16")		8 PCS
4	ALLEN KEY (5/16")		1 PC

HARDWARE KIT PACKED IN BOX #2

5	THREADED BOLT (5/16"x 3-1/2")		8 PCS
6	ALLEN BOLT (5/16"x 2-1/2")		8 PCS
7	ALLEN BOLT (1/4"x 1-1/4")		6 PCS
8	FLAT WASHER (5/16")		16 PCS
9	FLAT WASHER (1/4")		6 PCS
10	LOCK WASHER (5/16")		16 PCS
11	LOCK WASHER (1/4")		6 PCS
12	HEX NUT (5/16")		8 PCS
13	PHILLIPS SCREW (M4 x32mm)		10 PCS
14	ALLEN KEY (5/16")		1 PC
15	WRENCH		1 PC
16	CONNECTING BRACKET		4 PCS

FULLY ASSEMBLED

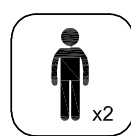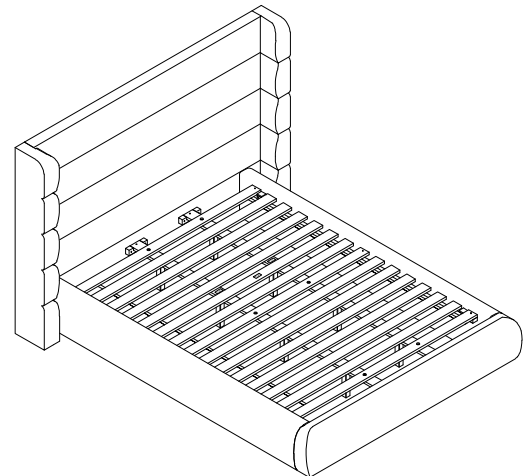


FRANK UPHOLSTERED C.KING PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 1:

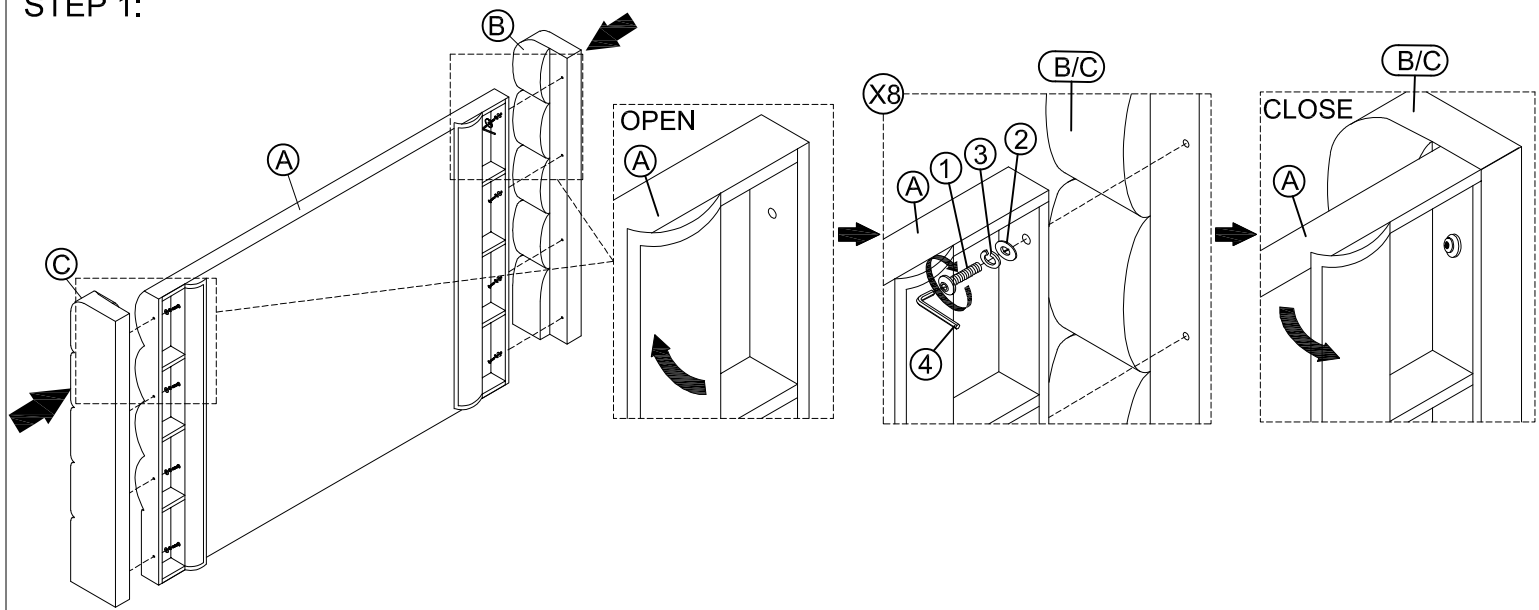

STEP 2:

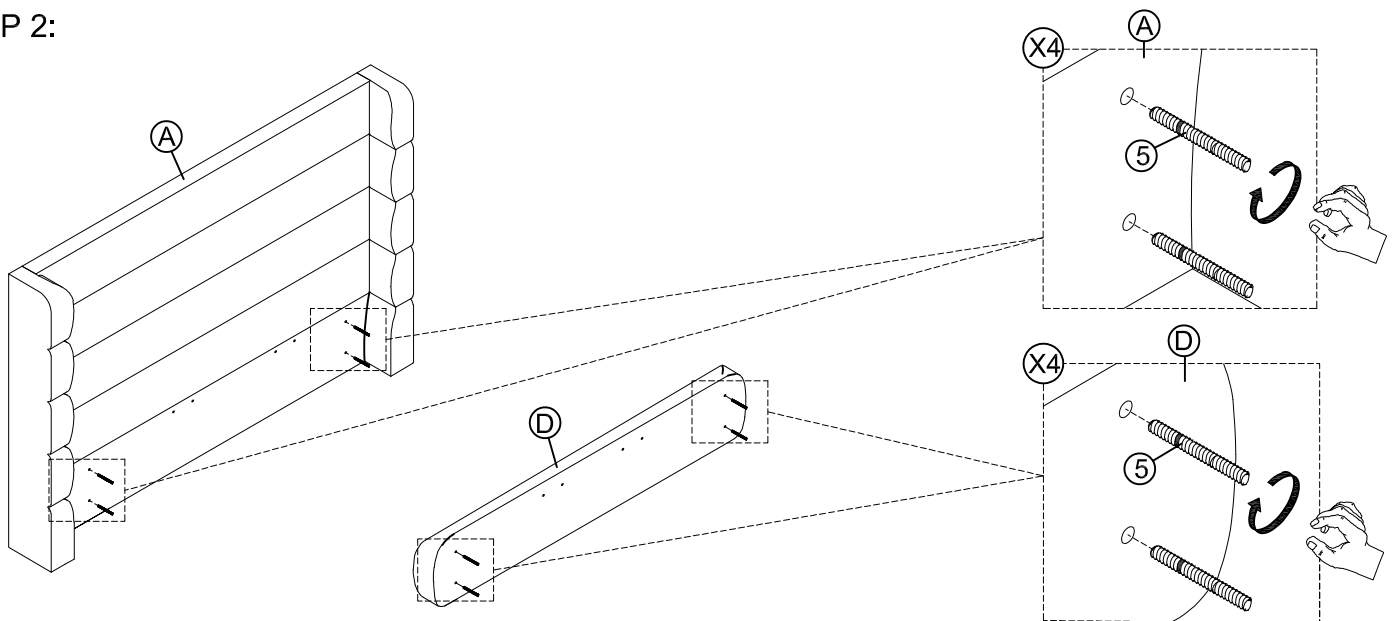

STEP 3:

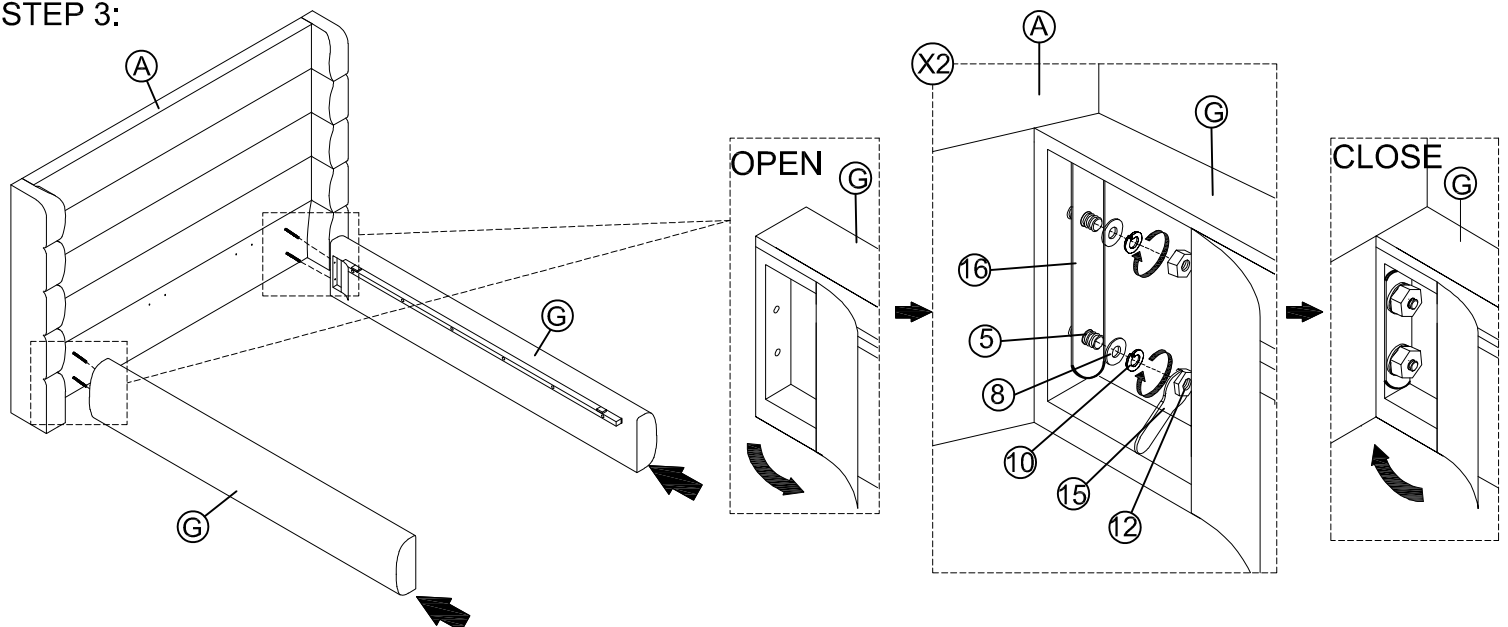


FRANK UPHOLSTERED C.KING PLATFORM BED

ASSEMBLY INSTRUCTIONS




STEP 4:

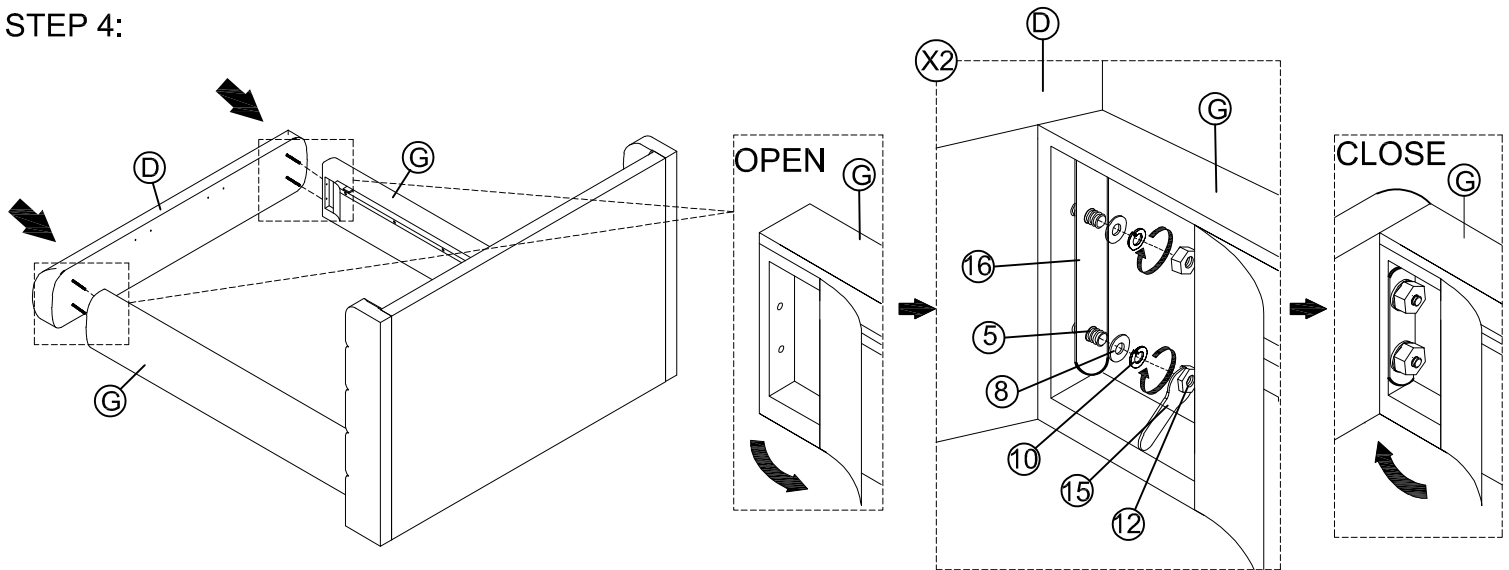


STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5-9 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5

STEP 5:

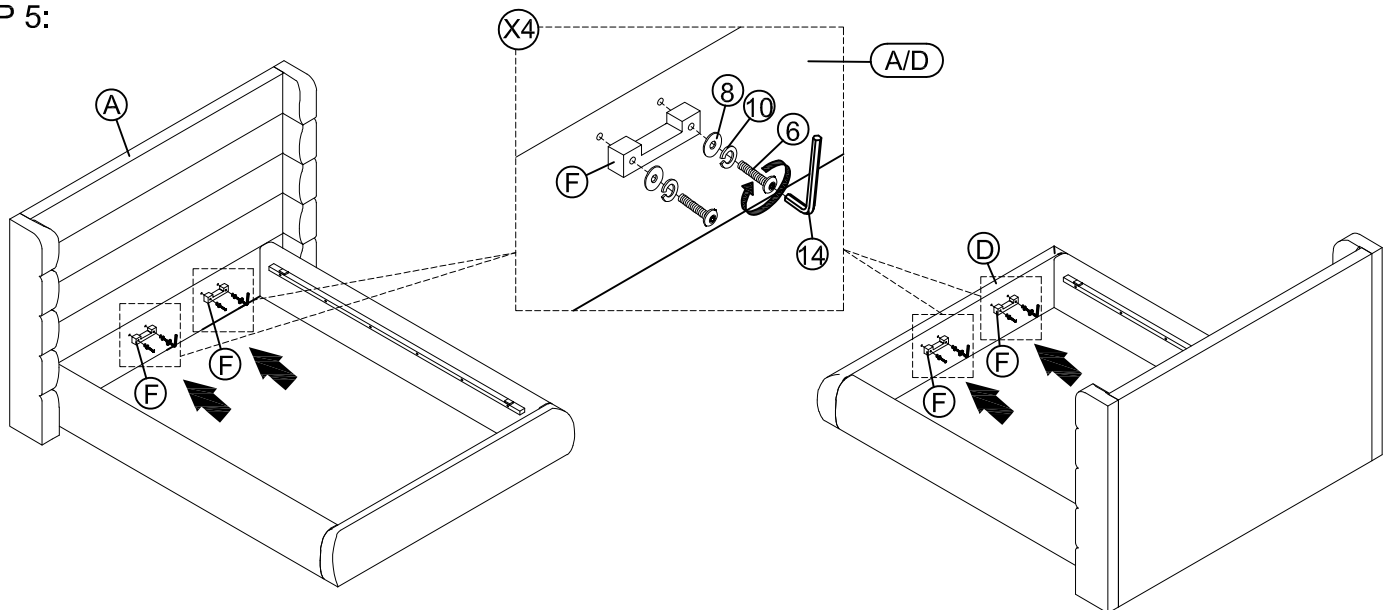

STEP 6:

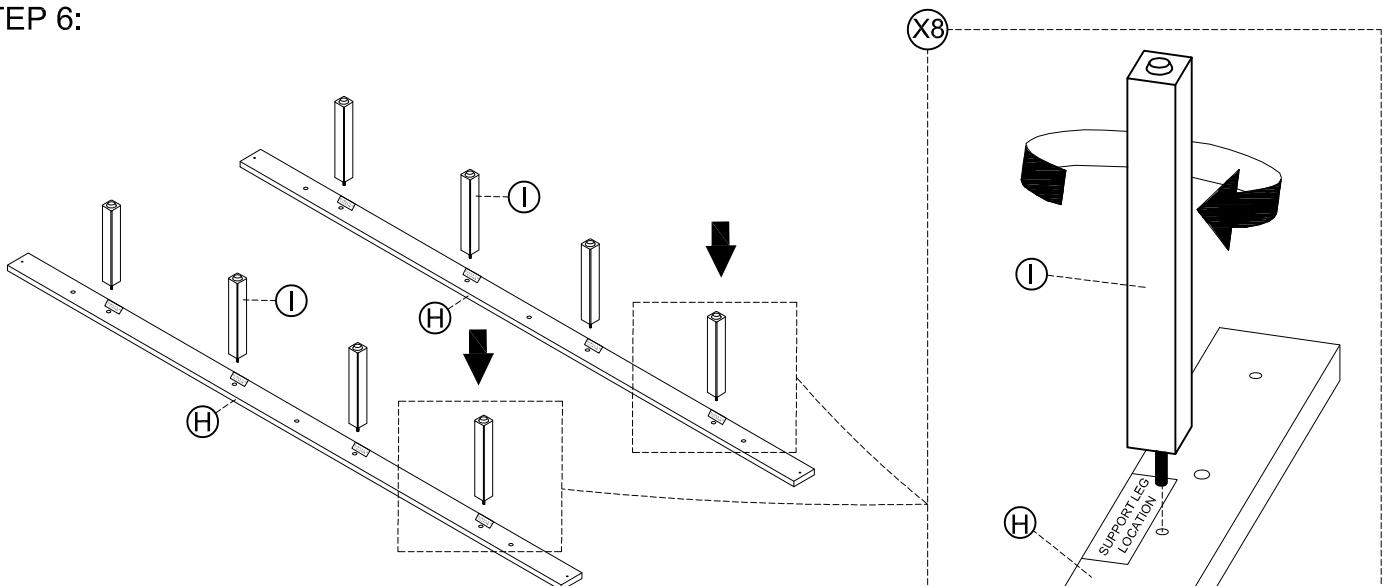


FRANK UPHOLSTERED C.KING PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 7:

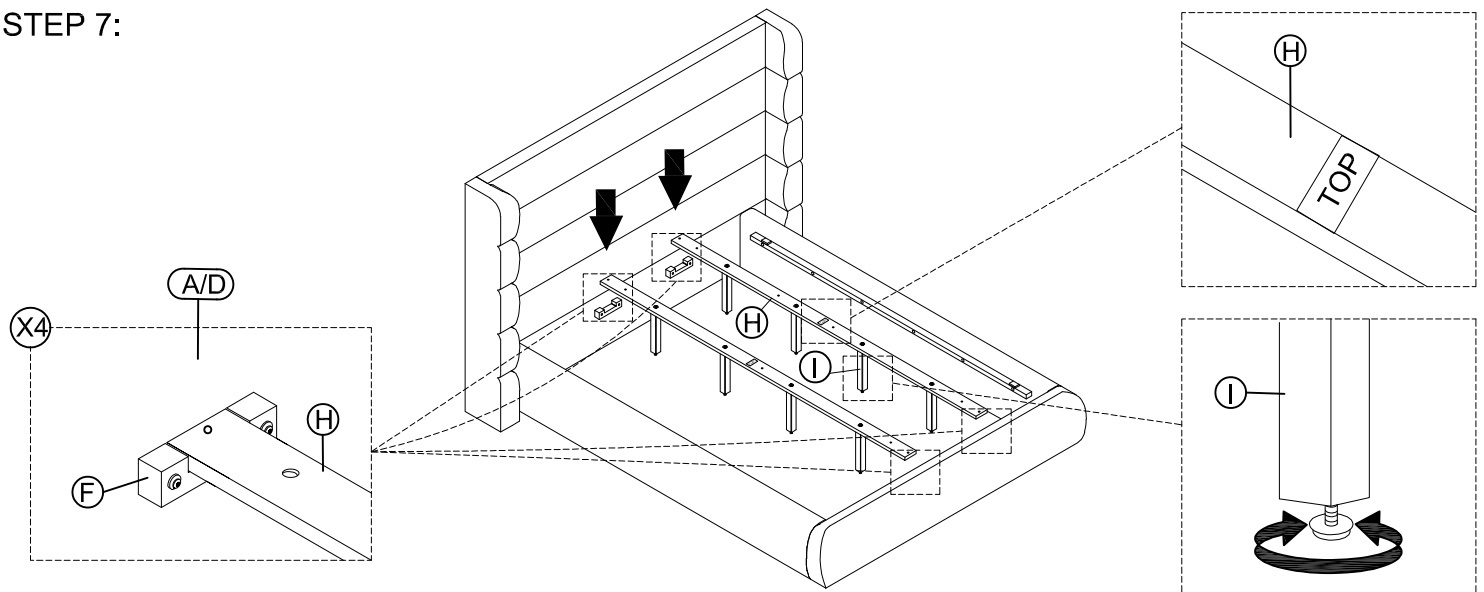

STEP 8:

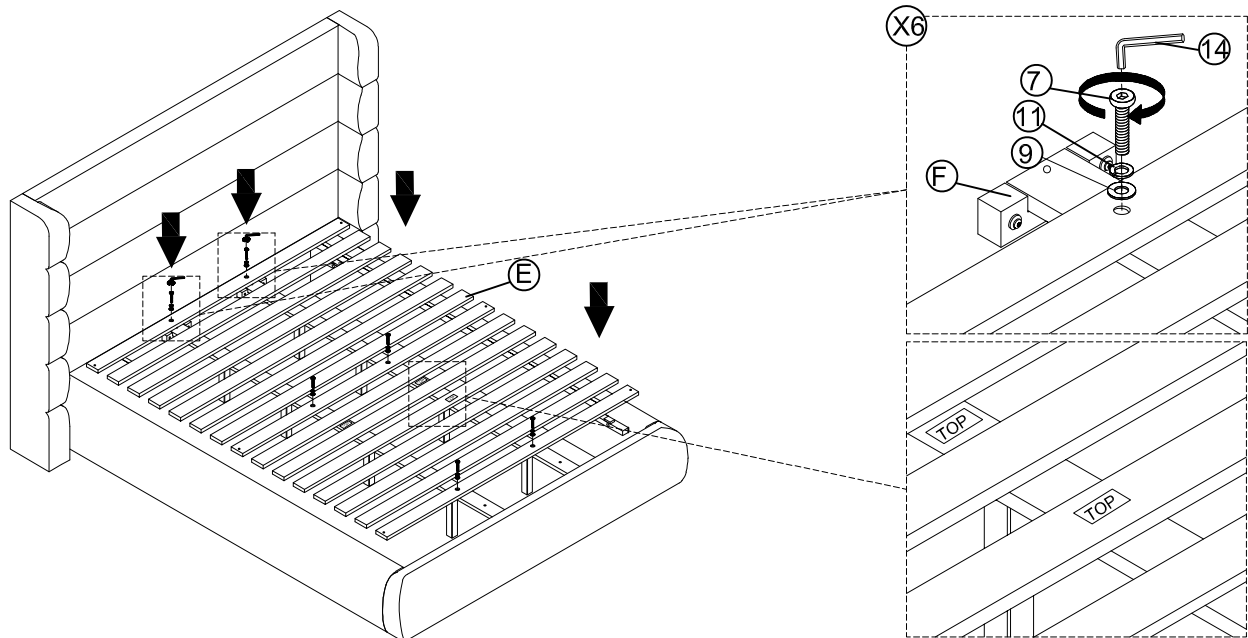


STEP 9:

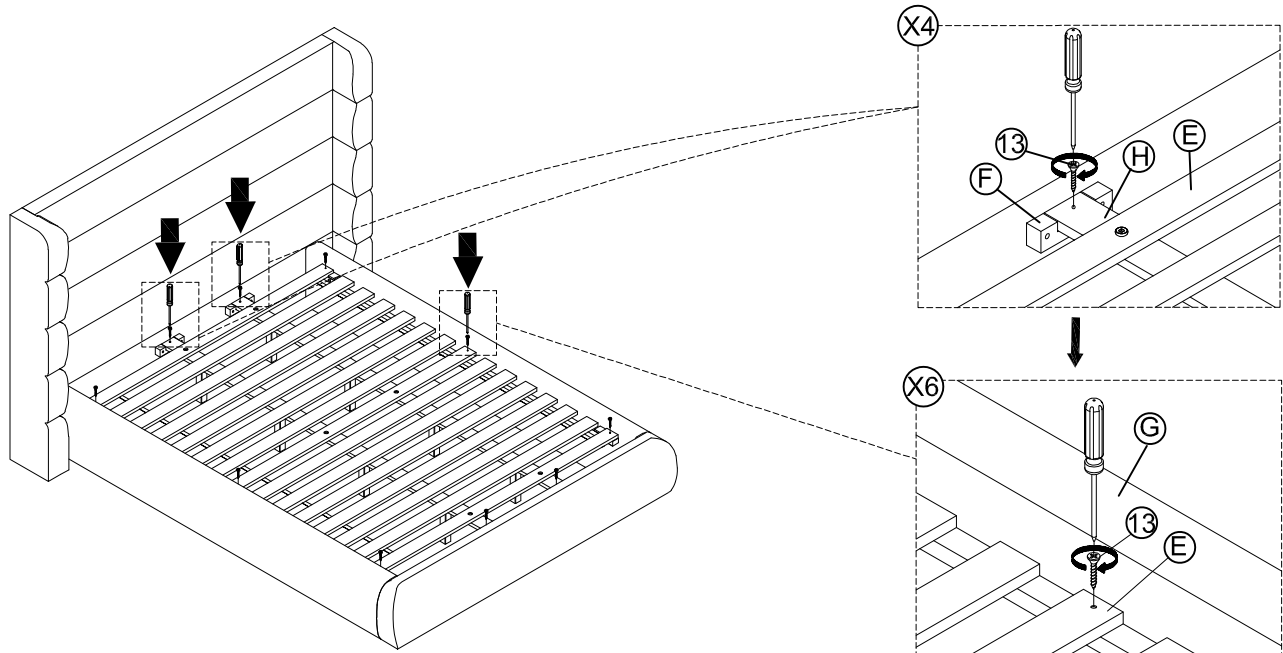

FRANK UPHOLSTERED C.KING PLATFORM BED

ASSEMBLY INSTRUCTIONS

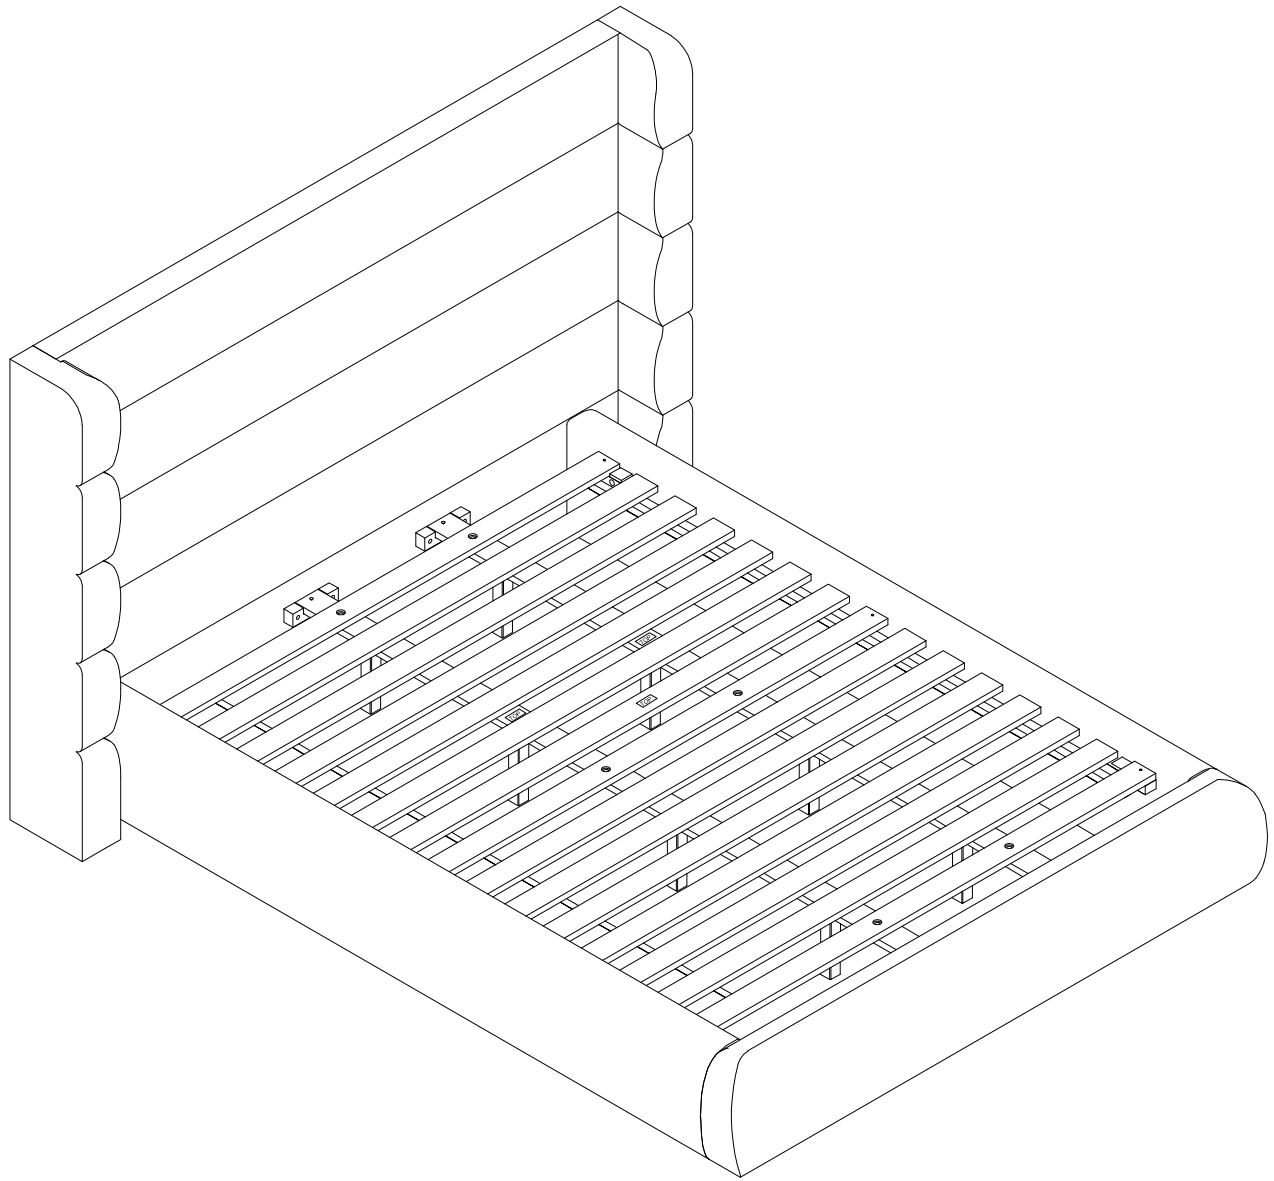


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

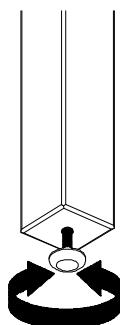

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

MODUS
FURNITURE

6/6


FRANK UPHOLSTERED FULL PLATFORM BED

ASSEMBLY INSTRUCTIONS



BOX#1

- A. HEADBOARD 1 PC
- B. LEFT WING 1 PC
- C. RIGHT WING 1 PC

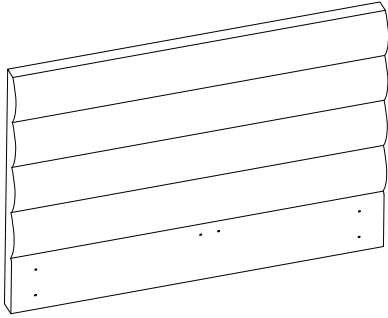

A




B




C

BOX#2

- D. FOOTBOARD 1 PC
- E. SLAT ROLL 1 SET
- F. CENTER SLAT SUPPORT CLEAT 2 PCS

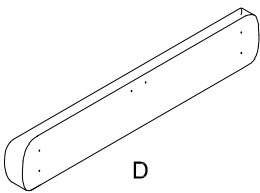

D

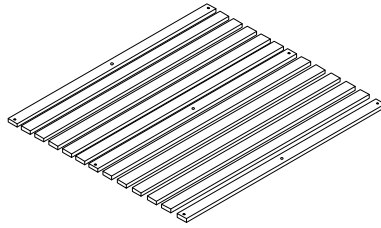


E




F

BOX#3

- G. SIDE RAIL 2 PCS
- H. CENTER SLAT SUPPORT 1 PC
- I. SUPPORT LEG 4 PCS

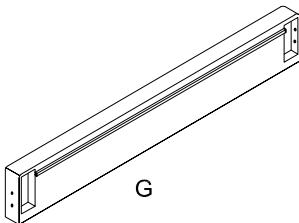

G

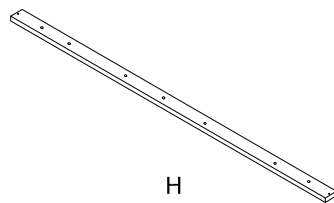


H





I



HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (5/16"x 2")		8 PCS
2	FLAT WASHER (5/16")		8 PCS
3	LOCK WASHER (5/16")		8 PCS
4	ALLEN KEY (5/16")		1 PC

HARDWARE KIT PACKED IN BOX #2

5	THREADED BOLT (5/16"x 3-1/2")		8 PCS
6	ALLEN BOLT (5/16"x 2-1/2")		4 PCS
7	ALLEN BOLT (1/4"x 1-1/4")		3 PCS
8	FLAT WASHER (5/16")		12 PCS
9	FLAT WASHER (1/4")		3 PCS
10	LOCK WASHER (5/16")		12 PCS
11	LOCK WASHER (1/4")		3 PCS
12	HEX NUT (5/16")		8 PCS
13	PHILLIPS SCREW (M4 x32mm)		8 PCS
14	ALLEN KEY (5/16")		1 PC
15	WRENCH		1 PC
16	CONNECTING BRACKET		4 PCS

FULLY ASSEMBLED

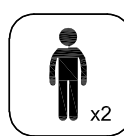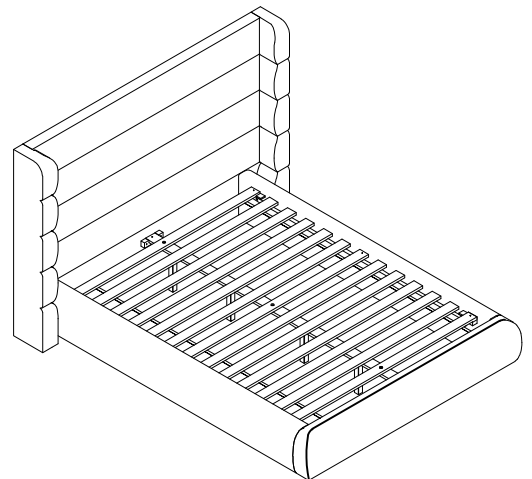


FRANK UPHOLSTERED FULL PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 1:

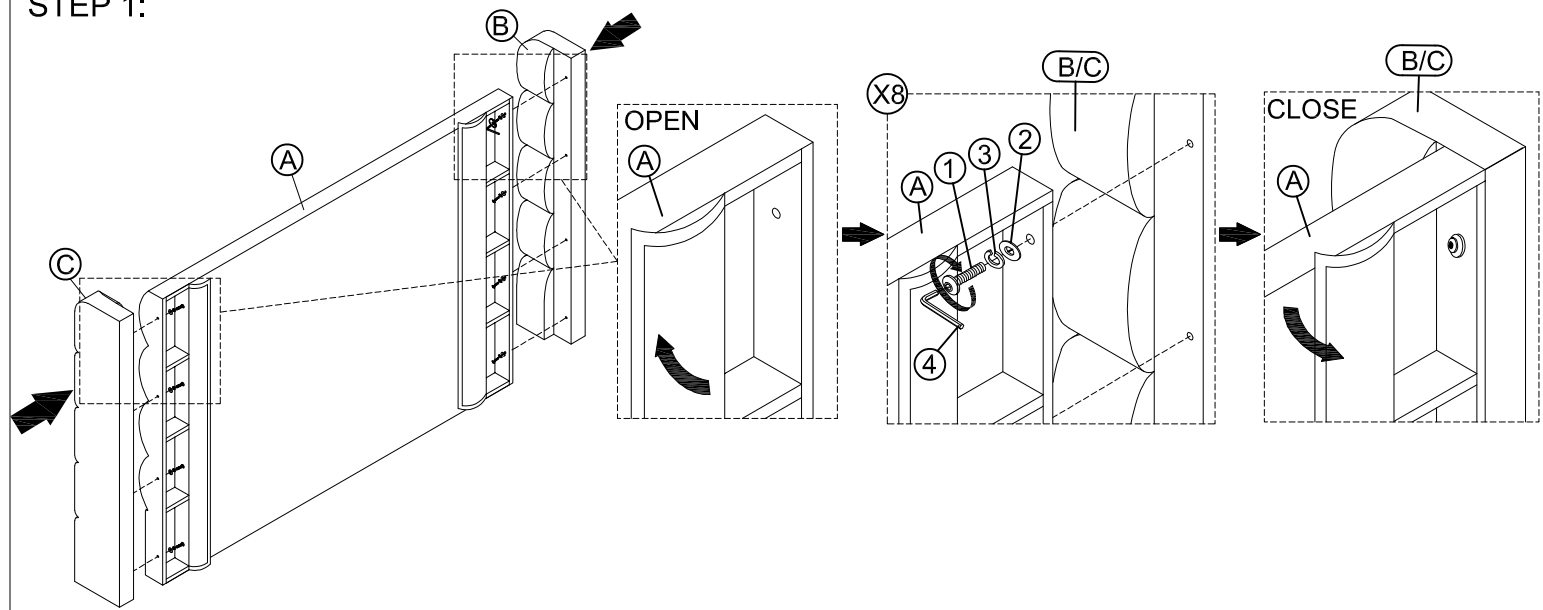

STEP 2:

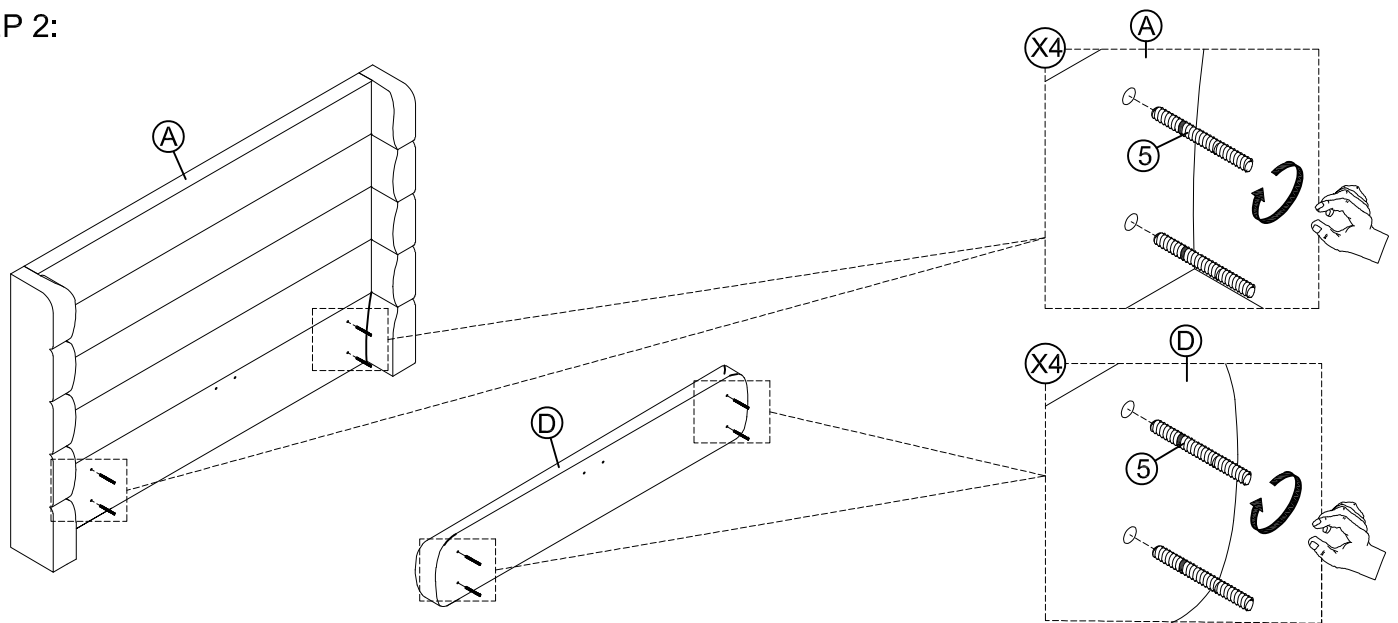

STEP 3:

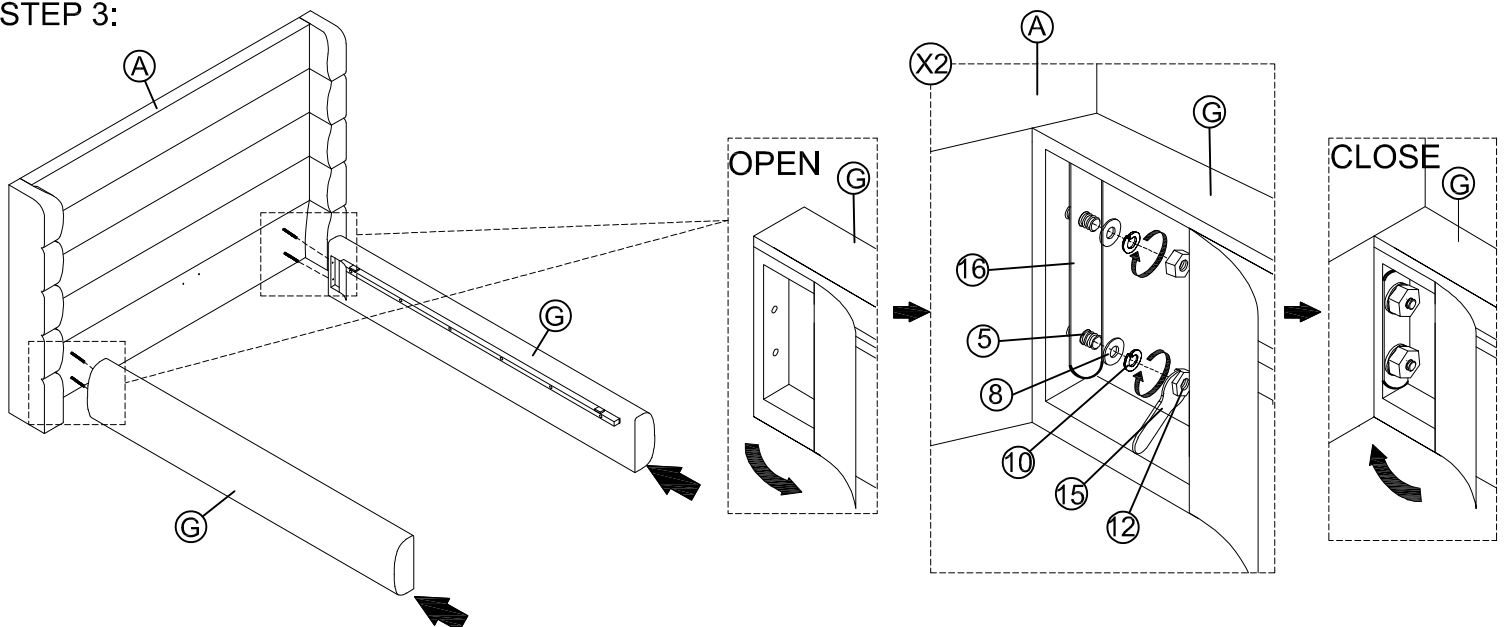


FRANK UPHOLSTERED FULL PLATFORM BED

ASSEMBLY INSTRUCTIONS




STEP 4:

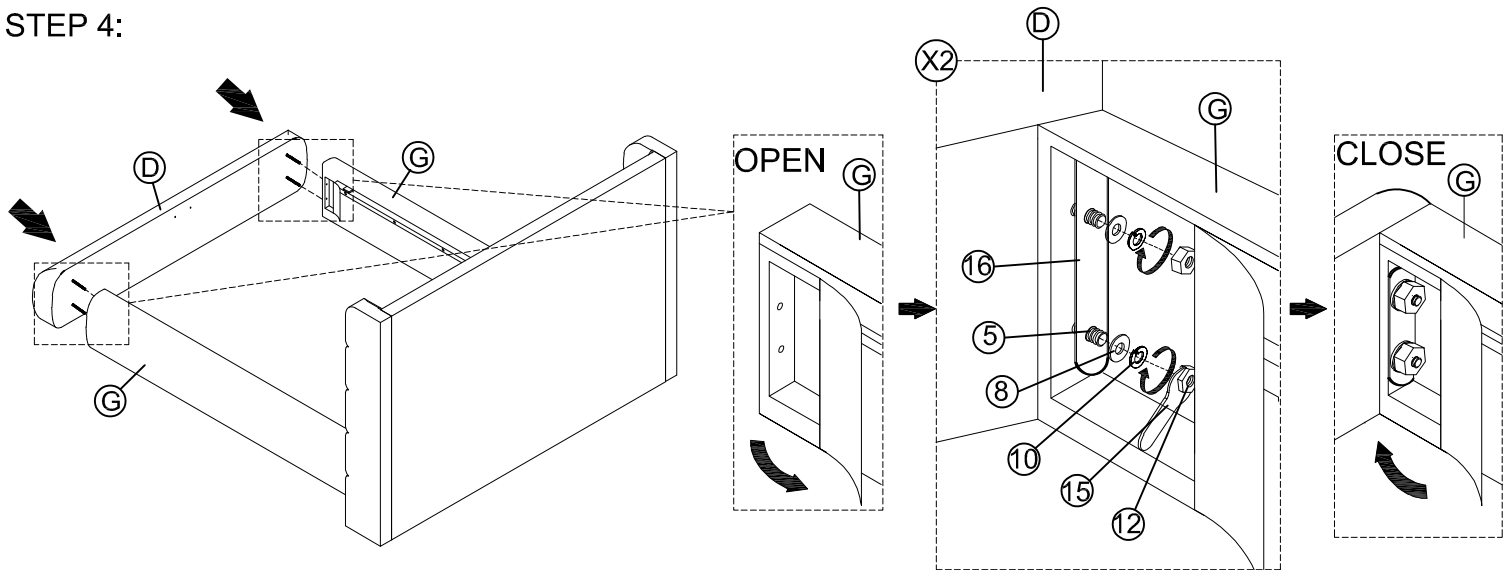


STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5-9 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5

STEP 5:

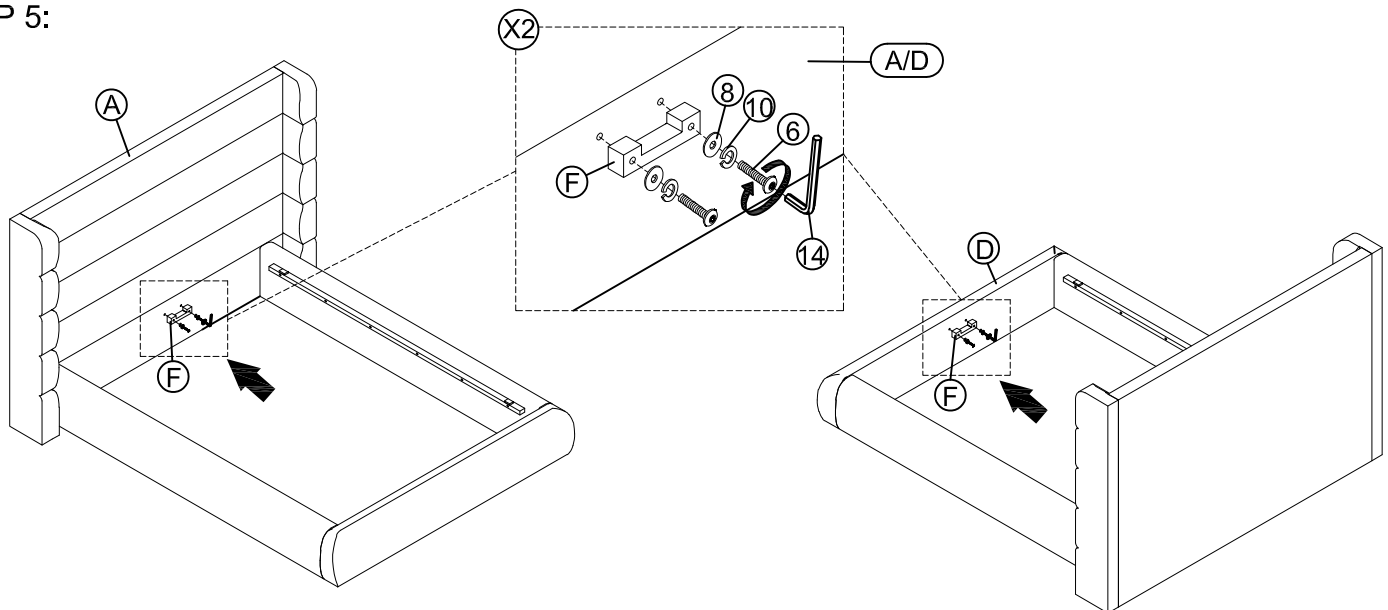

STEP 6:

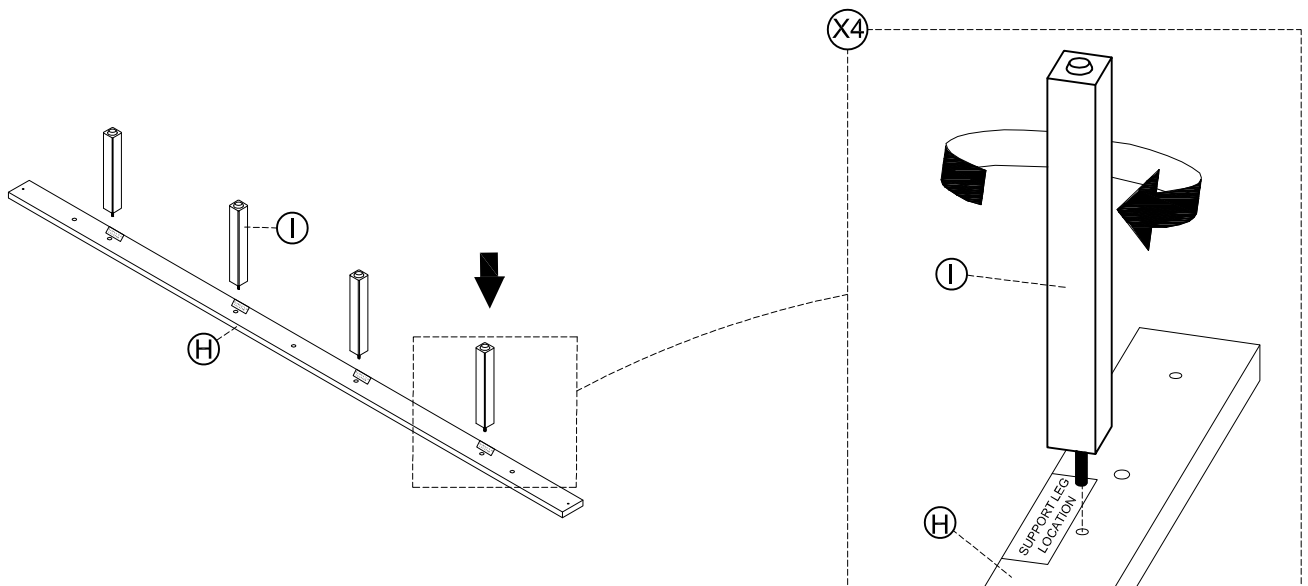


FRANK UPHOLSTERED FULL PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 7:

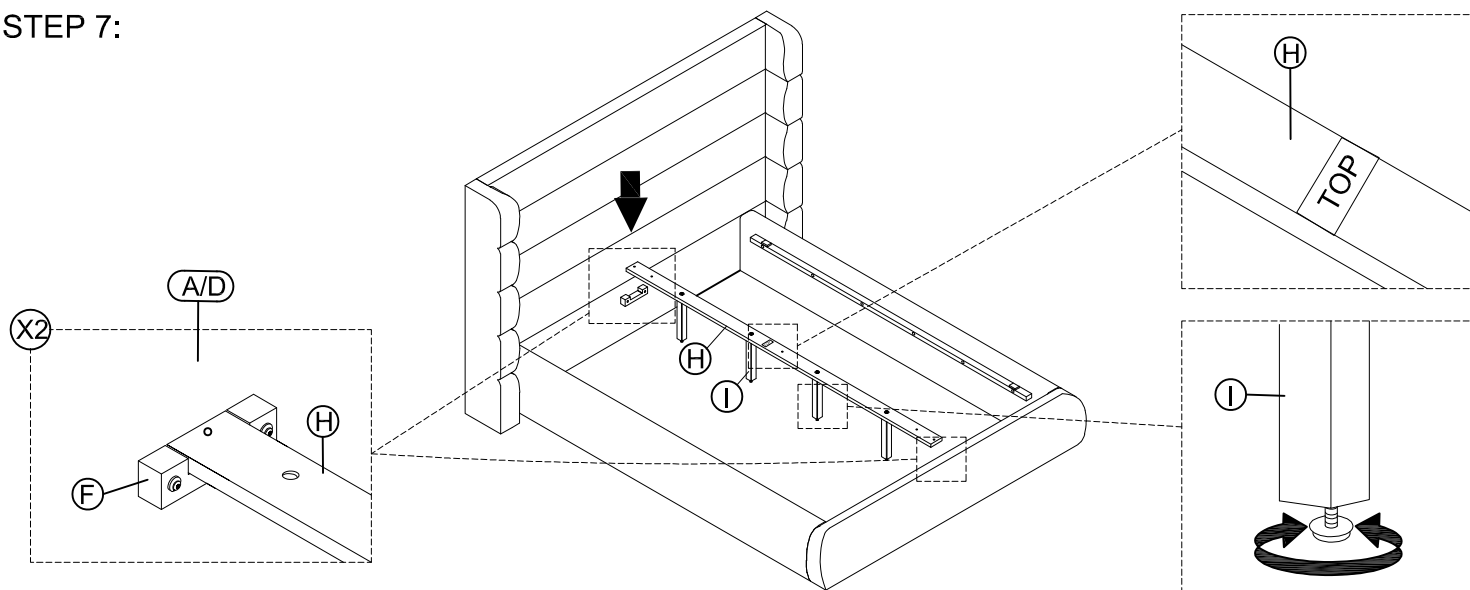

STEP 8:

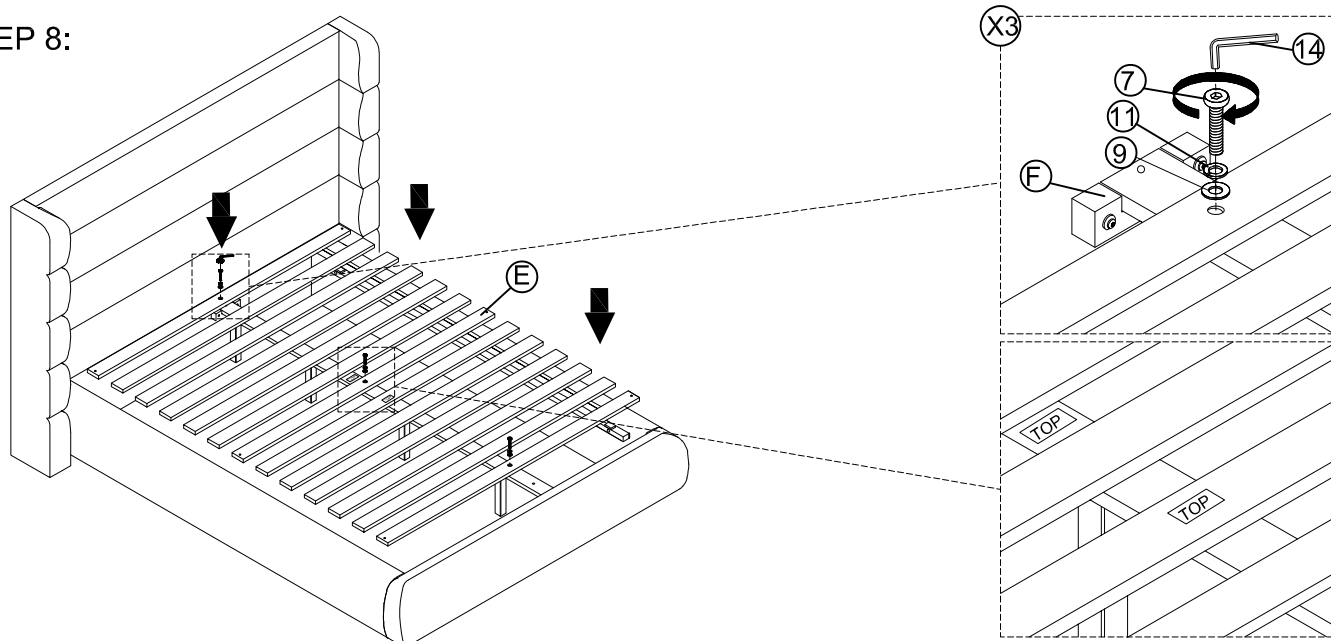


STEP 9:

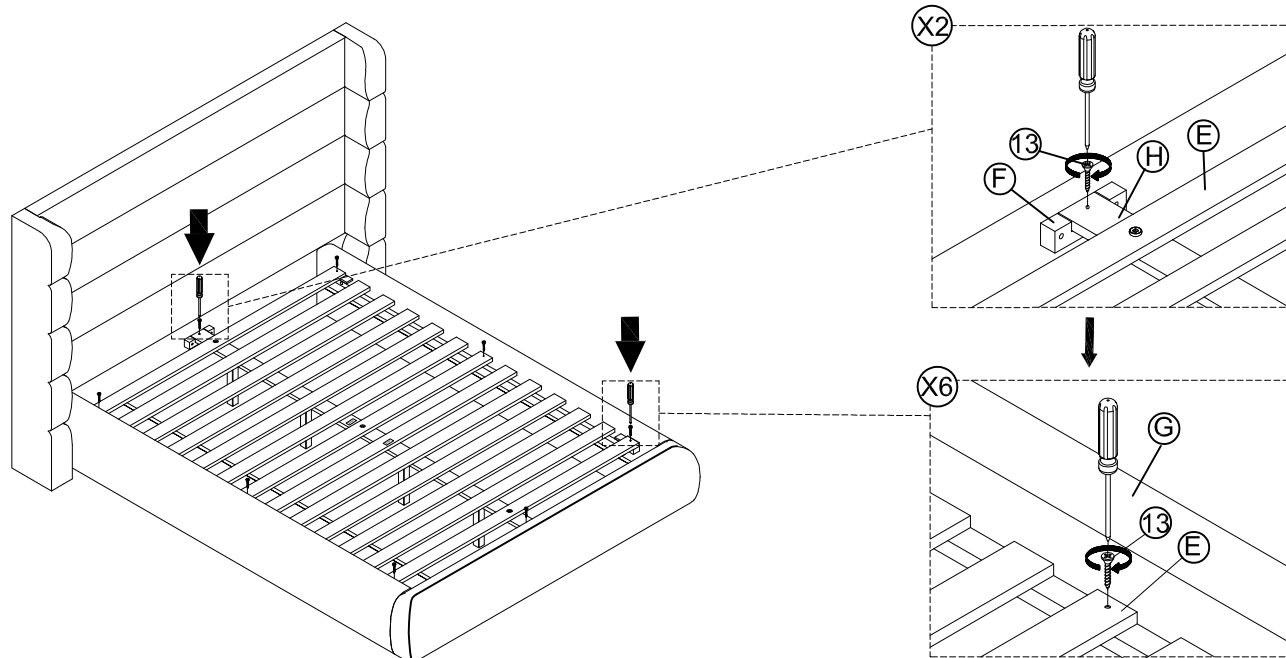

FRANK UPHOLSTERED FULL PLATFORM BED

ASSEMBLY INSTRUCTIONS

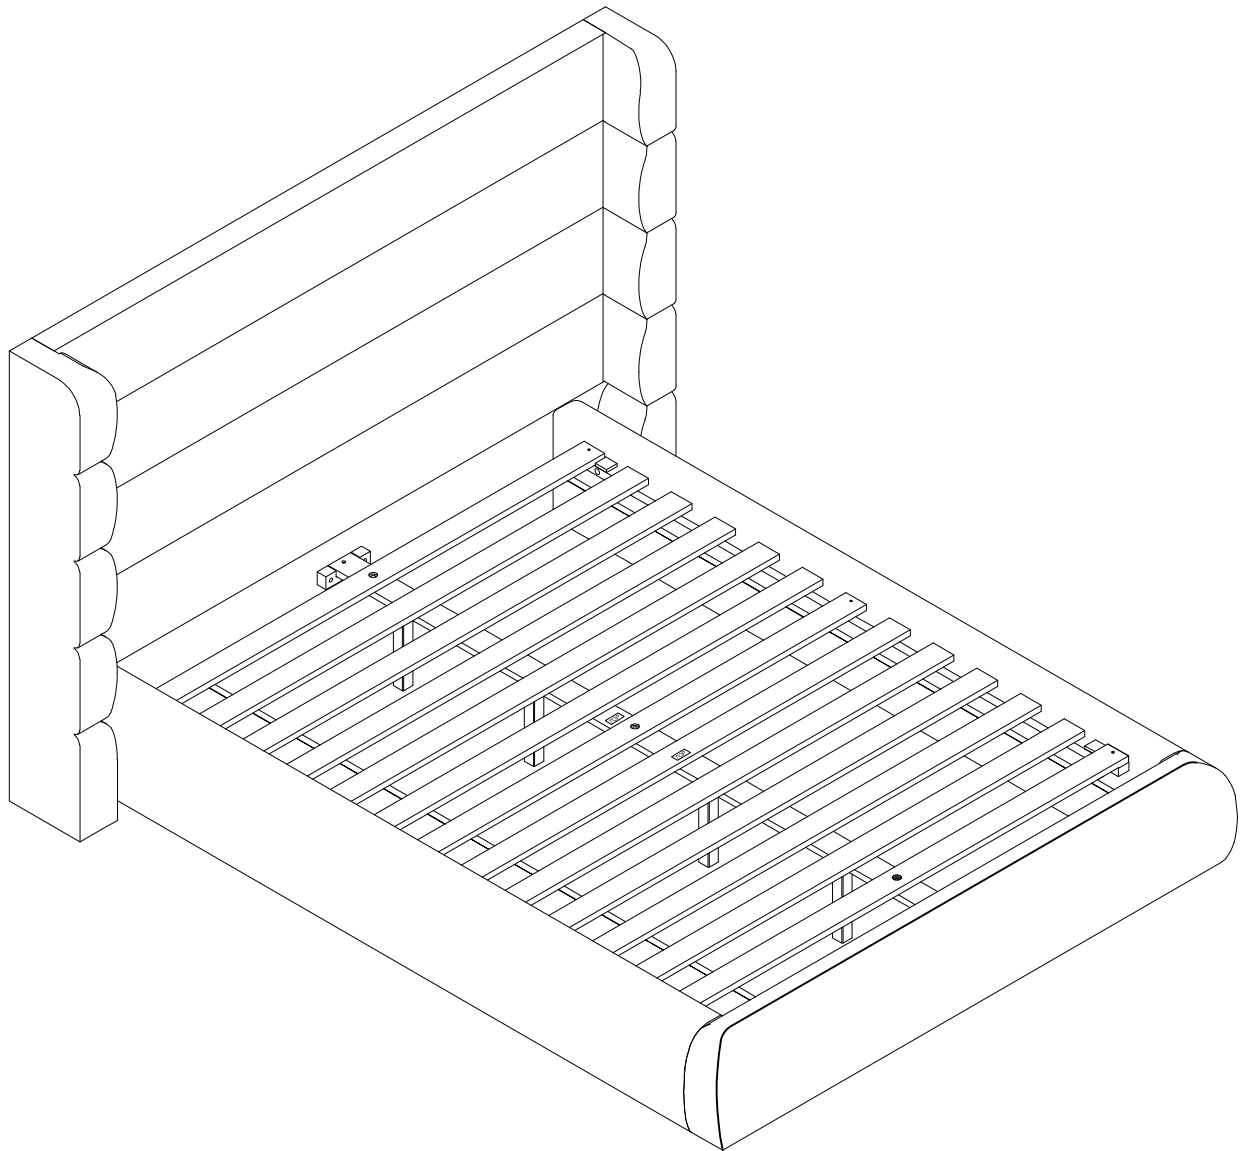


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

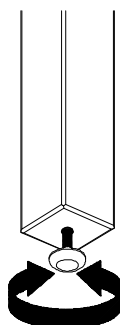

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

FRANK UPHOLSTERED FULL PLATFORM BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

E. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT CLEAT	2 PCS
H. CENTER SLAT SUPPORT	1 PC
I. SUPPORT LEG	4 PCS

STEP 1:

USE ALLEN KEY (14) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

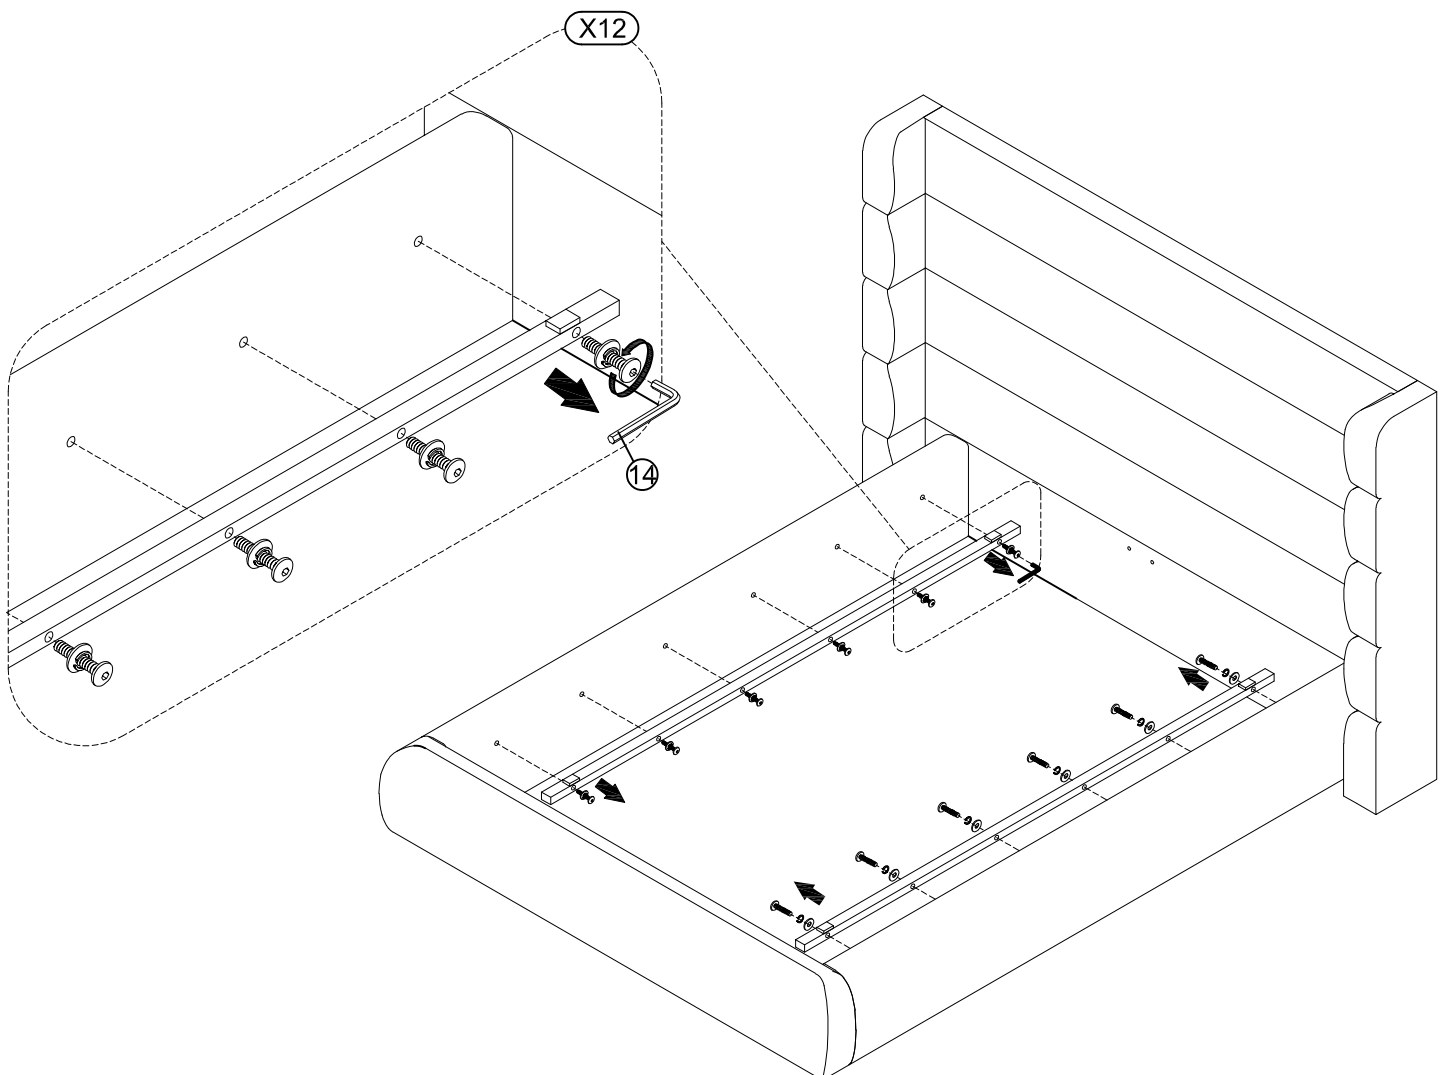

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION