



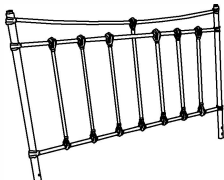

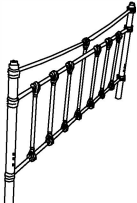










ASSEMBLY INSTRUCTION


METAL QUEEN BED

A Headboard	B Footboard	C Side rail	D Slats
			
1PC	1PC	2PCS	3PCS
E Extension leg	F Support leg	G Bolt with ball	H Adjustable bolt M6*25mm
			
2PCS	3PCS	4PCS	3PCS
I Bolt M8*50mm	J Bolt M6*15mm	K Nut M8	L Flat washer
			
12PCS	18PCS	8PCS	12PCS
M Allen wrench 4*4mm	N Wrench		
			
1PC	1PC		

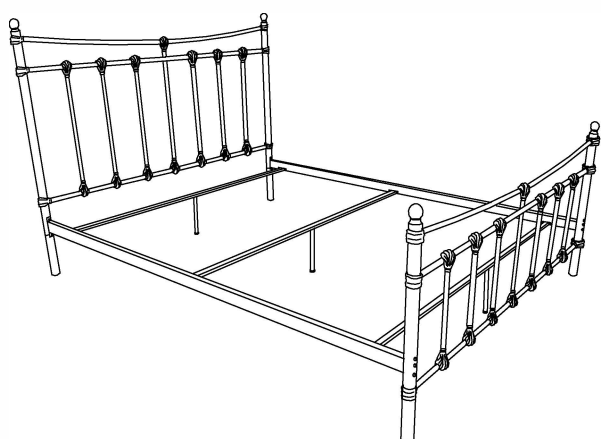


This page lists all the contents included in the box. please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** Insert the Extension leg (E) into the Headboard (A).

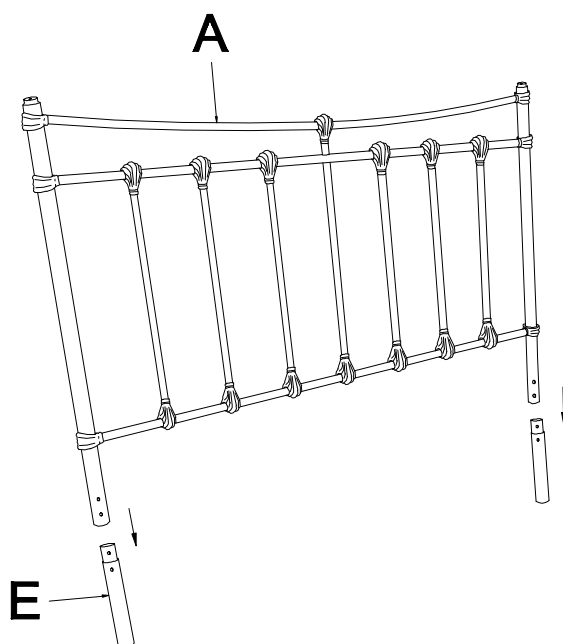


- 2** Assemble 4 pcs Bolt with ball (G) to the Headboard (A) and Footboard (B). Assemble the Side rail (C) to the Headboard (A) and Footboard (B) with 12 pcs Bolt (I), 8 pcs Nut (K) and 8 pcs Flat washer (L) by Allen wrench (M) and Wrench (N).

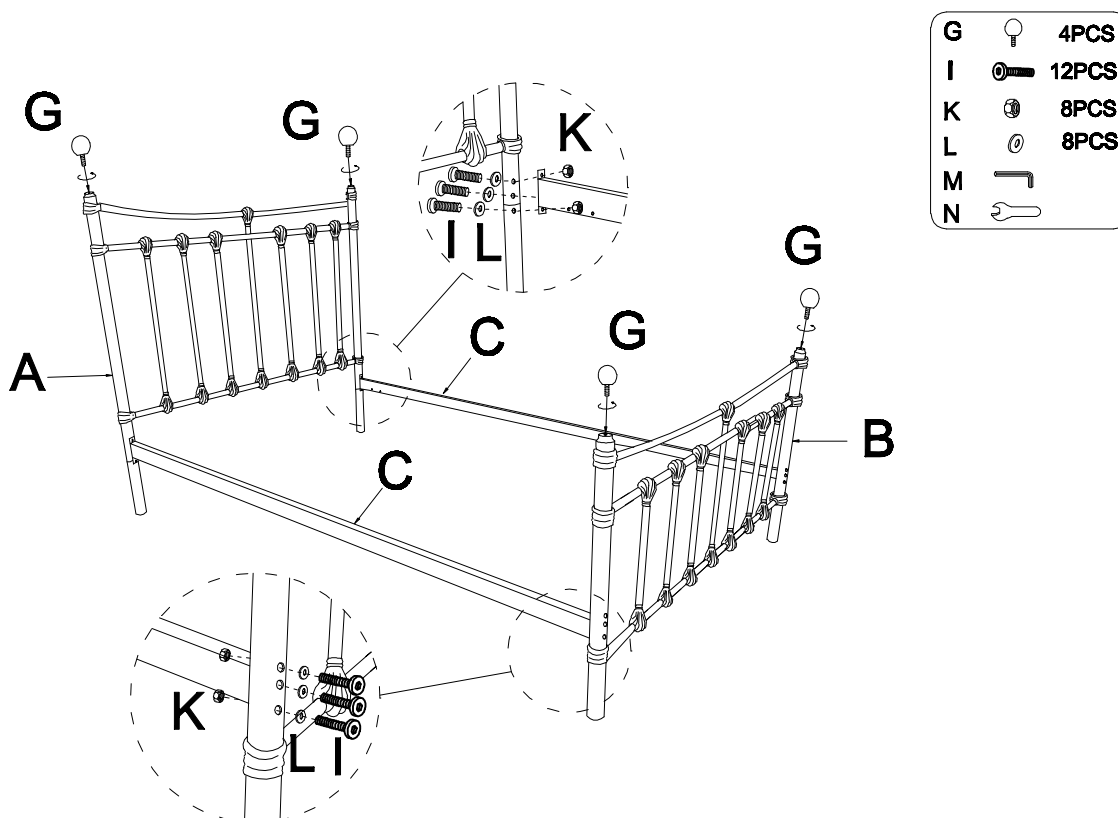

- 3** Assemble 3 pcs Support leg (F) to the Slats (D) with 6 pcs Bolt (J) and 3 pcs Adjustable bolt (H) by Allen wrench (M).

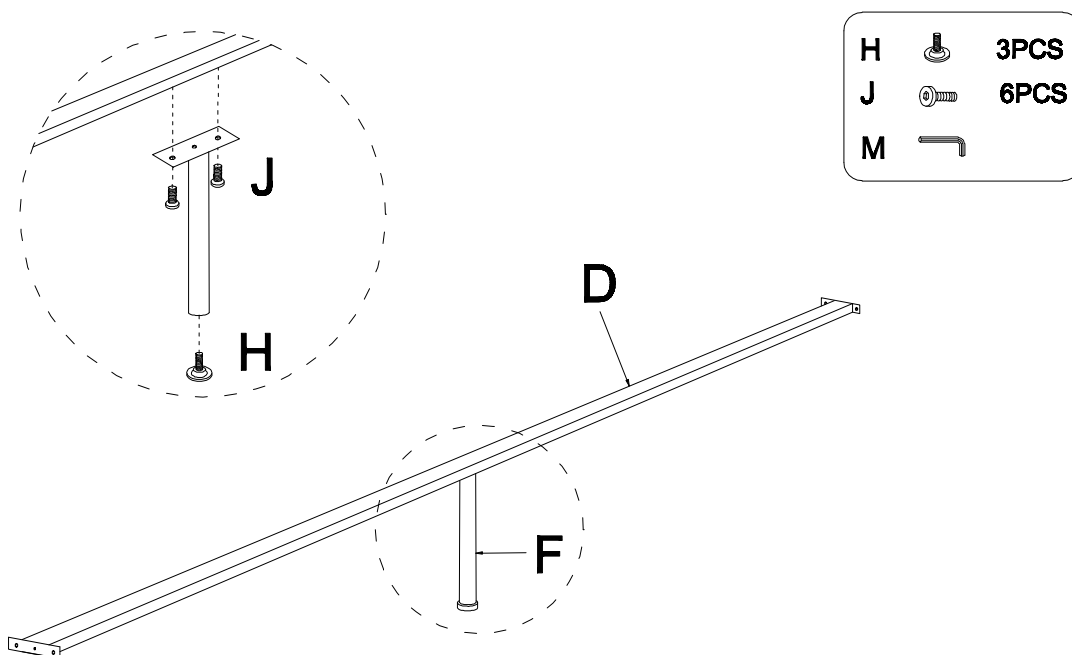

- 4** Assemble the Slats (D) with 12 pcs Bolt (J) to the Side rail (C) by Allen wrench (M).

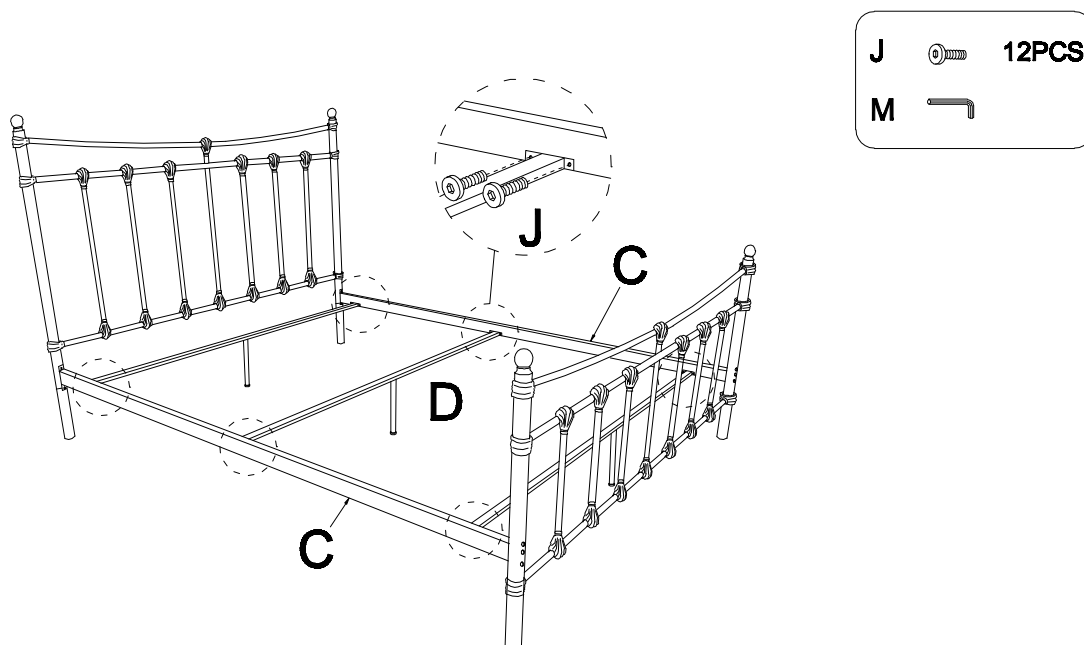

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.