

BURKE UPHOLSTERED QUEEN PLATFORM BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

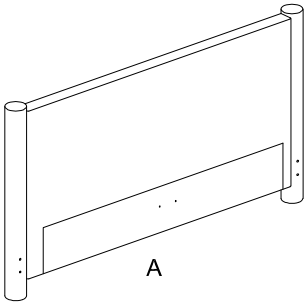

A

BOX#2

B. FOOTBOARD LEG

2 PCS

C. FOOTBOARD


1 PC

D. CENTER SLAT SUPPORT CLEAT


2 PCS

E. SLAT ROLL

1 SET




B

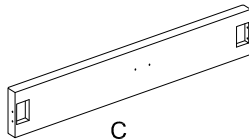

C



D

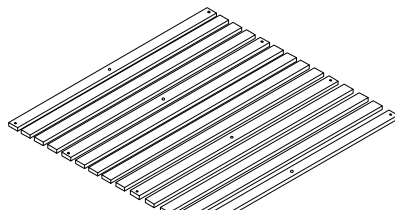

E

BOX#3

F. SIDE RAIL


2 PCS

G. CENTER SLAT SUPPORT


1 PC

H. SUPPORT LEG

4 PCS

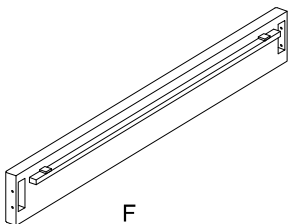

F

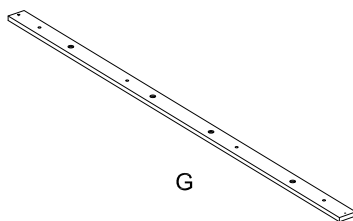

G





H

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (5/16"x 3-1/2")		12 PCS
2	ALLEN BOLT (5/16"x 2-1/2")		4 PCS
3	ALLEN BOLT (1/4"x 1-1/4")		4 PCS
4	FLAT WASHER (5/16")		16 PCS
5	FLAT WASHER (1/4")		4 PCS
6	LOCK WASHER (5/16")		16 PCS
7	LOCK WASHER (1/4")		4 PCS
8	HEX NUT (5/16")		12 PCS
9	PHILLIPS SCREW (M4 x 32mm)		10 PCS
10	ALLEN KEY (5/16")		1 PC
11	WRENCH		1 PC
12	CONNECTING BRACKET		6 PCS

FULLY ASSEMBLED

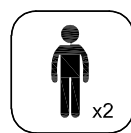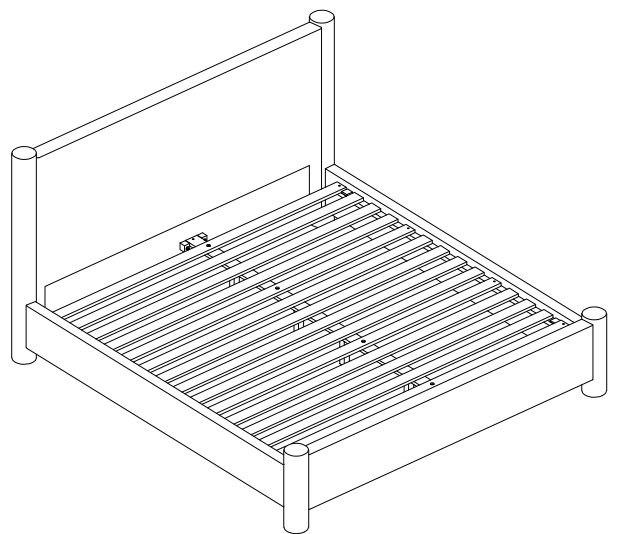


BURKE UPHOLSTERED QUEEN PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 1:

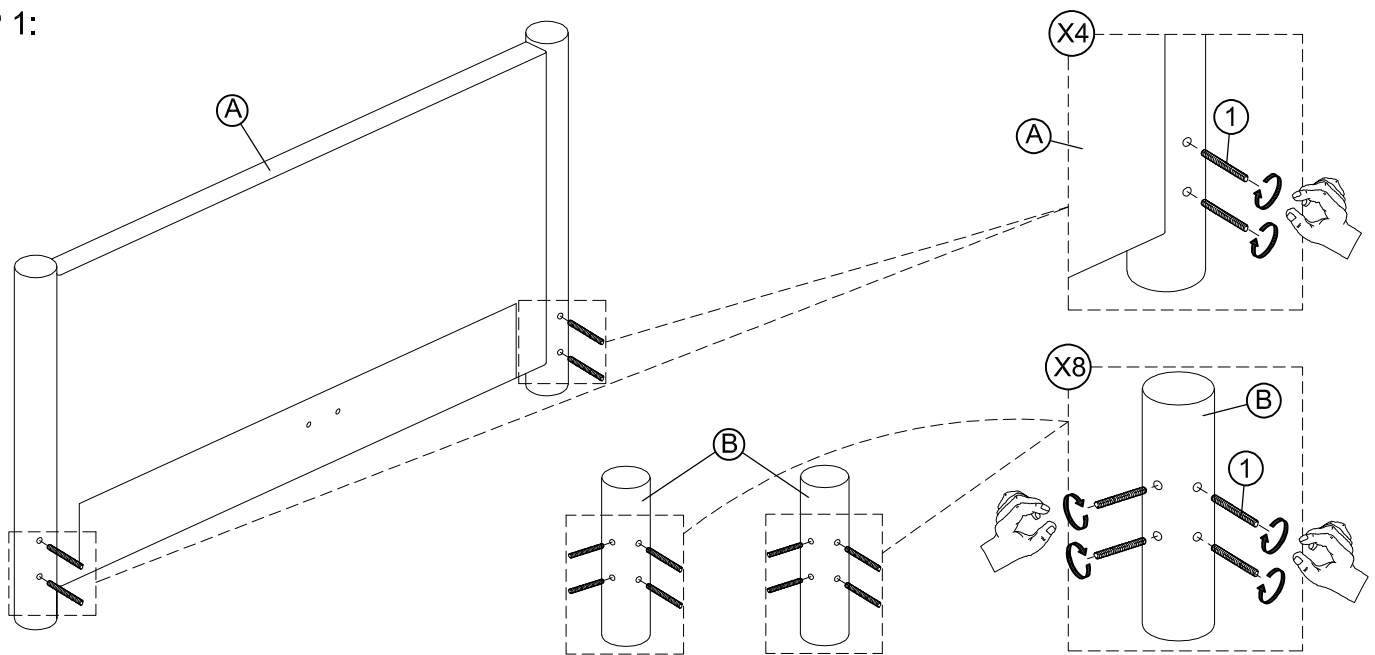

STEP 2:

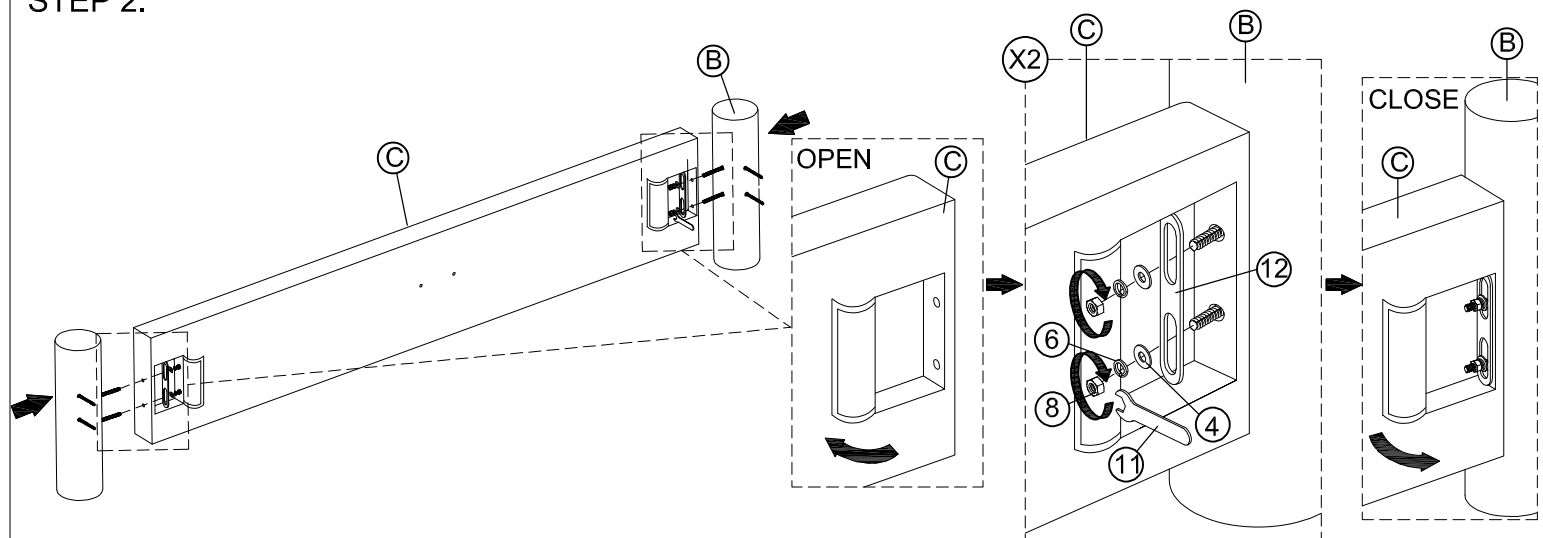

STEP 3:

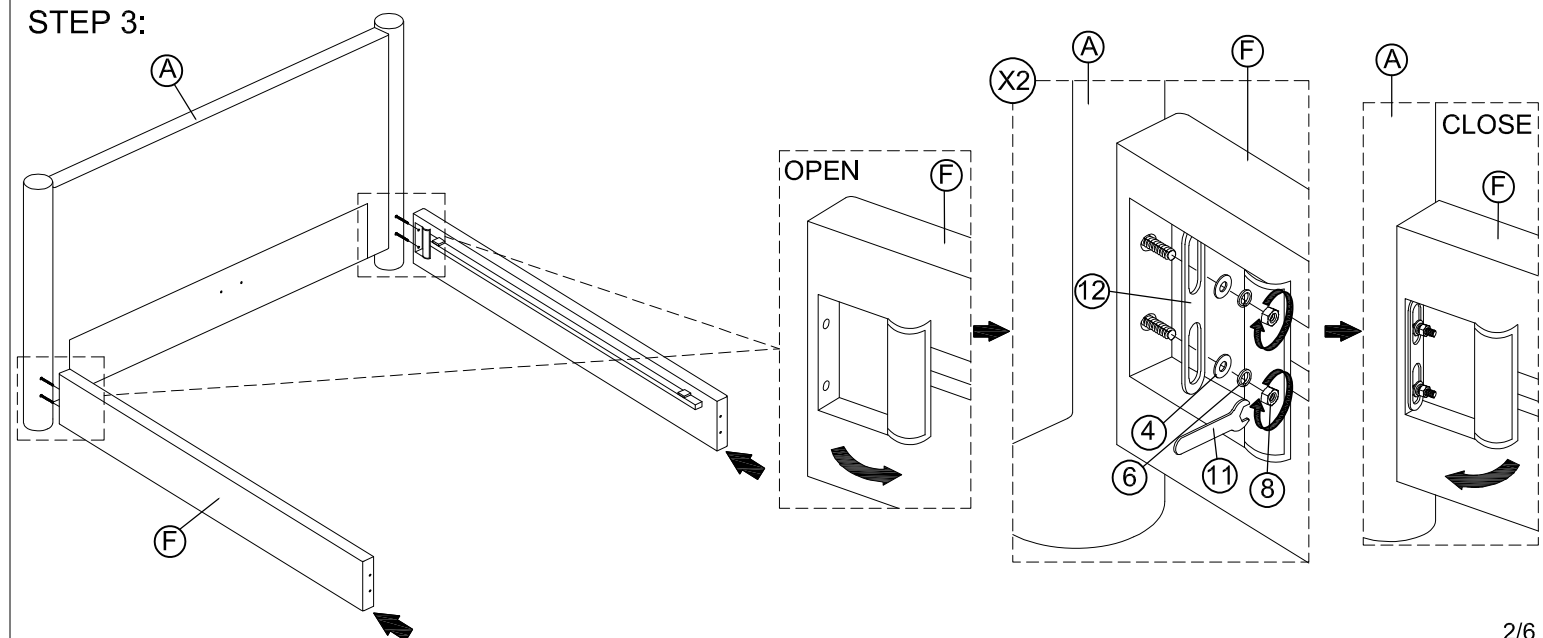


BURKE UPHOLSTERED QUEEN PLATFORM BED

ASSEMBLY INSTRUCTIONS




STEP 4:

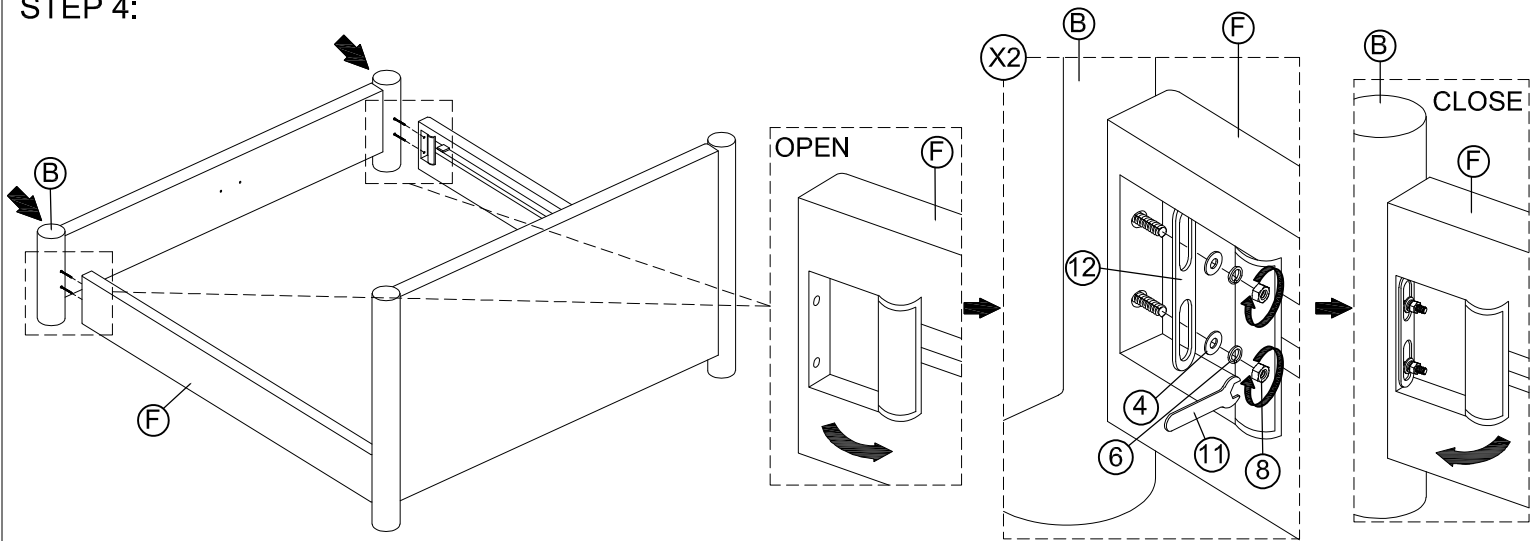


STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5-9 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5.

STEP 5:

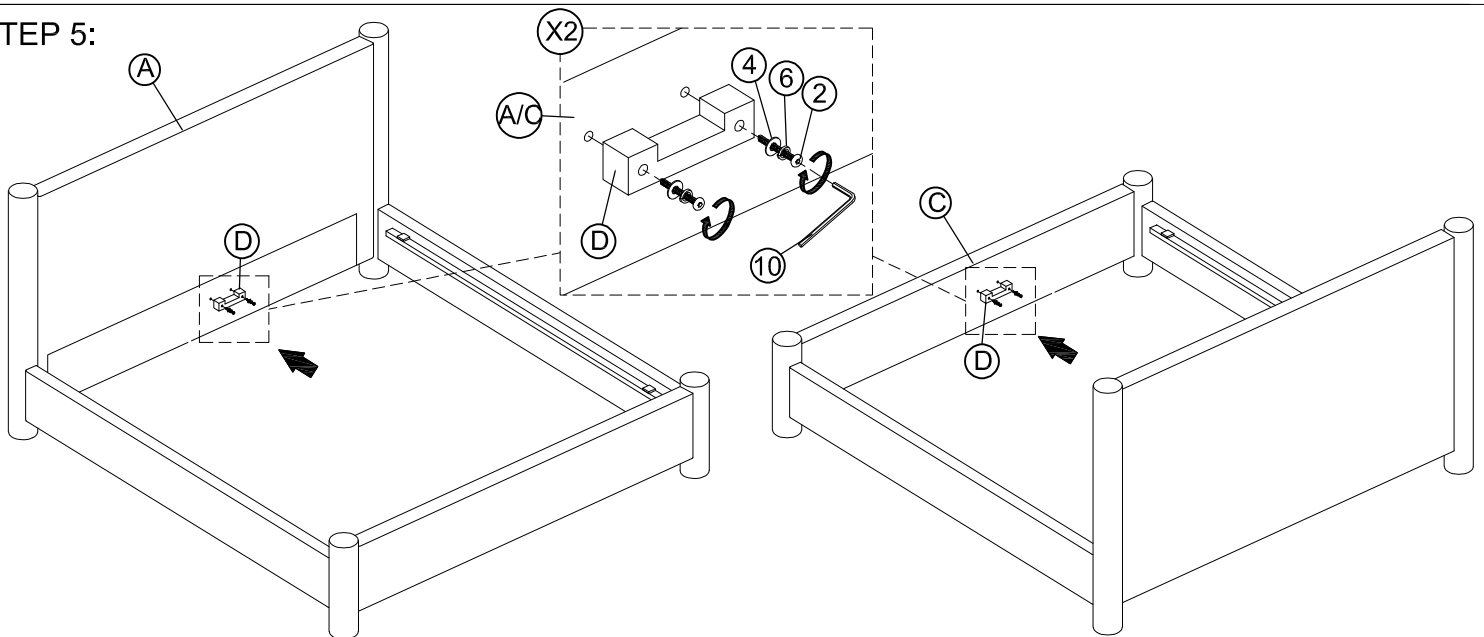

STEP 6:

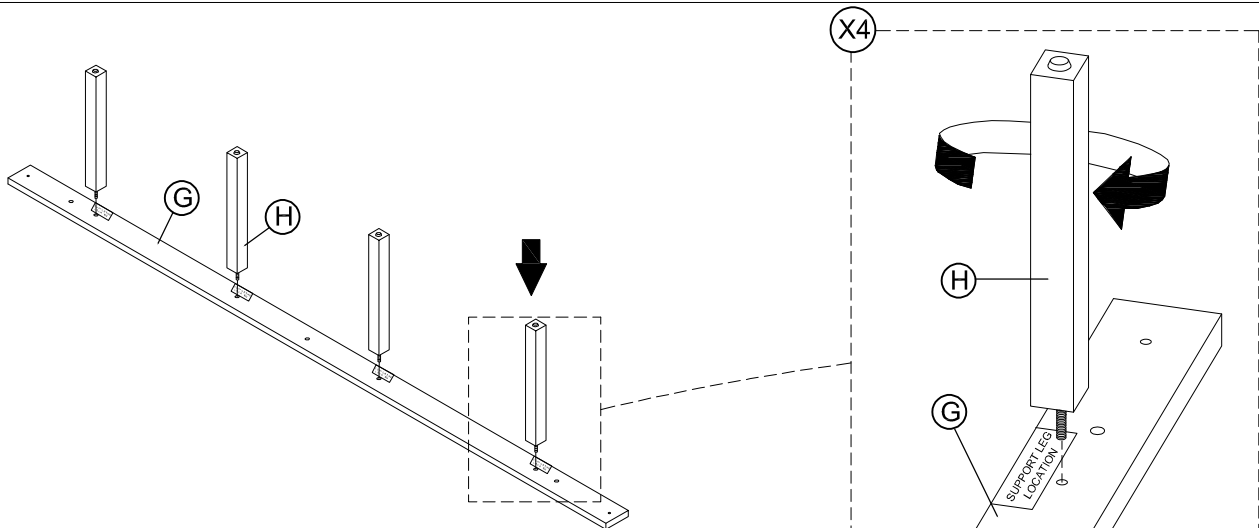


BURKE UPHOLSTERED QUEEN PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 7:

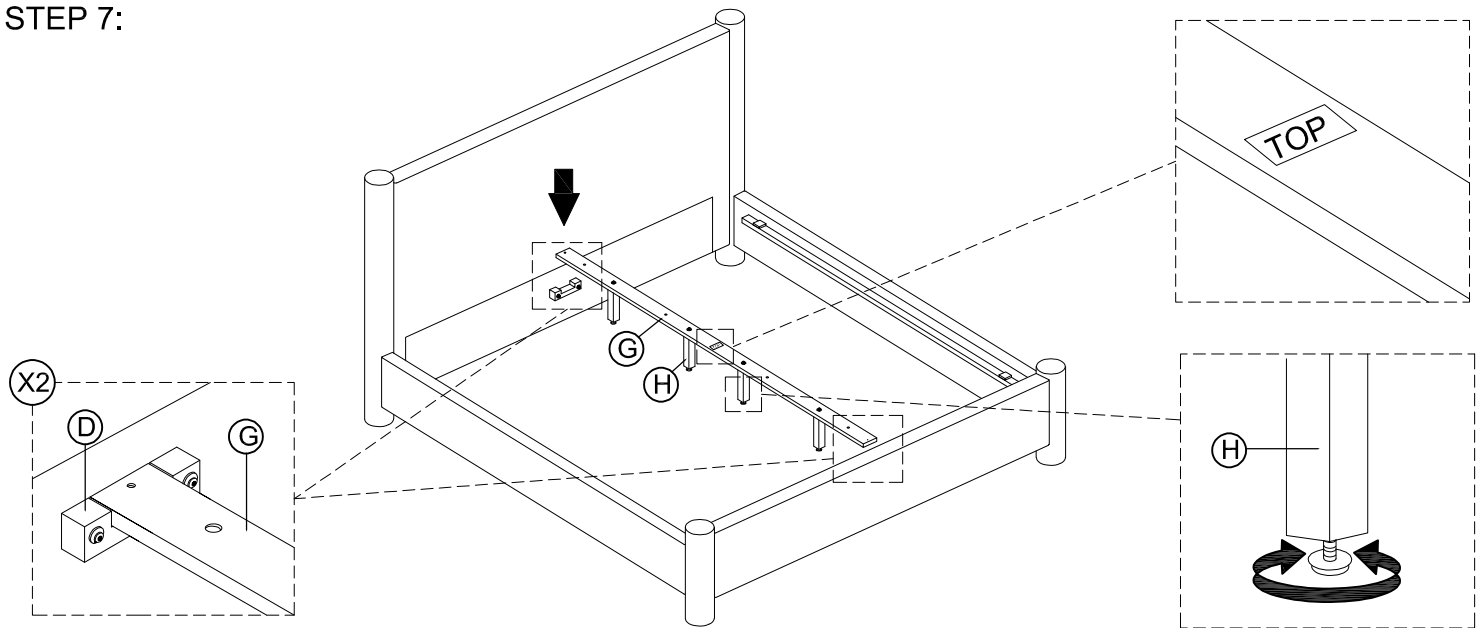

STEP 8:

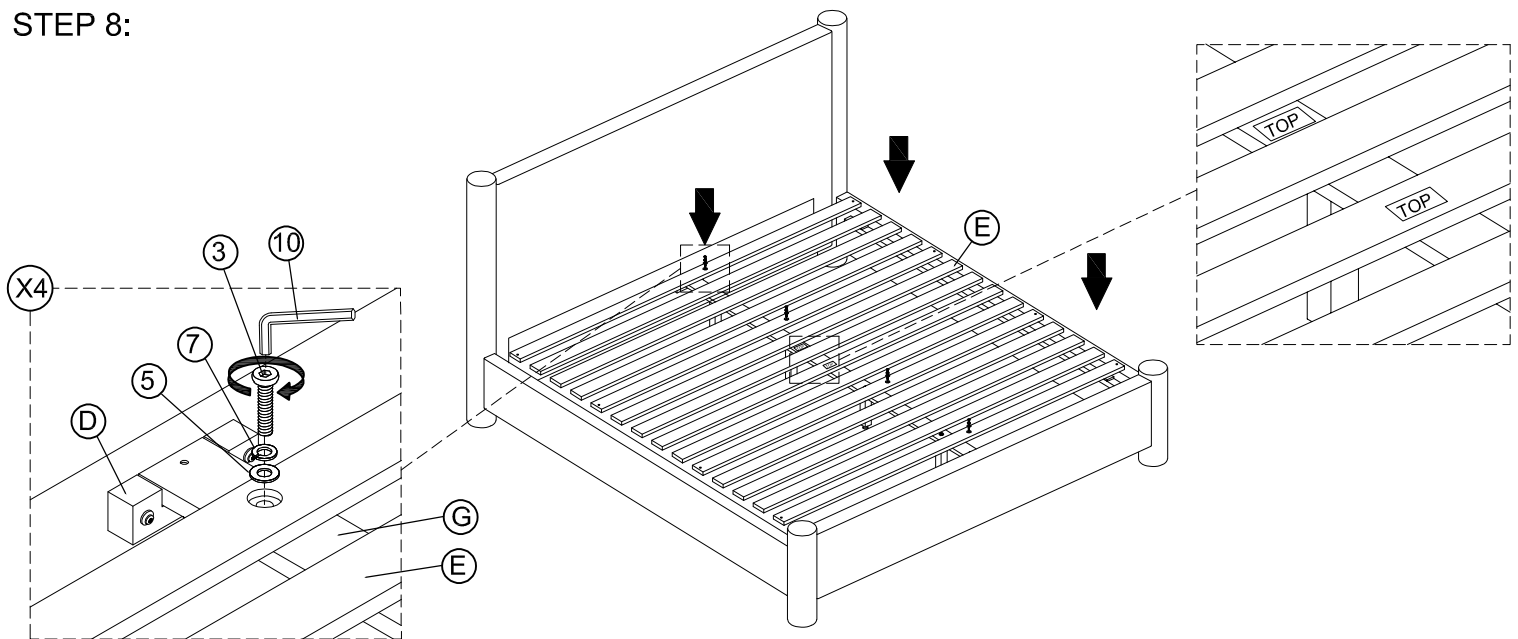


STEP 9:

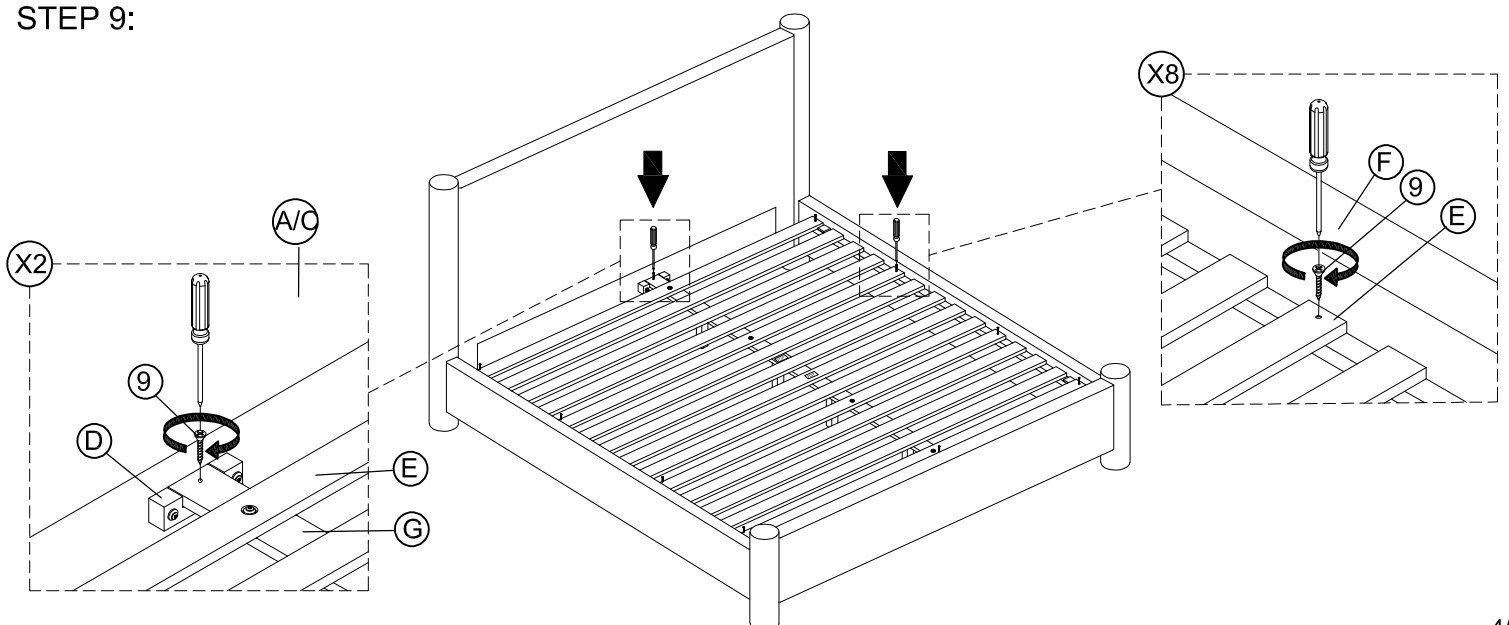

BURKE UPHOLSTERED QUEEN PLATFORM BED

ASSEMBLY INSTRUCTIONS

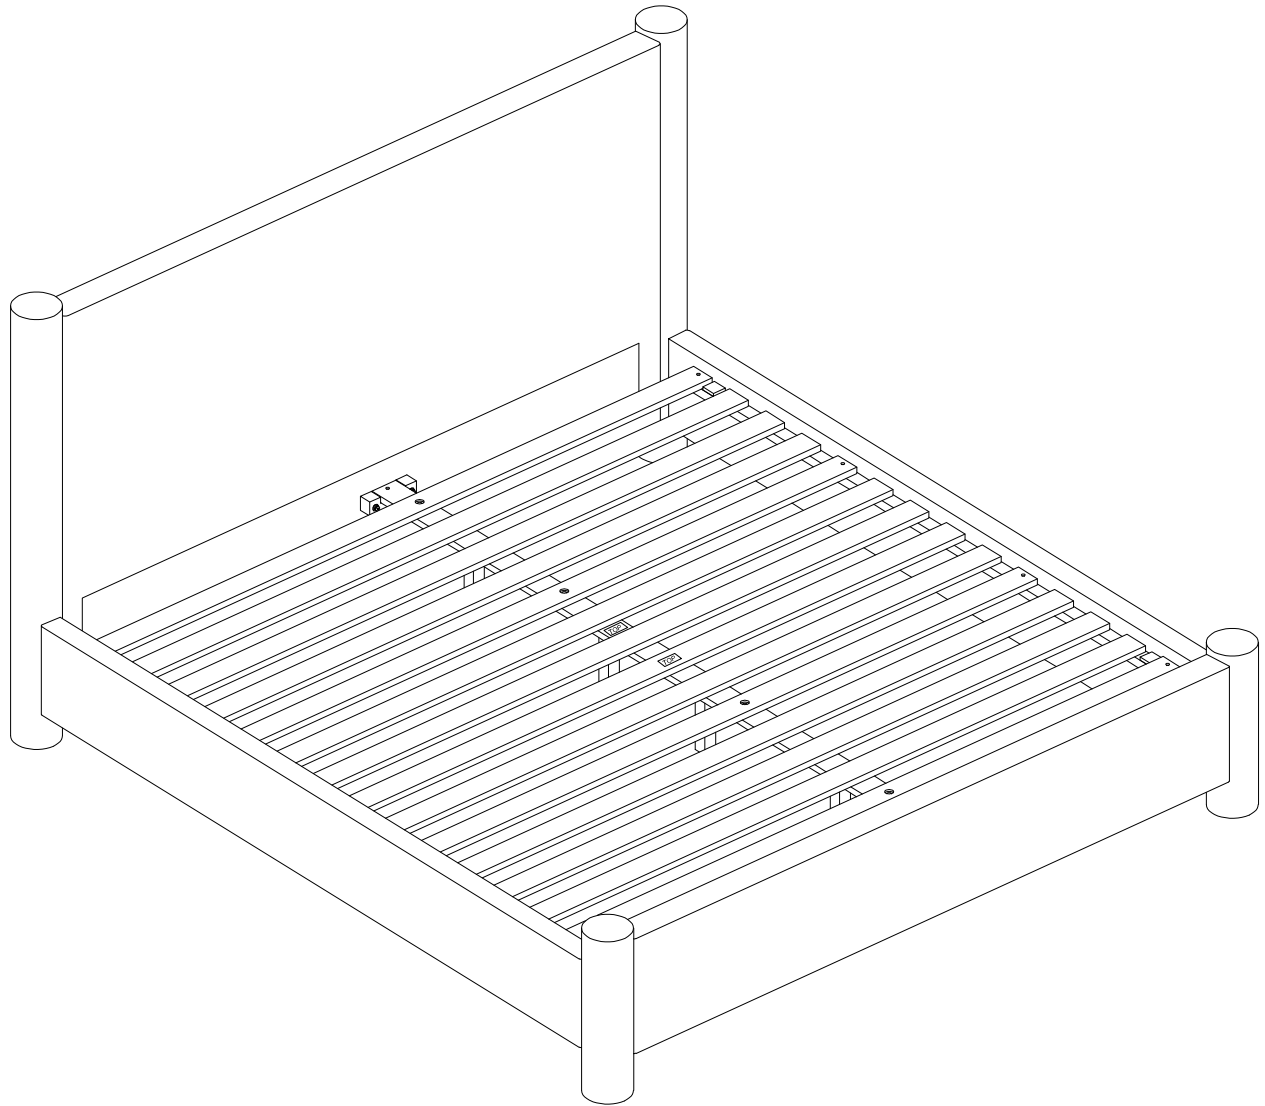


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

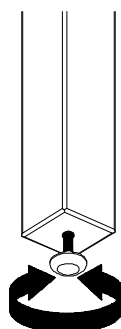

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

BURKE UPHOLSTERED QUEEN PLATFORM BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. CENTER SLAT SUPPORT CLEAT	2 PCS
E. SLAT ROLL	1 SET
G. CENTER SLAT SUPPORT	1 PC
H. SUPPORT LEG	4 PCS

STEP 1:

USE ALLEN KEY (10) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

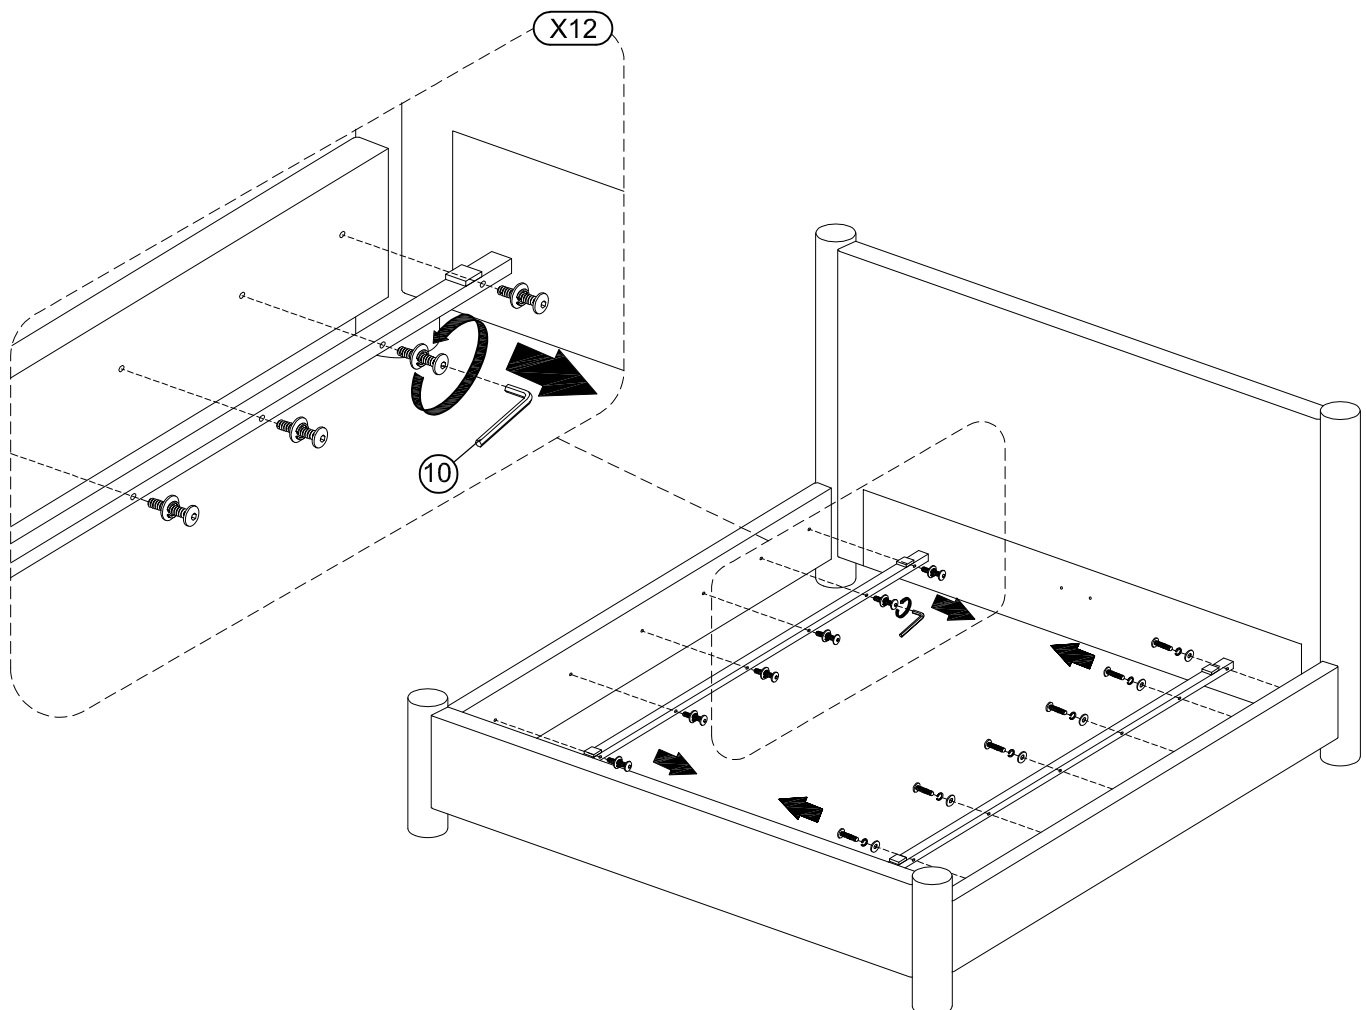

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

BURKE UPHOLSTERED KING PLATFORM BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

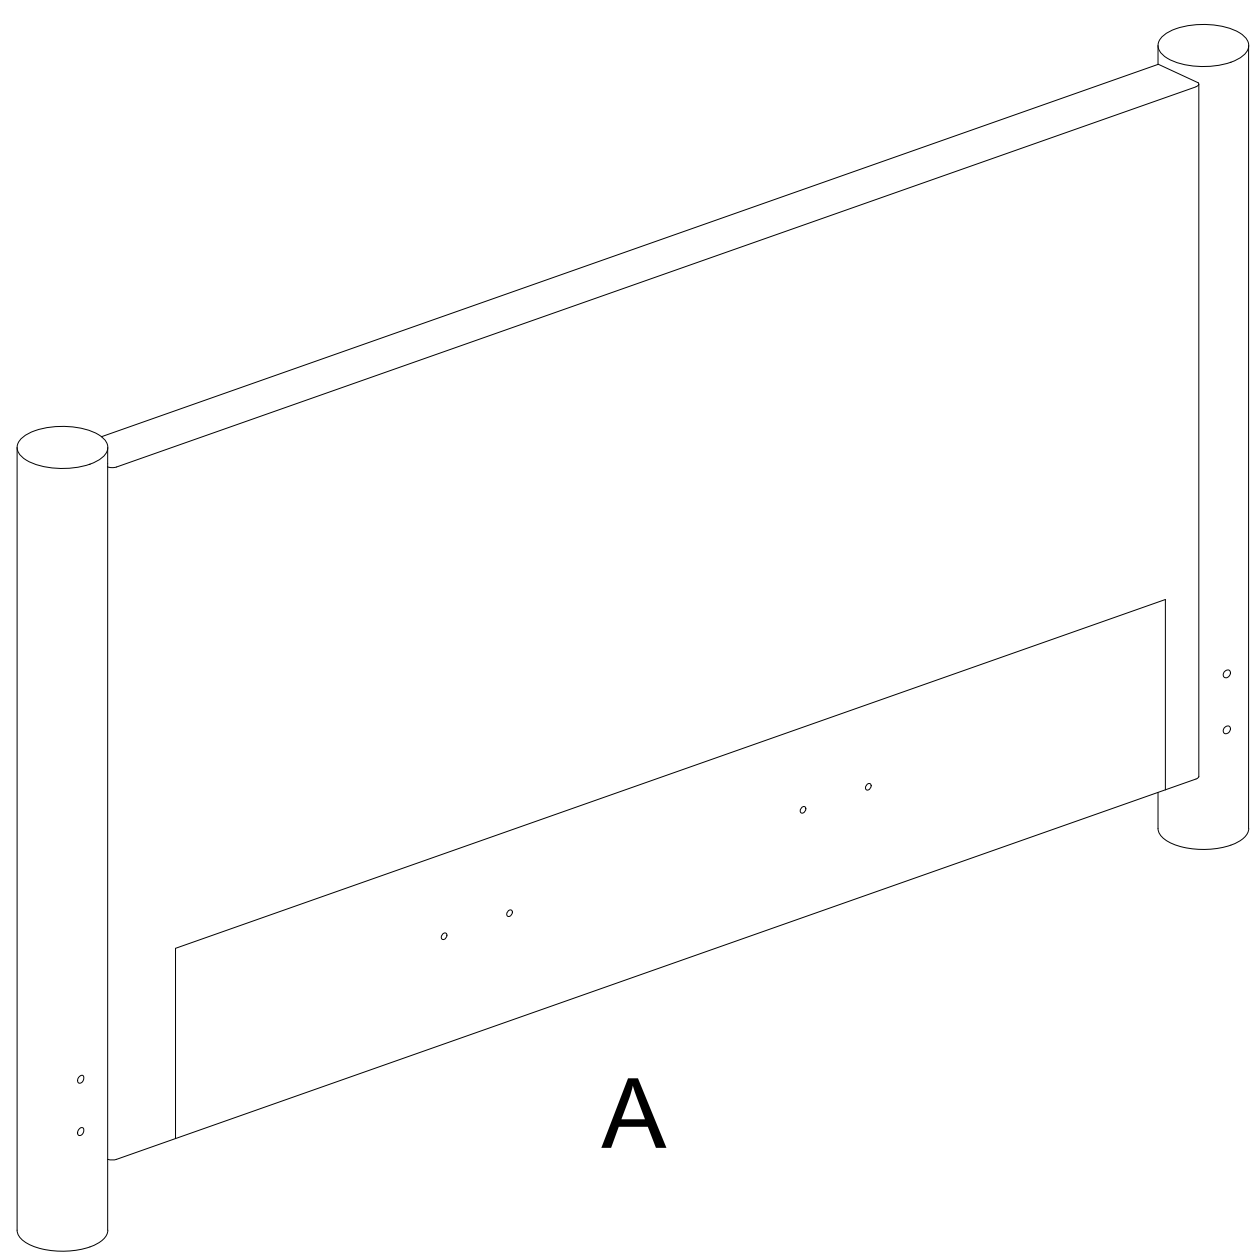

BOX#2

B. FOOTBOARD LEG

2 PCS

C. FOOTBOARD


1 PC

D. CENTER SLAT SUPPORT CLEAT


4 PCS

E. SLAT ROLL


1 SET

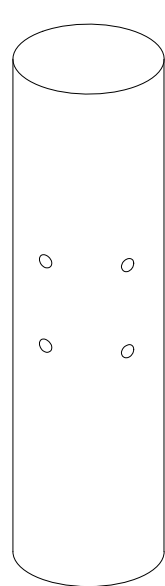


B

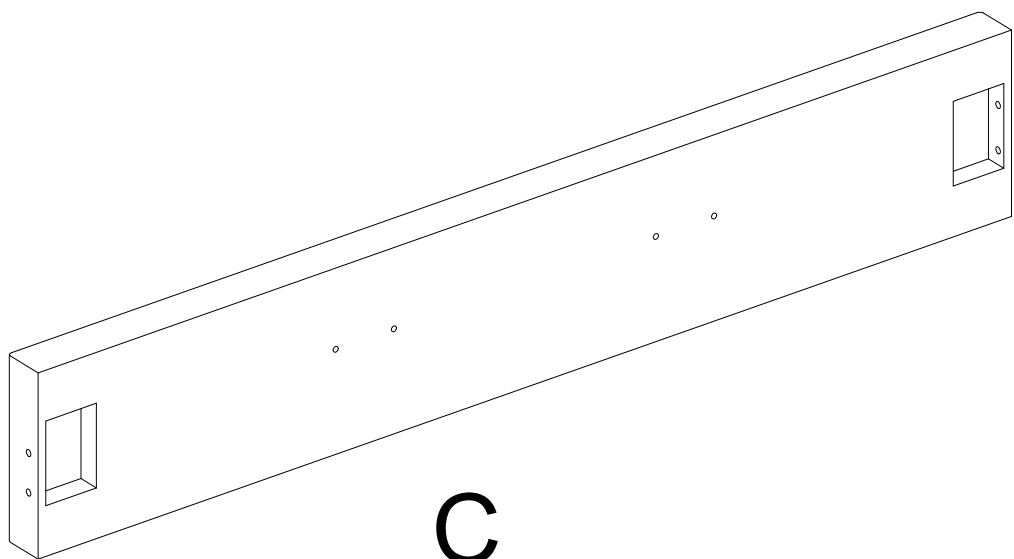

C

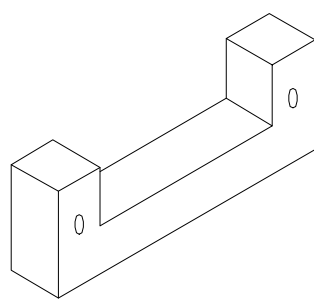

D

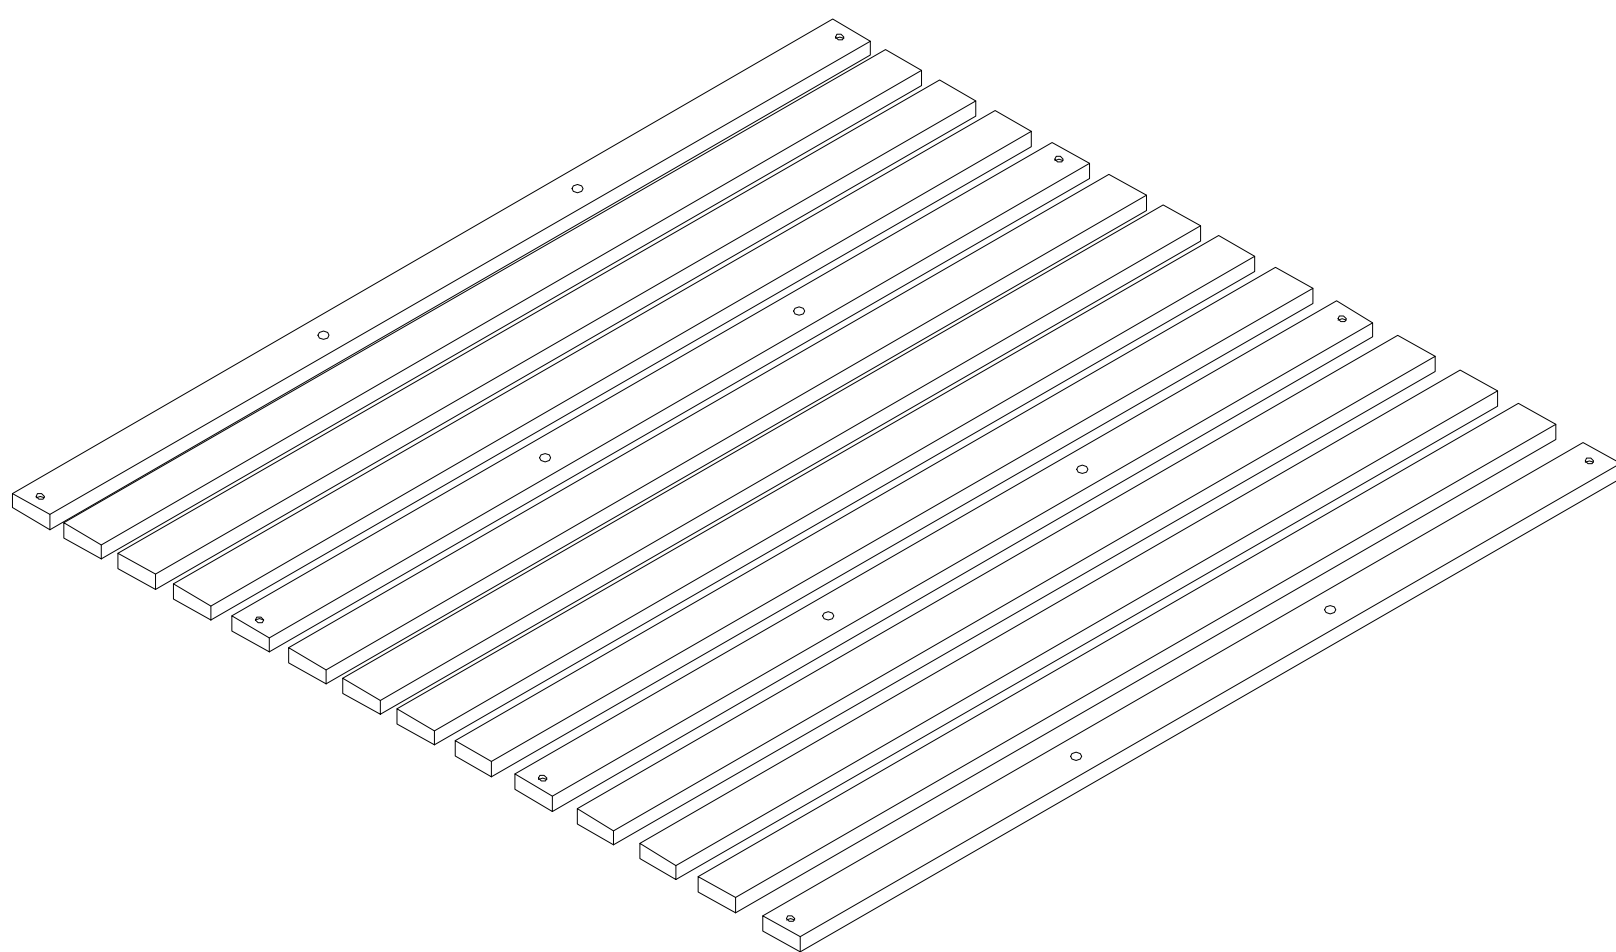

E

BOX#3

F. SIDE RAIL


2 PCS

G. CENTER SLAT SUPPORT


2 PCS

H. SUPPORT LEG


8 PCS

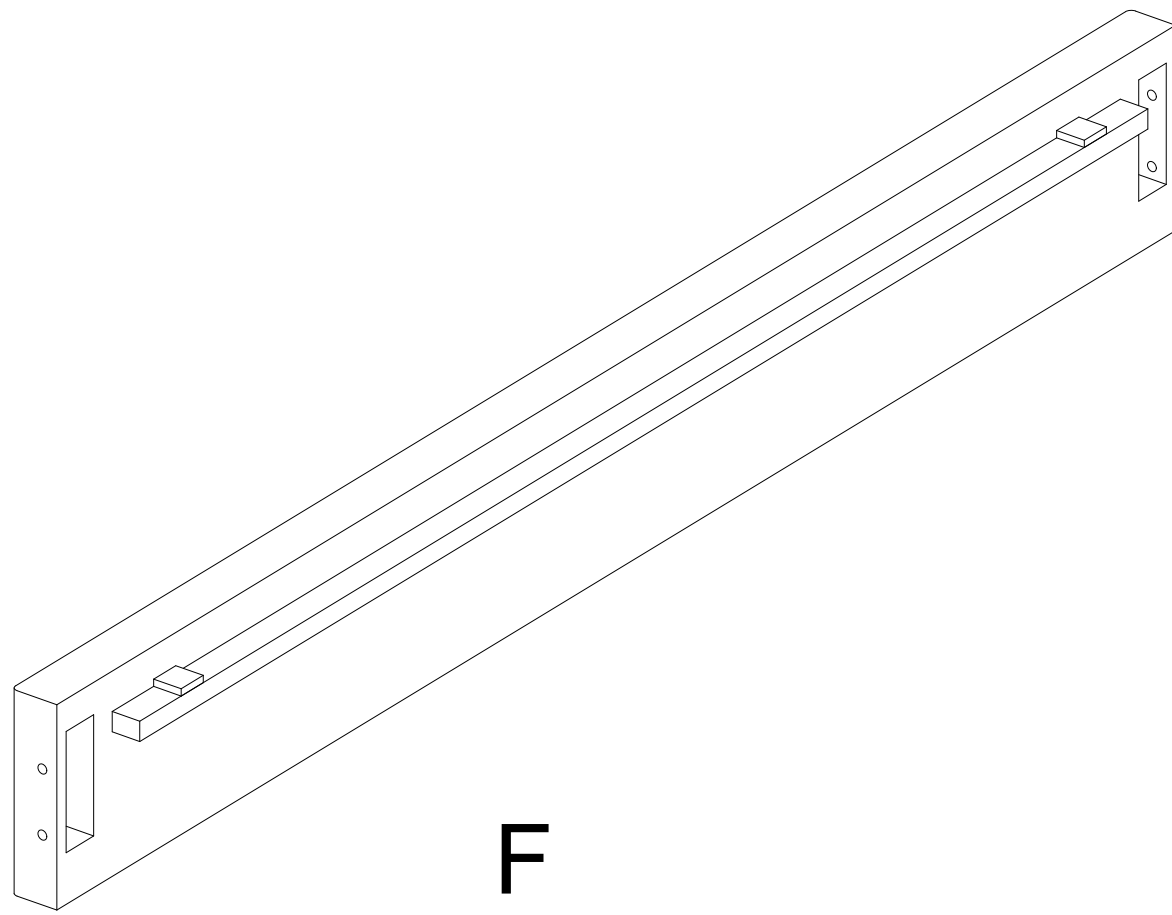

F

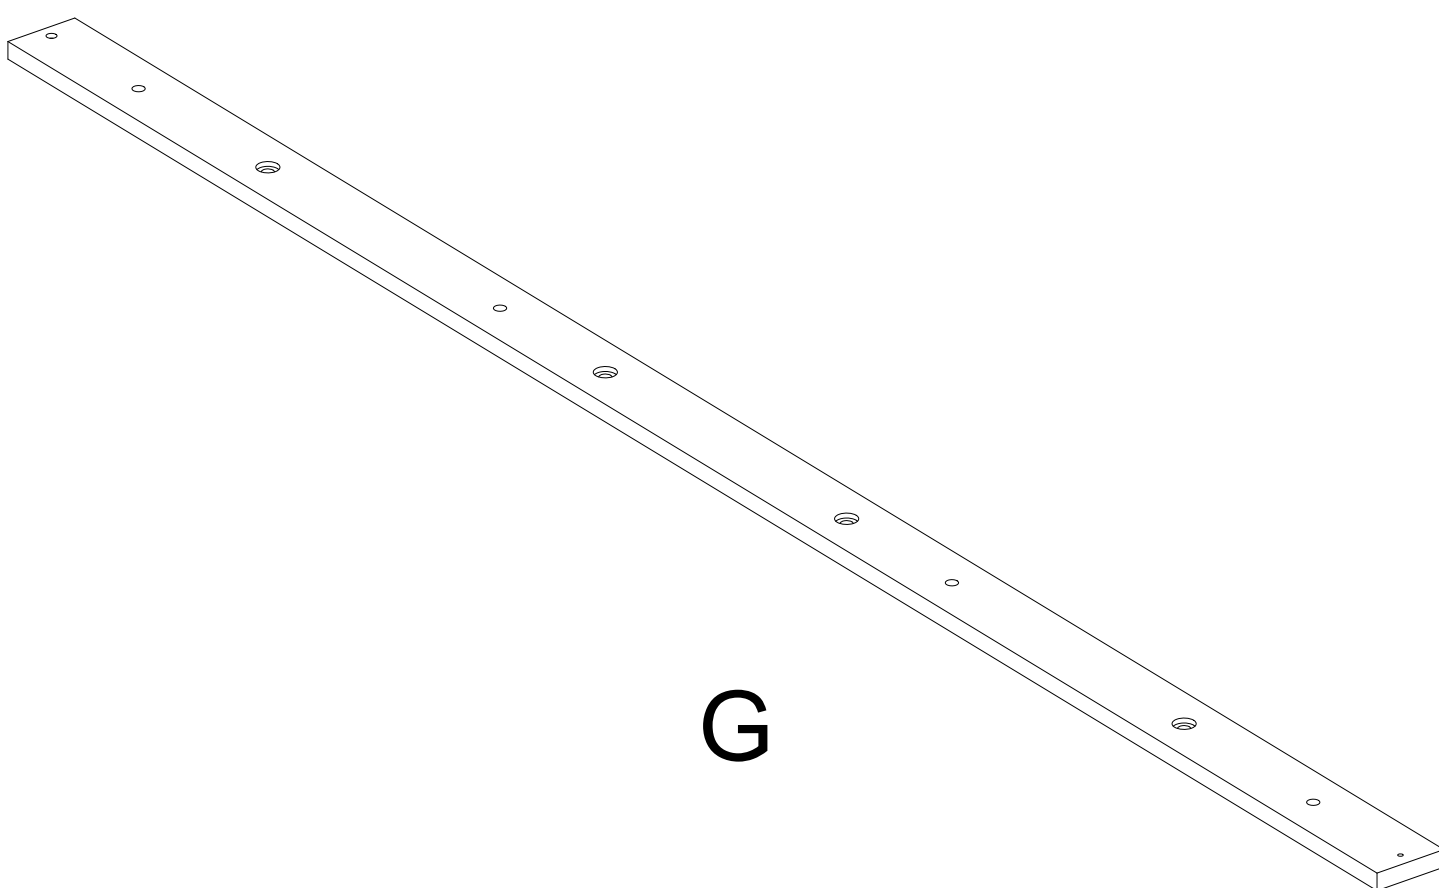

G


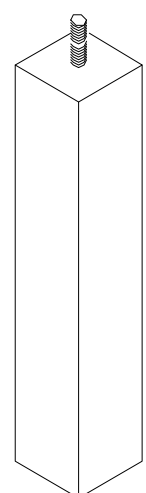


H

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (5/16"x 3-1/2")		12 PCS
2	ALLEN BOLT (5/16"x 2-1/2")		8 PCS
3	ALLEN BOLT (1/4"x 1-1/4")		8 PCS
4	FLAT WASHER (5/16")		20 PCS
5	FLAT WASHER (1/4")		8 PCS
6	LOCK WASHER (5/16")		20 PCS
7	LOCK WASHER (1/4")		8 PCS
8	HEX NUT (5/16")		12 PCS
9	PHILLIPS SCREW (M4 x 32mm)		12 PCS
10	ALLEN KEY (5/16")		1 PC
11	WRENCH		1 PC
12	CONNECTING BRACKET		6 PCS

FULLY ASSEMBLED

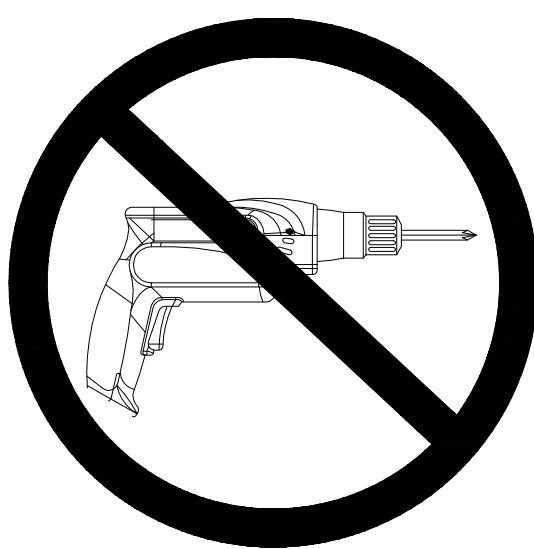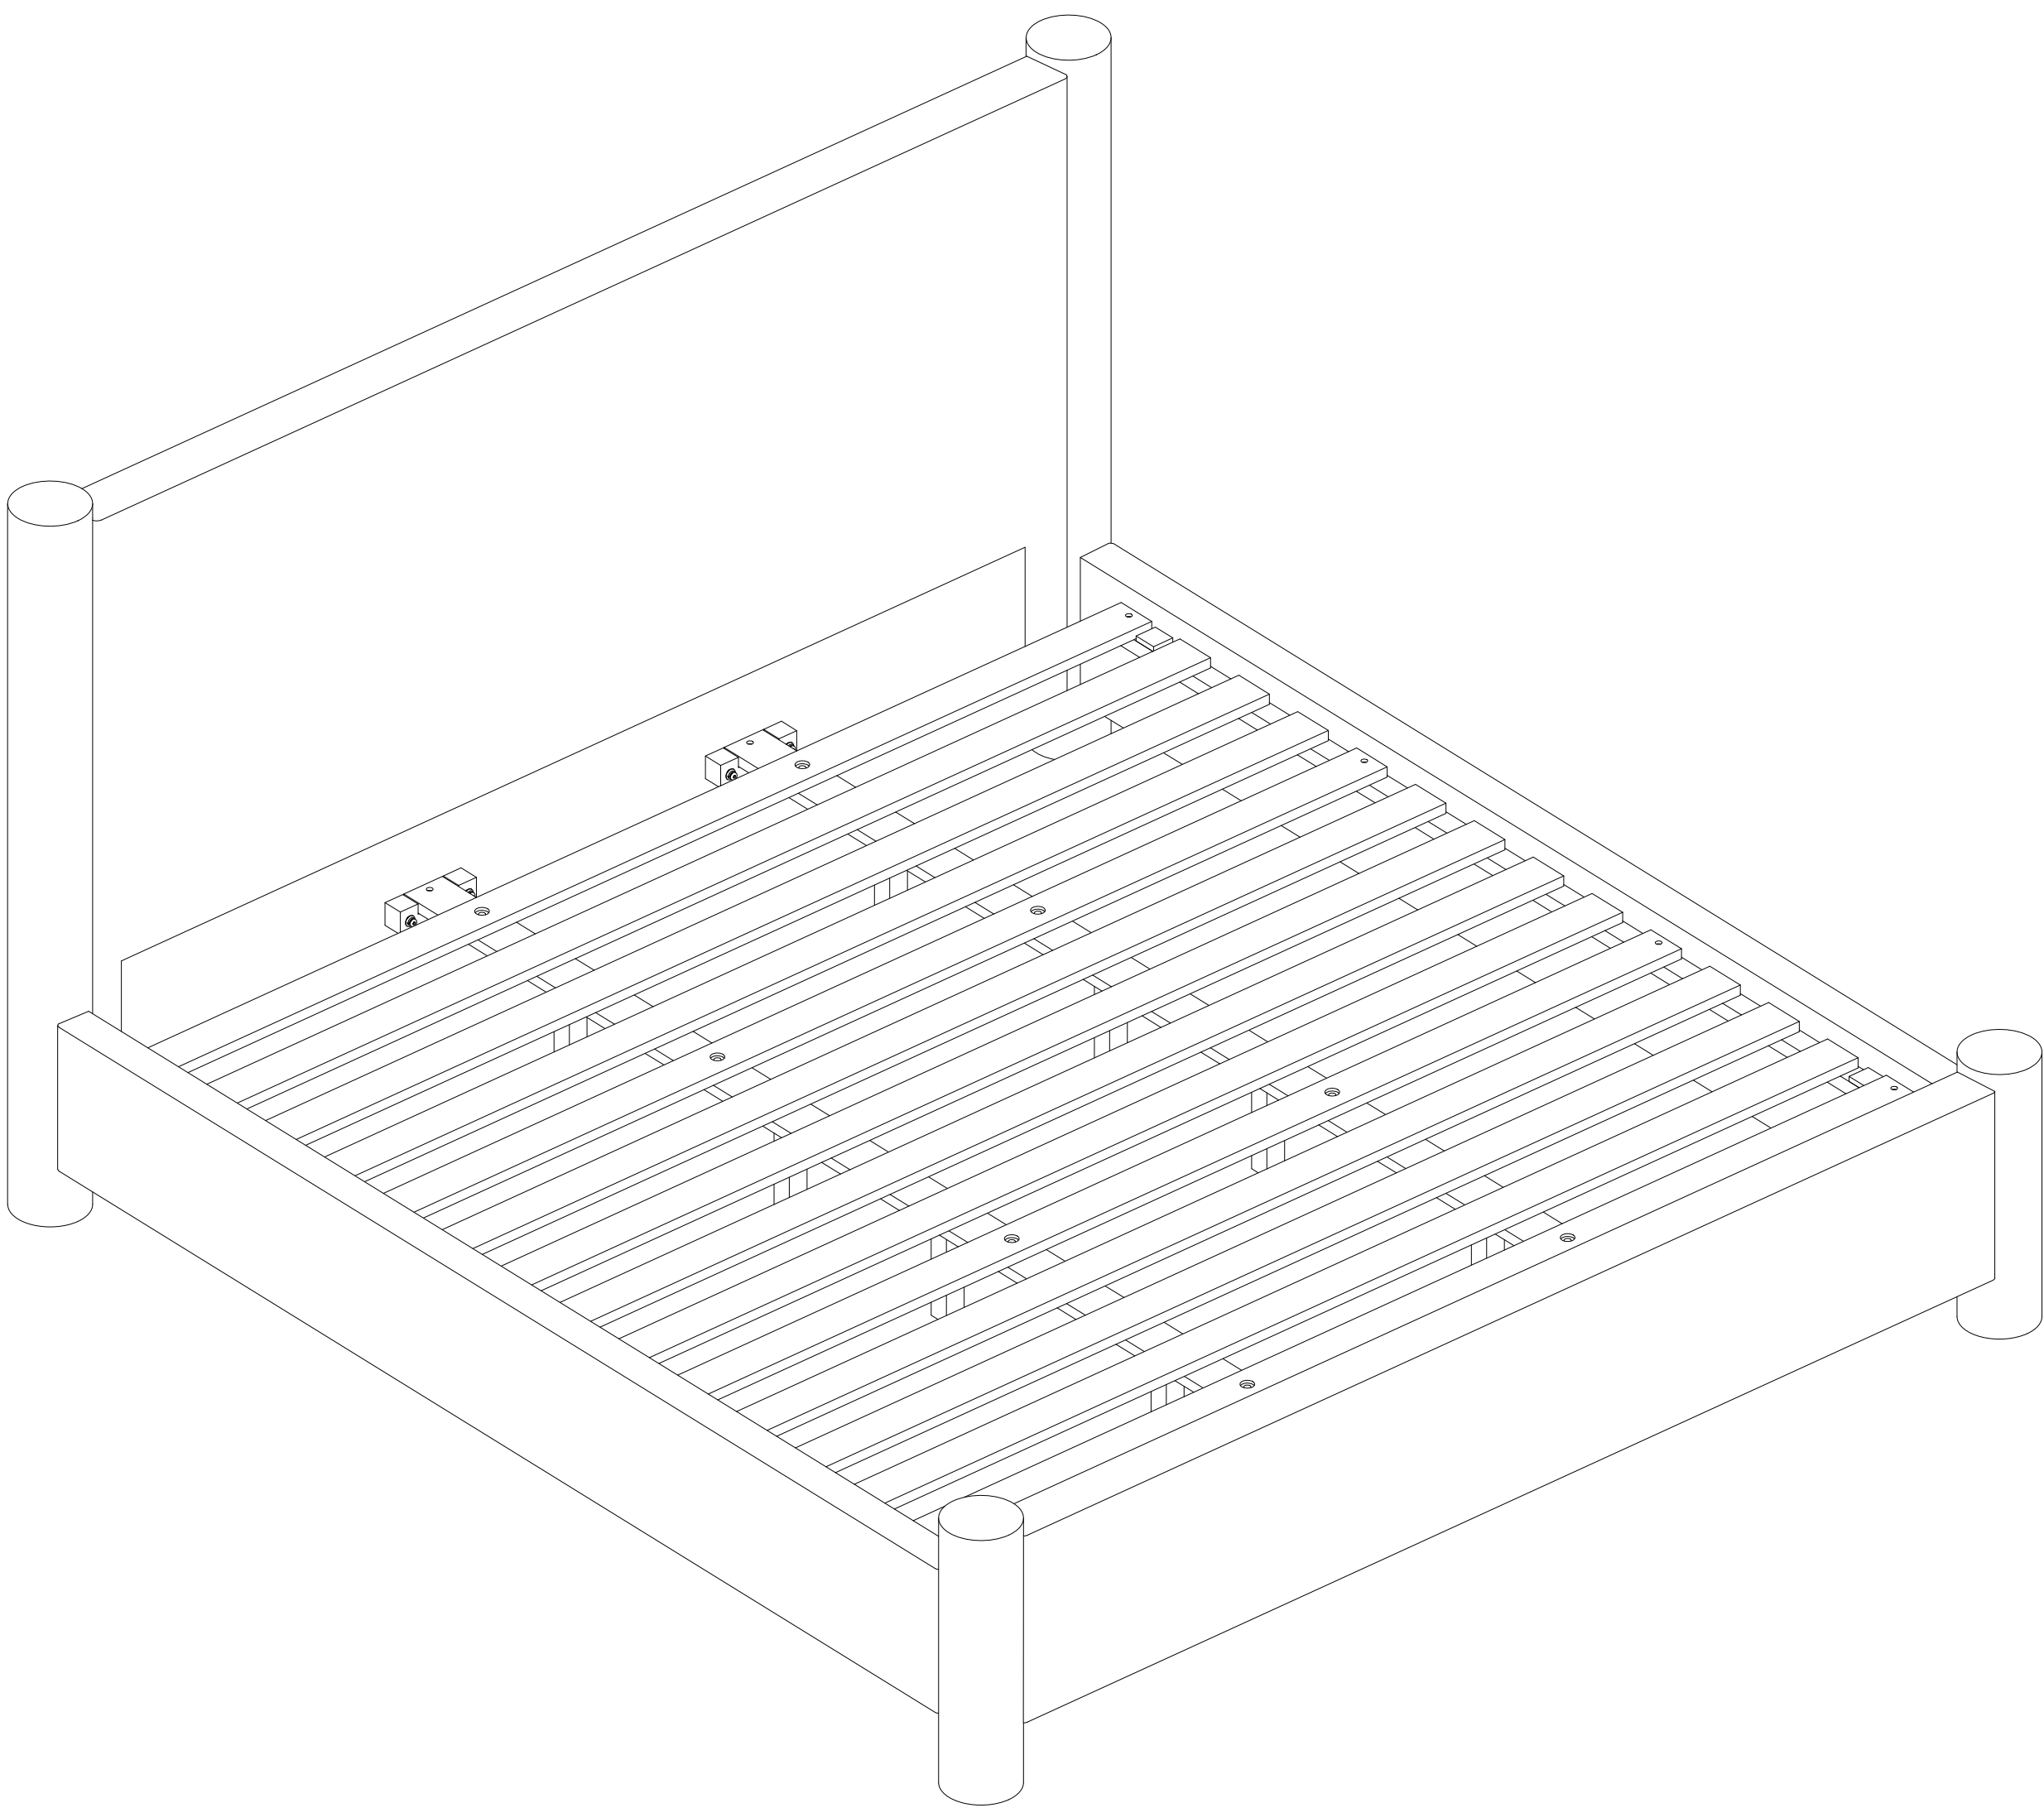


BURKE UPHOLSTERED KING PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 1:

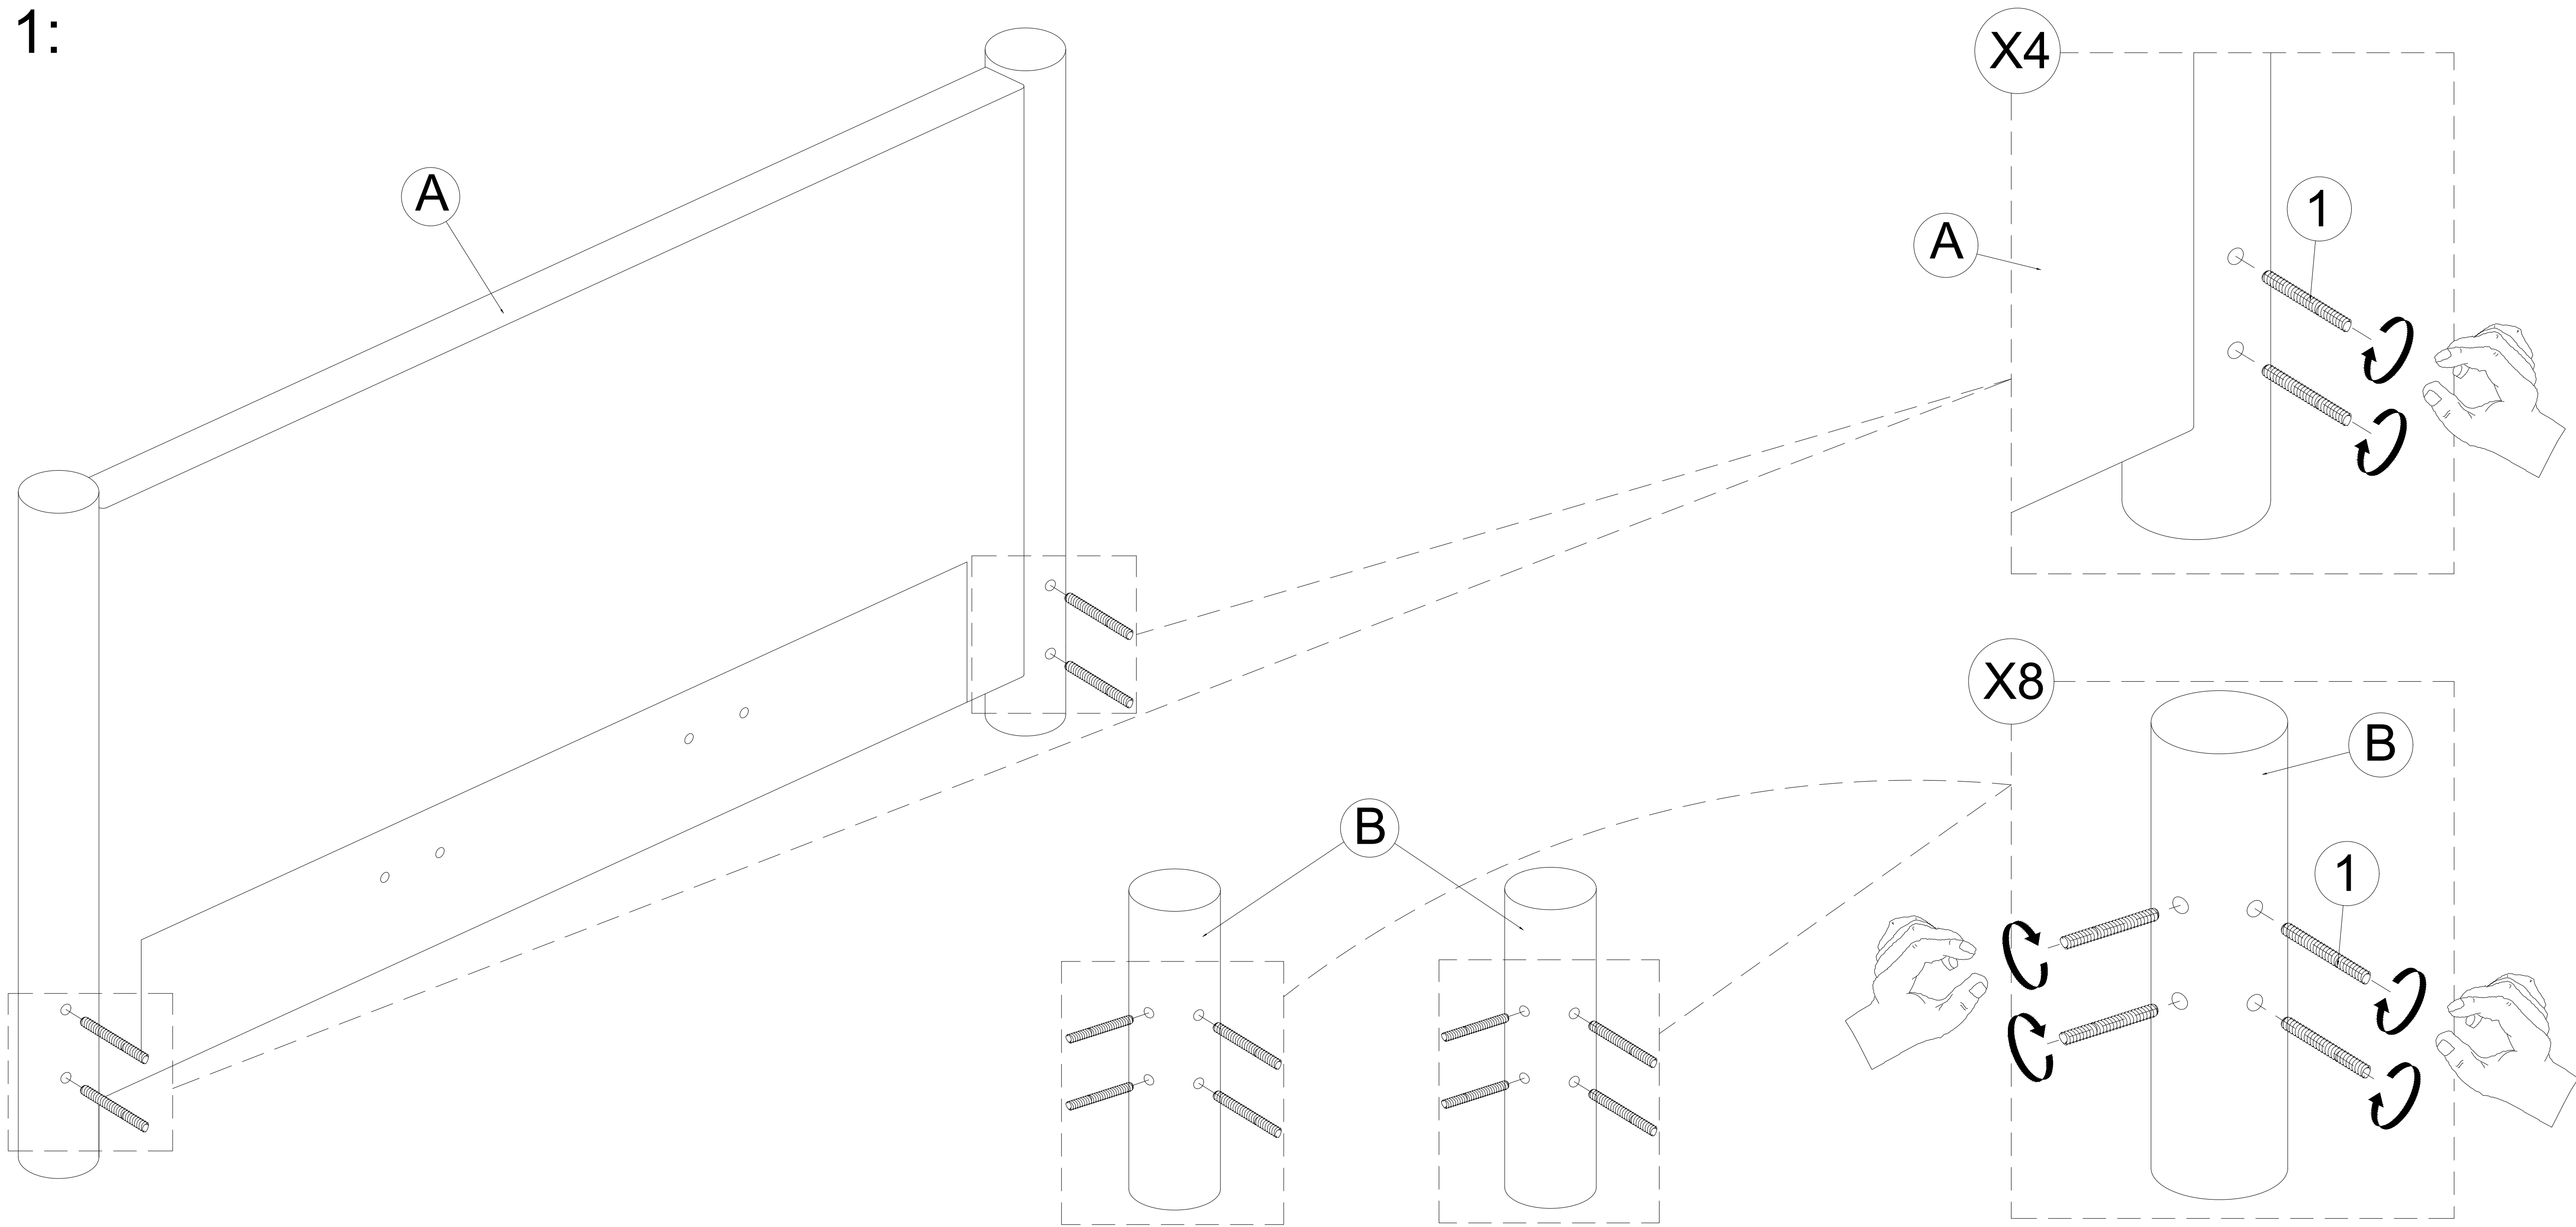

STEP 2:

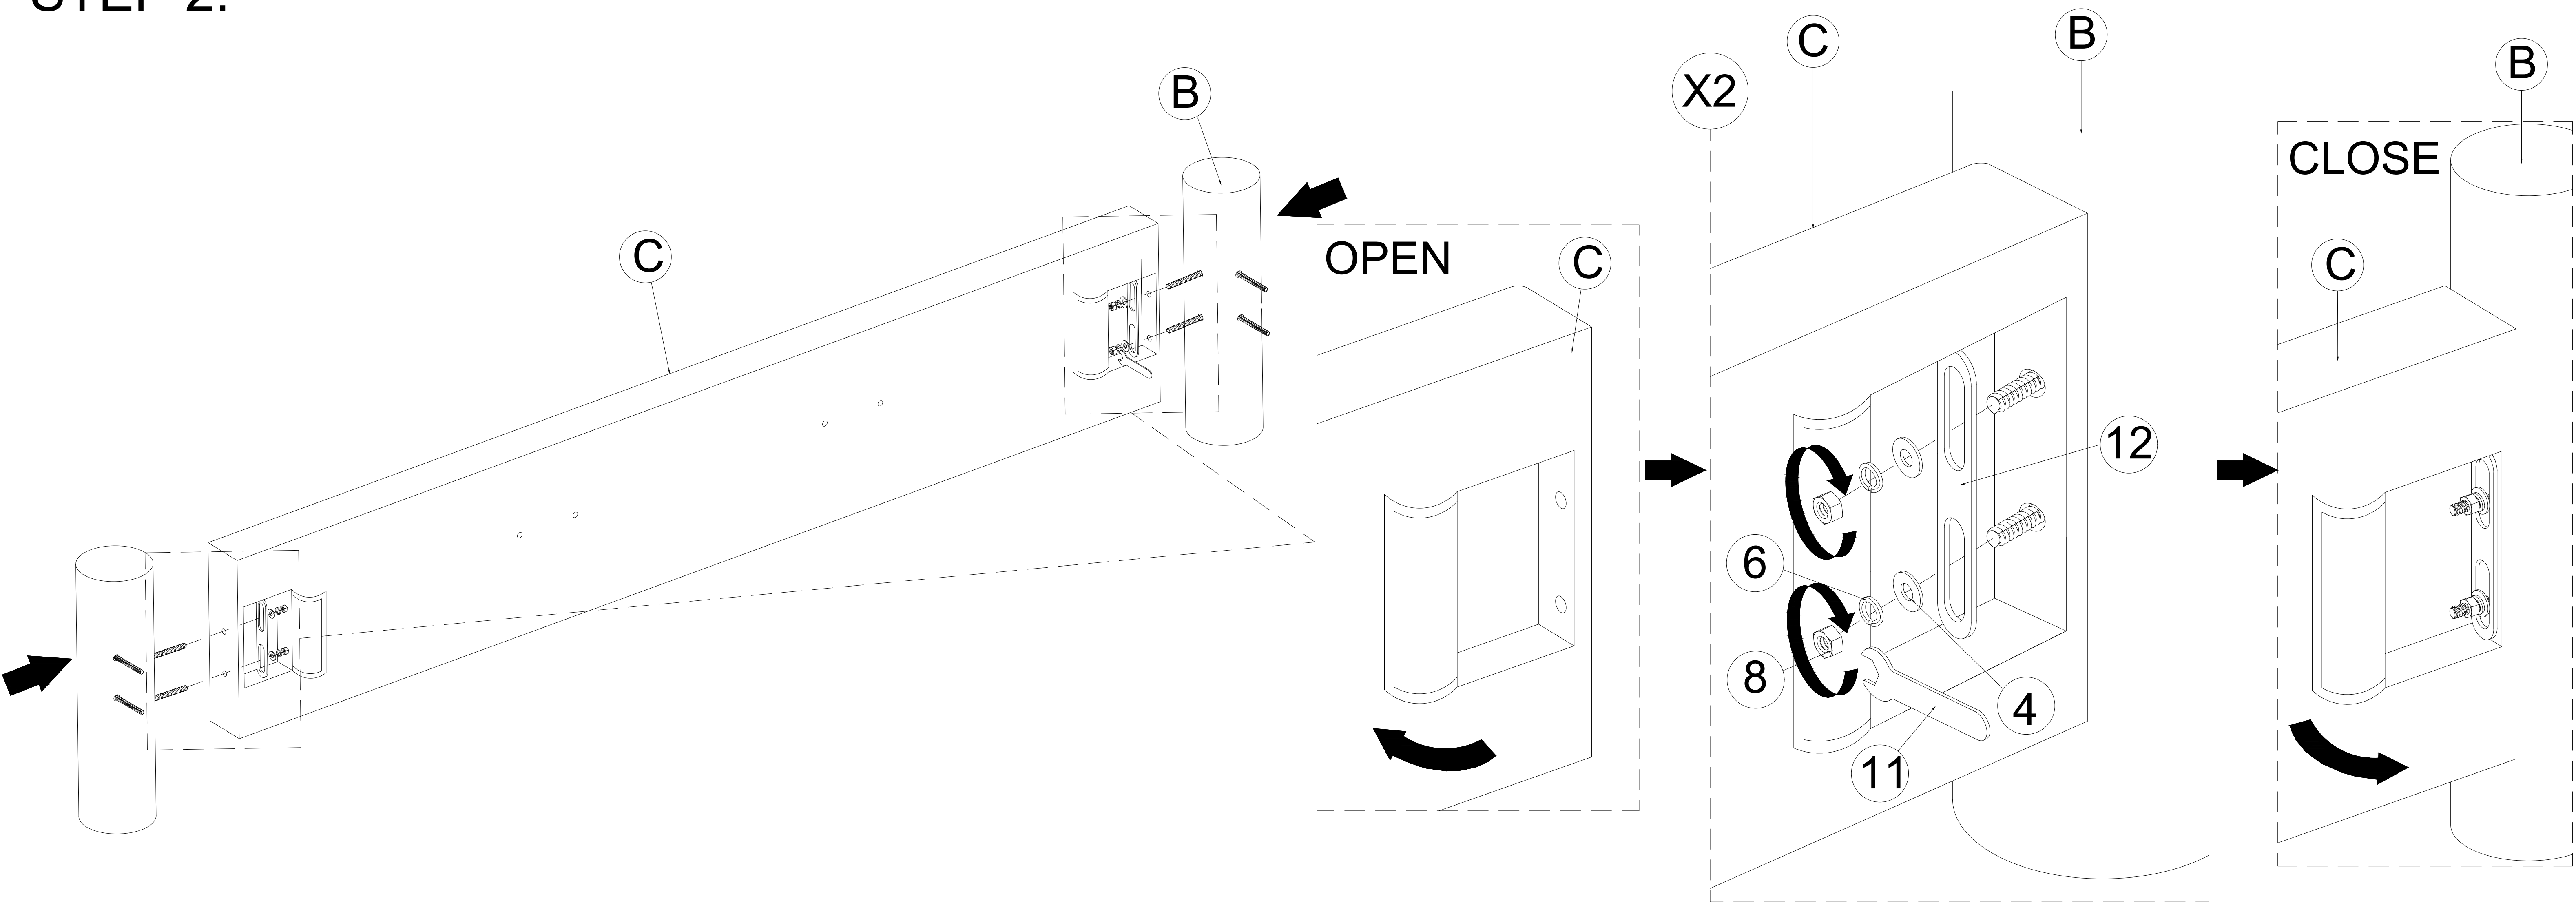

STEP 3:

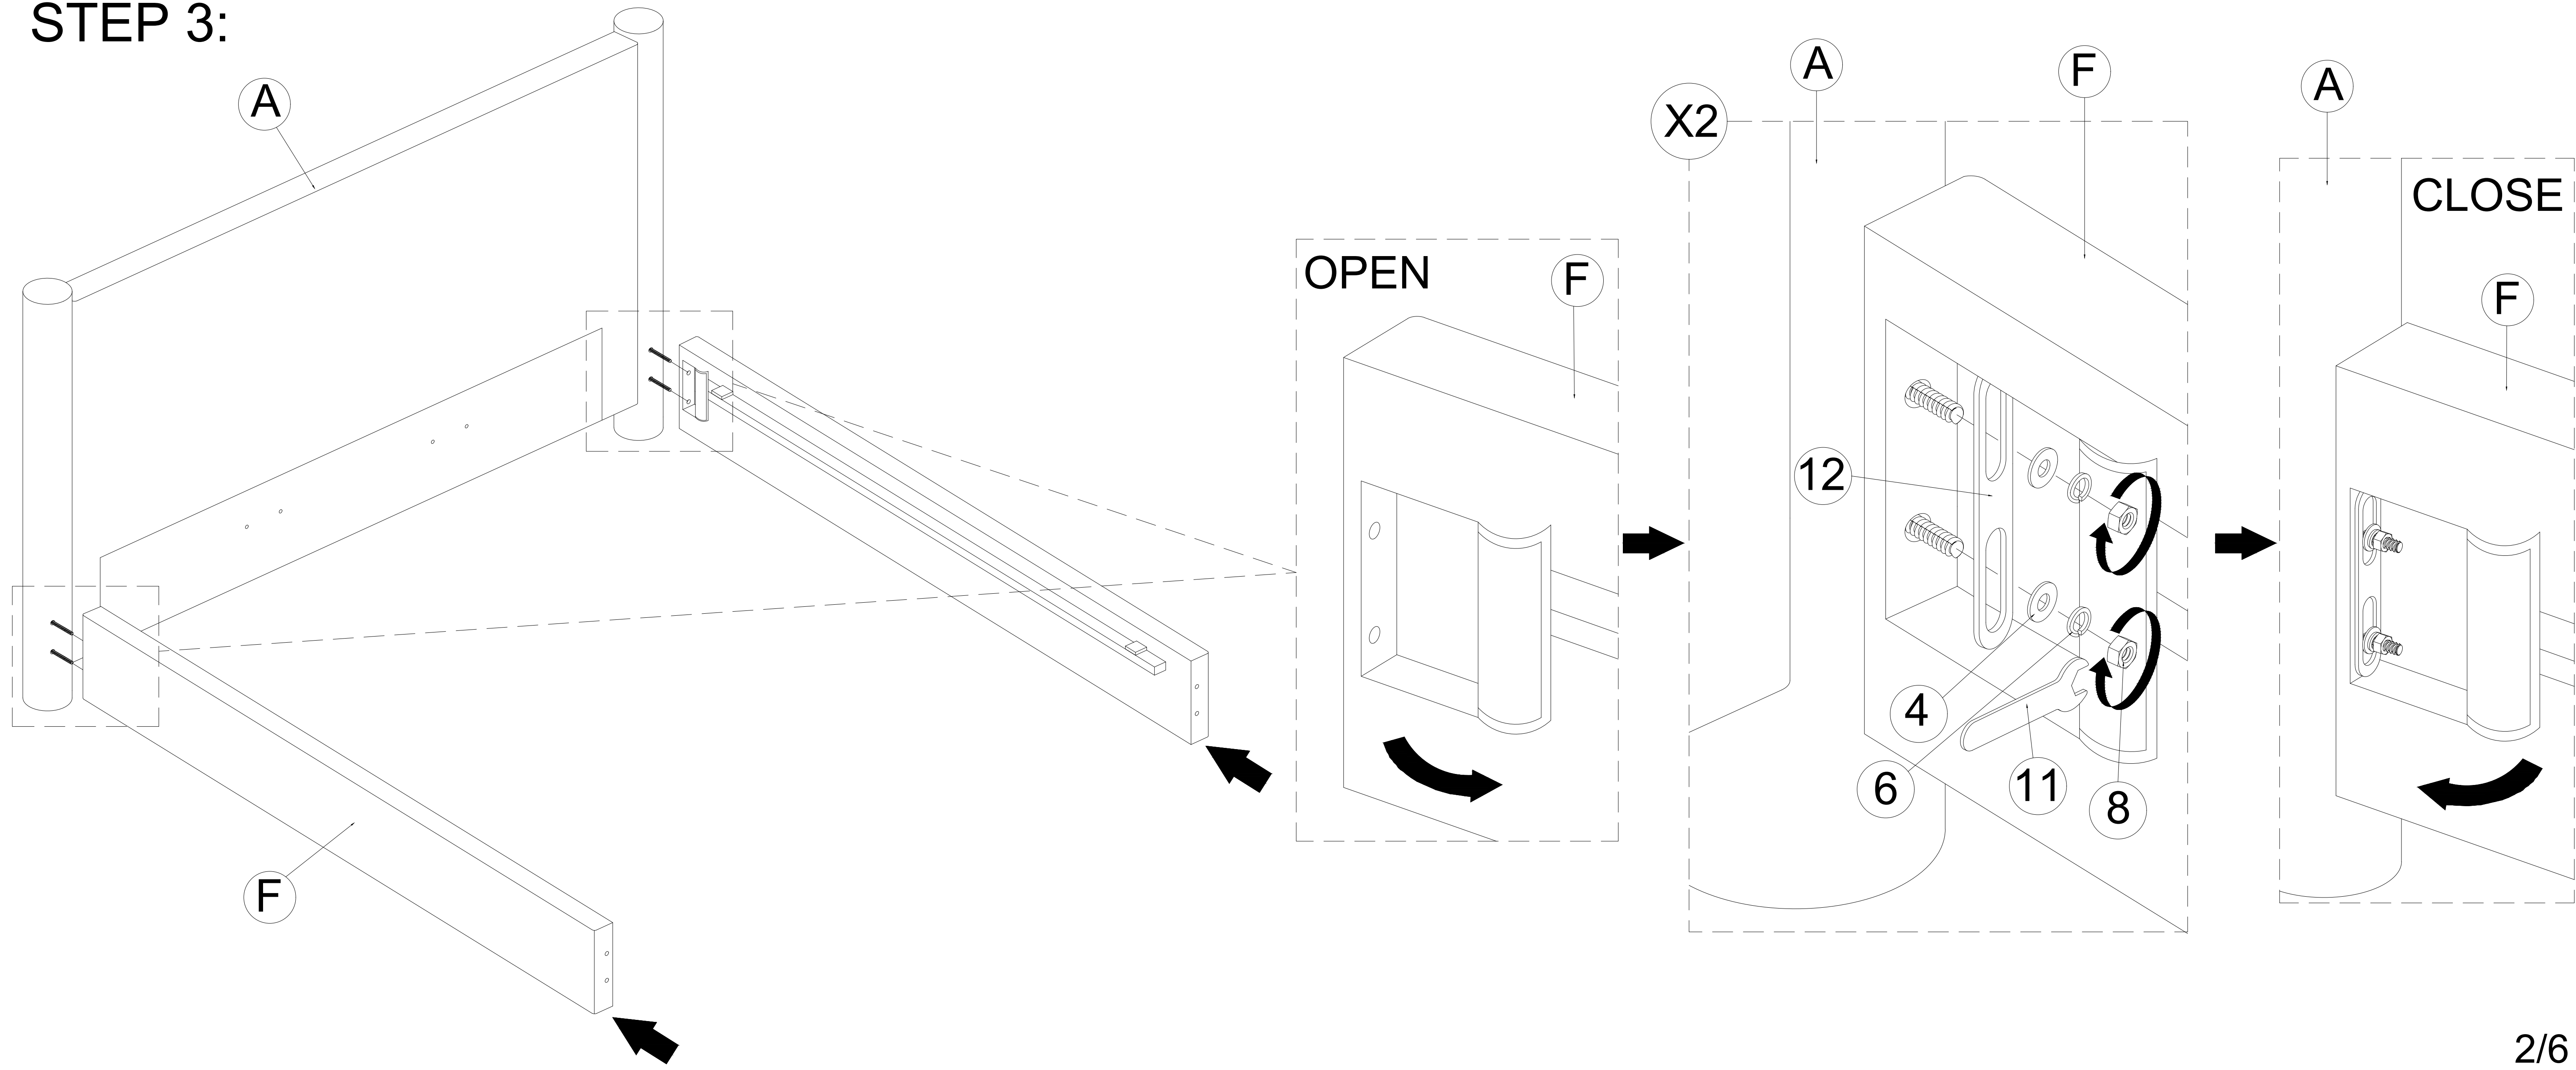


BURKE UPHOLSTERED KING PLATFORM BED

ASSEMBLY INSTRUCTIONS




STEP 4:

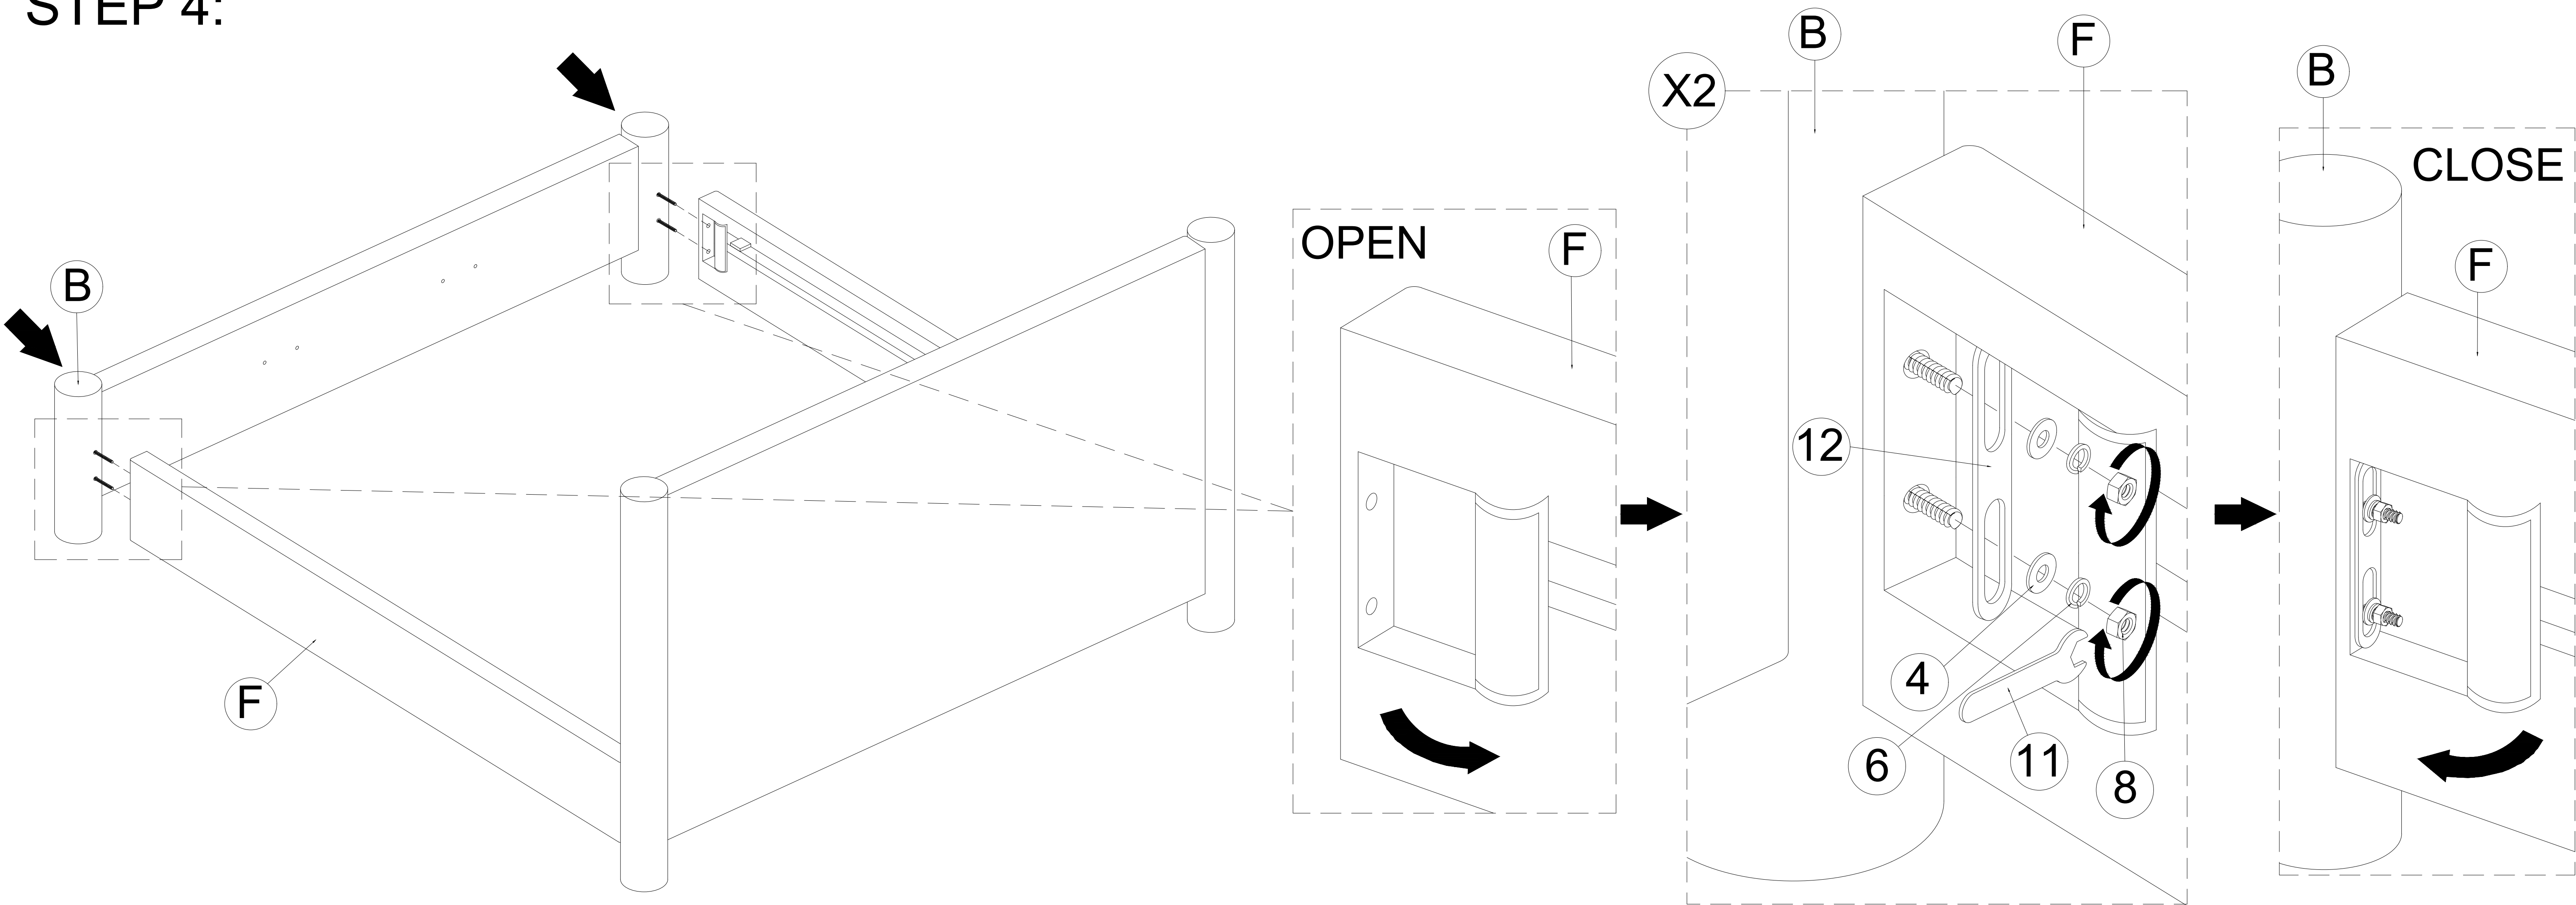


STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5-9 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5.

STEP 5:

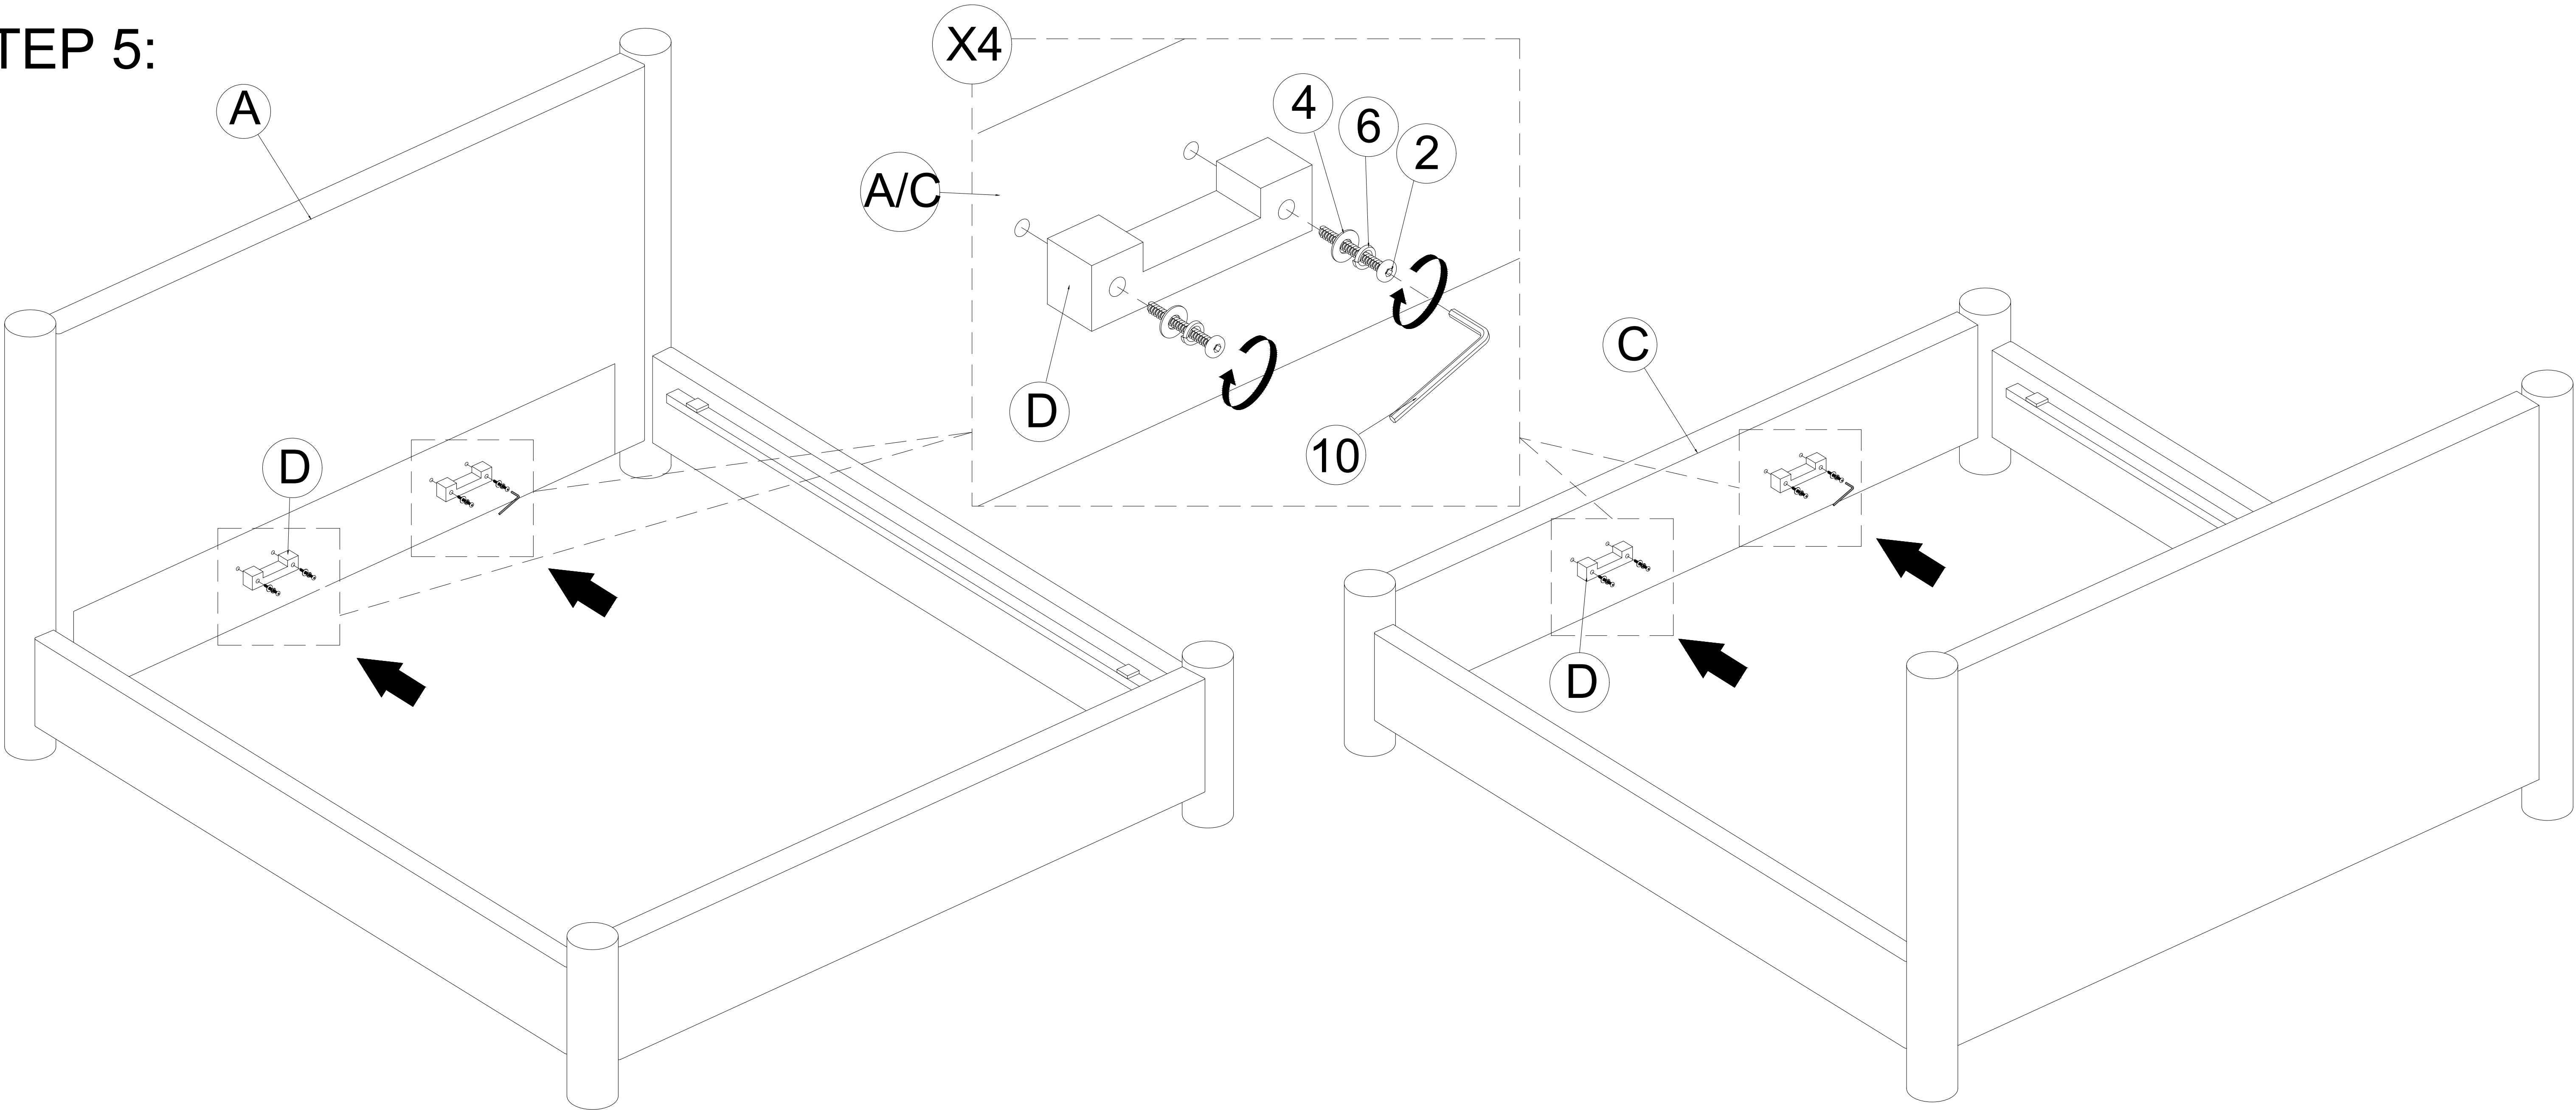

STEP 6:

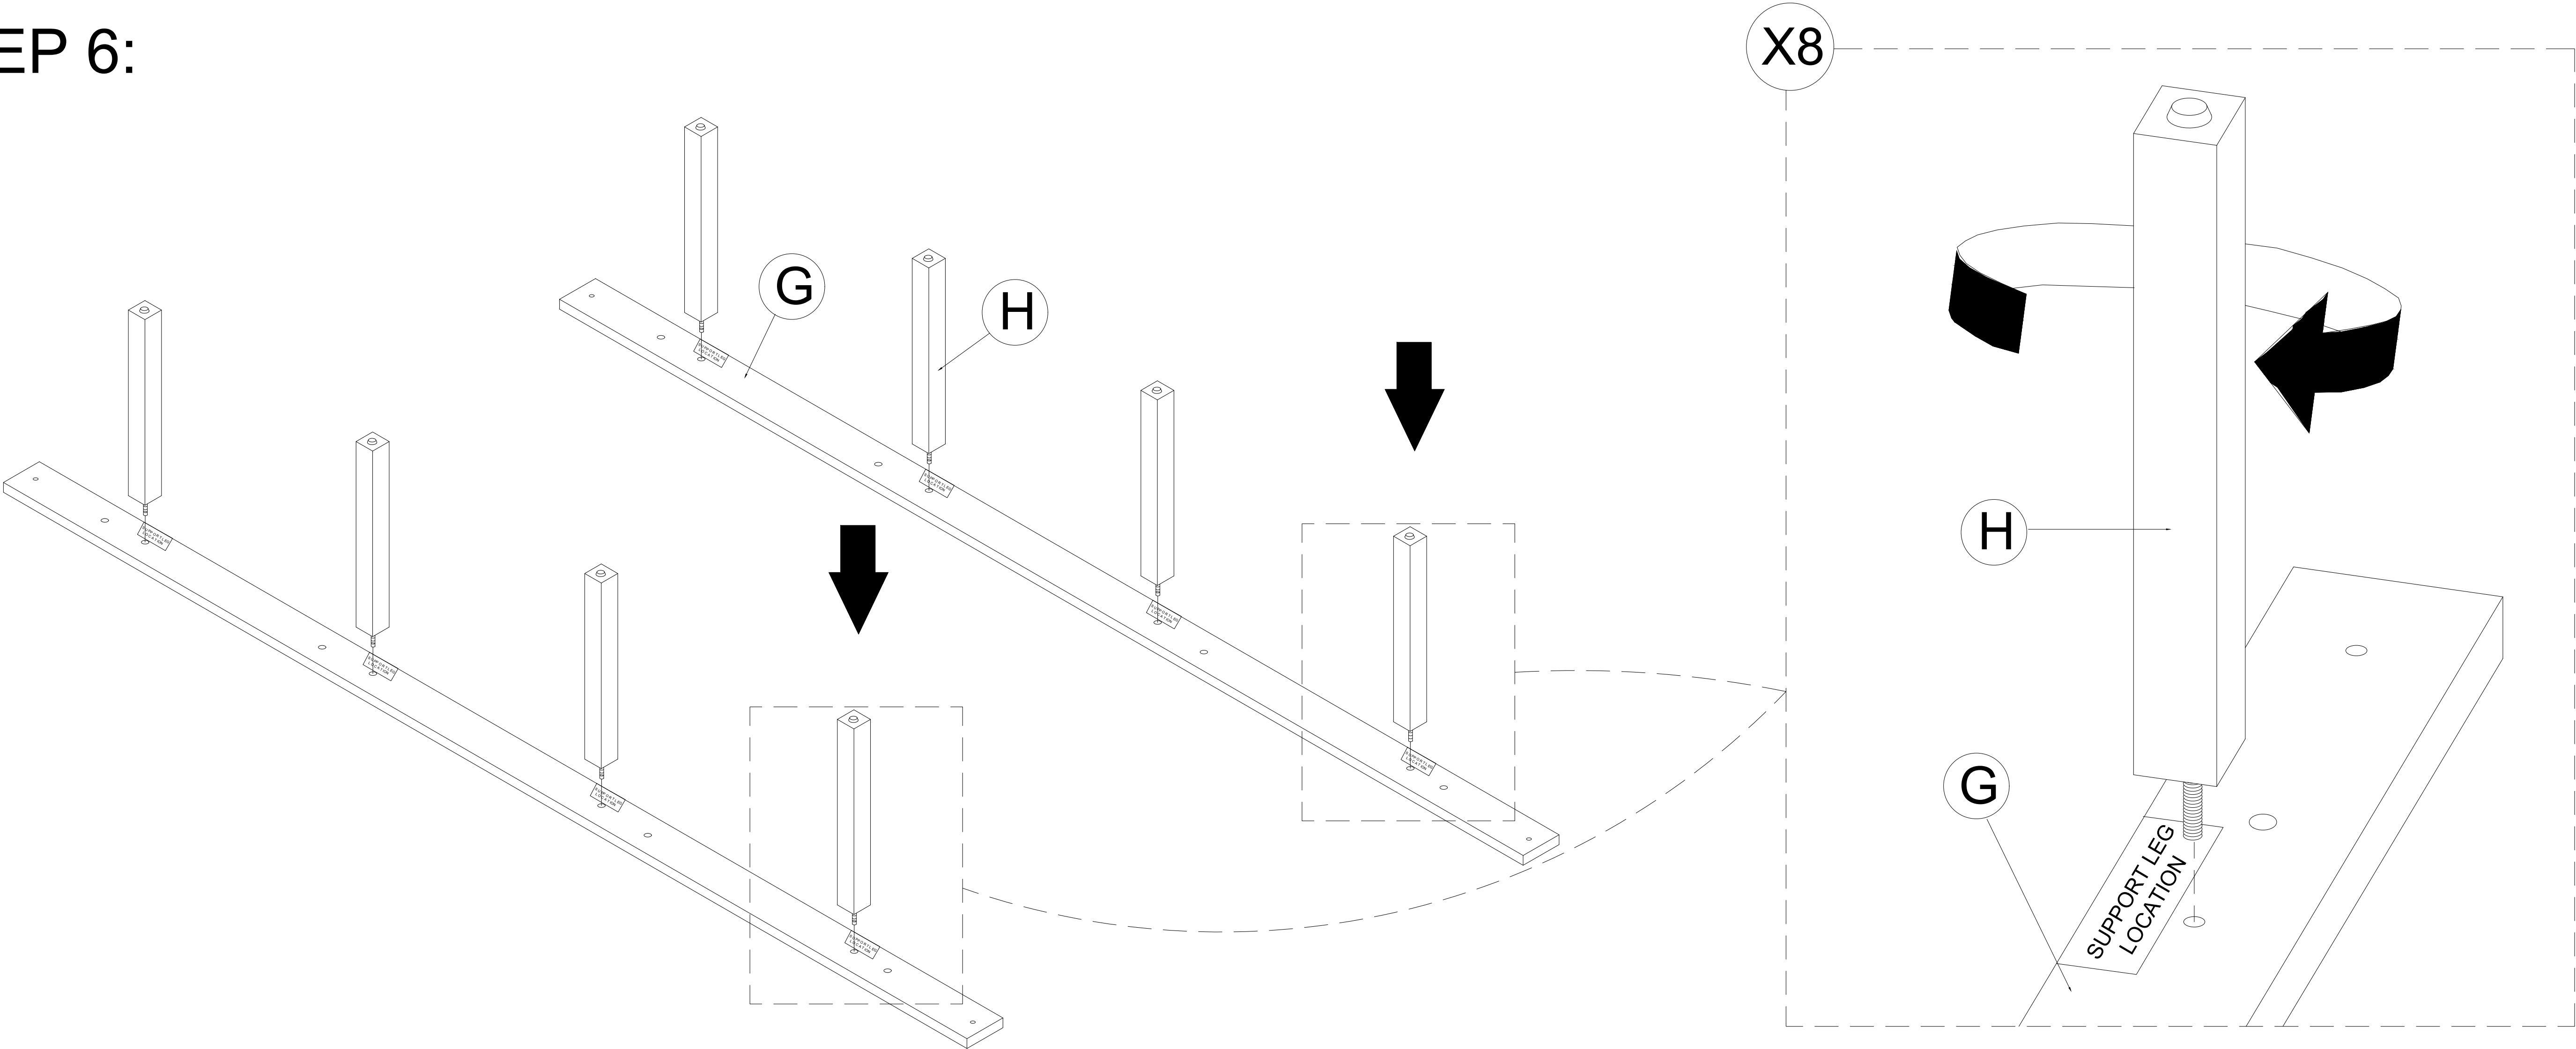


BURKE UPHOLSTERED KING PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 7:

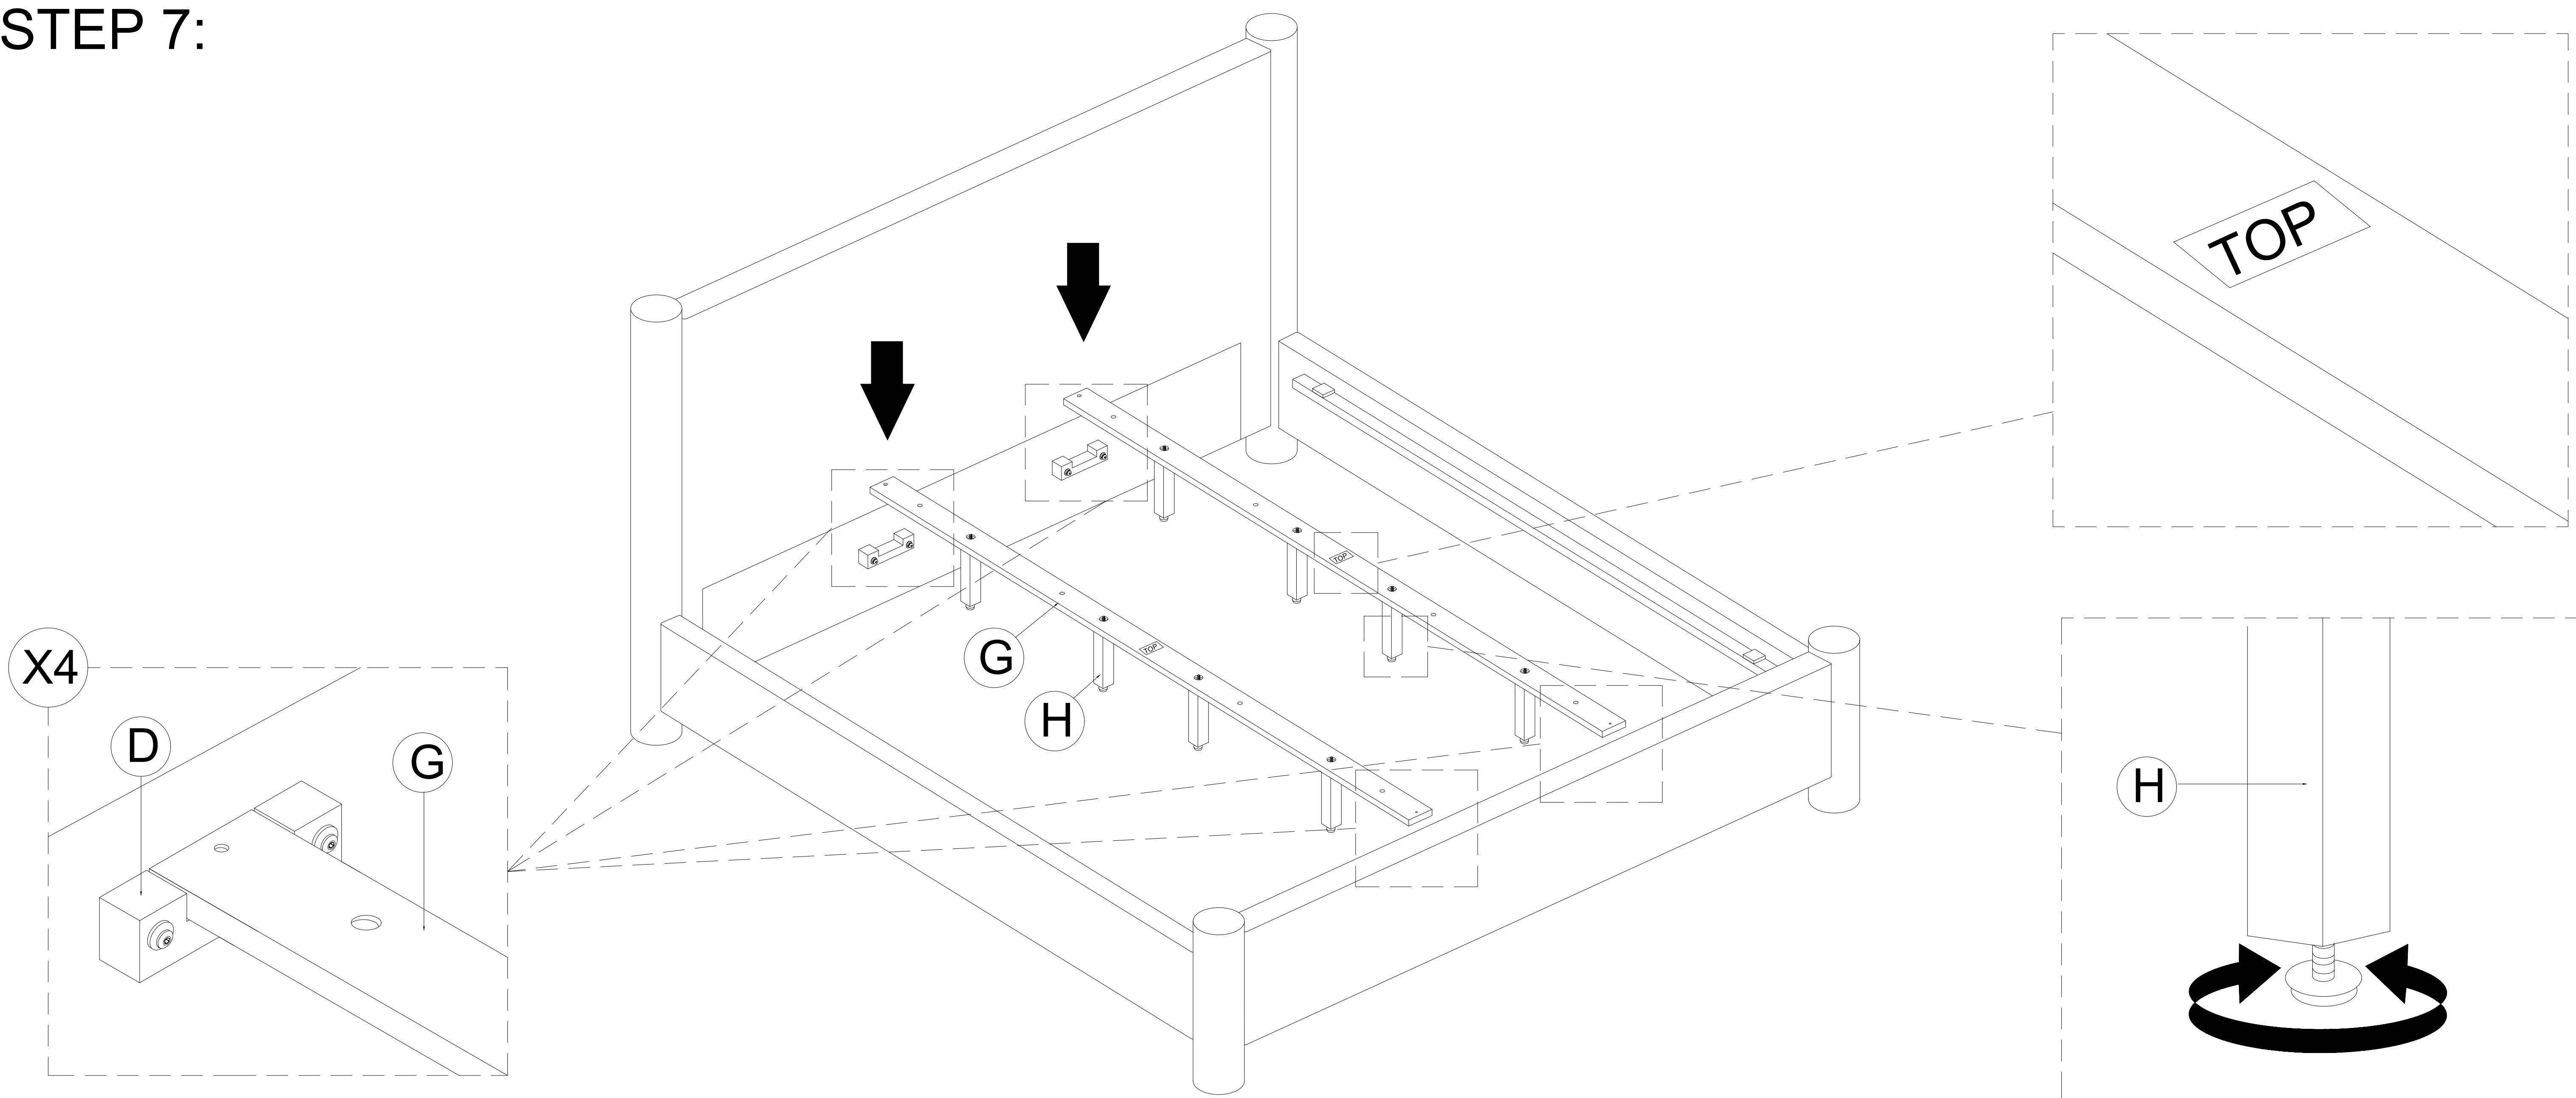

STEP 8:

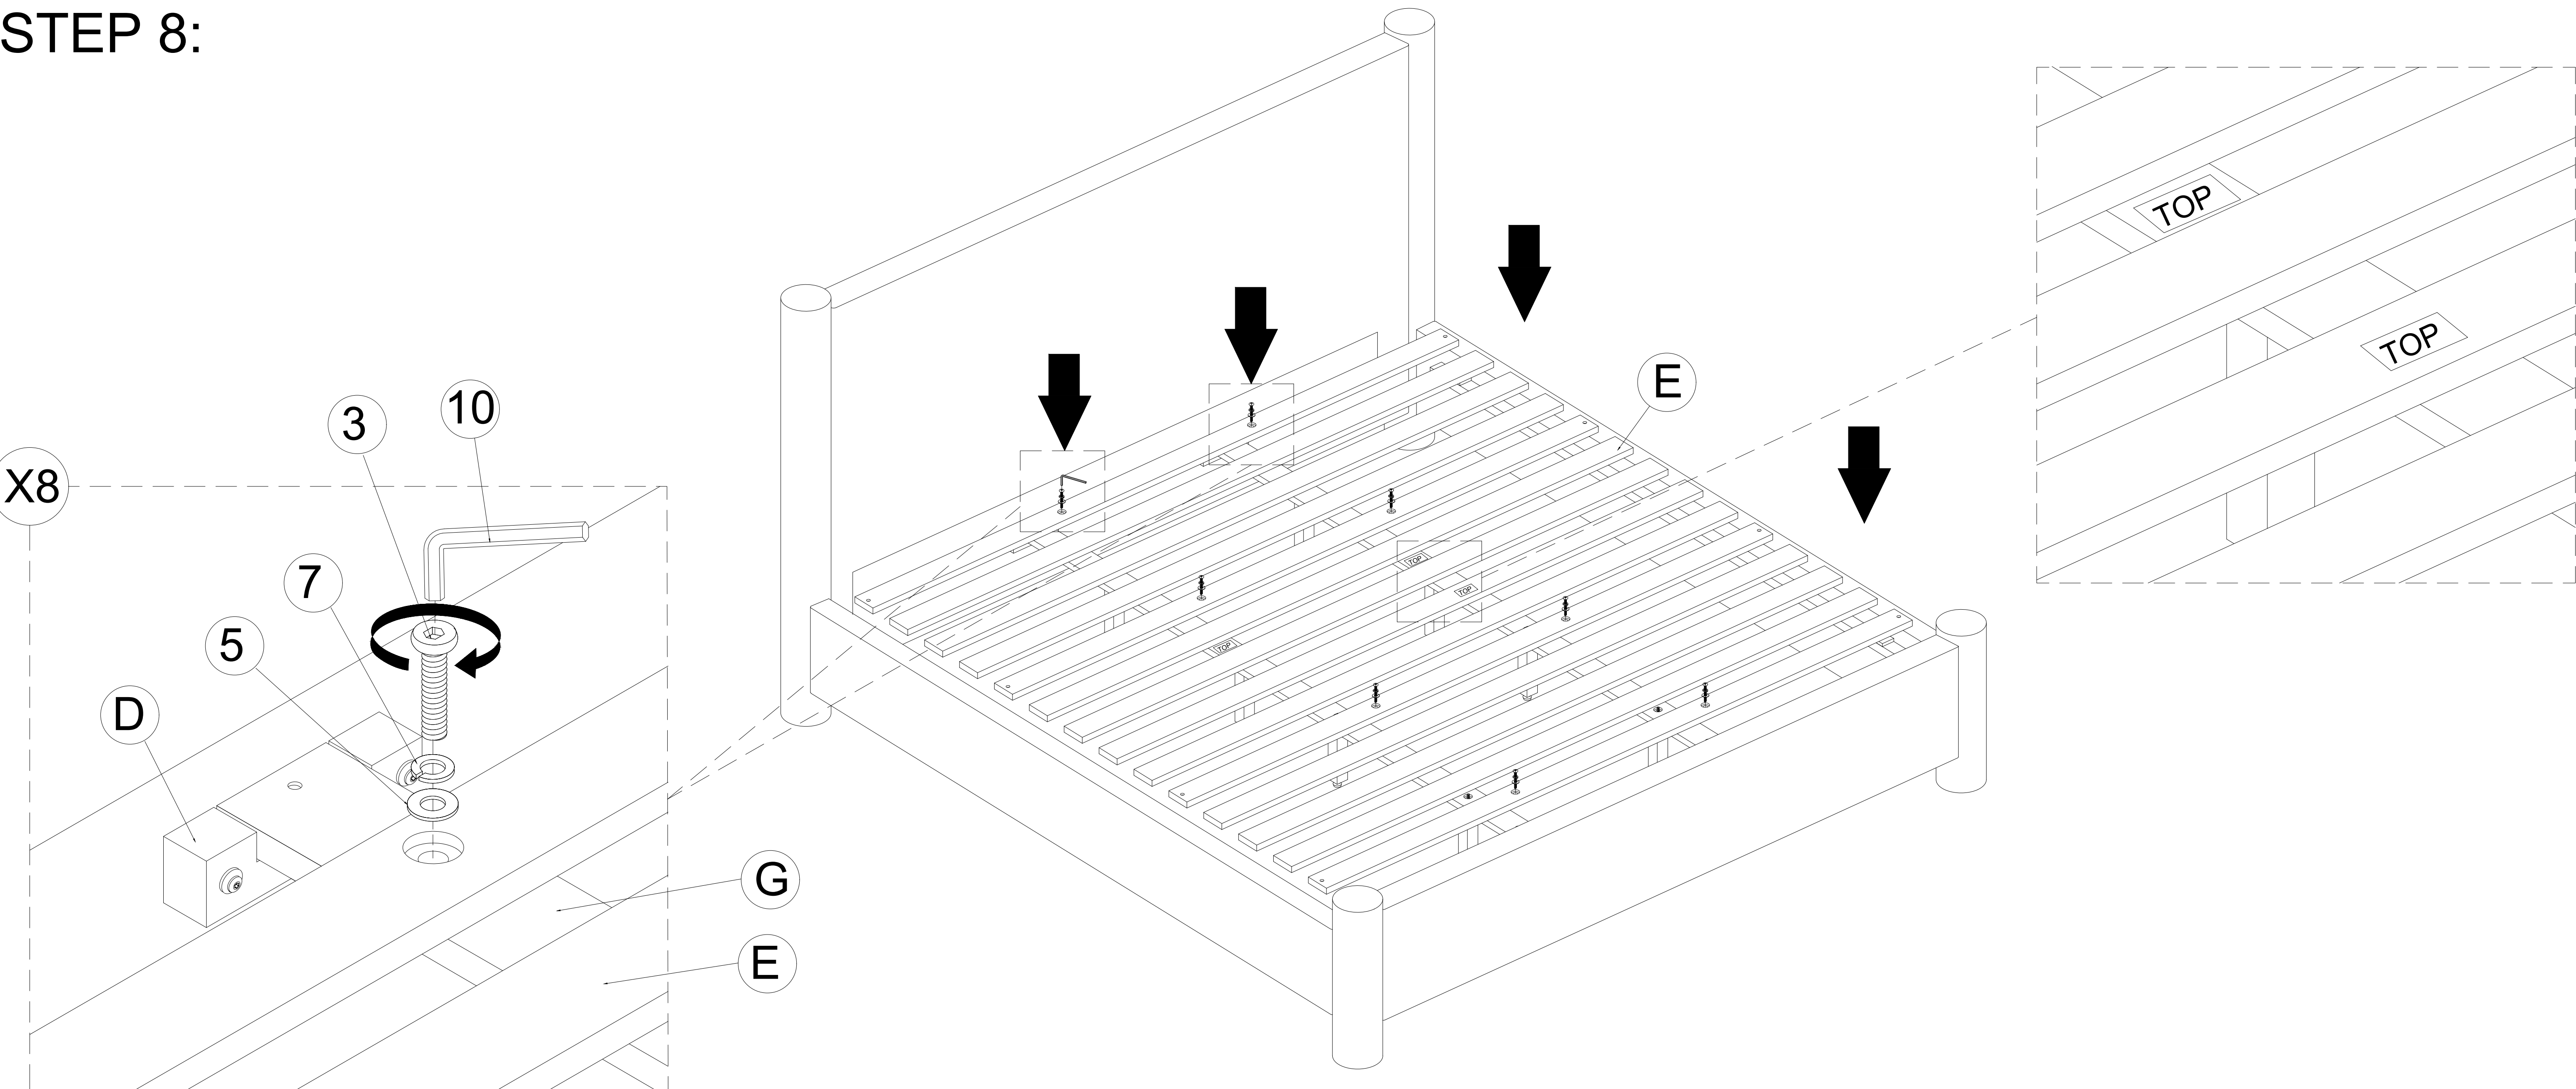


STEP 9:

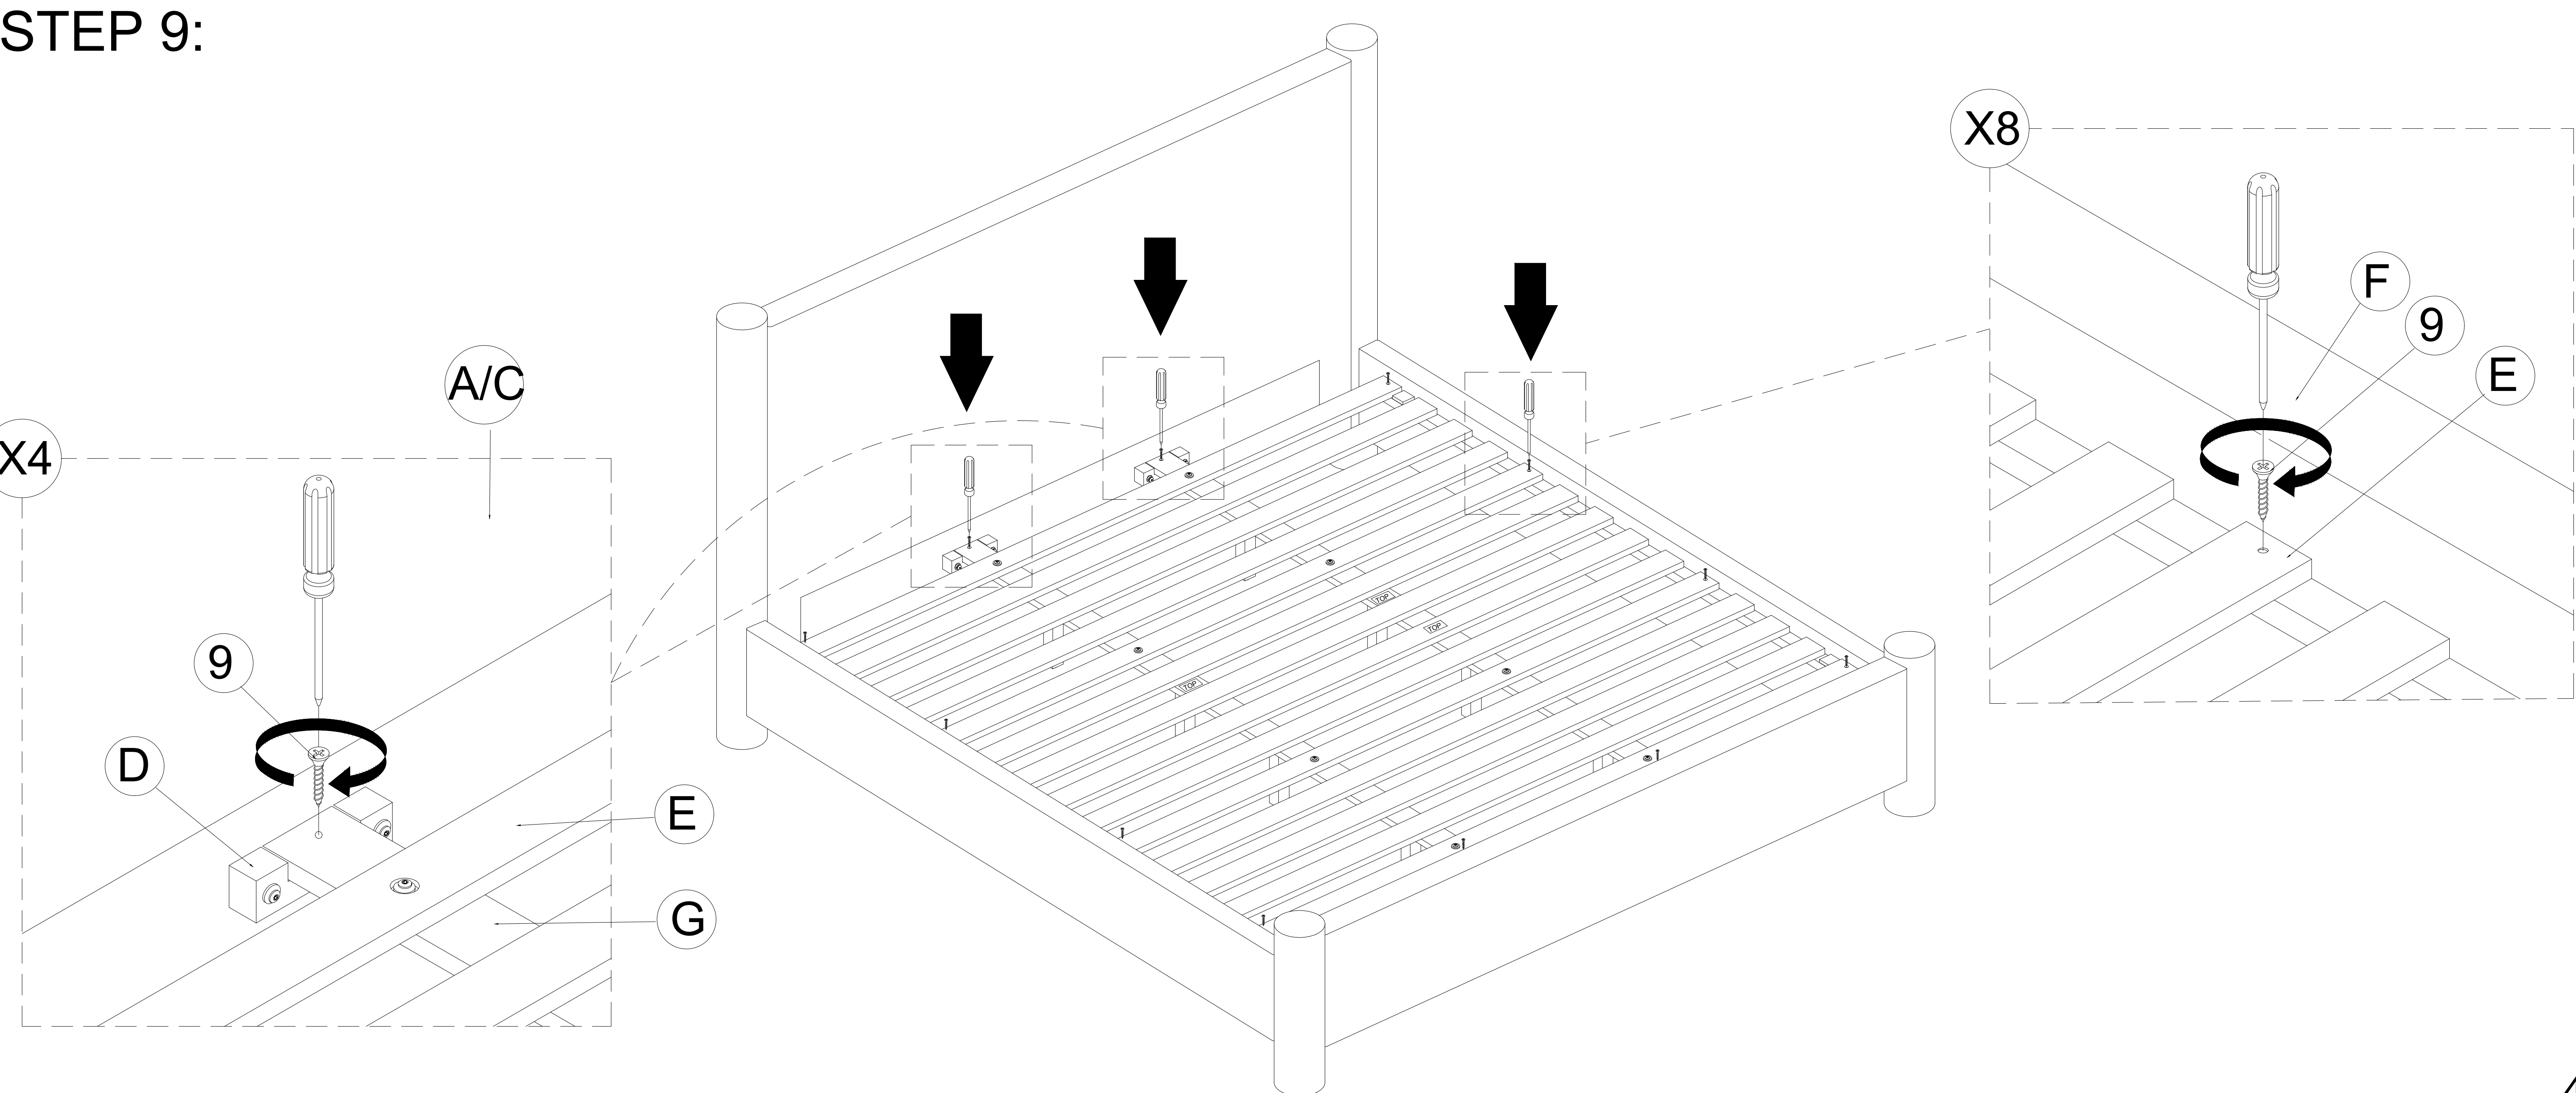

BURKE UPHOLSTERED KING PLATFORM BED

ASSEMBLY INSTRUCTIONS

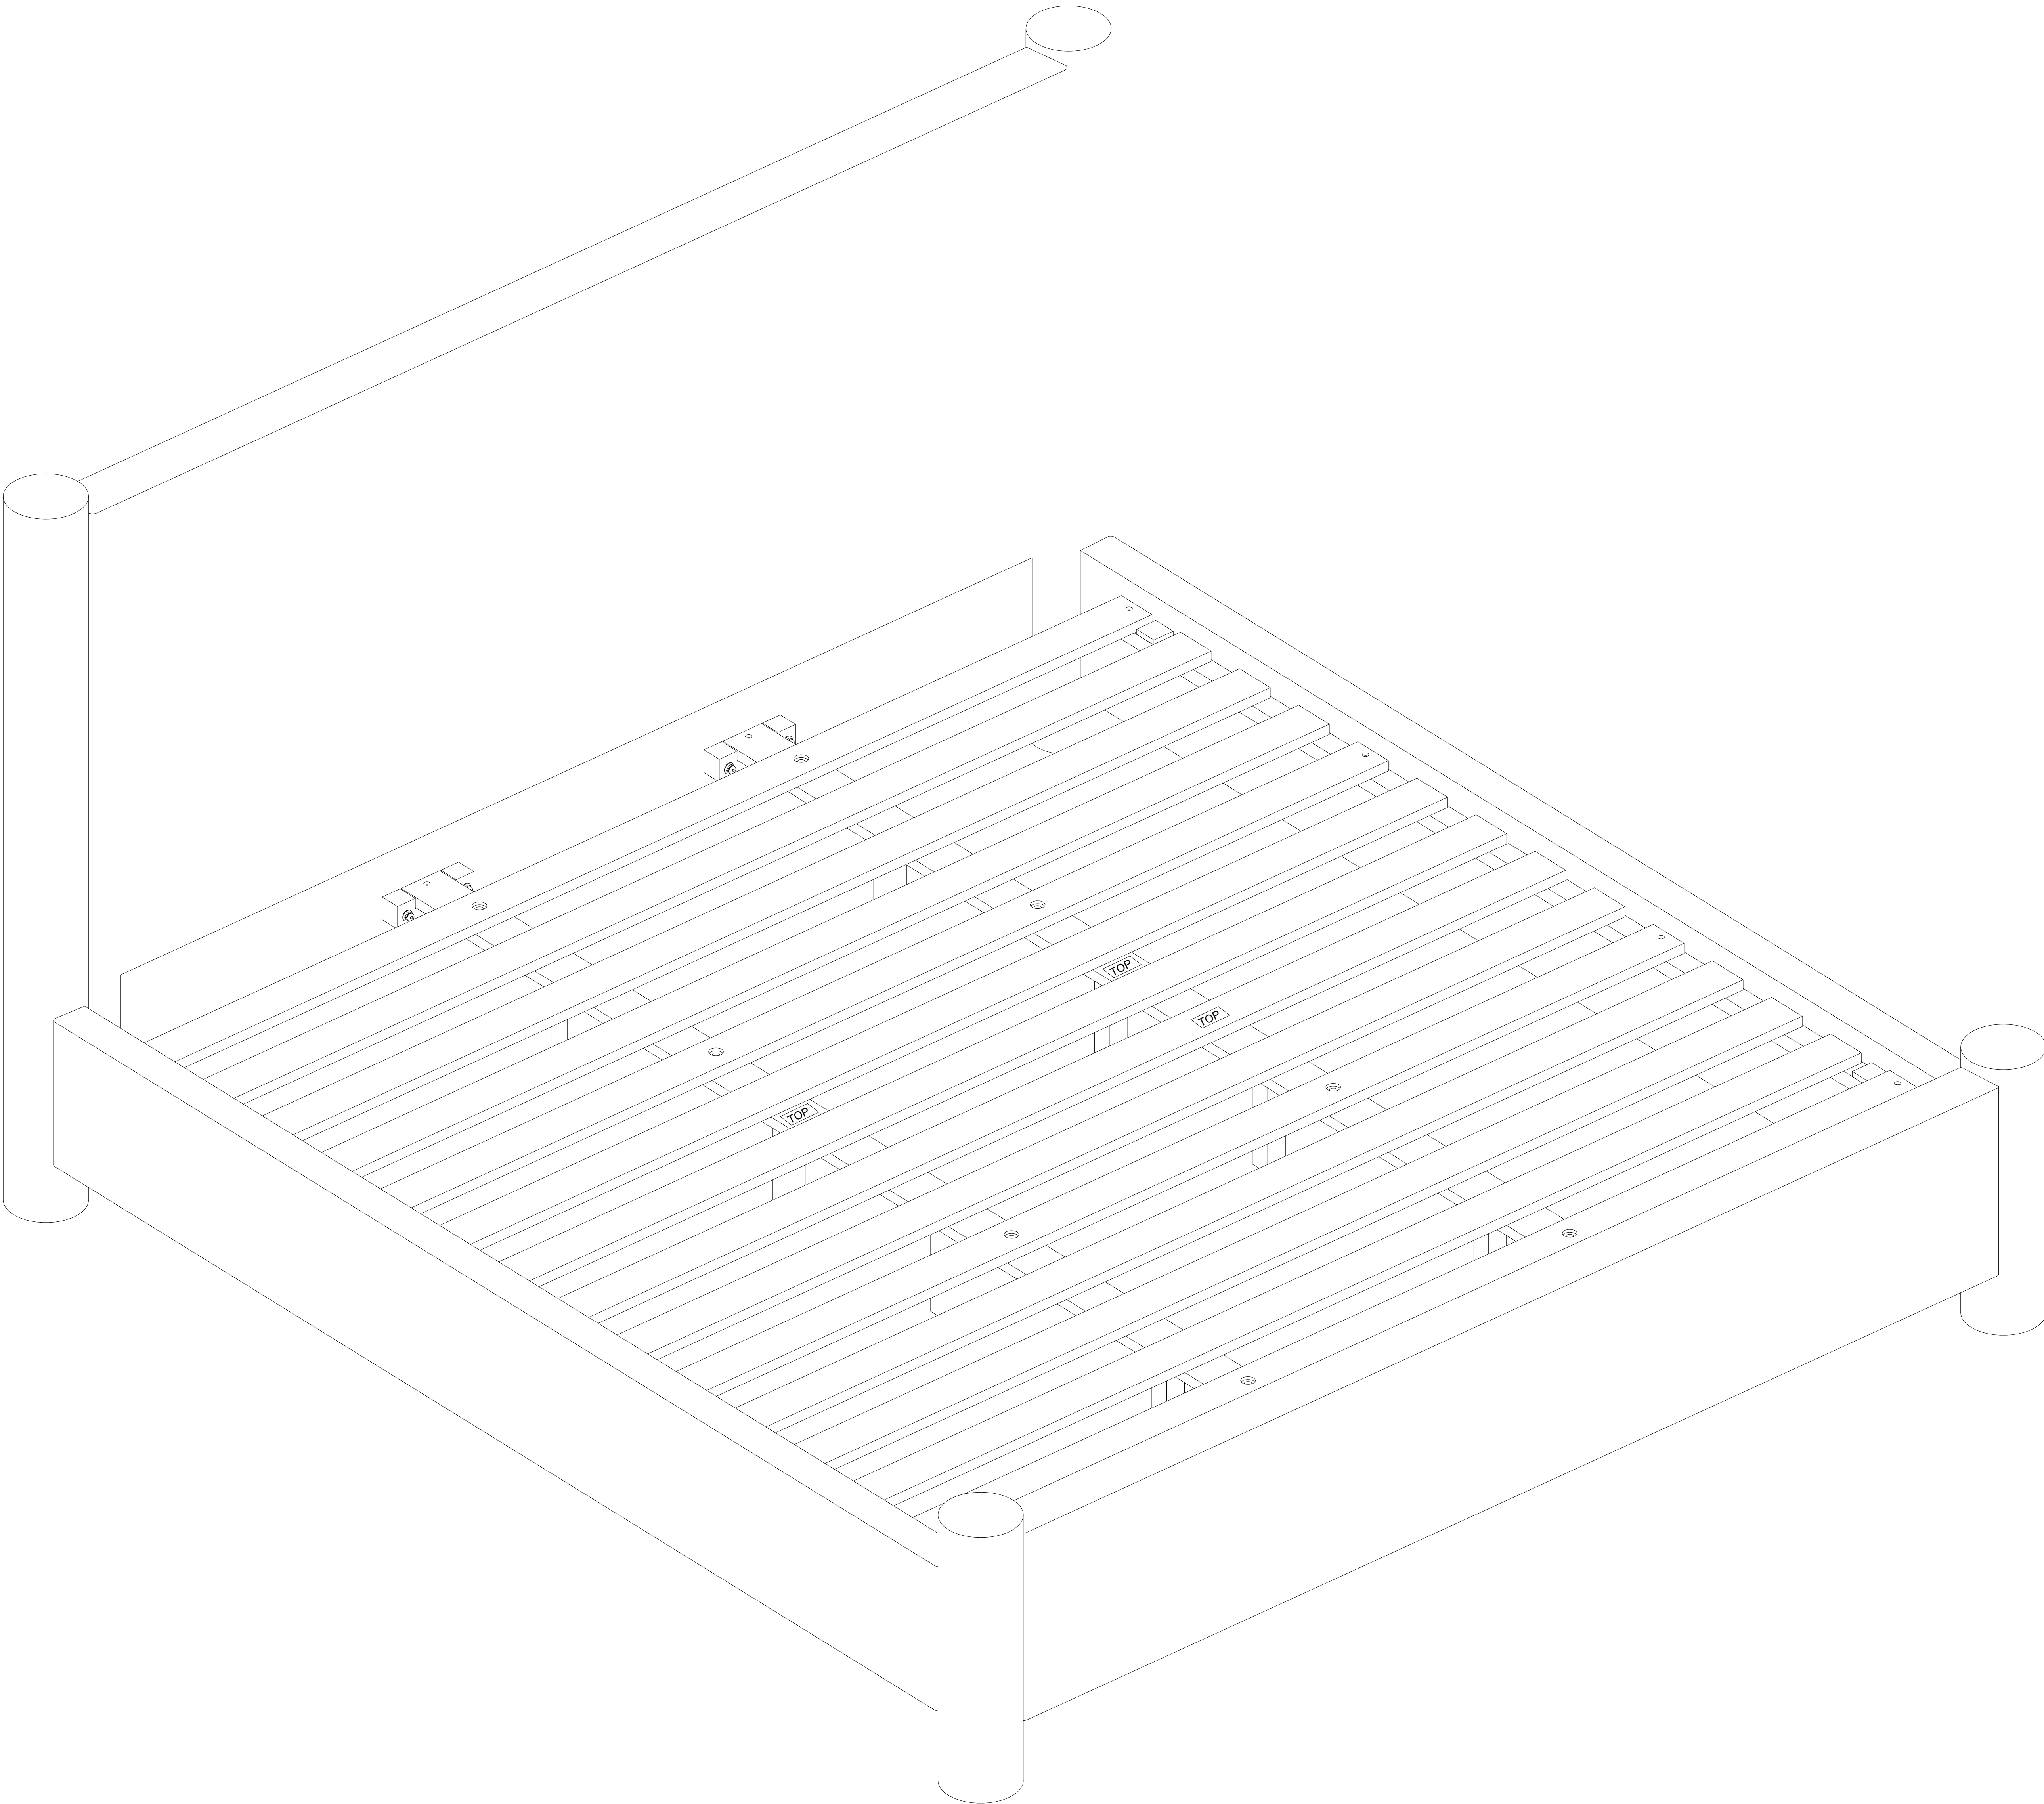


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

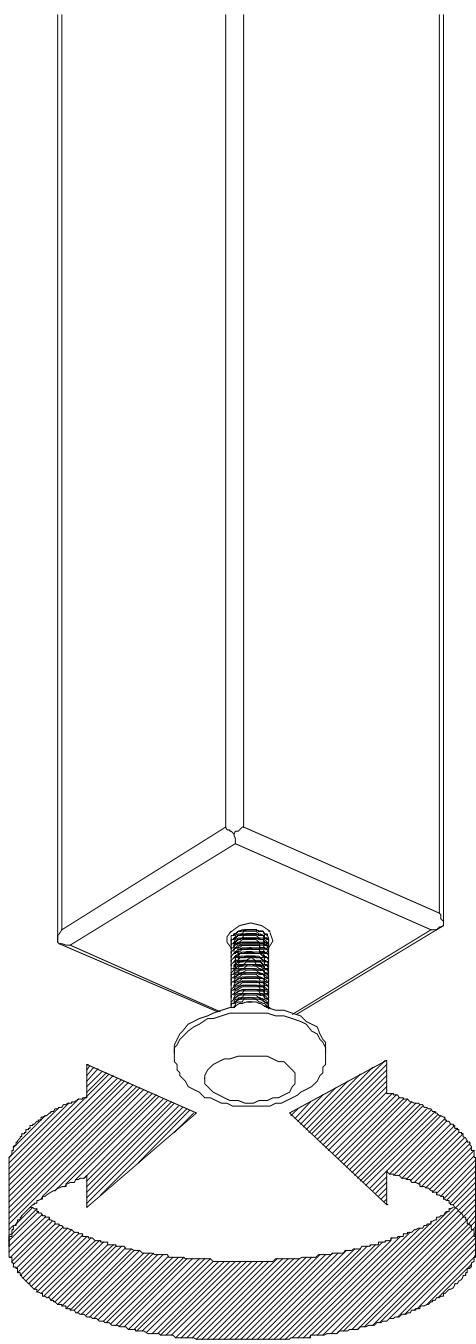

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

BURKE UPHOLSTERED KING PLATFORM BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. CENTER SLAT SUPPORT CLEAT	4 PCS
E. SLAT ROLL	1 SET
G. CENTER SLAT SUPPORT	2 PCS
H. SUPPORT LEG	8 PCS

STEP 1:

USE ALLEN KEY (10) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

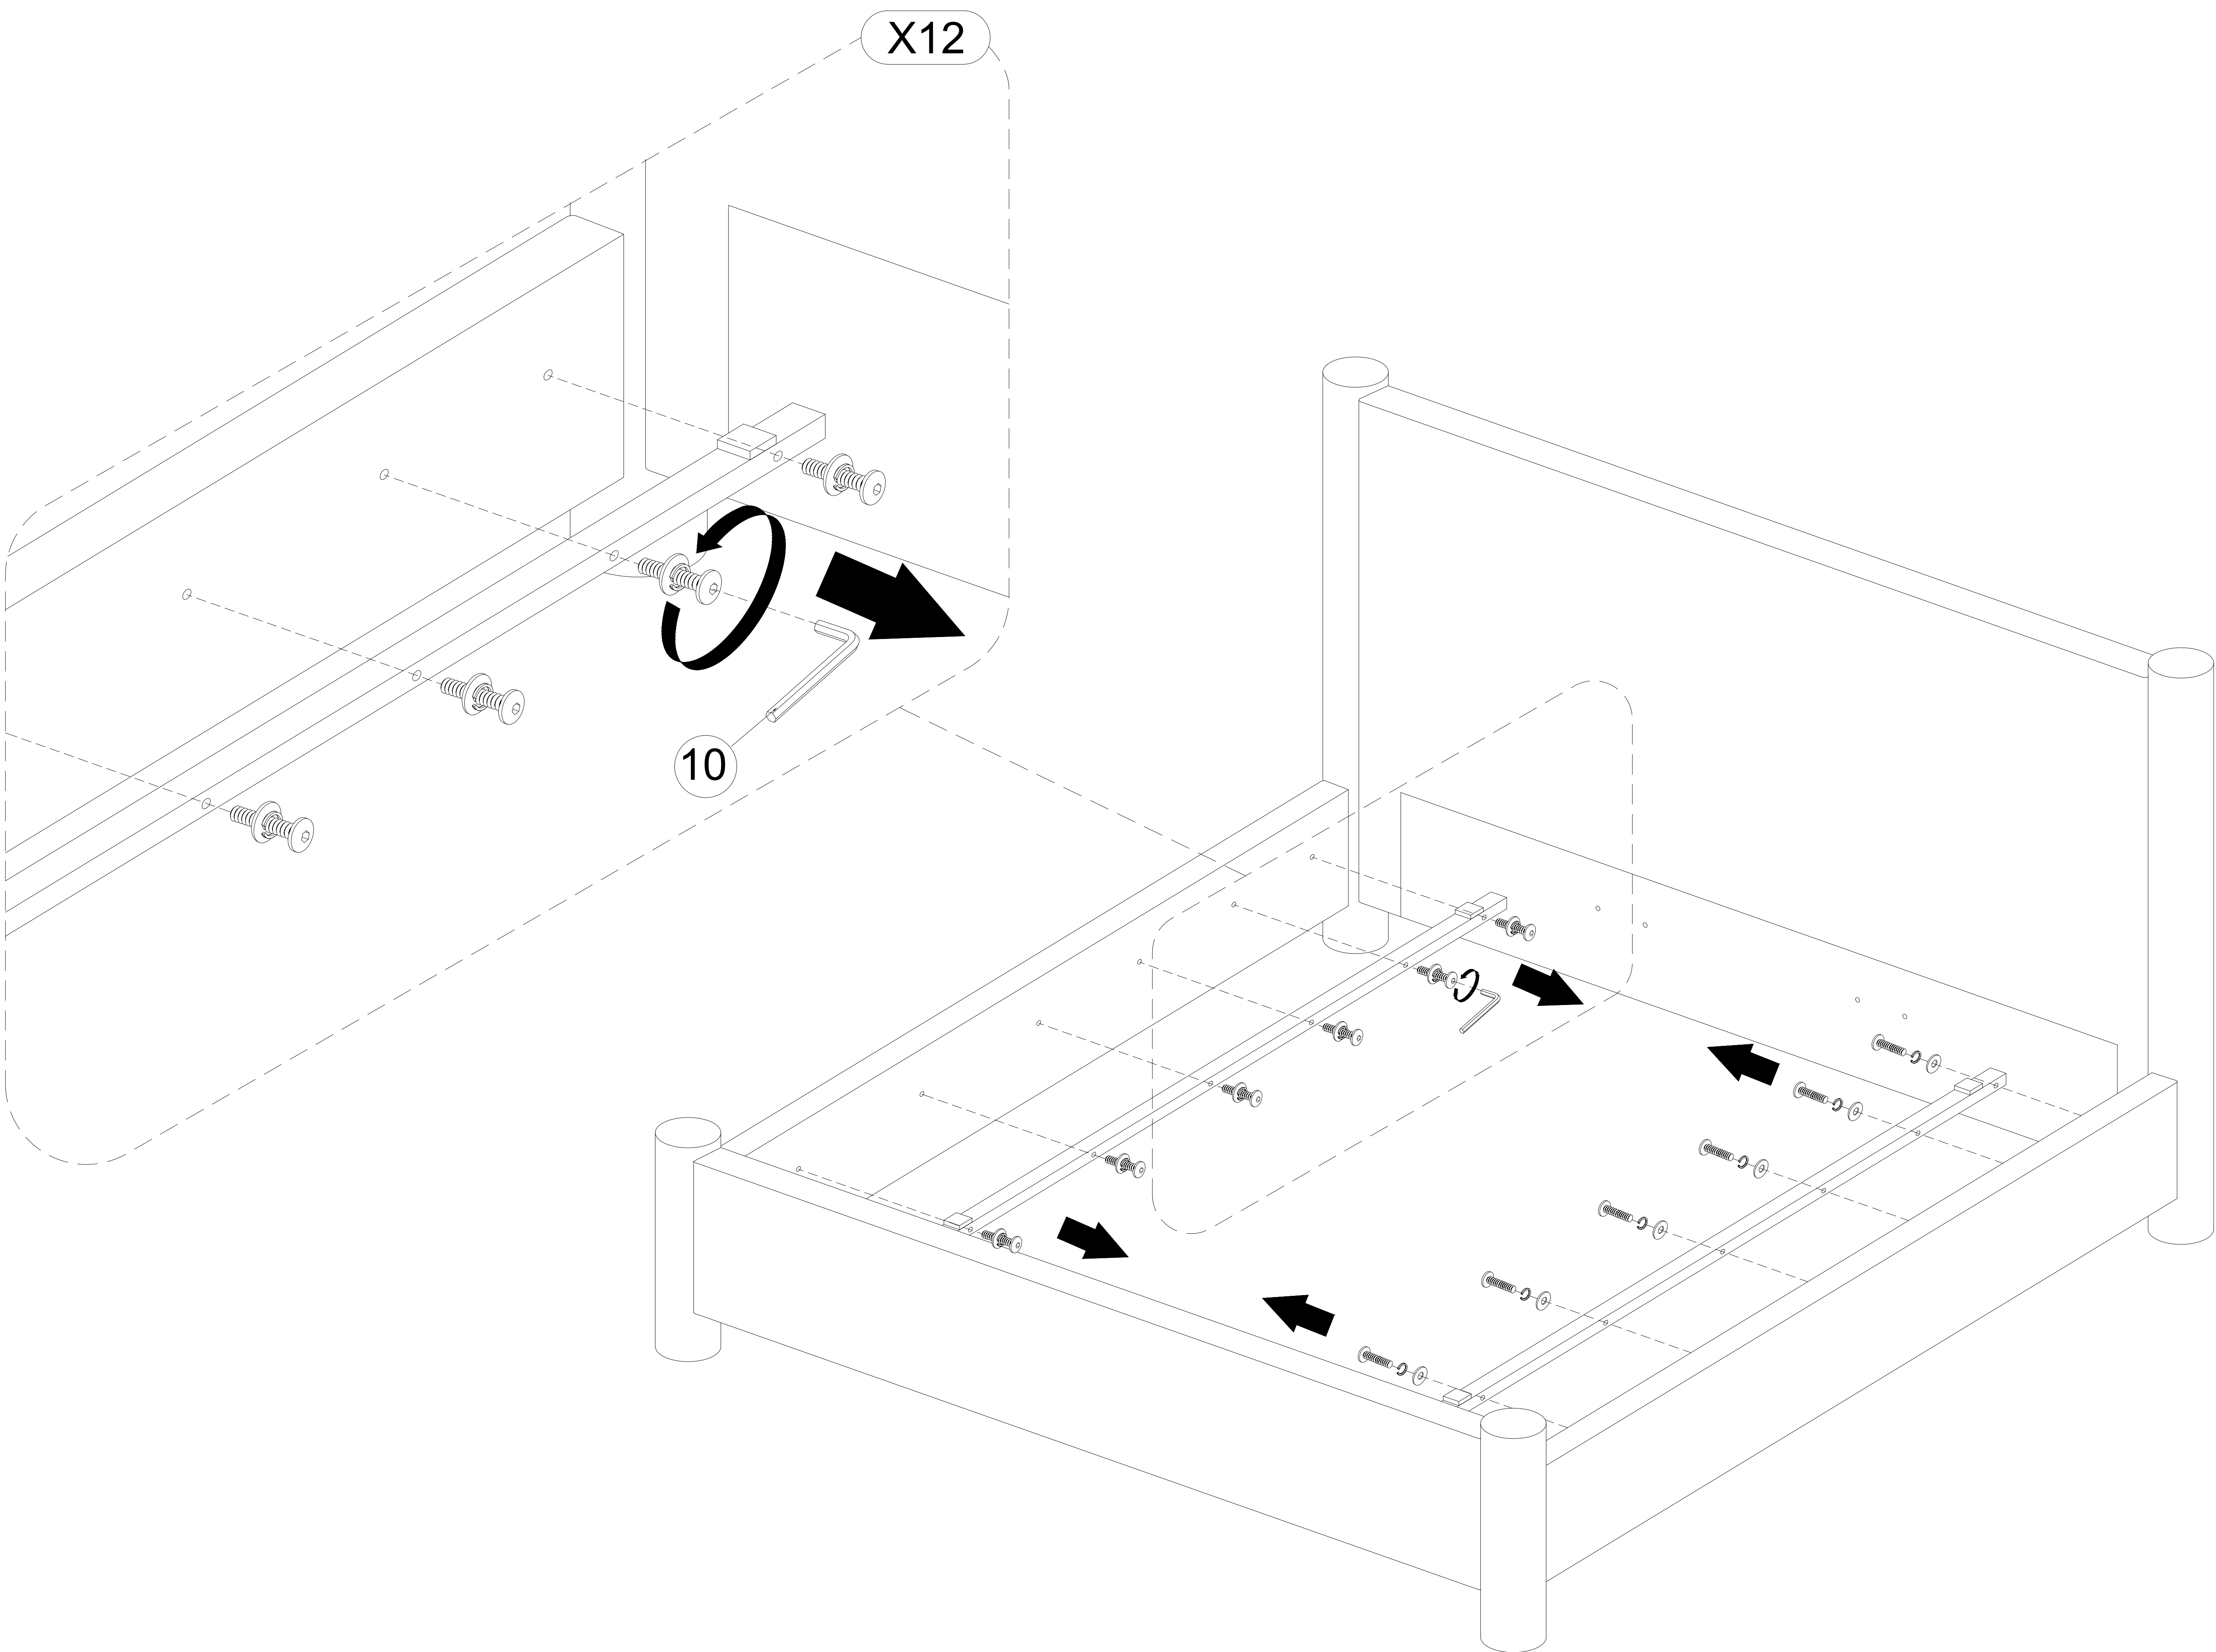

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

BURKE UPHOLSTERED C.KING PLATFORM BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

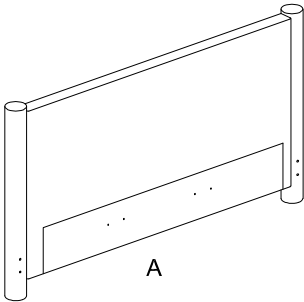

A

BOX#2

B. FOOTBOARD LEG

2 PCS

C. FOOTBOARD


1 PC

D. CENTER SLAT SUPPORT CLEAT


4 PCS

E. SLAT ROLL

1 SET




B

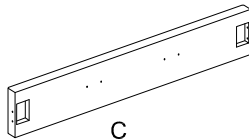

C



D

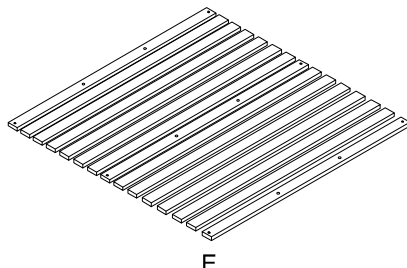

E

BOX#3

F. SIDE RAIL


2 PCS

G. CENTER SLAT SUPPORT


2 PCS

H. SUPPORT LEG

8 PCS

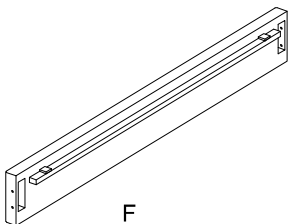

F

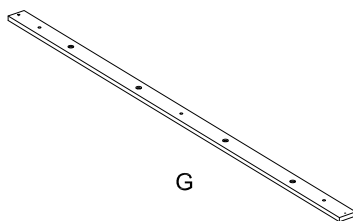

G





H

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (5/16"x 3-1/2")		12 PCS
2	ALLEN BOLT (5/16"x 2-1/2")		8 PCS
3	ALLEN BOLT (1/4"x 1-1/4")		6 PCS
4	FLAT WASHER (5/16")		20 PCS
5	FLAT WASHER (1/4")		6 PCS
6	LOCK WASHER (5/16")		20 PCS
7	LOCK WASHER (1/4")		6 PCS
8	HEX NUT (5/16")		12 PCS
9	PHILLIPS SCREW (M4 x 32mm)		10 PCS
10	ALLEN KEY (5/16")		1 PC
11	WRENCH		1 PC
12	CONNECTING BRACKET		6 PCS

FULLY ASSEMBLED

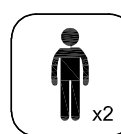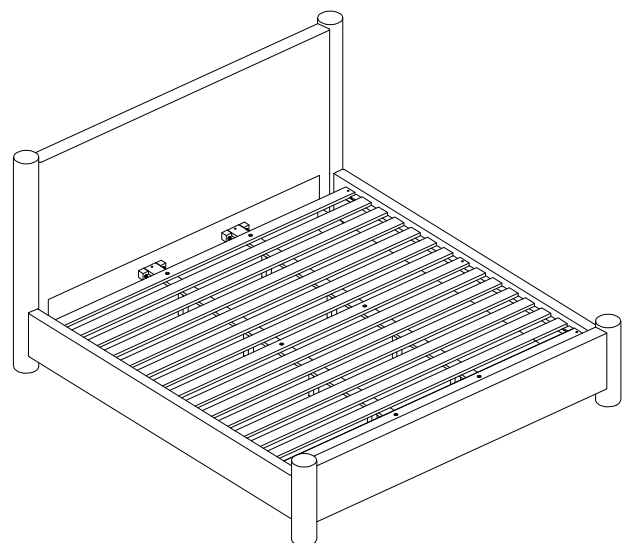


BURKE UPHOLSTERED C.KING PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 1:

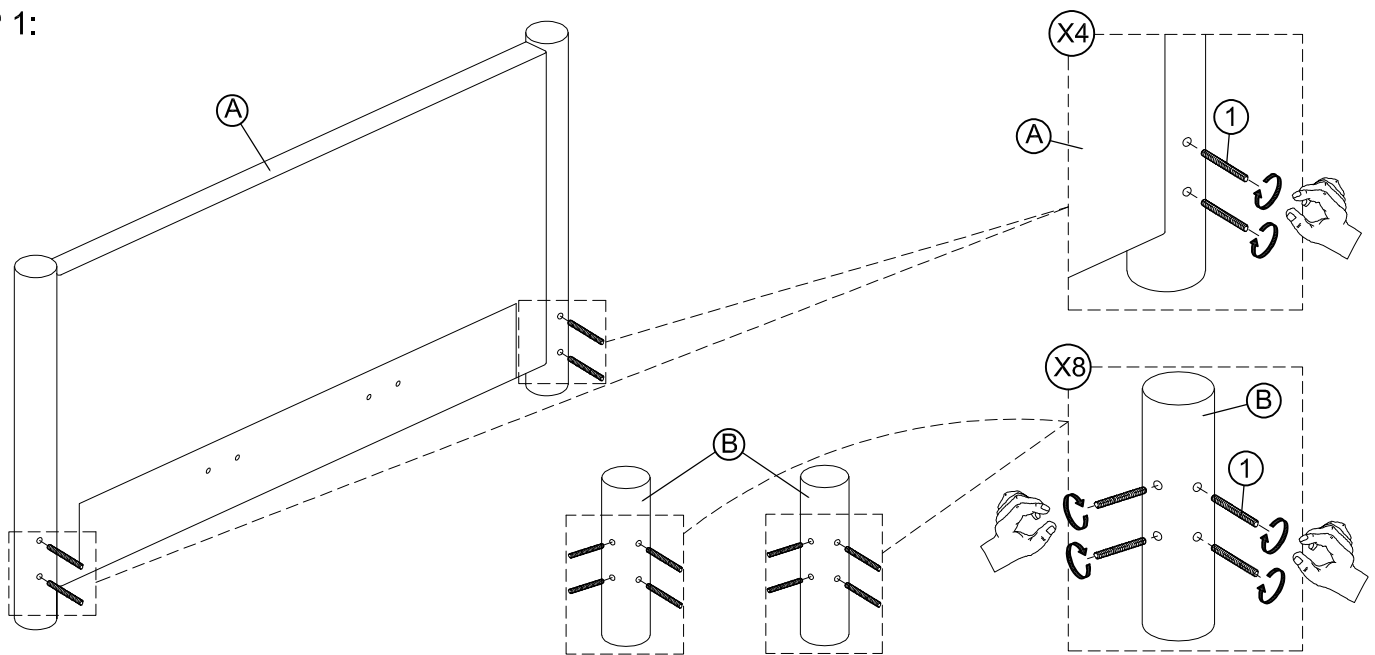

STEP 2:

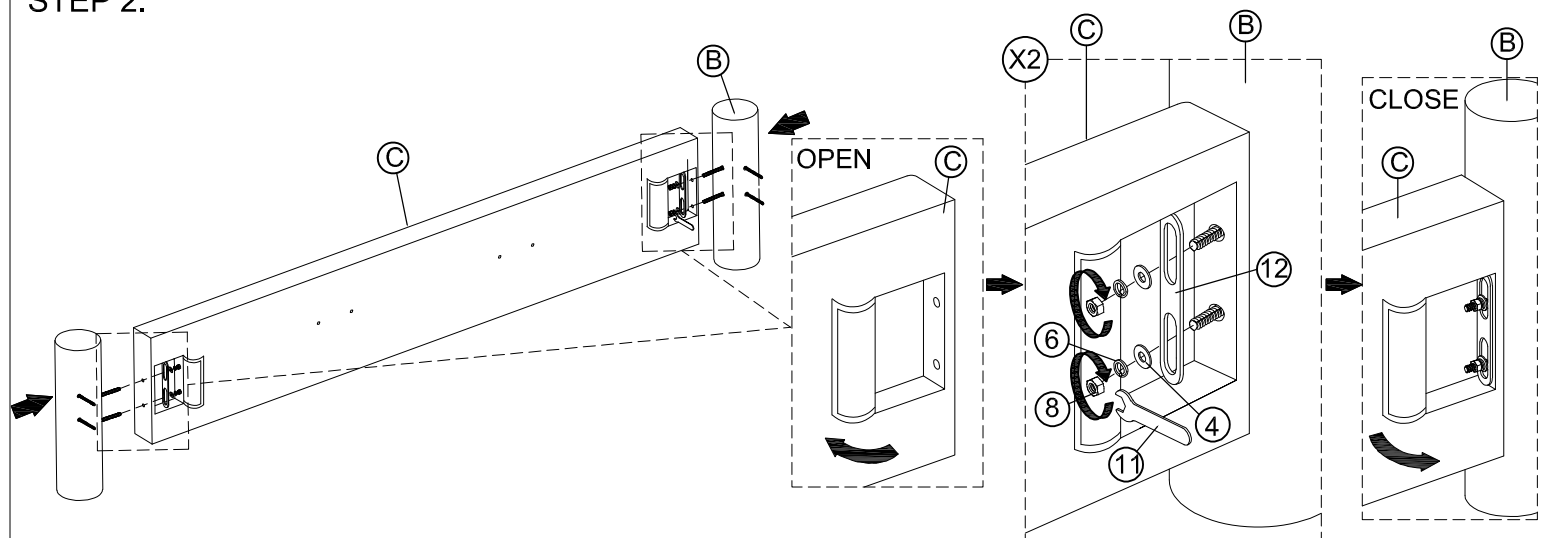

STEP 3:

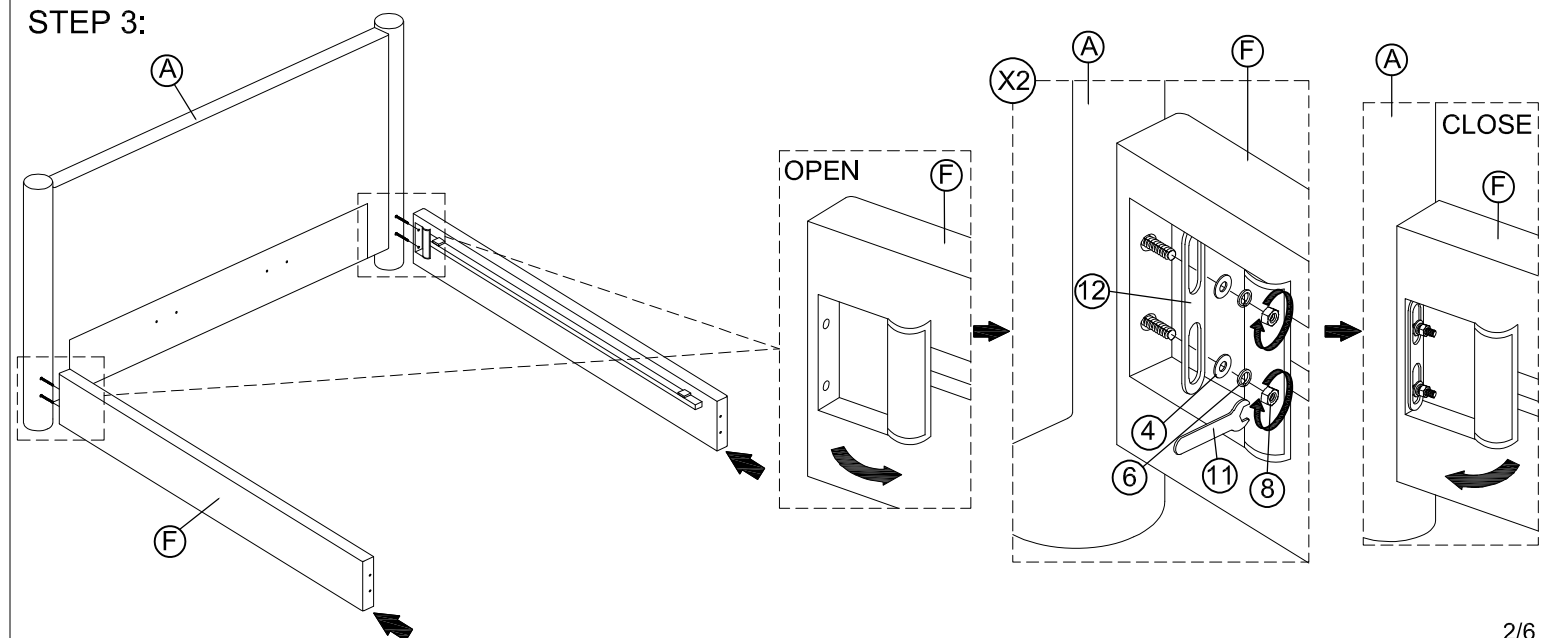


BURKE UPHOLSTERED C.KING PLATFORM BED

ASSEMBLY INSTRUCTIONS




STEP 4:

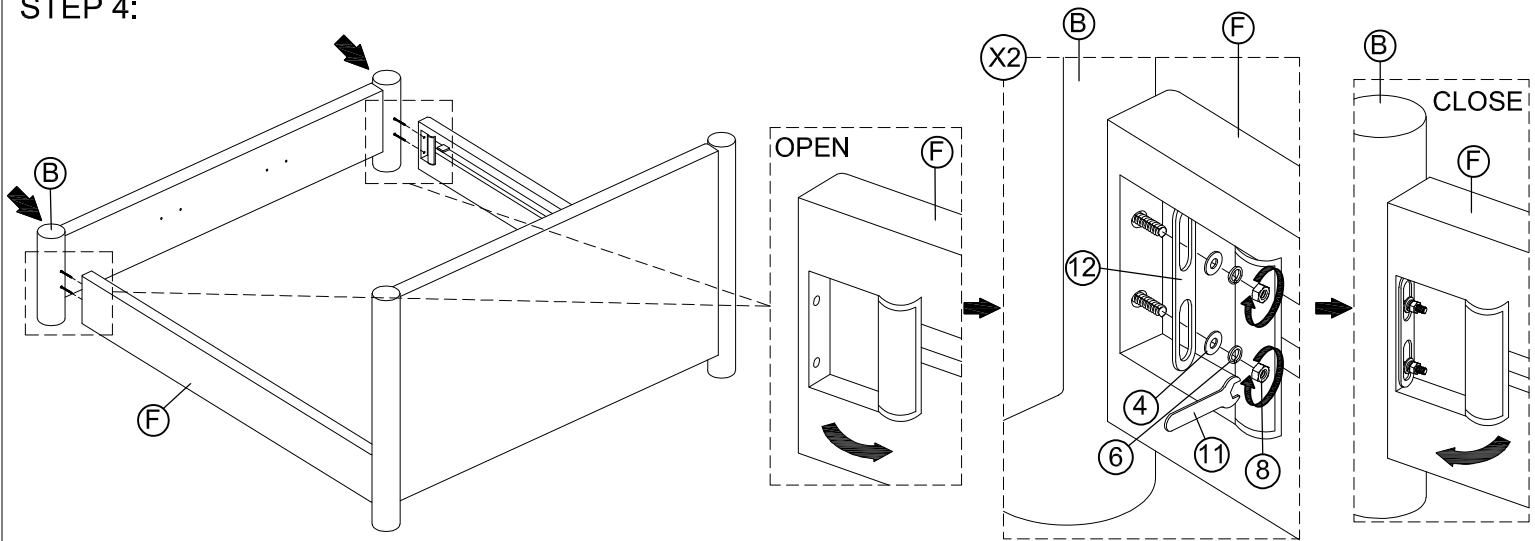


STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5-9 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5.

STEP 5:

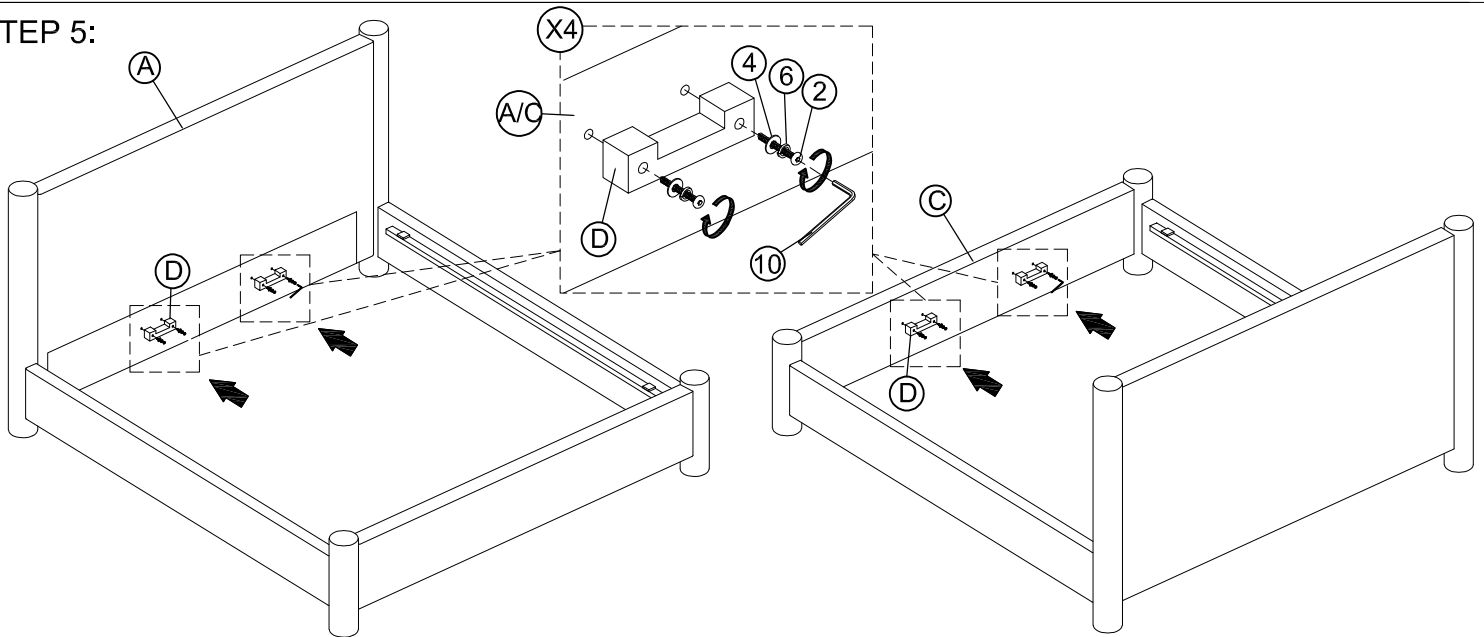

STEP 6:

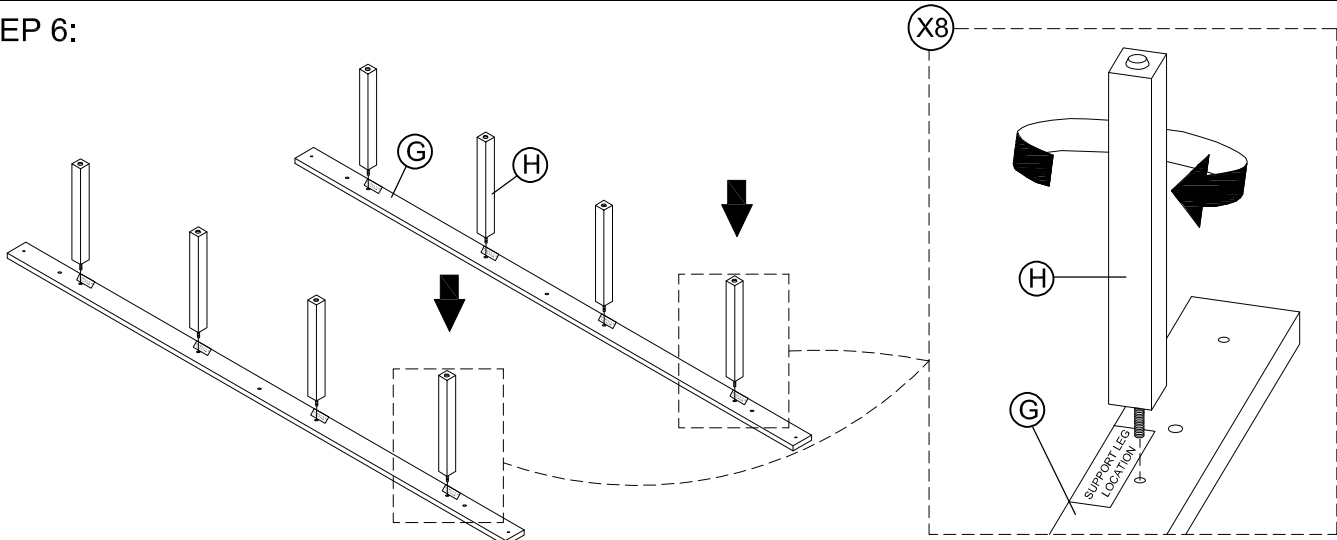


BURKE UPHOLSTERED C.KING PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 7:

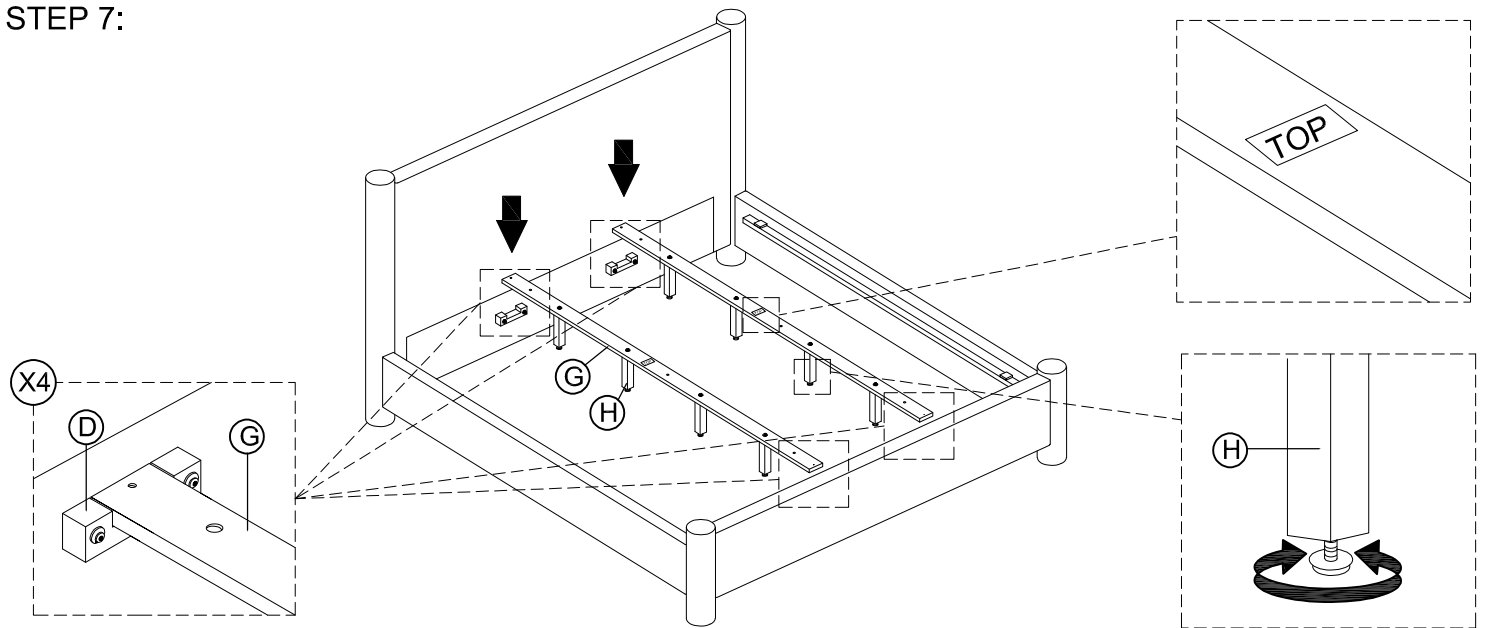

STEP 8:

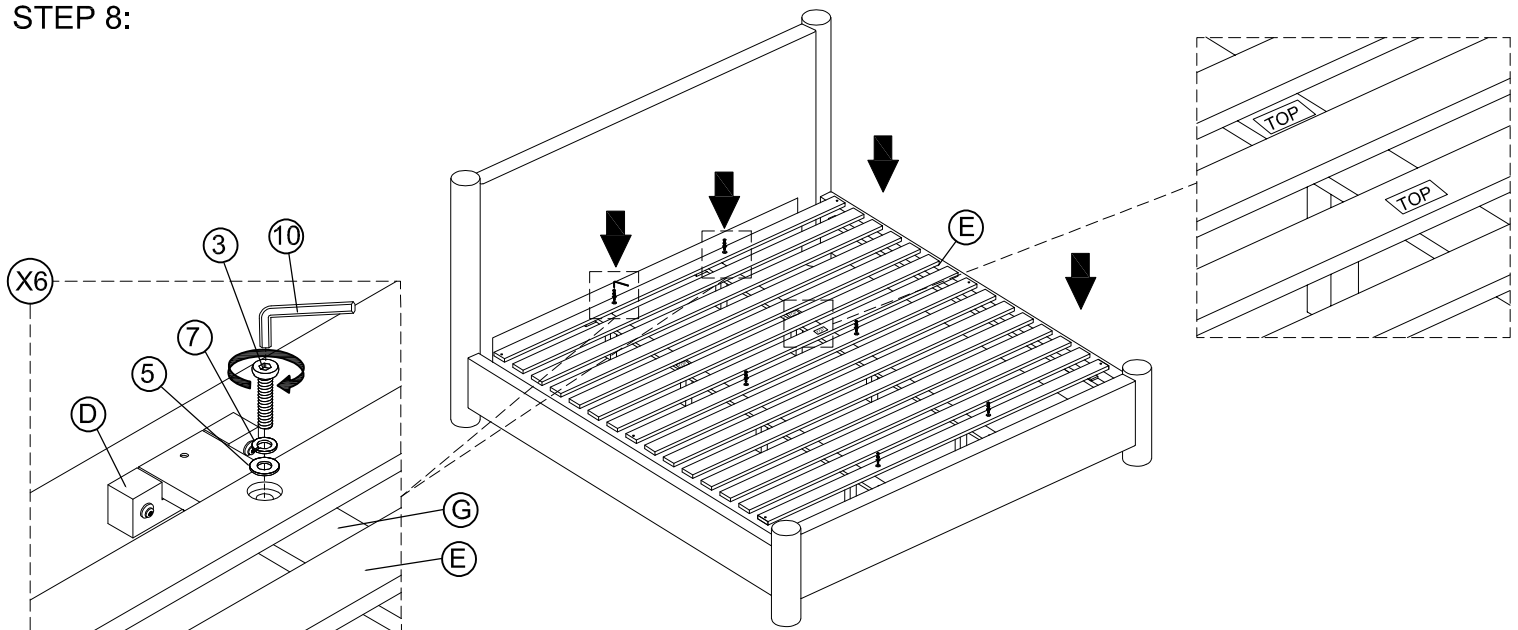


STEP 9:

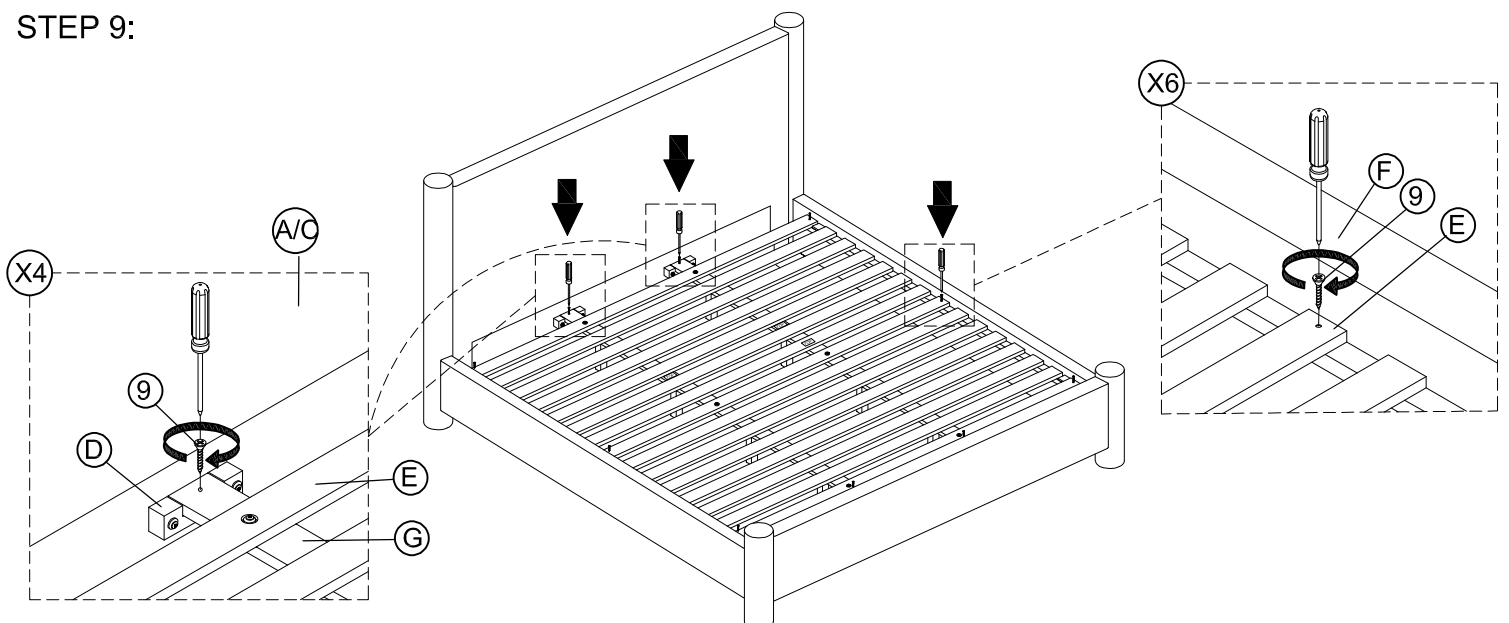

BURKE UPHOLSTERED C.KING PLATFORM BED

ASSEMBLY INSTRUCTIONS

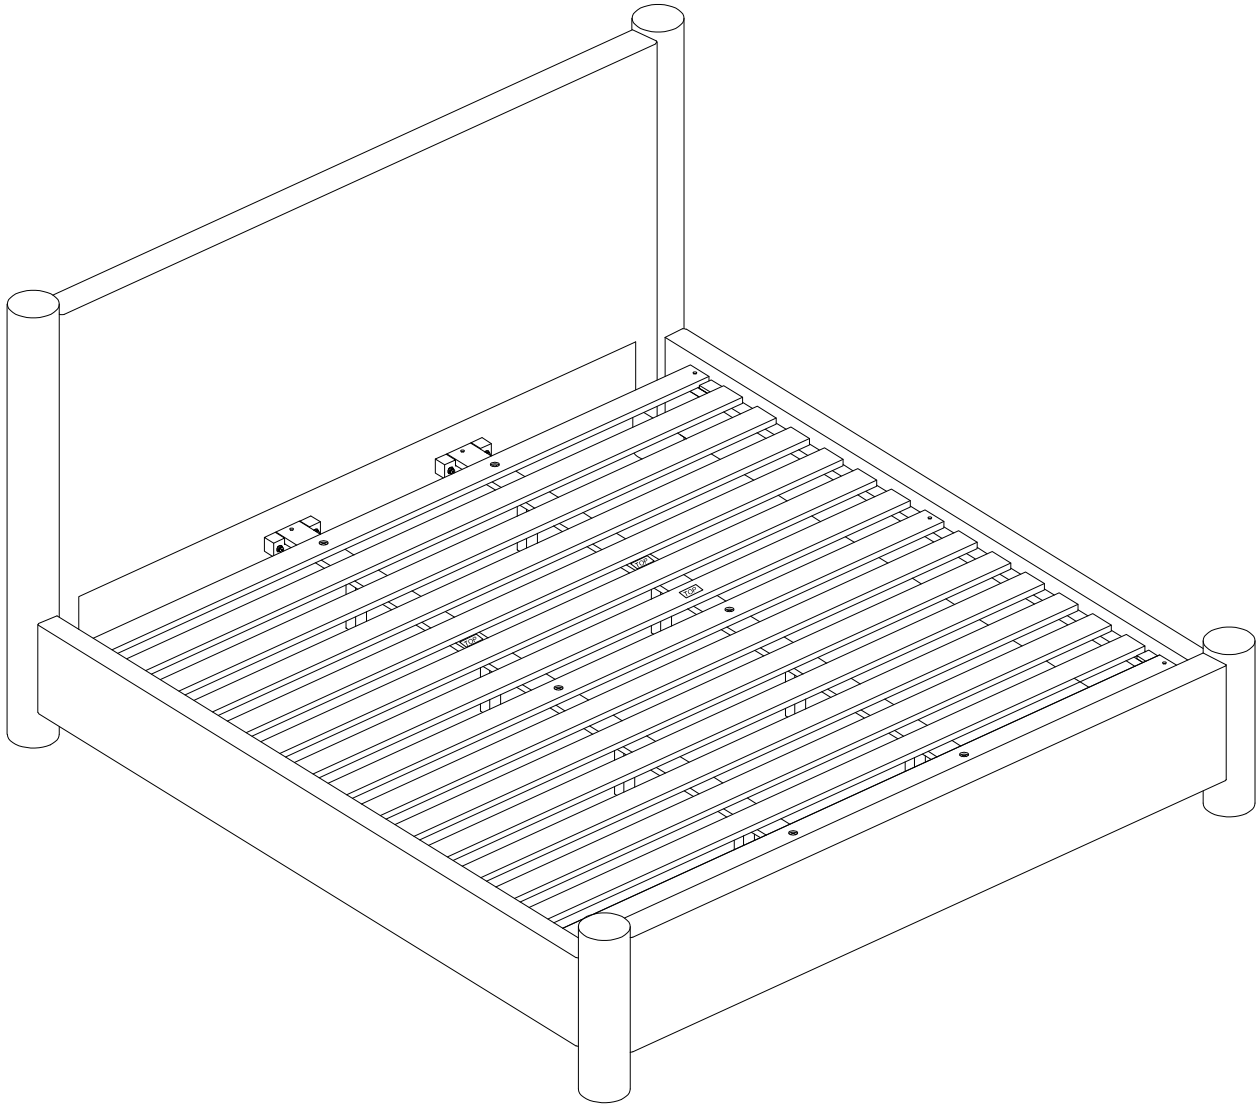


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

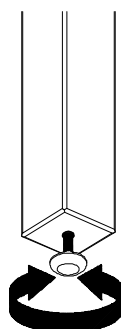

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

BURKE UPHOLSTERED C.KING PLATFORM BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. CENTER SLAT SUPPORT CLEAT	4 PCS
E. SLAT ROLL	1 SET
G. CENTER SLAT SUPPORT	2 PCS
H. SUPPORT LEG	8 PCS

STEP 1:

USE ALLEN KEY (10) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

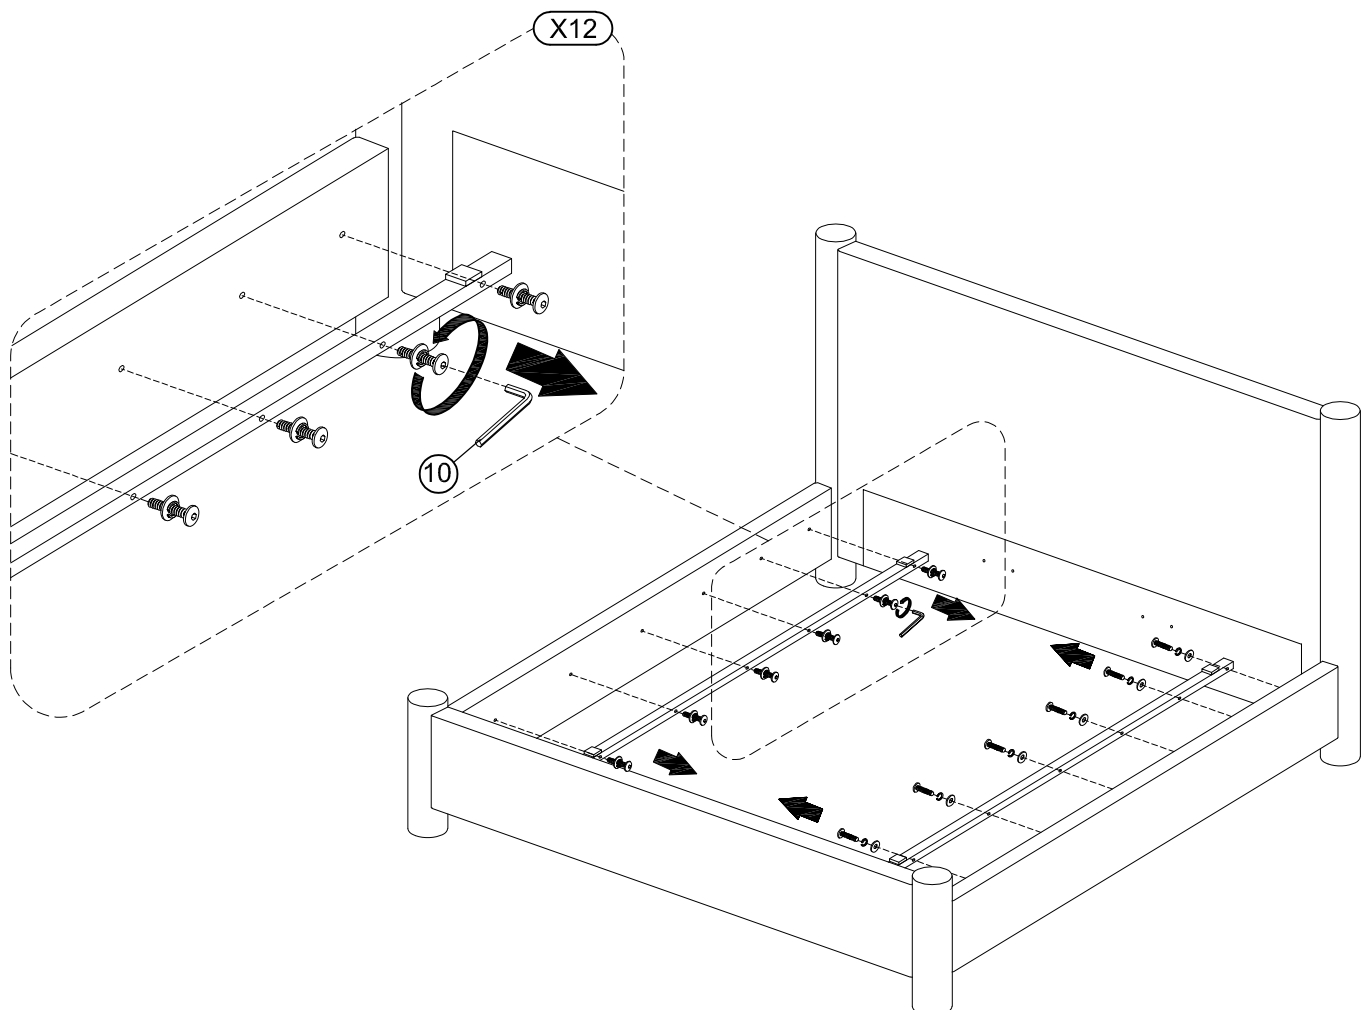

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

BURKE UPHOLSTERED FULL PLATFORM BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

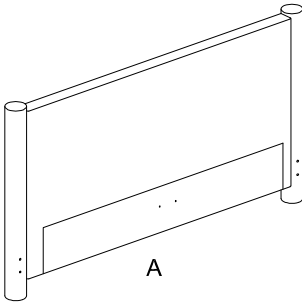

A

BOX#2

B. FOOTBOARD LEG

2 PCS

C. FOOTBOARD


1 PC

D. CENTER SLAT SUPPORT CLEAT


2 PCS

E. SLAT ROLL

1 SET




B

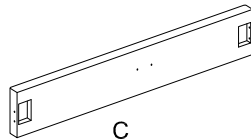

C



D

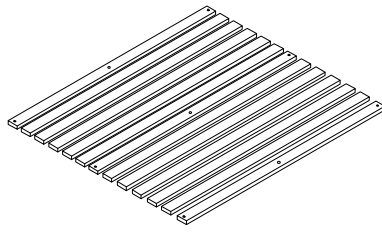

E

BOX#3

F. SIDE RAIL


2 PCS

G. CENTER SLAT SUPPORT


1 PC

H. SUPPORT LEG

4 PCS

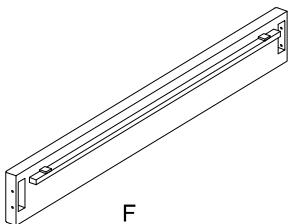

F

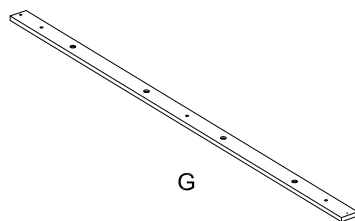

G





H

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (5/16"x 3-1/2")		12 PCS
2	ALLEN BOLT (5/16"x 2-1/2")		4 PCS
3	ALLEN BOLT (1/4"x 1-1/4")		3 PCS
4	FLAT WASHER (5/16")		16 PCS
5	FLAT WASHER (1/4")		3 PCS
6	LOCK WASHER (5/16")		16 PCS
7	LOCK WASHER (1/4")		3 PCS
8	HEX NUT (5/16")		12 PCS
9	PHILLIPS SCREW (M4 x 32mm)		8 PCS
10	ALLEN KEY (5/16")		1 PC
11	WRENCH		1 PC
12	CONNECTING BRACKET		6 PCS

FULLY ASSEMBLED

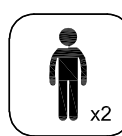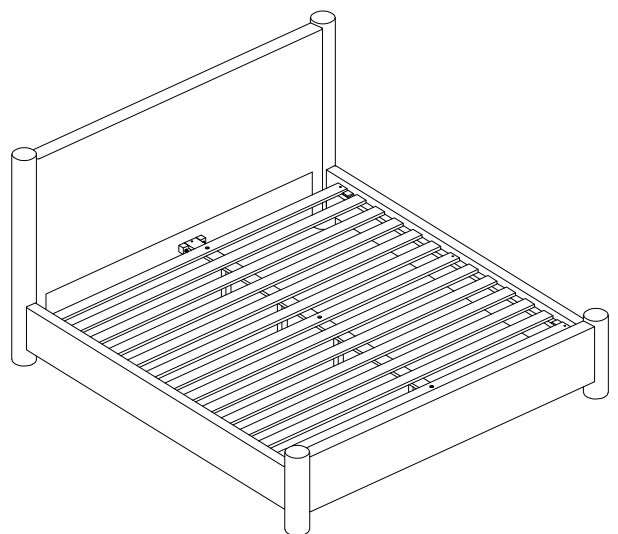


BURKE UPHOLSTERED FULL PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 1:

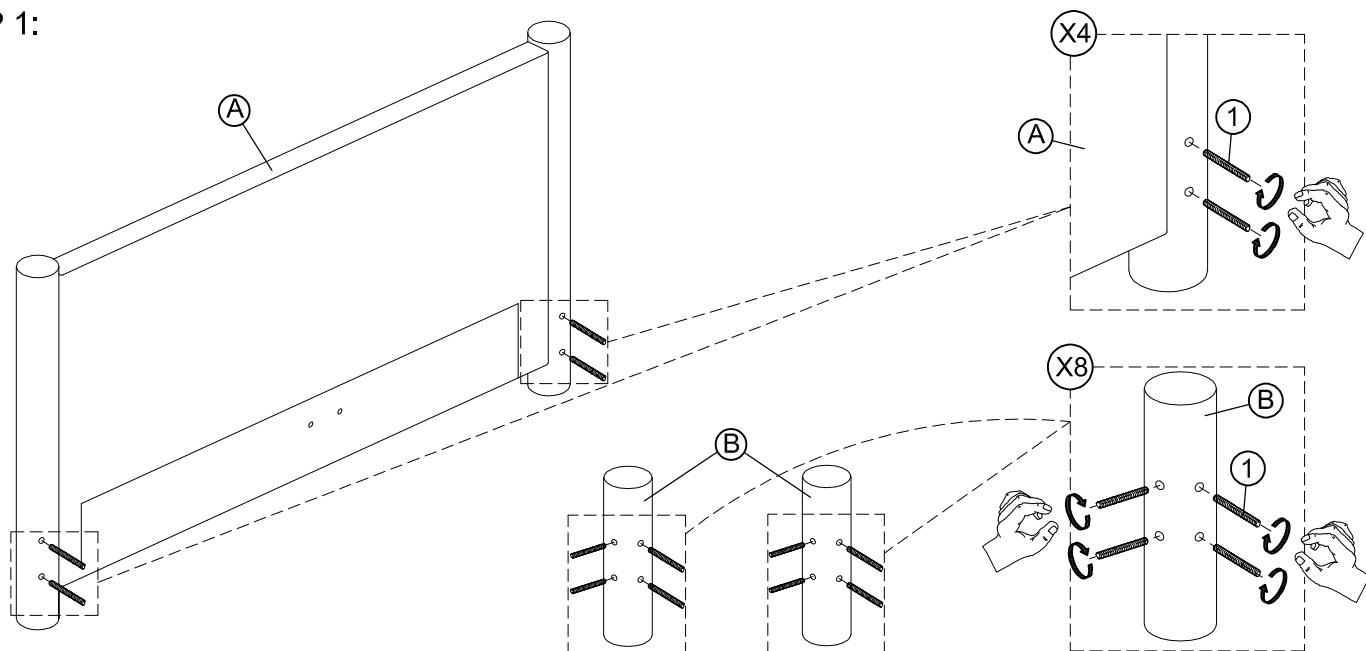

STEP 2:

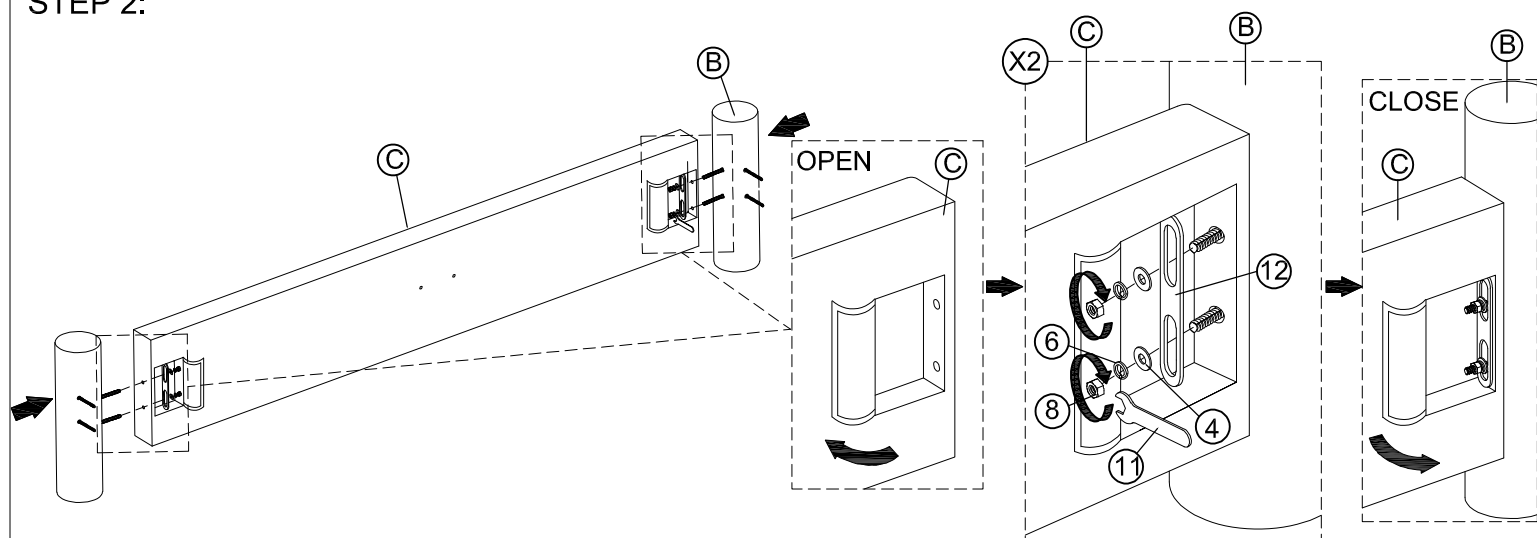

STEP 3:

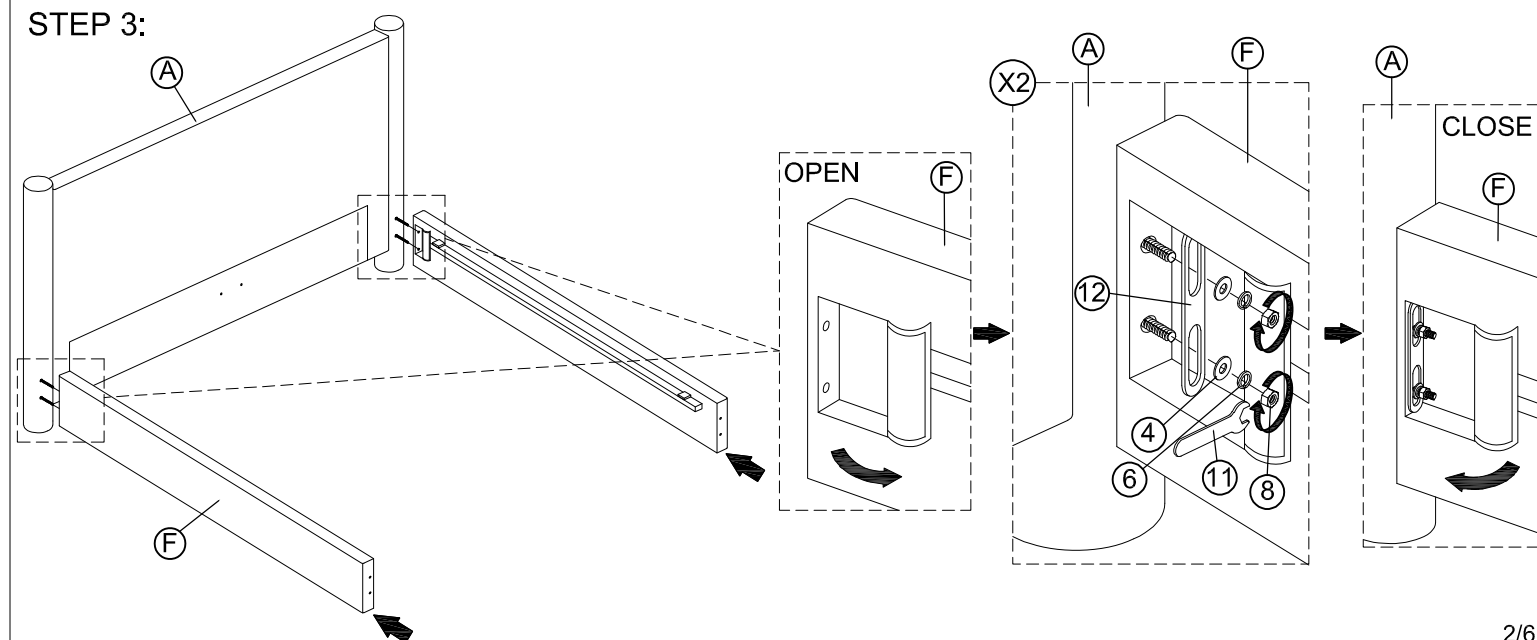


BURKE UPHOLSTERED FULL PLATFORM BED

ASSEMBLY INSTRUCTIONS




STEP 4:

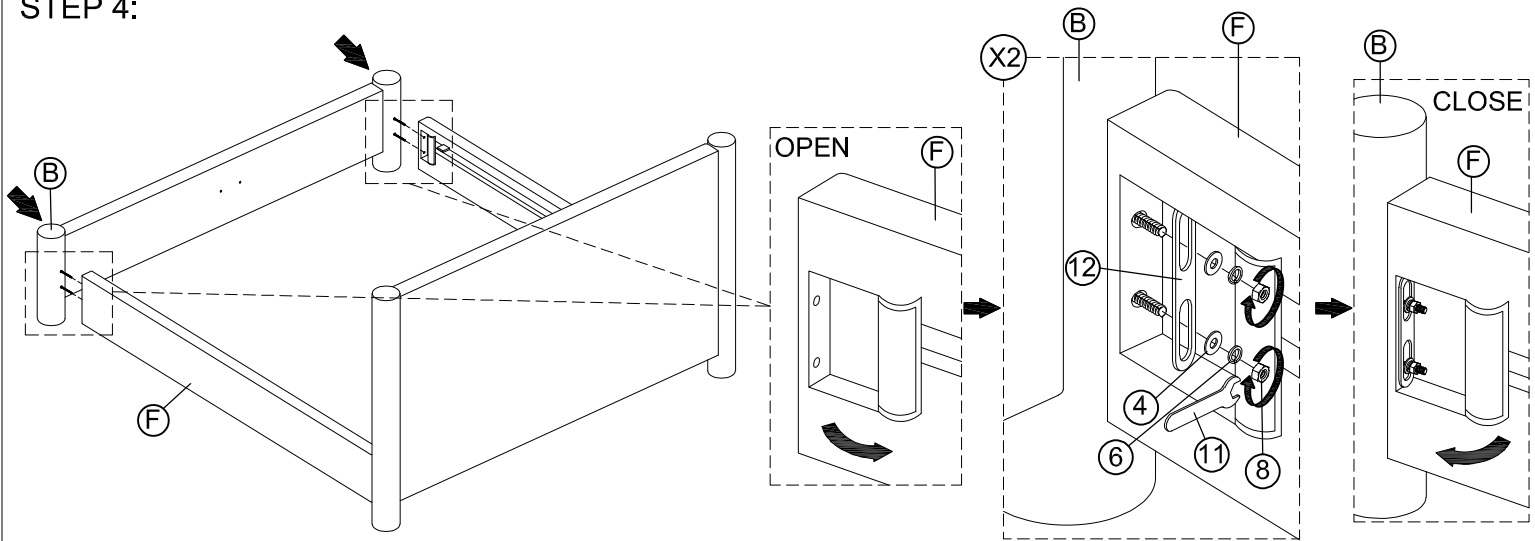


STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5-9 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5.

STEP 5:

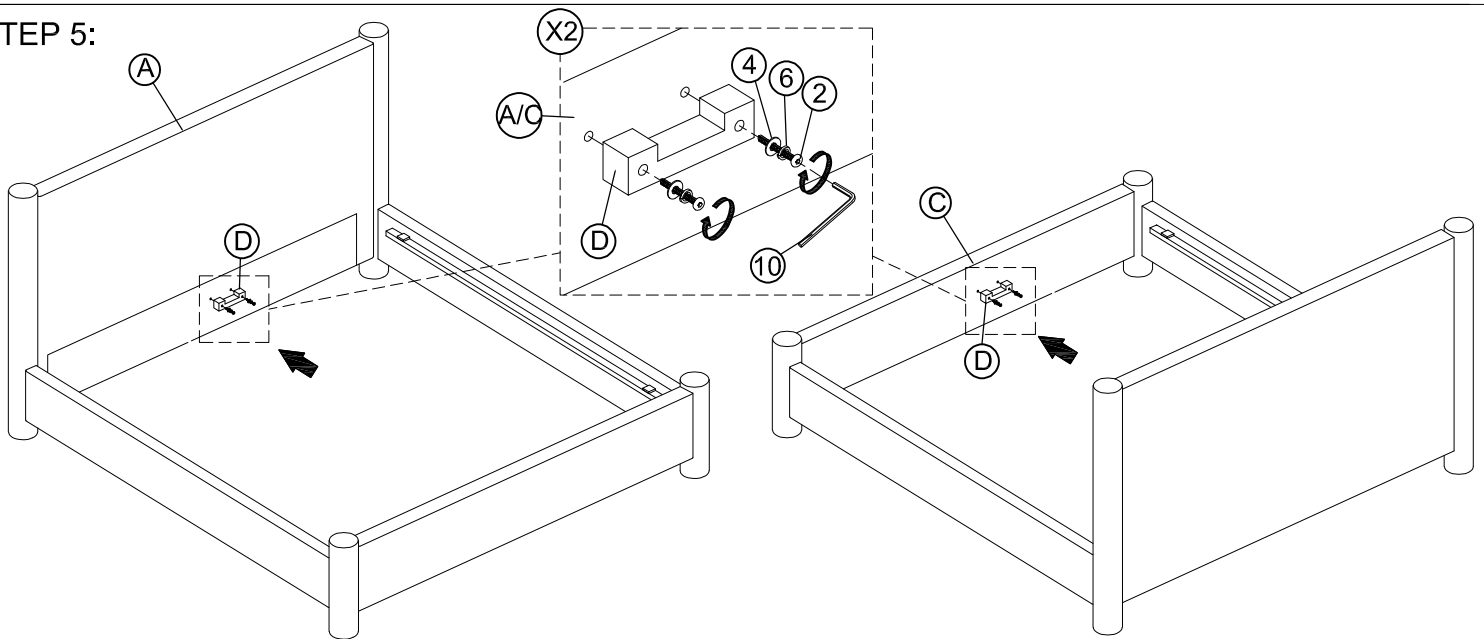

STEP 6:

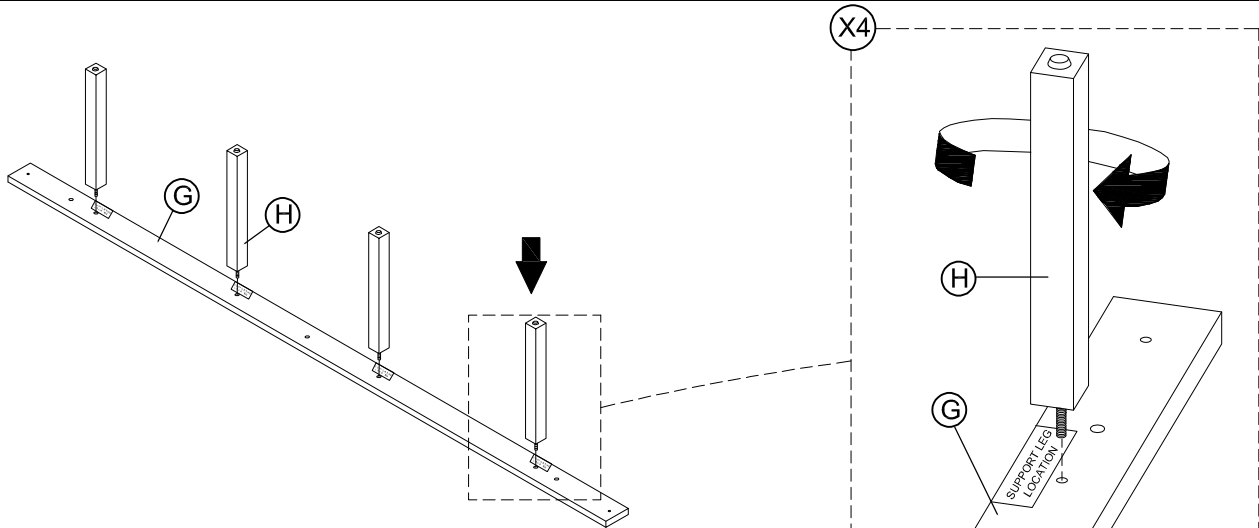


BURKE UPHOLSTERED FULL PLATFORM BED


ASSEMBLY INSTRUCTIONS




STEP 7:

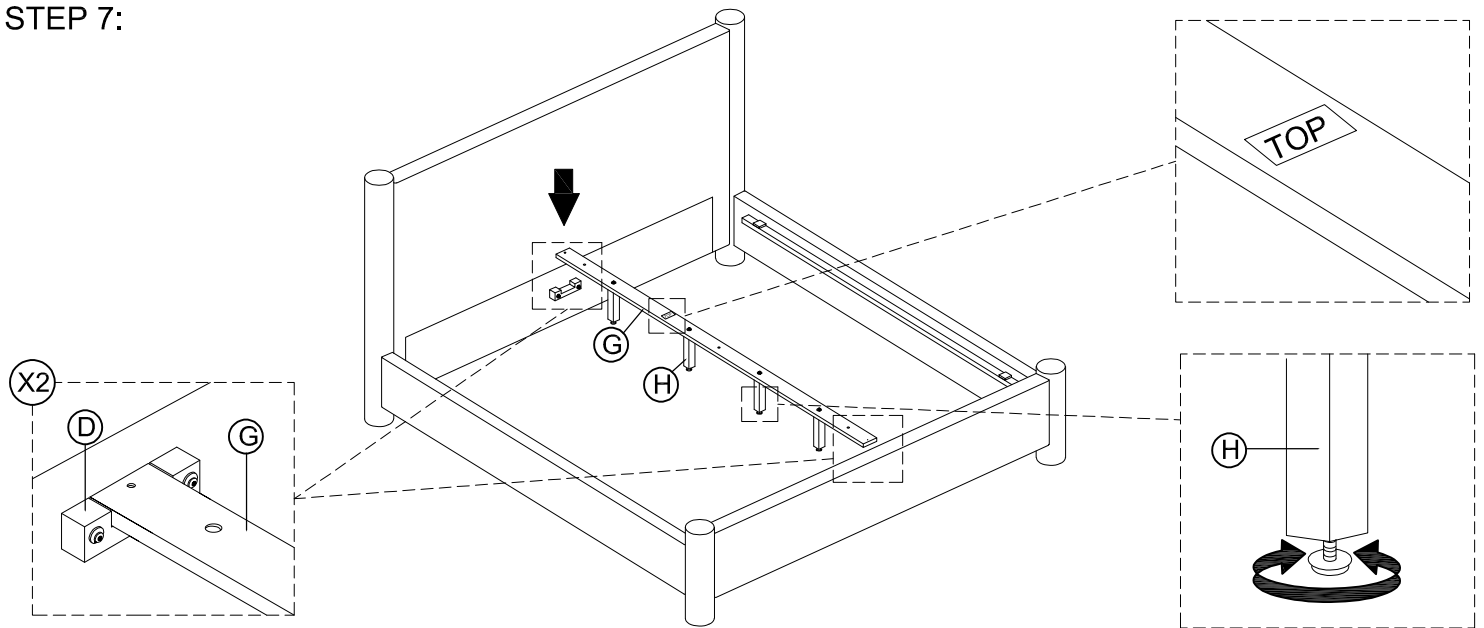

STEP 8:

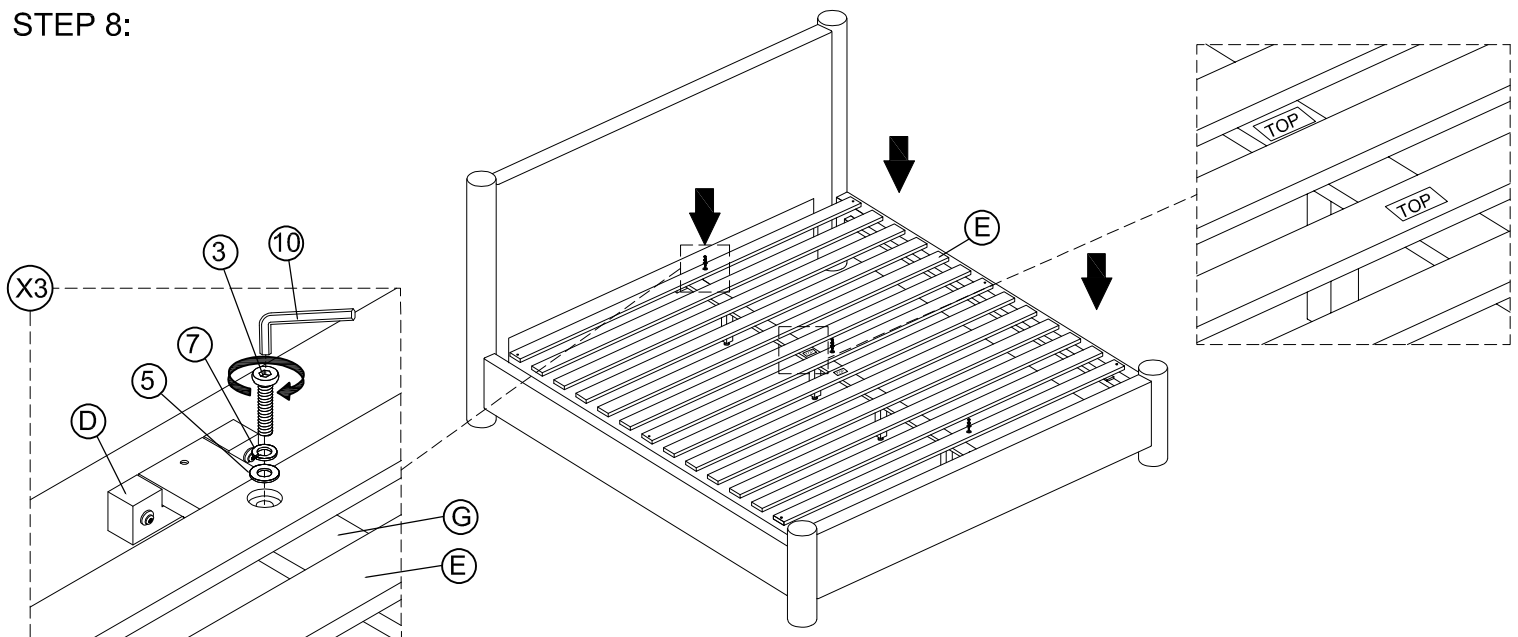


STEP 9:

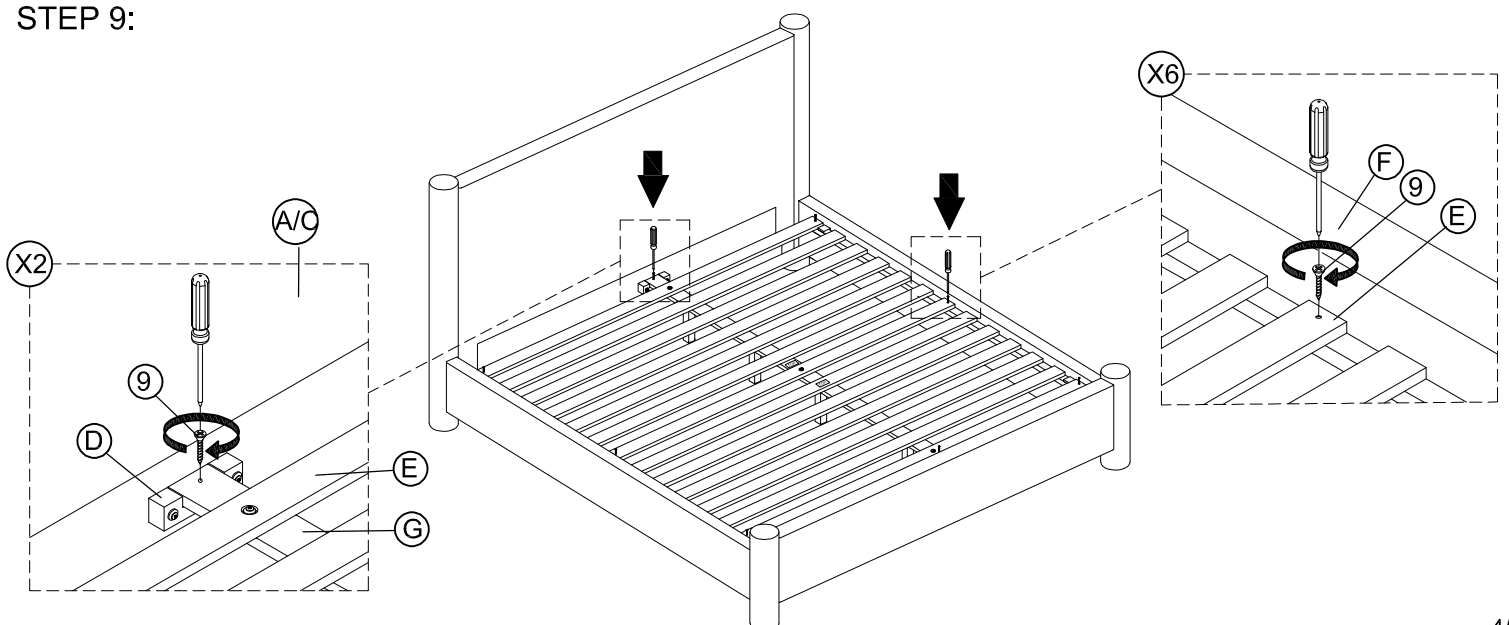

BURKE UPHOLSTERED FULL PLATFORM BED

ASSEMBLY INSTRUCTIONS

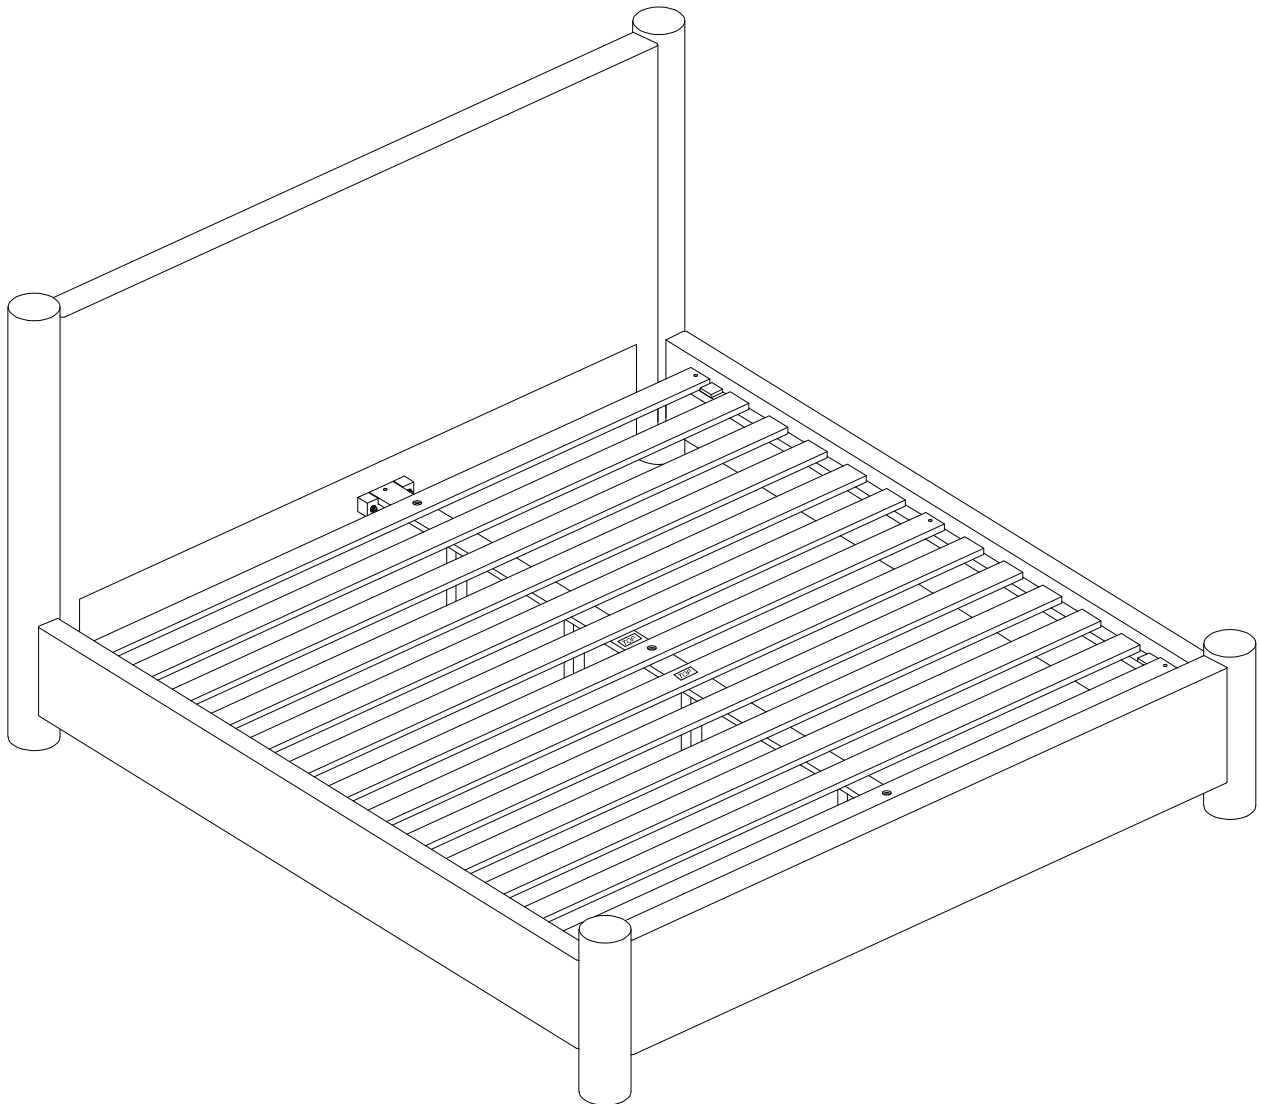


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

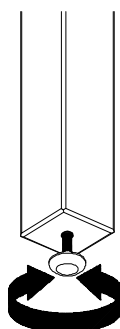

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

BURKE UPHOLSTERED FULL PLATFORM BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. CENTER SLAT SUPPORT CLEAT	2 PCS
E. SLAT ROLL	1 SET
G. CENTER SLAT SUPPORT	1 PC
H. SUPPORT LEG	4 PCS

STEP 1:

USE ALLEN KEY (10) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

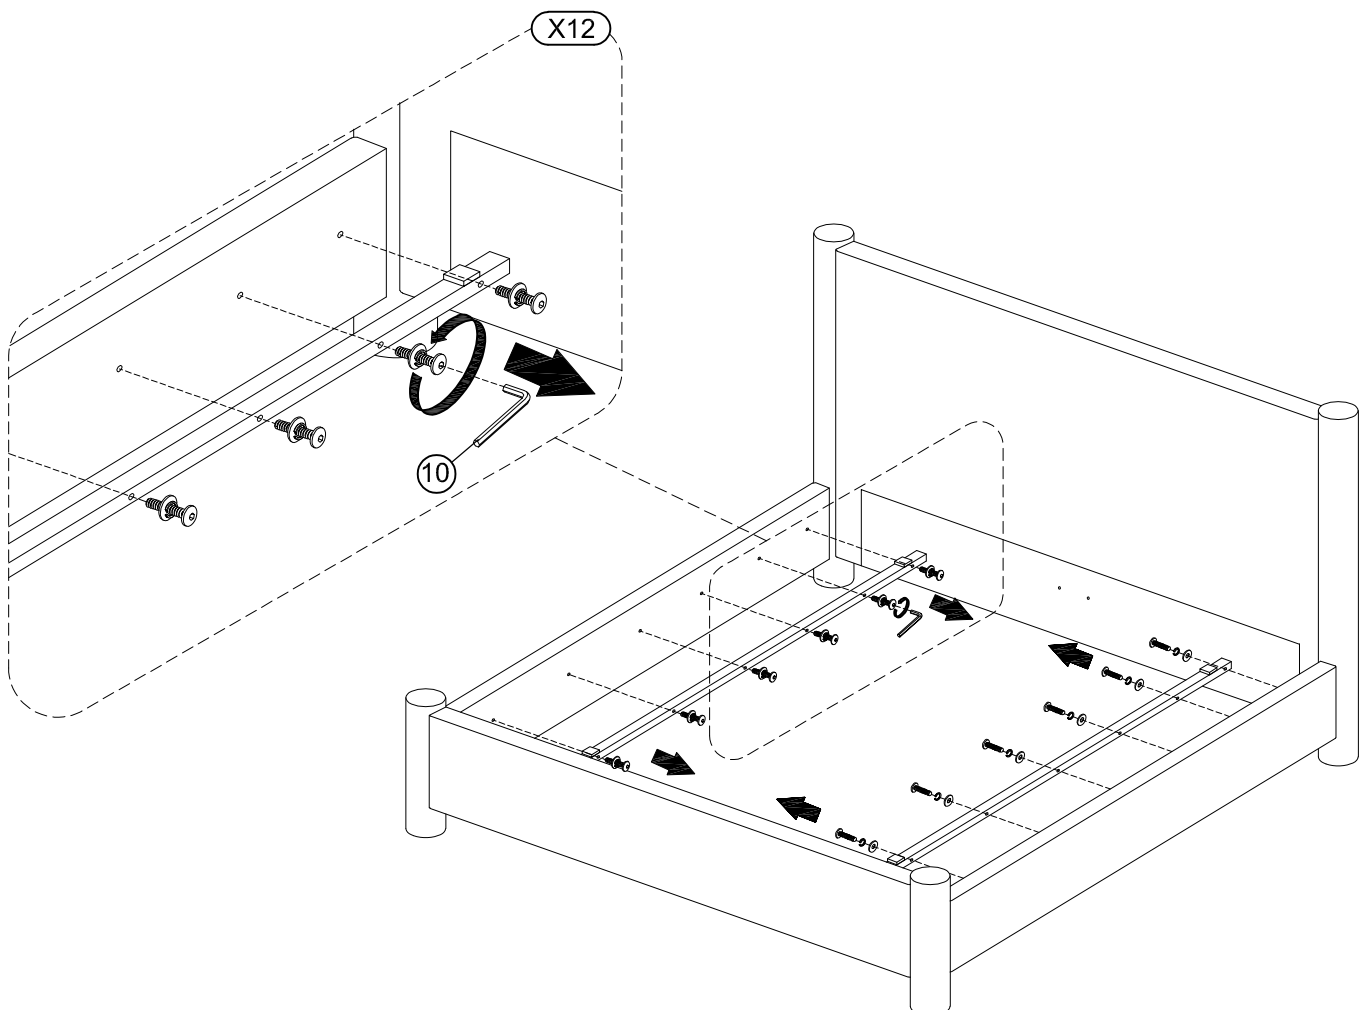

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION