


PREPARATION

1. Record your model number for future reference.
2. **DANGER: Risk of electric shock.** To avoid electric shock, the power must be turned off at the circuit breaker or fuse box before beginning the installation procedure.
3. **DANGER: Risk of electric shock.** To avoid electric shock, the outlet box must be properly grounded.
4. **Important Information.** Inspect the product for any damages. This product is for indoor use only. Observe all local codes.
5. Your product may appear different than the one illustrated. The installation procedures remain the same.

Please see next page for a larger installation image

TOOLS AND MATERIALS NEEDED

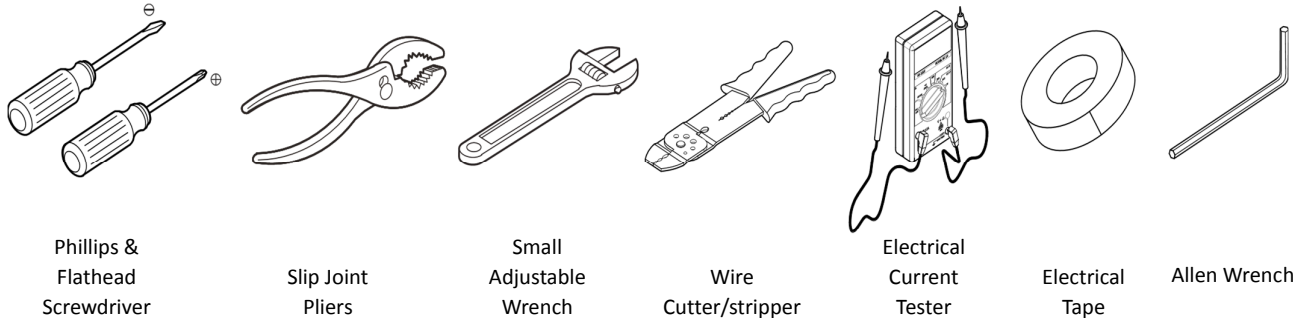

FIXTURE INSTALLATION

1. Remove the fixture and parts bag(s) from the carton. Put them onto a clean and soft cloth to protect finish. Confirm all parts are included.
2. To adjust length of cord, loosen the set screw (G) on the canopy (D) until the cord can slide. Be careful not to remove the set screw. Adjust length of cord to set fixture at desired height. Then tighten set screws (G); be careful not to pierce wiring.
3. Slide safety clip (I) down cord to touch canopy. Do not damage the cord insulation layer.
4. Cut excess cord to minimum 6" beyond canopy (D).
 - a) Trim cloth 2" from the end.
 - b) Strip insulation 5/8" from end without cutting copper wire.
 - c) Twist each copper wire individually.
5. Attach mounting plate (B) onto outlet box with screws (C). Ensure the direction of ground screw (J) as shown.
6. **NOTICE:** To avoid short circuit, make sure wires are not exposed. Fasten fixture green or bare ground wire to the green or bare copper wire in outlet box with wire nut (A) or fasten onto ground screw (J) on mounting plate. Fasten fixture white wire to the white wire in outlet box with wire nut (A). Wrap the wire connector with electrical tape so that the tape seals the end of wire nut (A), see diagram.
7. **NOTICE:** To avoid short circuit, make sure wires are not exposed. Fasten the fixture black wire to the black wire in outlet box with wire nut (A). Wrap the wire connector with electrical tape so that the tape seals the end of wire nut (A), see diagram.
8. Tuck wires carefully inside outlet box. Secure the canopy (D) onto mounting plate (B) by aligning holes on mounting plate (B) with holes on canopy (D) then securing by installing screws (H) through both the canopy (D) and mounting plate (B).
9. **NOTICE:** Do not exceed recommended wattage. Install lamp(s). Rated **Max 60 W, Type G/T/A/B.** (Bulb(s) not included).
10. Install glass (E) onto glass holders with screws (F).
11. Restore power to circuit at breaker or fuse box.

