


READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION:

It is the responsibility of the installer to meet all code and safety requirements, and to obtain all required building permits. The railing installer should determine and implement appropriate installation techniques for each installation situation. VISTA Railing Systems Inc, its distributors and dealers shall not be held liable for improper or unsafe installations. VISTA Railing Systems posts must always be secured to the sub structure and should never be attached to only the surface material (ie deck board). Failure to follow all of these instructions could result in serious injury or death.

Installation Instructions

1. Welded panel section can be trimmed to fit a 48" or less opening. (Ex: Opening between posts is measured to 40" length)
2. Trim excess panel off the welded panel section of gate with miter saw. (Ex: 8" would be trimmed)
3. Slide Latch post side on. Secure latch post side to welded panel with the provided #10 TEK fasteners.
4. Secure hinge side to exterior post or wall using the provided appropriate fasteners.
5. Attach catch using #10 TEK fasteners to other exterior post or wall to secure the latch to closed position.

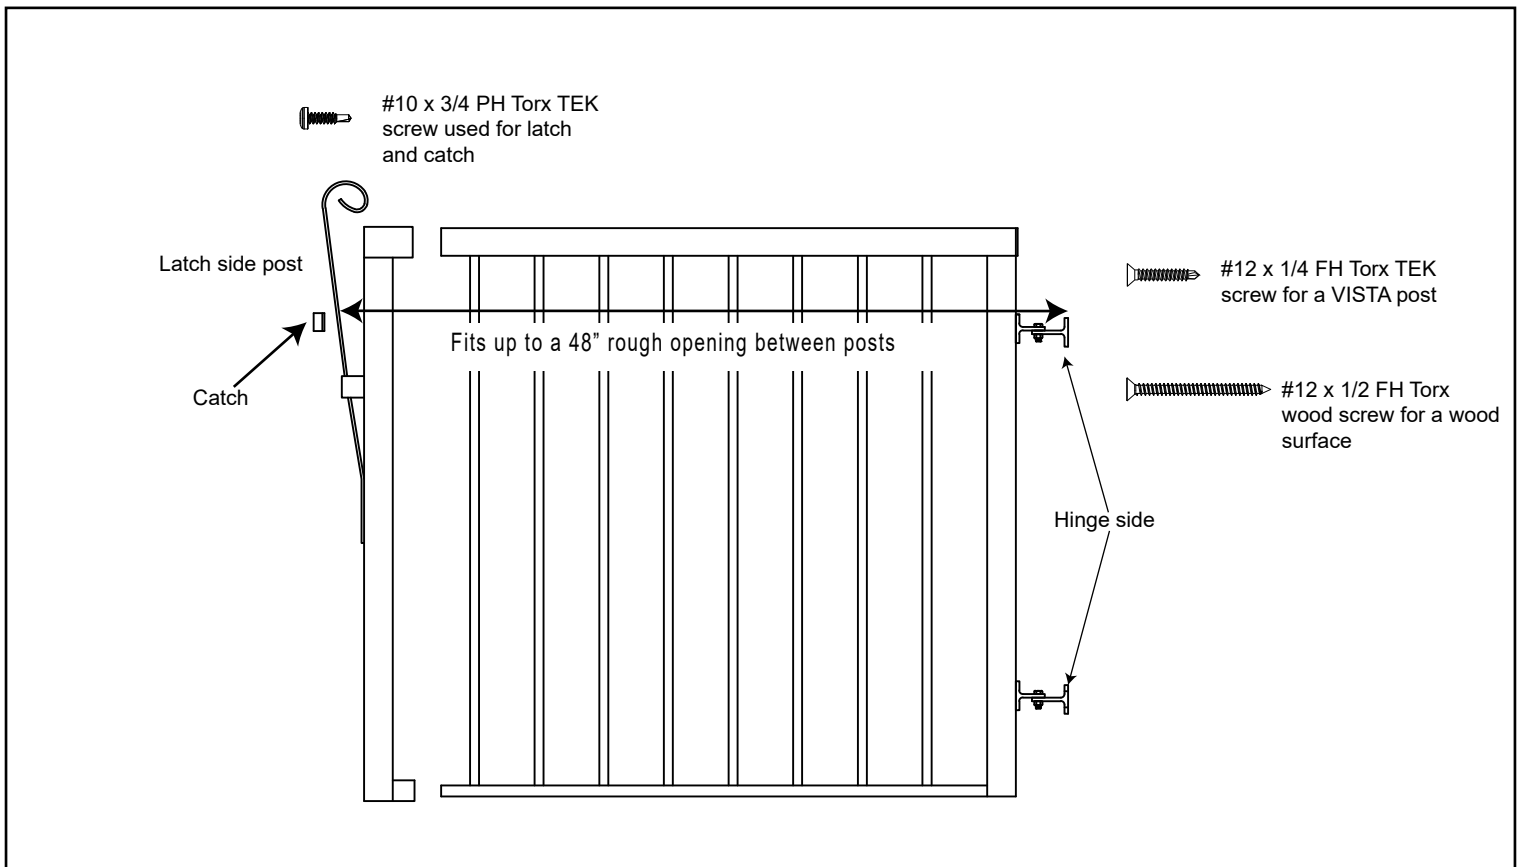

Tools & Materials Required:

- Handsaw 10" Miter Saw with thin (Kerf) Blade
- Electric Drill - 1/8" and 3/16"
- Drill Bits 3/8" Hex Head Driver
- Torx Screwdriver - T25 drive
- Robertson Screwdriver - #2
- Measuring Tape

Vista Railing Systems

Toll Free: 800-667-8247 or www.vistarailings.com
 Vista™ is a registered trademark of Vista Railing Systems Inc.
 Created July 2023 V1