Hardware™ Resources

IBPO14
Fold-Away Ironing Board - 14" Depth

Installation Instructions

Scan QR or visit link to view insallation video
https://delivr.com/2jxq7


IMPORTANT:

Before you begin, make sure you familiarize yourself with all the parts and fully read the instructions.

CUSTOMER SERVICE:

Toll-free customer help line available weekdays between 7:00am and 6:00pm Central Time at 800-463-0660.


TOOLS NECESSARY:




Screw Gun | Phillips Screwdriver | Tape Measure

NOTE: If screw gun has a clutch, set to lowest setting so as not to over tighten and/or strip screws.


PARTS IDENTIFICATION:

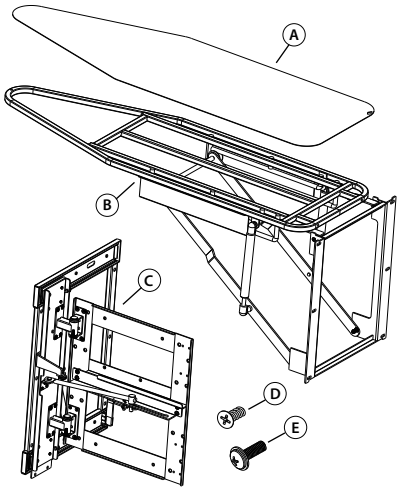


A	Ironing Board Cloth Cover	1X
B	Ironing Board Frame	1X
C	Pull and Swing Out Mechanism	1X
D	M5 x 15 mm Flanged Pan Head Machine Screw	6X
E	6.3 x 10.5 mm Flat Head Pozi Euro Screw	8X

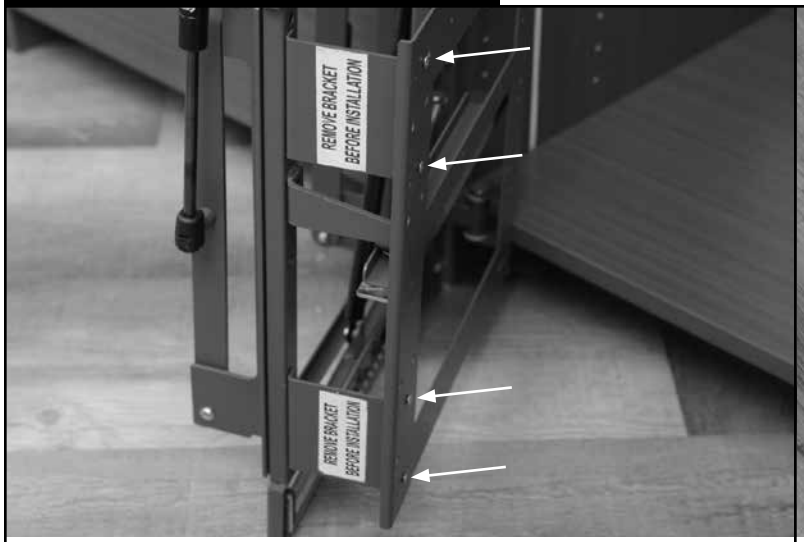


1 To prepare the unit for installation, remove all cable ties and packing materials. Remove the two metal brackets labeled "Remove Bracket Before Installation" (held by 2 screws each); these are for shipping and may be discarded.

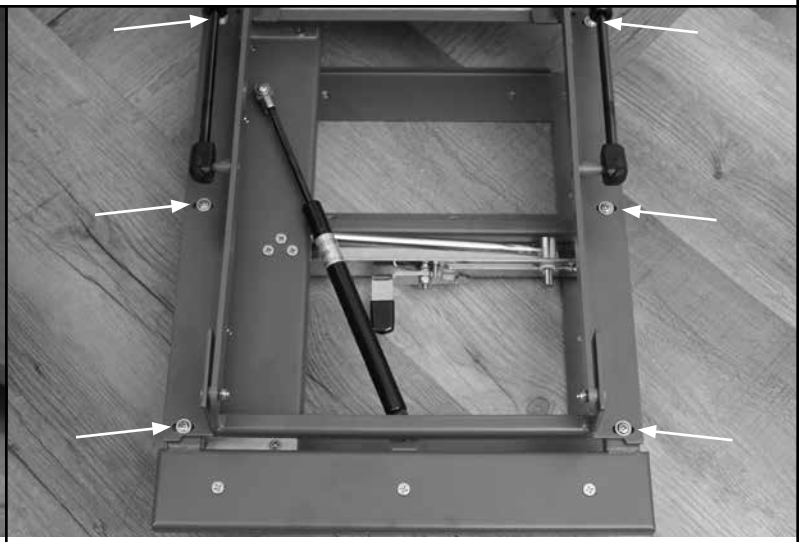

2 The unit ships configured for left-hand (LH) installation. To convert to right-hand (RH), remove the six **(D) M5 x 15 mm Flanged Pan Head Machine Screws** holding the **(C) Pull and Swing Out Mechanism** to the **(B) Ironing Board Frame.**

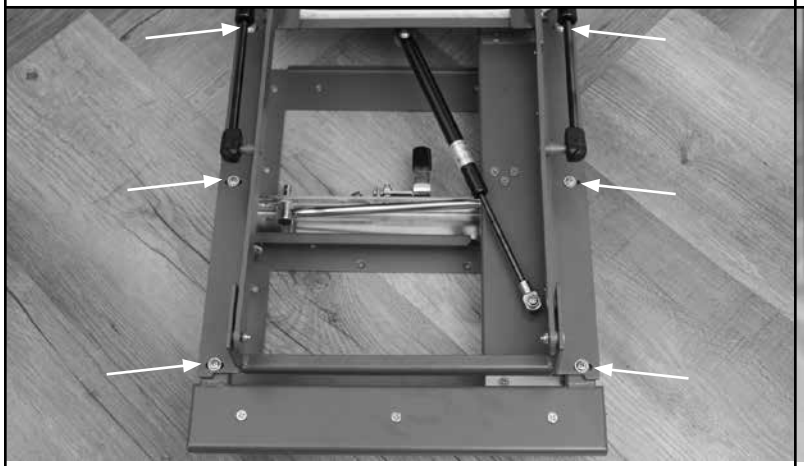

3 Rotate the **(C) Pull and Swing Out Mechanism** 180° and reinstall the **(B) Ironing Board Frame** using the screws that were removed in Step 2.

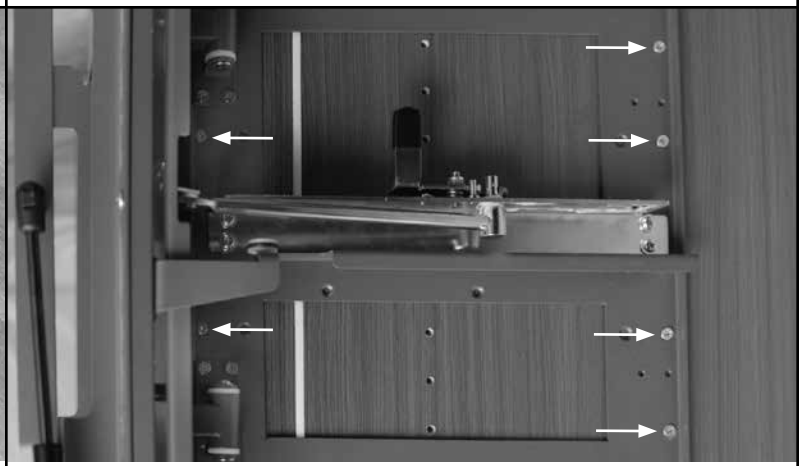

4 To install, extend and rotate the unit. Position the front two holes of the **(C) Pull and Swing Out Mechanism** at the front shelf-pin holes of the closet system at the desired height. For 14" deep NorthPoint closets, secure the **(C) Pull and Swing Out Mechanism** with six **(E) 6.3 x 10.5 mm Flat Head Pozi Euro Screws** into the shelf-pin holes as shown. For other closet systems, use the eight **(E) 6.3 x 10.5 mm Flat Head Pozi Euro Screws** provided and install in factory holes. If there are no factory holes, install 1" back from the front of the closet unit with customer provided screws.