

Rear Slide Bracket Installation Tool HR-TOOL-RBINST

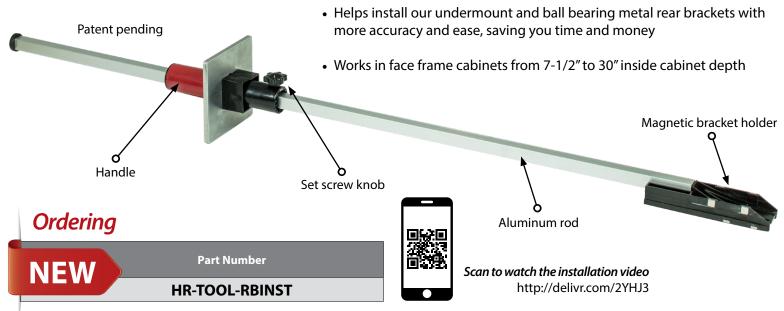




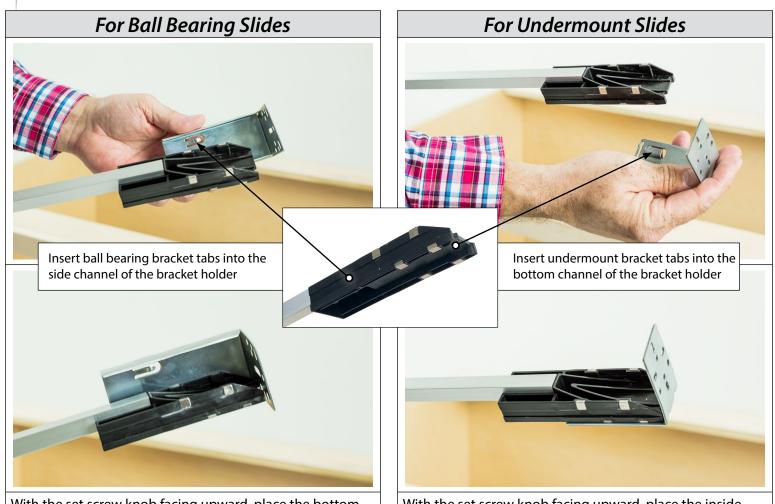

With the set screw knob facing upward, place the bottom of the magnetic bracket holder into the bottom channel of slide bracket. Make sure the bracket is square and pushed firmly against end of bracket holder. With the set screw knob facing upward, place the inside bottom of the slide bracket against the bottom of the magnetic bracket holder. Make sure the bracket is square and pushed firmly against end of magnetic bracket holder.

Step 2

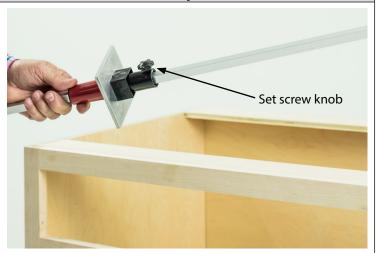

Make sure set screw knob is facing upward. Loosen set screw.

Step 4



Making sure slide bracket is firmly attached to end of tool, carefully extend aluminum rod to back of cabinet with other hand.

Step 6



Attach slide bracket with screws using a drill or screwdriver.

Step 3



With your hand, grasp installation tool handle and place it in the bottom left corner of drawer opening. Be sure that the handle is flush and square against face frame.

Step 5



Keeping pressure on aluminum rod and bracket, tighten set screw knob for quicker installations of same cabinet depth.

Step 7



Slide out installation tool. Repeat process on right side.