



IMPORTANT:

Before you begin, make sure you familiarize yourself with all the parts and fully read the instructions.

CUSTOMER SERVICE:

Toll-free customer help line available weekdays between 7:00am and 6:00pm Central Time at 800-463-0660.


TOOLS NEEDED:



NOTE: If screw gun has a clutch, set to lowest setting so as not to over tighten and/or strip screws.

⚠ WARNING:


- Read installation instructions thoroughly. Check that all components are included prior to beginning installation.
- Use the proper tools specified by the installation instructions.
- Install all components in accordance with installation instructions.
- It is strongly recommended that Installation or rearrangement of components be completed by a trained professional. Failure to adhere to this warning may result in personal injury or damage to the system or other property.
- Do not use damaged parts.
- Do not exceed product weight limitations.
- Contains small parts. Keep out of reach of children.

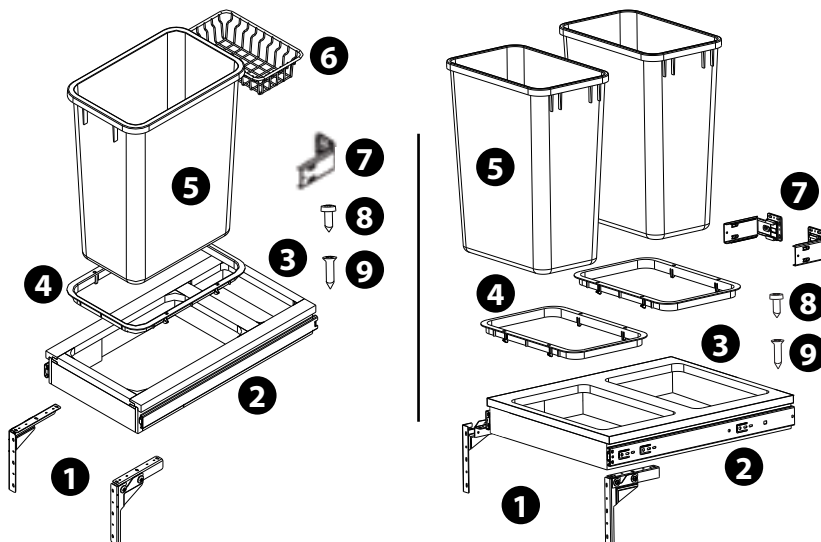

1. Door brackets
2. Ball Bearing Slides
3. Wood frame
4. Top Mount Ring (remove for 50 qt. cans)
5. Trash can (Sold separately on some models)
6. Wire chrome basket (not included with Double)
7. Rear mounting bracket
8. #6 x 1/2" pan head screw
9. #8 x 7/16" truss head screw

Product	W	D	H
CAN-TMSC-12	11-13/16"	21-5/8"	3-1/4"
CAN-TMDSC-18	17-13/16"	21-5/8"	3-1/4"
CAN-TMDSC-21	20-13/16"	21-5/8"	3-1/4"

1

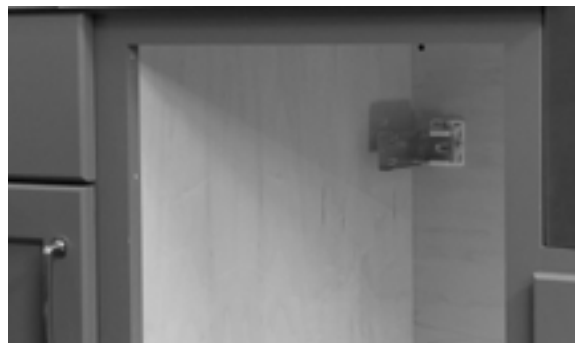



For face frame cabinets, using a framing square and level, measure a minimum of 14" (35qt cans) or 18" (50qt cans) from cabinet floor to the bottom of the rear mounting bracket, and use #8 x 7/16 truss head screws to secure to rear of cabinet

2




Insert slide into rear mounting bracket. Secure front of slide cabinet member at same height as rear of slide, to the side of the face frame with 3/8" set back from front of cabinet using #8 x 7/16" truss head screws that are provided.

3

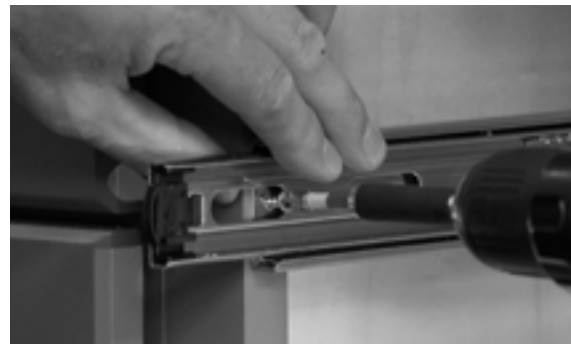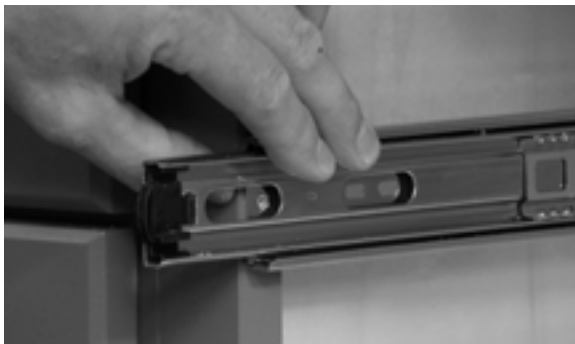

For face frame cabinets, proceed to Step 4. Frameless cabinets: Secure cabinet slide member directly to the inside of the cabinet at a minimum of 14" (35 qt.) or 18" (50 qt.) from cabinet floor. Set back the front of slide 3/8" from the front of cabinet and secure with #8 x 7/16" truss head screws that are provided.

4

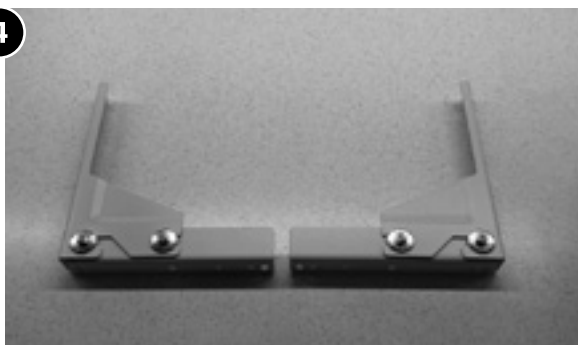

Assemble door brackets as shown and install door bracket onto frame using the pre-drilled holes and #6 x 1/2" pan head screws, provided.

5



Install wood unit (with slides attached) into cabinet, engaging drawer member slides into cabinet member slides. Push unit until it locks in place.

6



Install door to unit. To find proper door location, measure the distance from the bottom of the door bracket to the bottom of cabinet floor or face frame, include door overlay. Transfer this measurement to the door and attach door using #6 x 1/2" pan head screws. If using 35 qt. trash cans install Top Mount Ring(s) into can opening. Rings are not used with 50 qt. trash cans.