




IMPORTANT:

Before you begin, make sure you familiarize yourself with all the parts and fully read the instructions.

CUSTOMER SERVICE:

Toll-free customer help line available weekdays between 7:00am and 6:00pm Central Time at 800-463-0660.

TOOLS NECESSARY:

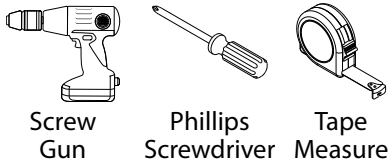


Screw Gun Phillips Screwdriver Tape Measure


NOTE: If screw gun has a clutch, set to lowest setting so as not to over tighten and/or strip screws.

PARTS IDENTIFICATION:

Pre-Assembled Rollout and Base Unit
#6 x 1" Coarse-Thread Wood Screws (x8)



U-Shaped
Rollout Drawer

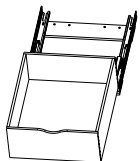

Rollout Drawer



Double-Drawer
Rollout



Press the clips under the rollout unit to release the pre-installed slides, separating the unit from the base. Lift the unit upward and outward.

NOTE: Before installing the rollout, you may want to remove the cabinet door if additional clearance is needed.



Place the base inside the cabinet. Center it left to right, ensuring proper clearance for hinge or door protrusion.

- a. **Face Frame Applications:** Pull the plywood runner to the front of the cabinet until it is tight against the back of the face frame.*
- b. **Frameless or Inset Applications:** Position the wooden runner with a 3/4" setback from the front of the cabinet.

*For narrow door applications, unit may have to be placed inside and positioned with slides directly behind face frame.



Secure the base unit by screwing through the pre-drilled holes in the plywood runners with provided coarse-thread wood screws #6 x 1". For standard and U-shaped drawer boxes, use 4 screws. For larger rollouts, use 8 screws. Be sure to put one screw into each pre-drilled hole.





Place the organizer onto the undermount slides. Push the unit into the cabinet until you hear the clips lock into place. Cycle the unit in and out of the cabinet to ensure proper operation and clearances.

NOTE: If you removed the cabinet door, reinstall it at this time.



Rollouts with Bottle Grids: The Bottle Grid can be rotated 180 degrees within the rollout to position the differently sized cubby holes in the most convenient locations. The Bottle Grid can be moved to the left or right side of the bottom drawer in the 21" and 27" rollouts. Place a divider against the inside edge of the grid to secure it.



Rollouts with Dividers: Each of the dividers can be repositioned within the bottom drawer using the pin-and-groove system. To remove a divider, lift it straight upward. Pins can be placed in any of the pre-drilled holes. When all 4 pins have been moved, slide the divider downward onto the pins.