



ASSEMBLY INSTRUCTION 27836 END ASSEMBLIES WITH SHELVES

HARDWARE LIST			
Part	Item	Description	Qty
1.		Bolt M8 x 30mm	25 pcs
2.		Flat Washer 8 x 20	25 pcs
3.		Wrench	01 pcs

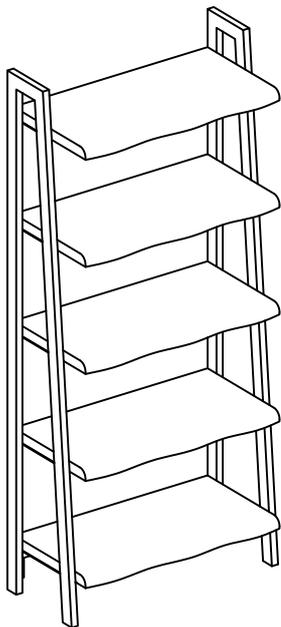


Step #1

1. Place both metal frames in horizontal position and fix metal pipe at the bottom

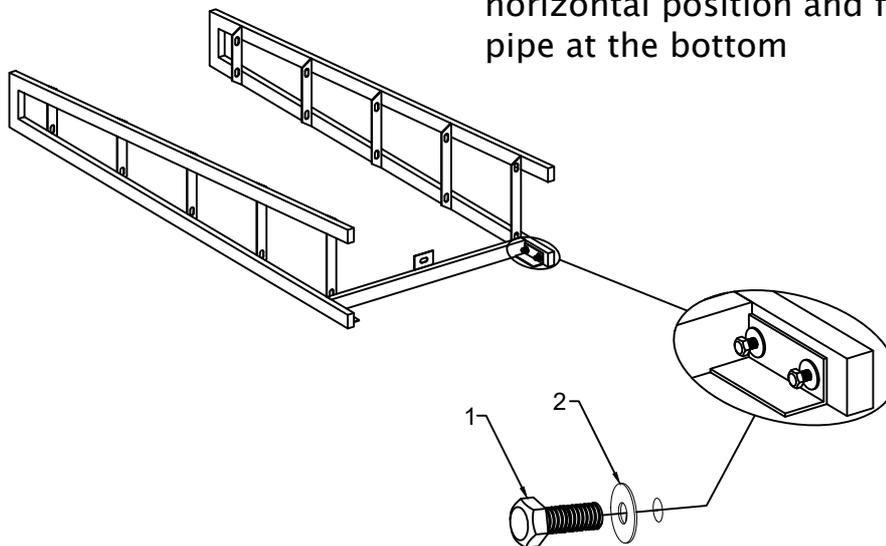

Step #2

Fix wooden shelf at bottom & top first

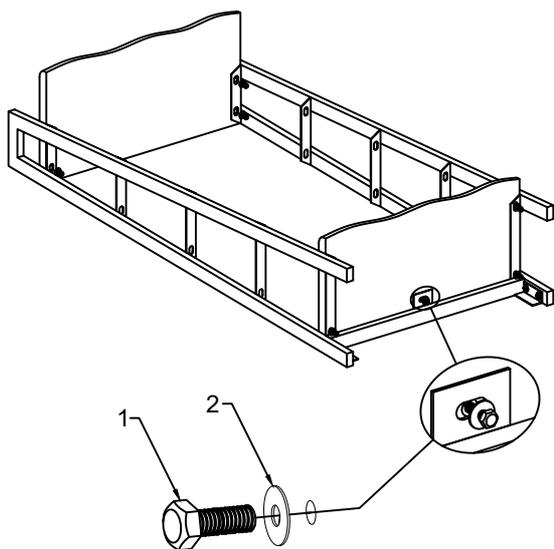

Step #3

After fixing top and bottom wooden shelf fix other shelf and tighten all the bolt firmly

