

## PLASTIC WIRE MANAGERS

PART NUMBER	DESCRIPTION	DIMENSIONS
<b>T-WM-90-Color</b>	90° Plastic Wire Manager used to neatly conceal wire. Available in Black (BK) or White (WT).	90" x 3/4" x 3/8" 2286mm x 19mm x 9mm
<b>T-WM-EC-Color</b>	Elbow Connector to use with Plastic Wire Manager. Use to continue Plastic Wire Manager around the corner for an installation. Available in Black (BK) or White (WT).	1-1/2" x 1-1/2" x 1/2" 38mm x 38mm x 13mm
<b>T-WM-ISC-Color</b>	In-line Splice Connector. Used to connect two Plastic Wire Managers. Available in Black (BK) or White (WT).	1" x 7/8" x 7/16" 25mm x 22mm x 11mm

## FEATURES

- Easily conceal wires for a clean installation
- Pre-installed adhesive on the back for easy mounting
- 3-year limited warranty

## TECHNICAL INFORMATION


<b>Mounting</b>	Included adhesive backing or screws (not included)
<b>Environment</b>	Dry location
<b>Construction Material</b>	Plastic
<b>Warranty</b>	3 years

## INSTALLATION INSTRUCTIONS


### NOTE

- When installing with adhesive, be sure to evenly apply pressure across entire Wire Manager to ensure adhesive properly sticks to mounting surface.


### MOUNTING A WIRE MANAGER

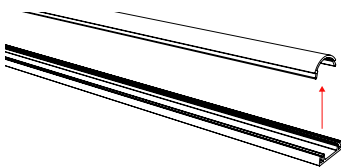

1. Cut the Wire Manager to the length needed. Remove the cover piece.

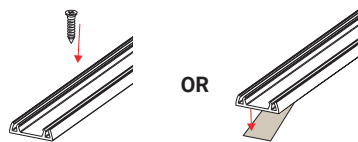


2. Install base channel of Wire Manager by using the included adhesive backing or screws.

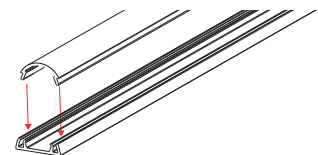


3. Run wire, then snap the dome-shaped cover in place. Alternatively, snap the cover over the installed base and feed wire through.

**USING SPLICE CONNECTOR**

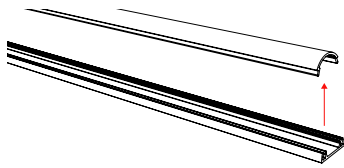


1. Cut the Wire Manager to the length needed. Remove the cover piece.

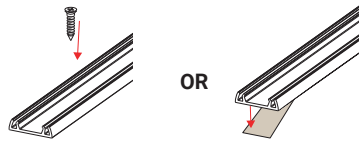


2. Peel the adhesive backing off the bottom of the Wire Manager.




3. Peel the included foam tabs off the paper and stick them to the bottom of the Wire Manager, placing one at each end. Remove the backing from the foam tabs.

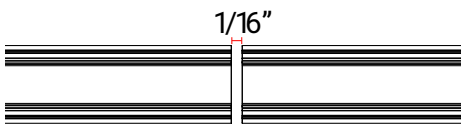

4. Mount the first Wire Manager in place. Leaving a 1/16" (1-2mm) gap between the two pieces, install the second Wire Manager.

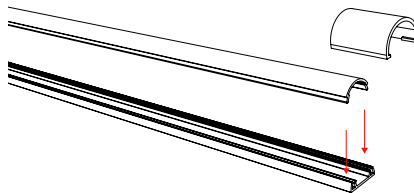


5. Snap the cover onto the first bottom piece and install the Splice Connector.

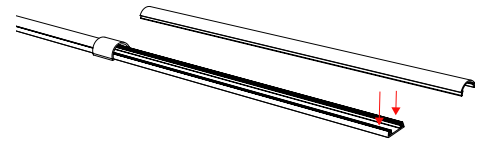


6. Install the cover of the second bottom piece and slide under the splice connector.

**USING ELBOW CONNECTOR**

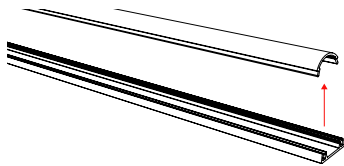

1. Cut the Wire Manager to the length needed. Remove the cover piece.

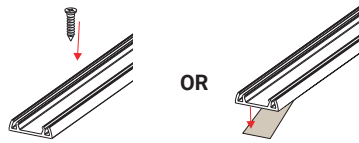


2. Peel the adhesive backing off the bottom of the Wire Manager.




3. Peel the included foam tabs off the paper and stick them to the bottom of the Wire Manager, placing one at each end. Remove the backing from the foam tabs.



4. Stick the two wire managers to be 90 degrees vertically.

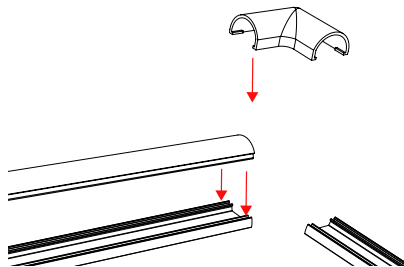

5. Snap the cover onto the first bottom piece and install the Elbow Connector

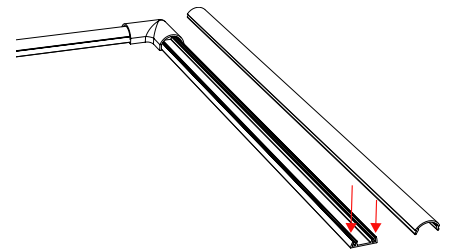

6. Install the cover of the second bottom piece and slide under the Elbow Connector.