


ASSEMBLY INSTRUCTION


47"W 2-DOOR TV STAND WITH 2 DRAWERS

A Top Panel

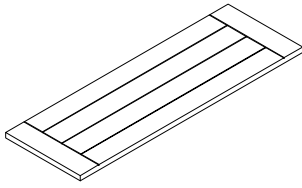


1pc

B Bottom Panel

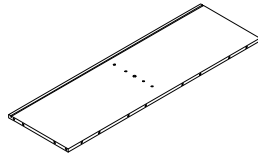


1pc

C Side Panel - L

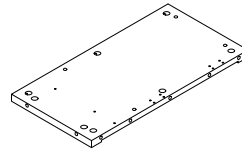


1pc

D Side Panel - R

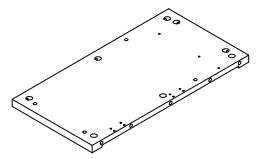


1pc

E Middle Panel

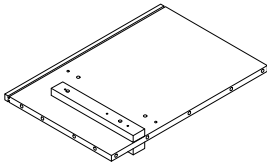


1pc

F Front Post - L

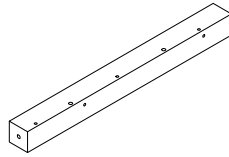


1pc

G Front Post - R

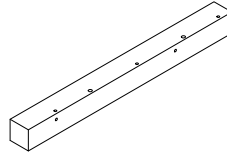


1pc

H Back Post - L

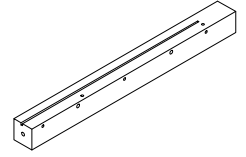


1pc

I Back Post - R

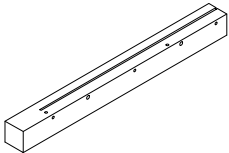


1pc

J Front Stretcher - L

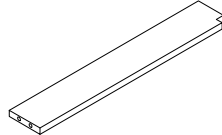


1pc

K Front Stretcher - R

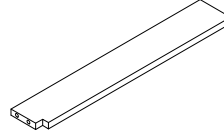


1pc

L Back Stretcher - L

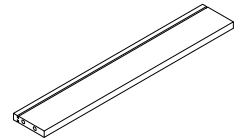


1pc

M Back Stretcher - R

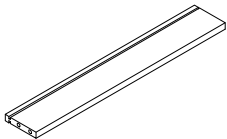


1pc

N Front Post - Middle

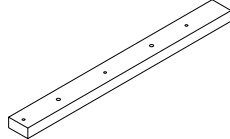


1pc

O Top Panel Trim

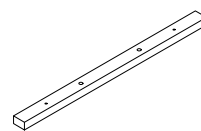

2pcs

P Bottom Panel Trim




2pcs

Q Support Leg




1pc

R Door Panel - L

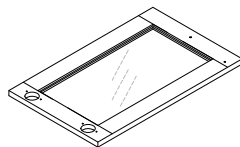


1pc

S Door Panel - R

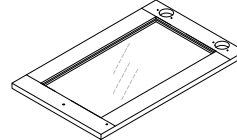


1pc

T Lower Back Panel

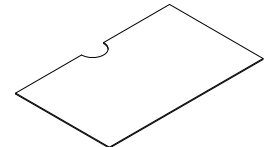


2pcs

U Upper Back Panel

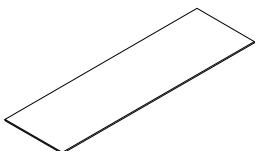


2pcs

V Drawer Front Panel

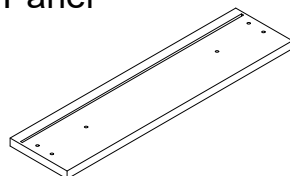


2pcs

W Drawer Side Panel - L



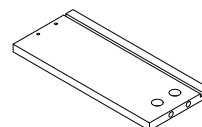






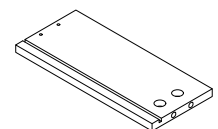
















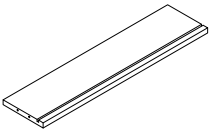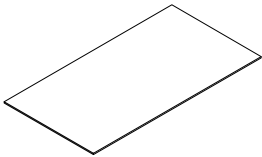
2pcs

X Drawer Side Panel - R

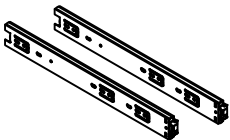

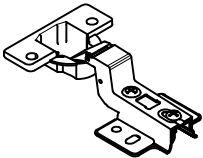
2pcs

Y Drawer Back Panel  2pcs	Z Drawer Bottom Panel  2pcs	AA Wood Dowel Ø8*30mm  38pcs	AB Nut Ø15*12mm  37pcs
AC Nut Ø15*9mm  8pcs	AD Bolt Ø5*25mm  45pcs	AE Knob Ø31*25mm  6pcs	AF Bolt Ø4*22mm  6pcs
AG Slide Rail  2sets	AH Screw Ø3.5*12mm  24pcs	AI Screw Ø4*30mm  8pcs	AJ Screw Ø5*25mm  4pcs
AK Hinge  4pcs	AL Screw Ø4*14mm  24pcs	AM Magnet Catch 44*16*12mm  2pcs	AN Screw Ø3.5*15mm  4pcs
AO Iron Sheet 30x22x1mm  2pcs	AP Screw Ø3*12mm  2pcs	AQ Screw Ø6*50mm  3pcs	AR Allen Key M4  1pc
AS Buckle  16pcs	AT Screw Ø3*17mm  16pcs	AU Glue  1pc	AV Screwdriver (Not Provided)  1pc

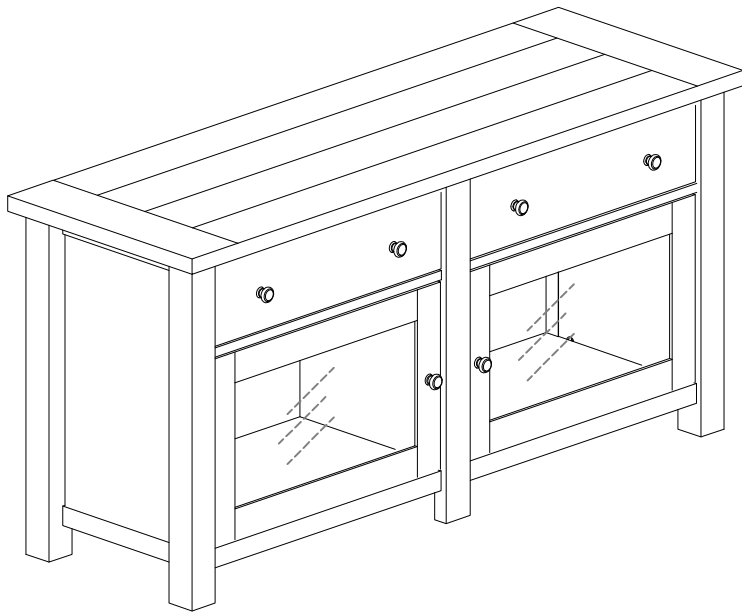


This first page, second and third page list all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


1 Insert Bolt (AD) into Top Panel (A) by Screwdriver (AV) as below shown.

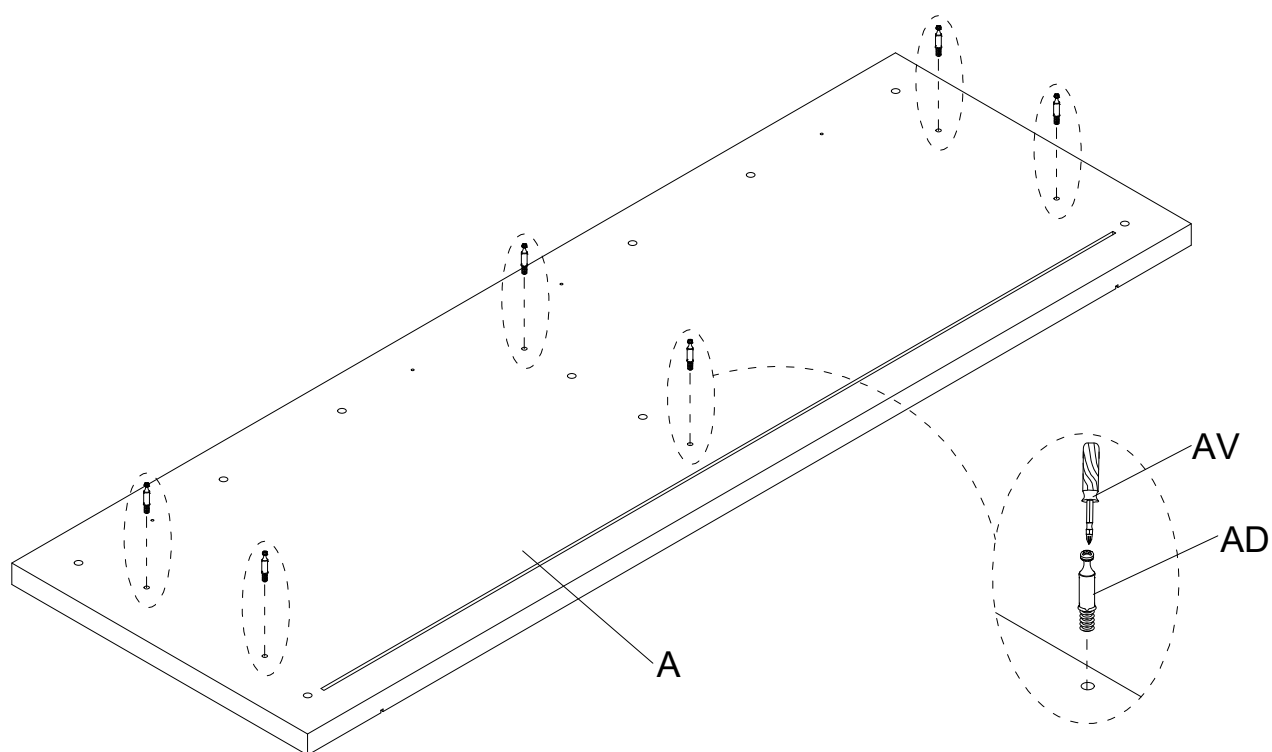


2 Assemble Top Panel Trim (O) to Top Panel (A), using Wood Dowel (AA), Glue (AU) and Screw (AJ) by Screwdriver (AV) as below shown.

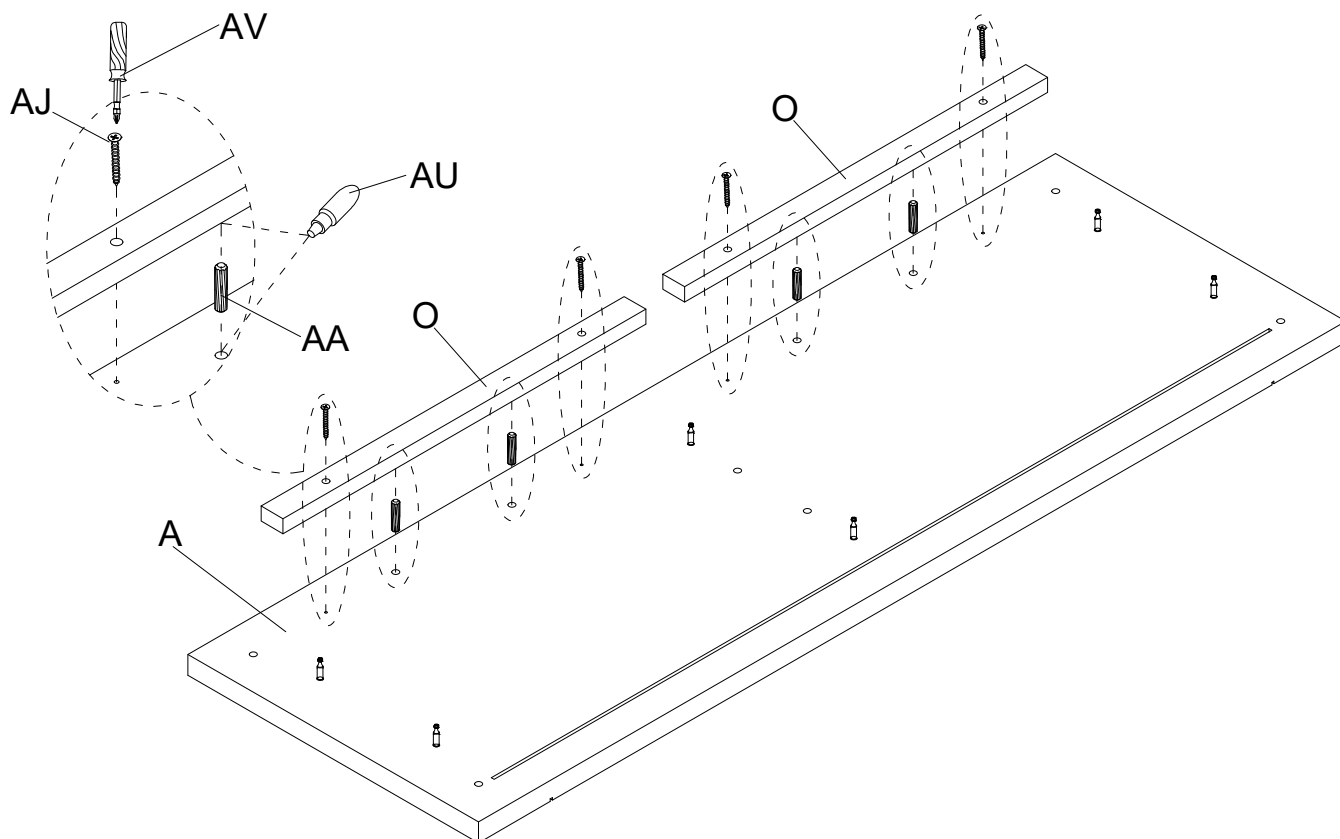

- 3** Insert Bolt (AD) into Front Post - L (F), Front Post - R (G), Back Post - L (H) & Back Post - R (I) by Screwdriver (AV) as below shown.

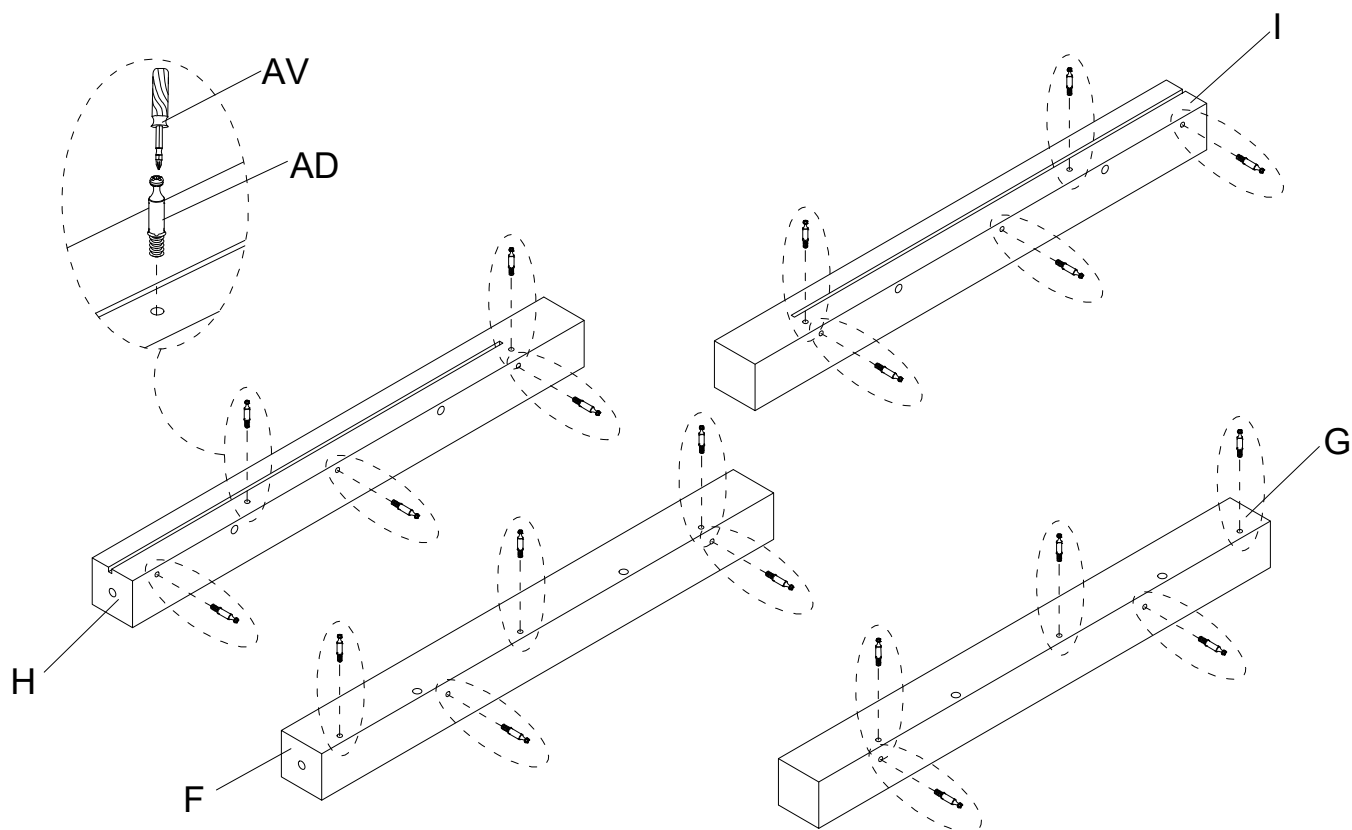


- 4** Pull out Slide Rail (AG) fully extended, a hold-in detent can be seen or touched on slide runners.

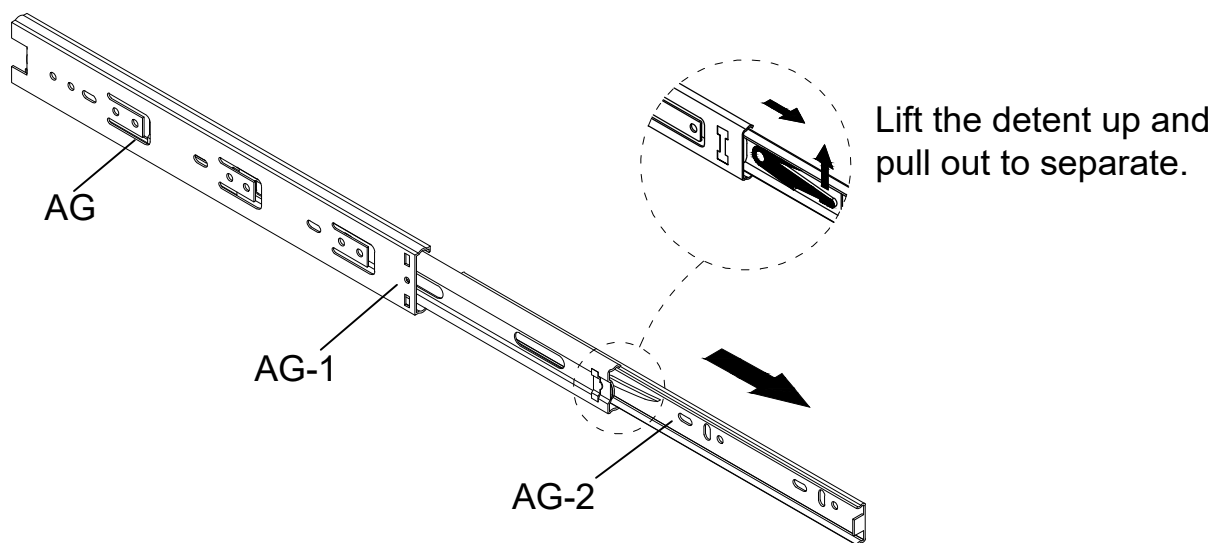


X4


- 5** Insert Bolt (AD) into Bottom Panel Trim (P), Front Post - Middle (N) by Screwdriver (AV) as below shown.

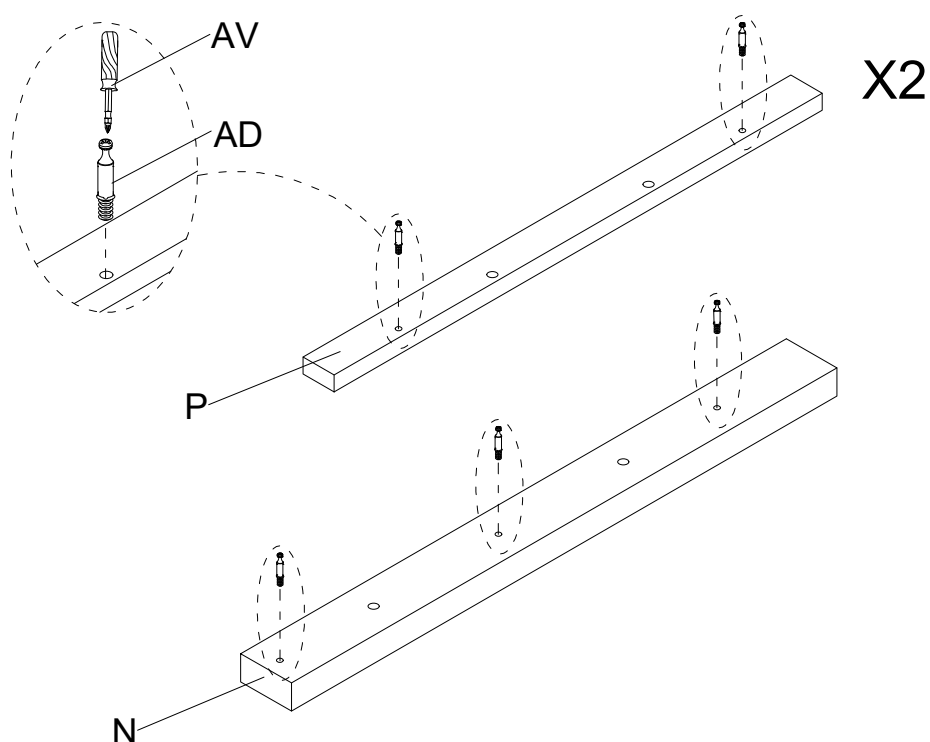


- 6** First, Insert Bolt (AD) into Middle Panel (E) by Screwdriver (AV). Second, assemble part one of Slide Rail (AG-1) to one side of Middle Panel (E), using Screw (AH) by Screwdriver (AV). Repeat the same steps at the other side of Middle Panel (E) as below shown.

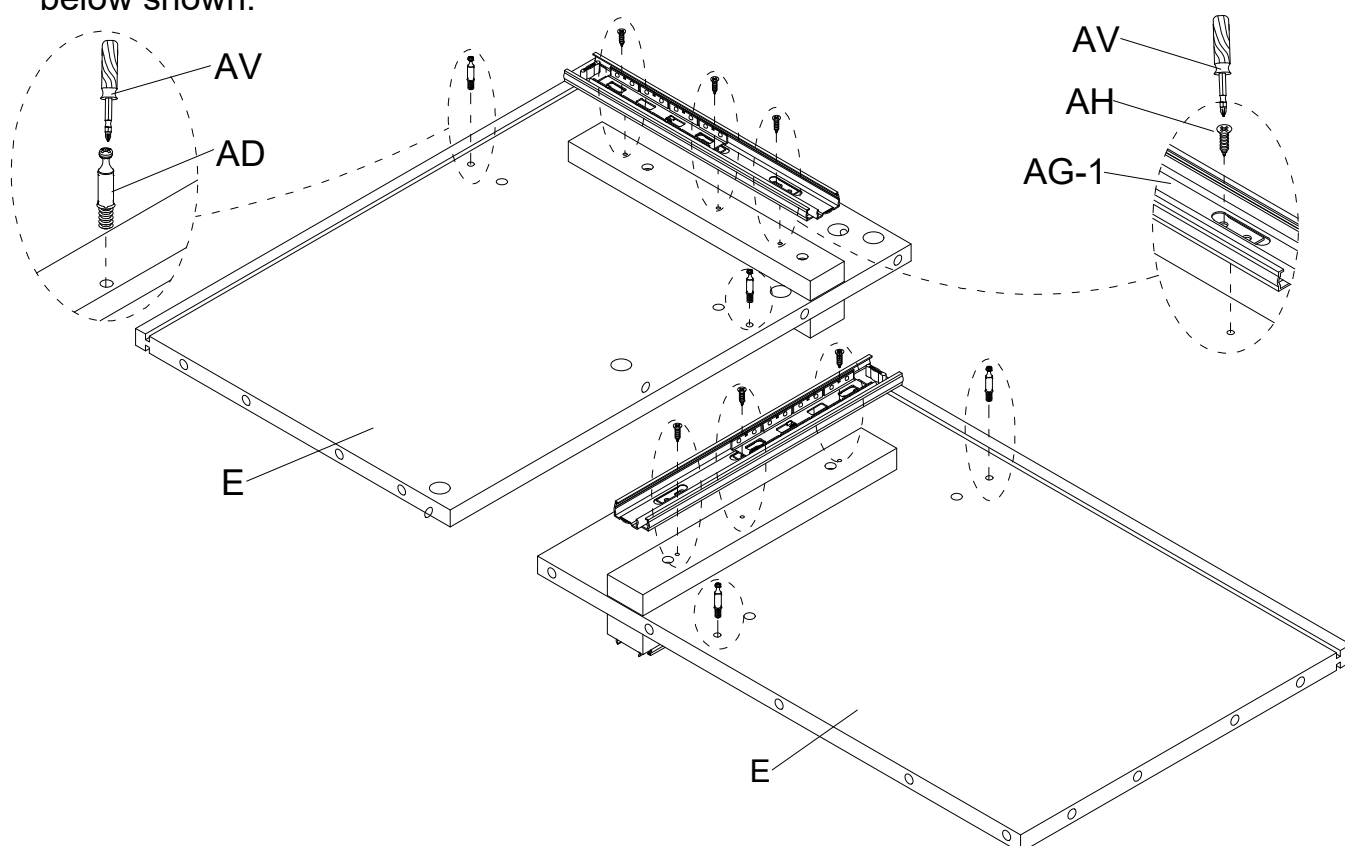


- 7** Assemble Front Post - L (F) and Back Post - L (H) to Side Panel - L (C), Front Post - R (G) and Back Post - R (I) to Side Panel - R (D), using Glue (AU) & Wood Dowel (AA) first, then attach Nut (AB) to Bolt (AD) by Screwdriver (AV) as below shown.

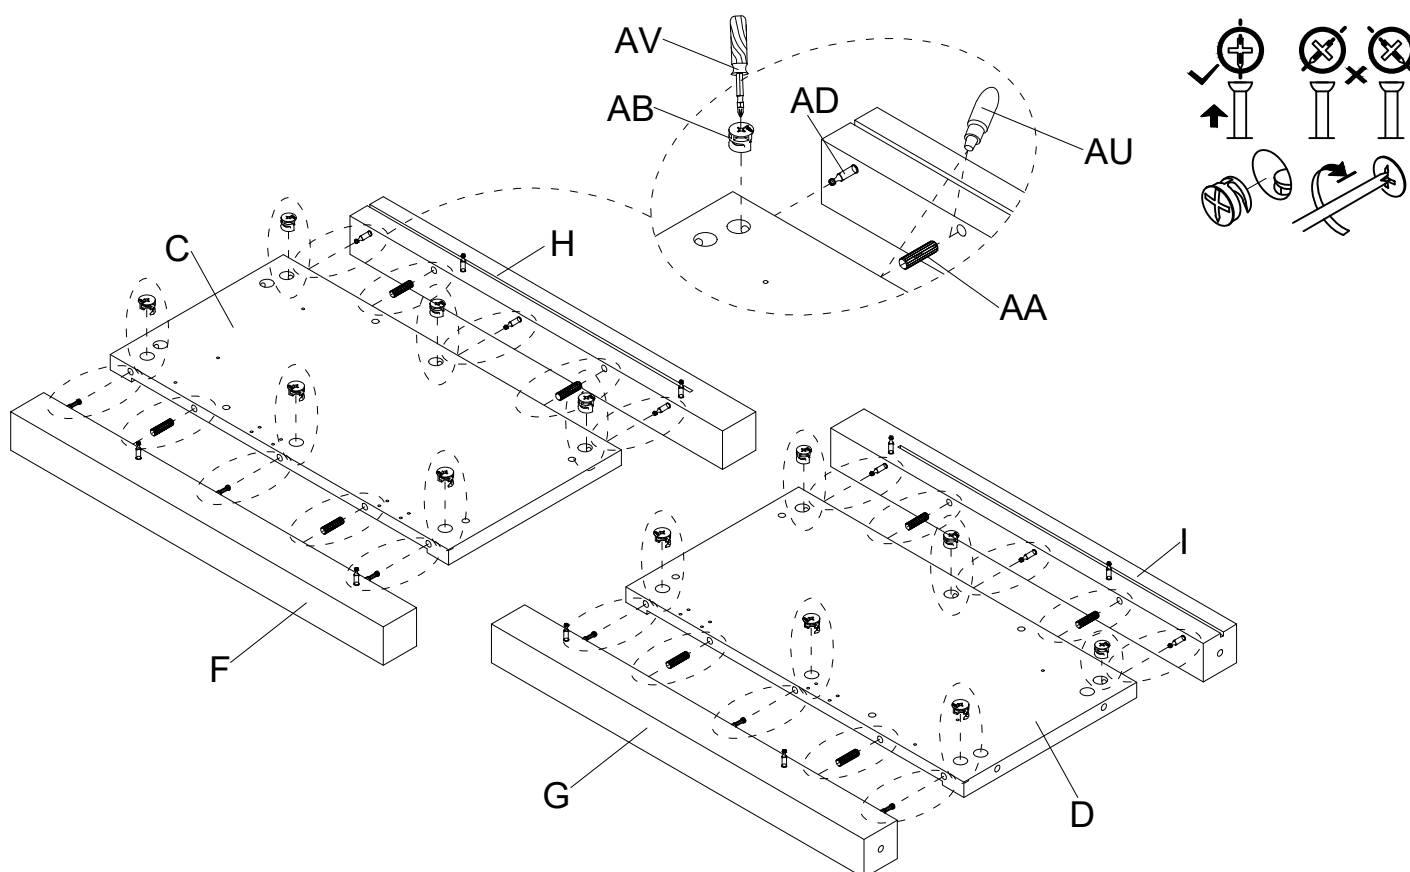


- 8** Assemble part one of Slide Rail (AG-1) to pre-assembled Side Panel - L (C), Side Panel - R (D), using Screw (AH) by Screwdriver (AV) as below shown.

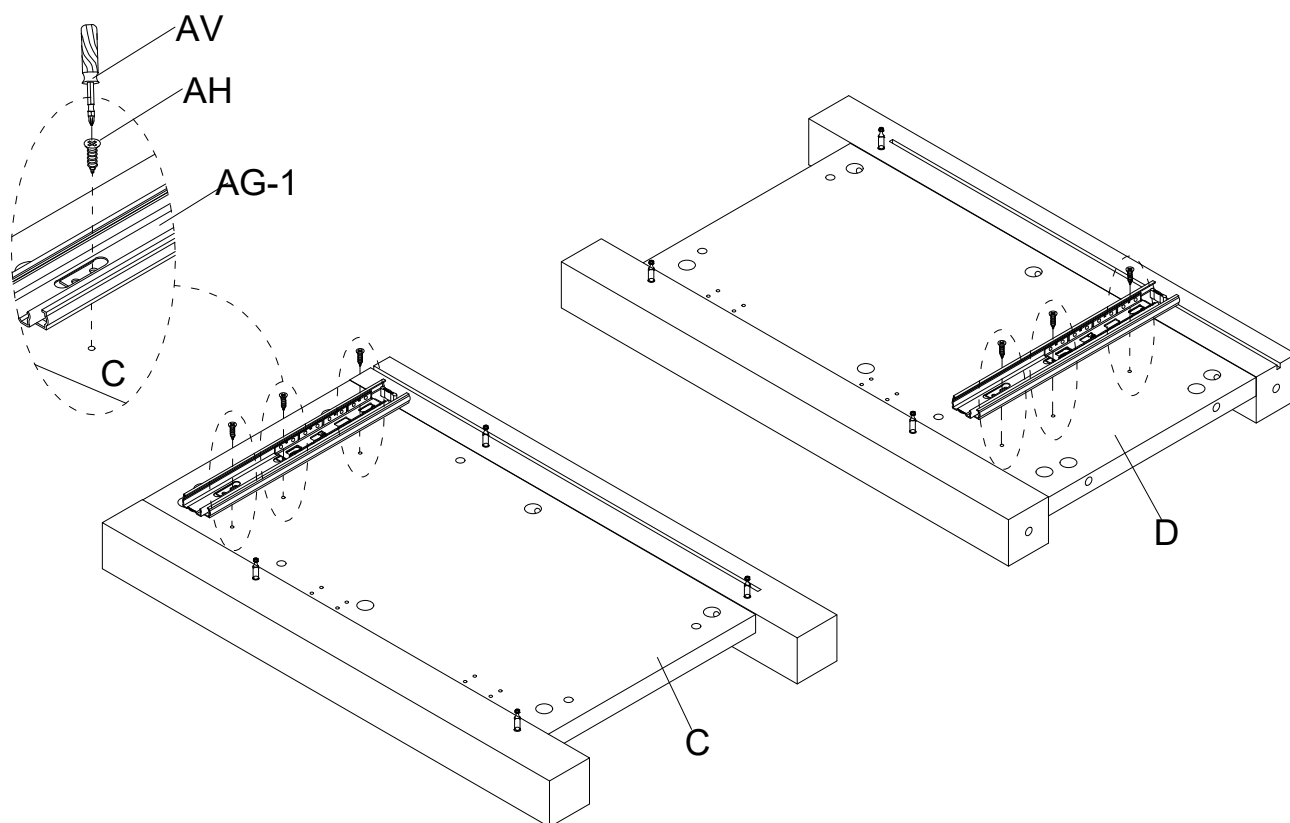


- 9** Assemble Bottom Panel Trim (P) to Bottom Panel (B), using Wood Dowel (AA), Glue (AU), attach Nut (AB) to Bolt (AD) by Screwdriver (AV) as below shown.

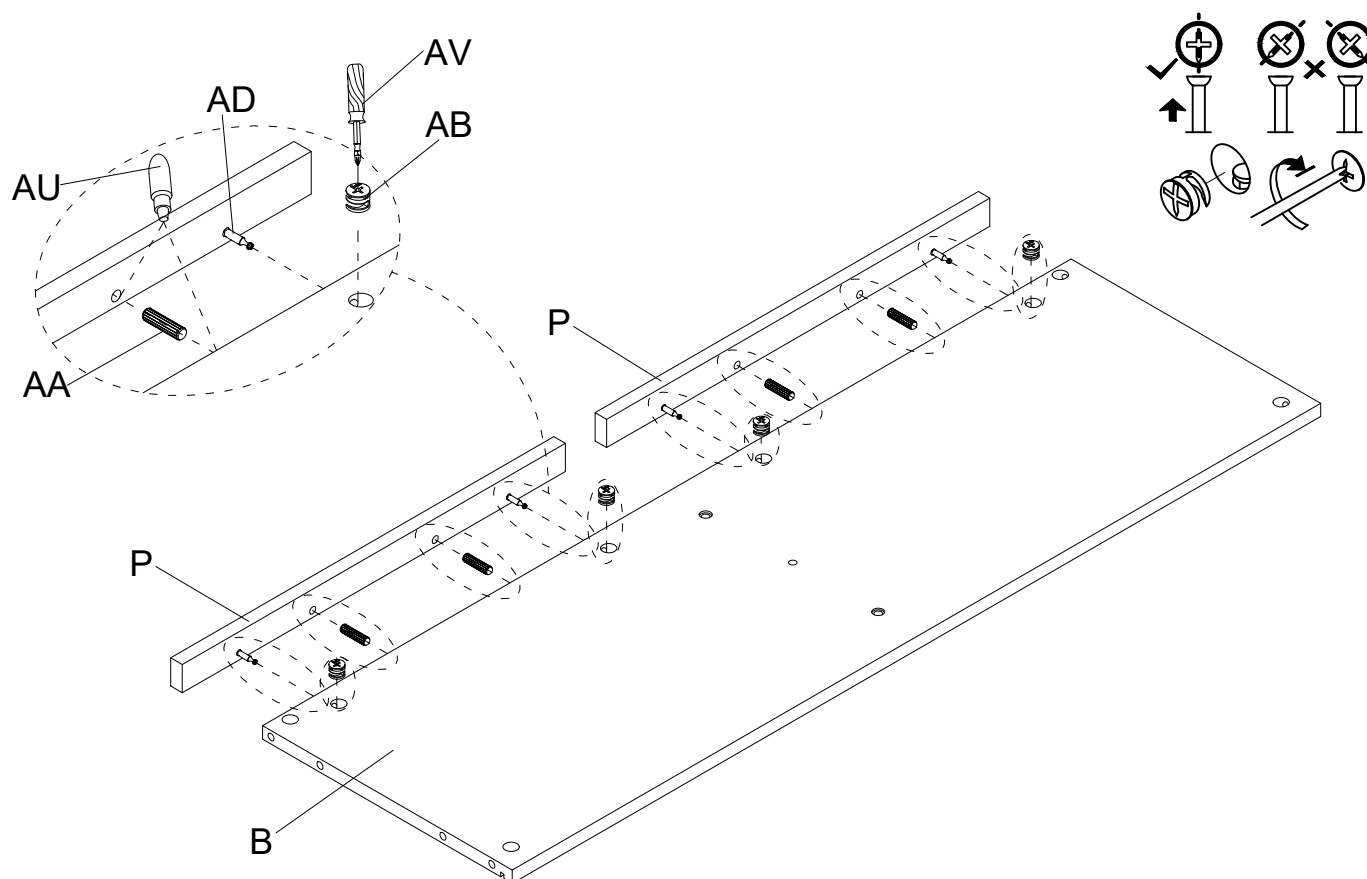


- 10** Assemble Support Leg (Q) to Bottom Panel (B), using Screw (AQ) by Allen Key (AR) as below shown.

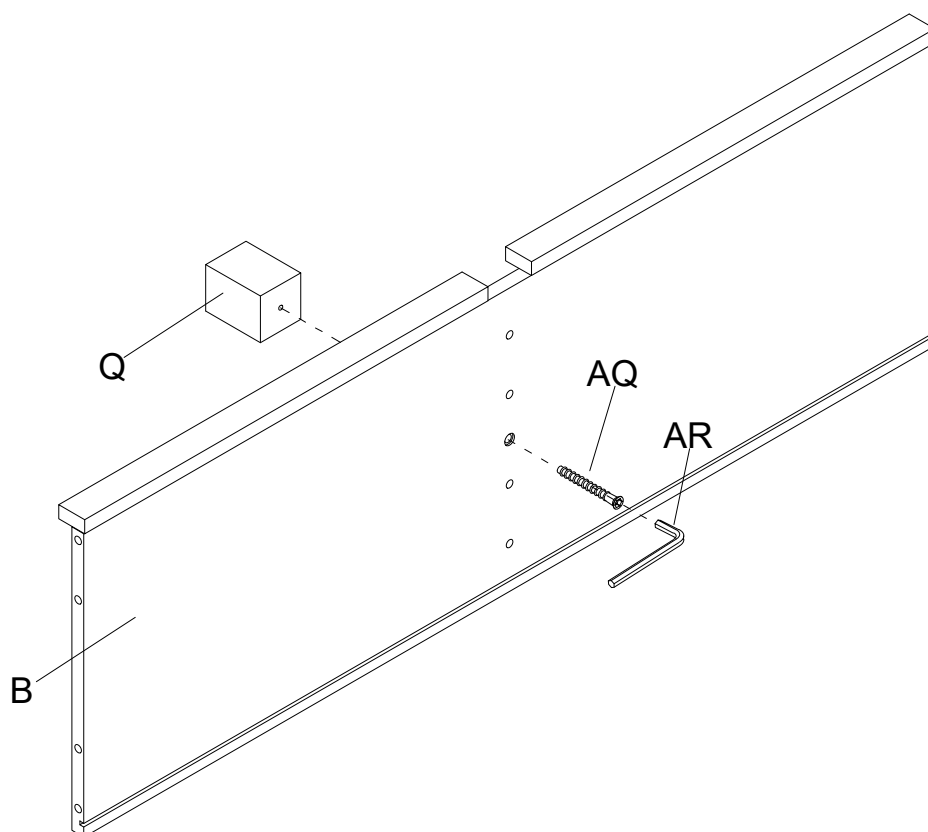


- 11** Assemble Front Post - Middle (N) to Middle Panel (E), using Wood Dowel (AA), Glue (AU), attach Nut (AB) to Bolt (AD) by Screwdriver (AV) as below shown.

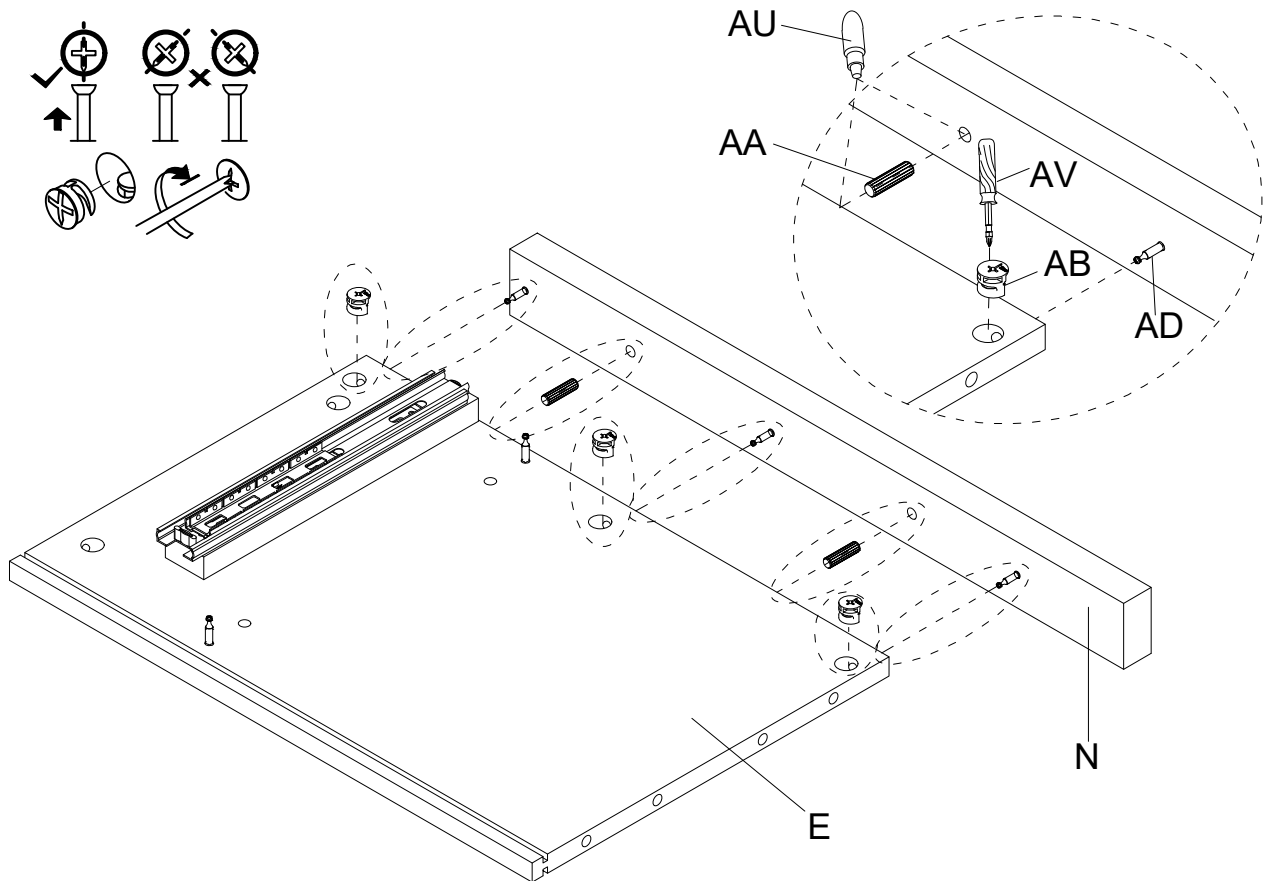


- 12** Assemble pre-assembled Middle Panel (E) to Bottom Panel (B), using Wood Dowel (AA), Glue (AU) and Screw (AQ) by Allen Key (AR) as below shown.

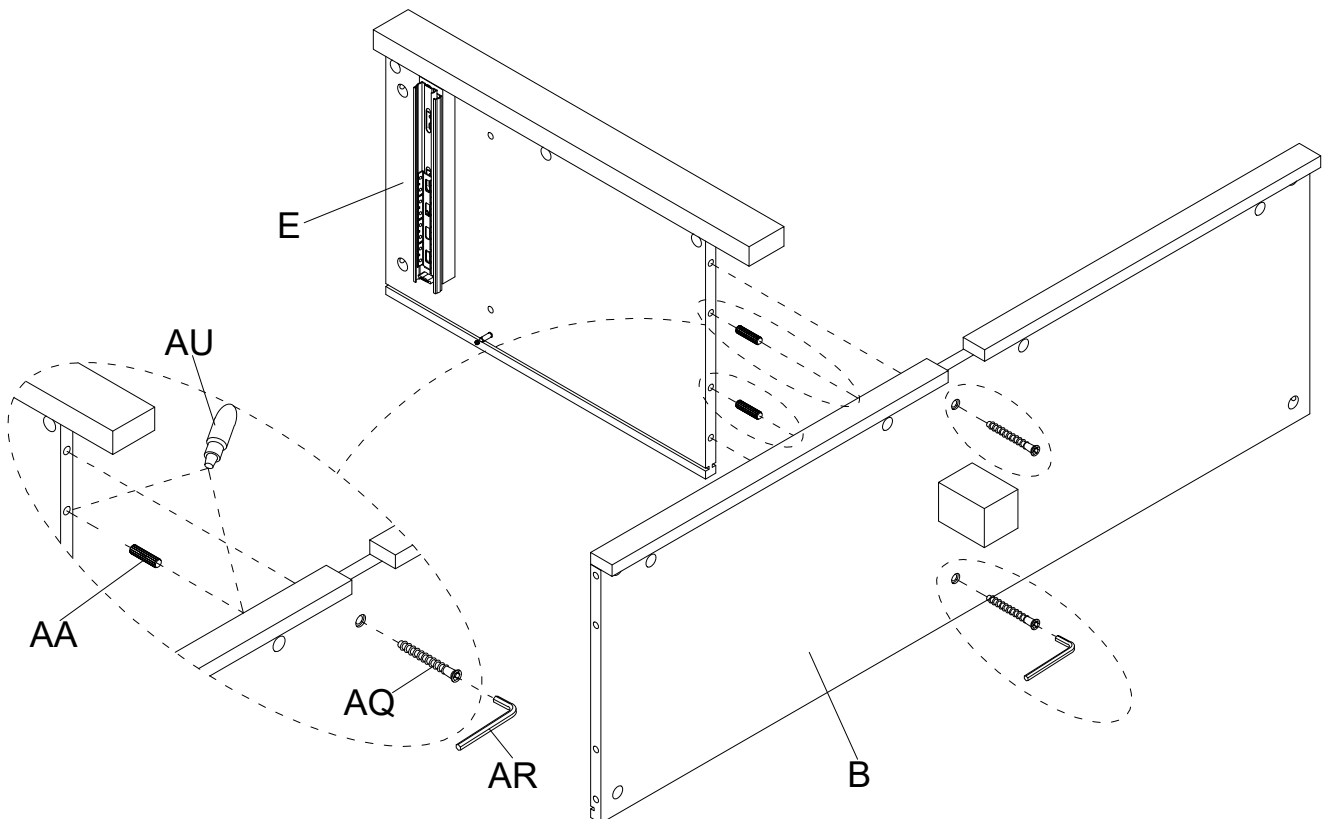


- 13** Assemble Magnet Catch (AM) to Front Stretcher - L (J) and Front Stretcher - R (K), using Screw (AN) by Screwdriver (AV) as below shown.

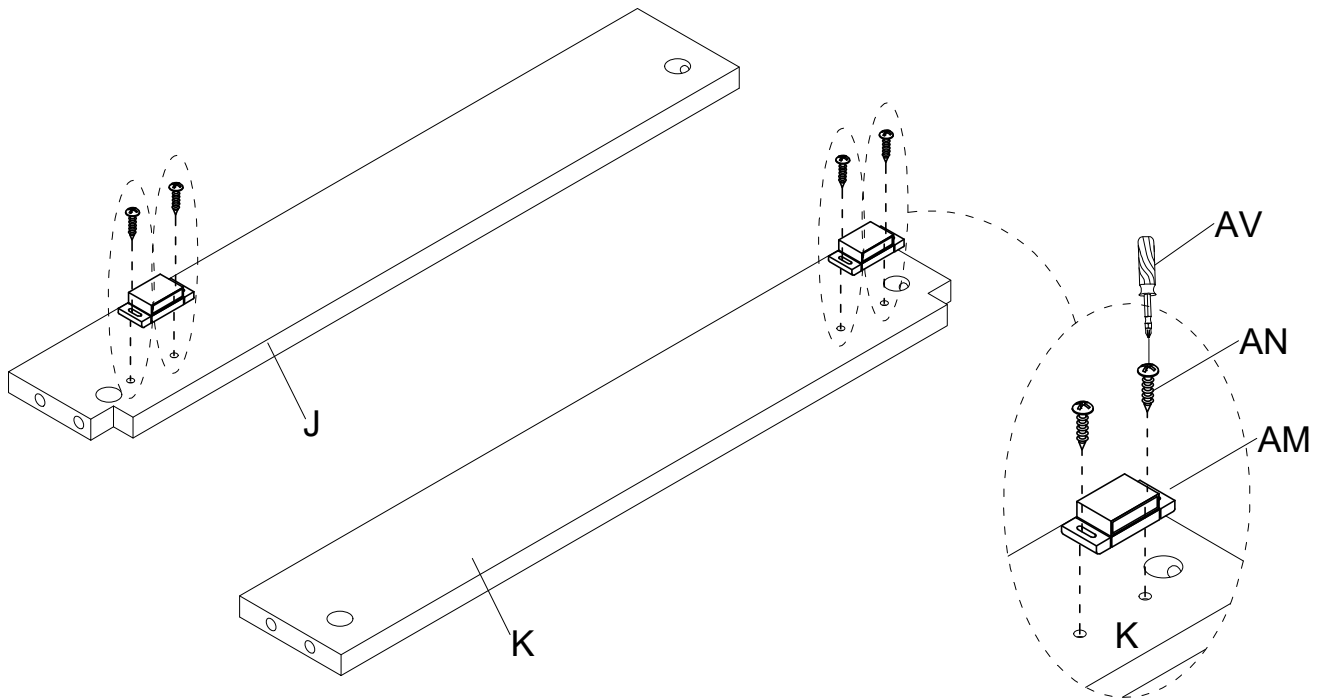


- 14** Assemble Front Stretcher - L (J) and Back Stretcher -L (L) to Middle Panel (E), using Wood Dowel (AA), Glue (AU), attach Nut (AB) to Bolt (AD) by Screwdriver (AV) as below shown.

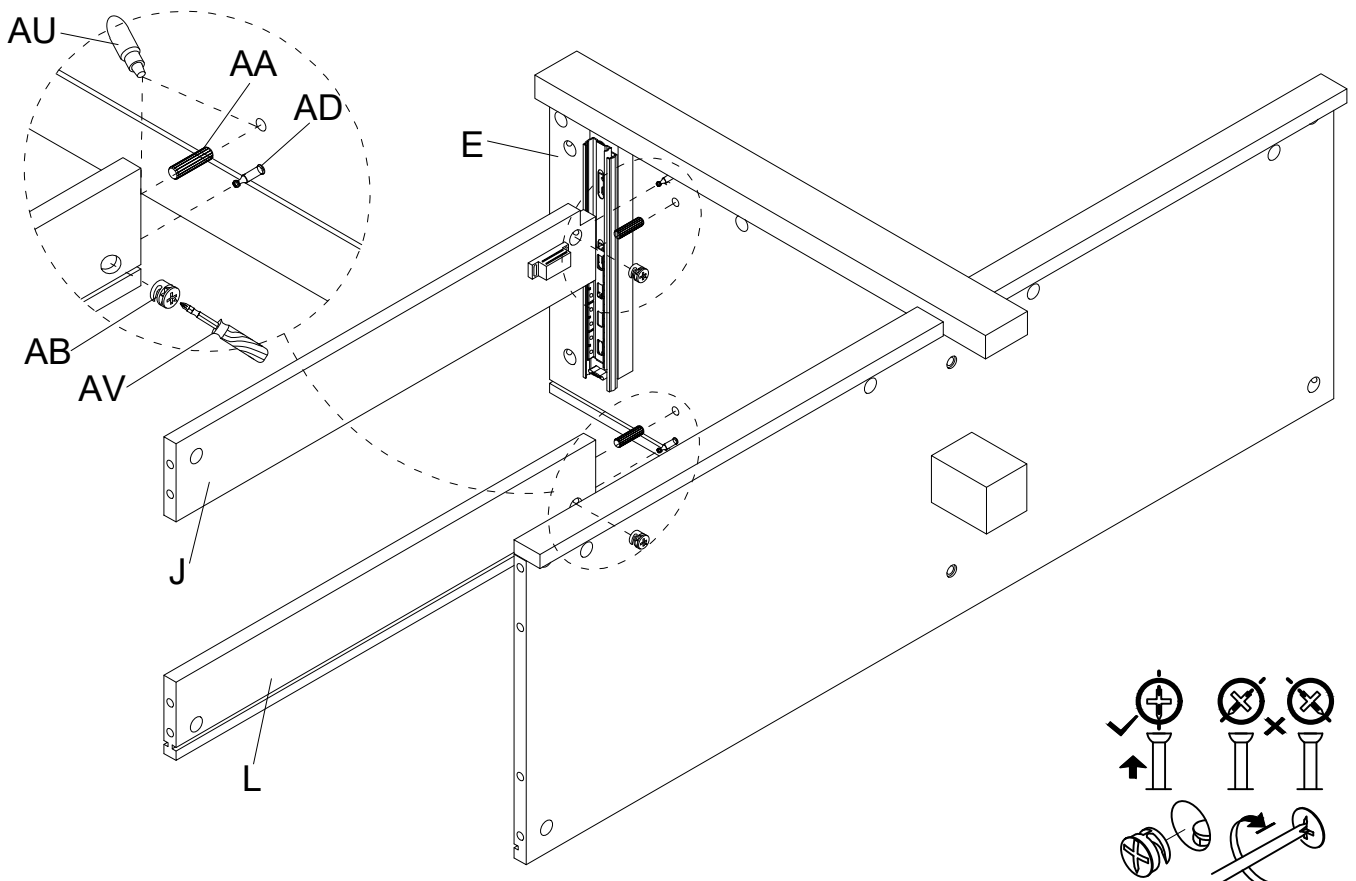


- 15** Assemble Front Stretcher - R (K) and Back Stretcher -R (M) to Middle Panel (E), using Wood Dowel (AA), Glue (AU), attach Nut (AB) to Bolt (AD) by Screwdriver (AV) as below shown.

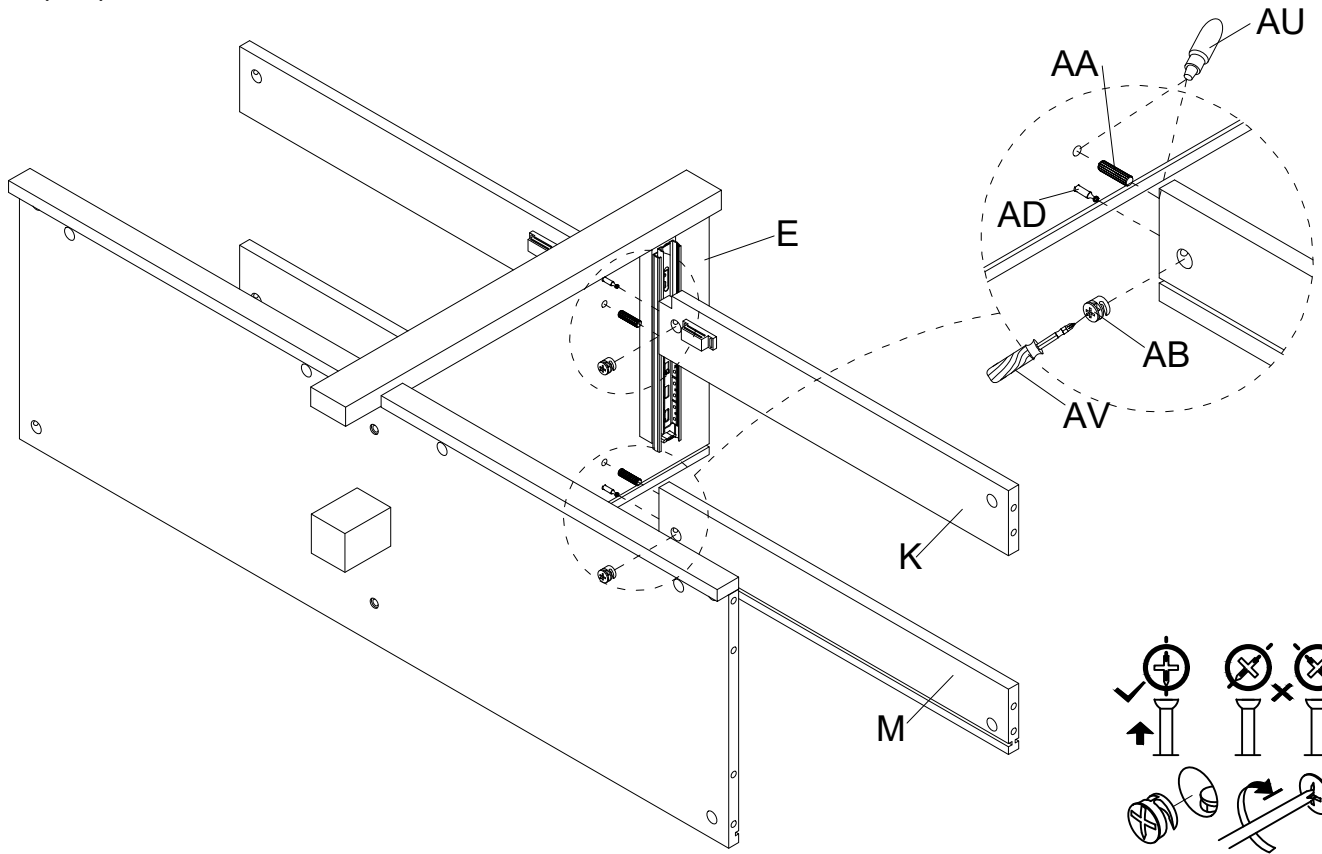


- 16** Insert Lower Back Panel (T) to pre-assembled Back Stretcher - L (L), Back Stretcher - R (M) and Bottom Panel (B) as below shown.

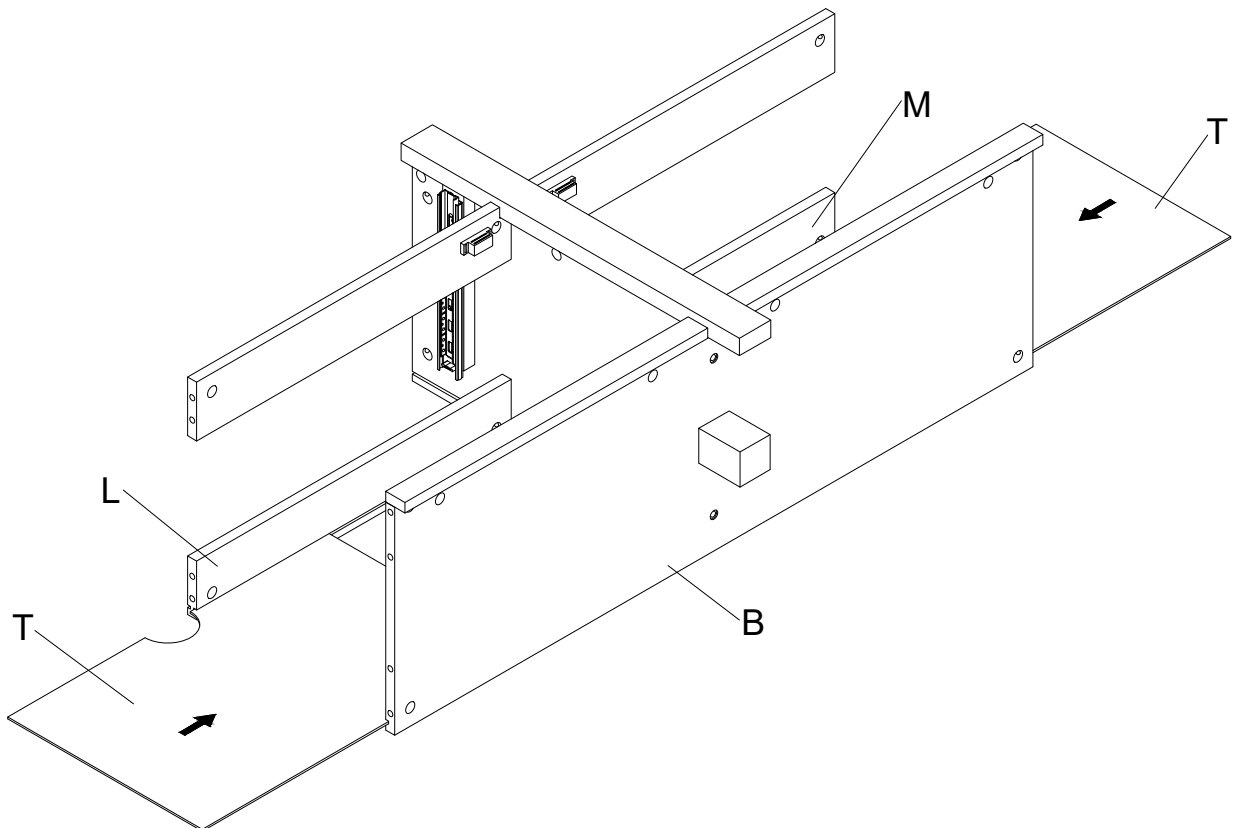


- 17** Assemble pre-assembled Side Panel - R (D), Front Post - R (G) and Back Post - R (I) to pre-assembled Front Stretcher - R (K), Back Stretcher - R (M) and Bottom Panel (B), using Wood Dowel (AA), Glue (AU), attach Nut (AB) to Bolt (AD) by Screwdriver (AV) as below shown.

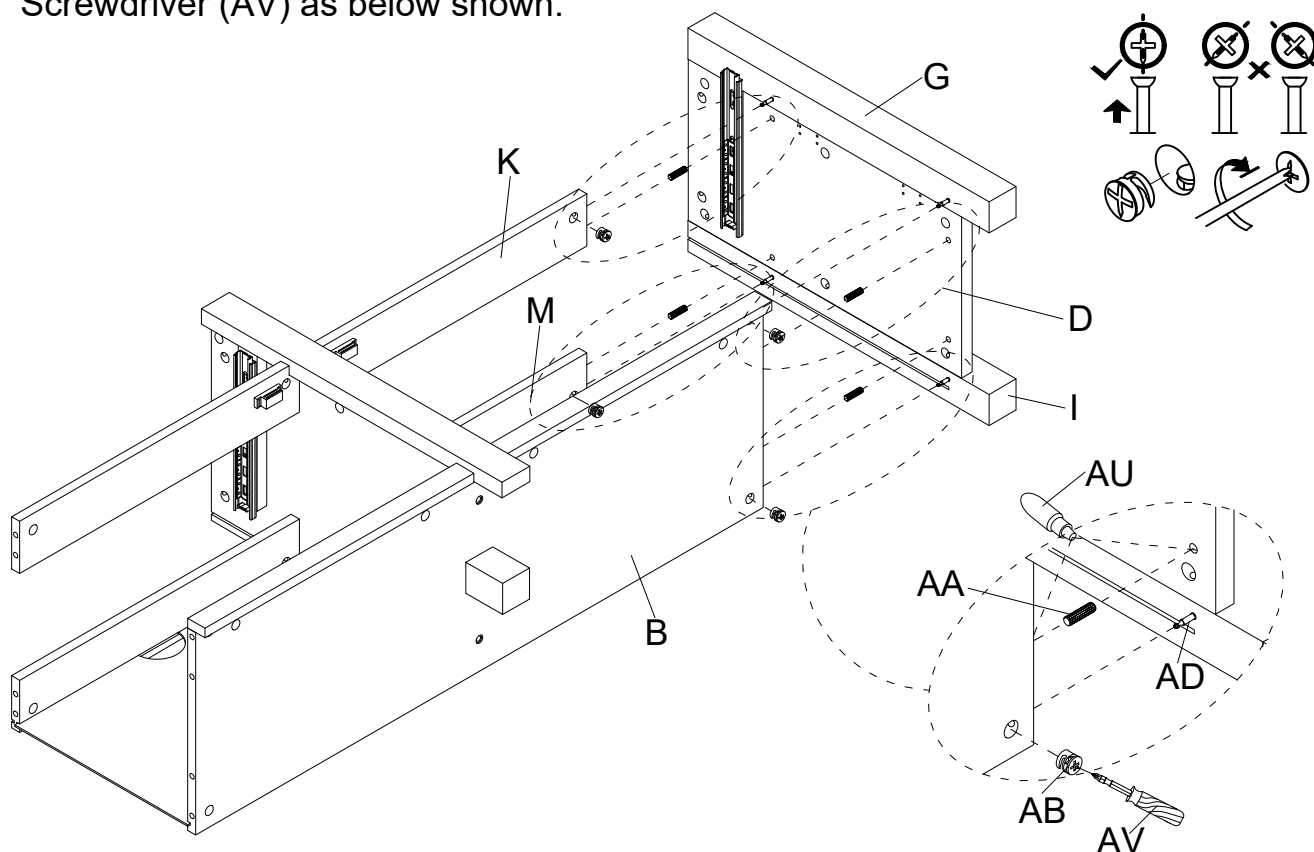


- 18** Assemble pre-assembled Side Panel - L (C), Front Post - L (F) and Back Post - L (H) to pre-assembled Front Stretcher - L (J), Back Stretcher - L (L) and Bottom Panel (B), using Wood Dowel (AA), Glue (AU), attach Nut (AB) to Bolt (AD) by Screwdriver (AV) as below shown.

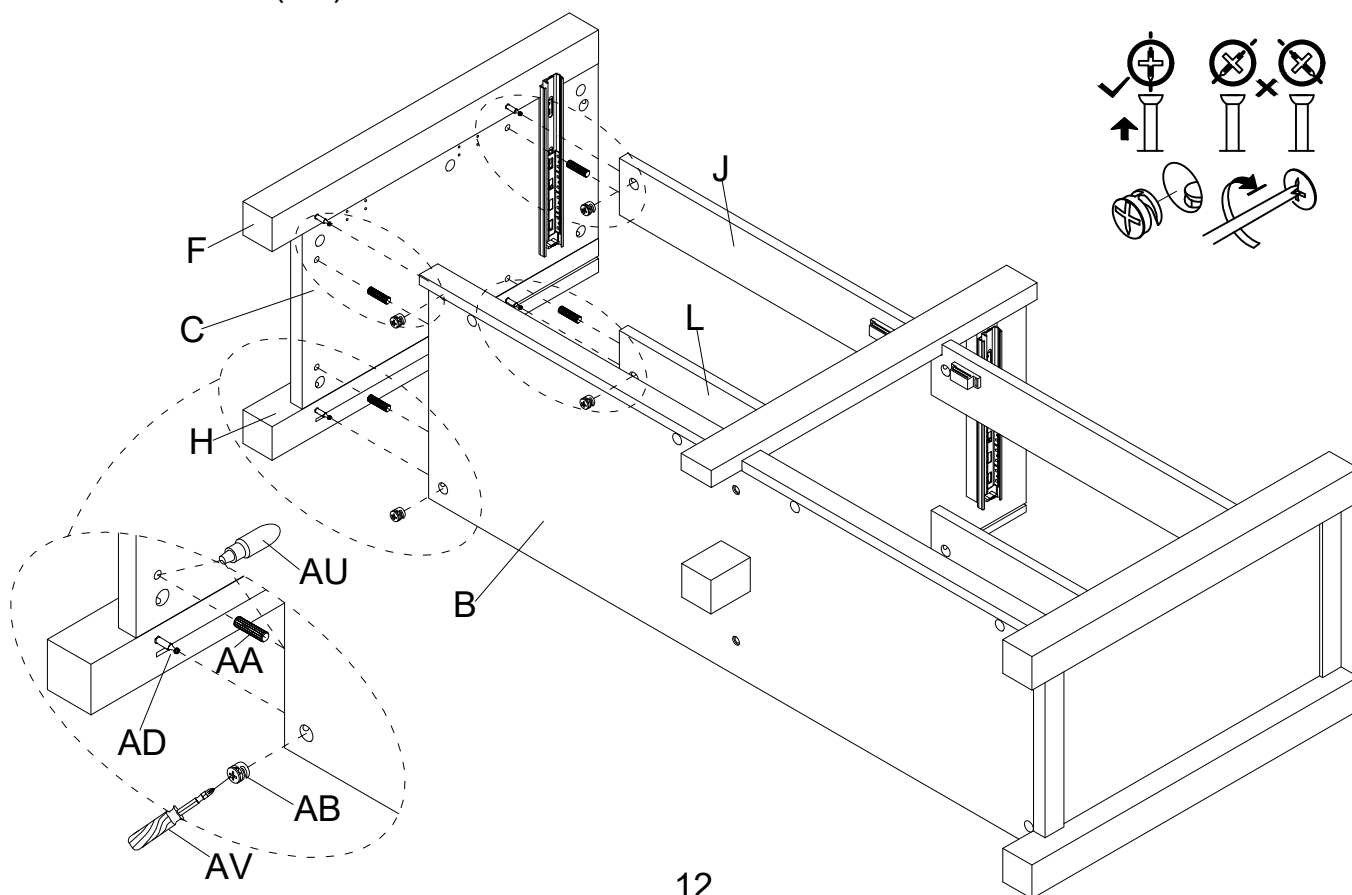


- 19** Insert Upper Back Panel (U) to pre-assembled Back Post - L (H), Back Post - R (I), Back Stretcher - L (L), Back Stretcher - R (M) and Middle Panel (E) as below shown.

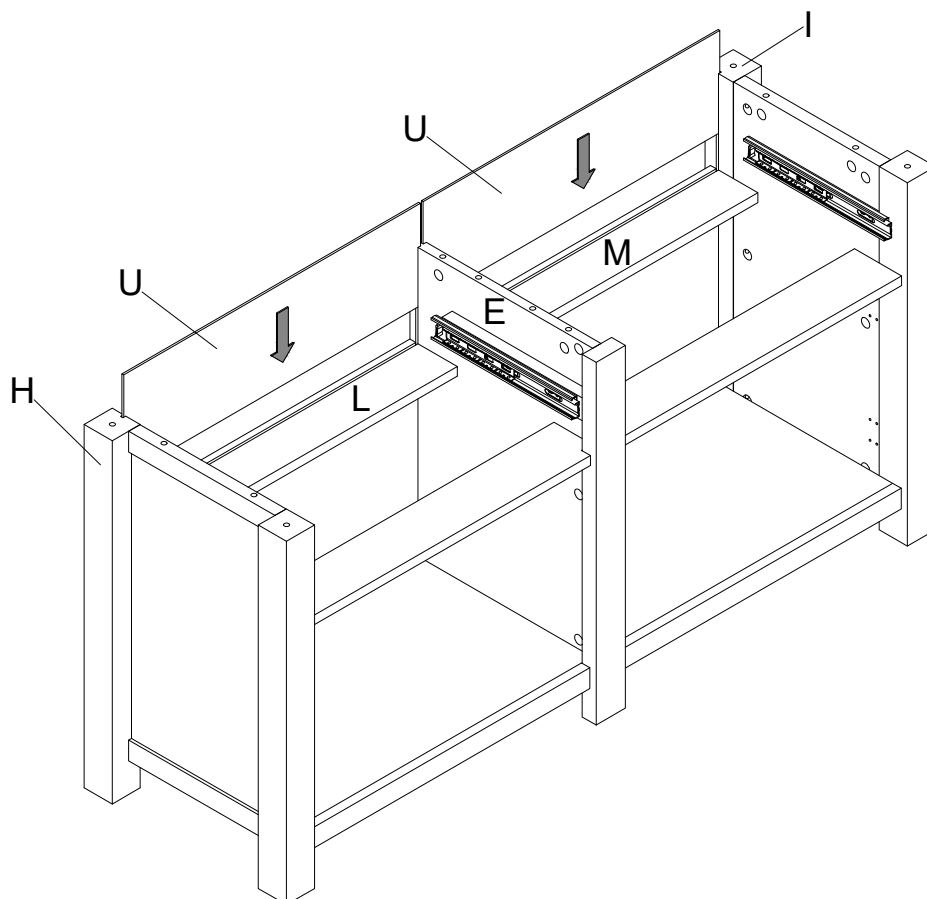


- 20** Assemble Top Panel (A) to pre-assembled units, using Wood Dowel (AA), Glue (AU), attach Nut (AB) to Bolt (AD) by Screwdriver (AV) as below shown.

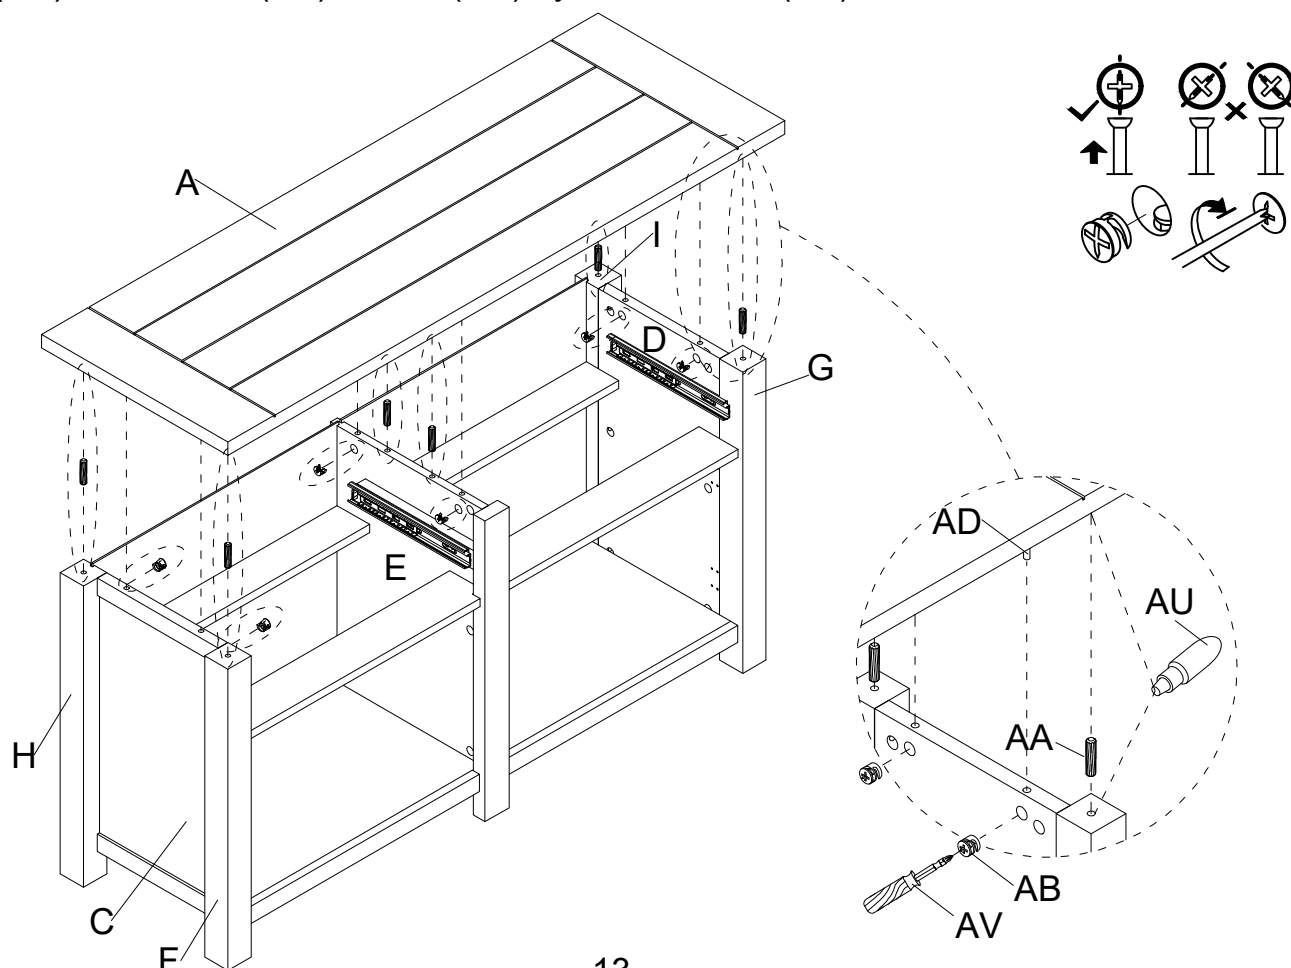


- 21** Attach Buckle (AS) to Upper Back Panel (U) & Lower Back Panel (T), using Screw (AT) by Screwdriver (AV) as below shown.

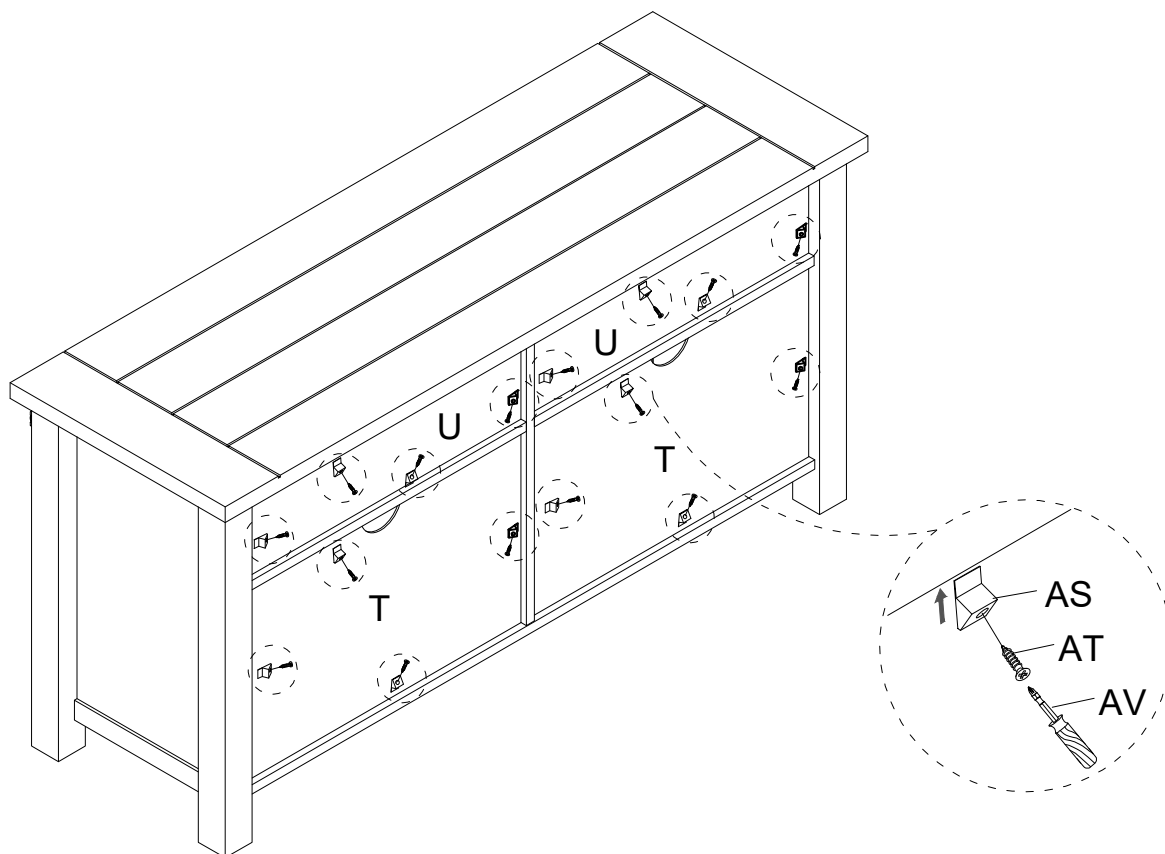


- 22** Attach Hinge (AK) to Door Panel - L (R) & Door Panel - R (S), using Screw (AL) by Screwdriver (AV). attach Knob (AE) to Door Panel - L (R) & Door Panel - R (S), using Screw (AF) by Screwdriver (AV). attach Iron Sheet (AO) to Door Panel - L (R) & Door Panel - R (S), using Screw (AP) by Screwdriver (AV) as below shown.

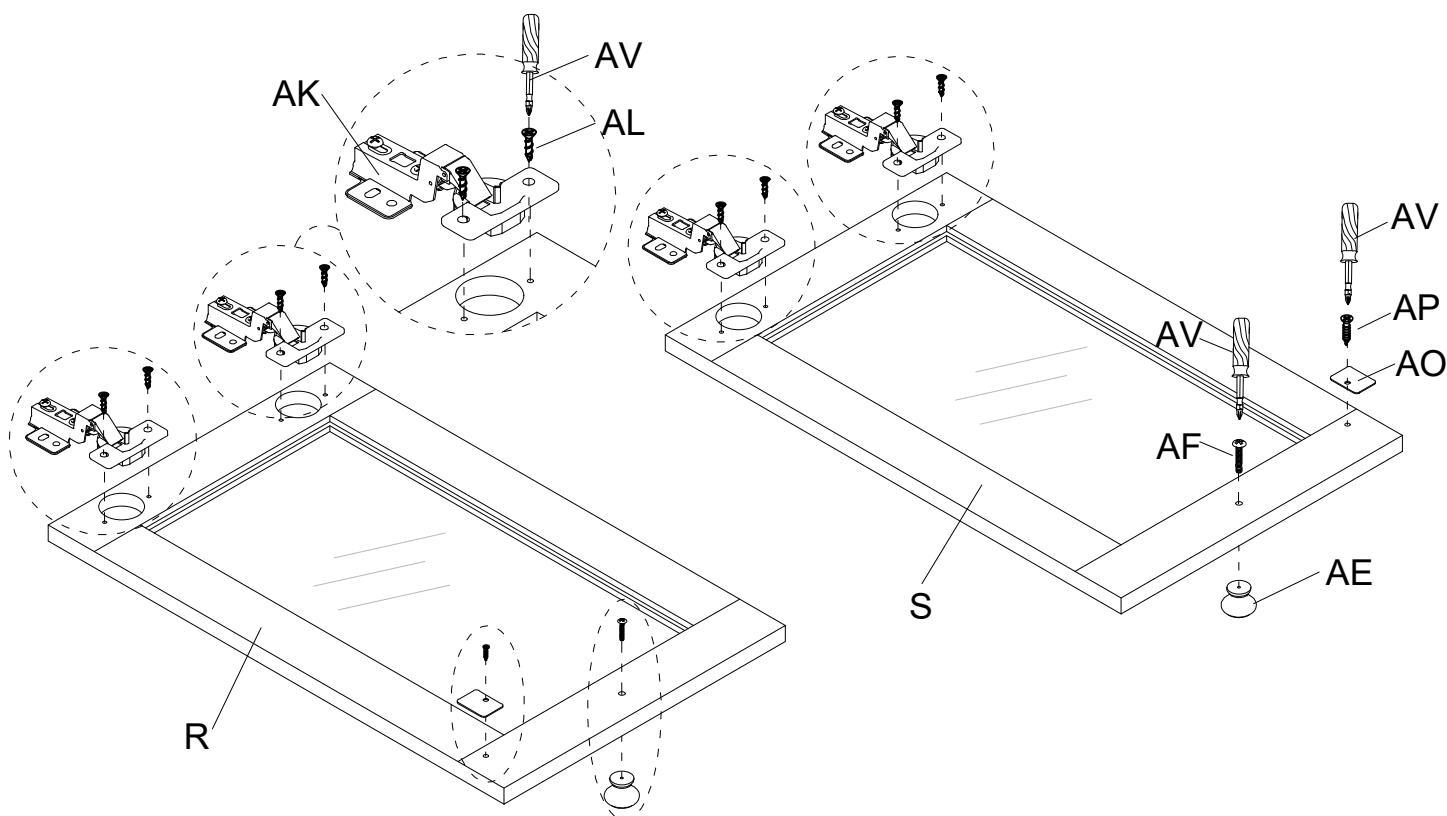


- 23** Assemble Door Panel - L (R) to Side Panel - L (C) and Door Panel - R (S) to Side Panel - R (D) through Hinge (AK), using Screw (AL) by Screwdriver (AV) as below shown.

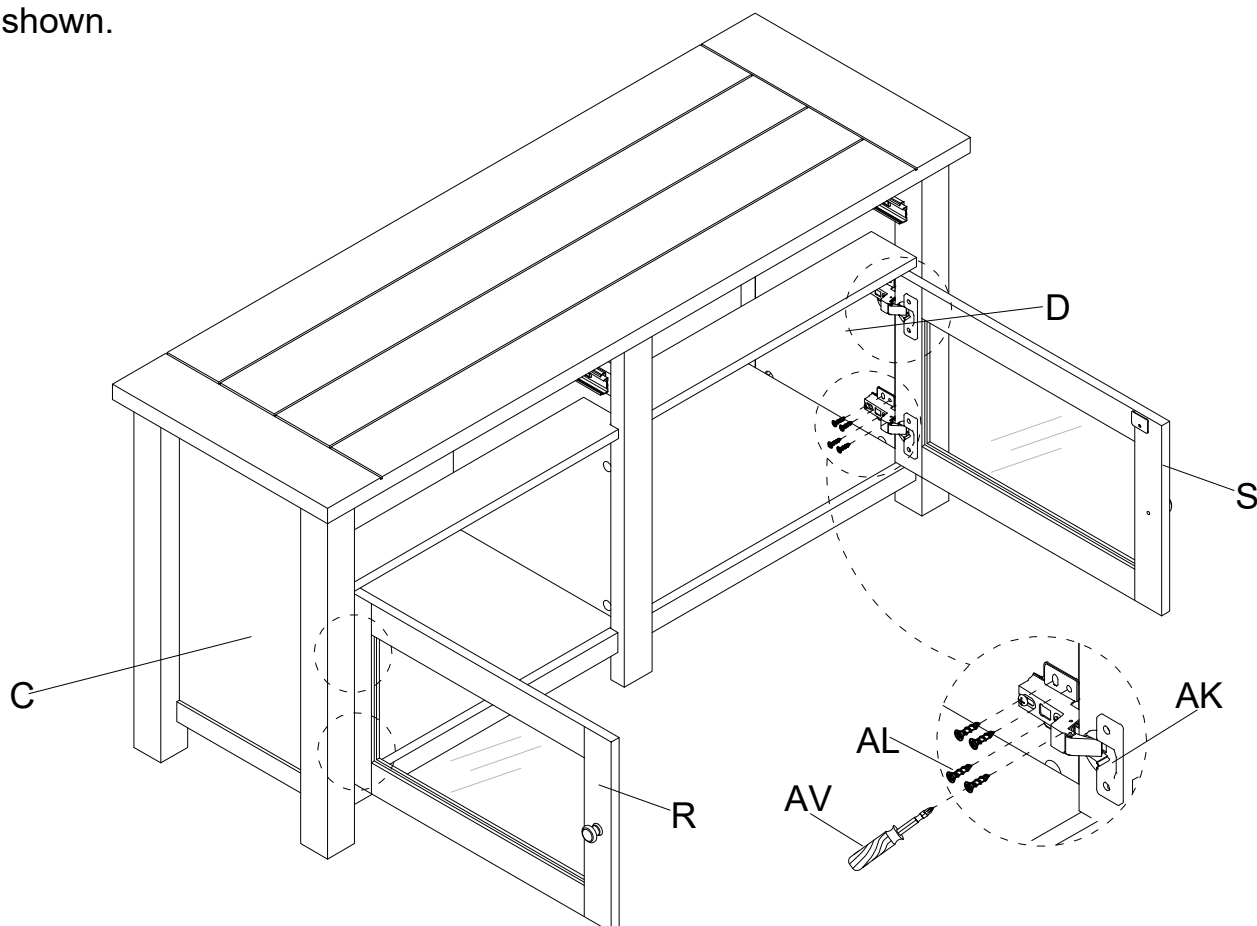


- 24** Assemble part 2 of Slide Rail (AG-2) to Drawer Side Panel - L (W) and Drawer Side Panel - R (X), using Screw (AH) to tighten by Screwdriver (AV). Insert Bolt (AD) into Drawer Front Panel (V) by Screwdriver (AV) as below shown.

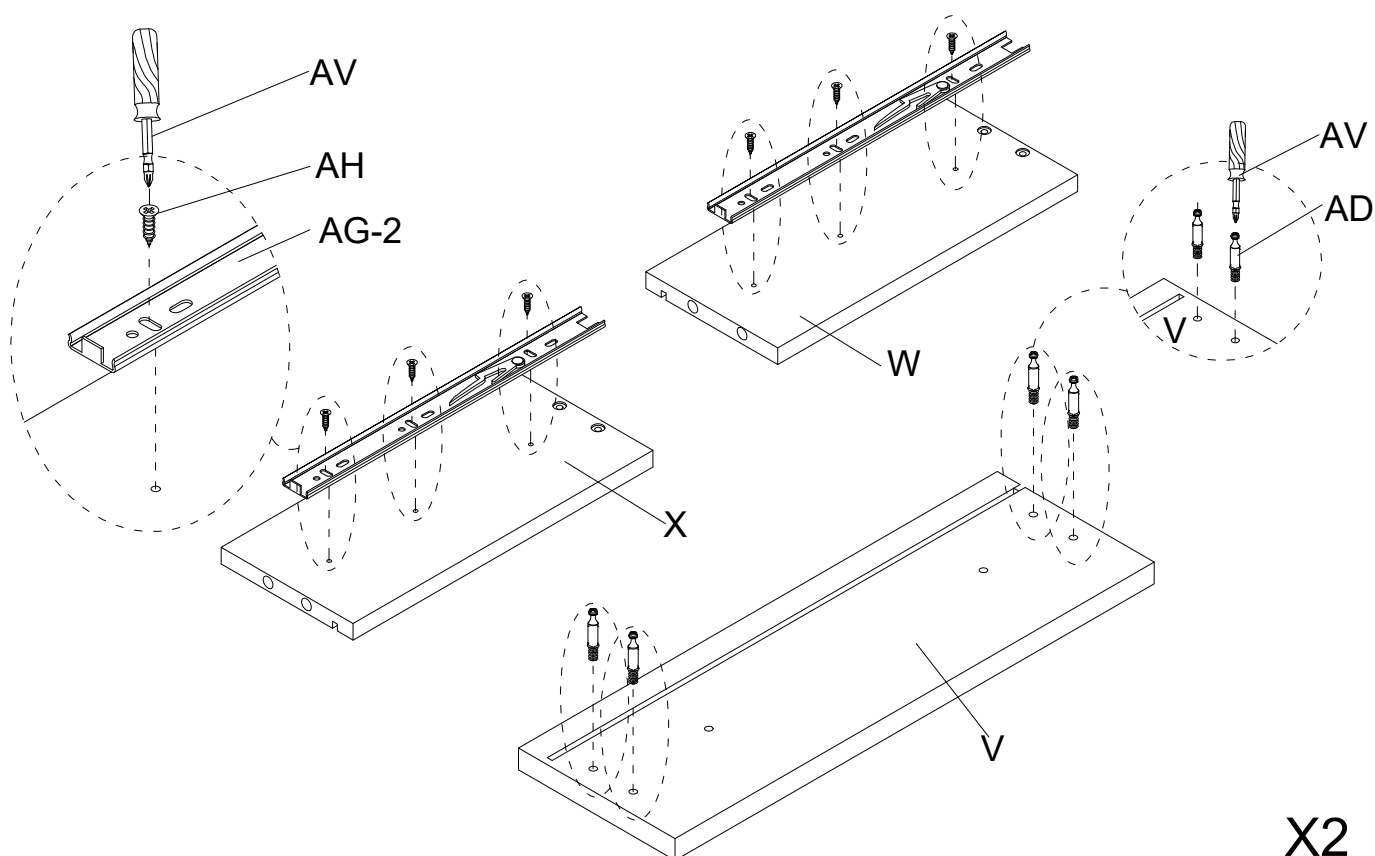


- 25** Insert Drawer Bottom Panel (Z) into Drawer Side Panel - L (W), Drawer Side Panel - R (X) and Drawer Back Panel (Y), then using Screw (AI) by Screwdriver (AV) to assemble Drawer Side Panel - L (W), Drawer Side Panel - R (X) with Drawer Back Panel (Y) as below shown.

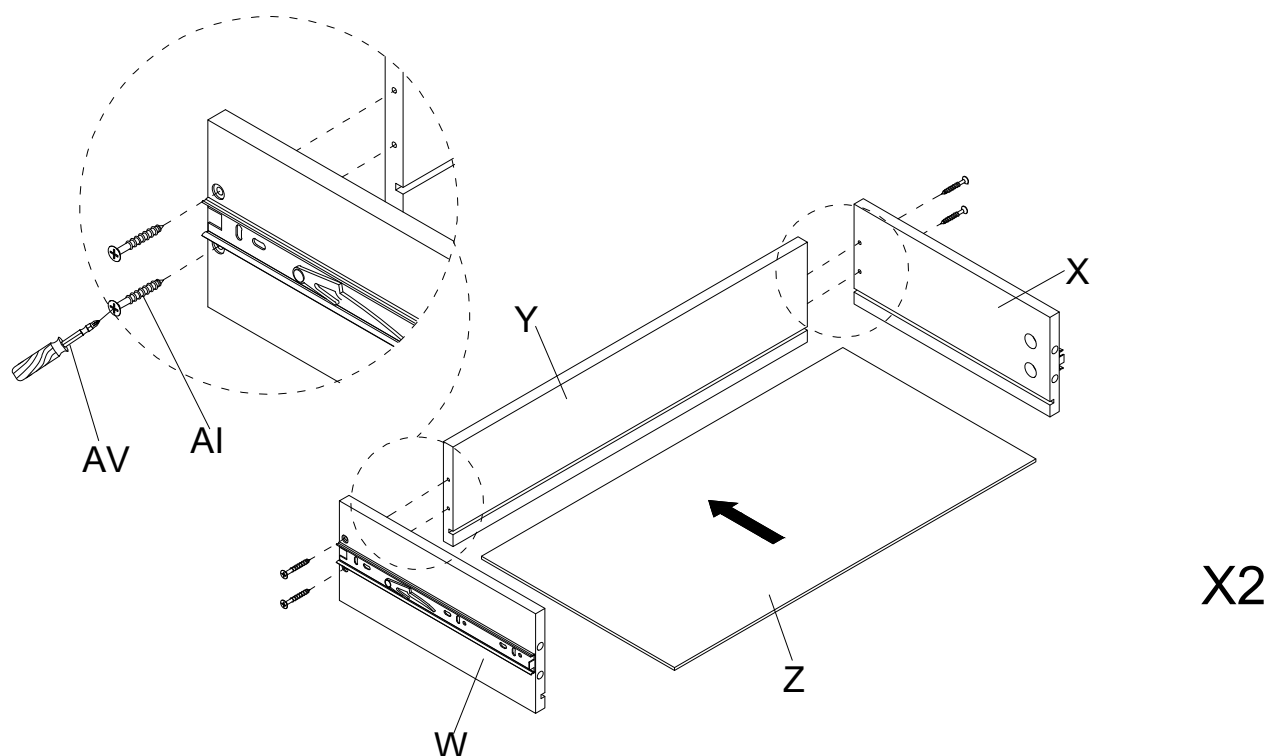

- 26** Assemble Drawer Front Panel (V) to pre-assembled drawer box using Nut (AC) to Bolt (AD) by Screwdriver (AV), attach Knob (AE) to Drawer Front Panel (V), using Screw (AF) by Screwdriver (AV) as below shown.

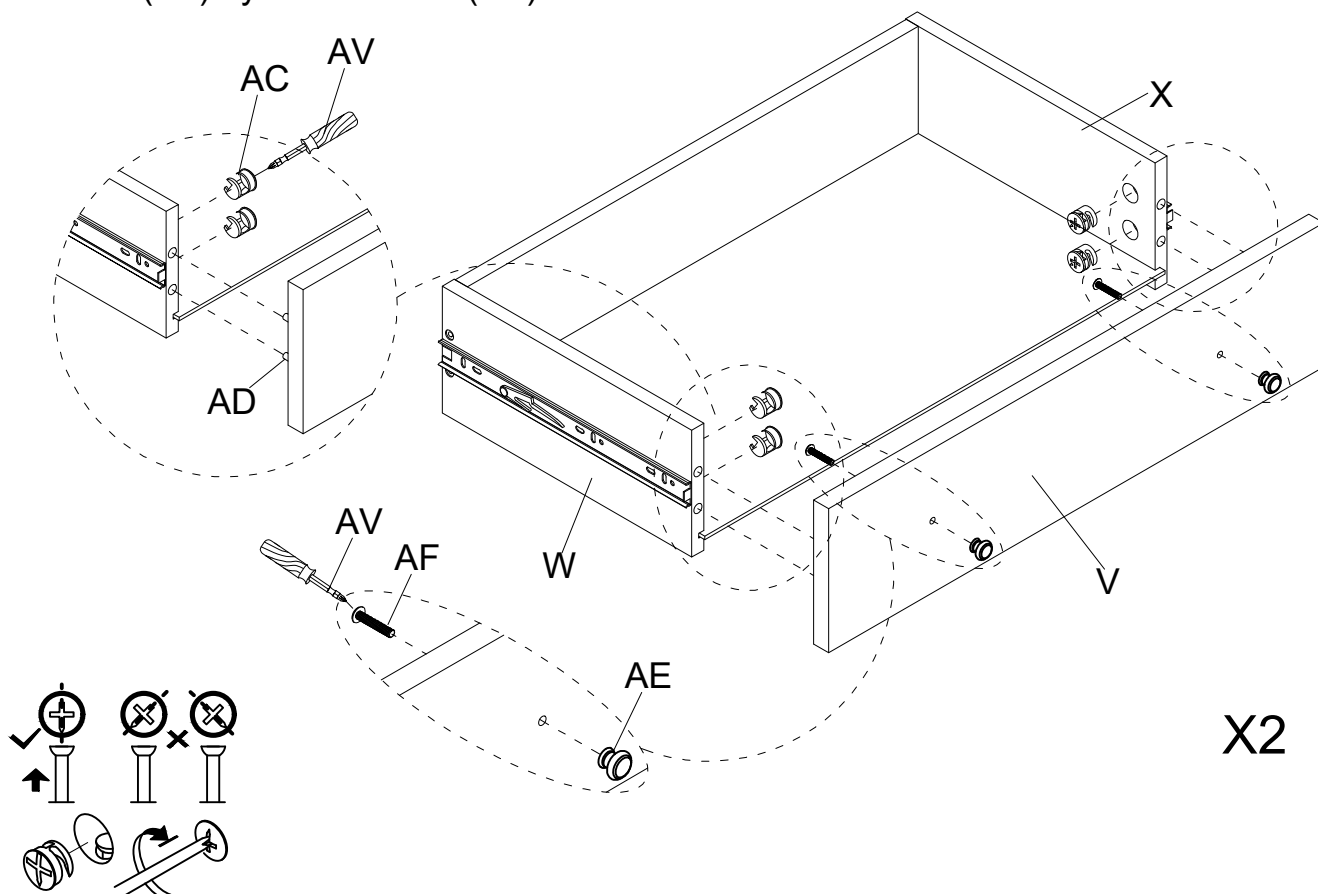

- 27** Insert the pre-assembled drawer by using Slide Rail (AG) to the pre-assembled TV stand. Move slide ball spacers to front. Hold drawer horizontally, and slide runners into ball spacers.

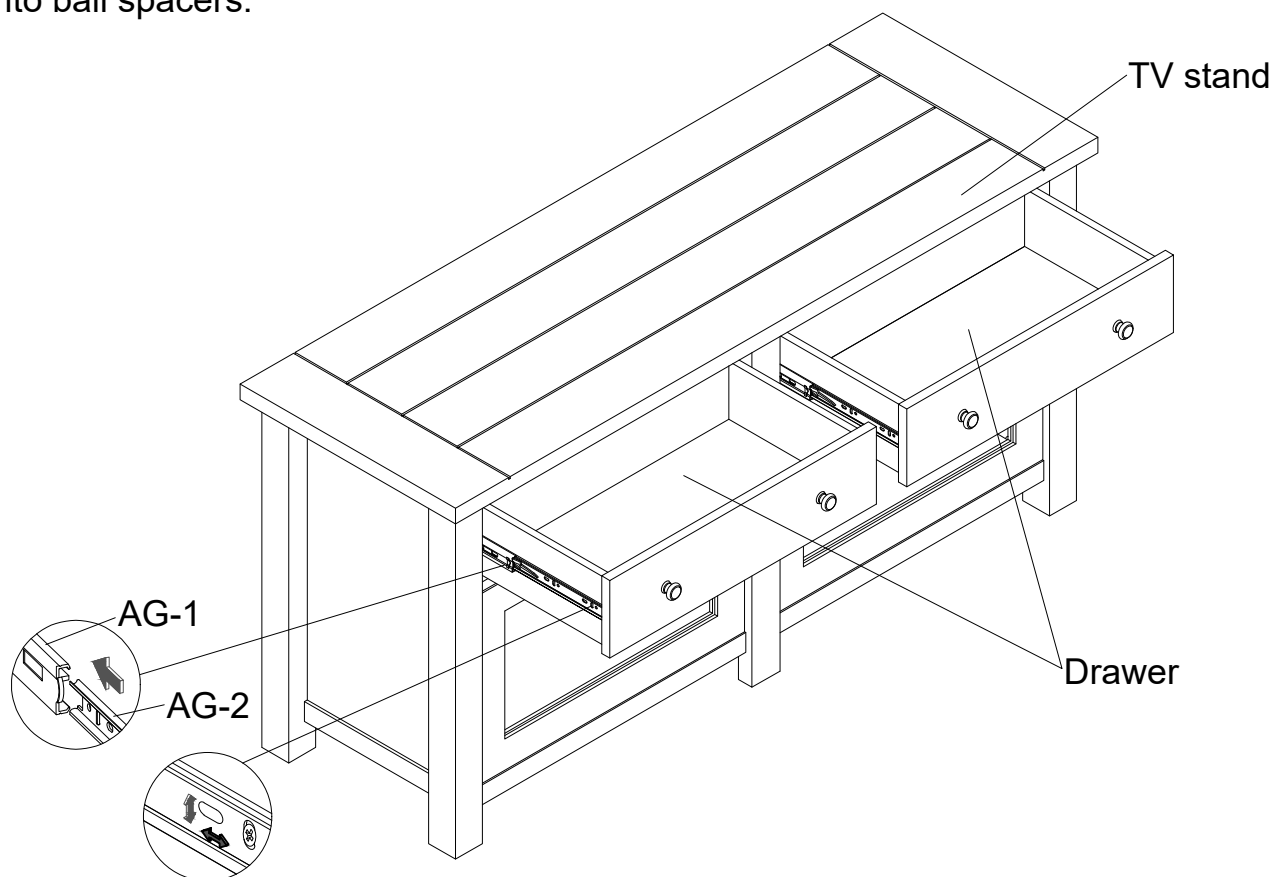

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.