

## **ASSEMBLY INSTRUCTION**

## DAYBED




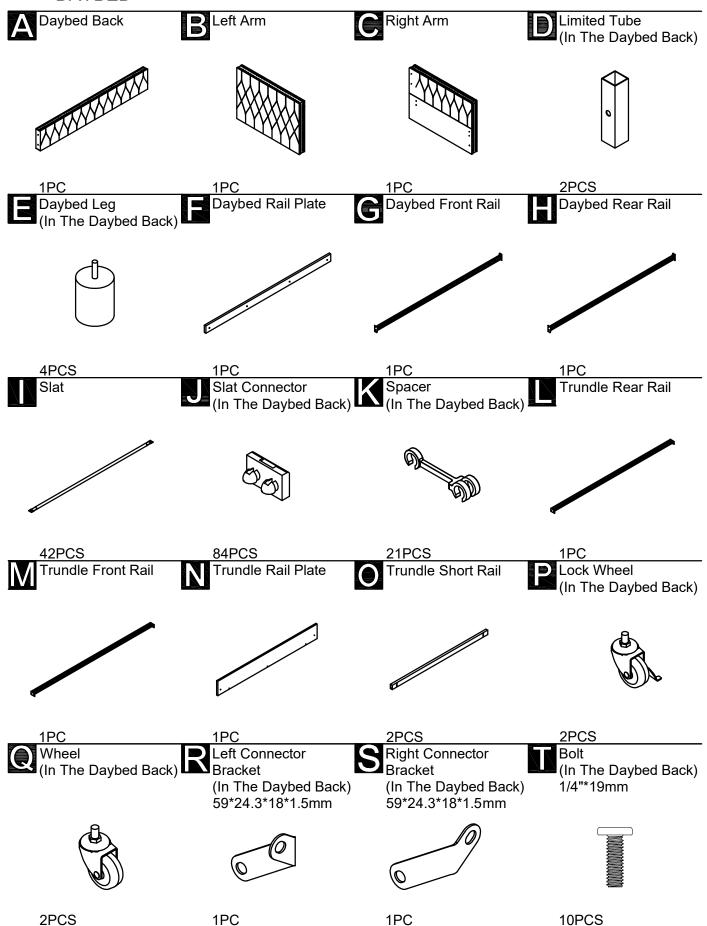

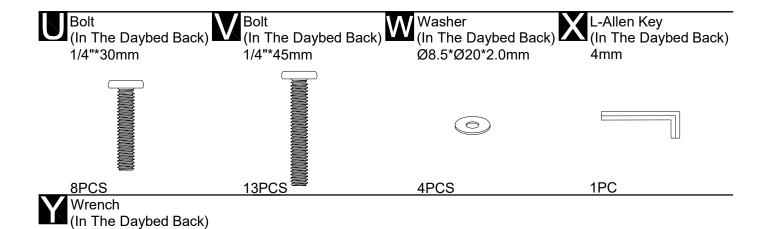


12mm

1PC

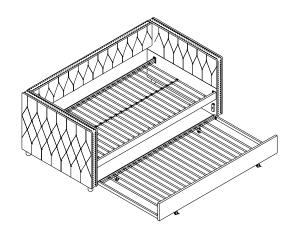


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

Take out Parts (D), (E), (J), (K), (P), (Q) and Hardware (R), (S), (T), (U), (V), (W), (X), (Y) from Daybed Back (A).

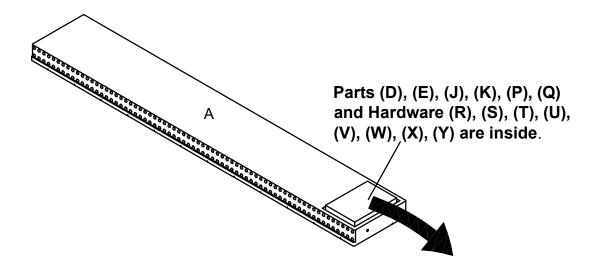


2

Attach the Limited Tube (D) into the Left Arm (B) and Right Arm (C), insert the Bolt (V), turn the L-Allen Key (X) to tighten them.

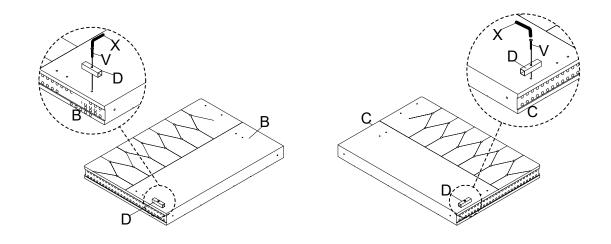


Attach the Daybed Leg (E) to the Left Arm (B) and Right Arm (C), turn the legs and tighten them in a clockwise direction.

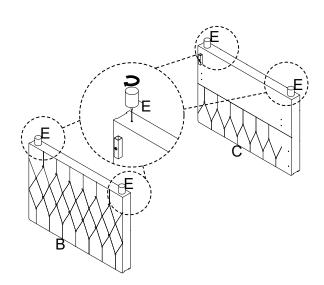




Attach the Daybed Back (A) to the Left Arm (B) and Right Arm (C), insert the Bolt (V) and the Washer (W), turn the L-Allen Key (X) to tighten them.

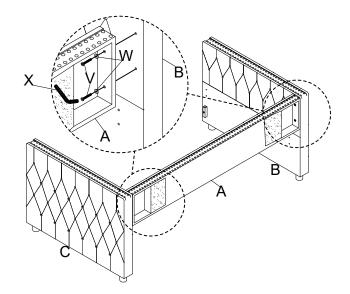


5

Attach the Daybed Front Rail (G) to the Daybed Rail Plate (F), insert the Bolt (V) and turn the L-Allen Key (X) to tighten them.

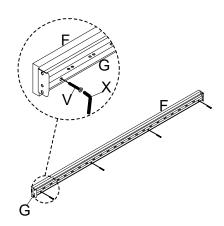


6

Attach the assembled Daybed Front Rail (G) and Daybed Rear Rail (H) to the Left Arm (B) and Right Arm (C), insert the Bolt (U) and turn the L-Allen Key (X) to tighten them.

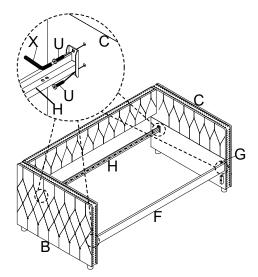





Insert the Slat Connector (J) to the both sides of Slat (I), press the Slat (I) to the correct place.

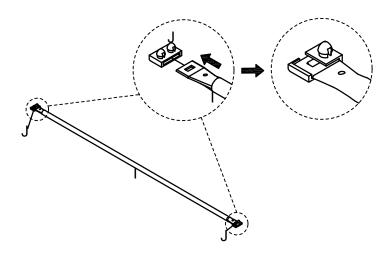


Attach the assembled Slats (I) to the daybed rails, insert the Slat Connector (J) into the correct holes.

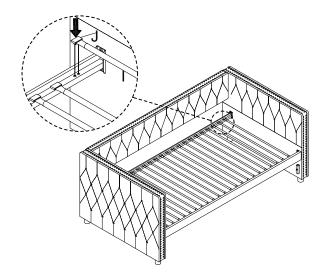


Make the Spacer (K) to connect two slats as below instruction.

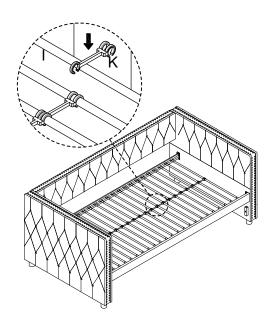

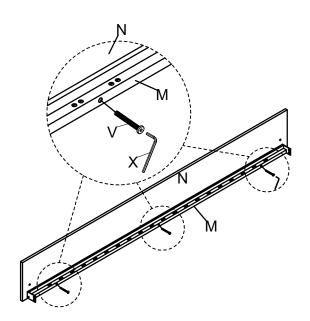


Attach the Trundle Short Rail (O) to Trundle Front Rail (M) and Trundle Rear Rail (L), then attach Left Connector Bracket (R) and Right Connector Bracket (S) to Trundle Front Rail (M) and Trundle Rail Plate (N), insert the Bolt (T) and turn the L-Allen Key (X) to tighten them.

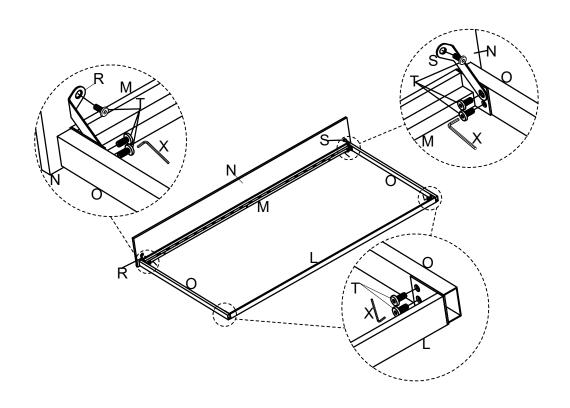


12

Turn over the assembled trundle. Attach the Lock Wheel (P) to the Trundle Front Rail (M), turn the Wrench (Y) to tighten them. Attach the Wheel (Q) to the Trundle Rear Rail (L), turn the Wrench (Y) to tighten

them.

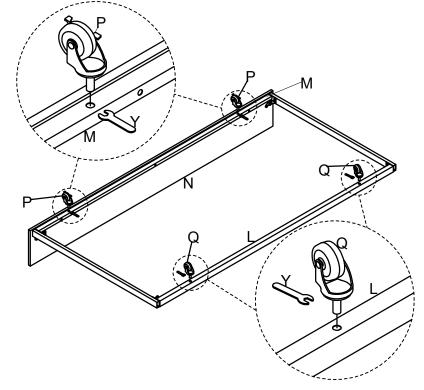

Turn over the trundle again. Attach the assembled Slats (I) to the trundle rails, insert the Slat Connector (J) into the correct holes.

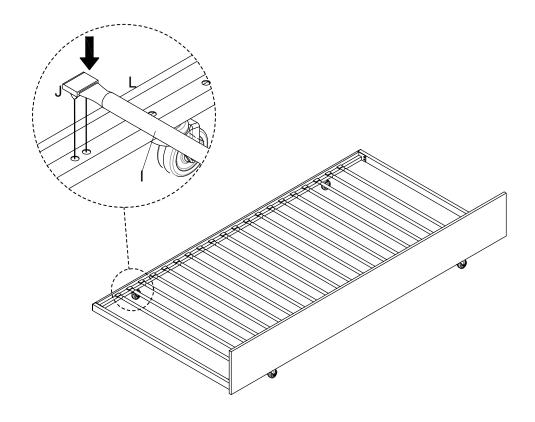

Insert the assembled trundle into the daybed. Or push out the trundle from the daybed.

## Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.