


OLKI3 Oak Log Placement for Model GDI3

⚠ WARNING

- Failure to position the logs in accordance with these diagrams or failure to use only logs specifically approved with this appliance may result in property damage or personal injury.
- Logs must be placed in their exact location in the appliance. Do not modify the proper log positions, since appliance may not function properly and delayed ignition may occur.
- The logs are fragile and should be handled with care.


PHAZER™ logs and glowing embers, exclusive to Napoleon, provide a unique and realistic glowing effect that is different in every installation. Take the time to carefully position the glowing embers for a maximum glowing effect. Log colours may vary. During the initial use of the appliance, the colours will become more uniform as colour pigments burn in during the heat-activated curing process.

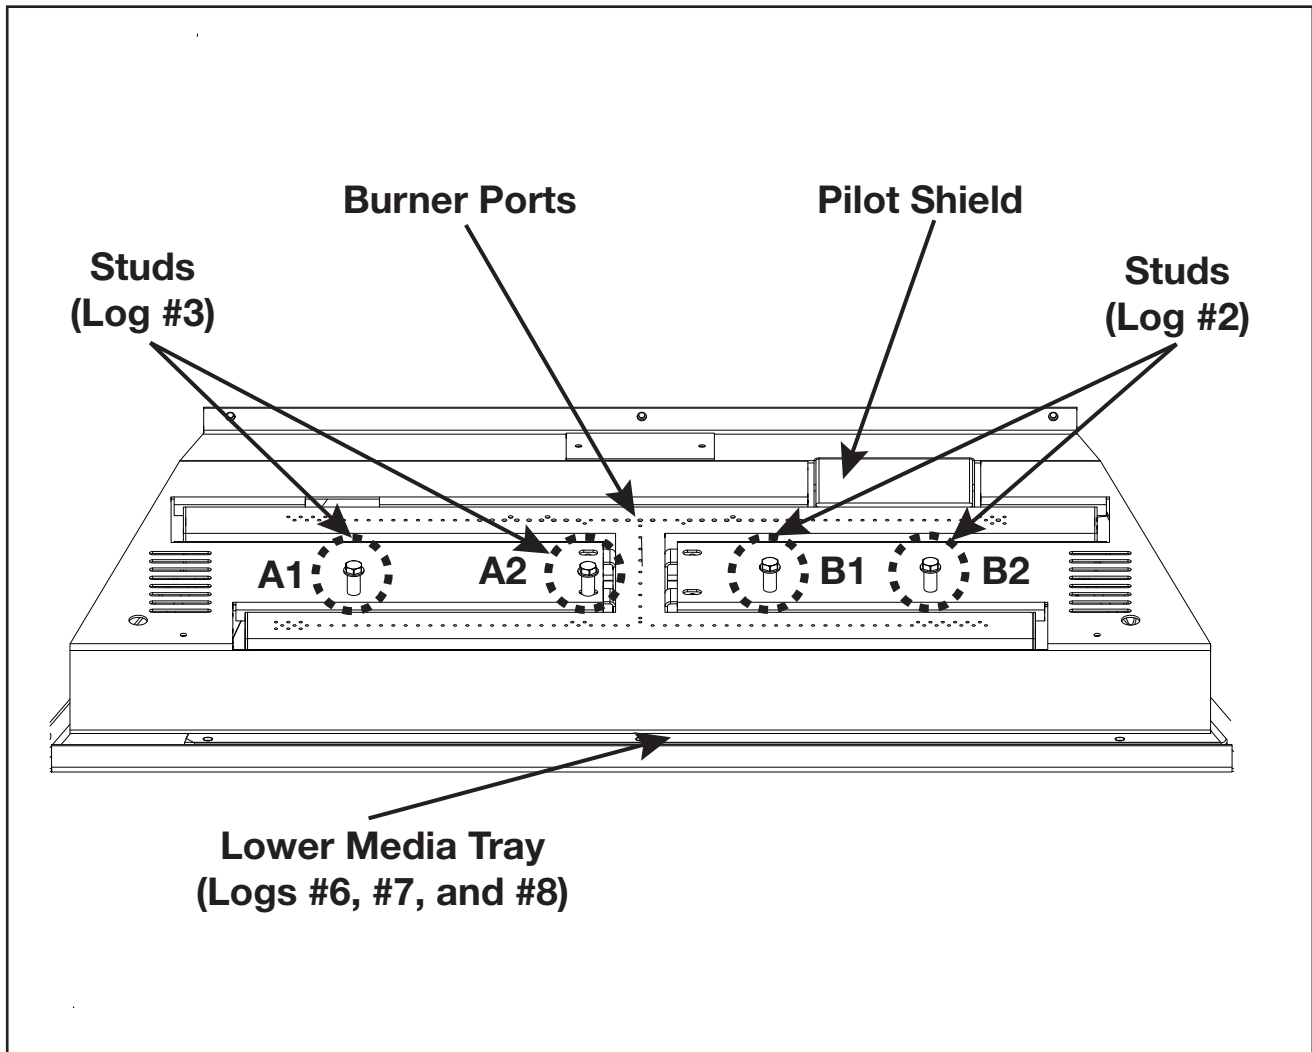


Burner Overview

Quality System Certified To
ISO
9001:2015


W415-1901 / B / 10.30.18

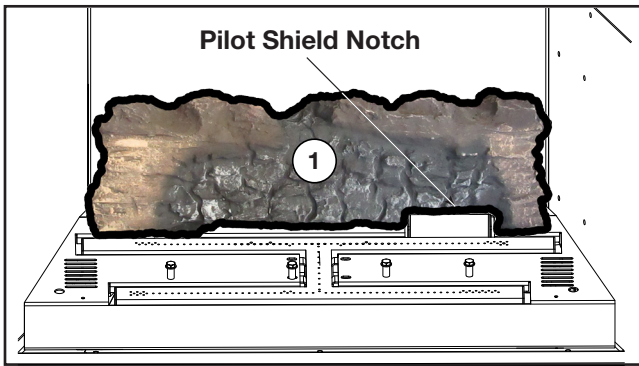


1. Place log #1 snug against the back wall, ensuring the notch fits around the pilot shield.

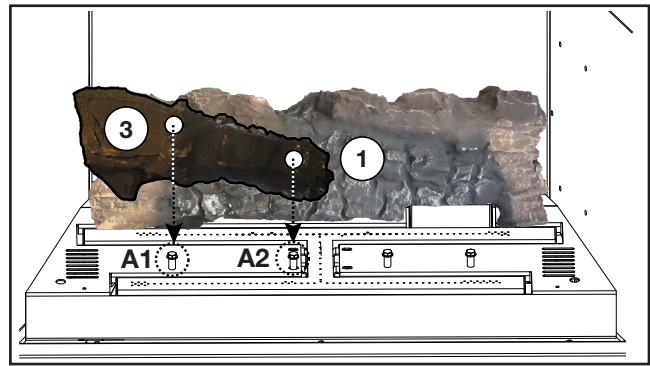


2. Place the two holes in log #3 on A1 and A2. Do not cover any burner ports.

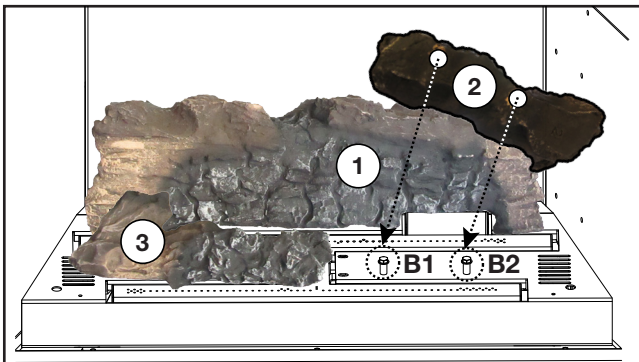


3. Place the two holes in log #2 on B1 and B2. Do not cover any burner ports.

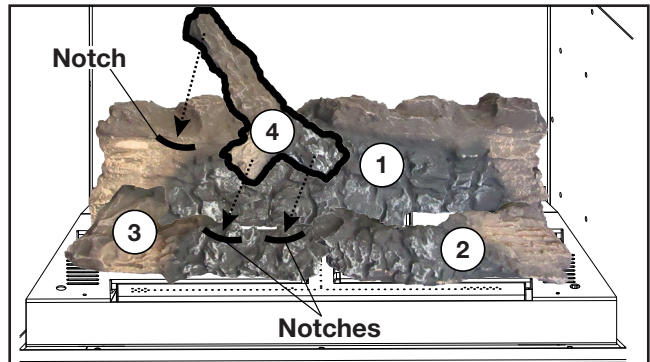


4. Place log #4 on the left-side notch of log #1 and the two notches of log #3.

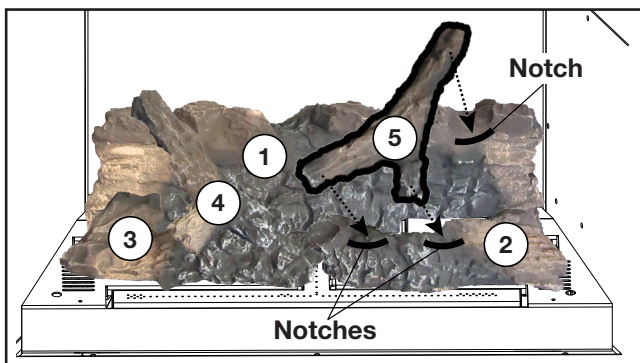


5. Place log #5 on the right-side notch of log #1 and the two notches of log #2.

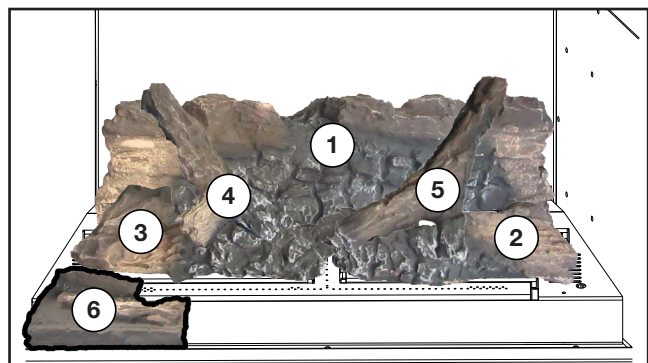



6. Place log #6 along the left side of the lower media tray.

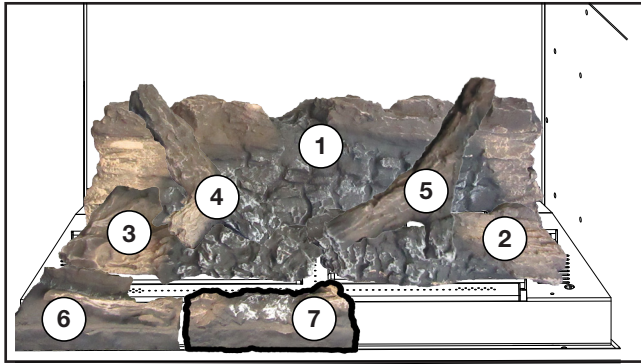


7. Place log #7 along the centre of the lower media tray.

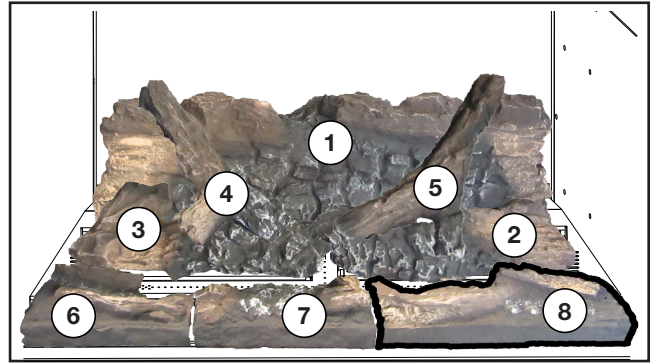


8. Place log #8 along the right side of the lower media tray.

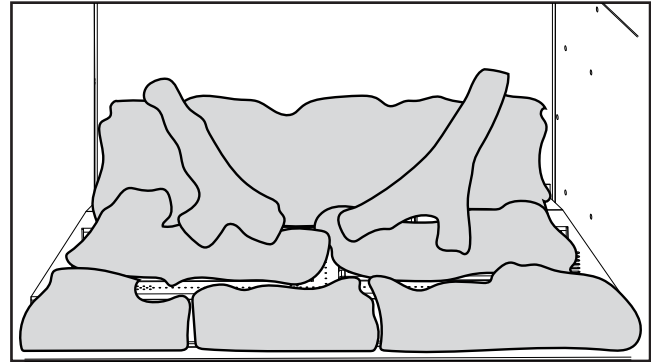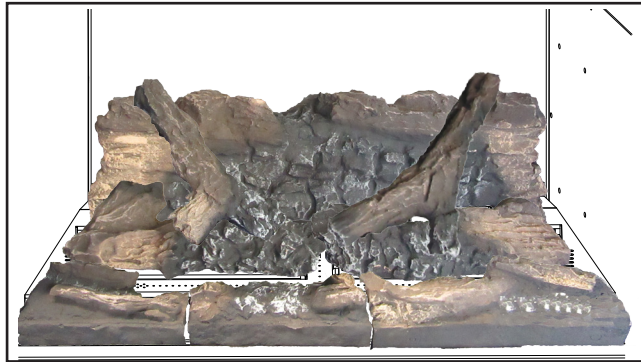


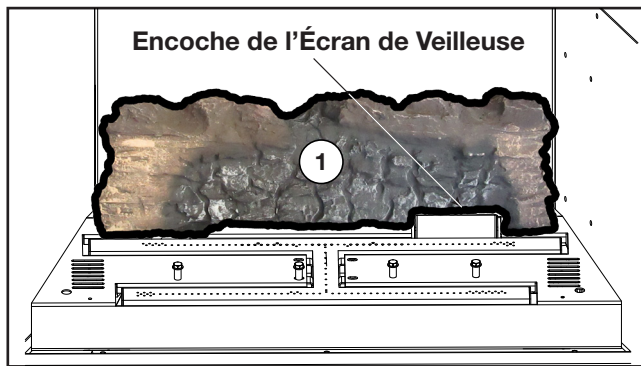


1. Placez la bûche #1 contre le mur arrière. Assurez-vous que l'encoche soit ajustée autour de l'écran de la veilleuse.

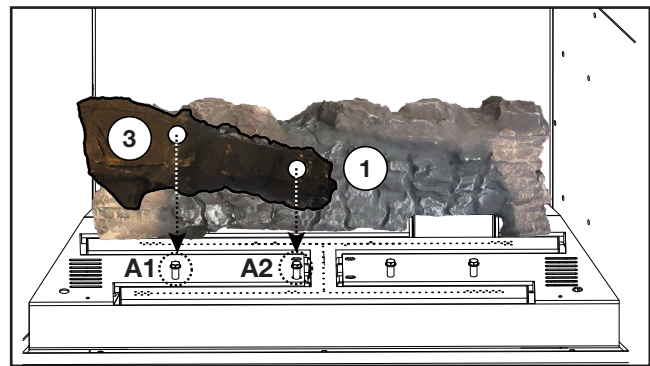


2. Placez les deux trous de la bûche #3 sur A1 et A2. Ne couvrez pas les orifices du brûleur.

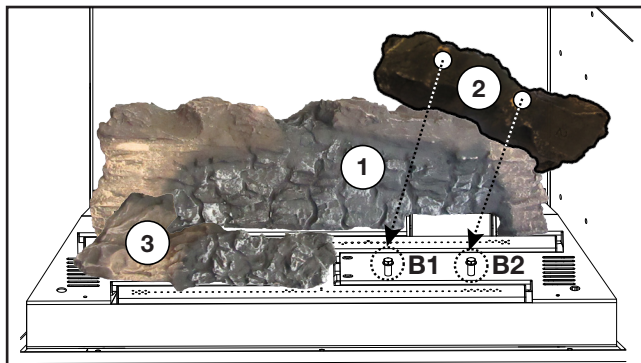


3. Placez les deux trous de la bûche #2 sur B1 et B2. Ne couvrez pas les orifices du brûleur.

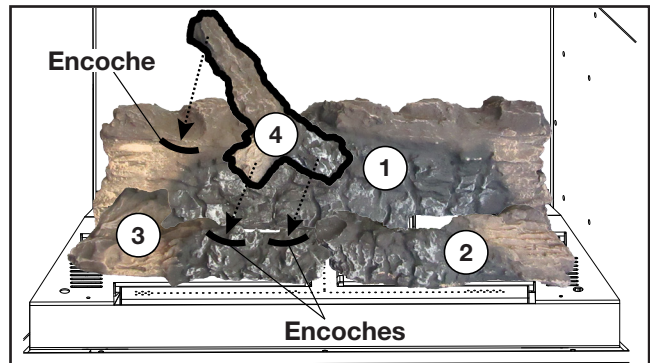


4. Placez la bûche #4 sur l'encoche gauche de la bûche #1 et les deux encoches de la bûche #3.

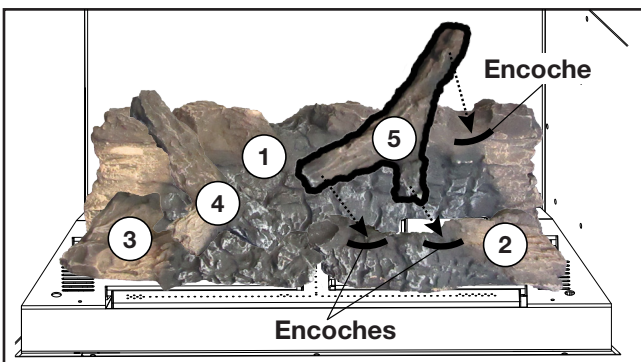


5. Placez la bûche #5 sur l'encoche droite de la bûche #1 et les deux encoches de la bûche #2.

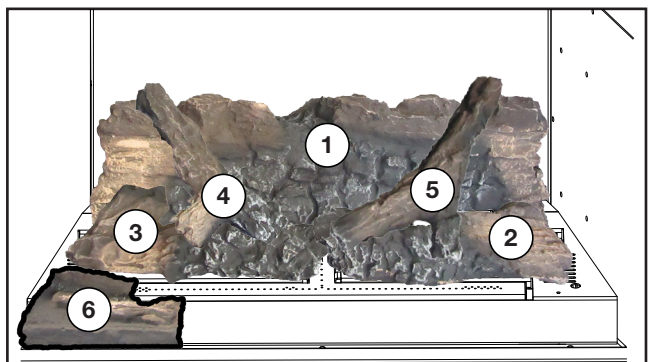

6. Placez la bûche #6 sur le côté gauche de la plateau à média inférieure.

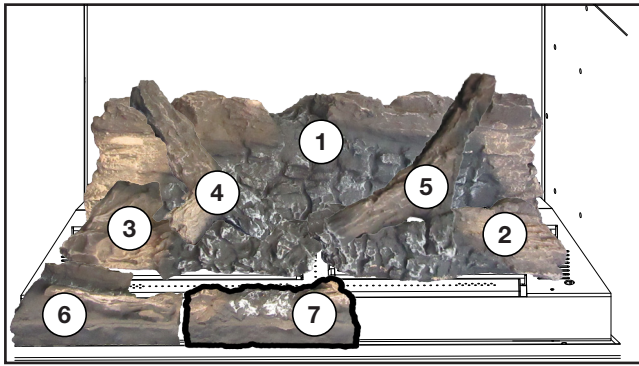

7. Placez la bûche #7 sur le centre de la plateau à média inférieure.

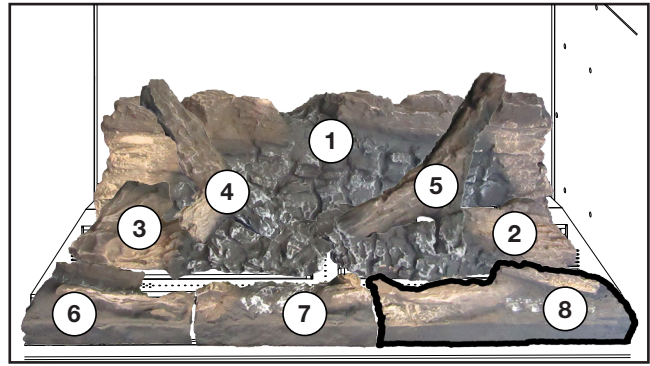

8. Placez la bûche #8 sur le côté droit de la plateau à média inférieure.

