


# GLASSWAREHOUSE

## LAN-HH180

530 Glass to glass for 10mm (3/8")- 15mm (19/32") glass

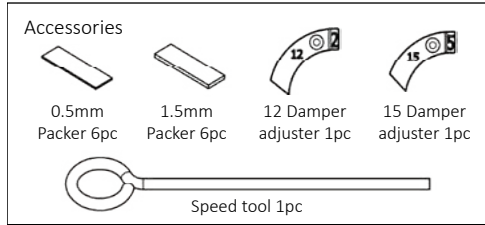


### Installation


1. Check that the alignment of the glass hinge panel is plumb.




Watch the install video

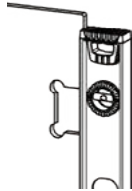


4. Open the top hinge and place packers below the hinge. Push them in level with the glass then rest the hinge on the packer. Repeat for the bottom hinge. Make sure the hinges are plumb. Then tighten the cover plate screws on the hinge panel side.

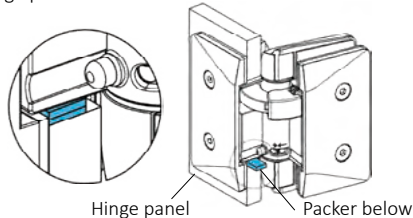


2. Undo the cover plate screws completely, then screw them back in 2 to 3 turns. For 12mm (1/2") and above panel thickness, remove the rear spacer from the corresponding side. For 10mm (3/8") panel leave the rear spacer in.



5. Place the gate panel on timber blocks to bring it close to level with the other panels. Then slide the gate panel into the hinges. Position the gate panel with the latch side 1mm higher. Then tighten the cover plate screws.

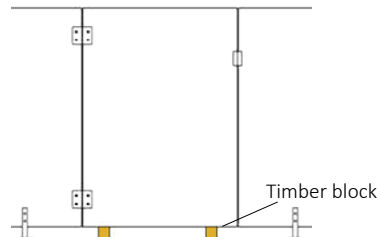

3. Take one hinge and slide the D plate side into the top cut out of the hinge panel. Lightly tighten the cover plate screws. The hinge should still be movable in the cut out. Repeat these steps for the other hinge in the bottom cut out.



6. Open the gate and on the gate panel side, insert the packers above the hinge for both top and bottom hinges. Push packers in level with the glass, then carefully test the gate and make sure it opens freely.

