


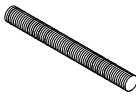











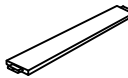
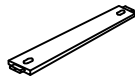
HEKMAN®

A HOWARD MILLER COMPANY

8-1217 SERVANT COFFEE TABLE

HARDWARE LIST								
A	B	C	D	E	F	G	H	I
BOLT M8 x 100 (2 PCS.)	HALF WASHER M8 (2 PCS.)	HEXAGON NUTS M8 (2 PCS.)	ALLEN BOLT M8 X 40 (6 PCS)	FLAT W. M8 (6 PCS.)	LOCK W. M8 (6 PCS.)	SCREW Ø8 x 1" (2 PCS.)	ALLEN KEY M4 (FOR ALLEN BOLT) (1 PC.)	WRENCH (FOR HEXA BOLT) (1 PC.)
								

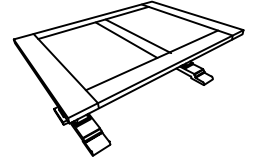

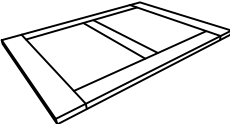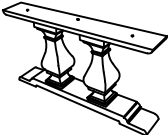PART INSIDE				
1	2	3	4	5
TOP PANEL (1 Pc)	WOOD LEG (2 Pcs)	DECORATION (2 Pcs)	TOP STRETCHER (1 Pc)	BOTTOM STRETCHER (1 Pc)
				

Assembly Instruction

STEP 1:

INSERT CONNECTING BOLT (A) INTO INSERT IN LEG ASSEMBLIES. PLACE TOP STRETCHER (4) AND BOTTOM STRETCHER (5) IN POSITION AND LOCK WITH HALFMOON WASHER (B), HEXAGON NUTS (C) USING WRENCH (I) PROVIDED.

STEP 2.

INSTALL THE DECORATION (3) ONTO THE WOOD LEG USING SCREW (G) TIGHTEN WITH SCREW DRIVER (NOT INCLUDED)

STEP 3.

LAY TOP PANEL UPSIDE DOWN ON A SOFT, CLEAN AND FLAT SURFACE. ALIGN THE HOLES IN THE TOP PLATE OF THE LEG ASSEMBLIES WITH THE INSERT IN THE BOTTOM PANEL OF THE TOP ASSEMBLY. CONNECT USING FLAT WASHER (E), LOCK WASHER (F), ALLEN BOLT (D) AND ALLEN KEY (H) PROVIDED.

