



X A HOWARD MILLER COMPANY

ASSEMBLY INSTRUCTION FOR 24940 DESK W/3 DRAWERS

HARDWARE LIST			
NO.	ITEM	DESCRIPTIN	QTY.
1		Bolt M8X25 MM	20
2	0	Flat washer M8X25 MM	20
3		NUT	8
4	2	Wrench	1

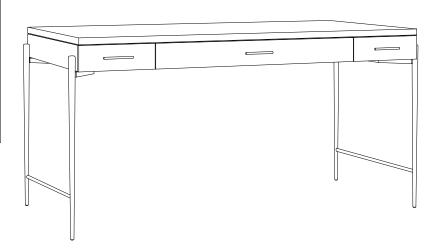

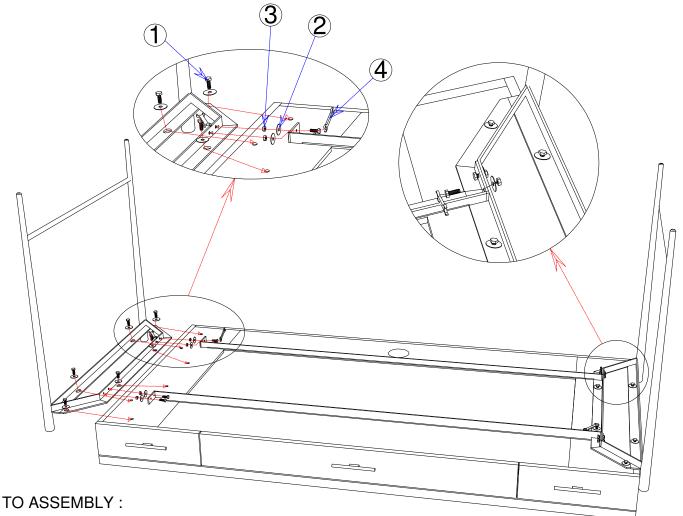

- STEP 1: Unpack desk and turn the desk (A) upside down. on a clean, soft surface.
- STEP 2: Match the iron legs(B). use matching marks A1 & B1 on top (A).
- STEP 3: Align holes in legs (B) with holes on bottom of desk (A) and slide it into position.
- STEP 4: Thread the flat washer(2), bolt (1) & nut (3) to leg (B). Do not tighten bolts fully until all bolts have been started.
- STEP 5: Tighten bolts in step 4 fully with wrench (4) then carefully turn the desk upright.