











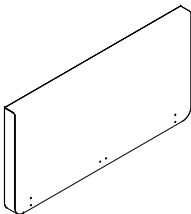


ASSEMBLY INSTRUCTION

UPHOLSTERED PLATFORM FULL BED UPHOLSTERED PLATFORM QUEEN BED


A Headboard	B Footboard	C Rail	D Leg
			
1PC	1PC	2PCS	4PCS
E Center Rail	F Support Leg	G Slat	H Slat Connector
			
1PC	2PCS	16PCS	32PCS
I Bolt 1/4" x 19mm	J Bolt 5/16" x 19mm	K Washer Ø19mm	L L-Allen Key 4mm
			
24PCS	8PCS	8PCS	1PC

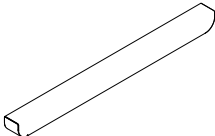

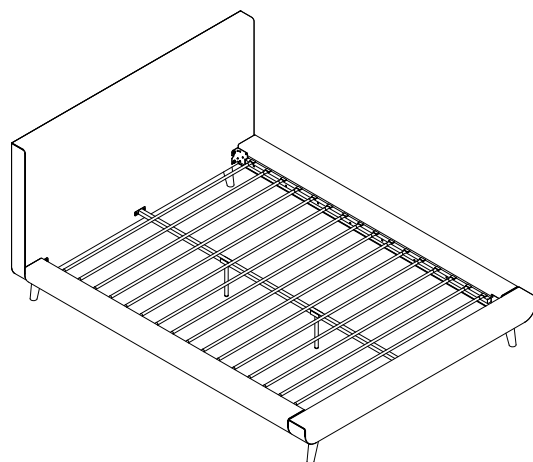
This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1


Attach the Leg (D) to Headboard (A) and Footboard (B), insert the Bolt (I), turn the L-Allen Key (L) to tighten them.

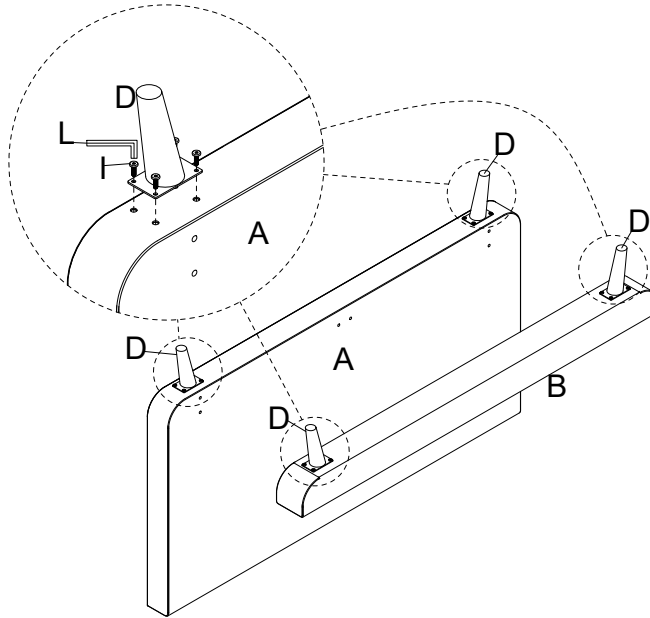**2**

Attach the Rail (C) to Headboard (A) and Footboard (B), insert the Bolt (J) and Washer (K), turn the L-Allen Key (L) to tighten them.

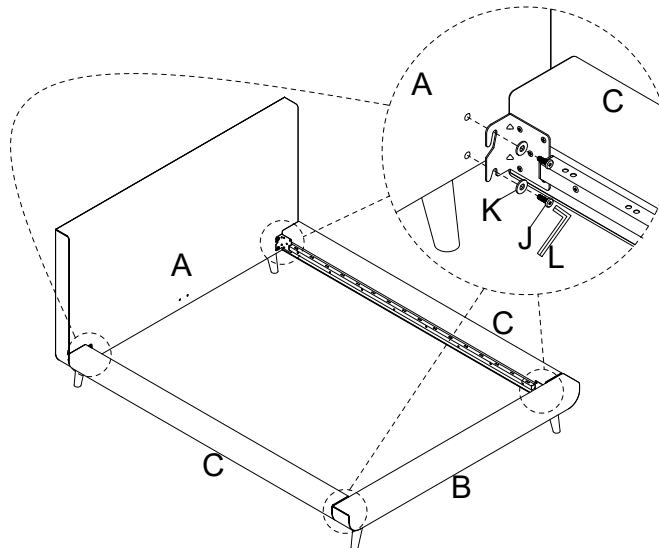
**3**

Attach the Support Leg (F) to Center Rail (E), insert the Bolt (I), turn the L-Allen Key (L) to tighten them.

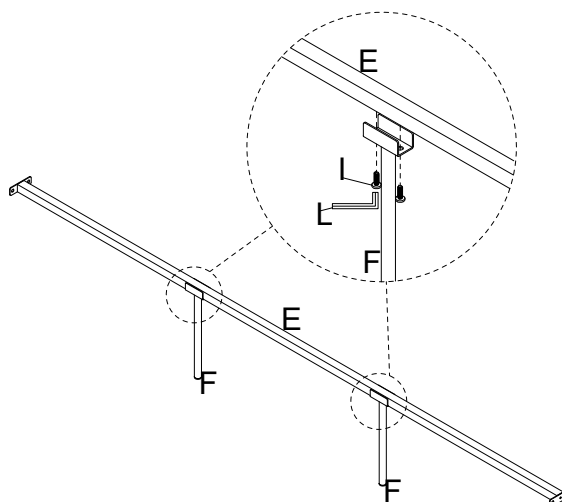


4

Attach the Center Rail (E) to Headboard (A) and Footboard (B), insert the Bolt (I), turn the L-Allen Key (L) to tighten them.

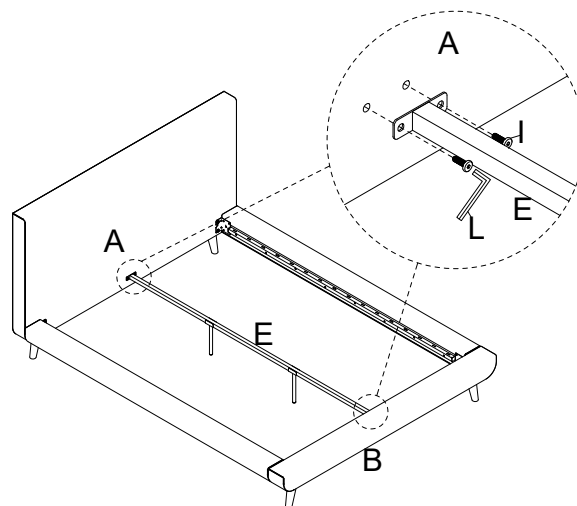


5

Insert the Slat Connector (H) to the both sides of Slat (G), press the Slat (G) into the correct place.

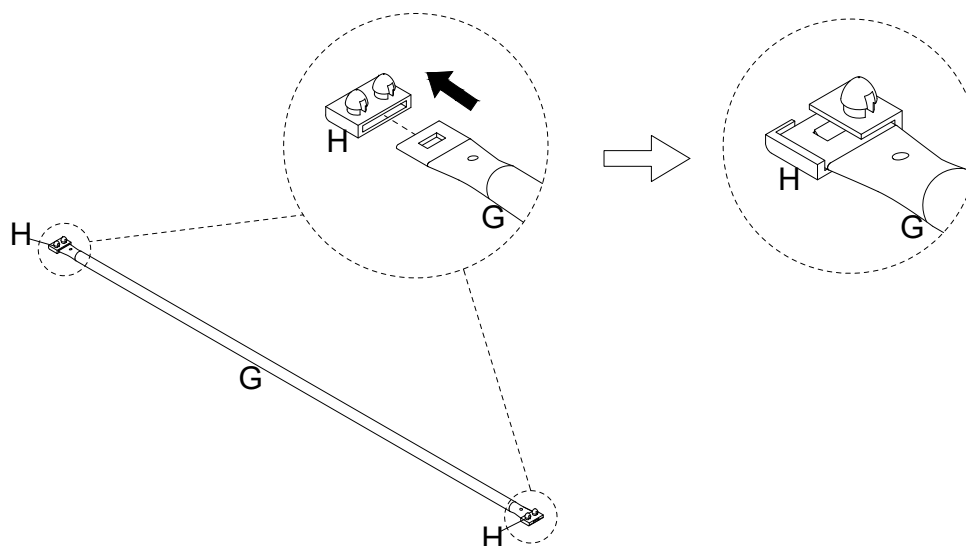

6

Attach the Slat (G) to rails, put the Slat Connector (H) into the correct places and press them down.

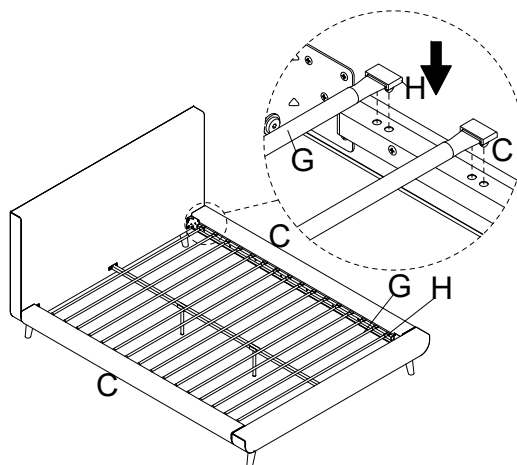

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.