

# ADONA/MADELEINE/ROYAL UPHOLSTERED QUEEN BED


## ASSEMBLY INSTRUCTIONS



### BOX#1

A. HEADBOARD  
B. LEG

1 PC  
2 PCS

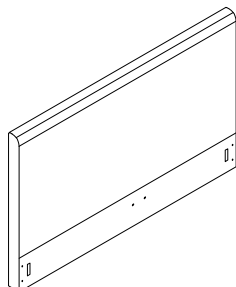

A



B


### HARDWARE KIT PACKED IN BOX #1

| No. | Description                | Image                                                                               | Quantity |
|-----|----------------------------|-------------------------------------------------------------------------------------|----------|
| 1   | ALLEN BOLT (5/16"x 3-1/2") |  | 4 PCS    |
| 2   | ALLEN BOLT (5/16"x 1-3/4") |  | 4 PCS    |
| 3   | FLAT WASHER (5/16")        |  | 12 PCS   |
| 4   | LOCK WASHER (5/16")        |  | 12 PCS   |
| 5   | ALLEN KEY (5/16")          |  | 1 PC     |
| 6   | HEX NUT (5/16")            |  | 4 PCS    |
| 7   | WRENCH                     |  | 1 PC     |


### BOX#2

C. FOOTBOARD  
D. SLAT ROLL  
E. LEG  
F. CENTER SLAT SUPPORT CLEAT

1 PC  
1 SET  
2 PCS  
2 PCS

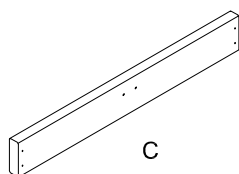

C

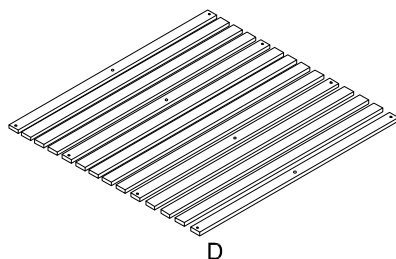

D




E



F


### HARDWARE KIT PACKED IN BOX #2

|    |                               |                                                                                       |        |
|----|-------------------------------|---------------------------------------------------------------------------------------|--------|
| 8  | THREADED BOLT (5/16"x 3-1/2") |    | 8 PCS  |
| 9  | ALLEN BOLT (5/16"x 3-1/2")    |    | 4 PCS  |
| 10 | ALLEN BOLT (5/16"x 2-1/2")    |    | 4 PCS  |
| 11 | ALLEN BOLT (1/4"x 1-1/4")     |    | 4 PCS  |
| 12 | FLAT WASHER (5/16")           |  | 16 PCS |
| 13 | FLAT WASHER (1/4")            |  | 4 PCS  |
| 14 | LOCK WASHER (5/16")           |  | 16 PCS |
| 15 | LOCK WASHER (1/4")            |  | 4 PCS  |
| 16 | HEX NUT (5/16")               |  | 8 PCS  |
| 17 | PHILLIPS SCREW (M4 x 32mm)    |  | 10 PCS |
| 18 | ALLEN KEY (5/16")             |  | 1 PC   |
| 19 | WRENCH                        |  | 1 PC   |
| 20 | CONNECTING BRACKET            |  | 4 PCS  |


### BOX#3

G. SIDE RAIL  
H. CENTER SLAT SUPPORT  
I. SUPPORT LEG

2 PCS  
1 PC  
4 PCS

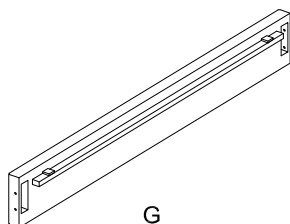

G



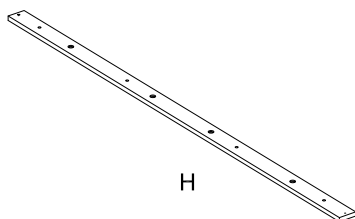


H



I

### FULLY ASSEMBLED

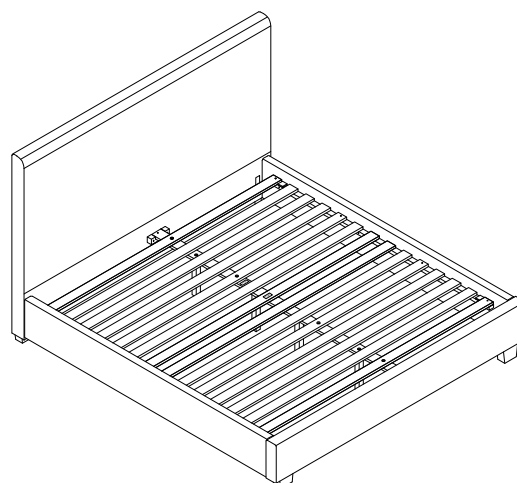


# ADONA/MADELEINE/ROYAL UPHOLSTERED QUEEN BED


## ASSEMBLY INSTRUCTIONS




### STEP 1:

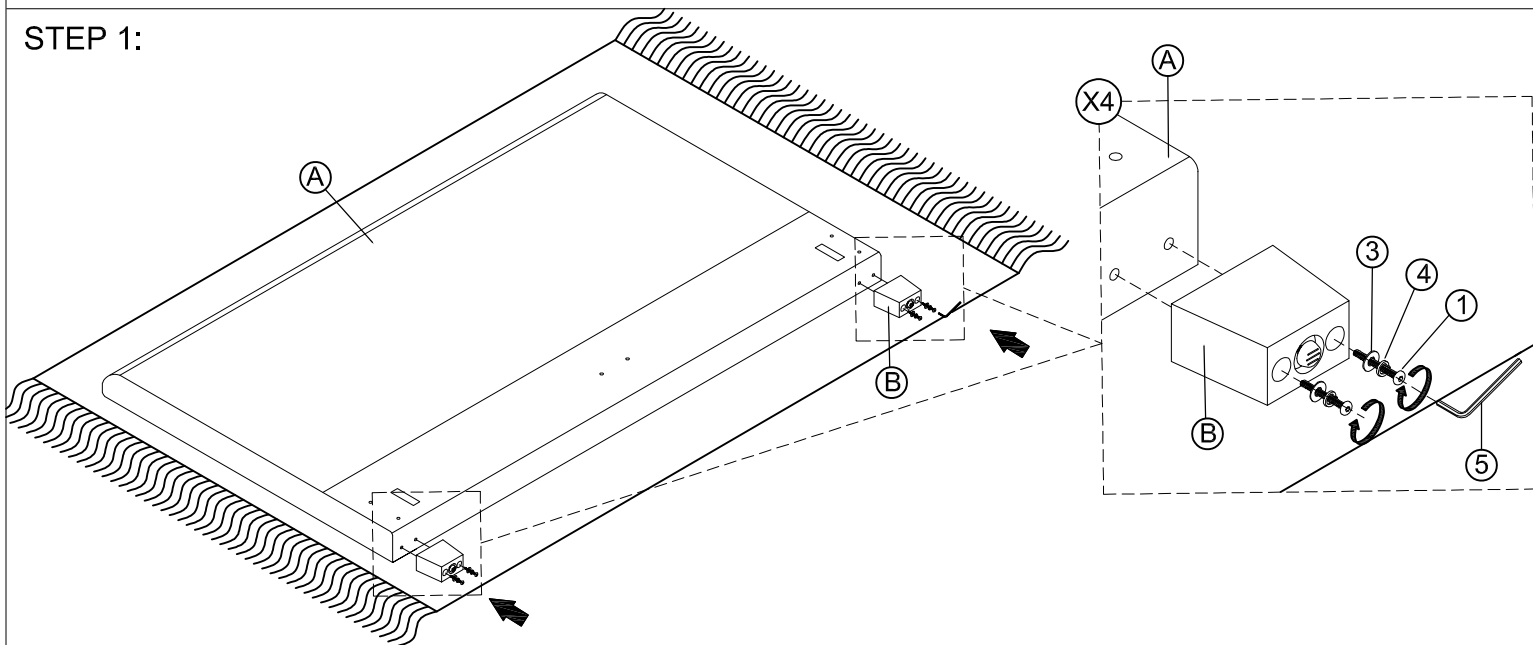

### STEP 2:

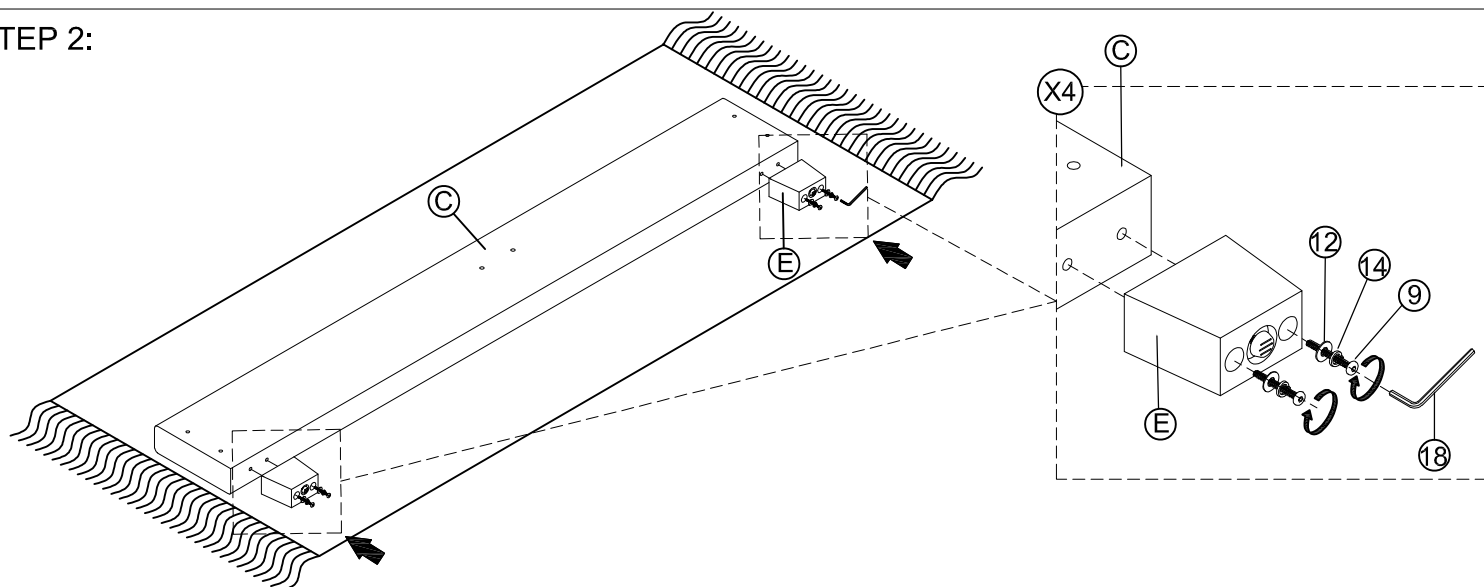


### STEP 3:

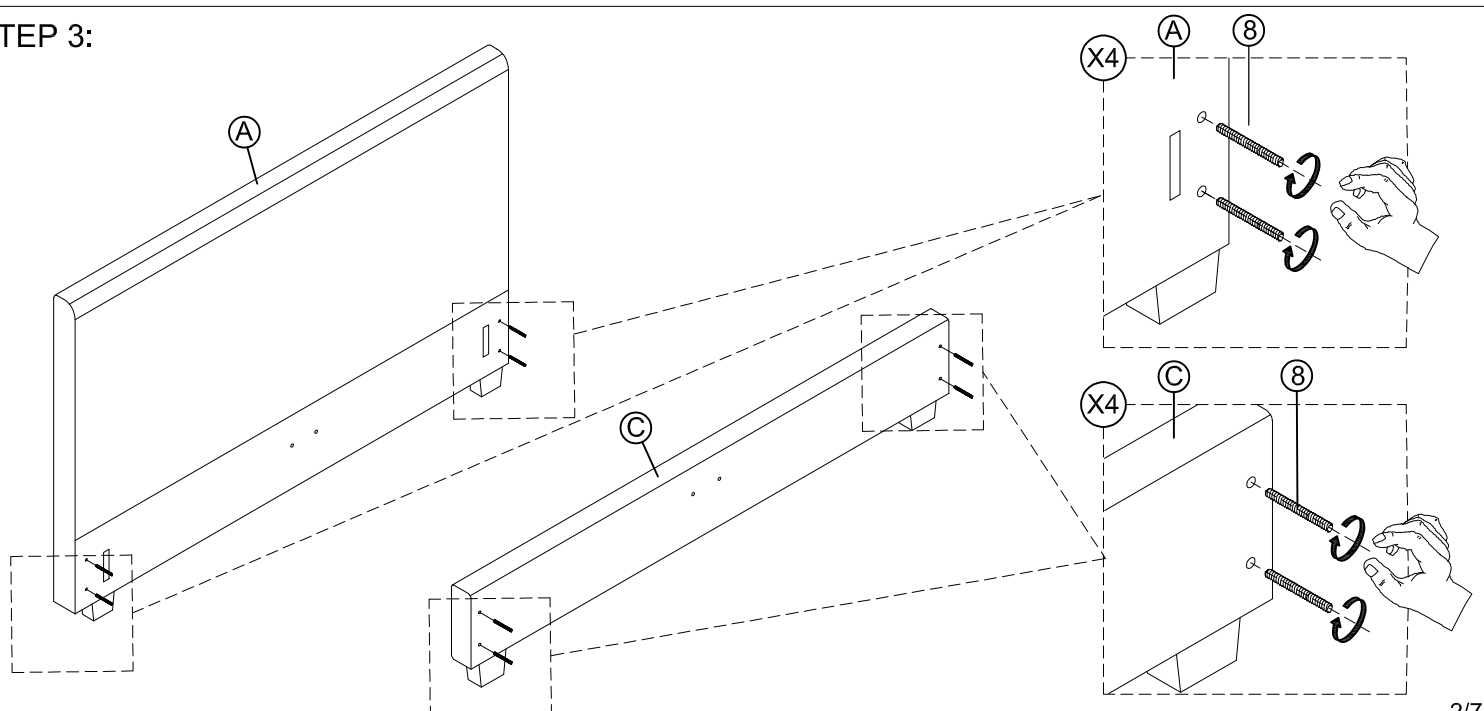


# ADONA/MADELEINE/ROYAL UPHOLSTERED QUEEN BED

## ASSEMBLY INSTRUCTIONS

### STEP 4:

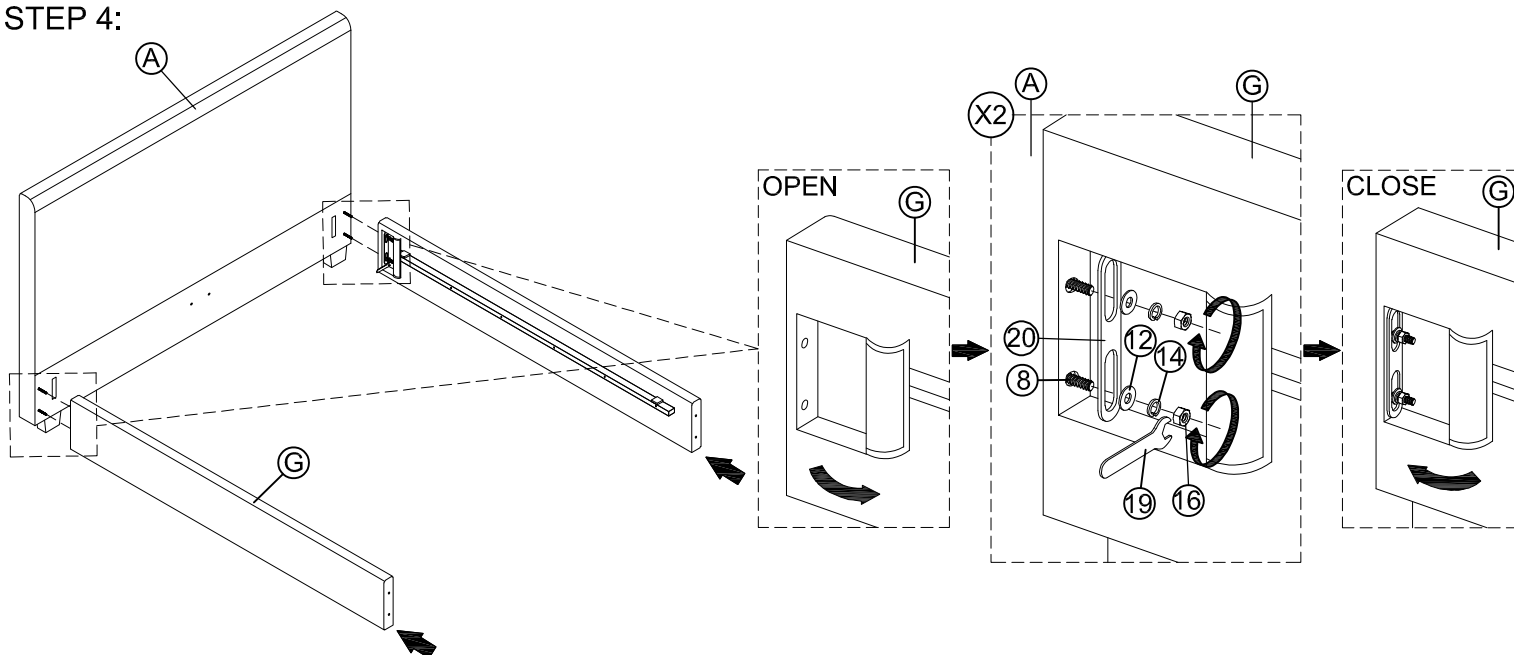

### STEP 5:

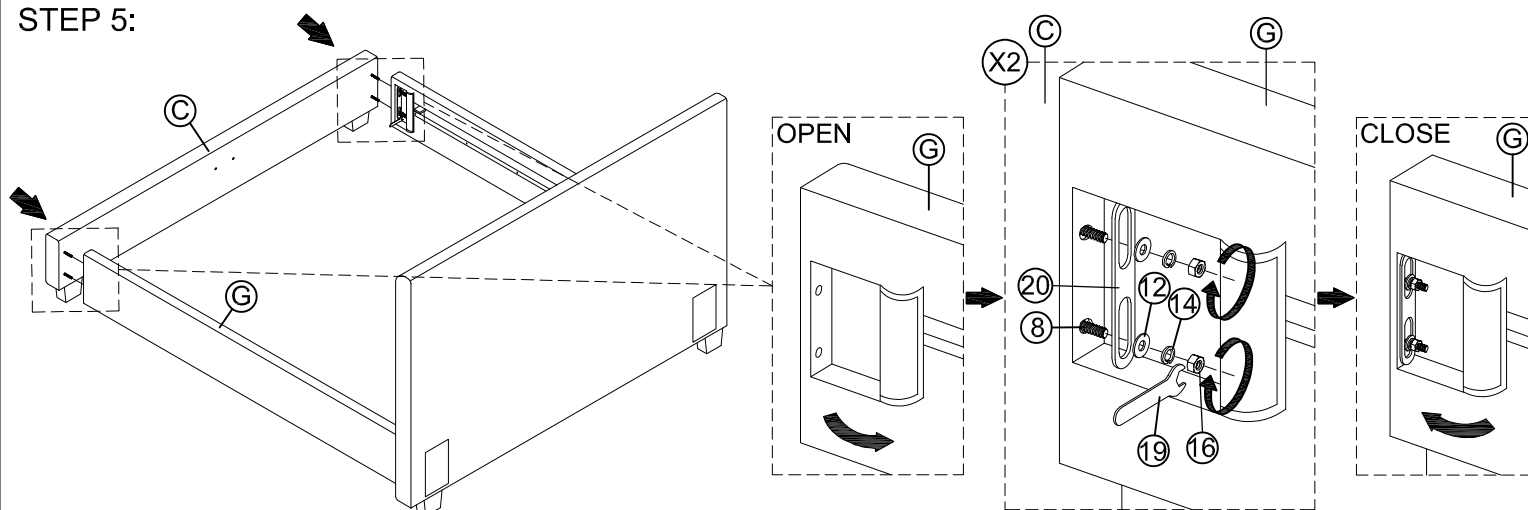


### STOP



- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 6-10 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 6.

### STEP 6:

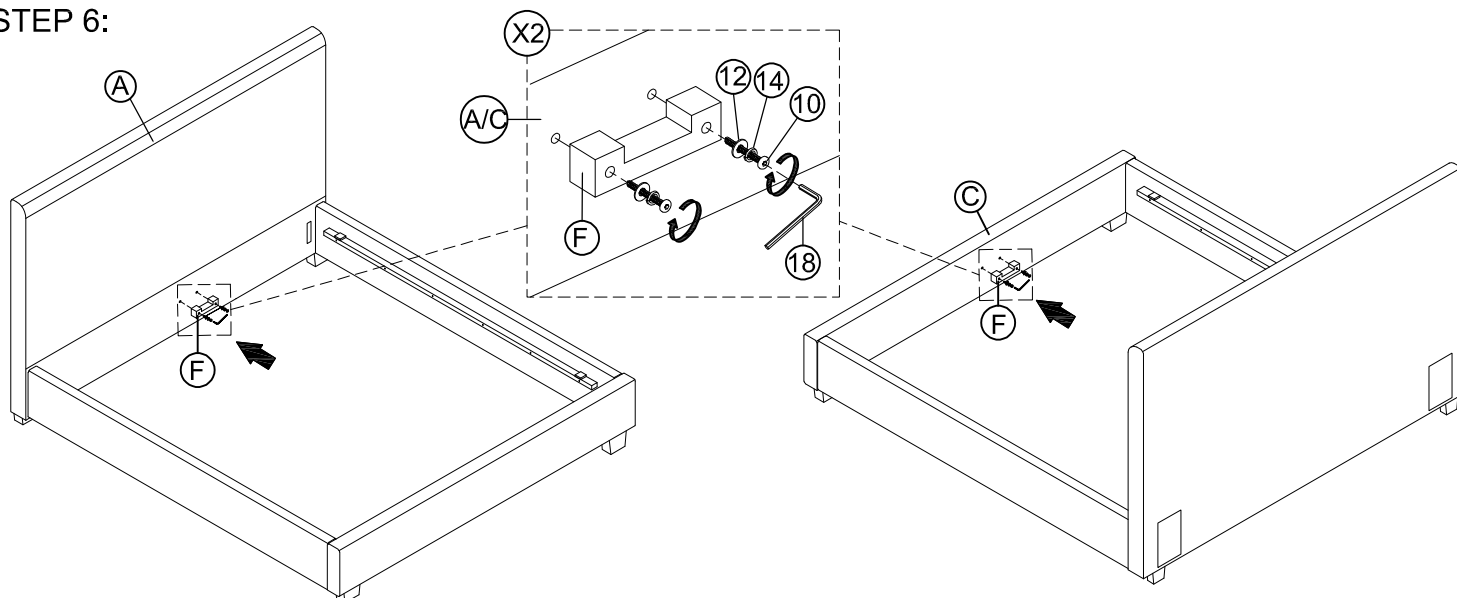


# ADONA/MADELEINE/ROYAL UPHOLSTERED QUEEN BED


## ASSEMBLY INSTRUCTIONS



### STEP 7:

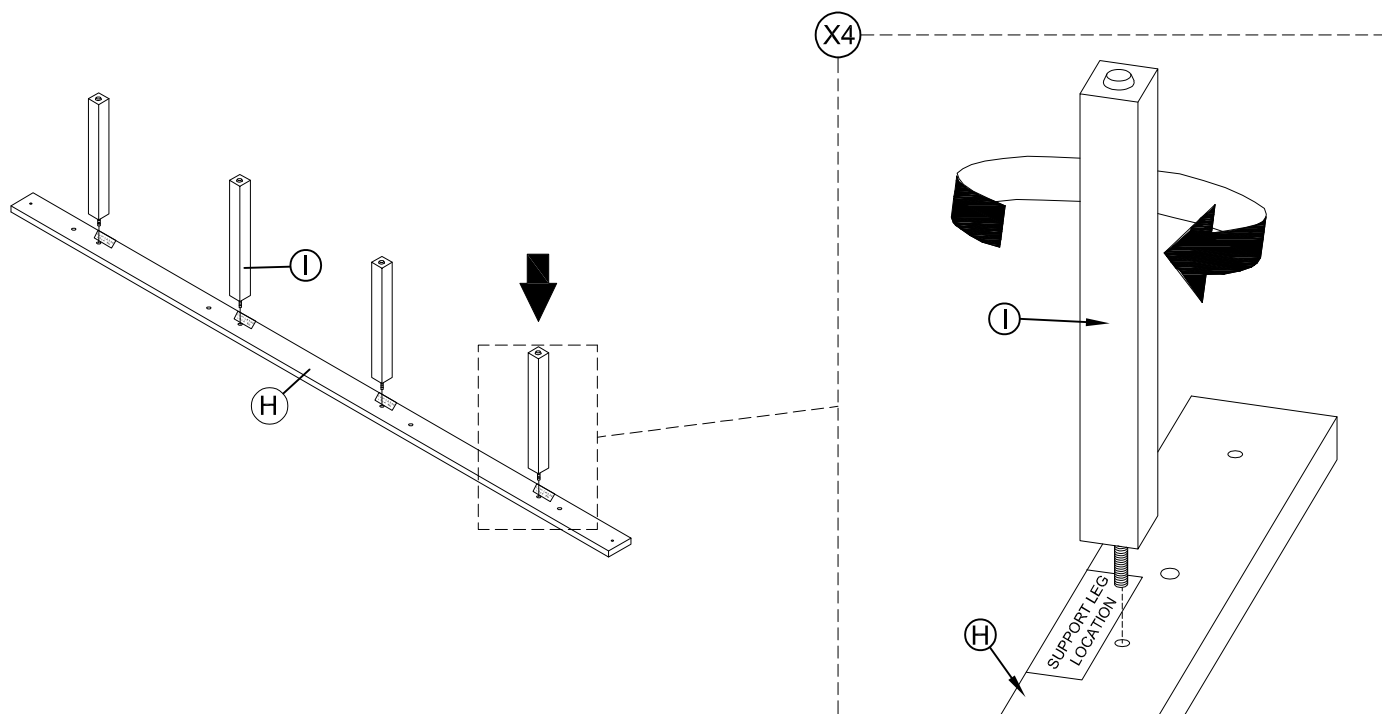

### STEP 8:

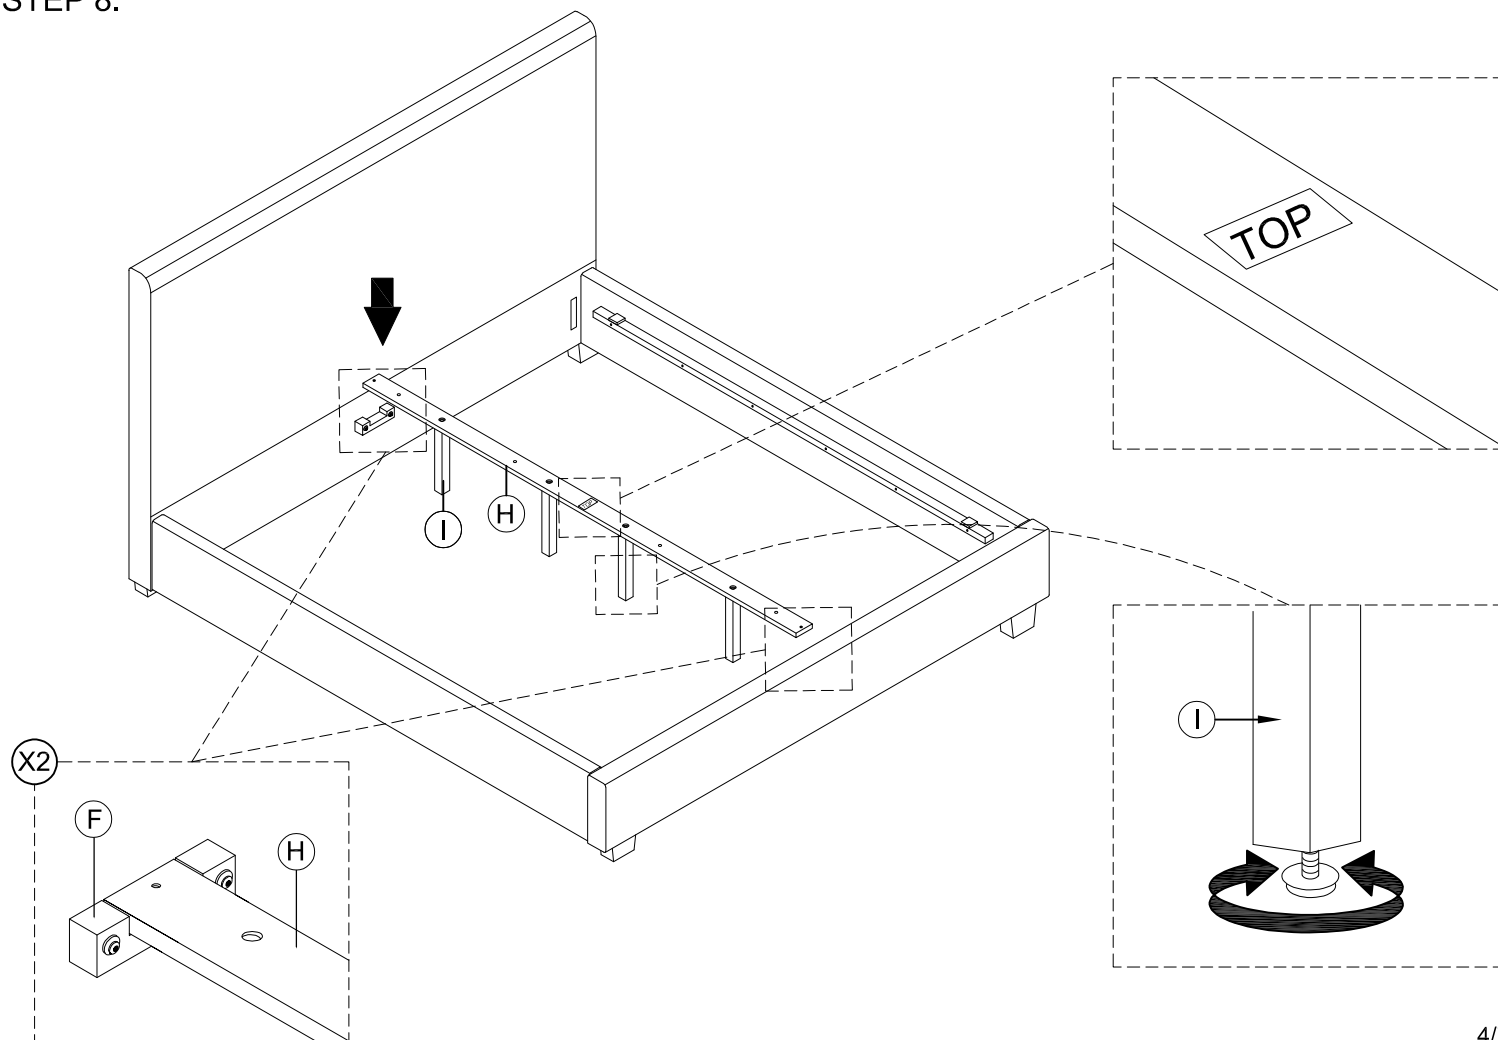


# ADONA/MADELEINE/ROYAL UPHOLSTERED QUEEN BED


## ASSEMBLY INSTRUCTIONS



### STEP 9:

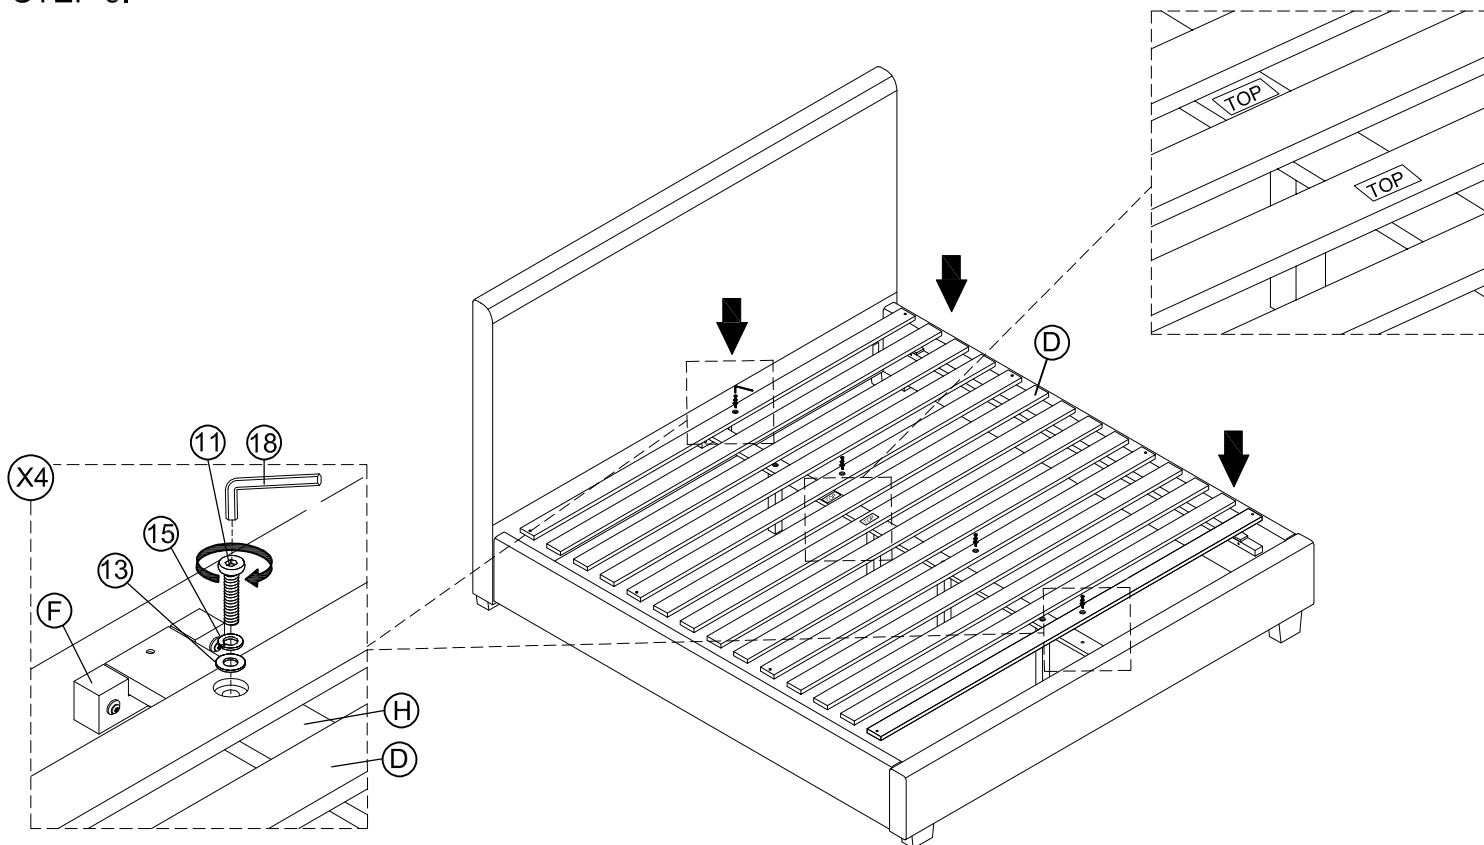


### STEP 10:

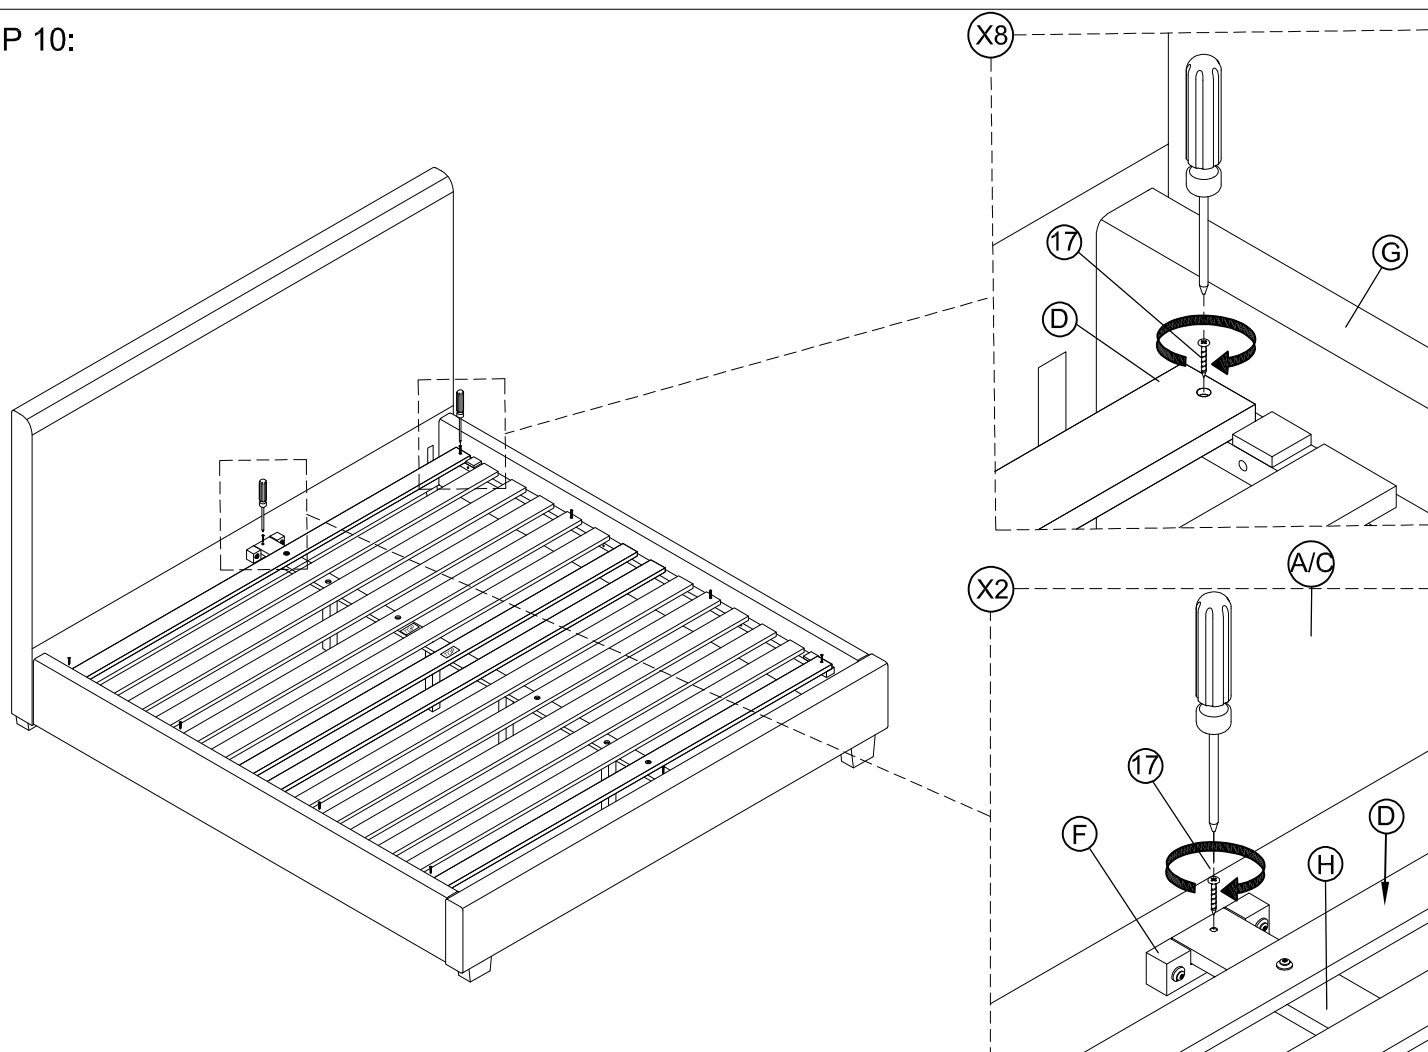

# ADONA/MADELEINE/ROYAL UPHOLSTERED QUEEN BED

## ASSEMBLY INSTRUCTIONS

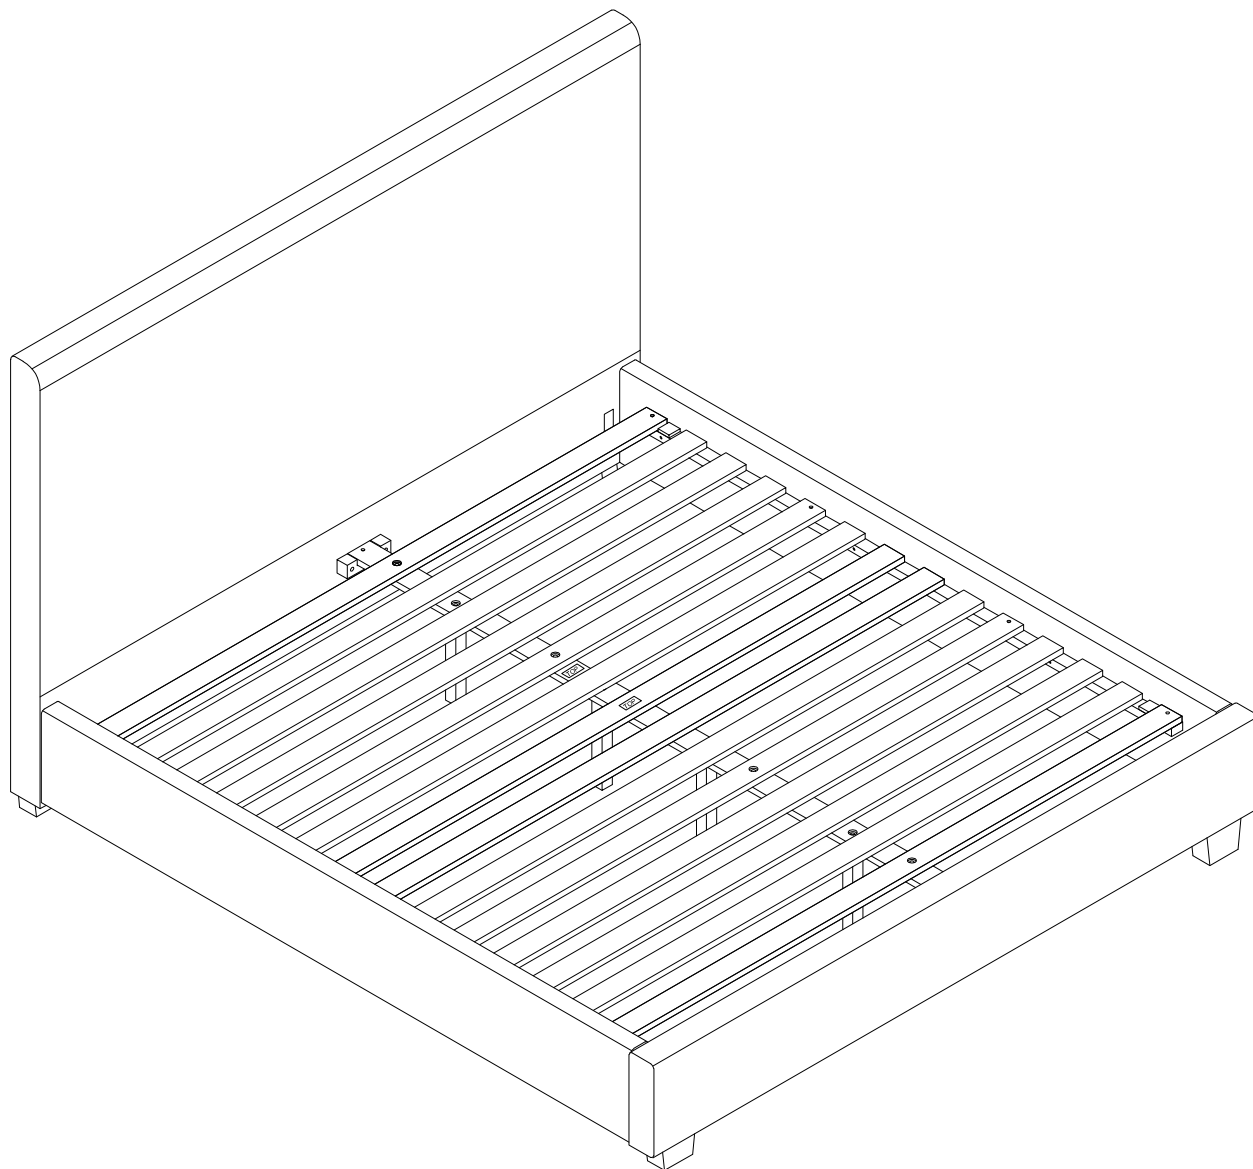


**ASSEMBLY COMPLETE**

### INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

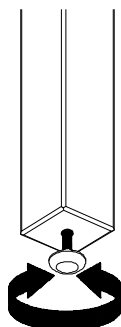

### MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

# ADONA/MADELEINE/ROYAL UPHOLSTERED QUEEN BED

## ASSEMBLY INSTRUCTIONS



### APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

#### THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

|                              |       |
|------------------------------|-------|
| D. SLAT ROLL                 | 1 SET |
| F. CENTER SLAT SUPPORT CLEAT | 2 PCS |
| H. CENTER SLAT SUPPORT       | 1 PC  |
| I. SUPPORT LEG               | 4 PCS |

#### STEP 1:

USE ALLEN KEY (18) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

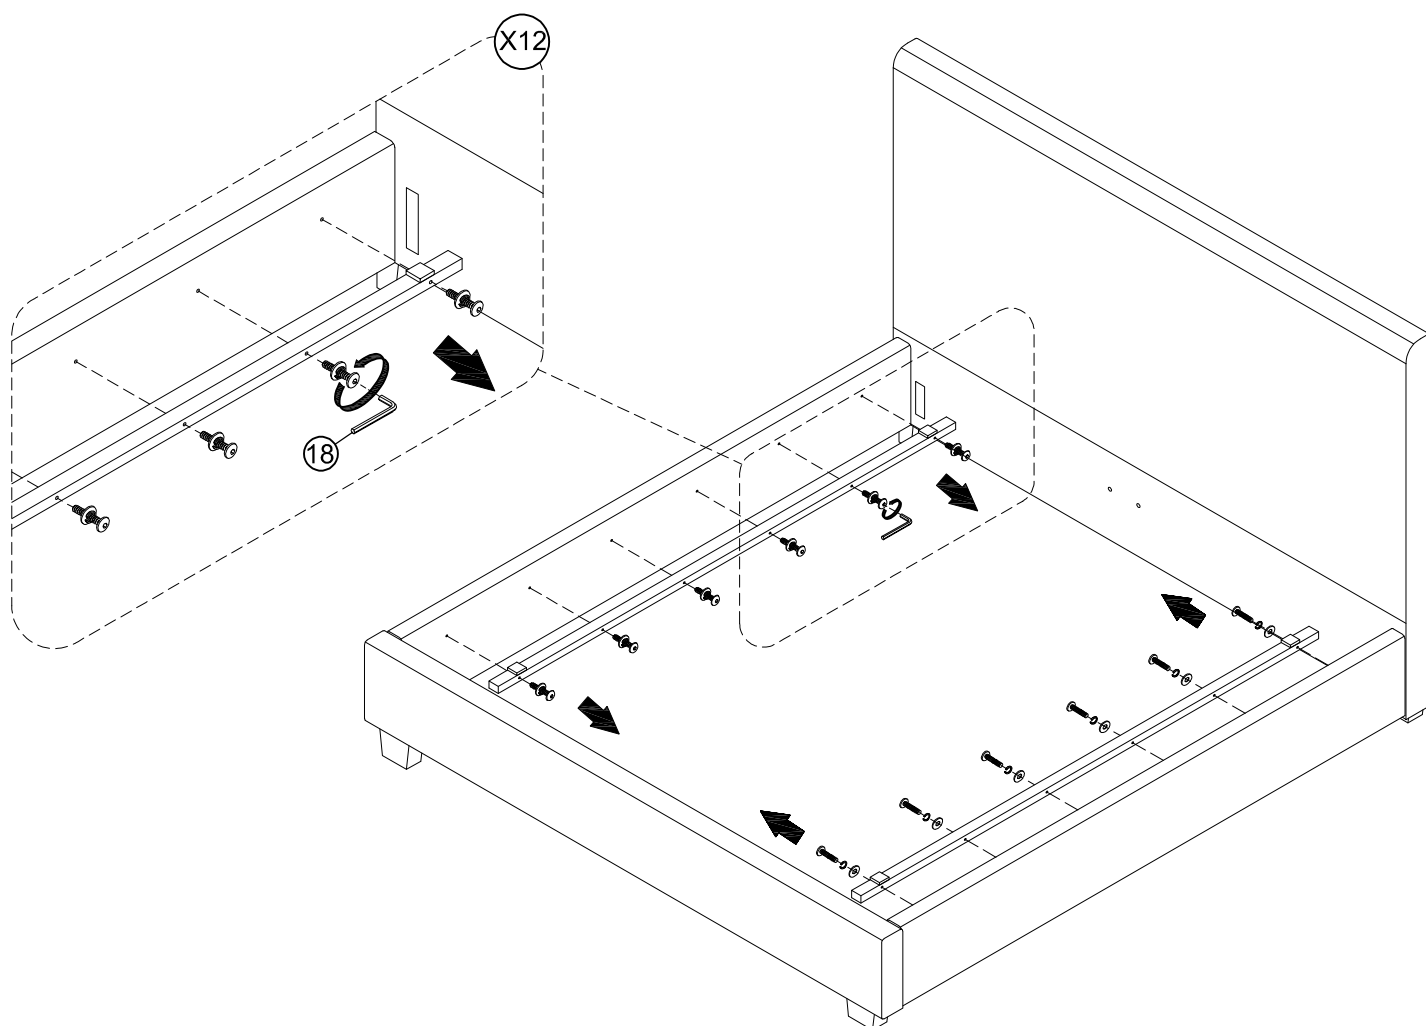

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

# ADONA/MADELEINE/ROYAL UPHOLSTERED KING BED


## ASSEMBLY INSTRUCTIONS



### BOX#1

A. HEADBOARD  
B. LEG

1 PC  
2 PCS

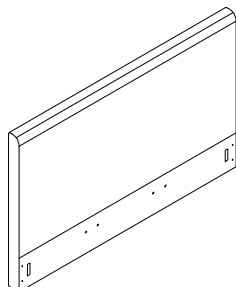

A



B


### HARDWARE KIT PACKED IN BOX #1

| No. | Description                | Image | Quantity |
|-----|----------------------------|-------|----------|
| 1   | ALLEN BOLT (5/16"x 3-1/2") |       | 4 PCS    |
| 2   | ALLEN BOLT (5/16"x 1-3/4") |       | 4 PCS    |
| 3   | FLAT WASHER (5/16")        |       | 12 PCS   |
| 4   | LOCK WASHER (5/16")        |       | 12 PCS   |
| 5   | ALLEN KEY (5/16")          |       | 1 PC     |
| 6   | HEX NUT (5/16")            |       | 4 PCS    |
| 7   | WRENCH                     |       | 1 PC     |


### BOX#2

C. FOOTBOARD  
D. SLAT ROLL  
E. LEG  
F. CENTER SLAT SUPPORT CLEAT

1 PC  
1 SET  
2 PCS  
4 PCS

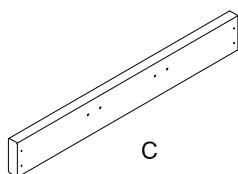

C

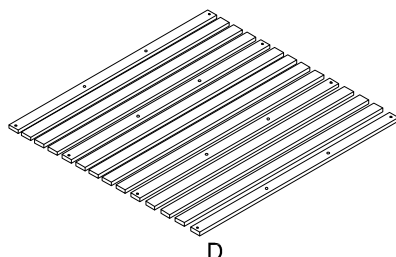

D



E



F


### HARDWARE KIT PACKED IN BOX #2

|    |                               |  |        |
|----|-------------------------------|--|--------|
| 8  | THREADED BOLT (5/16"x 3-1/2") |  | 8 PCS  |
| 9  | ALLEN BOLT (5/16"x 3-1/2")    |  | 4 PCS  |
| 10 | ALLEN BOLT (5/16"x 2-1/2")    |  | 8 PCS  |
| 11 | ALLEN BOLT (1/4"x 1-1/4")     |  | 8 PCS  |
| 12 | FLAT WASHER (5/16")           |  | 20 PCS |
| 13 | FLAT WASHER (1/4")            |  | 8 PCS  |
| 14 | LOCK WASHER (5/16")           |  | 20 PCS |
| 15 | LOCK WASHER (1/4")            |  | 8 PCS  |
| 16 | HEX NUT (5/16")               |  | 8 PCS  |
| 17 | PHILLIPS SCREW (M4 x 32mm)    |  | 12 PCS |
| 18 | ALLEN KEY (5/16")             |  | 1 PC   |
| 19 | WRENCH                        |  | 1 PC   |
| 20 | CONNECTING BRACKET            |  | 4 PCS  |


### BOX#3

G. SIDE RAIL  
H. CENTER SLAT SUPPORT  
I. SUPPORT LEG

2 PCS  
2 PCS  
8 PCS

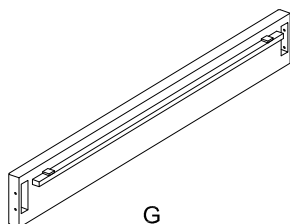

G




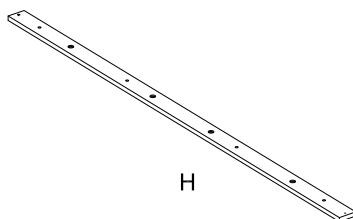


H



I

### FULLY ASSEMBLED

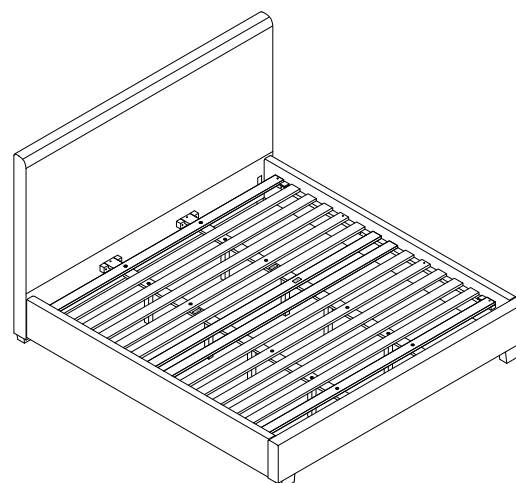


# ADONA/MADELEINE/ROYAL UPHOLSTERED KING BED


## ASSEMBLY INSTRUCTIONS




### STEP 1:

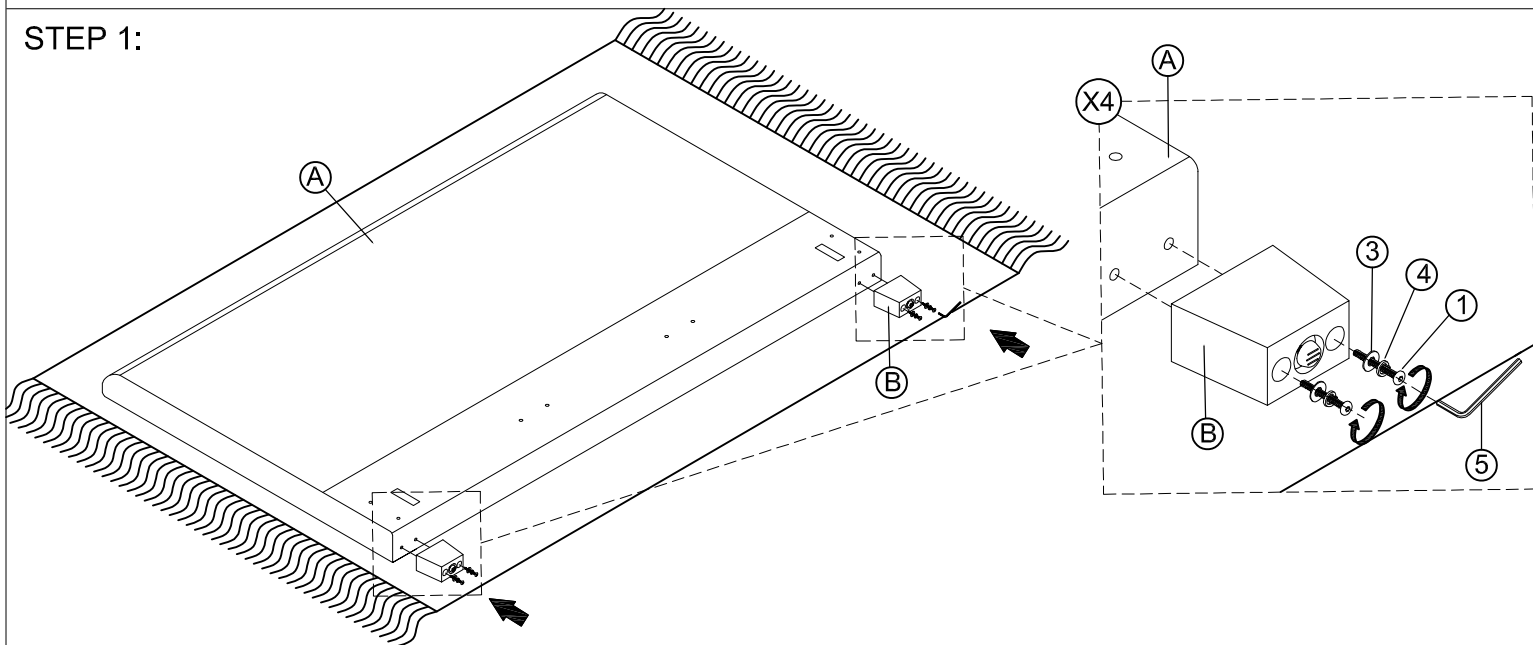

### STEP 2:

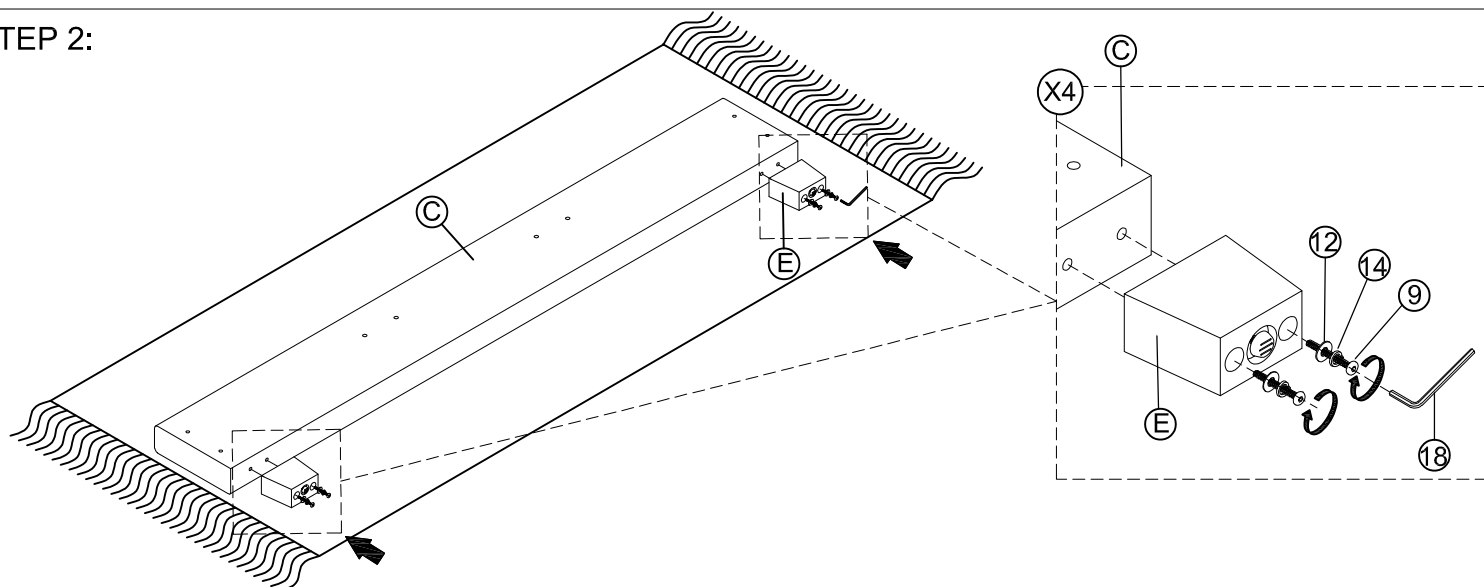


### STEP 3:

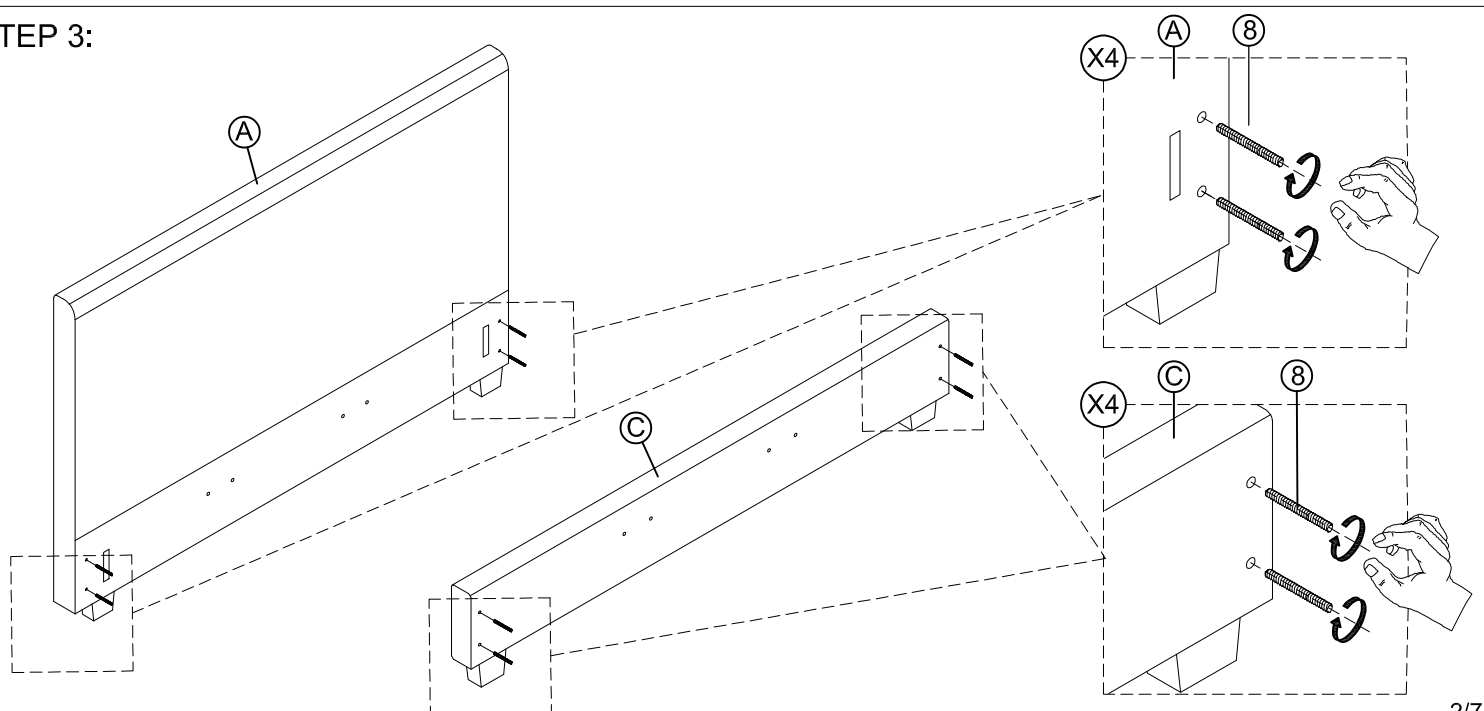


# ADONA/MADELEINE/ROYAL UPHOLSTERED KING BED

## ASSEMBLY INSTRUCTIONS

### STEP 4:

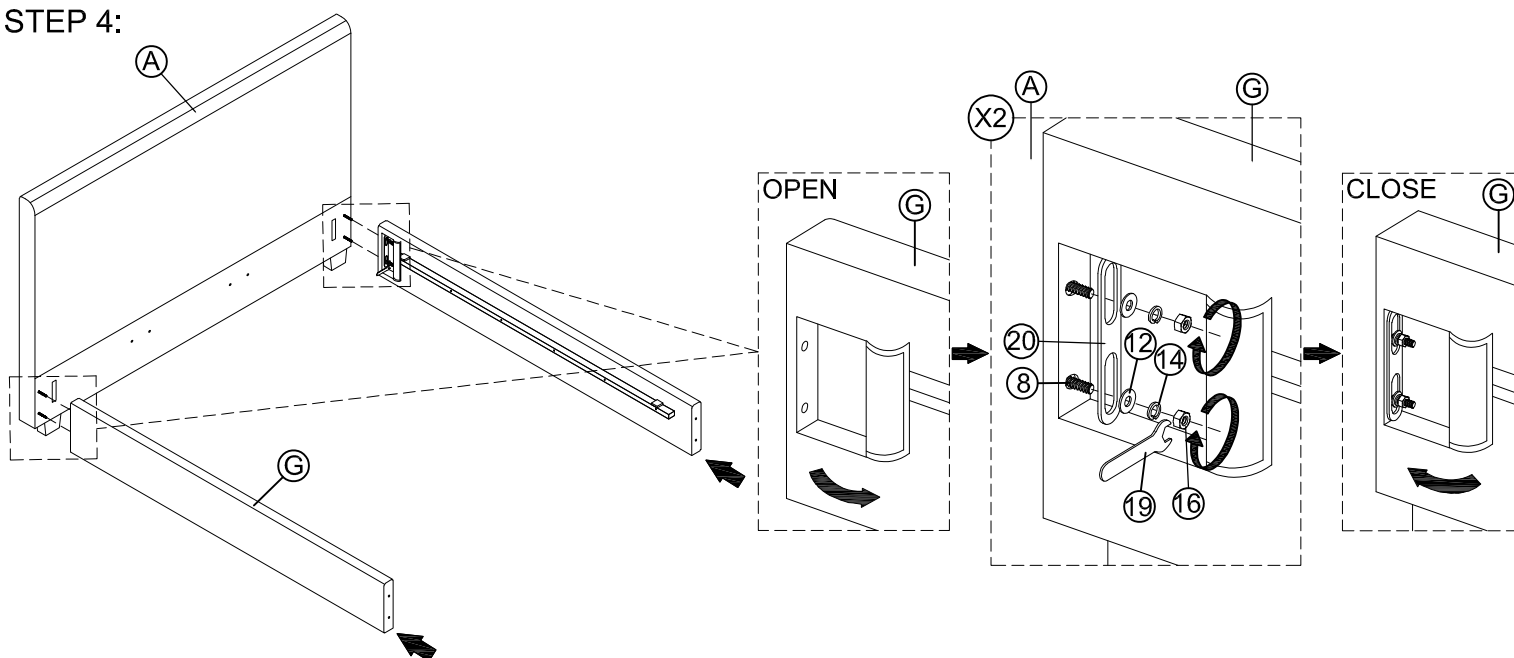

### STEP 5:

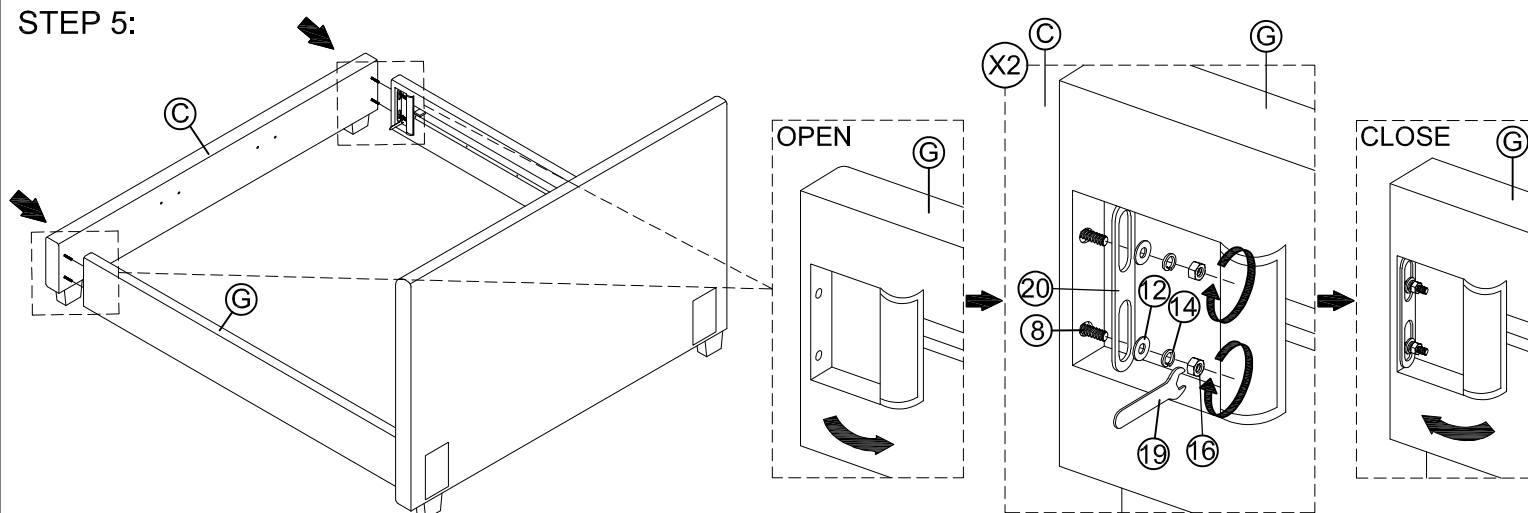


### STOP



- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 6-10 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 6.

### STEP 6:

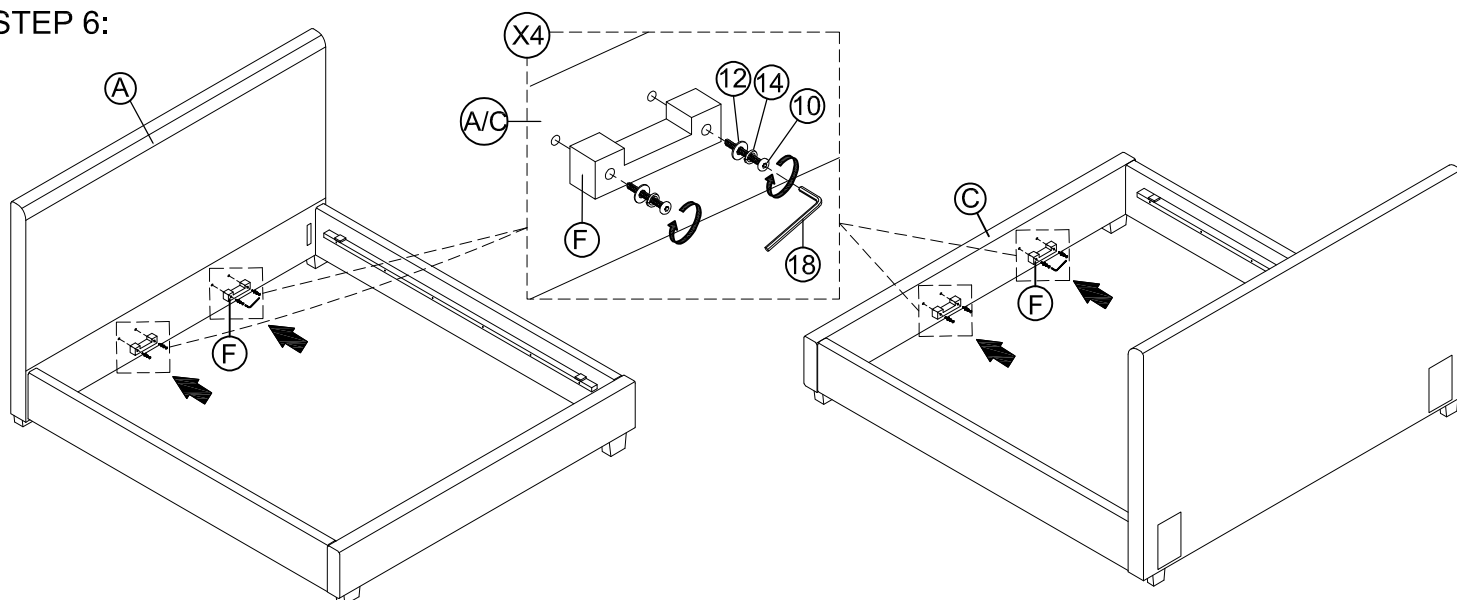


# ADONA/MADELEINE/ROYAL UPHOLSTERED KING BED


## ASSEMBLY INSTRUCTIONS



### STEP 7:

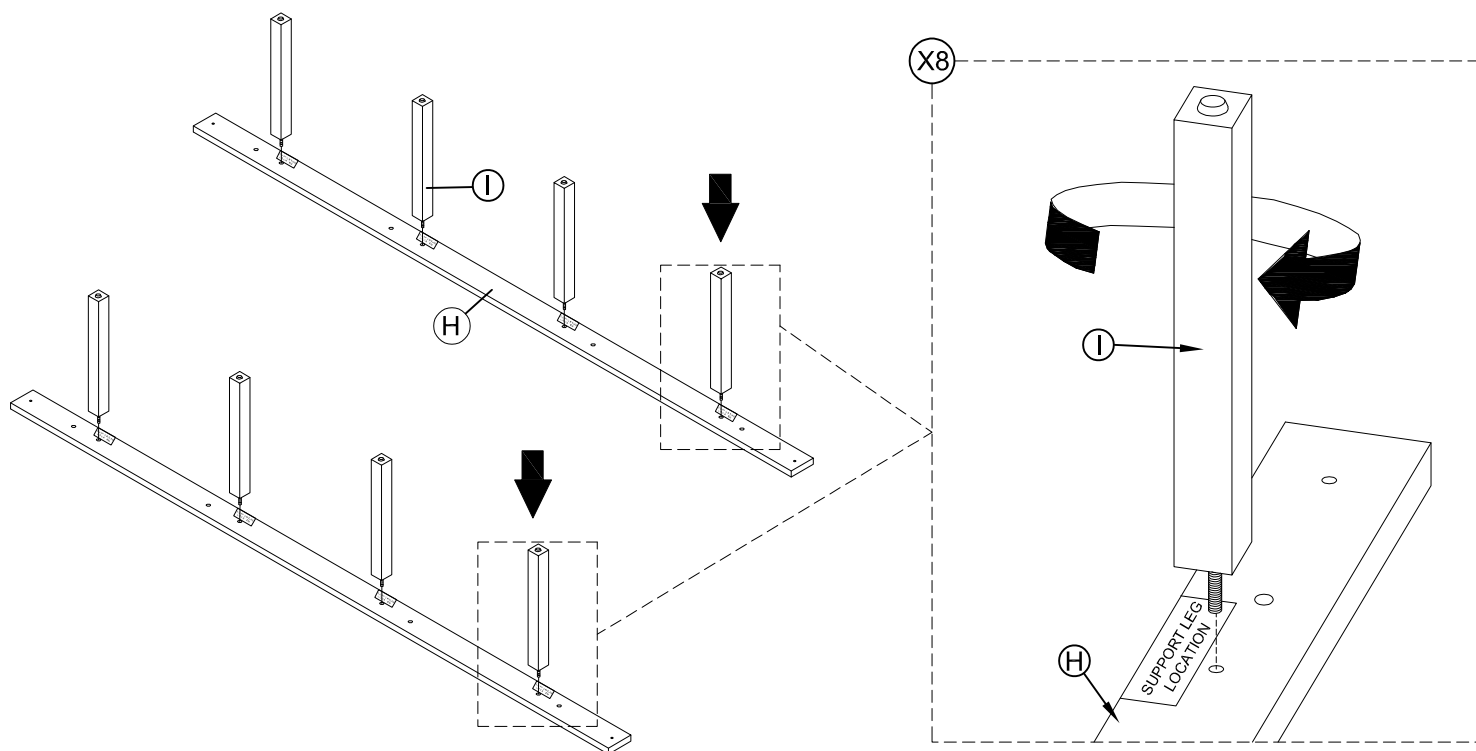

### STEP 8:

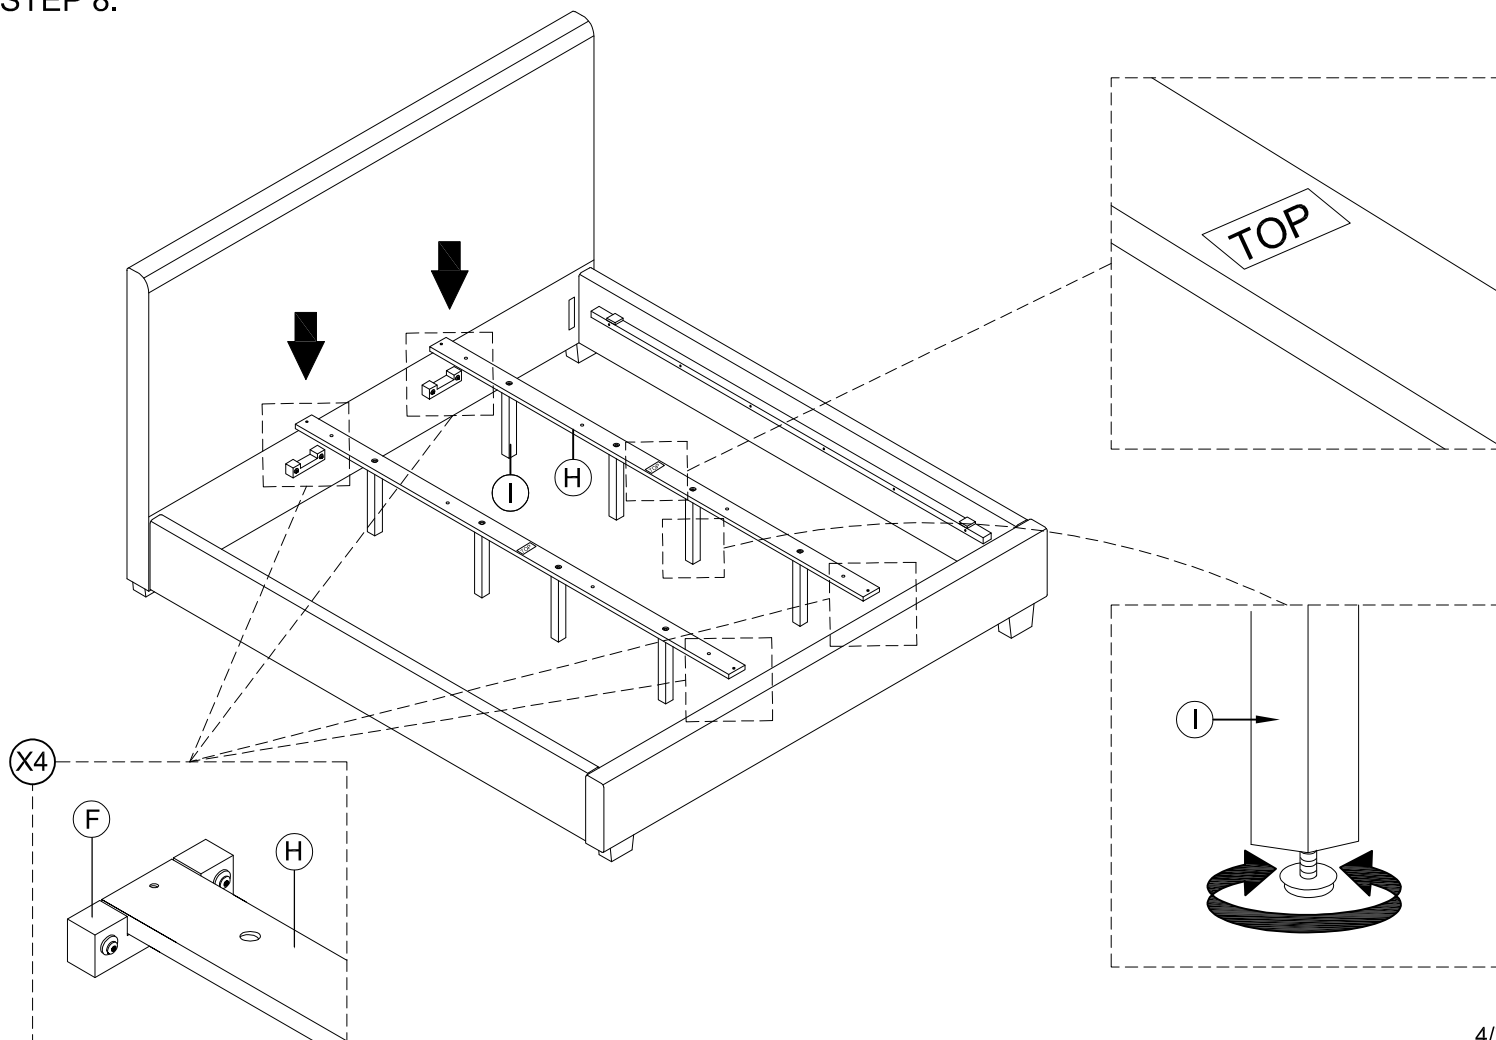


# ADONA/MADELEINE/ROYAL UPHOLSTERED KING BED


## ASSEMBLY INSTRUCTIONS



### STEP 9:

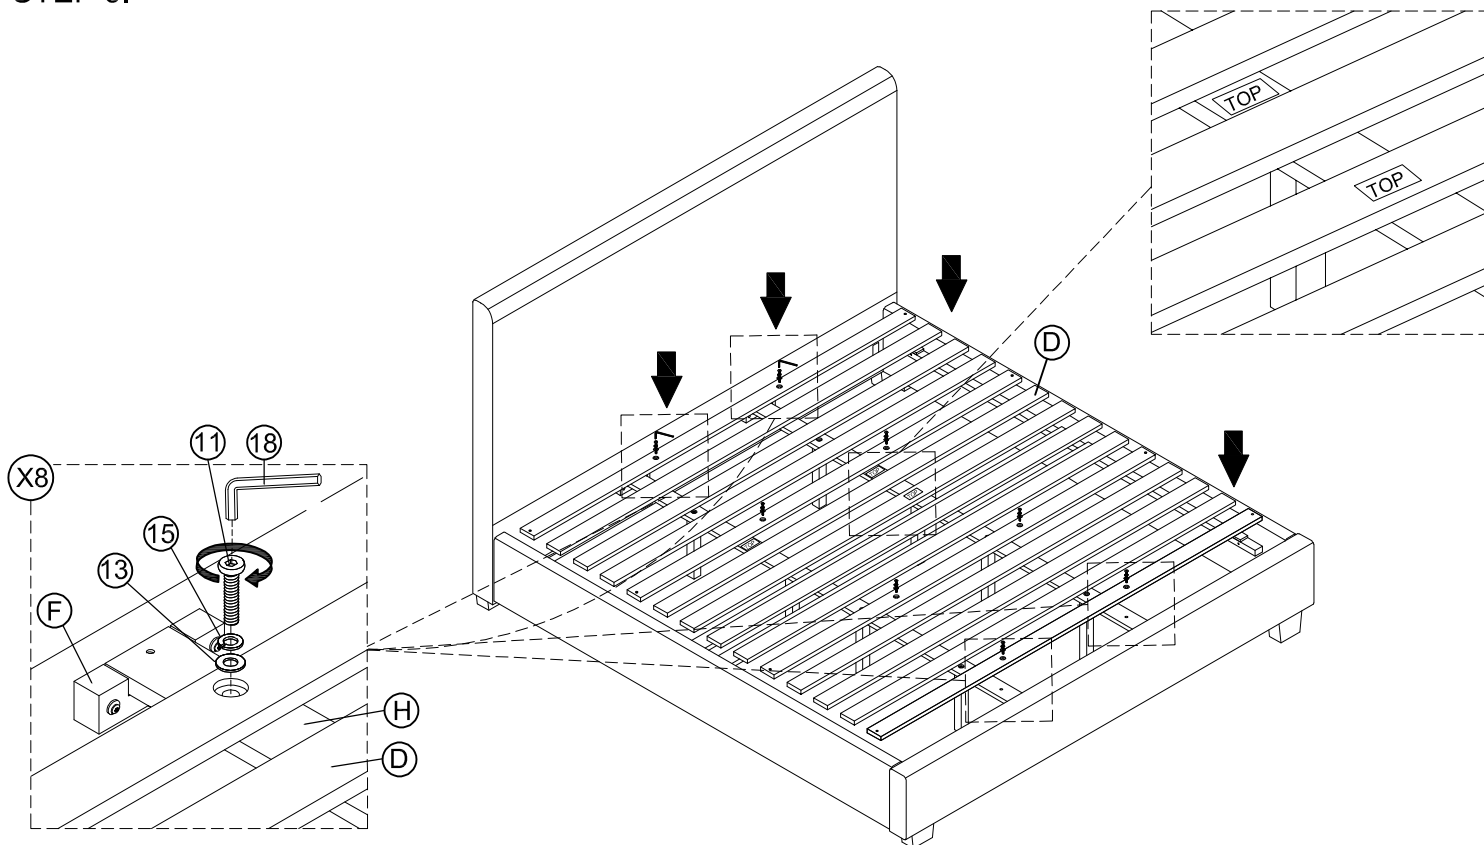


### STEP 10:

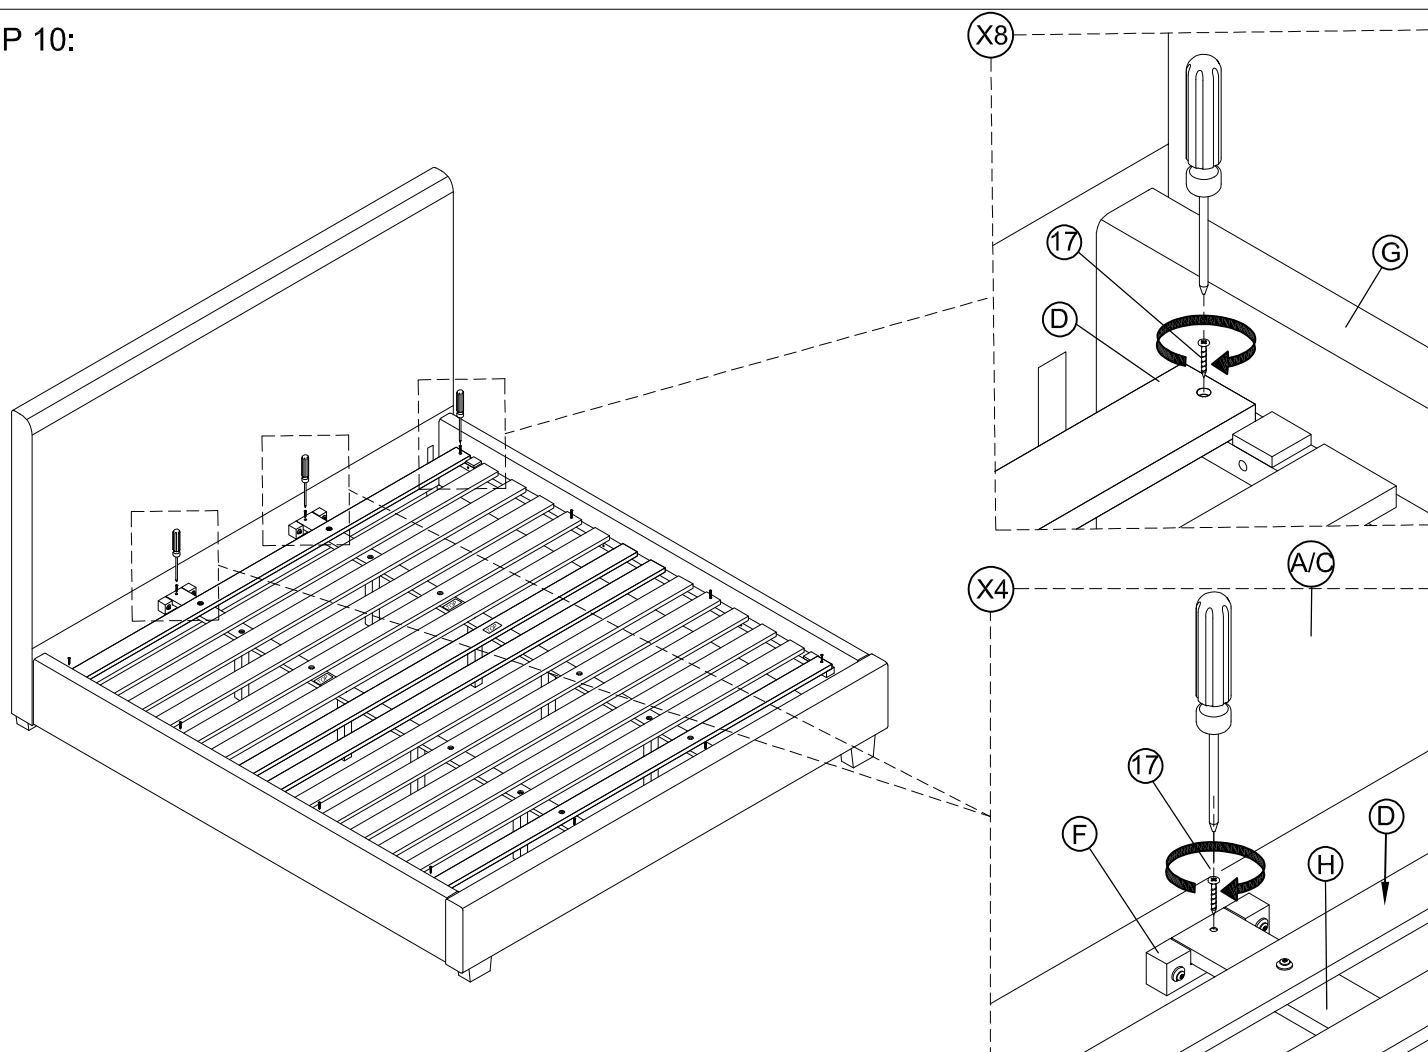

# ADONA/MADELEINE/ROYAL UPHOLSTERED KING BED

## ASSEMBLY INSTRUCTIONS

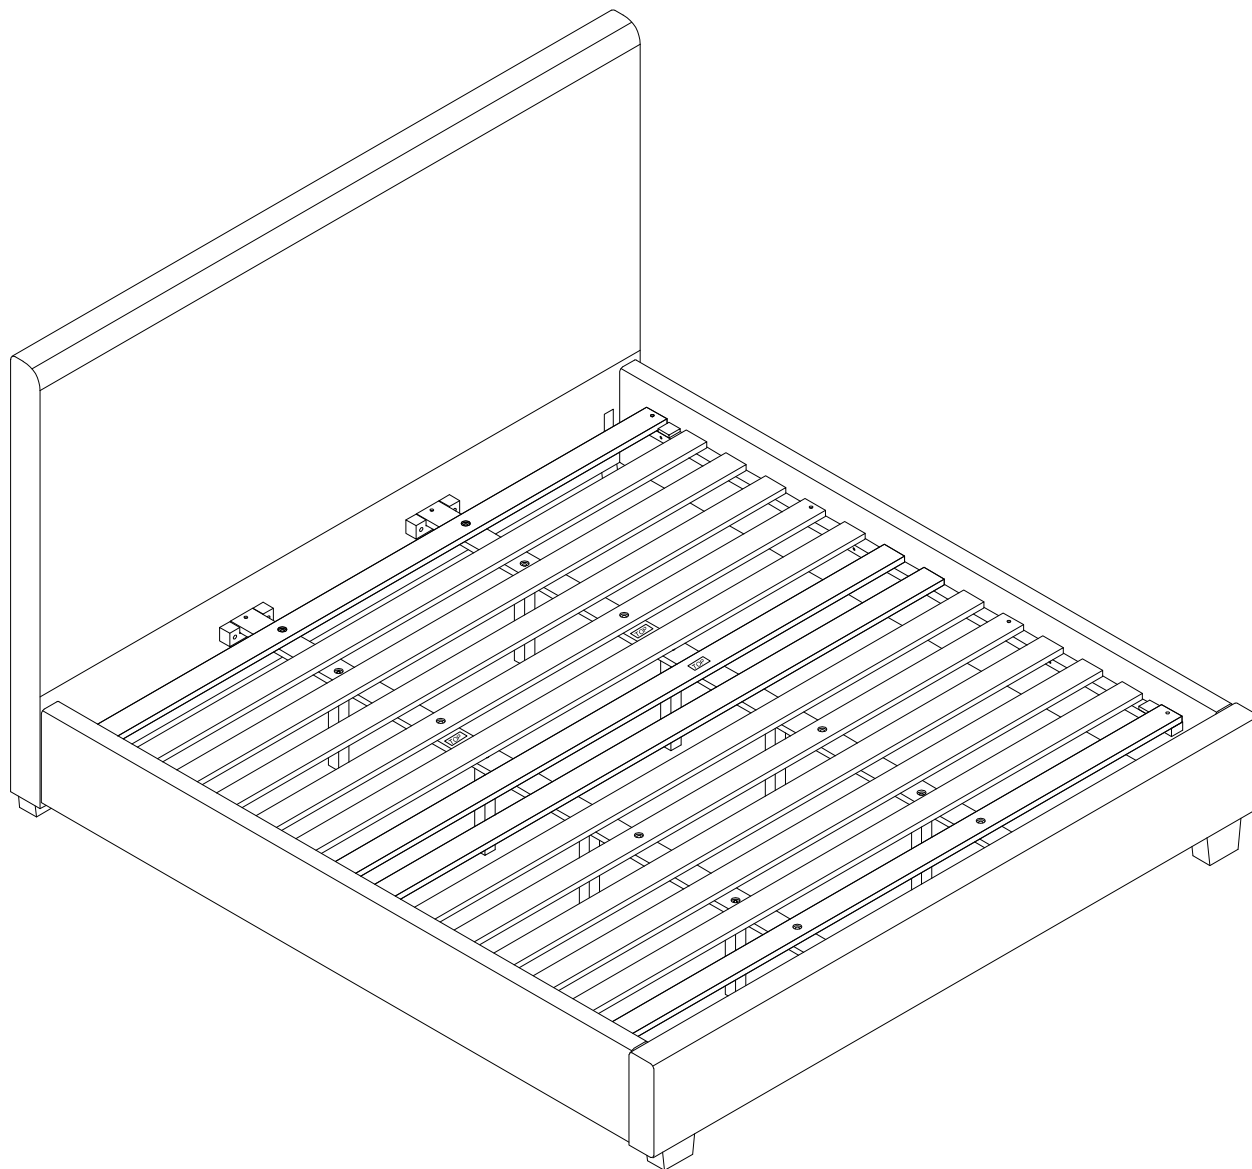


**ASSEMBLY COMPLETE**

### INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

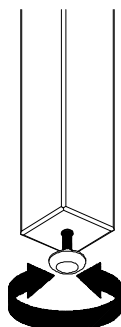

### MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

# ADONA/MADELEINE/ROYAL UPHOLSTERED KING BED

## ASSEMBLY INSTRUCTIONS



### APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

#### THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

|                              |       |
|------------------------------|-------|
| D. SLAT ROLL                 | 1 SET |
| F. CENTER SLAT SUPPORT CLEAT | 4 PCS |
| H. CENTER SLAT SUPPORT       | 2 PCS |
| I. SUPPORT LEG               | 8 PCS |

#### STEP 1:

USE ALLEN KEY (18) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

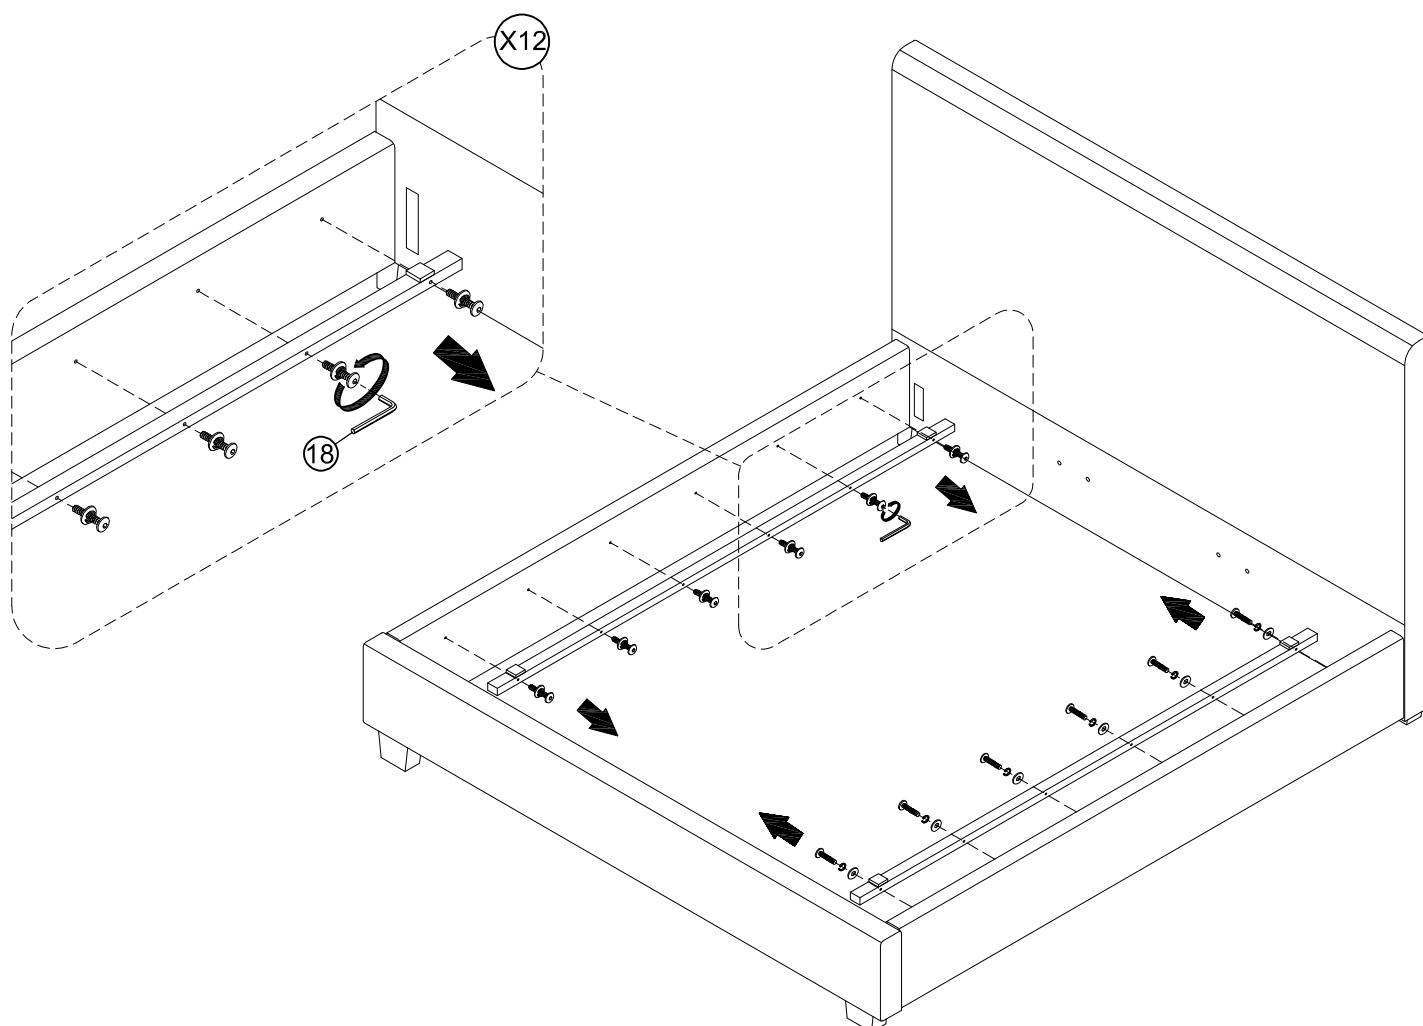

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

# ADONA/MADELEINE/ROYAL UPHOLSTERED C.KING BED


## ASSEMBLY INSTRUCTIONS



### BOX#1

A. HEADBOARD  
B. LEG

1 PC  
2 PCS

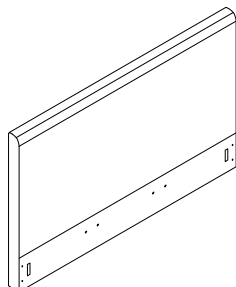

A



B


### HARDWARE KIT PACKED IN BOX #1

| No. | Description                | Image                                                                               | Quantity |
|-----|----------------------------|-------------------------------------------------------------------------------------|----------|
| 1   | ALLEN BOLT (5/16"x 3-1/2") |  | 4 PCS    |
| 2   | ALLEN BOLT (5/16"x 1-3/4") |  | 4 PCS    |
| 3   | FLAT WASHER (5/16")        |  | 12 PCS   |
| 4   | LOCK WASHER (5/16")        |  | 12 PCS   |
| 5   | ALLEN KEY (5/16")          |  | 1 PC     |
| 6   | HEX NUT (5/16")            |  | 4 PCS    |
| 7   | WRENCH                     |  | 1 PC     |


### BOX#2

C. FOOTBOARD  
D. SLAT ROLL  
E. LEG  
F. CENTER SLAT SUPPORT CLEAT

1 PC  
1 SET  
2 PCS  
4 PCS

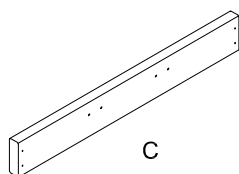

C

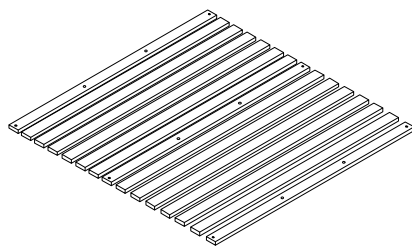

D




E



F


### HARDWARE KIT PACKED IN BOX #2

|    |                               |                                                                                       |        |
|----|-------------------------------|---------------------------------------------------------------------------------------|--------|
| 8  | THREADED BOLT (5/16"x 3-1/2") |    | 8 PCS  |
| 9  | ALLEN BOLT (5/16"x 3-1/2")    |    | 4 PCS  |
| 10 | ALLEN BOLT (5/16"x 2-1/2")    |    | 8 PCS  |
| 11 | ALLEN BOLT (1/4"x 1-1/4")     |    | 6 PCS  |
| 12 | FLAT WASHER (5/16")           |  | 20 PCS |
| 13 | FLAT WASHER (1/4")            |  | 6 PCS  |
| 14 | LOCK WASHER (5/16")           |  | 20 PCS |
| 15 | LOCK WASHER (1/4")            |  | 6 PCS  |
| 16 | HEX NUT (5/16")               |  | 8 PCS  |
| 17 | PHILLIPS SCREW (M4 x 32mm)    |  | 10 PCS |
| 18 | ALLEN KEY (5/16")             |  | 1 PC   |
| 19 | WRENCH                        |  | 1 PC   |
| 20 | CONNECTING BRACKET            |  | 4 PCS  |


### BOX#3

G. SIDE RAIL  
H. CENTER SLAT SUPPORT  
I. SUPPORT LEG

2 PCS  
2 PCS  
8 PCS

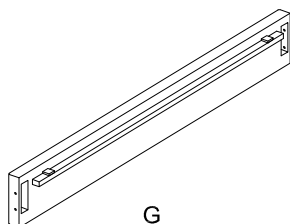

G



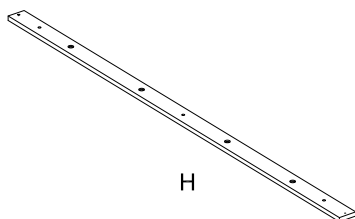


H



I

### FULLY ASSEMBLED

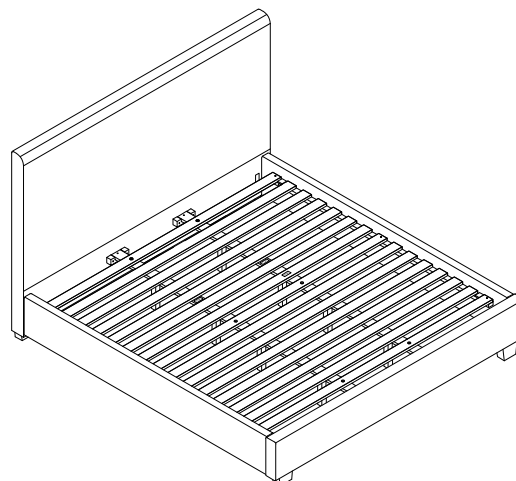


# ADONA/MADELEINE/ROYAL UPHOLSTERED C.KING BED


## ASSEMBLY INSTRUCTIONS




### STEP 1:

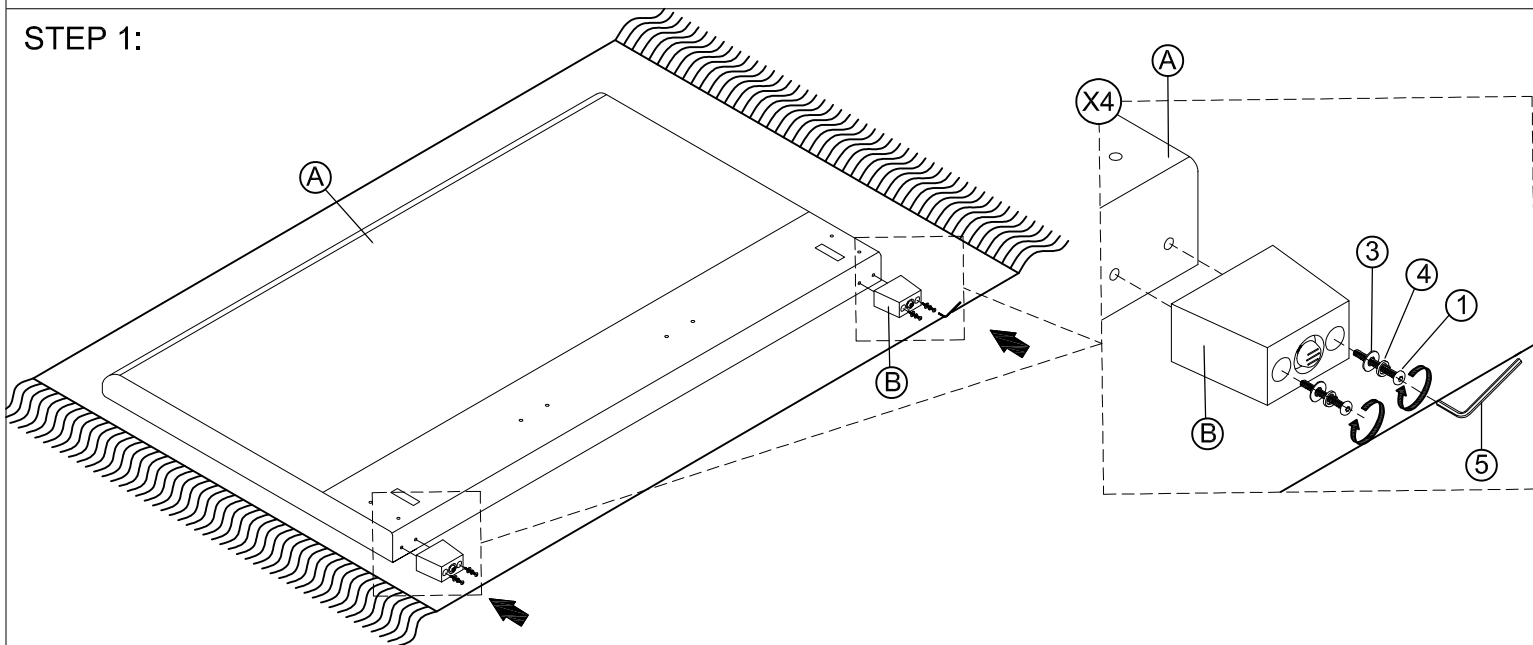

### STEP 2:

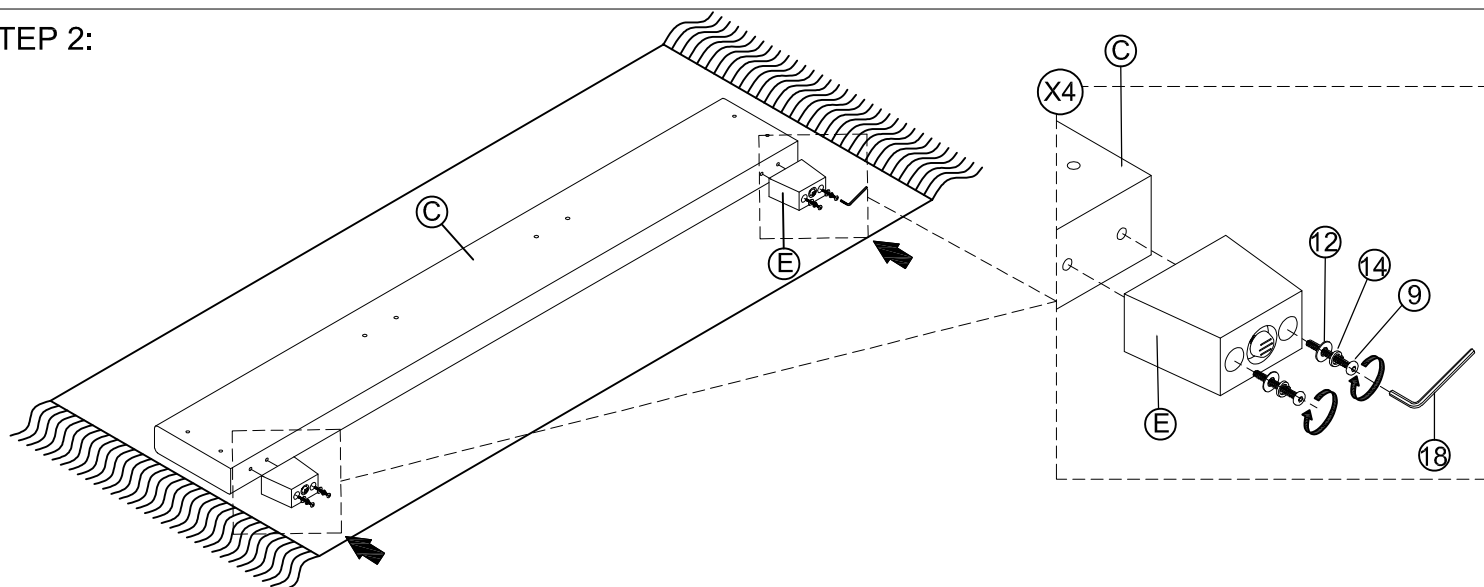


### STEP 3:

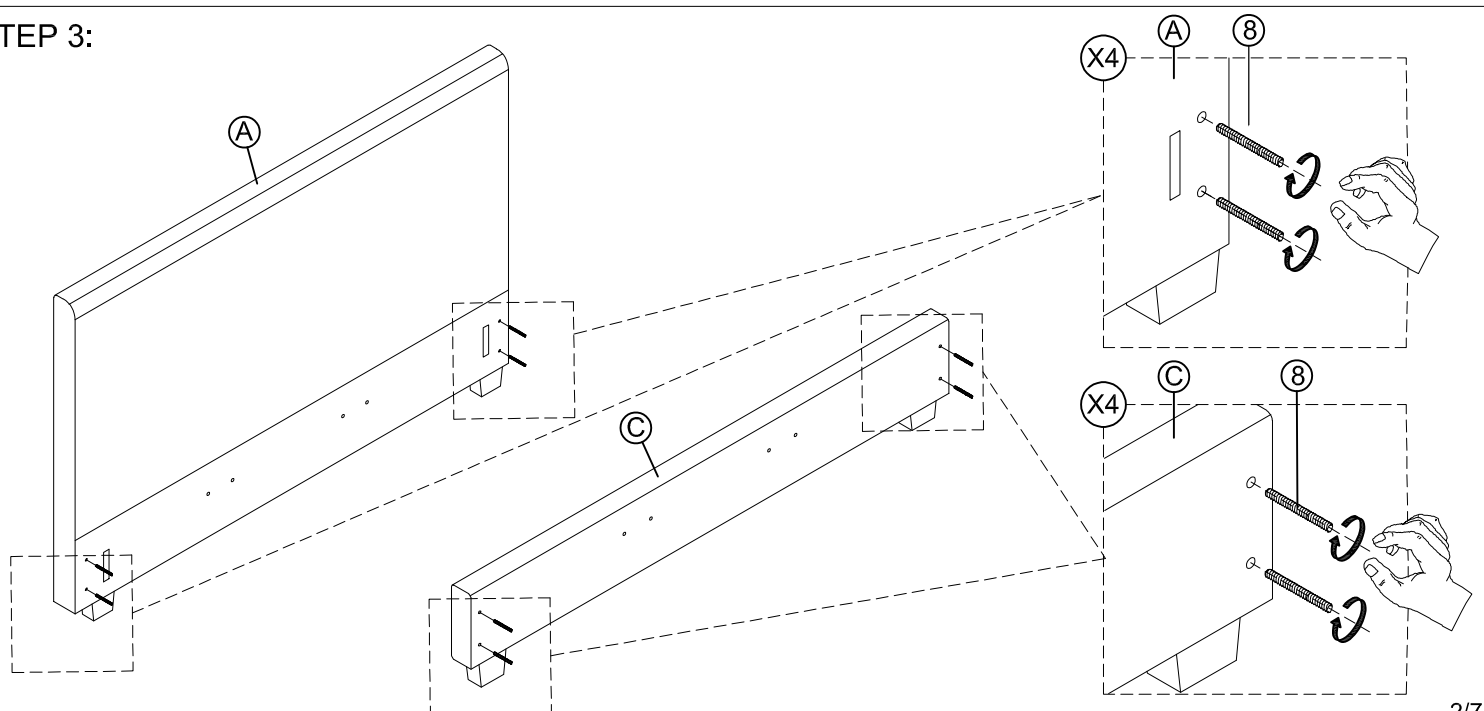


# ADONA/MADELEINE/ROYAL UPHOLSTERED C.KING BED

## ASSEMBLY INSTRUCTIONS

### STEP 4:

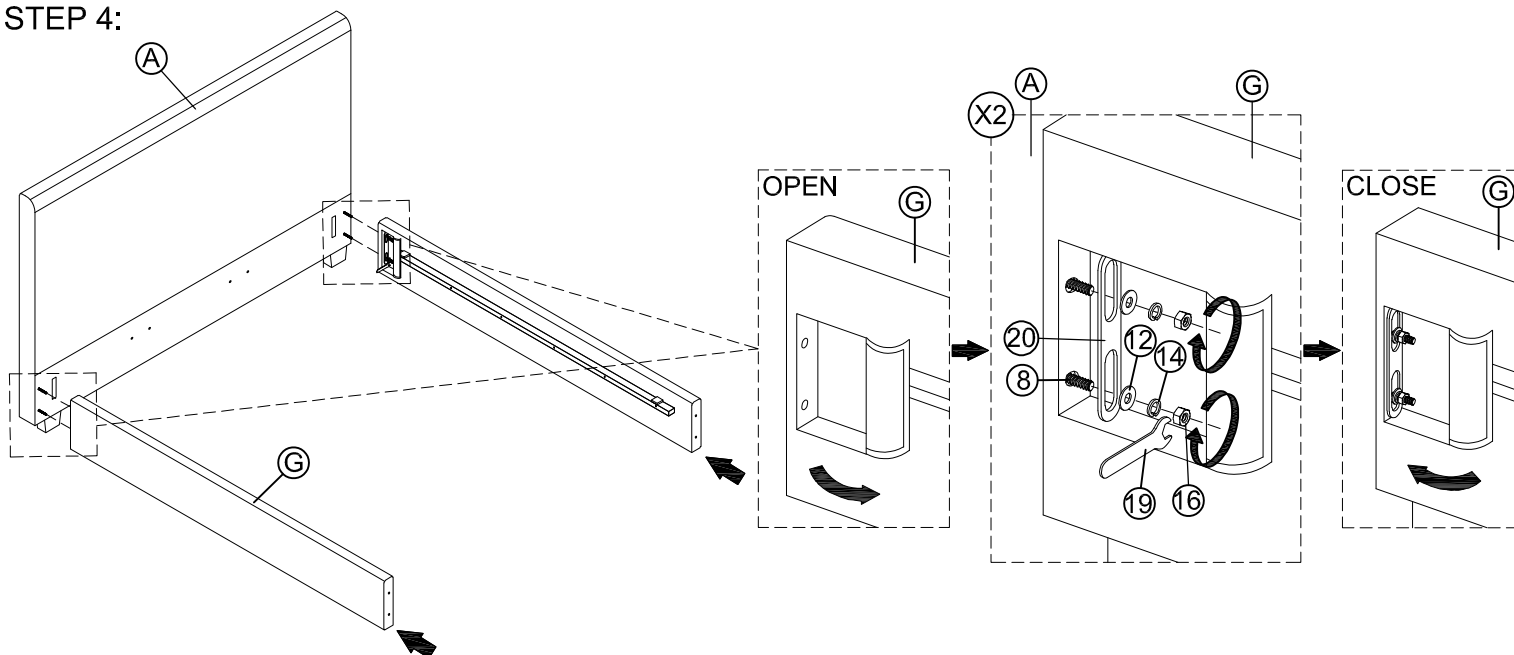

### STEP 5:

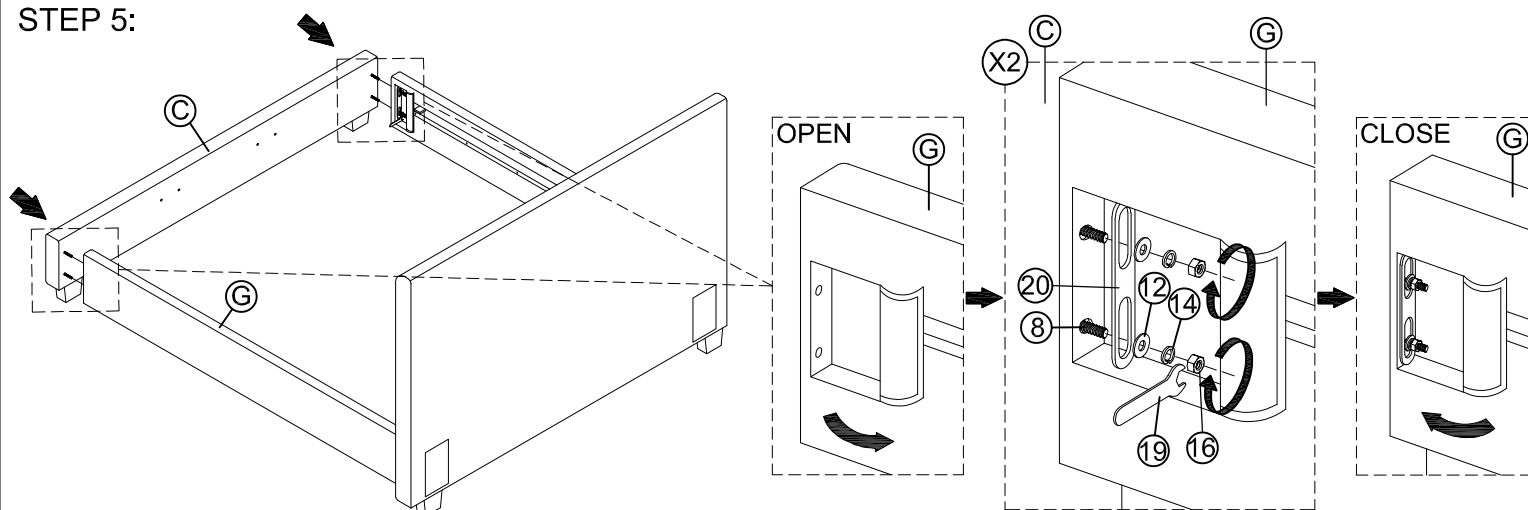


### STOP



- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 6-10 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 6.

### STEP 6:

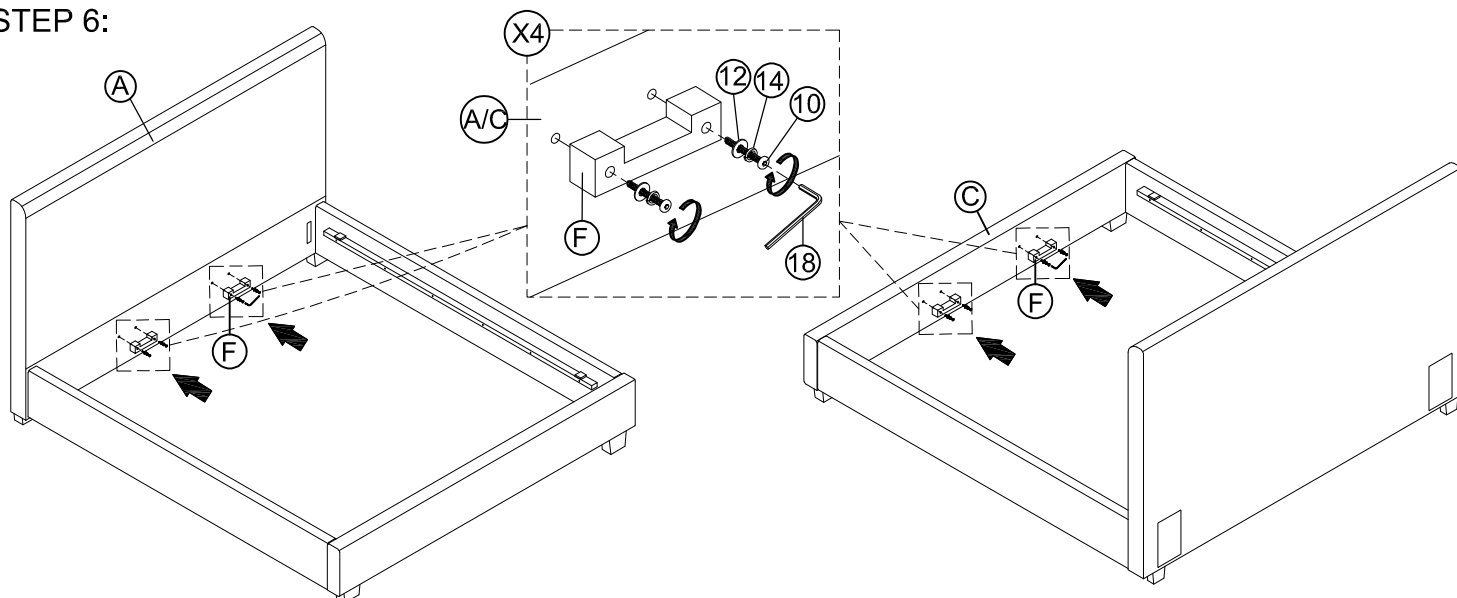


# ADONA/MADELEINE/ROYAL UPHOLSTERED C.KING BED


## ASSEMBLY INSTRUCTIONS



### STEP 7:

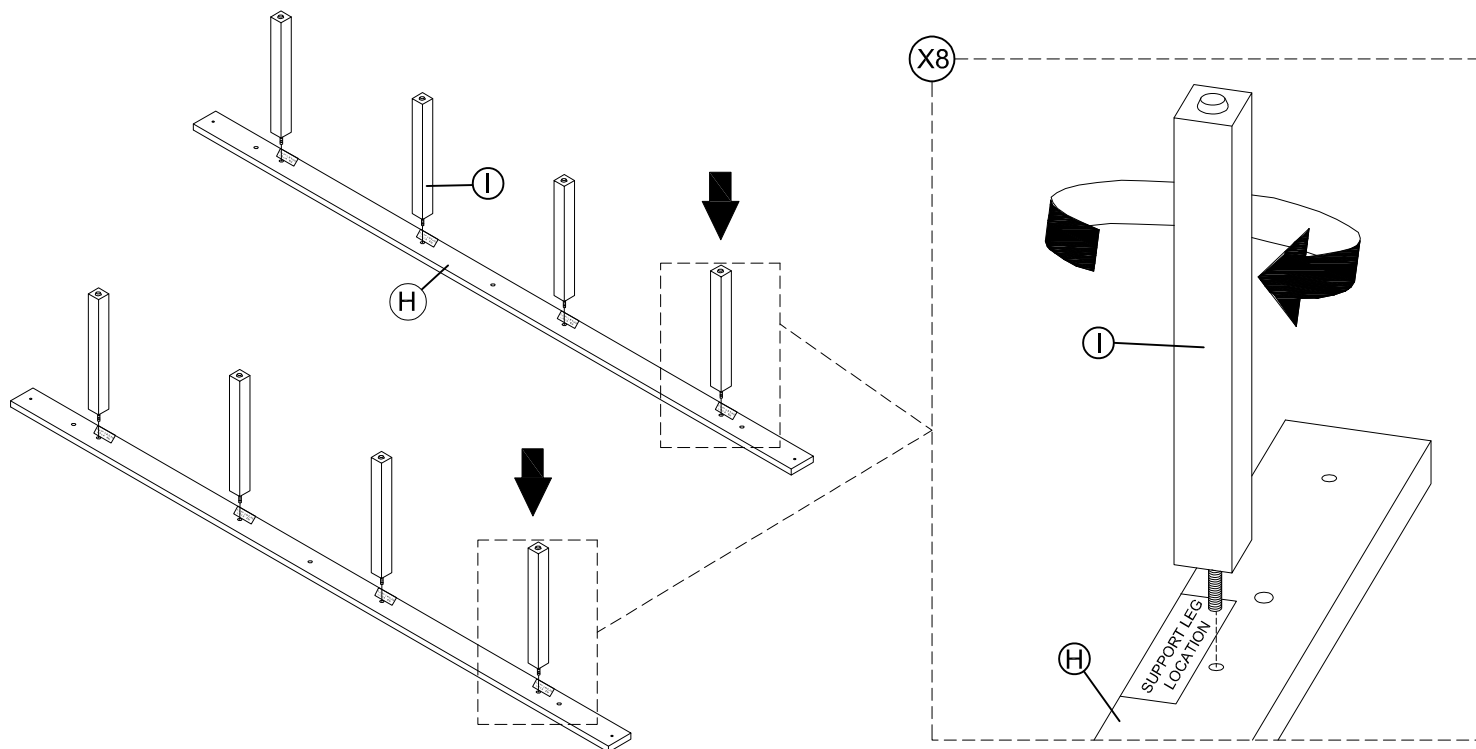

### STEP 8:

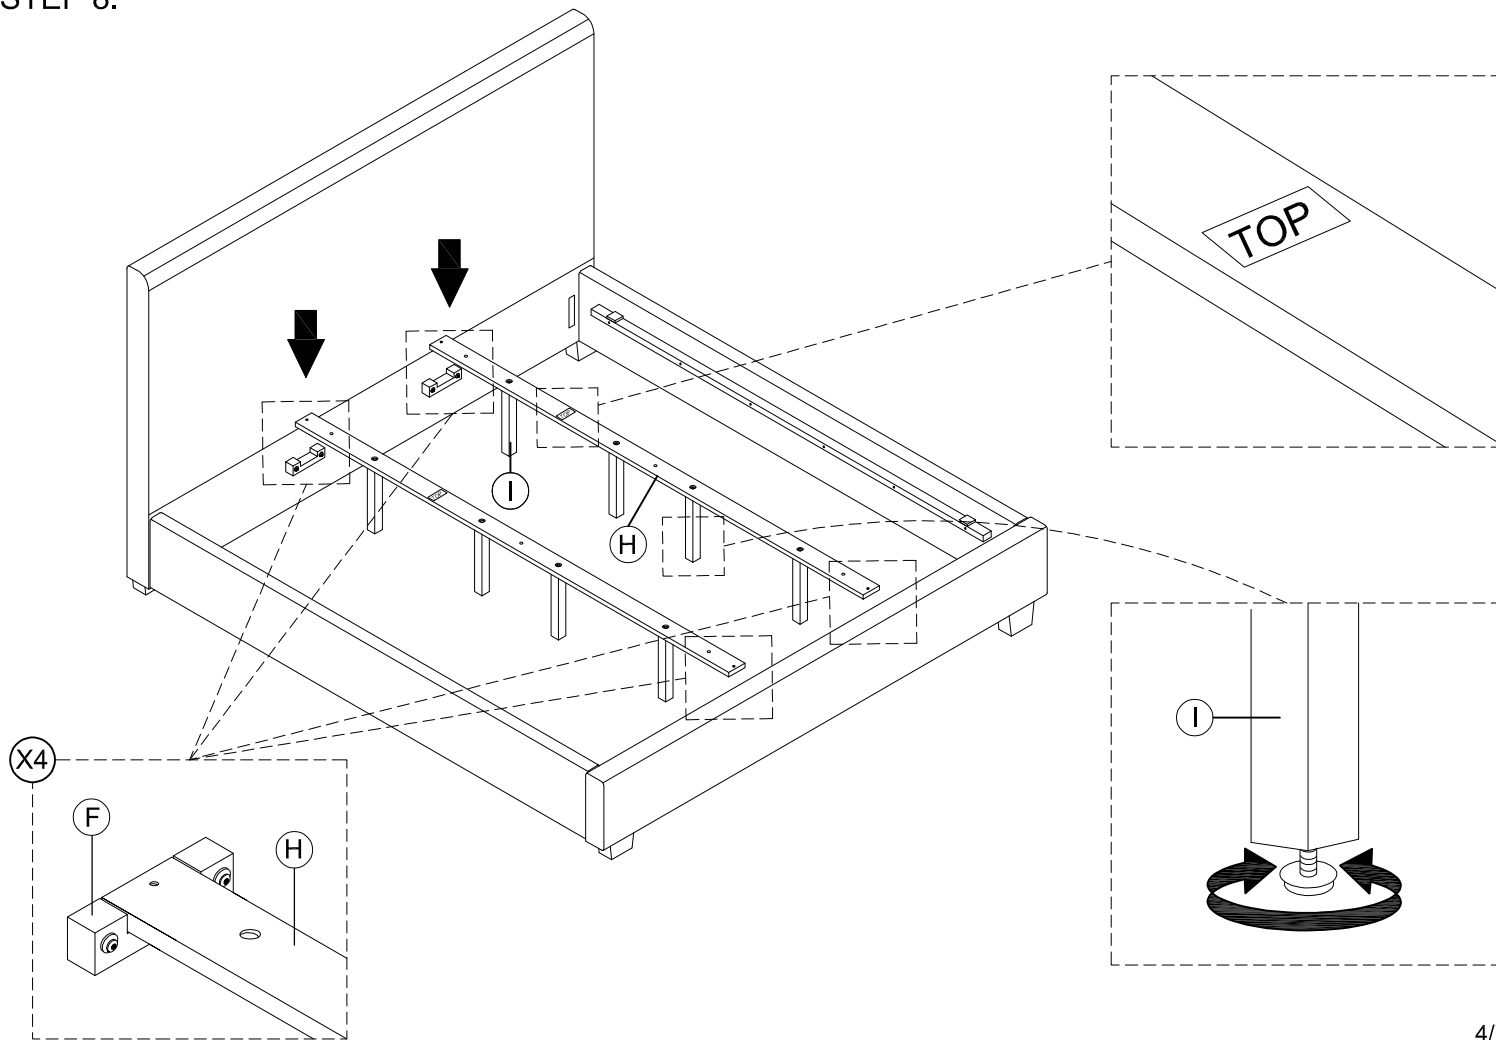


# ADONA/MADELEINE/ROYAL UPHOLSTERED C.KING BED




## ASSEMBLY INSTRUCTIONS



### STEP 9:

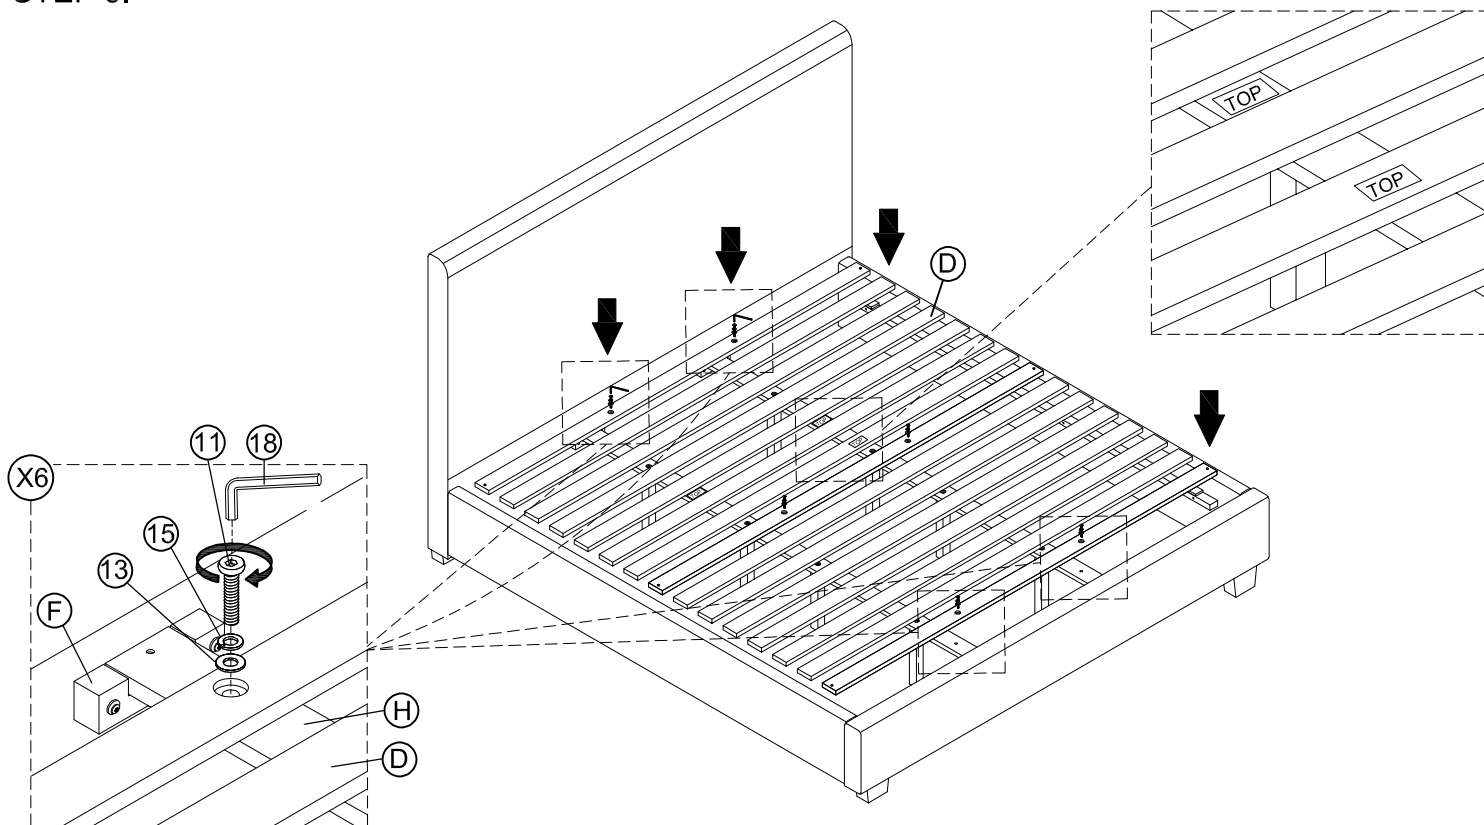


### STEP 10:

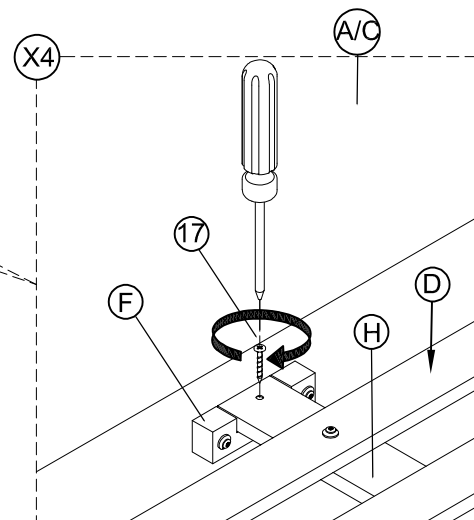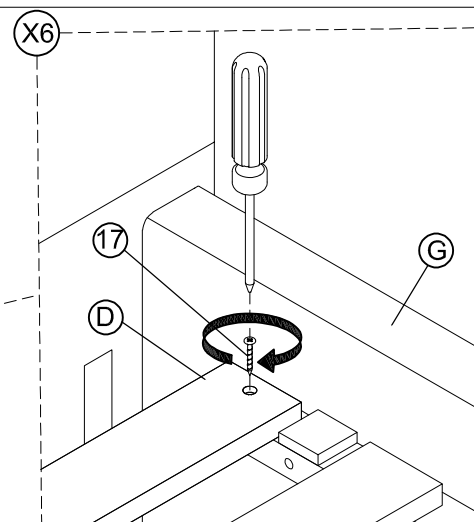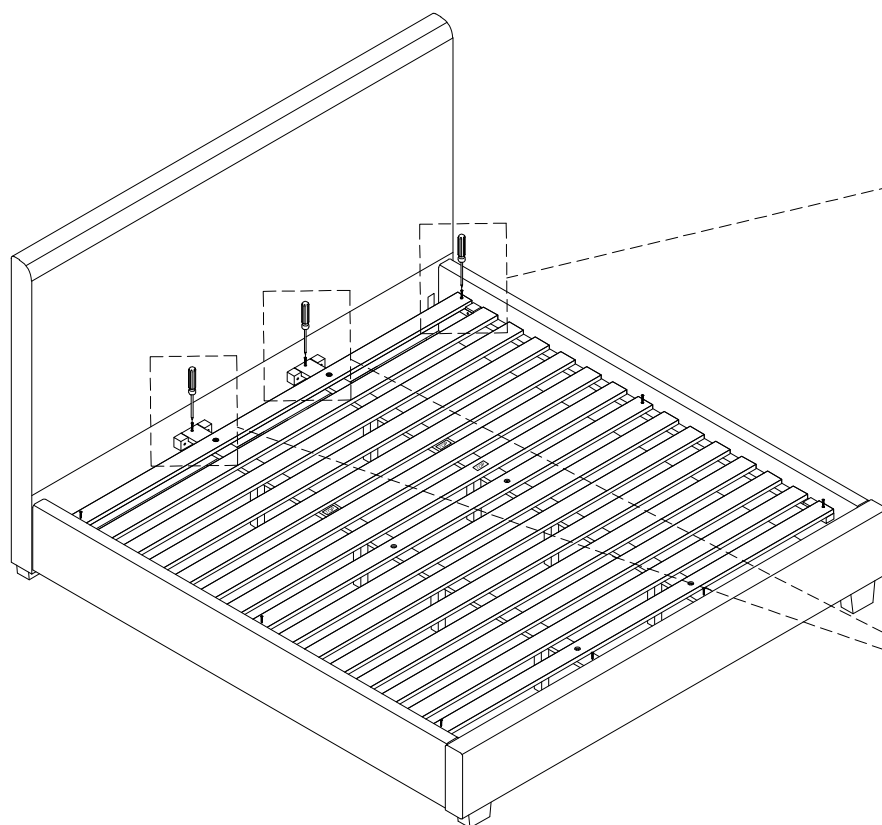

# ADONA/MADELEINE/ROYAL UPHOLSTERED C.KING BED

## ASSEMBLY INSTRUCTIONS

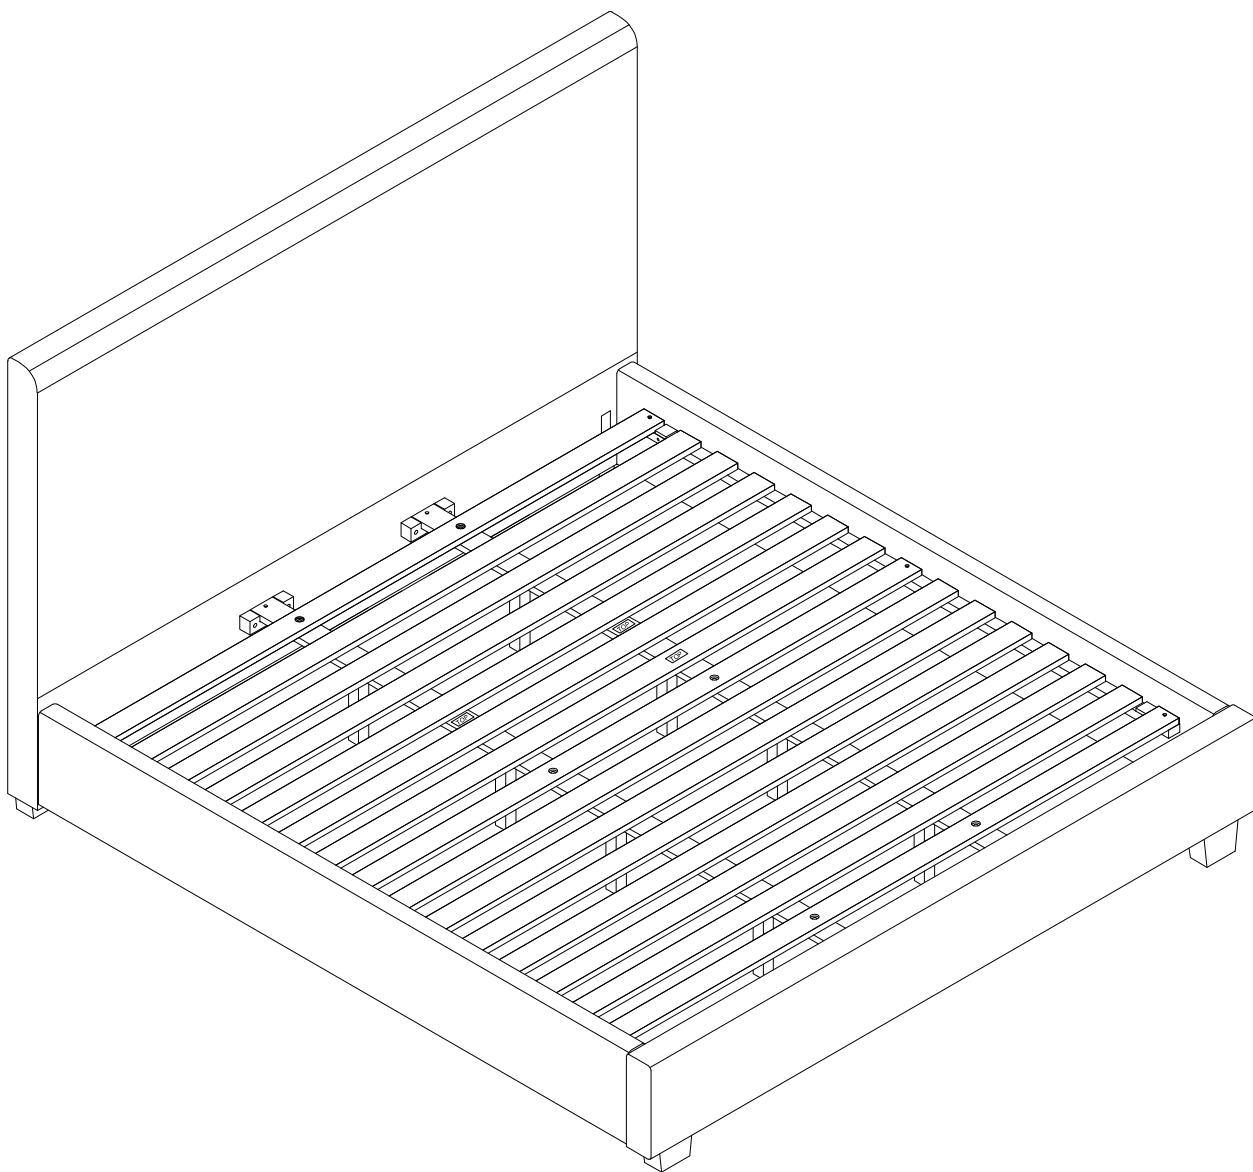


**ASSEMBLY COMPLETE**

### INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

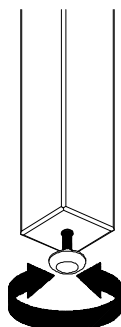

### MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

# ADONA/MADELEINE/ROYAL UPHOLSTERED C.KING BED

## ASSEMBLY INSTRUCTIONS



### APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

#### THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

|                              |       |
|------------------------------|-------|
| D. SLAT ROLL                 | 1 SET |
| F. CENTER SLAT SUPPORT CLEAT | 4 PCS |
| H. CENTER SLAT SUPPORT       | 2 PCS |
| I. SUPPORT LEG               | 8 PCS |

#### STEP 1:

USE ALLEN KEY (18) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

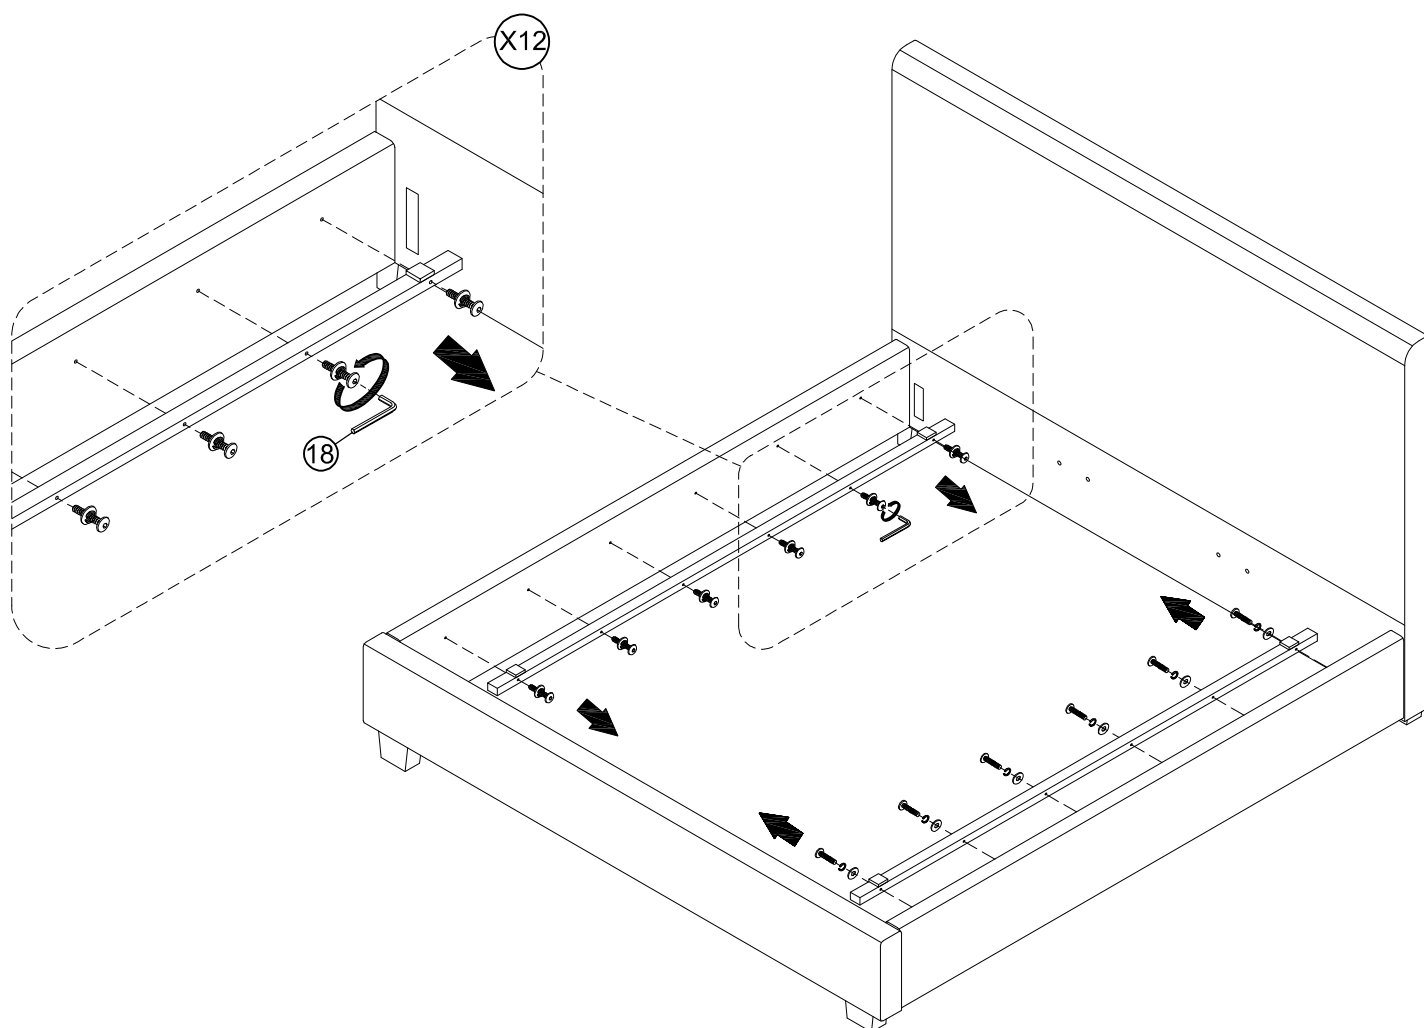

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

# ADONA/MADELEINE/ROYAL UPHOLSTERED FULL BED


## ASSEMBLY INSTRUCTIONS



### BOX#1

A. HEADBOARD  
B. LEG

1 PC  
2 PCS

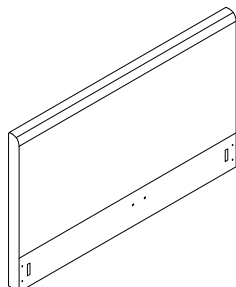

A



B


### HARDWARE KIT PACKED IN BOX #1

| No. | Description                | Image | Quantity |
|-----|----------------------------|-------|----------|
| 1   | ALLEN BOLT (5/16"x 3-1/2") |       | 4 PCS    |
| 2   | ALLEN BOLT (5/16"x 1-3/4") |       | 4 PCS    |
| 3   | FLAT WASHER (5/16")        |       | 12 PCS   |
| 4   | LOCK WASHER (5/16")        |       | 12 PCS   |
| 5   | ALLEN KEY (5/16")          |       | 1 PC     |
| 6   | HEX NUT (5/16")            |       | 4 PCS    |
| 7   | WRENCH                     |       | 1 PC     |


### BOX#2

C. FOOTBOARD  
D. SLAT ROLL  
E. LEG  
F. CENTER SLAT SUPPORT CLEAT

1 PC  
1 SET  
2 PCS  
2 PCS

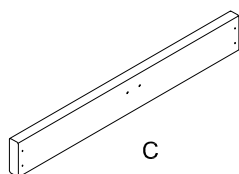

C

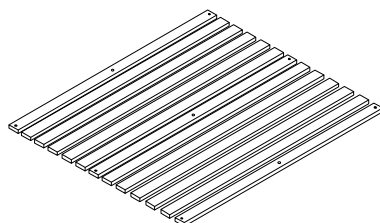

D



E



F


### HARDWARE KIT PACKED IN BOX #2

|    |                               |  |        |
|----|-------------------------------|--|--------|
| 8  | THREADED BOLT (5/16"x 3-1/2") |  | 8 PCS  |
| 9  | ALLEN BOLT (5/16"x 3-1/2")    |  | 4 PCS  |
| 10 | ALLEN BOLT (5/16"x 2-1/2")    |  | 4 PCS  |
| 11 | ALLEN BOLT (1/4"x 1-1/4")     |  | 3 PCS  |
| 12 | FLAT WASHER (5/16")           |  | 16 PCS |
| 13 | FLAT WASHER (1/4")            |  | 3 PCS  |
| 14 | LOCK WASHER (5/16")           |  | 16 PCS |
| 15 | LOCK WASHER (1/4")            |  | 3 PCS  |
| 16 | HEX NUT (5/16")               |  | 8 PCS  |
| 17 | PHILLIPS SCREW (M4 x 32mm)    |  | 8 PCS  |
| 18 | ALLEN KEY (5/16")             |  | 1 PC   |
| 19 | WRENCH                        |  | 1 PC   |
| 20 | CONNECTING BRACKET            |  | 4 PCS  |


### BOX#3

G. SIDE RAIL  
H. CENTER SLAT SUPPORT  
I. SUPPORT LEG

2 PCS  
1 PC  
4 PCS

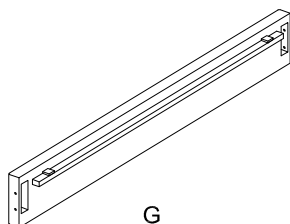

G




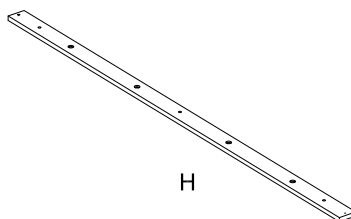


H



I

### FULLY ASSEMBLED

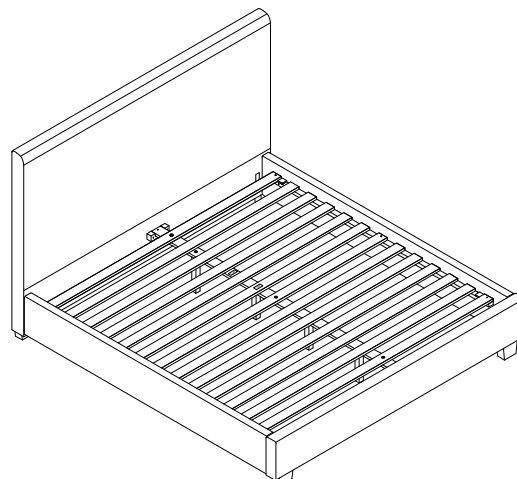


# ADONA/MADELEINE/ROYAL UPHOLSTERED FULL BED


## ASSEMBLY INSTRUCTIONS




### STEP 1:

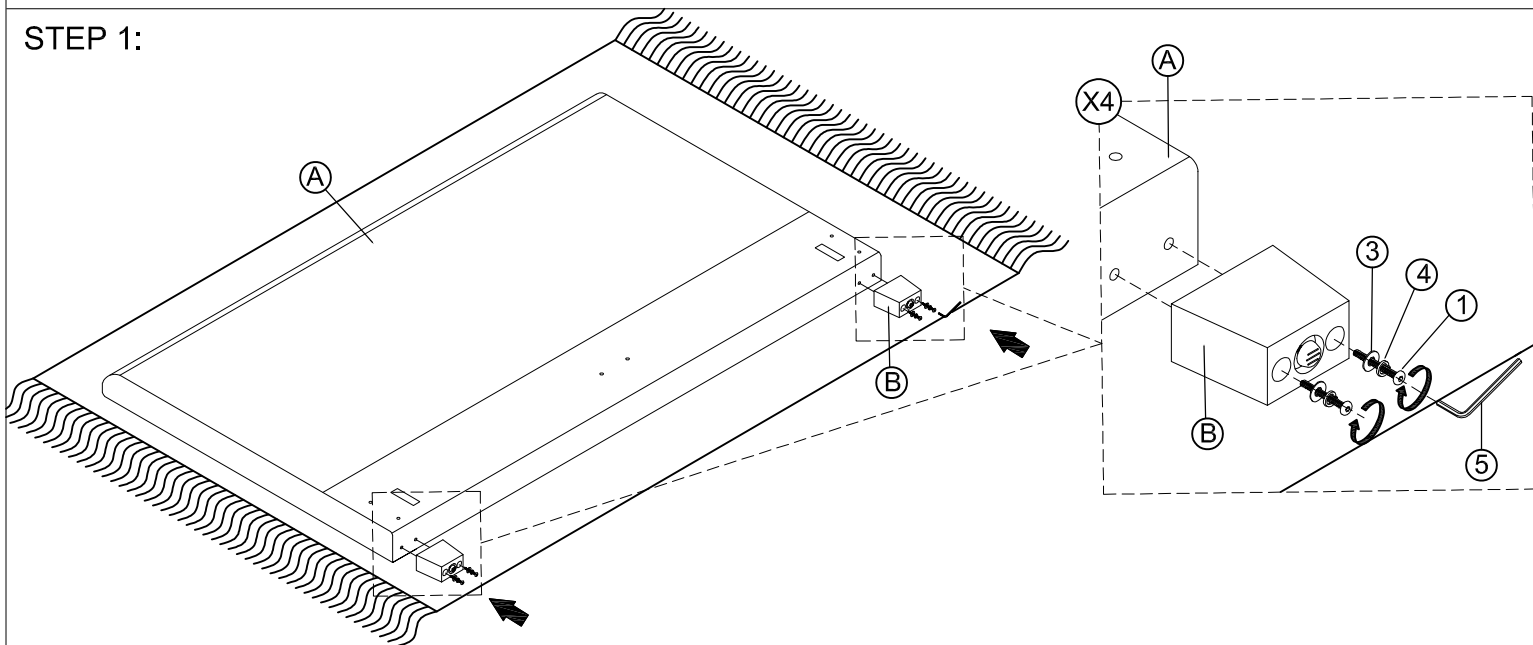

### STEP 2:

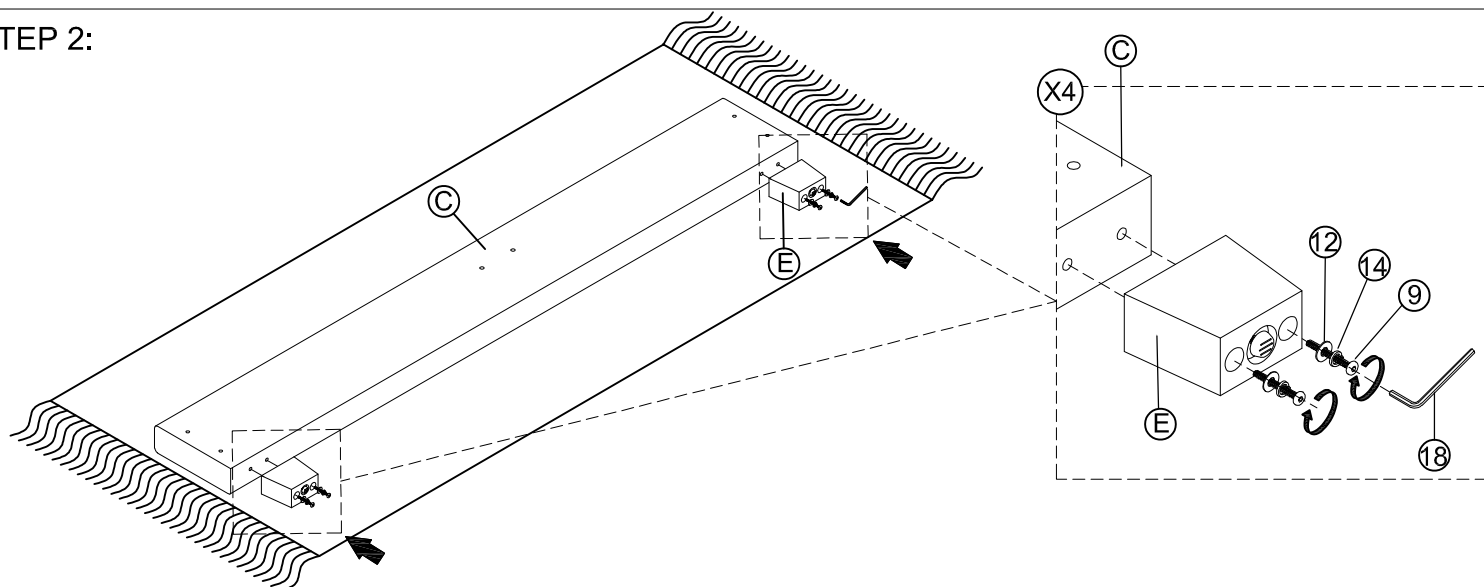

### STEP 3:

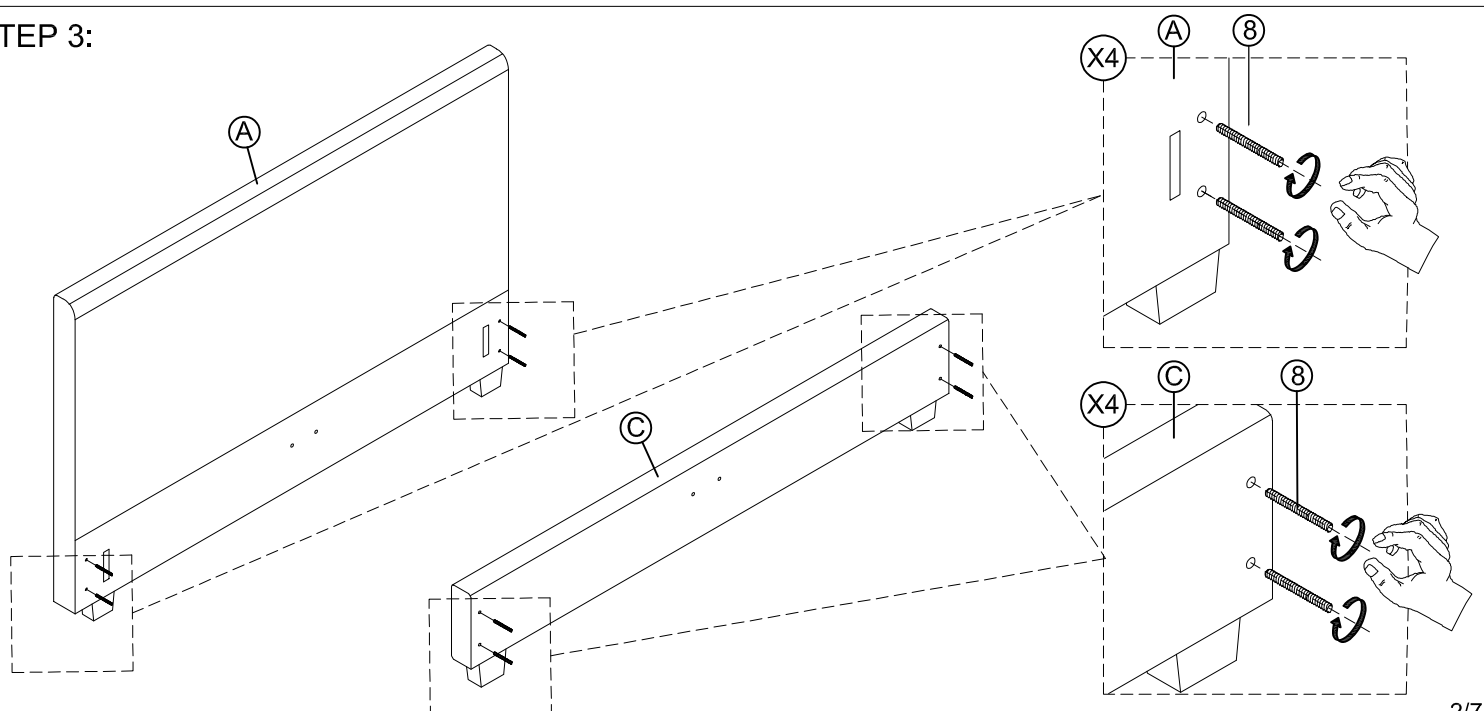


# ADONA/MADELEINE/ROYAL UPHOLSTERED FULL BED


## ASSEMBLY INSTRUCTIONS



### STEP 4:

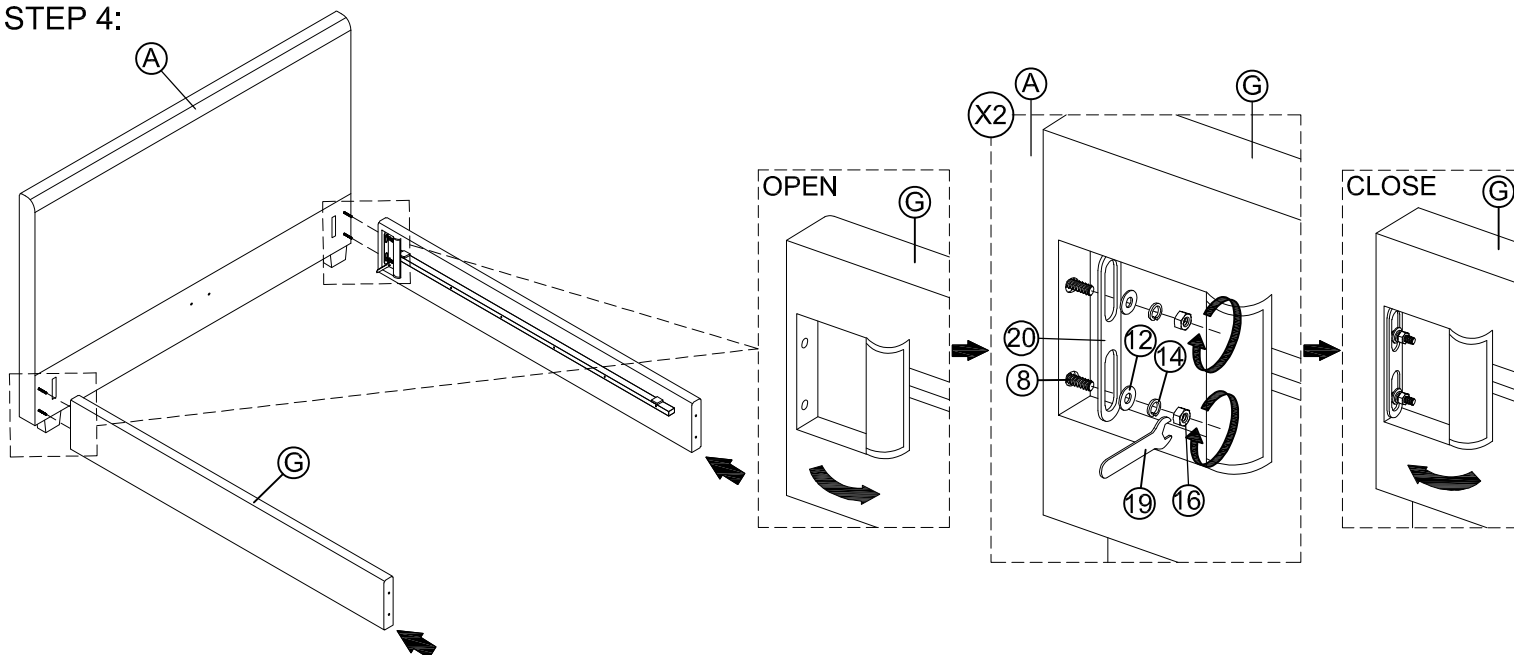

### STEP 5:

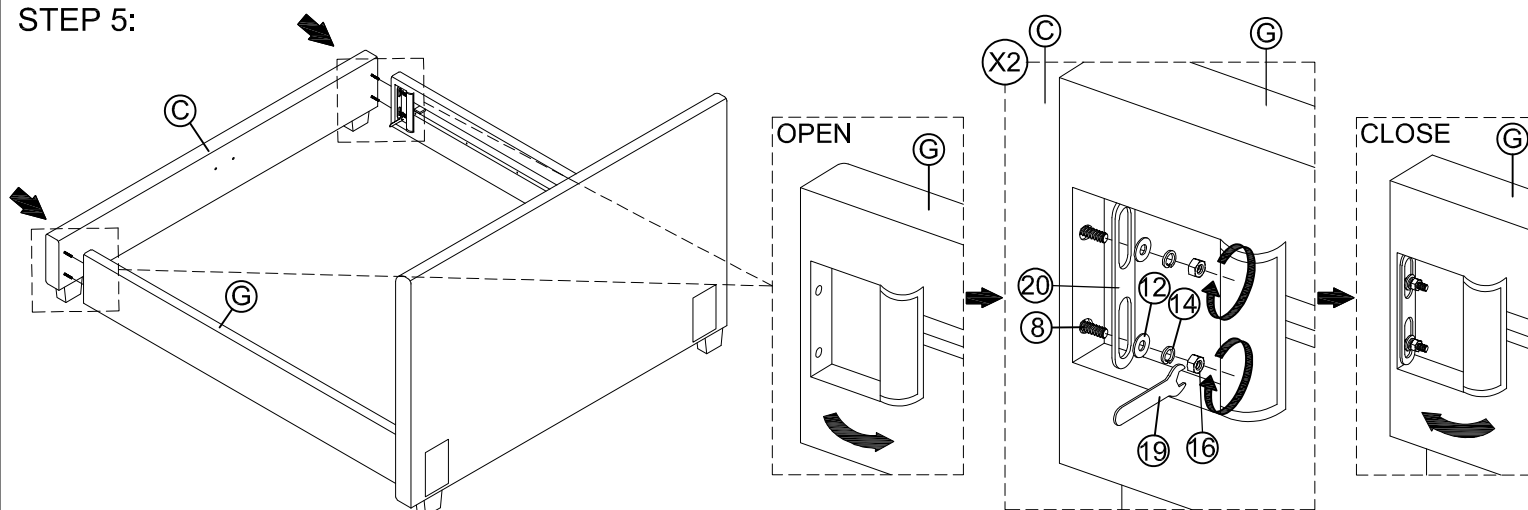


### STOP



- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 6-10 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 6.

### STEP 6:

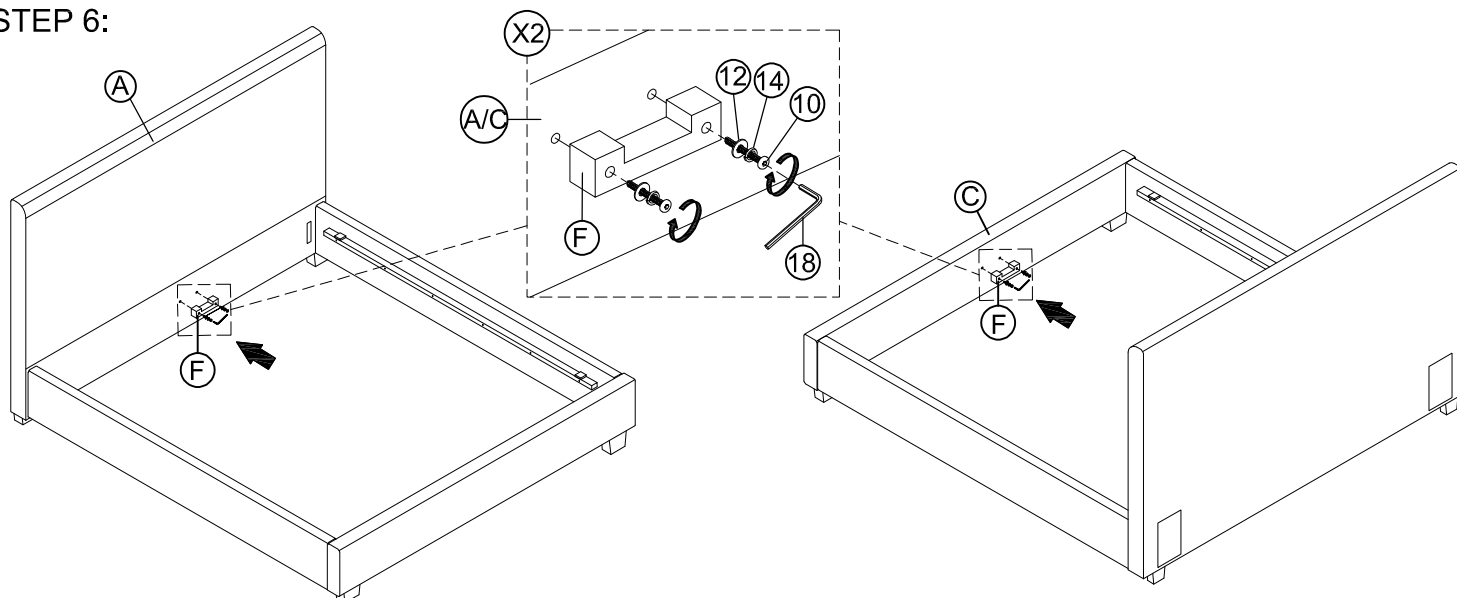


# ADONA/MADELEINE/ROYAL UPHOLSTERED FULL BED


## ASSEMBLY INSTRUCTIONS



### STEP 7:

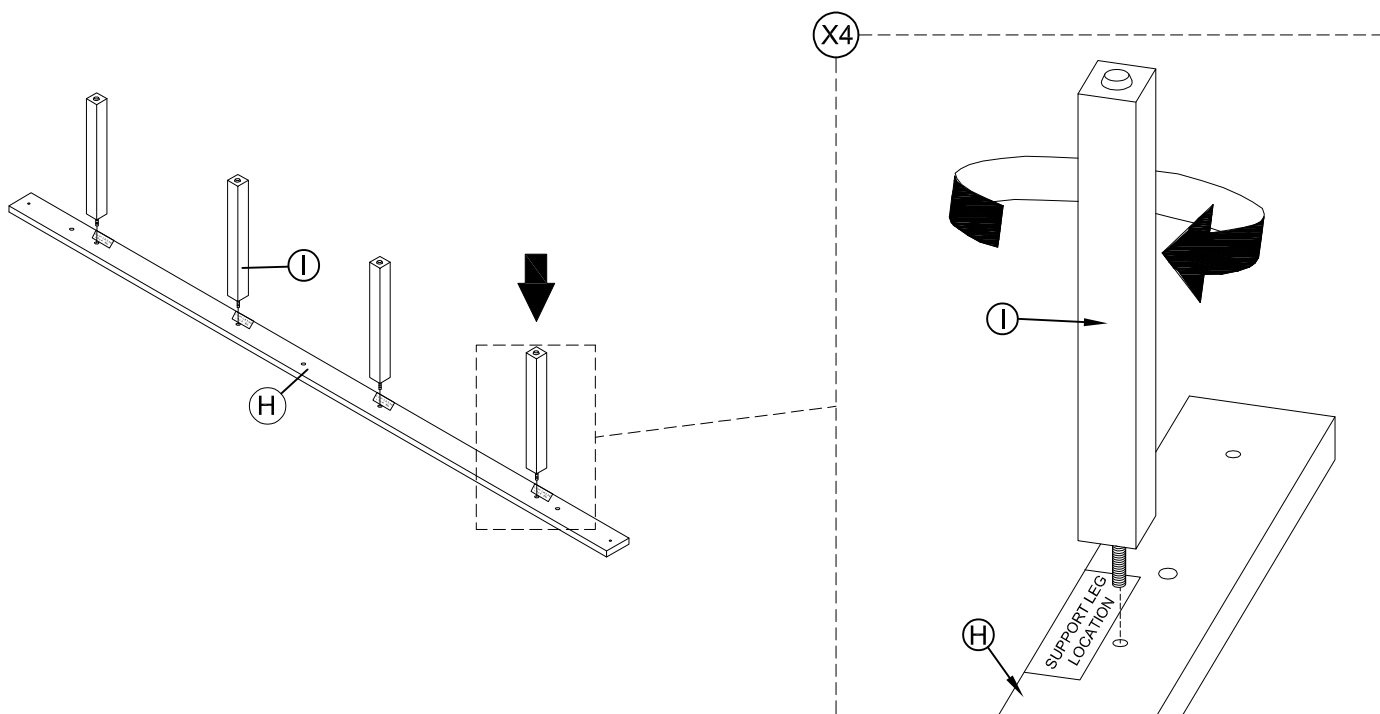

### STEP 8:

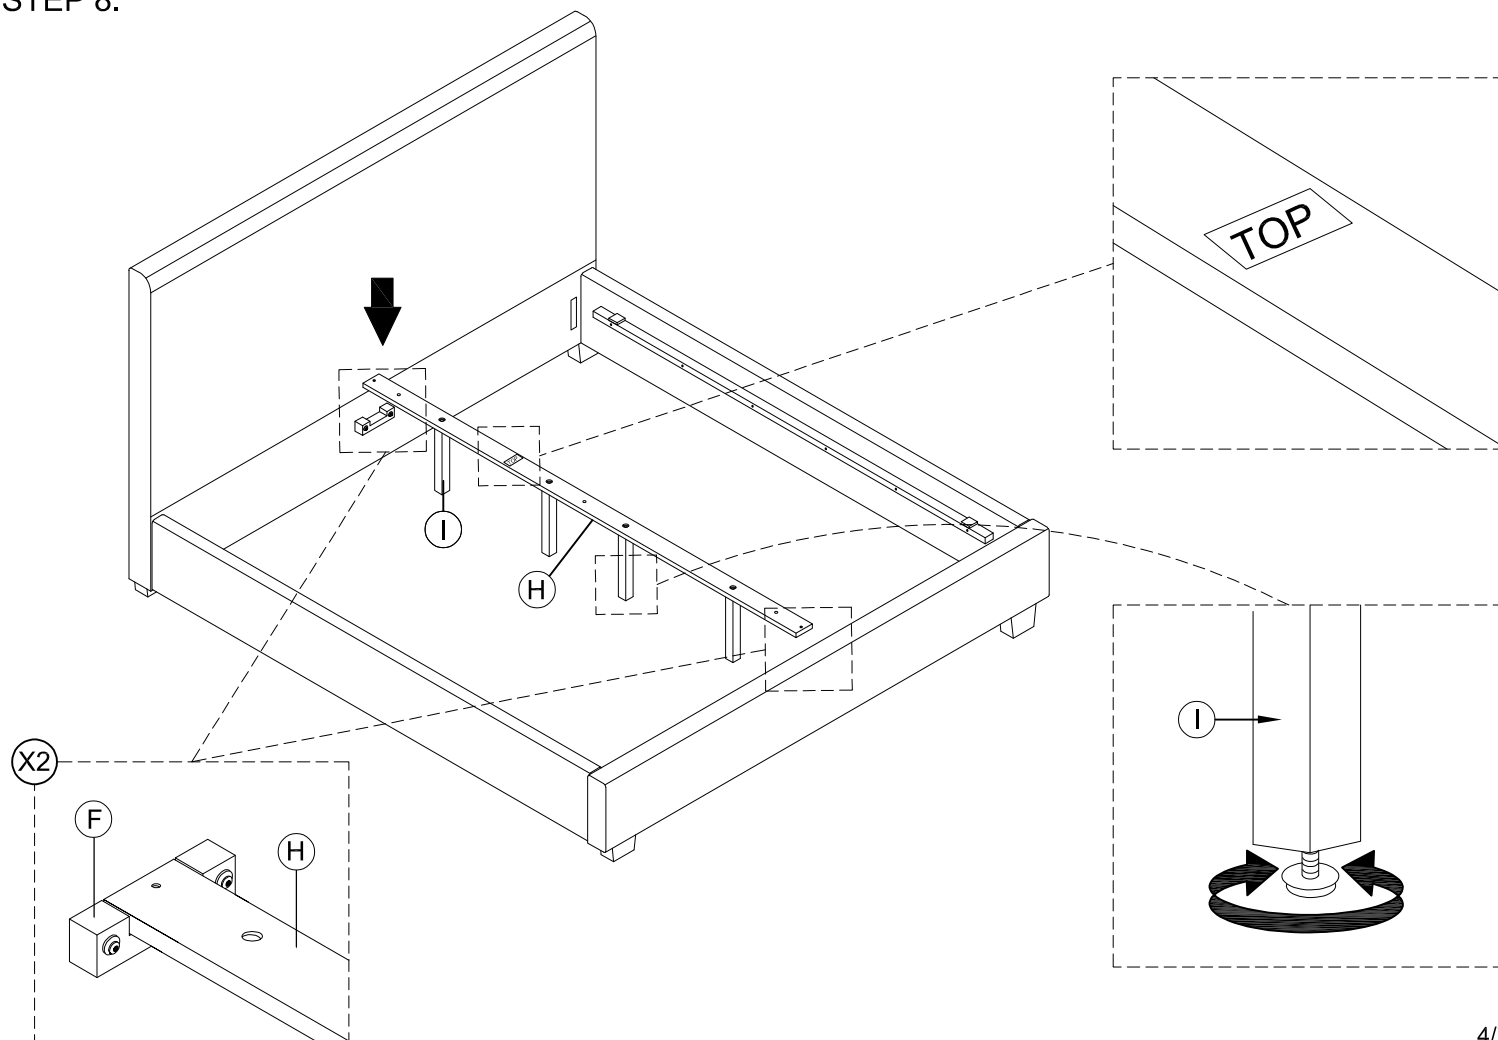


# ADONA/MADELEINE/ROYAL UPHOLSTERED FULL BED


## ASSEMBLY INSTRUCTIONS



### STEP 9:

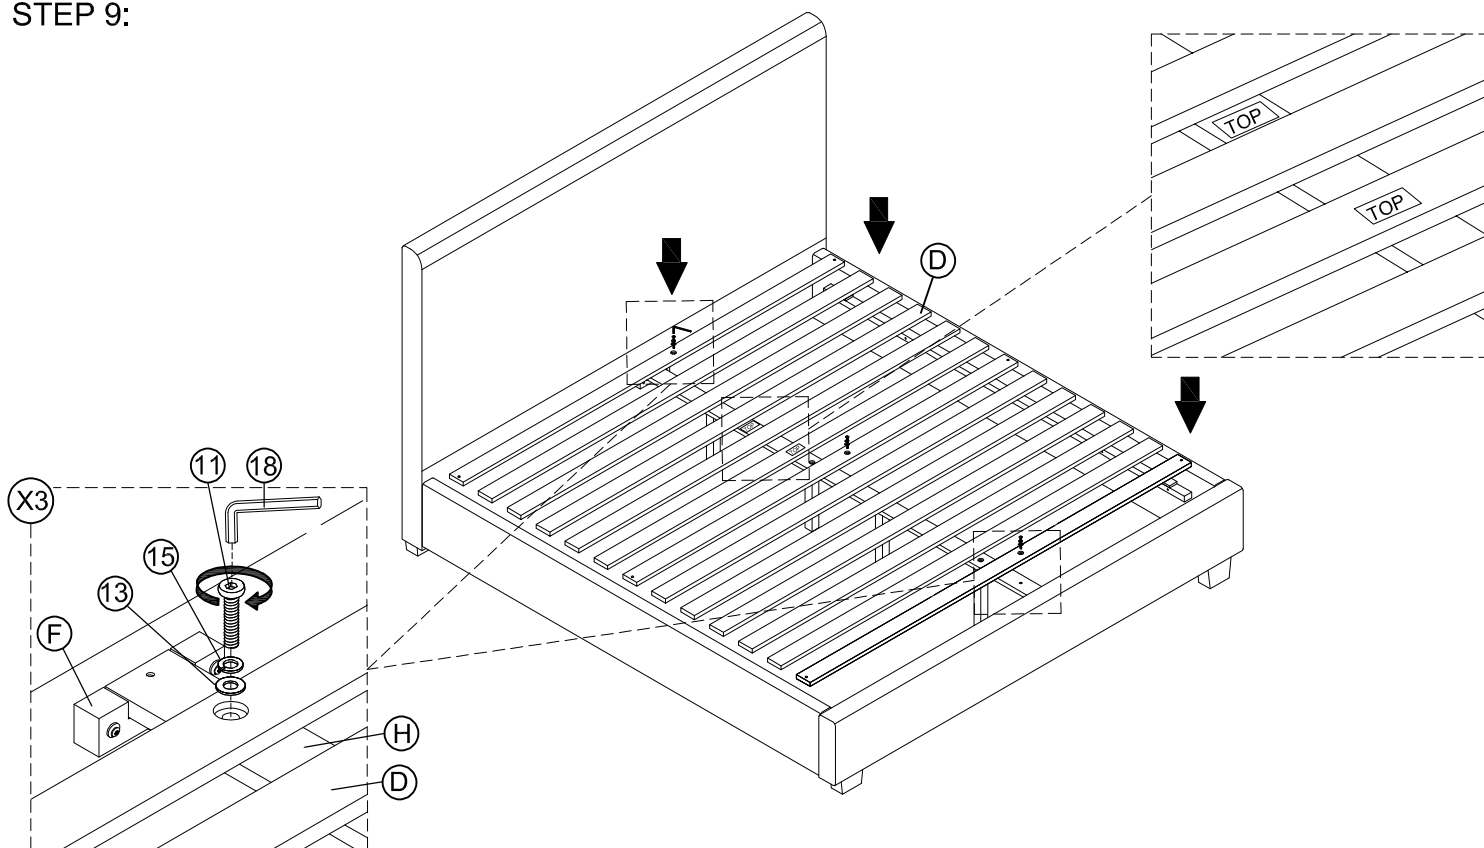


### STEP 10:

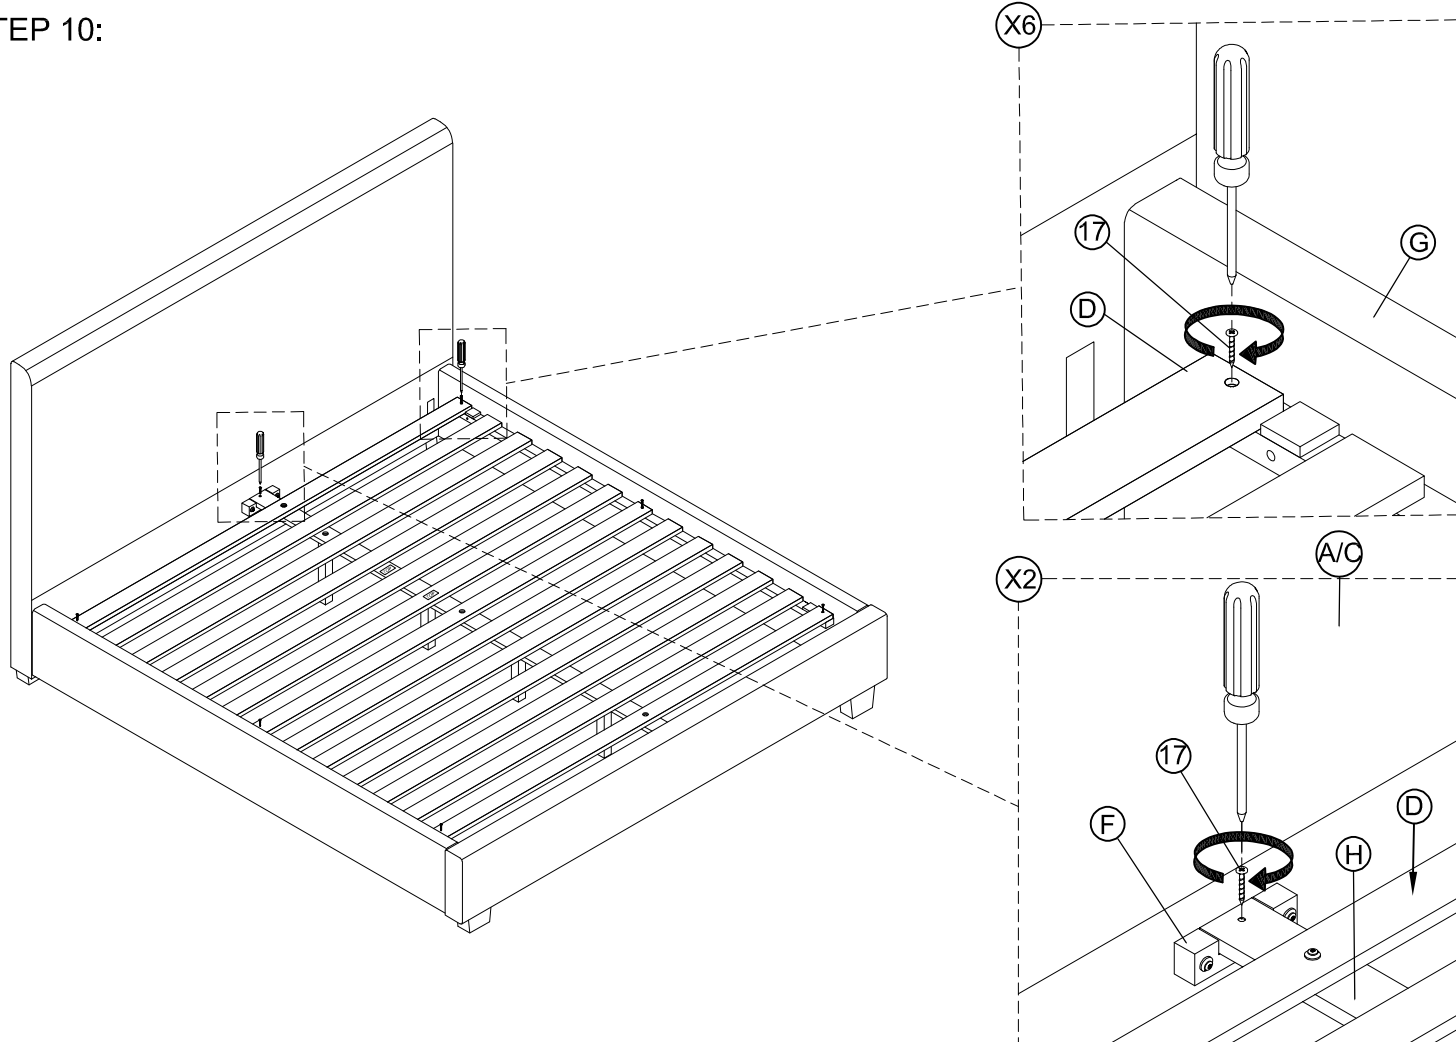

# ADONA/MADELEINE/ROYAL UPHOLSTERED FULL BED

## ASSEMBLY INSTRUCTIONS

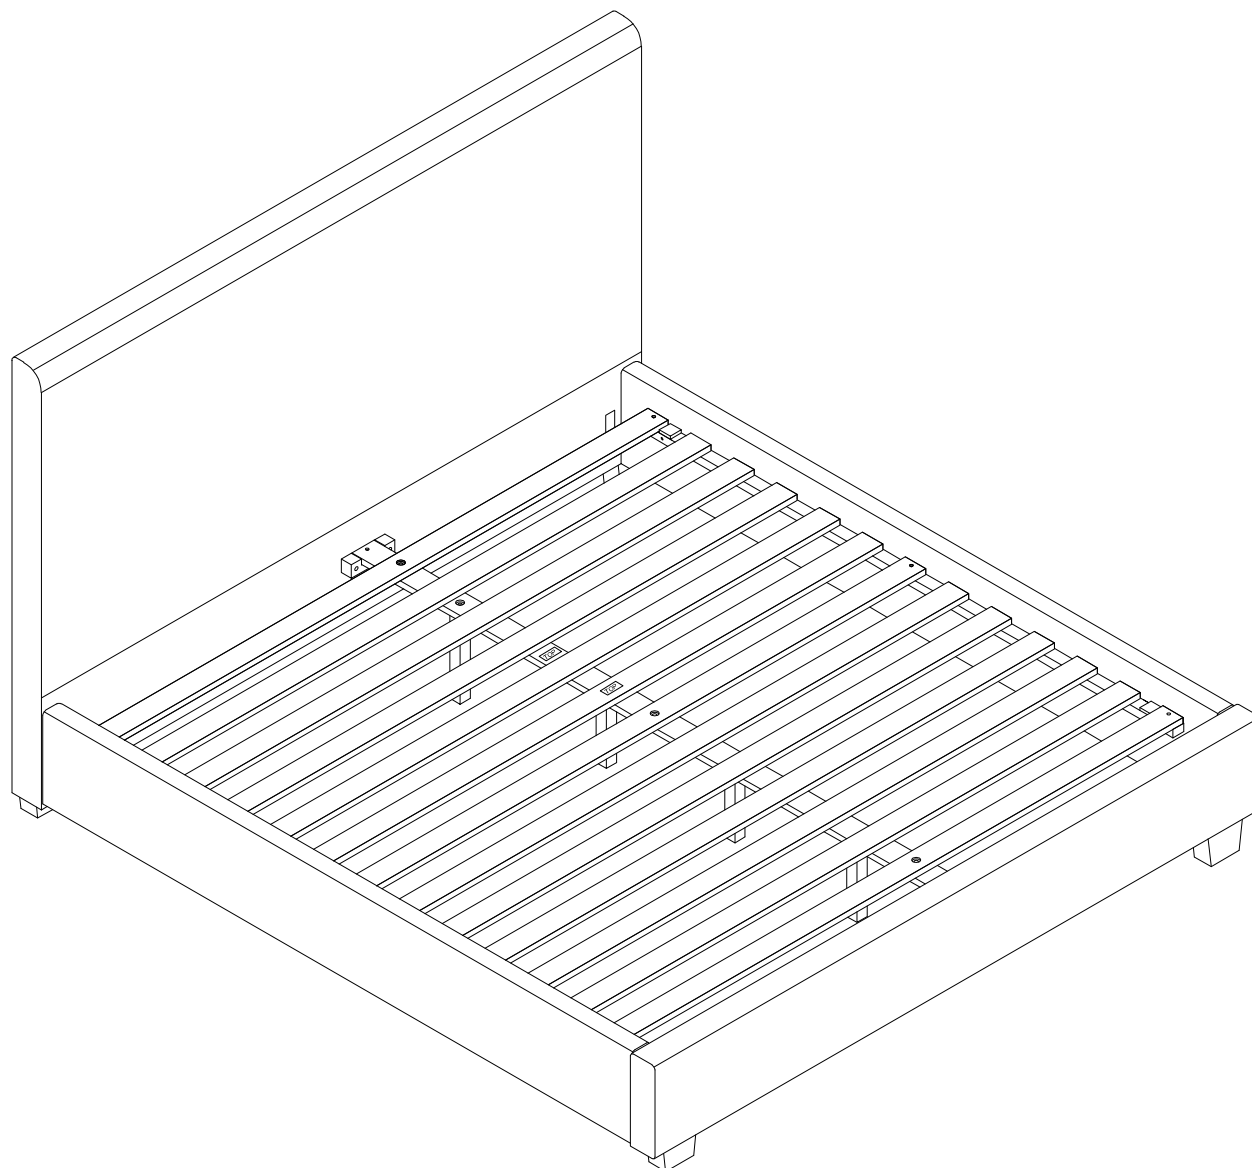


**ASSEMBLY COMPLETE**

### INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

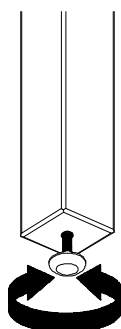

### MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

# ADONA/MADELEINE/ROYAL UPHOLSTERED FULL BED

## ASSEMBLY INSTRUCTIONS



### APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

#### THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

|                              |       |
|------------------------------|-------|
| D. SLAT ROLL                 | 1 SET |
| F. CENTER SLAT SUPPORT CLEAT | 2 PCS |
| H. CENTER SLAT SUPPORT       | 1 PC  |
| I. SUPPORT LEG               | 4 PCS |

#### STEP 1:

USE ALLEN KEY (18) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

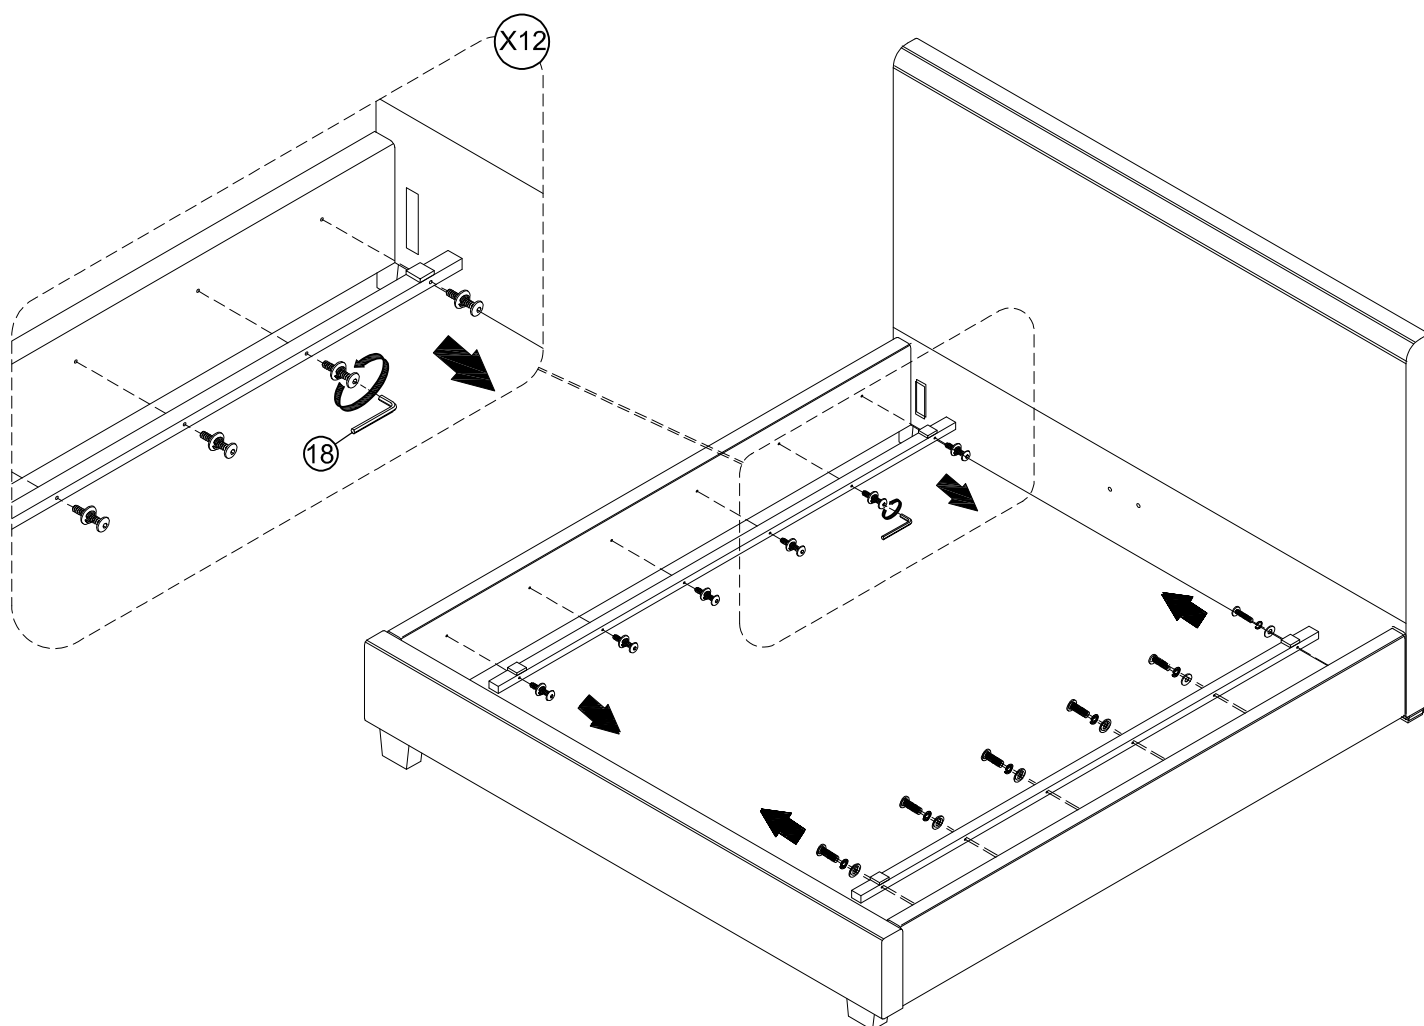

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION