




The SHA-B1xx-00 kit is designed for mounting a shade within a window jamb or if the shade ends up mounting to a wall (typically at the corner of a wall). The mount in the SHA-B1xx-00 kit mounts using two #8 pan head mounting screws (included) and can be screwed directly to the wall (if sub wall allows). If required, the use of drywall anchors can be used. The SHA-B1xx-00 kit is the idler side and mounts opposite the shade motor. Before installing this shade mount, the shade mount for the drive side (motor) should be installed first (SHA-B2xx kit). Once the drive side mount is installed, it can be used as a reference point for mounting the SHA-B1xx or other similar shade mounts as required.

### Box Contents

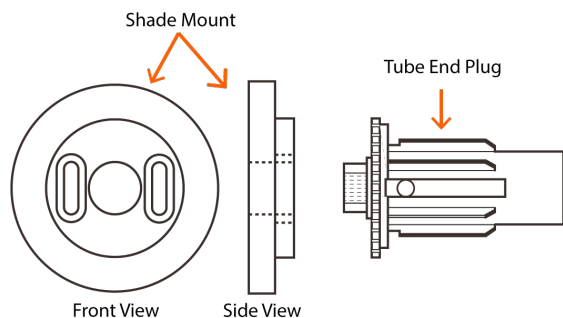


- (1) Shade Mount - Inside/Jamb Mount - Idler Side
- (1) Shade Tube End Plug - Idler Side
- (2) #8 Pan Head Mounting Screws
- (1) Quick Reference Guide (this document)

**Note:** For additional documentation on installing this shade mount as well as information on all phases of shades installation, refer to the following documentation on the **Savant Customer Community**.

- Shades Installation and Wiring Guide (009-1532-XX)

**HELPFUL INFORMATION!** Prior to starting the mounting process, review the items below to ensure a trouble free install.

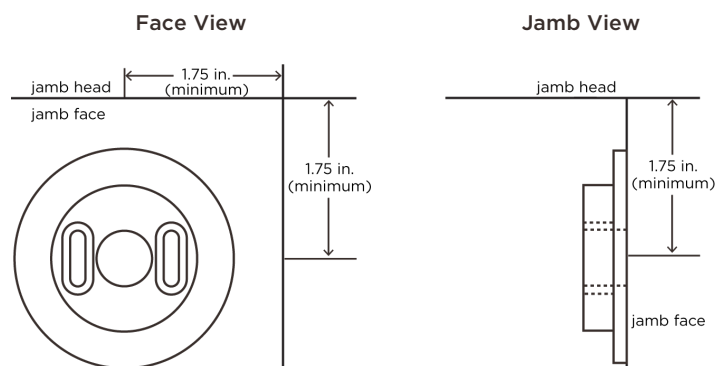

- Install the inside/jamb shade mount so the center point of the mount is installed at least 1 ¾ inches (minimum) from any obstructions.
- To reduce marking up walls, it is recommended that painters tape be used whenever drilling is involved.

**TIP!** The distance the shade is mounted from the wall or ceiling can be adjusted from the 1 ¾ inches as shown above. The 1 ¾ inches shown is the **minimum** distance needed for the shades to operate properly.

### Mounting Instructions

1. If the motor side shade mount from the SHA-B2xx install kit is not already mounted, install that mount first before starting the process of installing this mount. The shade mount in the SHA-B2xx-00 install kit should be used as a reference point for mounting and leveling other similar type shade mounts.
2. Place the shade mount onto the wall where it will be mounted and mark the placement of the two screws that secure the mount to the wall. Ensure the center point of the mount is at least 1 ¾ inch from any obstructions.



**IMPORTANT!** It is critical that all mounts be level to ensure the shade fabric rolls and unrolls evenly.

3. Secure the bracket to the wall using the two supplied #8 pan head mounting screws. If required, wall anchors can be installed if the wall that the mount is being attached to does not have a sub wall to screw into.
4. Once installed, verify the shade mount is secure and tight to the wall.