

IPORT


Pillar Flush Mount Instructions

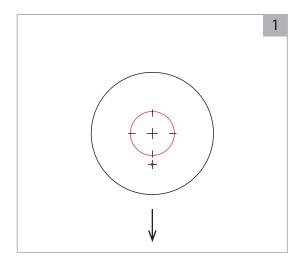


Print the provided template on page 4. Position the center of the template at the desired location for the center of the Pillar Mount. Make sure the small 1/8" mark is facing toward the front of where the Piller Mount will be facing.

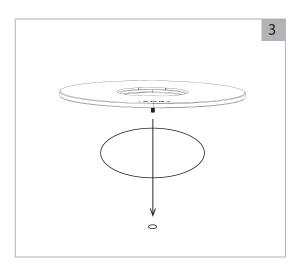


Insert the Flush Mount baseplate alignment bolt into the 1/8" hole and center the base receiver hole with the 2-1/8" hole.

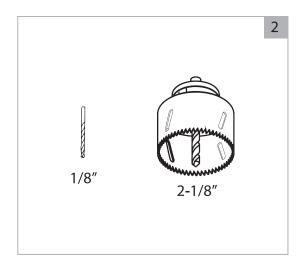


Use a 2-1/8" hole saw to cut a hole in the surface for the mounting nut Using the template as a center guide. Use a 1/8" drill bit to drill a hole for the alignment bolt on the FlushMount base.

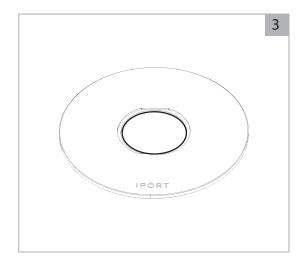


IPORT

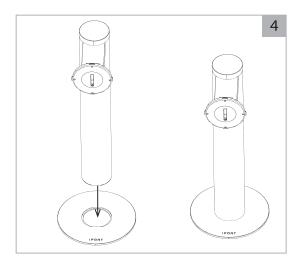


Place the pillar onto the base temporarily to verify alignment is correct.

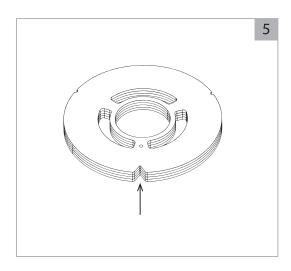

Ensure the V notch of all the shims are aligned for correct fitment of the mounting hardware

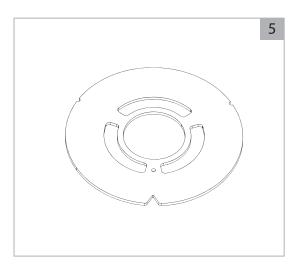


Provided are depth shims to accommodate a large range of surface thickness'. Use the appropriate amount of shims to ensure a tight fit of the mounting nut and the pillar base. The Flush Mount kit has a minimum mounting surface thickness of 7/8" (22mm) and a Maximum of 1-9/16" (40mm)

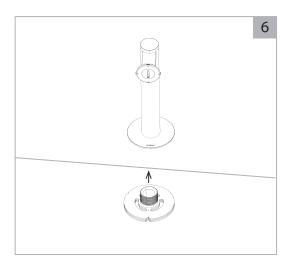


Insert the mounting nut with shims into the pillar hole and start threading the mounting nut and shims by hand into the Pillar base.

I P U R T


PILLAR - FLUSH MOUNT INSTALLATION TEMPLATE

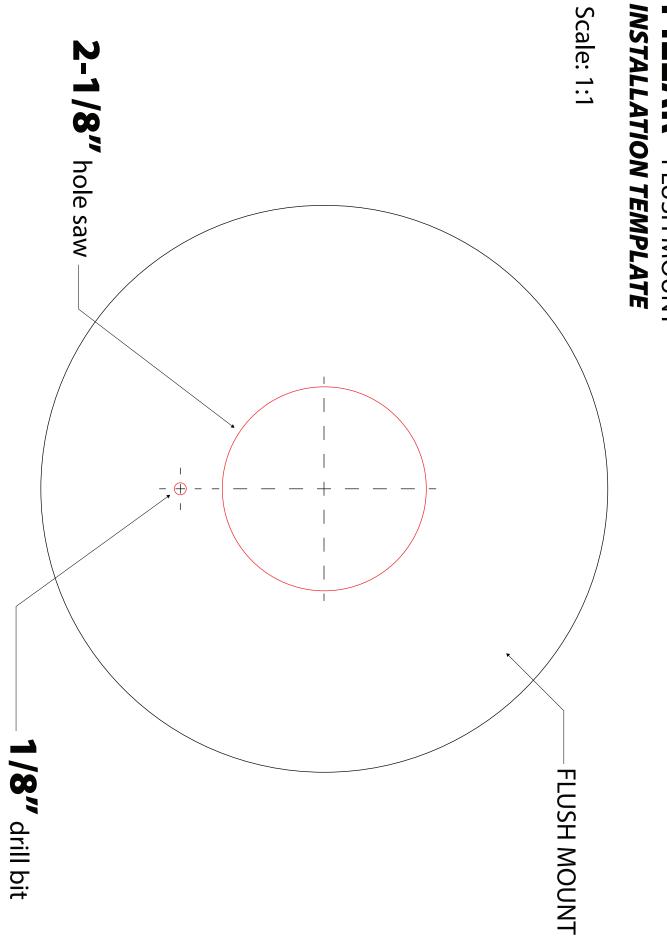


ΙΡŮRΤ

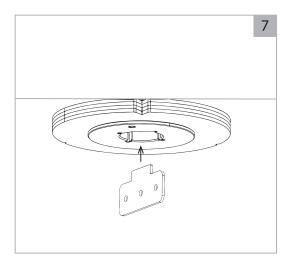

Once hand tight use the provided Pillar Mount tool to tighten the shims and mounting nut so the pillar is secure in place.

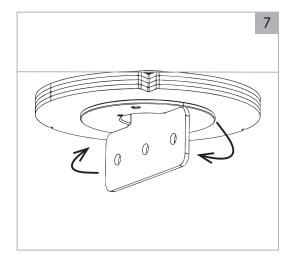

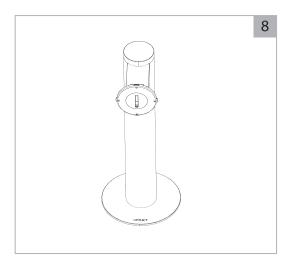

Once the Pillar Mount is secure refer to that Piller manual for instructions on mounting the iPad Cases and powering the Piller Mount.