



Installation Instructions for Rebate Kit KT 800 REB, KT 850 REB and KT 890 REB

Strike Plate Installation


Step 1.

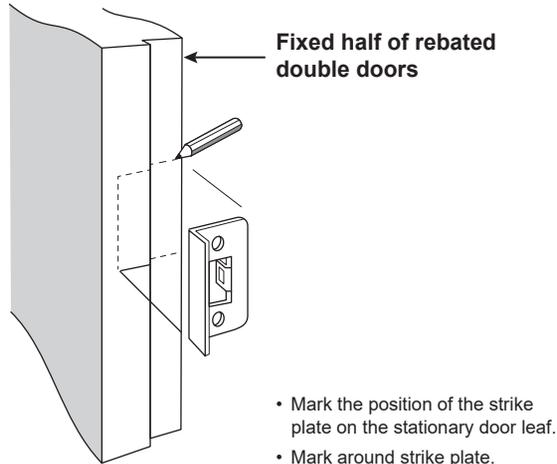

Step 2.

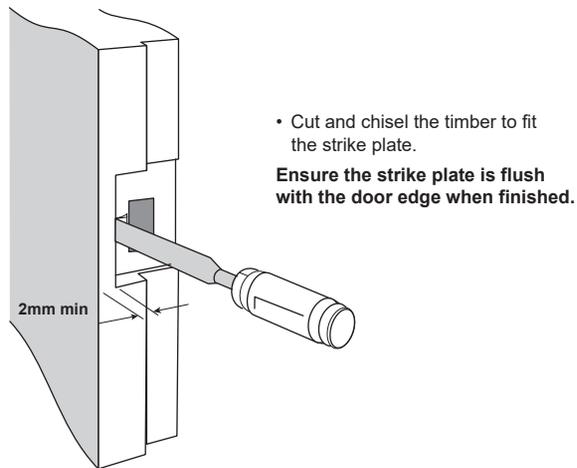


Step 3.

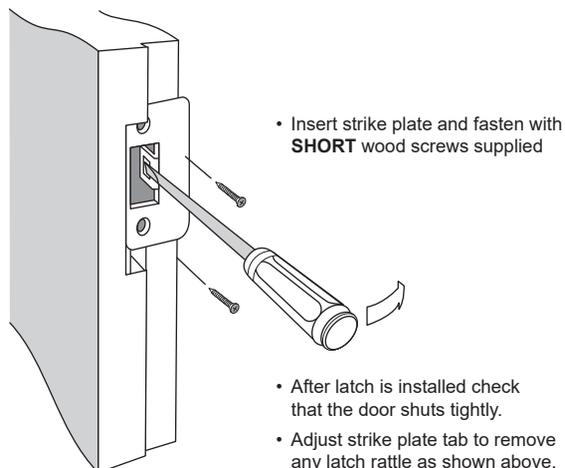


Latch Installation


Step 1.

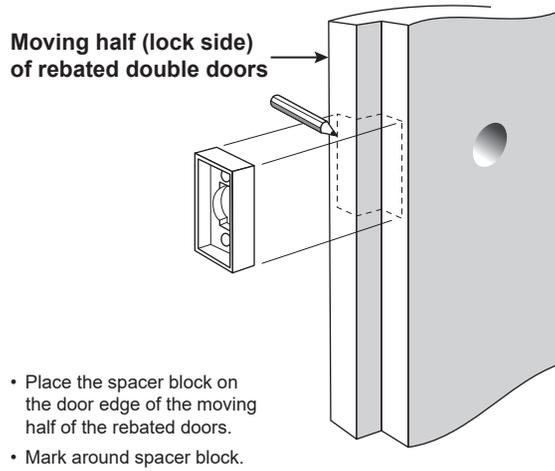

Step 2.

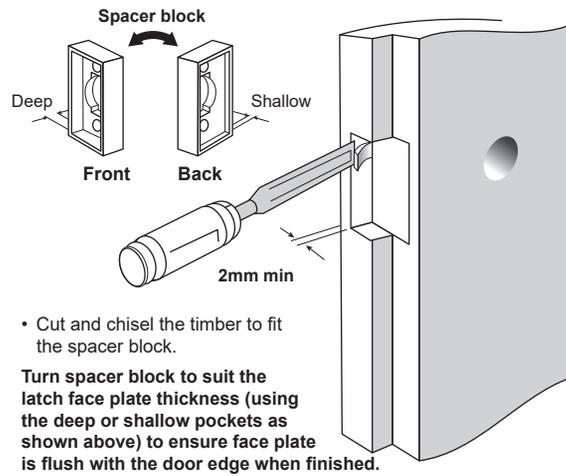

Step 3.

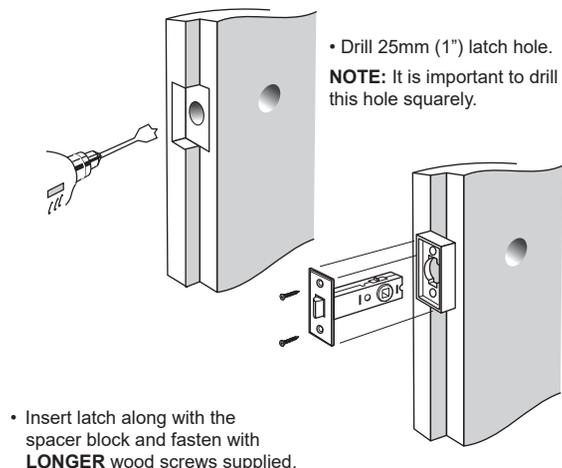

NOTE: Carefully follow these instructions when installing.
Do not over tighten screws.
Use of power driver is not recommended.

Minimum door thickness: 35mm

| Choosing your Rebate Kit: | KT 800 REB | KT 850 REB | KT 890 REB |
|--|------------|------------|------------|
| Gainsborough '480' tubular latches | ✓ | | |
| Gainsborough '800' series Stronghold / G3 locksets | ✓ | | |
| Gainsborough '500' series Contractor / G4 locksets | ✓ | | |
| Gainsborough '845' and '850' series Stronghold / G3 deadbolts | | ✓ | |
| Gainsborough '545' and '550' series Contractor / G4 deadbolts | | ✓ | |
| Gainsborough 'Trilock' range locksets (knob & lever version) | | | ✓ |



ALLEGION

gainsboroughhardware.com.au
gainsboroughhardware.co.nz