



# Installation Guide

## Lavatory Drains

K-7127



K-7128

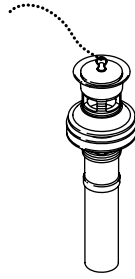


**M** product numbers are for Mexico (i.e. K-12345**M**)  
Los números de productos seguidos de  
**M** corresponden a México (Ej.  
K-12345**M**)  
Français, page "Français-1"  
Español, página "Español-1"

THE BOLD LOOK  
OF **KOHLER**®

1052943-2-C

## Tools and Materials

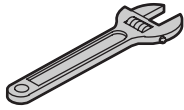

Adjustable  
Wrench




Plumbers  
Putty



Rags

## Before You Begin

- Observe all local plumbing and building codes.
- If possible, install the drain before installing the plumbing fixture.
- Inspect the supply tubing for damage. Replace as necessary.
- Kohler Co. reserves the right to make revisions in the design of faucets without notice, as specified in the Price Book.

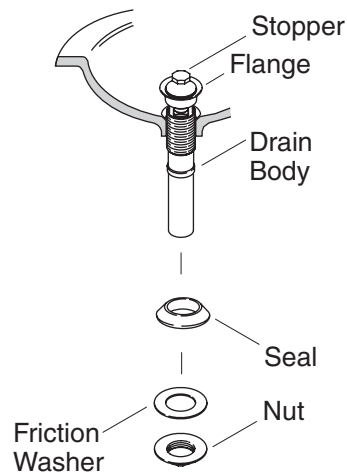

## Installation

- If present, remove and discard the protective plastic cap from flange.
- Remove the nut, friction washer, and seal from the drain body.
- Apply a bead of plumbers putty or other sealant around the underside of the flange according to the sealant manufacturer's instructions.
- Insert the drain assembly into the drain hole and press into place.

**NOTE: For K-7127:** A thin seal and a thick seal are provided with your drain. Use the thin seal when installing the drain to lavatories with a thick wall, such as vitreous china or cast iron. Use the thick seal when installing the drain to lavatories with a thin wall, such as stainless steel or copper.

- Slide the seal (tapered side up) and the friction washer onto the drain body.

**NOTE:** Do not rotate the drain while tightening the nut.

- Thread the nut up the drain body until snug against the underside of the lavatory.
- Using an adjustable wrench, tighten the nut. Do not overtighten.
- Remove any excess putty or sealant.
- Connect the P-trap (not provided) to the drain body.