

RAVELLE UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS



PARTS PACKING CONFIGURATIONS



BOX #1 A. HEADBOARD 1 PC	BOX #2 B. FOOTBOARD C. SLAT ROLL 1 PC 1 SET	BOX #3 D. SUPPORT LEG E. SIDE RAIL F. CENTER SLAT 3 PCS 2 PCS 1 PC
---------------------------------------	--	---

FULLY ASSEMBLED

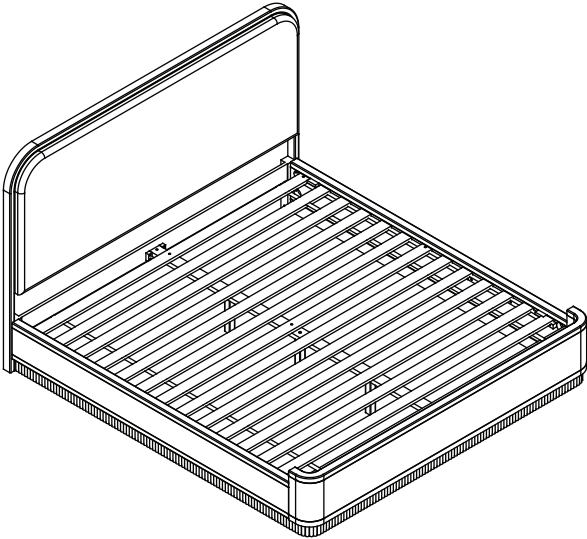


HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (M8x70mm)		8 PCS
2	HALF MOON WASHER (M8)		8 PCS
3	SPRING WASHER (M8)		8 PCS
4	HEX NUT (M8)		8 PCS
5	WRENCH (13mm)		1 PC
6	WOOD SCREW (4x30mm)		11 PCS
7	ALLEN KEY		1 PC

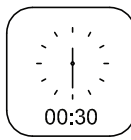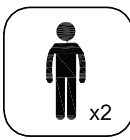


STEP 1

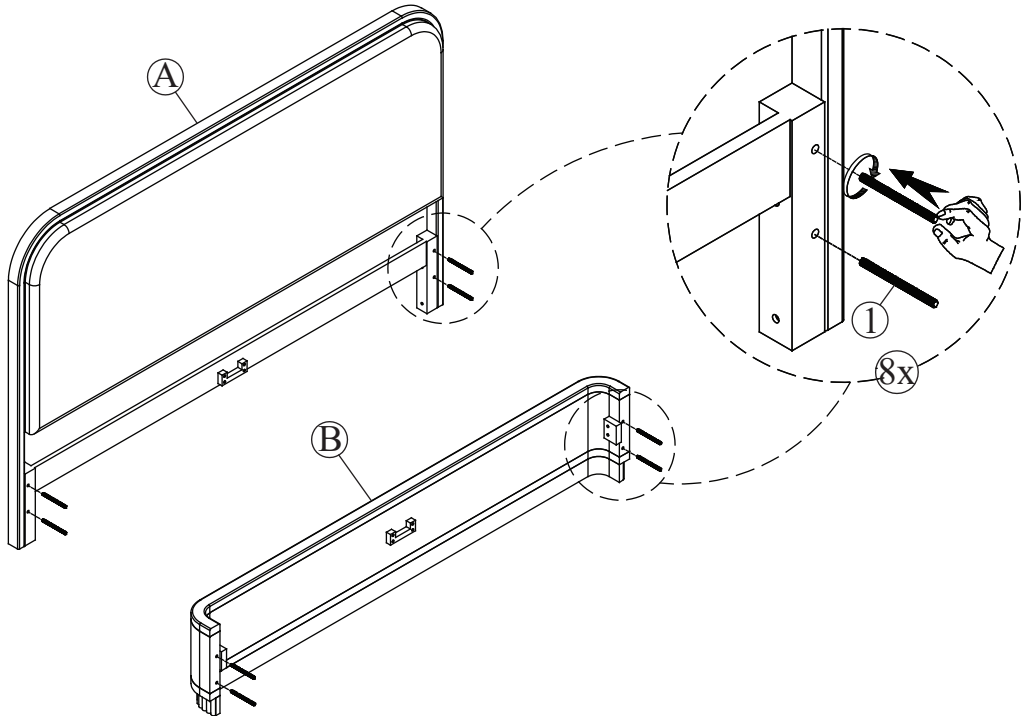


RAVELLE UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS

STEP 2

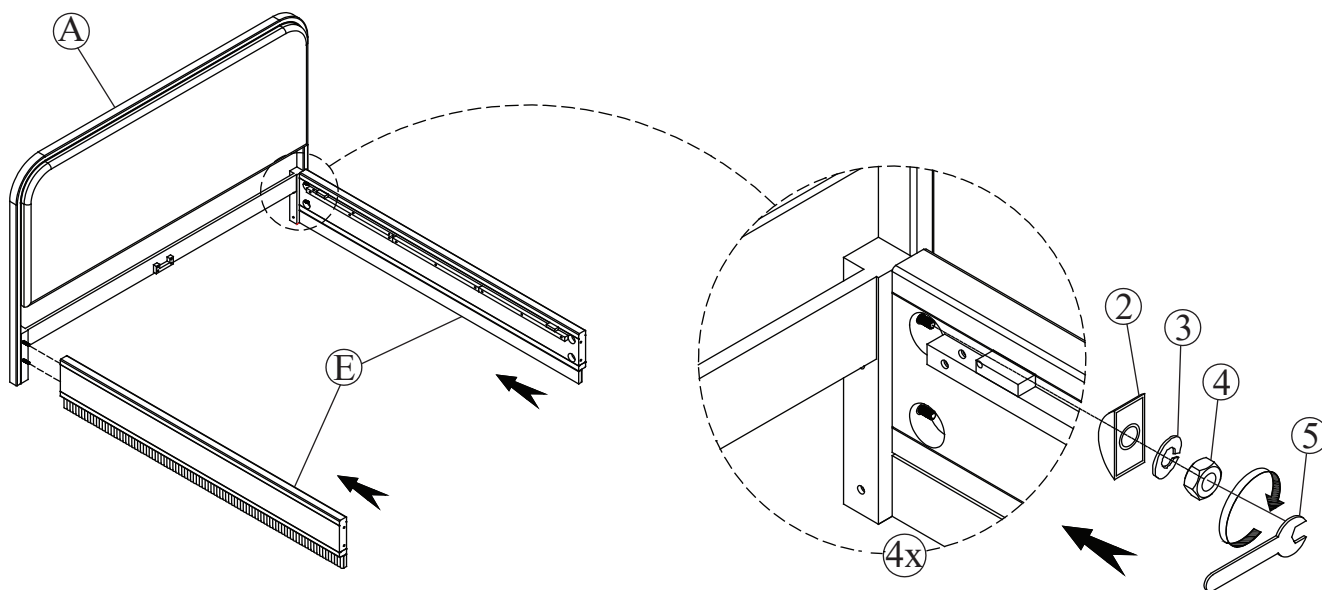


STEP 3

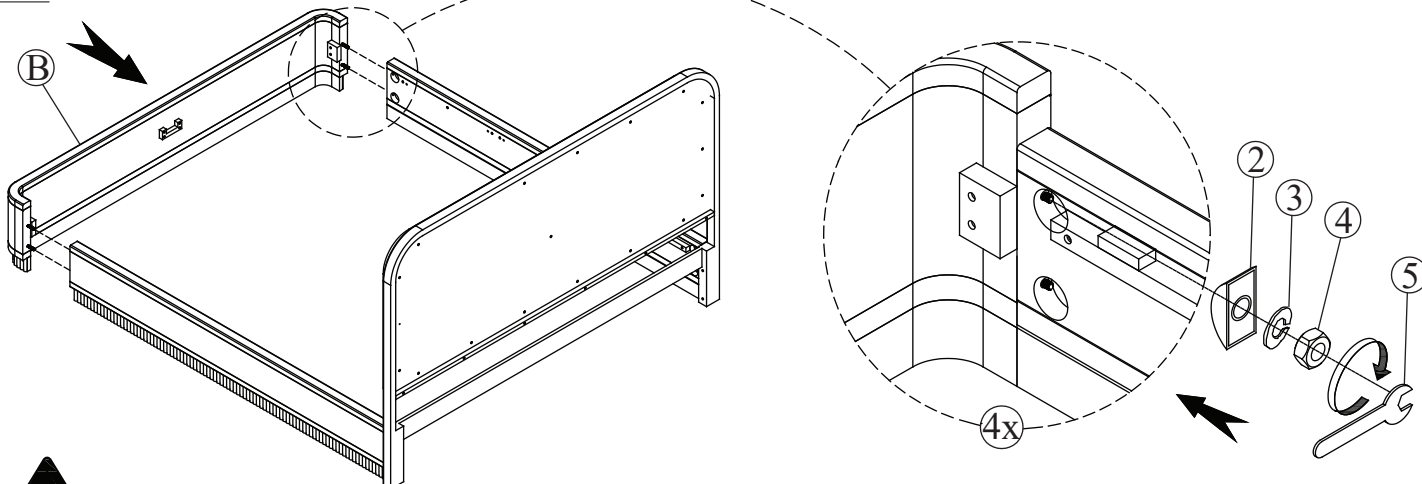

STOP

. IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4, 5, 6 & 7
AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
. IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4


STEP 4

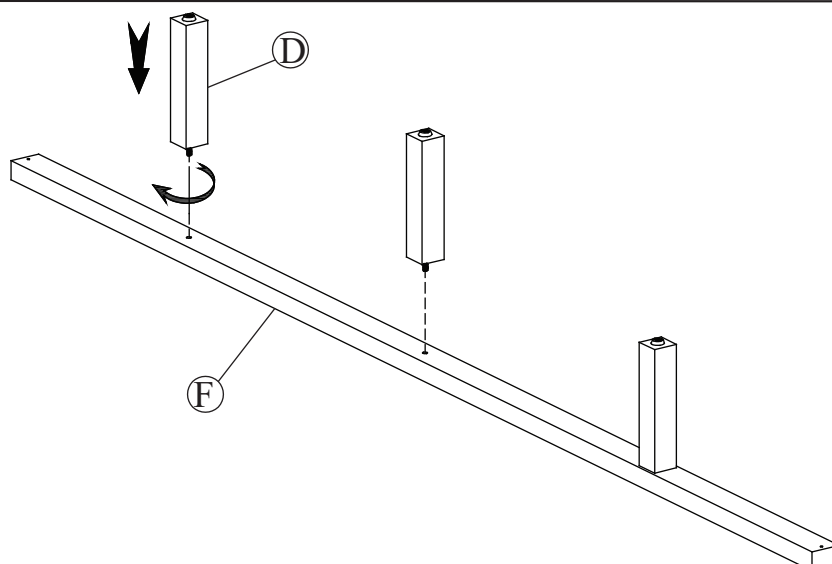


RAVELLE UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS

STEP 5

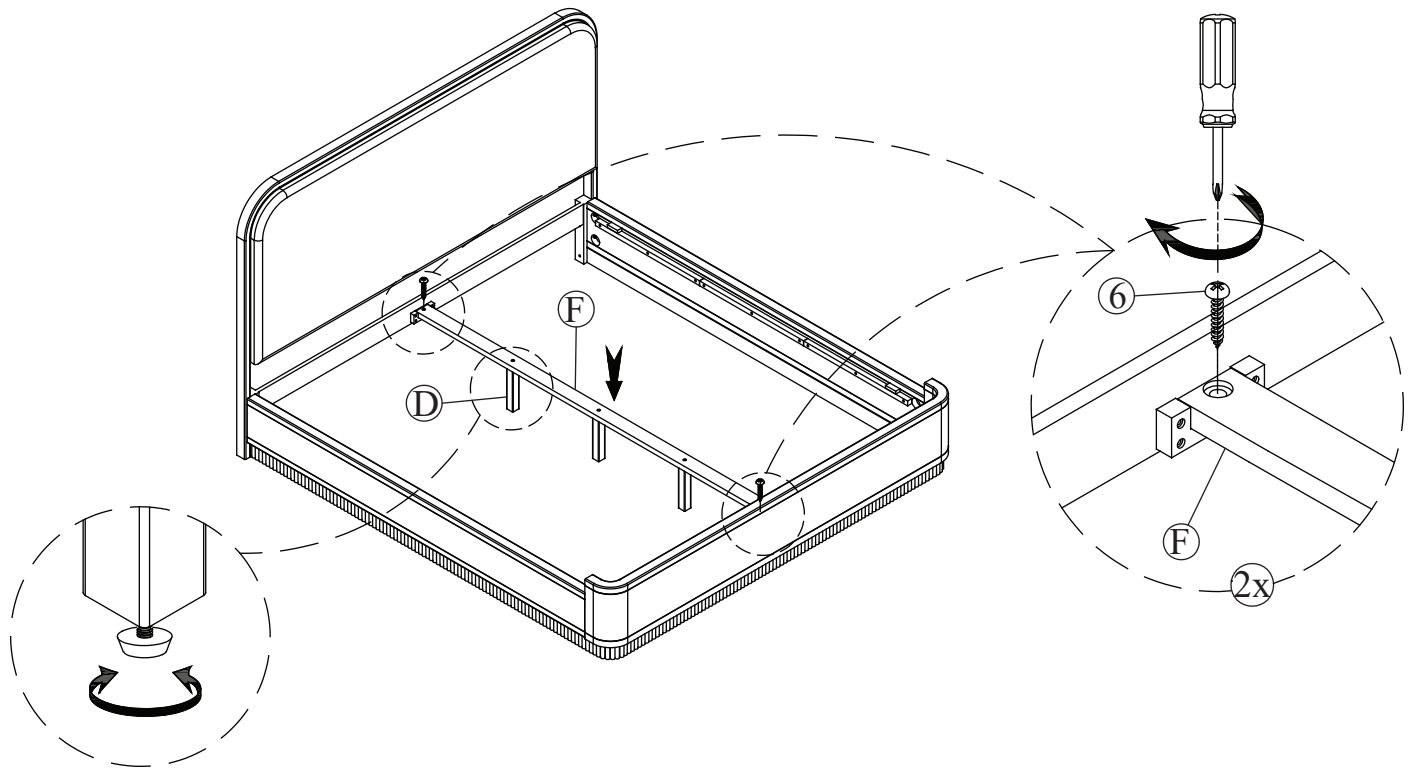


STEP 6

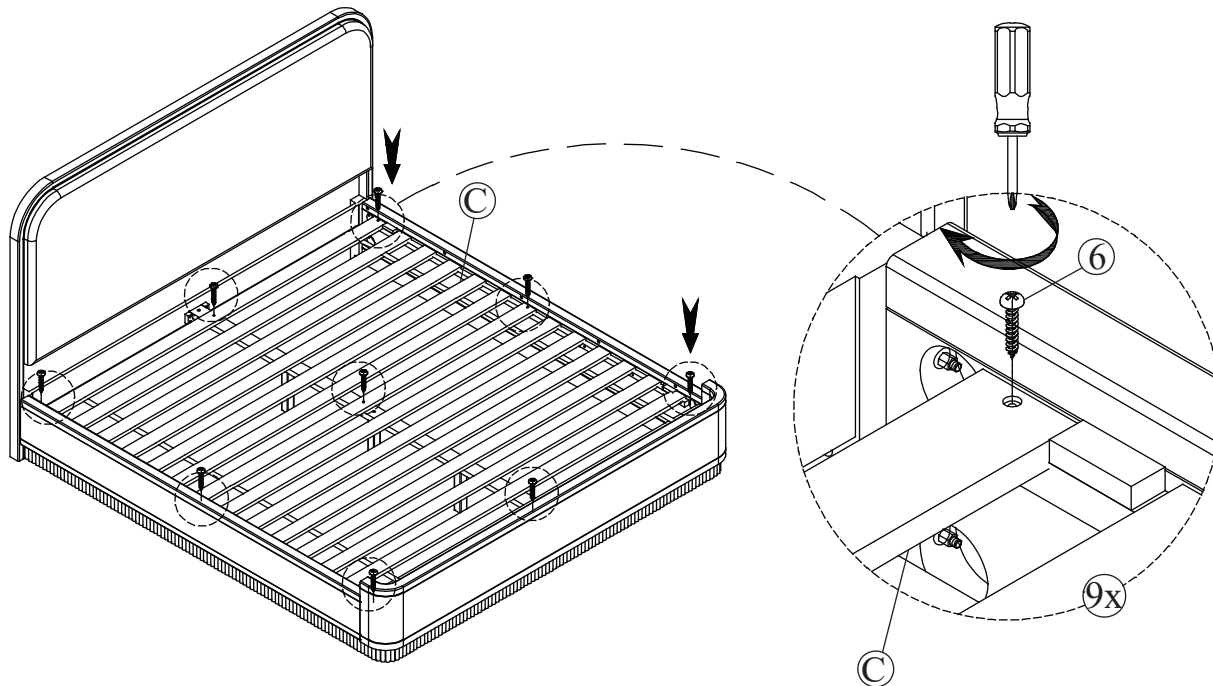

RAVELLE UPHOLSTERED QUEEN BED ASSEMBLY INSTRUCTIONS



STEP 7

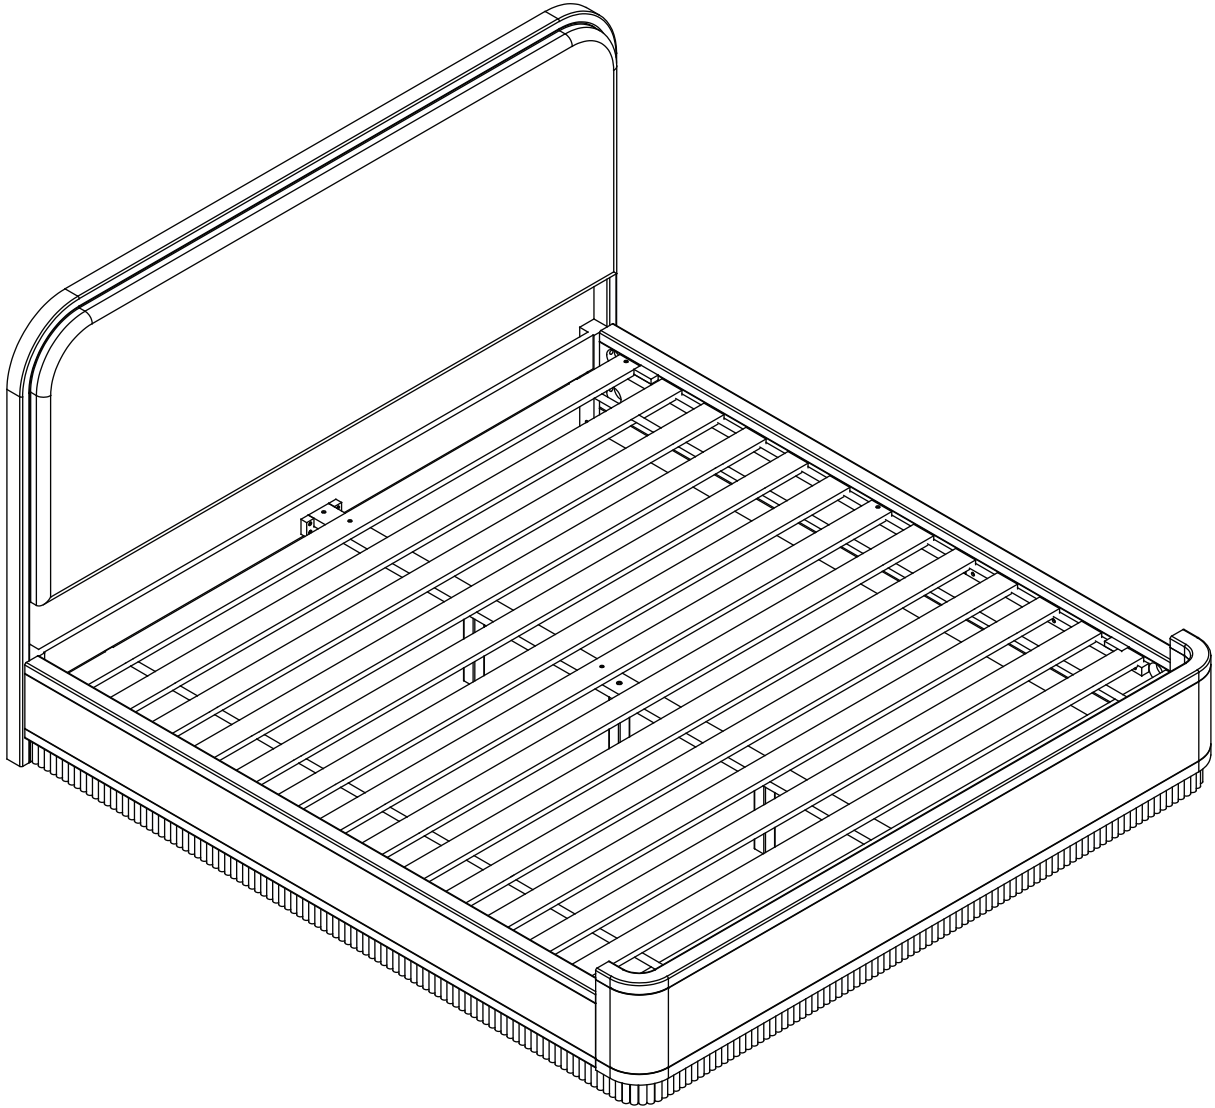

ASSEMBLY COMPLETE


PAGE 4 OF 5

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each leg support.

Turn the leveler counter-clockwise to extend and clockwise to retract it.

Adjust each leveler until each leg support is applying equal, upward pressure on the slat.

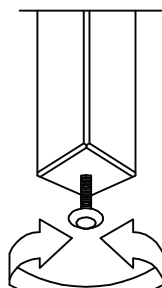

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

RAVELLE UPHOLSTERED QUEEN BED ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL : 1 SET


D. SUPPORT LEGS : 3 PCS

F. CENTER SLAT : 1PC

6. WOOD SCREW (4x30mm) : 11 PCS

STEP #1:

USE ALLEN KEY (7) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

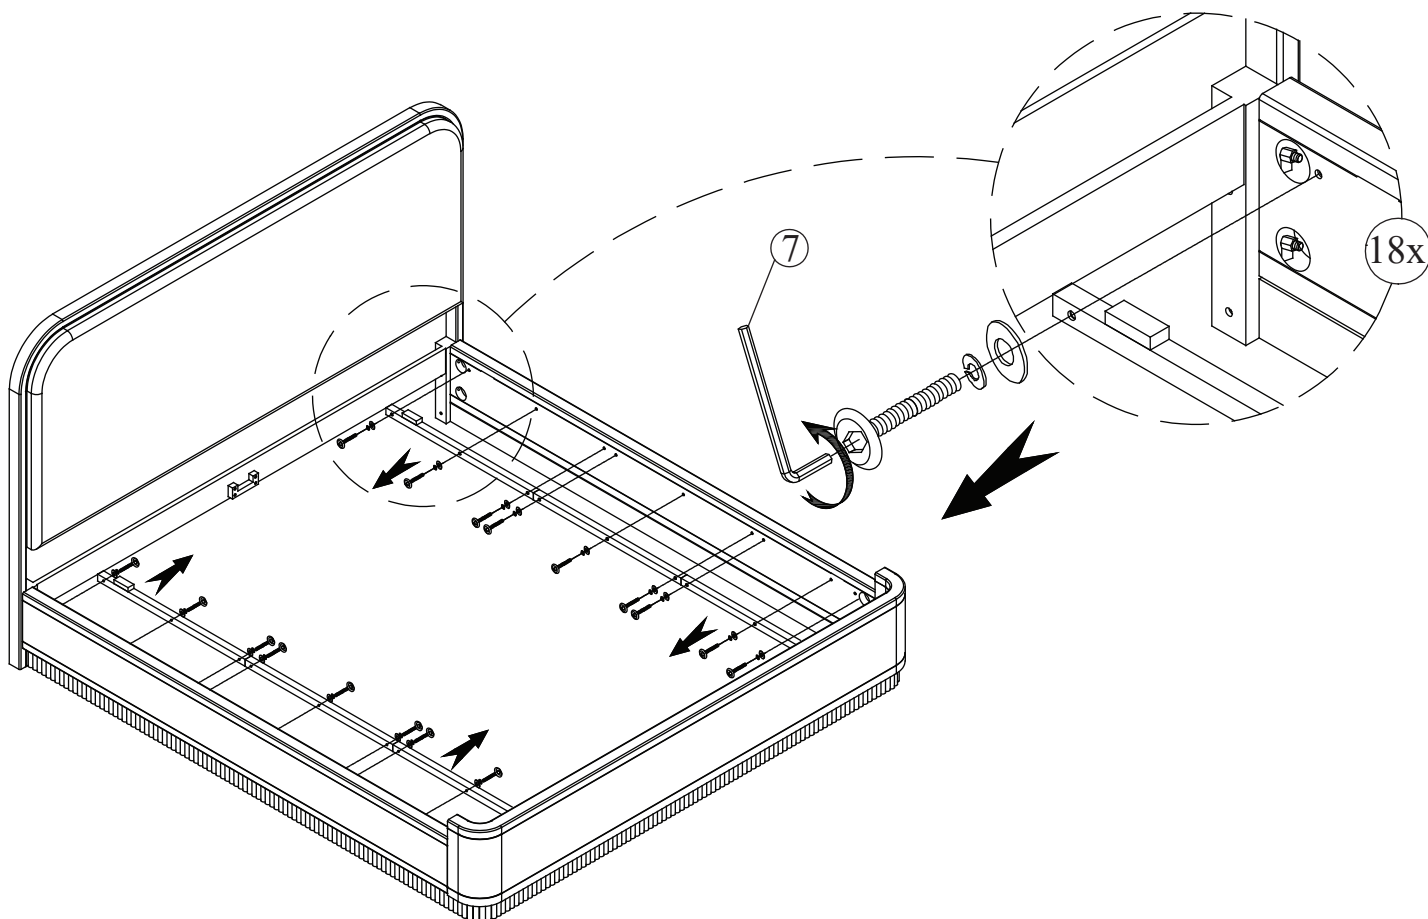

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

RAVELLE UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS



PARTS PACKING CONFIGURATIONS



BOX #1 A. HEADBOARD 1 PC	BOX #2 B. FOOTBOARD C. SLAT ROLL 1 PC 1 SET	BOX #3 D. SUPPORT LEG E. SIDE RAIL F. CENTER SLAT 3 PCS 2 PCS 1 PC
---------------------------------------	--	---

FULLY ASSEMBLED

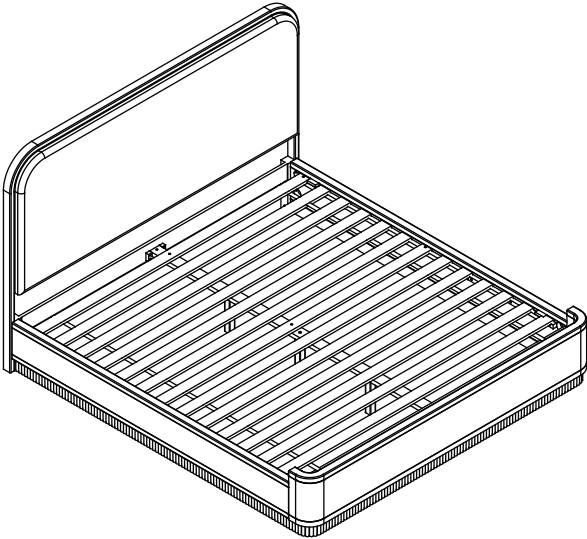


HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (M8x70mm)		8 PCS
2	HALF MOON WASHER (M8)		8 PCS
3	SPRING WASHER (M8)		8 PCS
4	HEX NUT (M8)		8 PCS
5	WRENCH (13mm)		1 PC
6	WOOD SCREW (4x30mm)		11 PCS
7	ALLEN KEY		1 PC

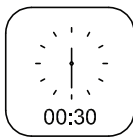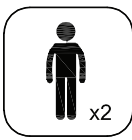


STEP 1

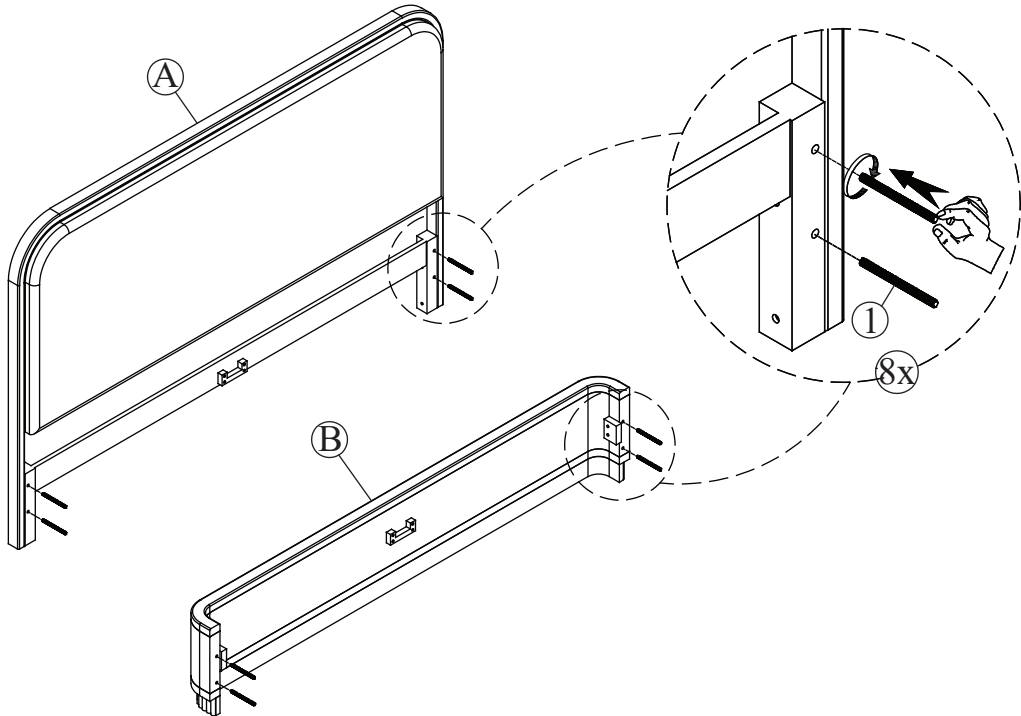


RAVELLE UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS

STEP 2

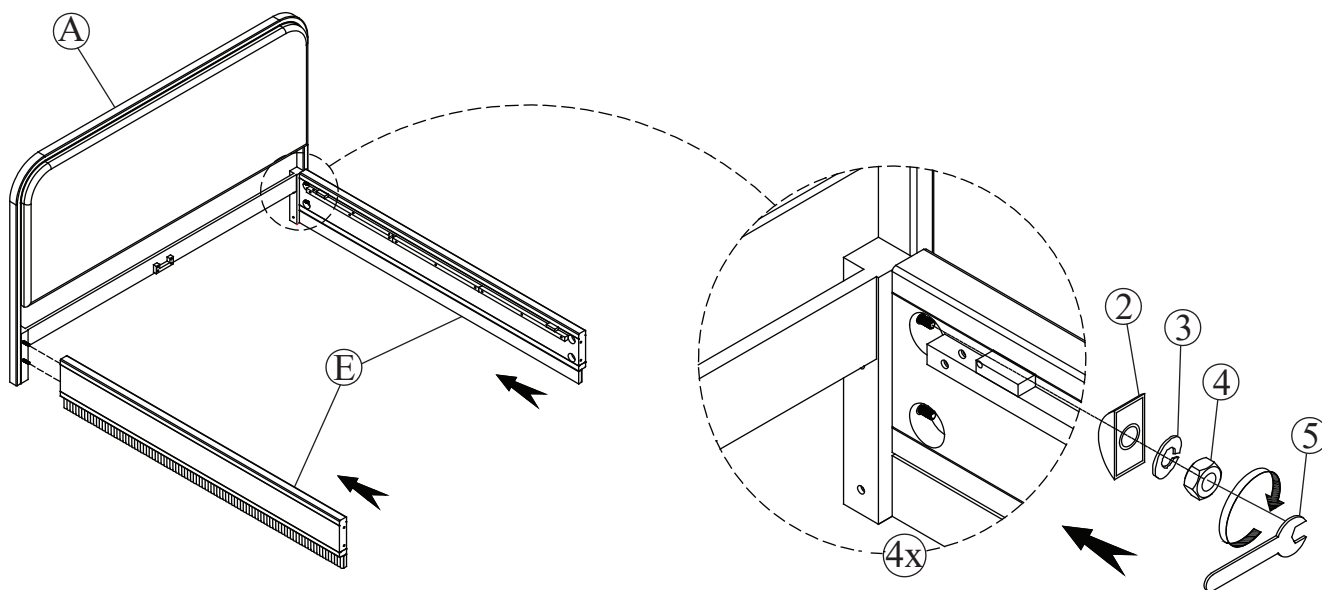


STEP 3

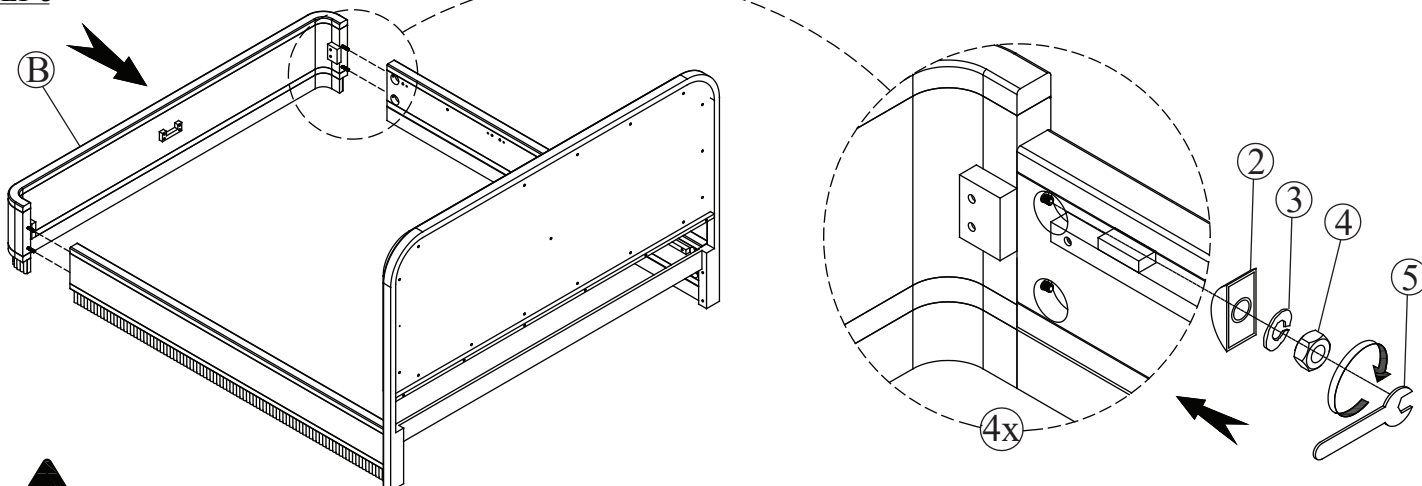

STOP

. IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4, 5, 6 & 7
AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
. IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4


STEP 4

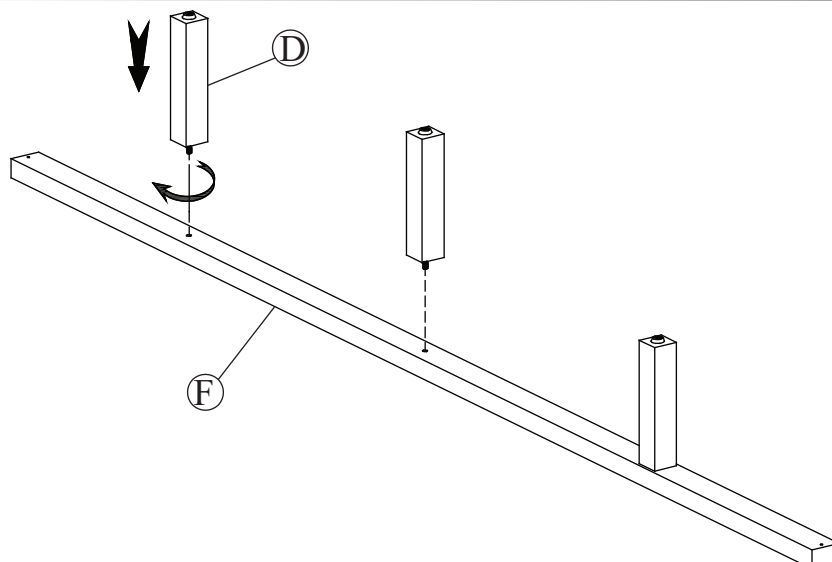


RAVELLE UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS

STEP 5

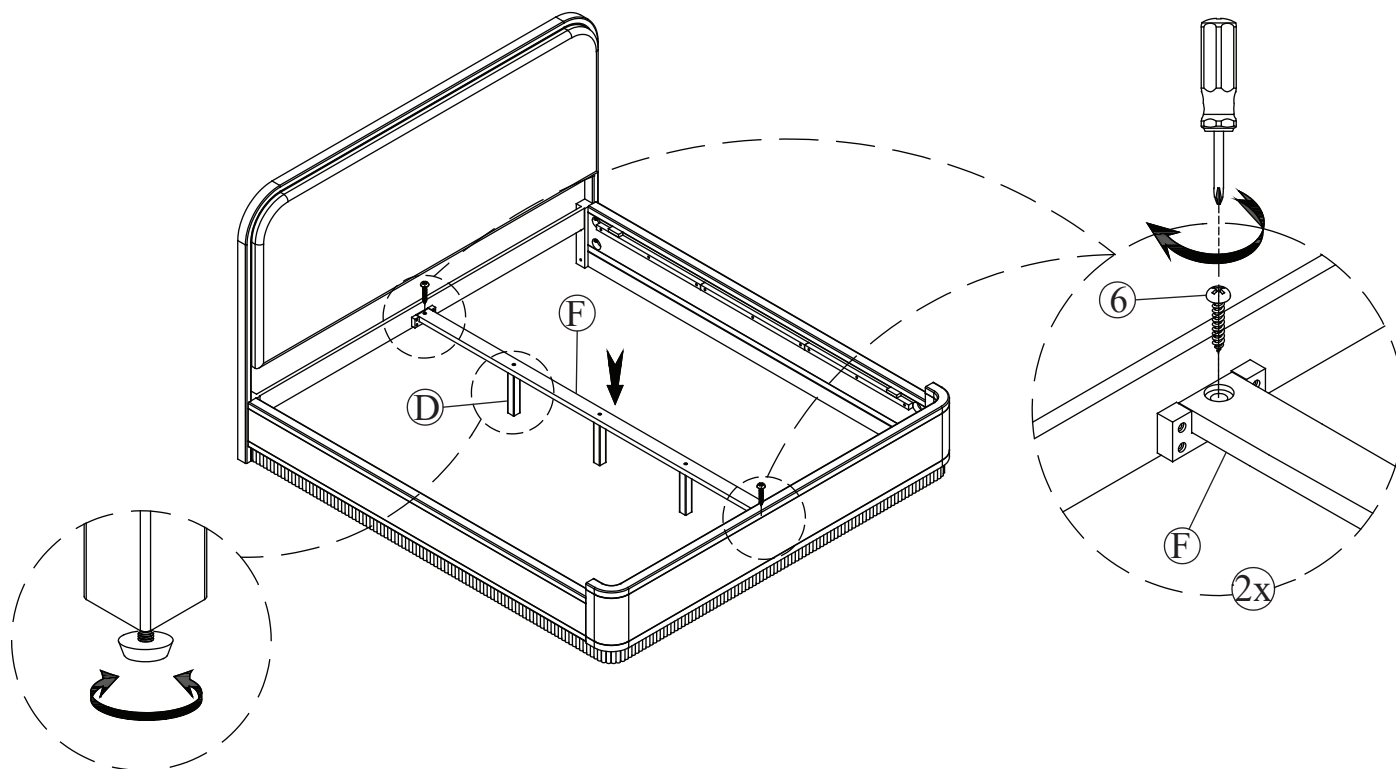


STEP 6

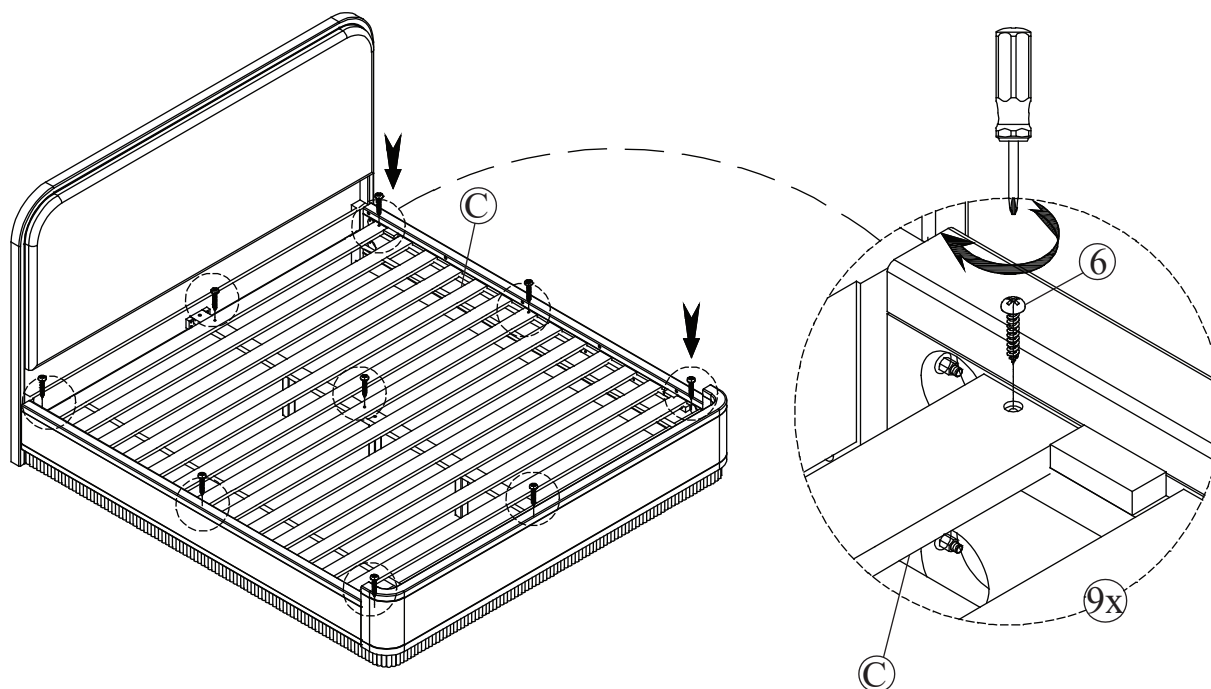

RAVELLE UPHOLSTERED KING BED ASSEMBLY INSTRUCTIONS



STEP 7

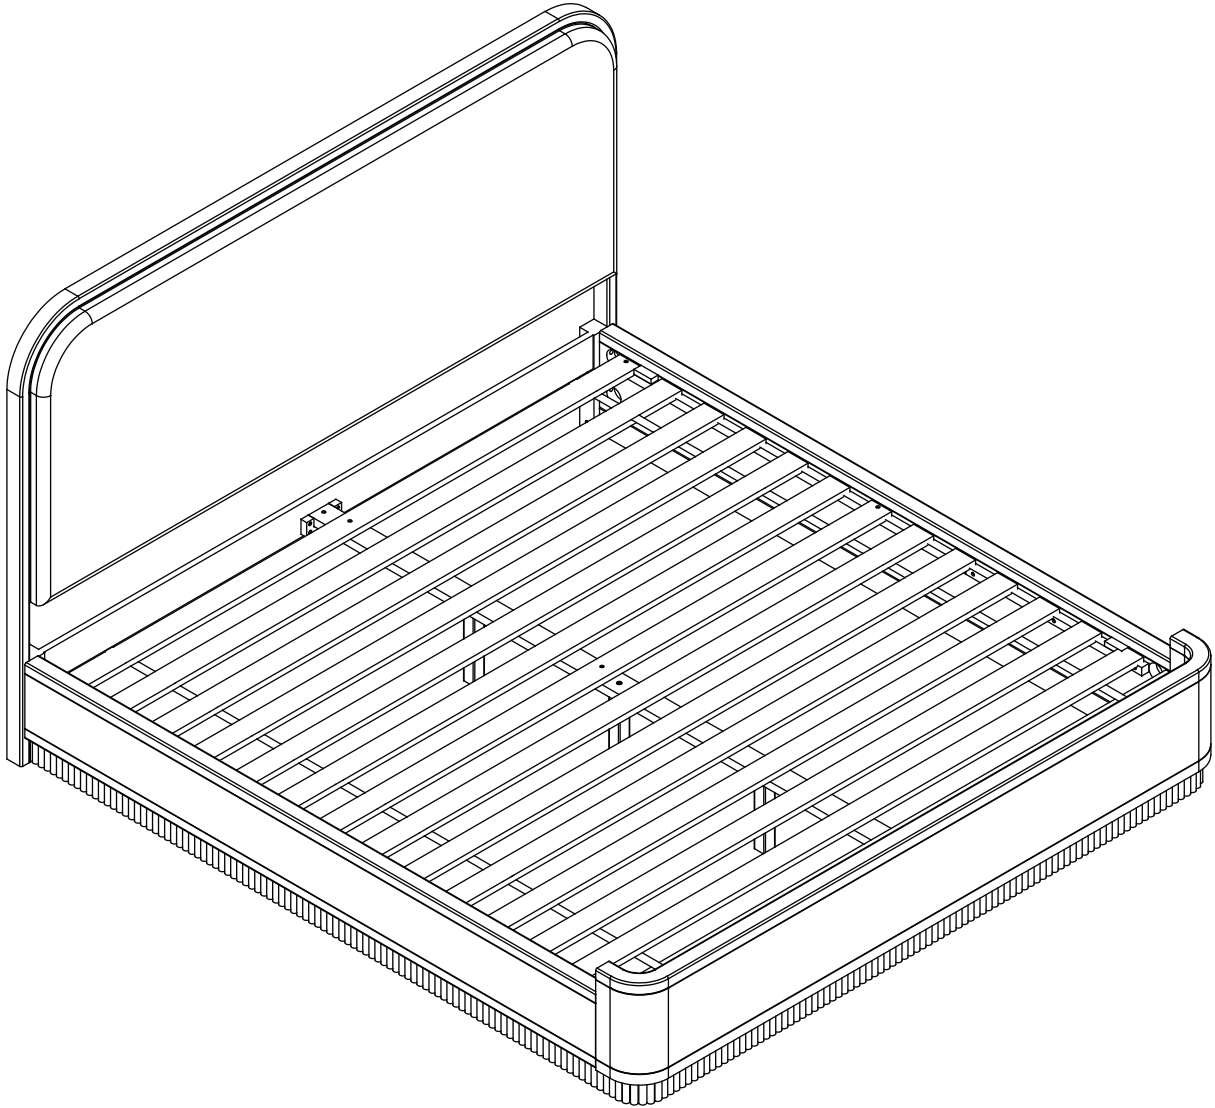

ASSEMBLY COMPLETE


PAGE 4 OF 5

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each leg support.

Turn the leveler counter-clockwise to extend and clockwise to retract it.

Adjust each leveler until each leg support is applying equal, upward pressure on the slat.

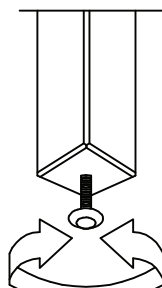

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

RAVELLE UPHOLSTERED KING BED ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL : 1 SET


D. SUPPORT LEGS : 3 PCS

F. CENTER SLAT : 1PC

6. WOOD SCREW (4x30mm) : 11 PCS

STEP #1:

USE ALLEN KEY (7) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

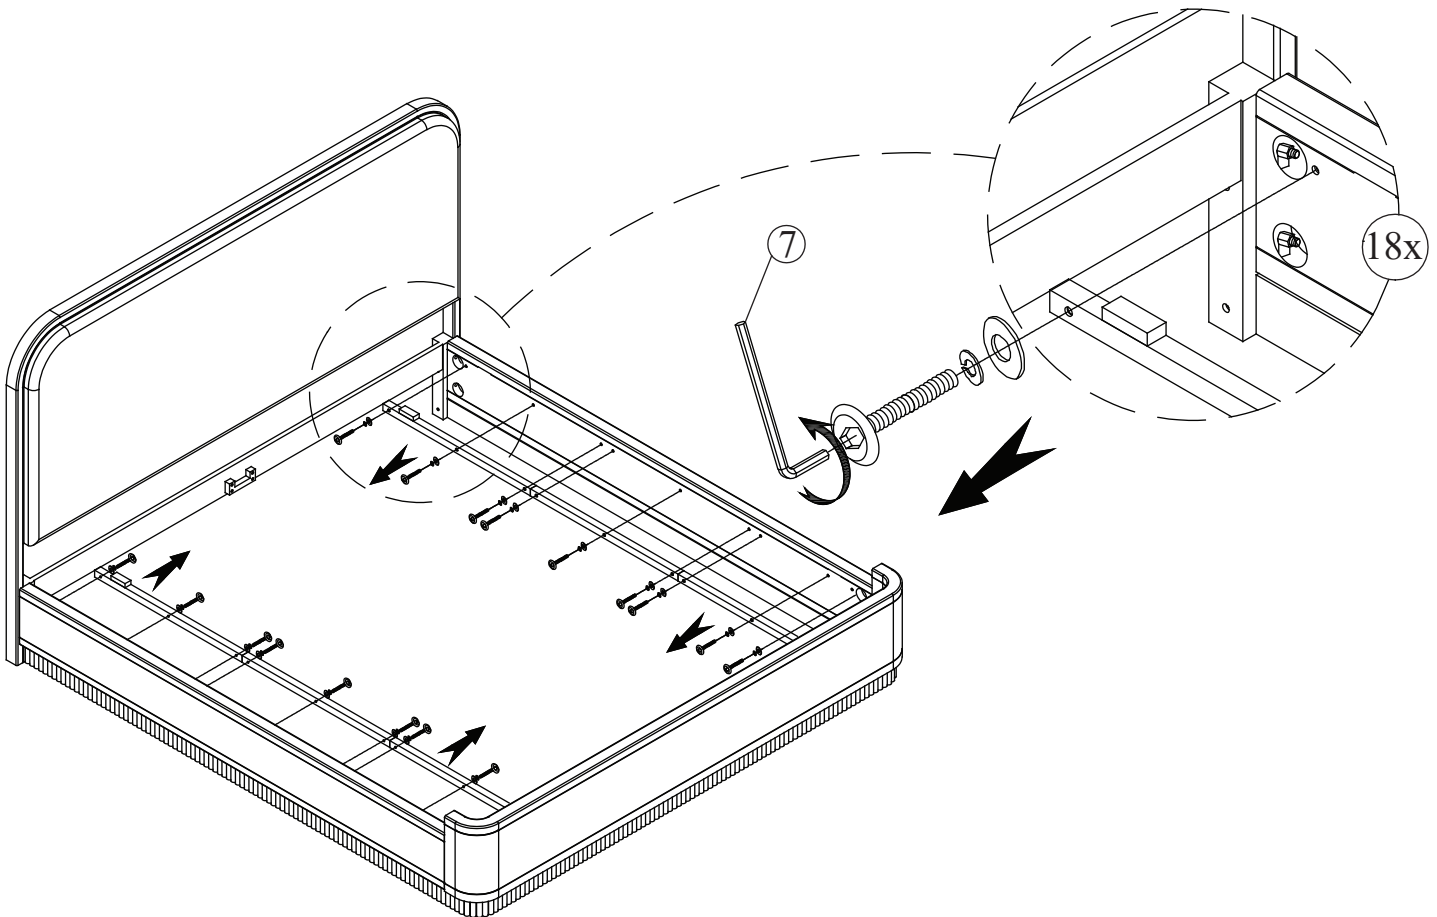




NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

RAVELLE UPHOLSTERED CAL KING BED


ASSEMBLY INSTRUCTIONS



PARTS PACKING CONFIGURATIONS

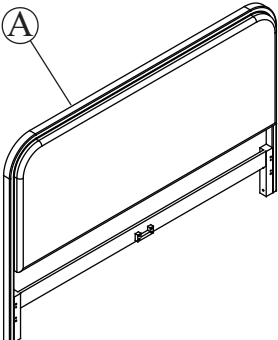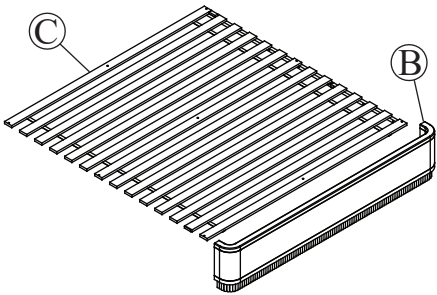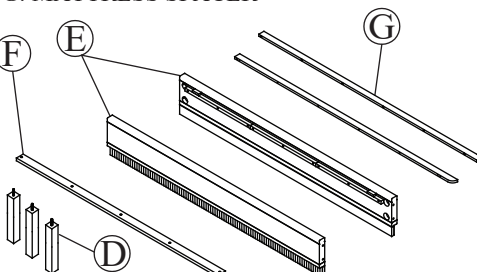BOX #1 A. HEADBOARD 1 PC 	BOX #2 B. FOOTBOARD 1 PC C. SLAT ROLL 1 SET 	BOX #3 D. SUPPORT LEG 3 PCS E. SIDE RAIL 2 PCS F. CENTER SLAT 1 PC G. MATTRESS SPACER 2 PCS 
--	---	--

FULLY ASSEMBLED

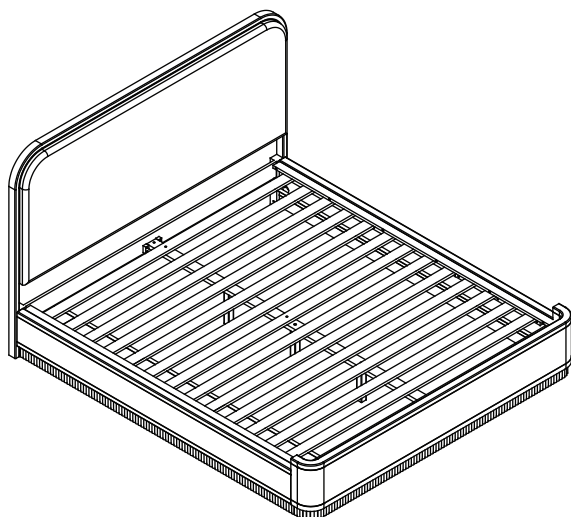


HARDWARE KIT PACKED IN BOX #2


No.	Description	Image	Quantity
1	THREADED BOLT (M8x70mm)		8 PCS
2	HALF MOON WASHER (M8)		8 PCS
3	SPRING WASHER (M8)		8 PCS
4	HEX NUT (M8)		8 PCS
5	WRENCH (13mm)		1 PC
6	WOOD SCREW (4x30mm)		11 PCS
7	ALLEN KEY		1 PC

HARDWARE KIT PACKED IN BOX #3

No.	Description	Image	Quantity
7	ALLEN KEY		1 PC
8	ALLEN BOLT (M6x60mm)		12 PCS
9	SPRING WASHER (M6)		12 PCS
10	FLAT WASHER (M6)		12 PCS




STEP 1

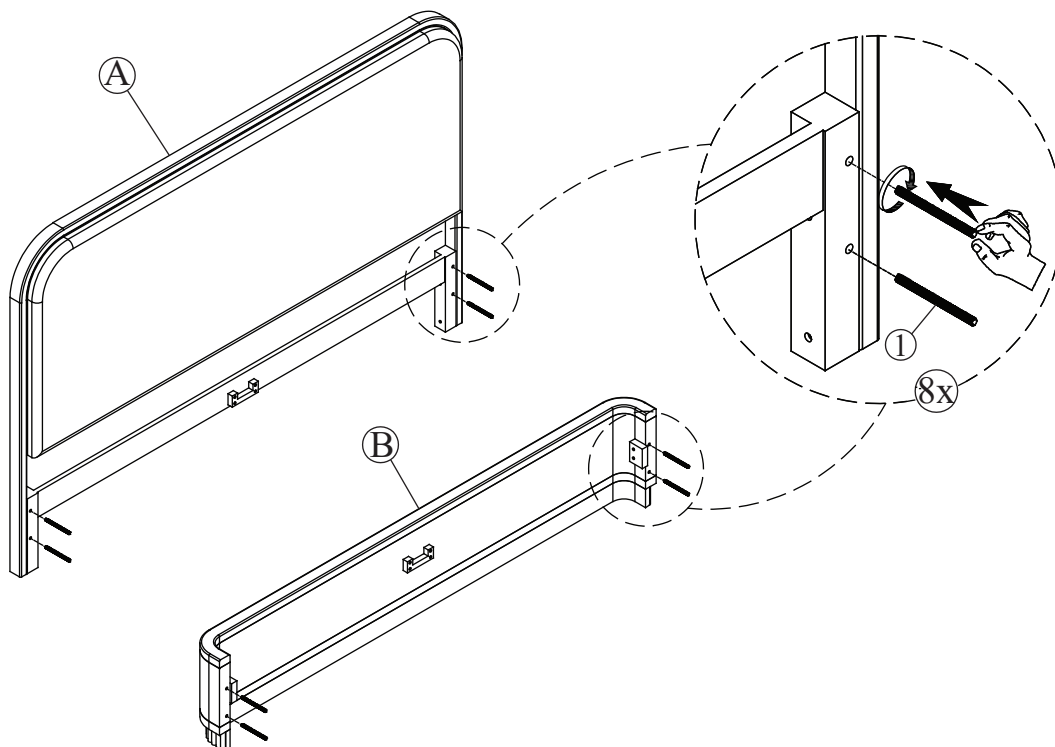


RAVELLE UPHOLSTERED CAL KING BED

ASSEMBLY INSTRUCTIONS

STEP 2

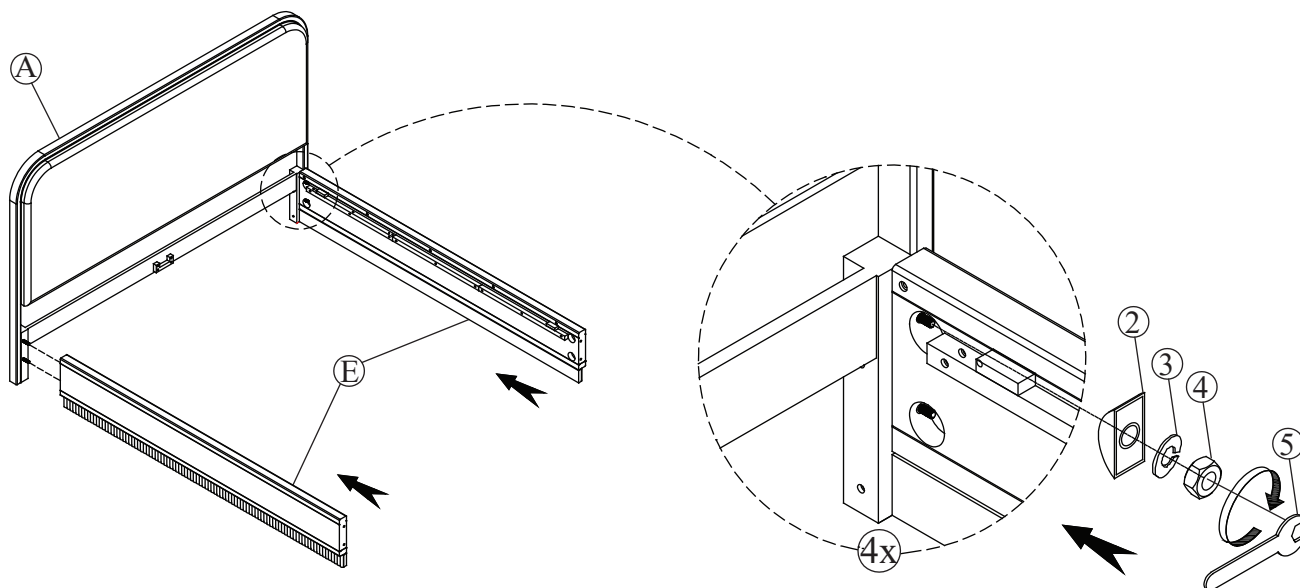


STEP 3

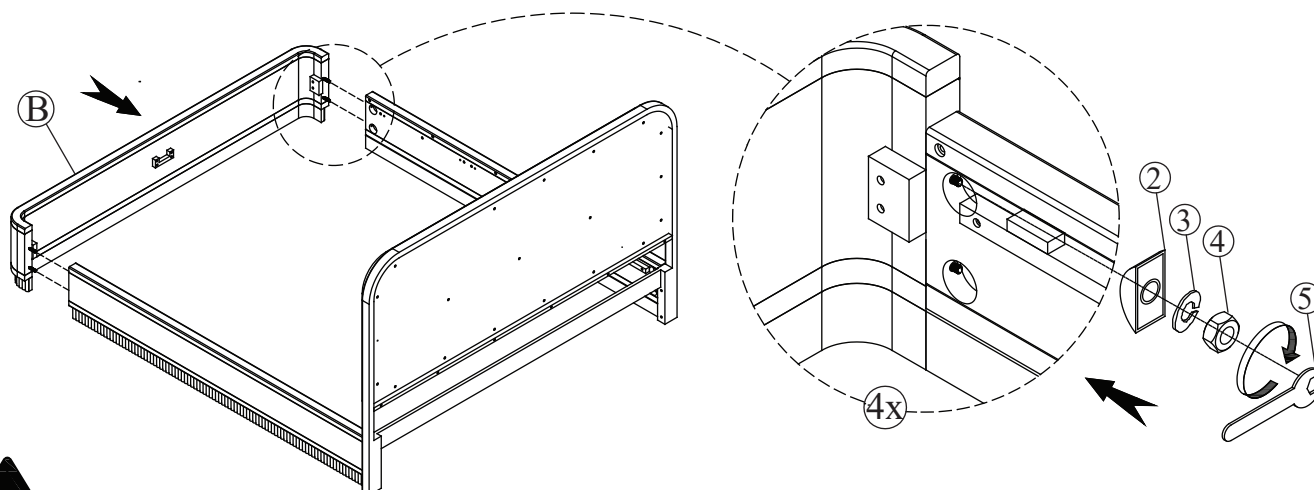

STOP

- . IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4, 5, 6, 7 & 8 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- . IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4


STEP 4

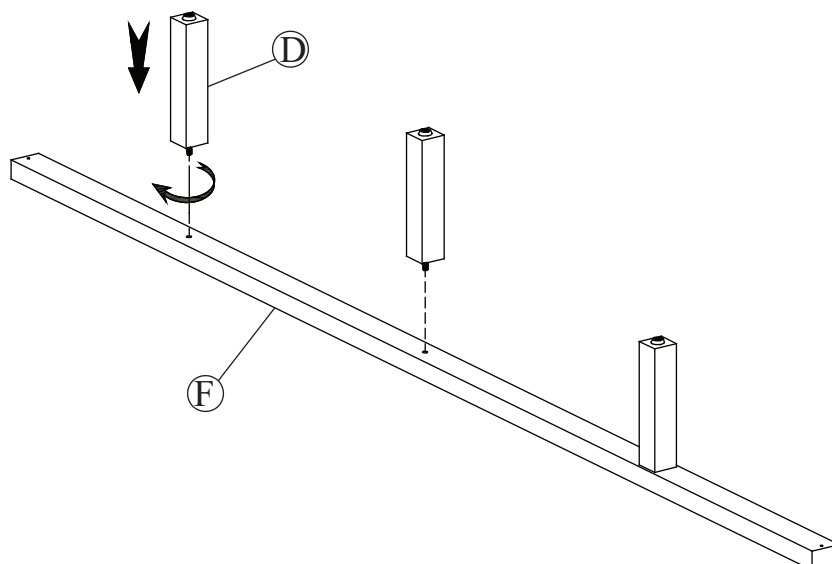


RAVELLE UPHOLSTERED CAL KING BED

ASSEMBLY INSTRUCTIONS

STEP 5

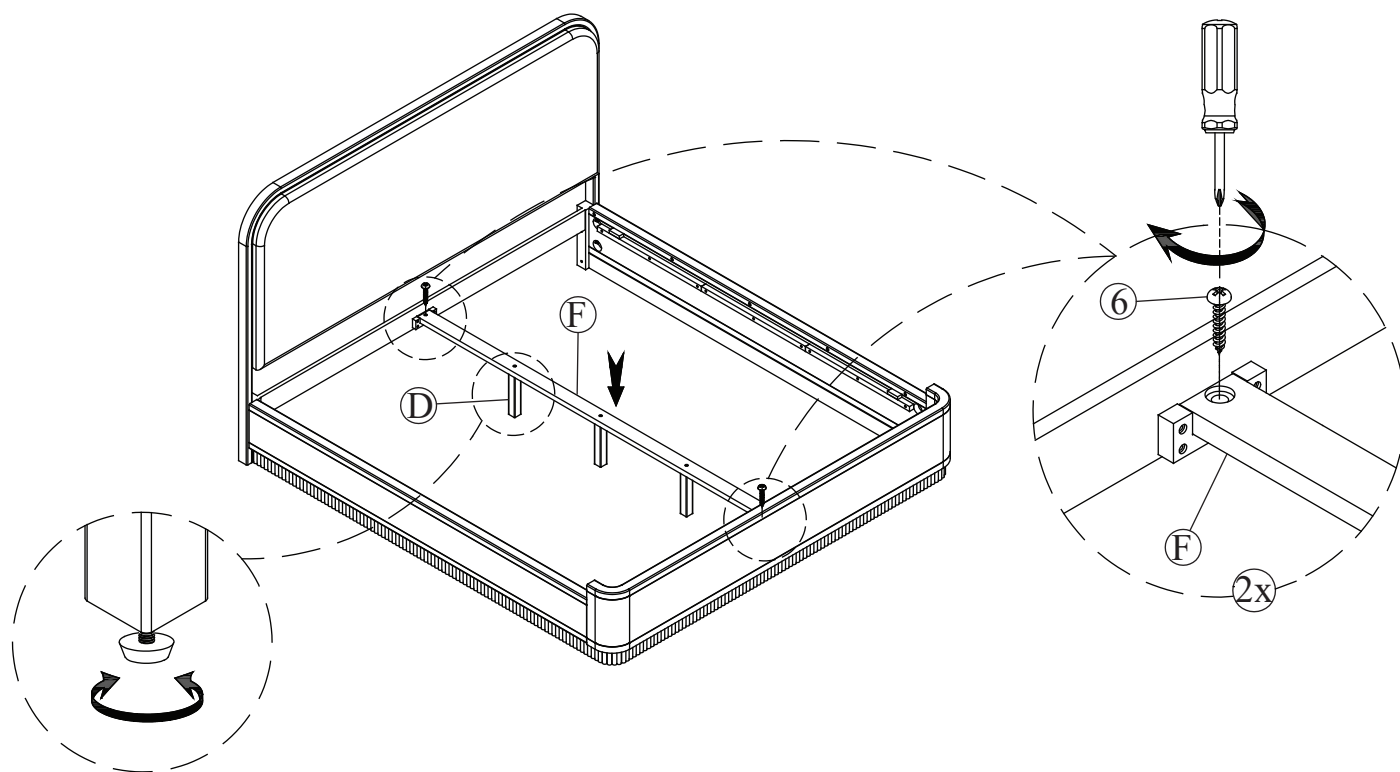

STEP 6

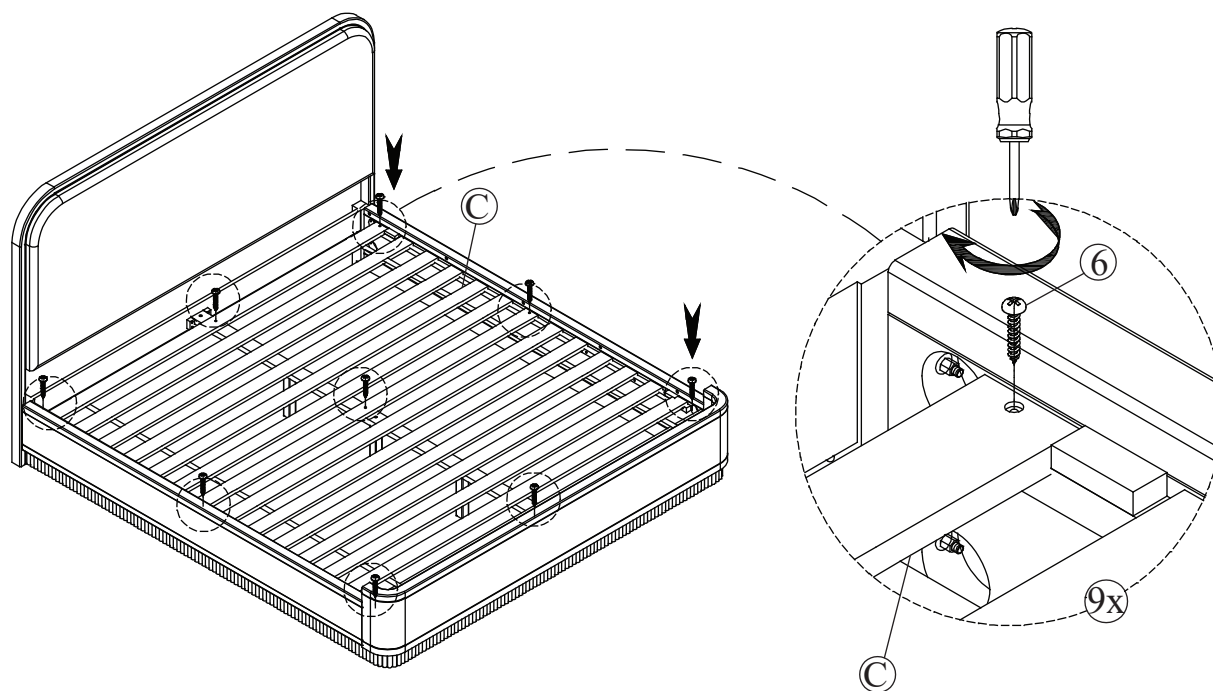


RAVELLE UPHOLSTERED CAL KING BED


ASSEMBLY INSTRUCTIONS



STEP 7

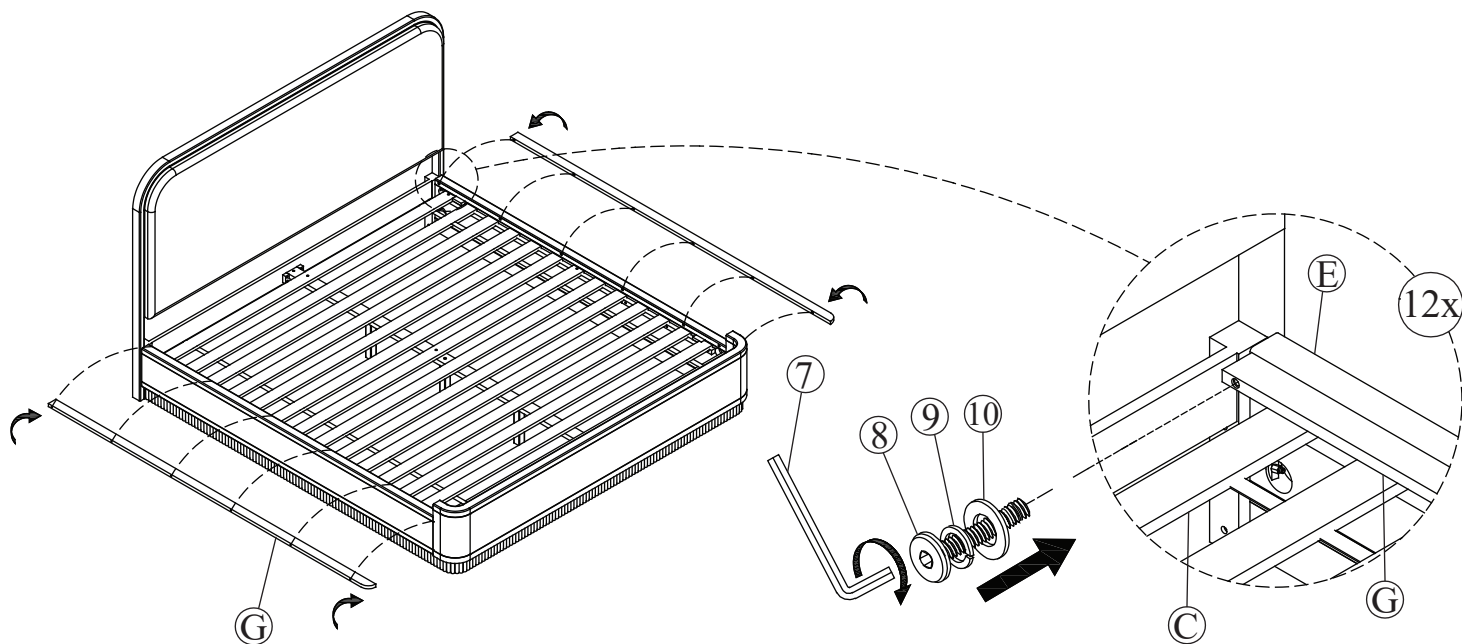

STEP 8

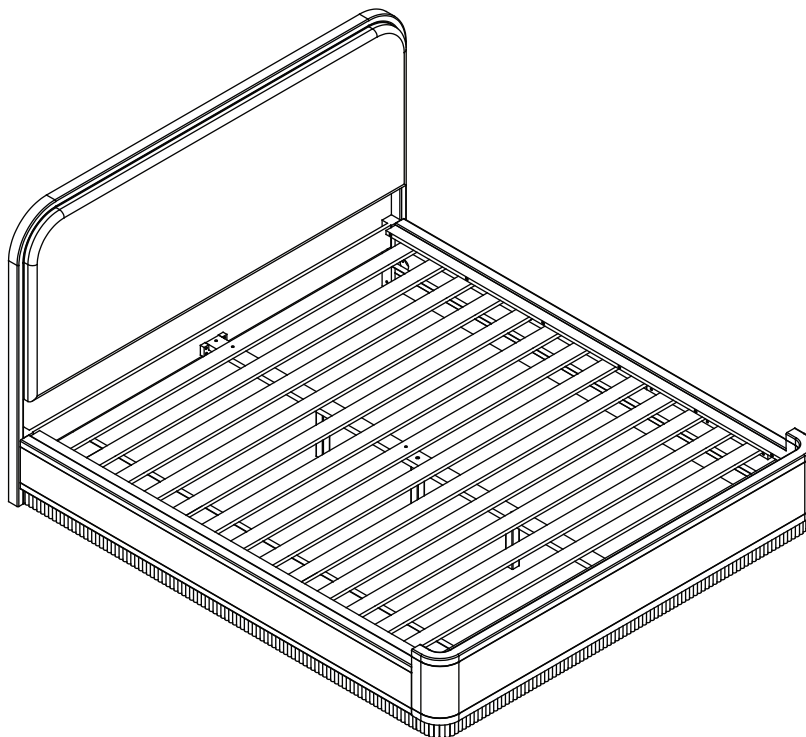

ASSEMBLY COMPLETE


PAGE 4 OF 5

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each leg support.

Turn the leveler counter-clockwise to extend and clockwise to retract it.

Adjust each leveler until each leg support is applying equal, upward pressure on the slat.

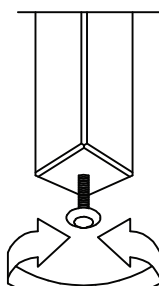

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

RAVELLE UPHOLSTERED CAL KING BED ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	: 1 SET	6. WOOD SCREW (4x30mm)	: 11 PCS
D. SUPPORT LEGS	: 3 PCS	7. ALLEN KEY	: 1 PC
F. CENTER SLAT	: 1 PC	8. ALLEN BOLT (M6x60mm)	: 12 PCS
G. MATTRESS SPACER	: 2 PCS	9. SPRING WASHER (M6)	: 12 PCS
		10. FLAT WASHER (M6)	: 12 PCS

STEP #1:

USE ALLEN KEY (7) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

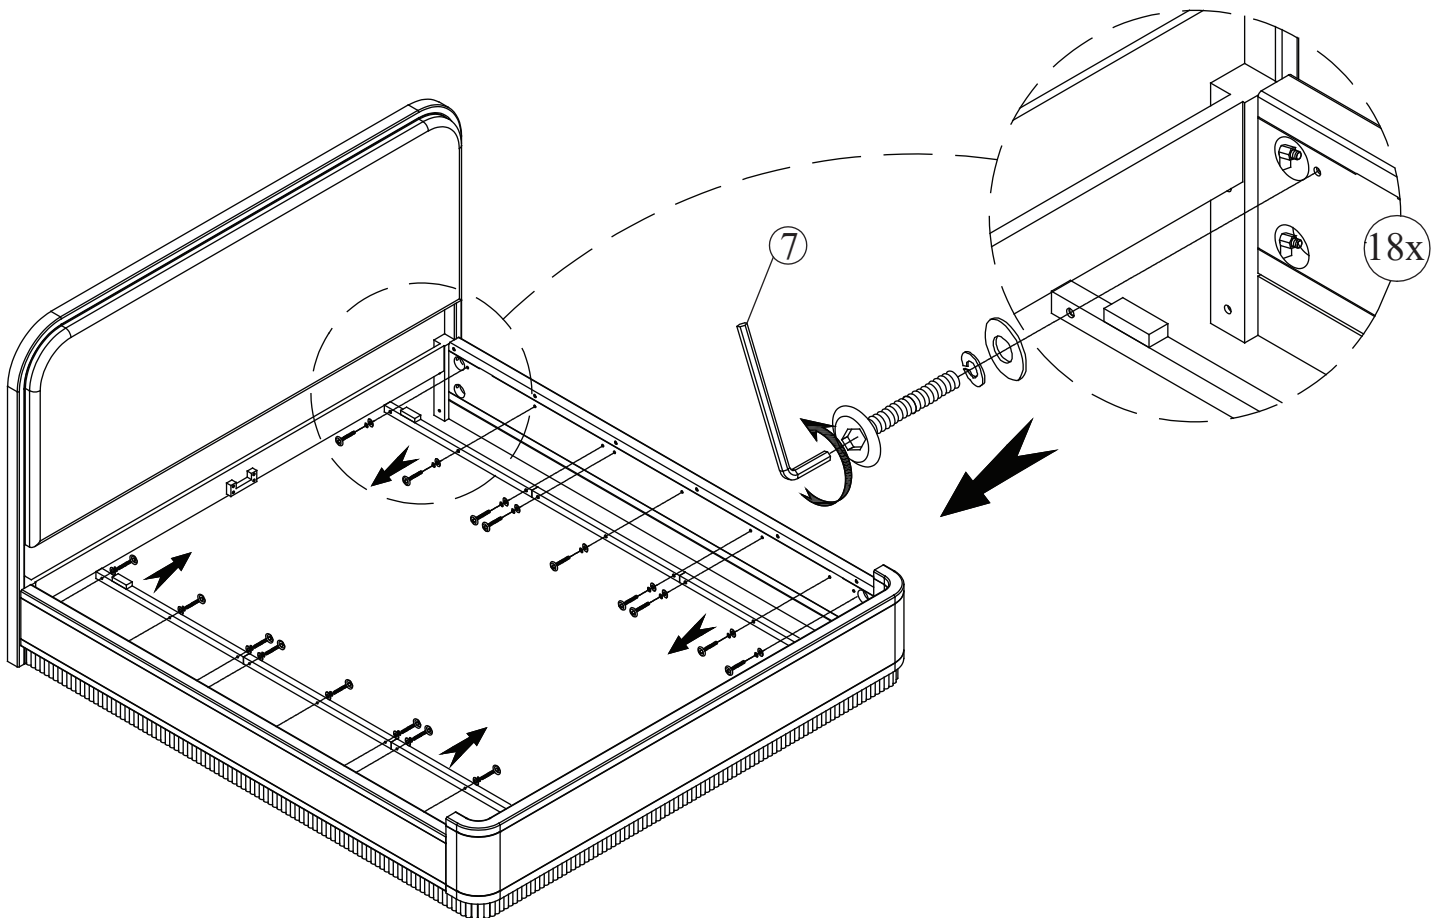

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION