



Manufactured by: Backyard
Discovery
3305 Airport Drive,
Pittsburg, KS 66762
800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone:
0800-118-2476 J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 08005678990

LANCASTER GALLEY OUTDOOR KITCHEN

MODEL # : 2404137



Please visit www.backyarddiscovery.com

For the most up to date assembly manual, to register your product, or to order
replacement parts *Para obtener instrucciones en español, visite*
www.backyarddiscovery.com



EASY STEP-BY-STEP
3D INTERACTIVE INSTRUCTIONS
DOWNLOAD THE FREE APP






OWNER'S MANUAL - BASIC SETUP DIMENSIONS & ASSEMBLY NOTES

It is critically important that you start with square and level footings or concrete pad to attach your structure


- Pay close attention to the items needed for each step. Make sure you are using the correct hardware for each step. Using incorrect hardware may result in improper assembly
- Remember to double check for underground utilities and overhead electrical lines

Post mounts are provided with your structure which allows you to permanently install your structure to a pre-existing or new wood or concrete surface. See Anchor Instructions for further details and recommendations.

- The hardware to attach the post mounts to the structure is included.
- The hardware to mount the structure permanently to a concrete surface is included.
- The hardware to mount the structure permanently to a wood deck is NOT included and will need to be purchased separately. You must ensure there is ample structural support under the deck before permanently attaching.

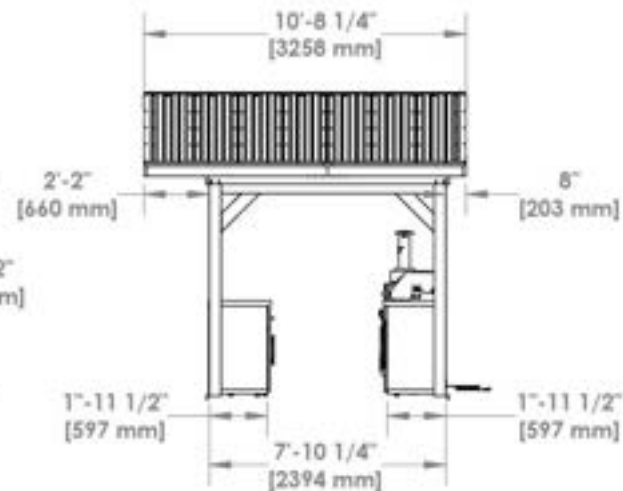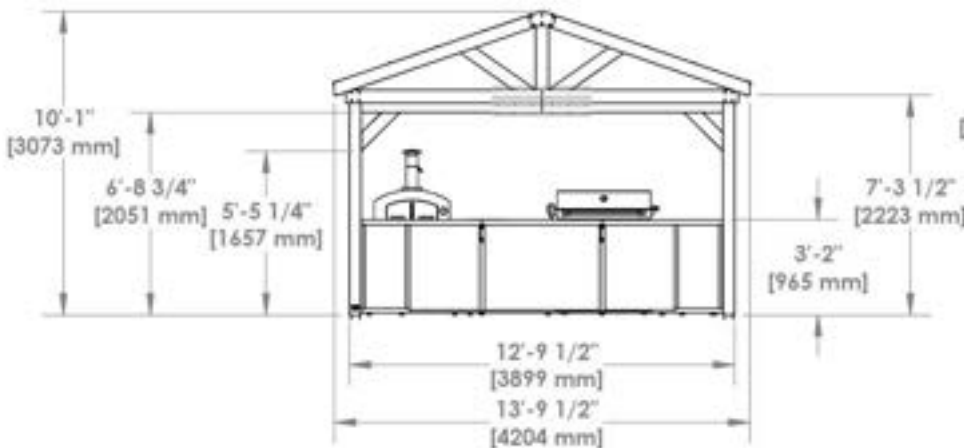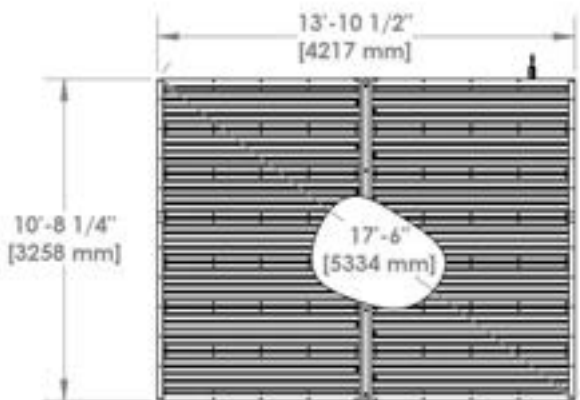


OWNER'S MANUAL - ANCHORING LAYOUT

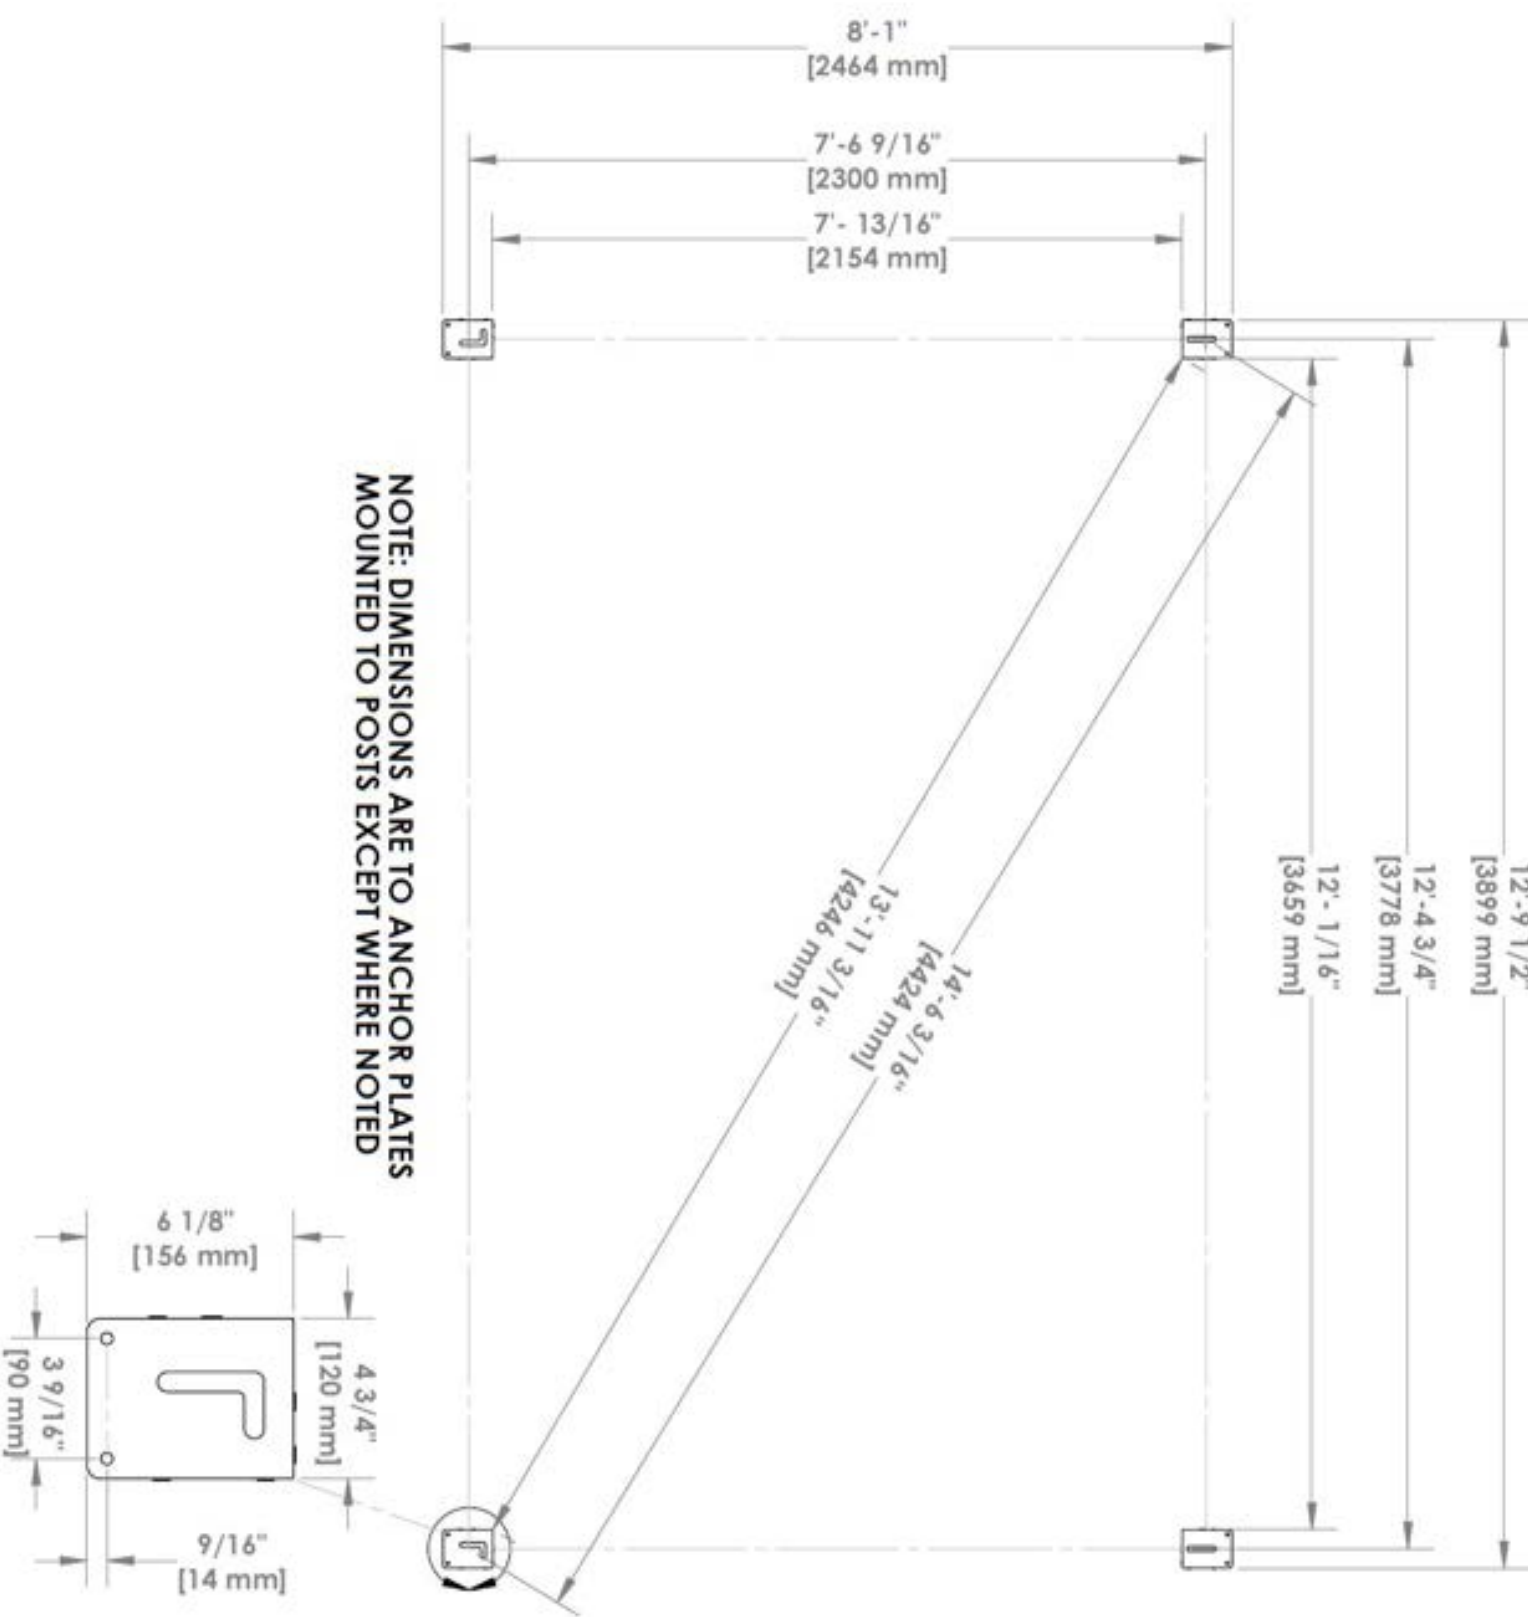


OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)

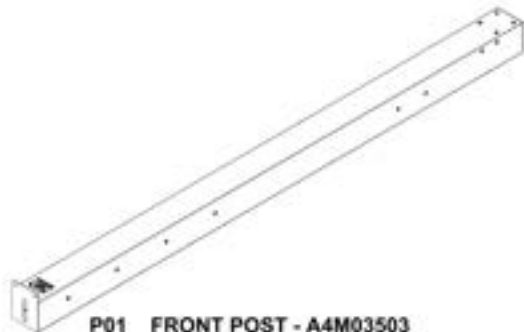


P01 FRONT POST - A4M03503
(x1) 89 9/16"x6 1/8"x4 3/4" (120x155x2275)

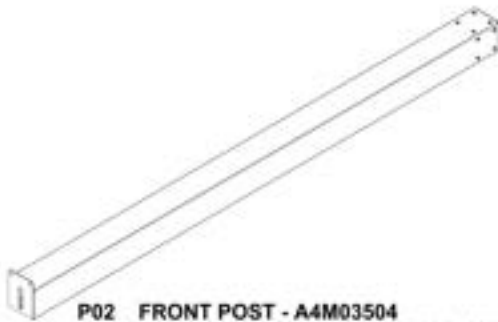


P02 FRONT POST - A4M03504
(x1) 89 9/16"x6 1/8"x4 3/4" (120x155x2275)

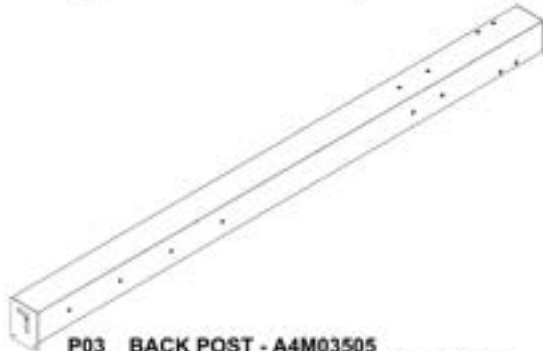


P03 BACK POST - A4M03505
(x1) 89 9/16"x6 1/8"x4 3/4" (120x155x2275)

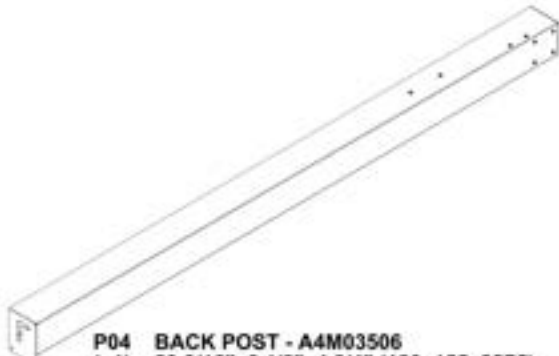

P04 BACK POST - A4M03506
(x1) 89 9/16"x6 1/8"x4 3/4" (120x155x2275)



B01 SIDE BEAM ASSEMBLY - A4M03507
(x2) 94 5/16"x5 1/4"x1 7/16" (36x134x2396)



B02 SIDE BEAM ASSEMBLY - A4M03508
(x2) 84 13/16"x5 1/4"x1 7/16" (36x134x2154)



B03 FRONT BEAM ASSEMBLY - A4M03509
(x2) 78 3/16"x5 1/4"x1 7/16" (36x134x1986)



B04 FRONT BEAM ASSEMBLY - A4M03510
(x2) 78 3/16"x5 1/4"x1 7/16" (36x134x1986)



B05 FRONT BEAM ASSEMBLY - A4M03511
(x2) 72"x5 1/4"x1 7/16" (36x134x1829)



B06 FRONT BEAM ASSEMBLY - A4M03512
(x2) 72"x5 1/4"x1 7/16" (36x134x1829)



B07 GABLE ARM ASSEMBLY - A4M03513
(x2) 29 3/16"x5 1/4"x1 7/16" (36x134x741)



B08 GABLE ARM ASSEMBLY - A4M03514
(x2) 40 1/16"x5 1/4"x1 7/16" (36x134x1017)



B09 GABLE ARM ASSEMBLY - A4M03515
(x2) 40 1/16"x5 1/4"x1 7/16" (36x134x1017)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)



B10 RIDGE BEAM ASSEMBLY - A4M03516
(x1) 67 1/16"x5 1/4"x1 7/16" (36x134x1704)



B11 RIDGE BEAM ASSEMBLY - A4M03517
(x1) 61 3/16"x5 1/4"x1 7/16" (36x134x1554)



B12 GABLE BEAM ASSEMBLY - A4M03518
(x2) 88 13/16"x5 1/4"x1 7/16" (36x134x2255)



B13 GABLE BEAM ASSEMBLY - A4M03519
(x2) 88 13/16"x5 1/4"x1 7/16" (36x134x2255)




B14 DRIP BEAM ASSEMBLY - A4M03520
(x2) 53 11/16"x4 13/16"x1 7/16" (36x122x1364)



B15 DRIP BEAM ASSEMBLY - A4M03521
(x2) 71 3/4"x4 13/16"x1 7/16" (36x122x1822)



R01 RAFTER ASSEMBLY - A4M03522
(x2) 86 3/8"x4 5/16"x3 1/8" (80x110x2194.6)



R02 RAFTER ASSEMBLY - A4M03523
(x2) 86 3/8"x4 5/16"x3 1/8" (80x110x2194.6)



R03 RAFTER ASSEMBLY - A4M03524
(x6) 86 3/8"x4 5/16"x3 1/8" (80x110x2194.6)



C01 CORBEL ASSEMBLY - A4M03525
(x4) 21 13/16"x5 1/4"x2 3/4" (70x134x553.5)




C02 CORBEL ASSEMBLY - A4M03526
(x4) 21 13/16"x5 1/4"x2 3/4" (70x134x553.5)



C03 CORBEL ASSEMBLY - A4M03527
(x2) 23 3/8"x12"x1 7/16" (36x304x593)



E01 PURLIN ASSEMBLY - A4M03800
(x10) 71 11/16"x1 15/16"x1 9/16" (40x50x1820.60)



E02 PURLIN ASSEMBLY - A4M03801
(x10) 53 5/8"x1 15/16"x1 9/16" (40x50x1362.40)



J1 SPLICE BRACKET - A4M02230
(x4) 1 5/16"x5 3/16"x39 3/8" (33.2x131.2x1000)



J2 SPLICE BRACKET - A4M01270
(x1) 1 1/4"x5 1/8"x15 3/4" (33x131x400)



J6 SPLICE BRACKET - A4M03806
(x2) 19 11/16"x4 11/16"x32.5 (32.5x118.5x500)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)



J3 GABLE BRACKET - A4M03805
(x2) 11 1/8"x6 7/16"x1/16" (2x163x282)



J4 BEAM BRACKET - A4M02990
(x8) 1"x1 5/16"x5 1/16" (25x33.2x128)



J5 RAFTER BRACKET - A4M03803
(x6) 3 5/8"x2 11/16"x2 1/16" (52x68x91.5)



J7 RAFTER BRACKET - A4M03802
(x4) 3 5/8"x2 3/16"x2" (50x55x92)



J8 GABLE BRACKET - A4M03804
(x4) 4 13/16"x1 9/16"x1 9/16" (40x40x123)



J9 BEAM BRACKET - A4M03807
(x4) 1"x1 5/16"x4 9/16" (25x33.20x116)



J10 SUPPORT RING - A4M03808
(x5) 13/16"x7/16" (11x20x)



A4M01352 HOLE COVER
(x70)



A6P00530 2-WAY SQUARE PLUG
(x10)



A4M03528 STEEL SHEETING
(x14)



A4M03529 DRIP TRIM
(x2)




A4M03530 DRIP TRIM
(x2)



A4M03531 DRIP TRIM SPLICE
(x2)



A4M03532 EDGE TRIM
(x4)

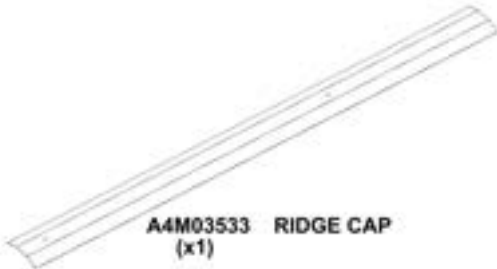

A4M03533 RIDGE CAP
(x1)



A4M03534 RIDGE CAP
(x1)



A4M03535 RIDGE CAP SPLICE
(x1)

OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)



D1 PIZZA OVEN CABINET DOOR ASSEMBLY L - A4M03546
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)



D2 PIZZA OVEN CABINET DOOR ASSEMBLY R - A4M03555
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)

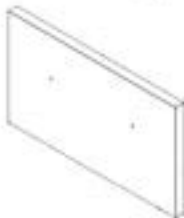

D3 SINK CABINET DRAWER PANEL ASSEMBLY - A4M03569
(x1) 17 3/4"x10 1/4"x15/16" (24x260x451)



D4 SINK CABINET DRAWER BODY ASSEMBLY - A4M03571
(x1) 22 1/4"x16 1/16"x6 7/16" (164.2x408.4x565.4)



D5 SINK CABINET TRIM PANEL - A4M03576
(x1) 17 13/16"x10 1/4"x1" (26x260x452)



D6 SINK CABINET DOOR ASSEMBLY L - A4M03577
(x1) 22 1/4"x17 13/16"x15/16" (24x452x565)



D7 GRILL CABINET DOOR ASSEMBLY L - A4M03587
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)



D8 GRILL CABINET DOOR ASSEMBLY R - A4M03590
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)



D9 TRASH CAN PANEL ASSEMBLY - A4M03608
(x1) 22 1/4"x17 3/4"x15/16" (24.00x451.00x565.00)



D10 DOOR PANEL ASSEMBLY - A4M03617
(x1) 24 3/4"x17 13/16"x15/16" (24x452x628)



D11 DRAWER PANEL ASSEMBLY - A4M03619
(x2) 17 13/16"x8 1/16"x15/16" (24x205x452)



D12 DRAWER BODY ASSEMBLY - A4M03621
(x2) 22 1/4"x15 13/16"x4 15/16" (126x402x565)

OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)



D13 DOOR PANEL ASSEMBLY - A4M03643
(x1) 24 3/4"x17 13/16"x15/16" (24x452x628)



G10 GRILL CABINET BACK PANEL ASSEMBLY - A4M03055
(x1) 1 3/16"x22 7/8"x38 3/16" (30x581x970)

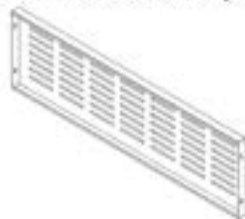

G11 GRILL VENTILATION PANEL - A4M03056
(x1) 1 5/16"x11 3/16"x38 3/16" (33x284x970)



H2 STAINLESS STEEL HANDLE - A4M03024
(x12) 5/8"x1 9/16"x11 13/16" (16x40x300)



H3 TRASH CAN BRACKET ASSEMBLY - A4M03610
(x1) 18 1/16"x15 13/16"x (35x401.60x458)



H4 HORIZONTAL BEAM ASSEMBLY L - A4M03575
(x4) 16 1/4"x3 3/8"x1" (25x85x413)



H5 PIZZA OVEN CABINET HINGE CHANNEL ASSEMBLY - A4M03558
(x1) 26 5/8"x2 15/16"x11/16" (18x74.80x676)



H6 TUBE FRAME SUPPORT - A4M03627
(x2) 35 15/16"x15 9/16"x1 15/16" (50x394.5x912.5)



H7 HORIZONTAL CHANNEL ASSEMBLY - A4M03623
(x4) 16 5/16"x2 15/16"x1" (25x75x414)



L1 PIZZA OVEN CABINET SHELF - A4M03548
(x1) 23 1/4"x19 5/16"x1" (25x490.5x591)



L2 GRILL CABINET SHELF ASSEMBLY - A4M03589
(x1) 23 1/4"x18 3/8"x1" (25x467x591)




L3 SHELF ASSEMBLY M - A4M03645
(x1) 45 7/8"x15 7/16"x1" (25x392.2x1166)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)



L4 SHELF ASSEMBLY - A4M03644
(x2) 27 3/4"x15 7/16"x1" (25x392.2x705)

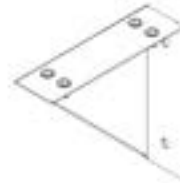

A1 TABLE BRACKET ASSEMBLY - A4M03634
(x2) 6 15/16"x6 15/16"x1 15/16" (50x176x176)



A2 MAGNET BRACKET - A4M03026
(x7) 1"x1 1/4"x3 1/8" (25x31x80)



A5 SHELF BRACKET - A4M03141
(x4) 5/8"x7/8"x2 1/16" (16x22x53)



A6 ANGLED BRACKET - A4M03053
(x3) 1 3/8"x1 15/16"x17 1/8" (35x50x435)



A9 HOSE BRACKET ASSEMBLY - A4M03060
(x2) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)



A13 GAS TANK HOLDER ASSEMBLY - A4M03047
(x2) 1 15/16"x12 7/8"x14 3/4" (49x327x374)



A11 TRIANGLE PANEL - A4M03086
(x2) 13/16"x13 3/4"x13 3/4" (20x350x350)



M1 PIZZA OVEN CABINET MARBLE - A4M03553
(x1) 24 13/16"x4 5/16"x1 15/16" (50x109x630)



M2 SINK CABINET MARBLE - A4M03568
(x1) 41 1/2"x24 15/16"x1 15/16" (49x633x1054)



M3 FRIDGE CABINET MARBLE - A4M03602
(x1) 28 1/8"x24 15/16"x1 15/16" (50x634x715)



M4 BAR TABLE MARBLE - A4M03616
(x2) 47 15/16"x24 15/16"x1 15/16" (50x634x1218)




M6 BAR TABLE MARBLE - A4M03633
(x1) 47 7/8"x24 7/8"x1 15/16" (49x632x1216)




M5 SINK COVER MARBLE - A4M03147
(x1) 11/16"x14 3/4"x16 5/16" (18x375x415)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)

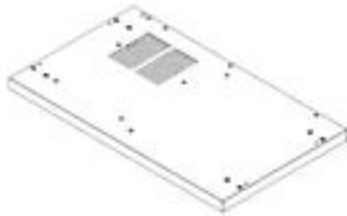

F1 PIZZA OVEN CABINET FLOOR PANEL ASSEMBLY - A4M03538
(x1) 40 3/16"x23 3/8"x2 5/8" (66x594x1020)

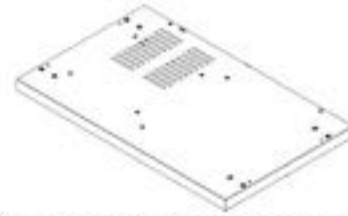


F2 GRILL CABINET FLOOR PANEL ASSEMBLY - A4M03048
(x1) 2 5/8"x23 3/8"x38 1/4" (66x594x972)



F3 SINK CABINET FLOOR PANEL ASSEMBLY - A4M03560
(x1) 37 3/16"x23 3/8"x2 5/8" (66x594x944)



F4 FRIDGE CABINET FLOOR PANEL ASSEMBLY - A4M03595
(x1) 28 1/8"x23 3/8"x2 5/8" (66x594x715)

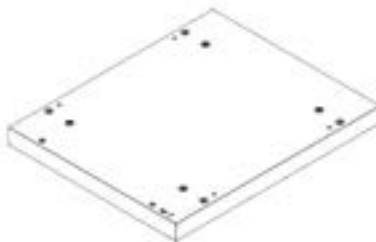

F5 FLOOR PANEL ASSEMBLY - A4M03611
(x2) 23 3/8"x19 1/8"x2 5/8" (66x486x594)



G1 PIZZA OVEN CABINET BACK PANEL ASSEMBLY - A4M03542
(x1) 38 3/4"x26 1/2"x1 3/16" (30x673.5x984)



O8 PIZZA OVEN VENTILATION PANEL - A4M03078
(x1) 1 3/16"x3 3/4"x31 7/16" (30x95x798)



G3 SINK CABINET BACK PANEL ASSEMBLY - A4M03564
(x1) 34 5/16"x33 3/8"x1 3/16" (30x847.2x872)



G4 FRIDGE CABINET BACK PANEL ASSEMBLY - A4M03599
(x1) 25 5/16"x33 3/8"x1 3/16" (30x847.2x643)



G5 BACK PANEL ASSEMBLY - A4M03624
(x2) 33 3/8"x16 5/16"x1 3/4" (45x414x847.2)



G6 BACK PANEL - A4M03631
(x2) 34"x27 3/4"x1" (25x705x864)



G7 BACK PANEL - A4M03629
(x1) 45 7/8"x34"x1" (25x864x1166)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)



S1 PIZZA OVEN CABINET SIDE PANEL ASSEMBLY - A4M03540
(x1) 26 9/16"x23 3/8"x1 3/8" (35x594x675)



S2 PIZZA OVEN CABINET SIDE PANEL ASSEMBLY M - A4M03545
(x1) 26 1/2"x23 3/8"x1 3/8" (35x593x673.5)



S3 SINK CABINET SIDE PANEL ASSEMBLY L - A4M03562
(x1) 33 3/8"x23 3/8"x1 3/8" (35.00x594.00x848.20)



S4 SINK CABINET SIDE PANEL ASSEMBLY R - A4M03563
(x1) 33 3/8"x23 3/8"x2 5/8" (67x594x848.20)



S5 SINK CABINET SIDE PANEL ASSEMBLY M - A4M03567
(x1) 33 3/8"x23 3/8"x2 3/16" (56.2x593x847)



S6 GRILL CABINET SIDE PANEL ASSEMBLY M - A4M03586
(x1) 23 3/8"x22 7/8"x1 3/8" (35x581x593)



S7 FRIDGE CABINET SIDE PANEL ASSEMBLY L - A4M03597
(x1) 33 7/16"x23 3/8"x2 1/16" (53x594x849.7)



S8 FRIDGE CABINET SIDE PANEL ASSEMBLY R - A4M03598
(x1) 33 3/8"x23 3/8"x1 15/16" (50x594x848.20)



S9 SIDE PANEL ASSEMBLY - A4M03638
(x1) 33 3/8"x23 3/8"x1 15/16" (50x594x848.2)



S10 SIDE PANEL ASSEMBLY - A4M03613
(x1) 33 3/8"x23 3/8"x1 15/16" (50x594x848.2)



S11 SIDE PANEL ASSEMBLY - A4M03614
(x1) 33 3/8"x23 3/8"x1 15/16" (49.2x594x848.2)



S12 SIDE PANEL ASSEMBLY - A4M03637
(x1) 33 3/8"x23 3/8"x1 15/16" (49.2x594x848.2)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)



T1 PIZZA OVEN CABINET TABLETOP ASSEMBLY - A4M03543
(x1) 40 3/16"x23 3/8"x1 1/4" (32x594x1020)



T3 PIZZA OVEN CABINET MARBLE PANEL ASSEMBLY R - A4M03551
(x1) 612x4 5/16"x6 3/4" (109x172.2x612)



T5 PIZZA OVEN CABINET MARBLE PANEL ASSEMBLY L - A4M03549
(x1) 24 1/8"x4 5/16"x6 3/4" (109x172.2x612)



T7 FRIDGE CABINET TABLETOP - A4M03641
(x1) 27 3/8"x24 1/8"x1 1/4" (32x612x696)



T9 TABLETOP PANEL ASSEMBLY - A4M03639
(x1) 47 3/16"x23 3/8"x1 1/4" (32x593x1199)



A4M02290 MAGNETIC PAPER TOWEL HOLDER
(x1)



A4M03151 GARDEN HOSE ADAPTER
(x1)



T2 GRILL TABLETOP ASSEMBLY - A4M03057
(x1) 1 1/4"x23 3/8"x38 3/16" (32x594x970)



T4 SINK CABINET TABLETOP FRAME - A4M03566
(x1) 37 3/16"x24 1/8"x1 1/4" (32x612x944)




T6 TABLETOP PANEL ASSEMBLY - A4M03615
(x1) 47 3/16"x23 3/8"x1 1/4" (32x593x1199)



T8 TABLETOP PANEL - A4M03625
(x1) 47 7/8"x23 3/8"x1 1/4" (32x593x1216)




A16 SINK ASSEMBLY - A4M03143
(x1) 15 1/8"x15 5/16"x16 7/8" (384x389x429)

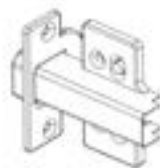

A4M03025 FULL OVERLAY HINGE
(x14)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)

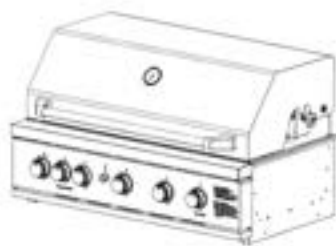

9240025 OUTDOOR KITCHEN GRILL KIT
(x1)



9240018 OUTDOOR KITCHEN PIZZA OVEN
(x1)




9240162 OUTDOOR KITCHEN FRIDGE - RIGHT OPEN
(x1)




9205413 ELECTRICAL ENCLOSURE
(x1)

OWNER'S MANUAL - PARTS IDENTIFICATION


HARDWARE COMPONENTS




H101185 | PHILLIPS FLAT HEAD
(x84) | 8-32x.5 SCREW



H101287 | PAN HEAD SCREW
(x6) | 8-32x1" SS




H101289 | PAN HEAD SCREW
(x64) | 8-32x1 1/2" SS




H101292 | TORX PAN HEAD
(x30) | 1/4-20x1 3/32"




H101293 | TORX PAN HEAD
(x5) | 1/4-20x1 3/8"

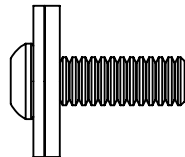


H101202 | TORX PAN HEAD
(x498) | 1/4-20x3/4 ASSY

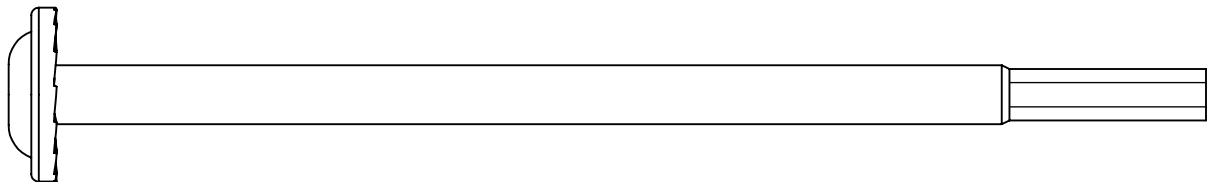


H101230 | BOLT WH 5/16x6 S.S.
(x2) |




H101294 | HEX DRIVER
(x1)




H100147 | TORX BIT
(x1) | T-30




H101100 | MAGNETIC DRIVER
(x1)




H101132 | TORX SOCKET SCREW SHORT
(x50) | 1/4-20




H101103 | TORX SOCKET SCREW
(x125) |




H101117 | SCREW WOODGRIP
(x140) | 10-16x3/4




H101116 | SCREW SELF TAPPING
(x40) | 1/4x1 BLK




H100120 | CONCRETE ANCHOR
(x8) |




H101307 | SHOULD BOLT
(x22) | 8-32x30mm SS

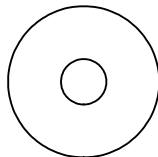


H101054 | SEALANT WASHER
(x34) |

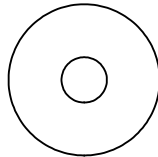


H101053 | STEEL WASHER
(x34) | 6x20

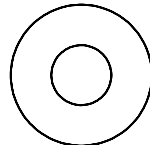


H100630 | WASHER FLAT
(x8) | 8x19 BLK

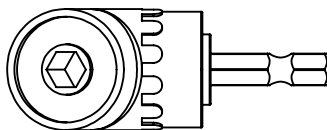

H101114 | RIGHT ANGLE DRILL ADAPTER
(x1) |



H101106 | SOCKET DRIVER
(x1) |

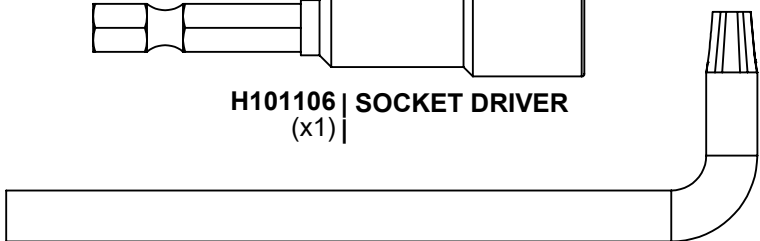

H100114 | TORX WRENCH
(x1) | T-30


PRE-ASSEMBLY STEP 1 - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the metal and hardware.

METAL PARTS:


- Organize metal parts by the three-digit, alpha-numeric part label on each bag (ex. A01).
- If there are multiple parts with the same part label, stack those pieces together.
- Part labels can be found on the bags of the parts.
- Keep parts in bags until required step.
- Allow yourself plenty of room - the metal pieces can take up a significant amount of space.

NOTE: CARTONS ARE NOT ORGANIZED BY PART OR STEP NUMBER.

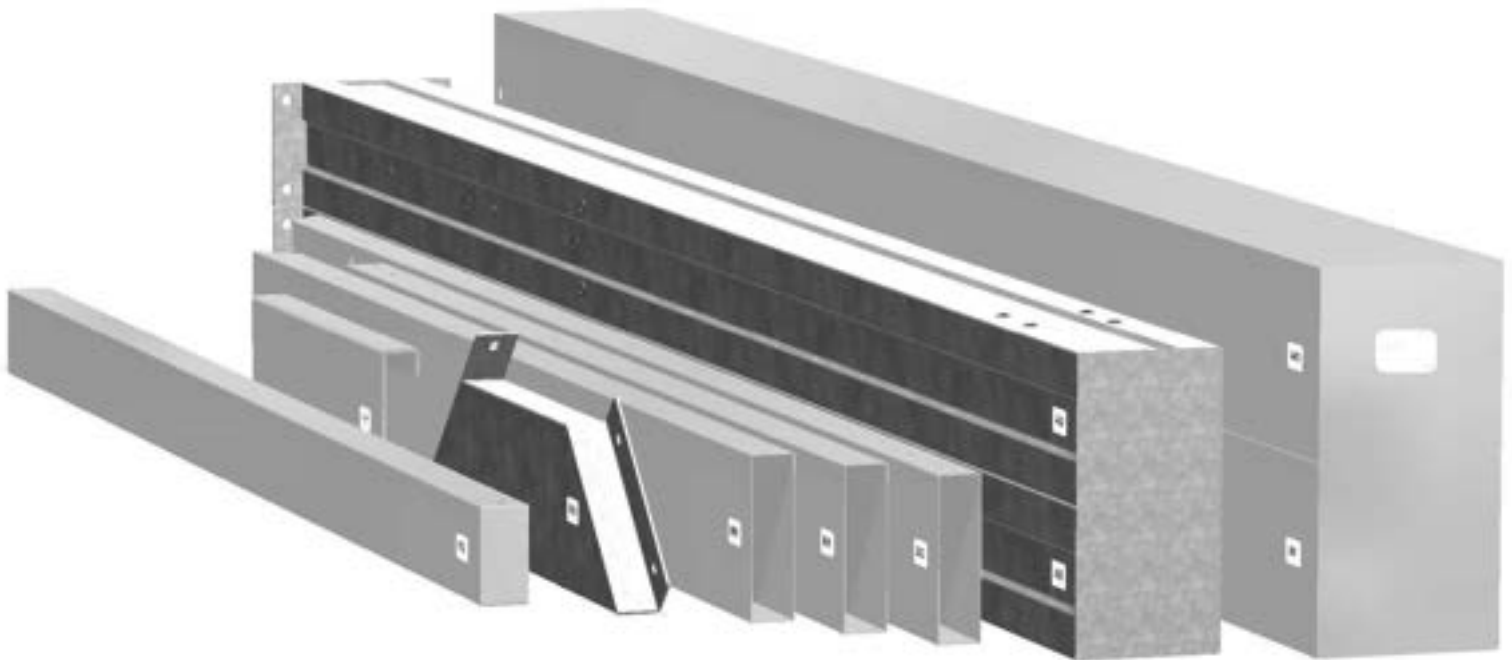


HARDWARE PARTS:

- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (e.g. bolts, nuts, etc.).
- During assembly you only need to reference the last four digits of the number.

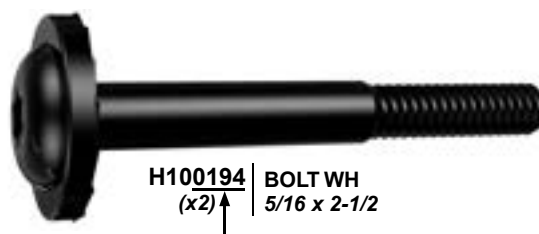


PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED

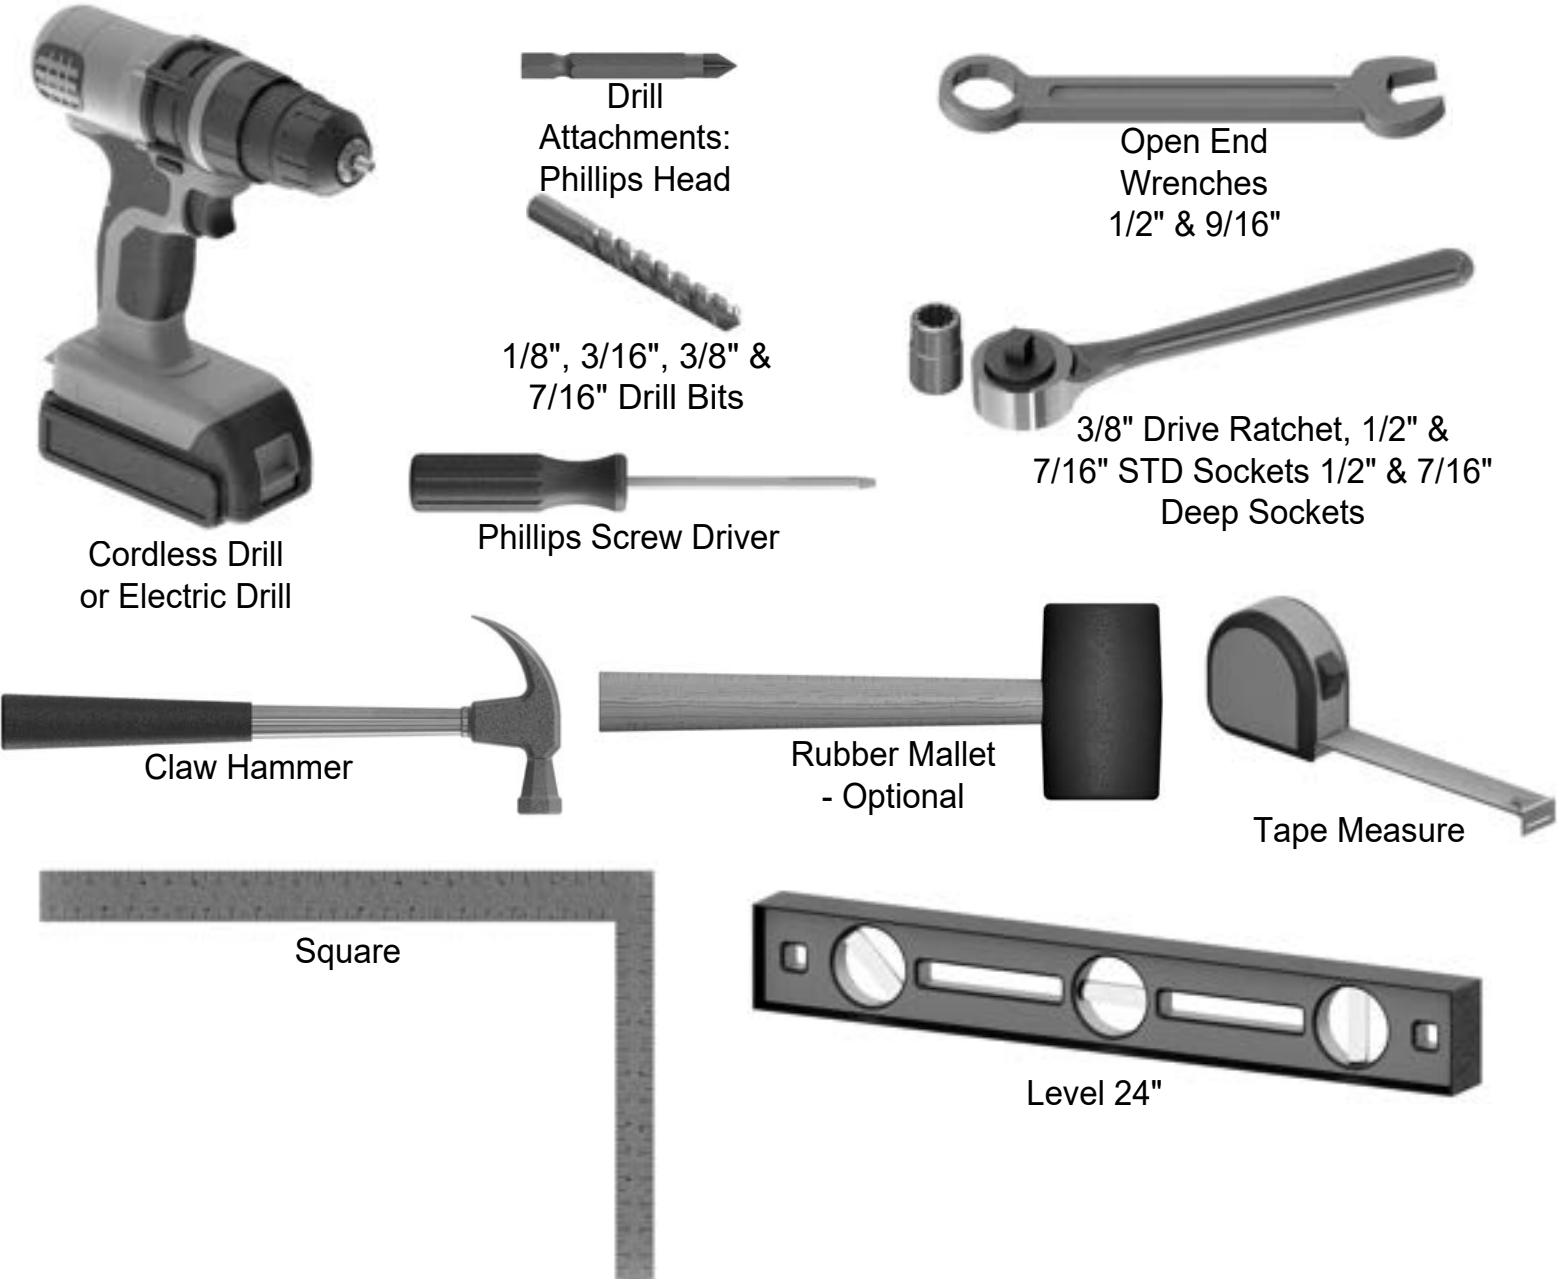

PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD

There are several types of assembly instructions available to you.

1. Printed Assembly Manual included with your set
2. BILT APP - 3D interactive instructions
3. Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)

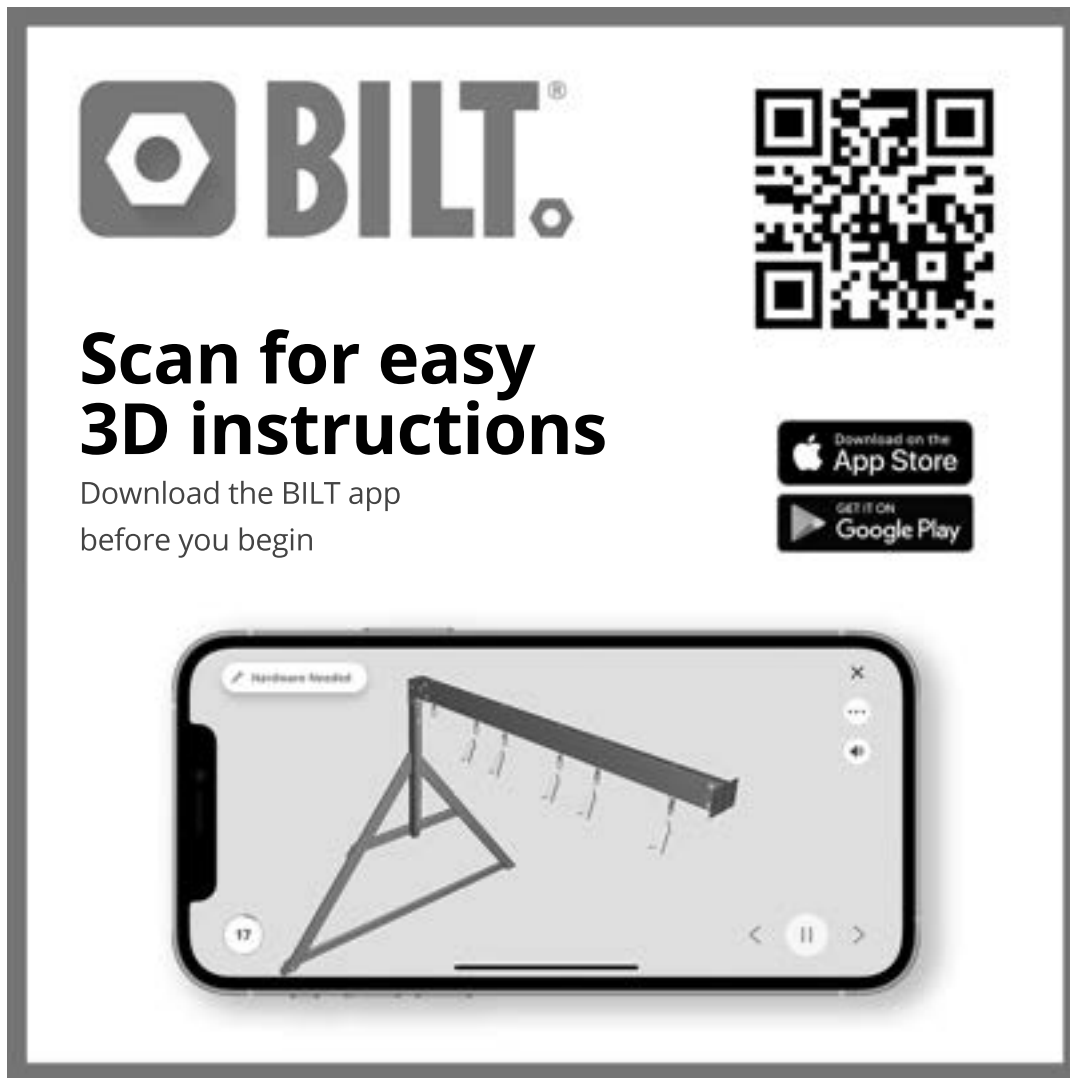

STEP 1 - BEAM ASSEMBLY

QTY	PartNo	DESCRIPTION
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




B04 FRONT BEAM ASSEMBLY - A4M03510
(x1) 78 3/16"x5 1/4"x1 7/16" (36x134x1986)



J1 SPLICE BRACKET - A4M02230
(x1) 1 5/16"x5 3/16"x39 3/8" (33.2x131.2x1000)

- FOR EASE OF ASSEMBLY, WE RECOMMEND
USING SAW HORSES FOR STEPS 1 - 12.

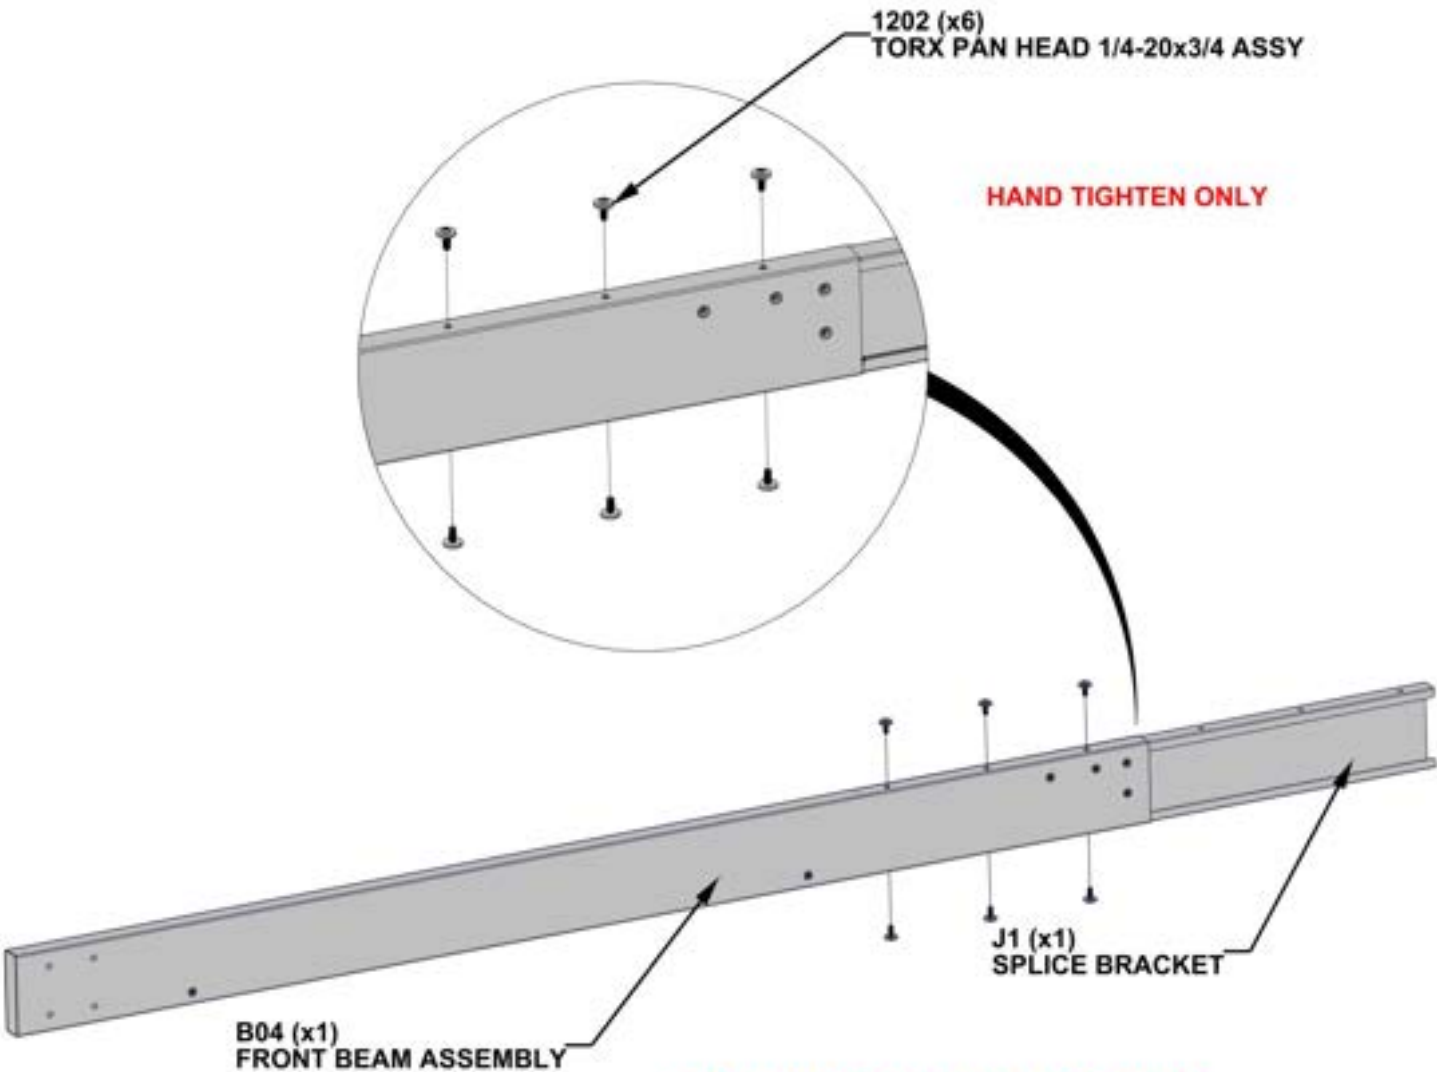

BEAM AND SPLICE MUST BE ORIENTED
AS SHOWN BELOW. SLIDE J1 INTO B04
AND LINE UP THREE HOLES TOP AND BOTTOM


STEP 2 - BEAM ASSEMBLY

QTY	PartNo	DESCRIPTION
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



B03 FRONT BEAM ASSEMBLY - A4M03509
(x1) 78 3/16"x5 1/4"x1 7/16" (36x134x1986)

- SLIDE B03 INTO SPLICE BRACKET.
GENTLY TAP ENDS OF ASSEMBLY WITH
RUBBER Mallet UNTIL GAP CLOSES.

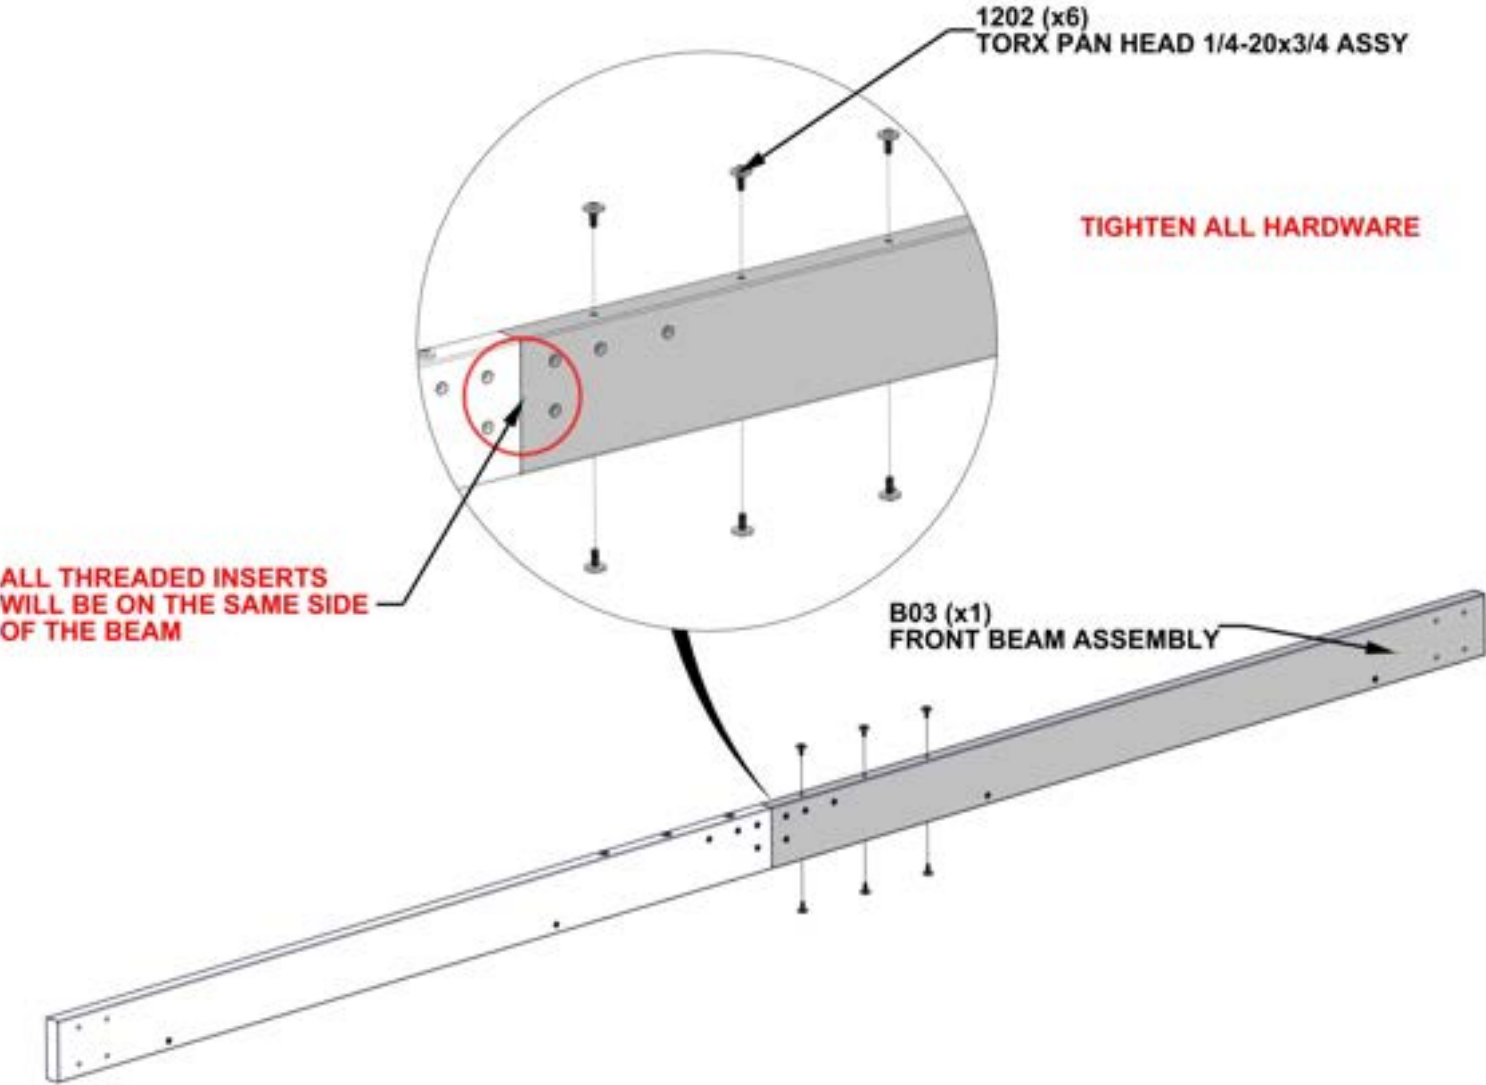

STEP 3 - BEAM ASSEMBLY

QTY	PartNo	DESCRIPTION
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




B06 FRONT BEAM ASSEMBLY - A4M03512
(x1) 72"x5 1/4"x1 7/16" (36x134x1829)



J1 SPLICE BRACKET - A4M02230
(x1) 1 5/16"x5 3/16"x39 3/8" (33.2x131.2x1000)


1202 (x6)
TORX PAN HEAD 1/4-20x3/4 ASSY

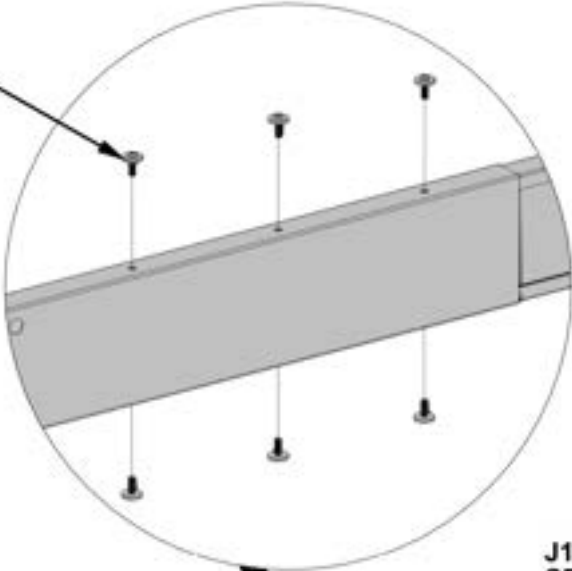

HAND TIGHTEN ONLY

J1 (x1)
SPLICE BRACKET

B06 (x1)
FRONT BEAM ASSEMBLY

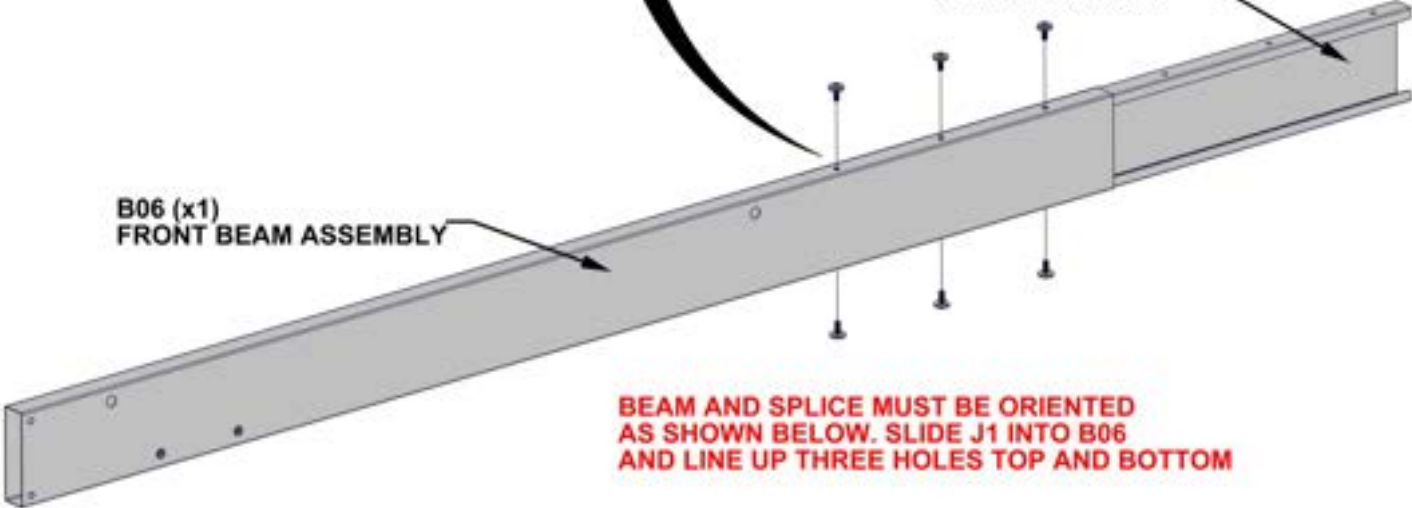

BEAM AND SPLICE MUST BE ORIENTED
AS SHOWN BELOW. SLIDE J1 INTO B06
AND LINE UP THREE HOLES TOP AND BOTTOM

STEP 4 - BEAM ASSEMBLY

QTY	PartNo	DESCRIPTION
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY





B05 FRONT BEAM ASSEMBLY - A4M03511
(x1) 72"x5 1/4"x1 7/16" (36x134x1829)

- SLIDE B05 INTO SPLICE BRACKET.
GENTLY TAP ENDS OF ASSEMBLY WITH
RUBBER Mallet UNTIL GAP CLOSES.


1202 (x6)
TORX PAN HEAD 1/4-20x3/4 ASSY

TIGHTEN ALL HARDWARE

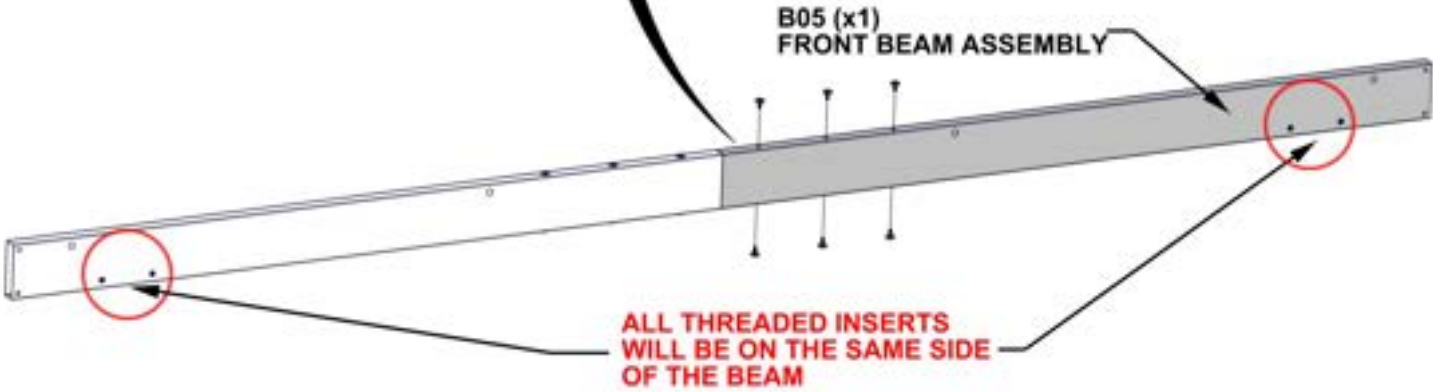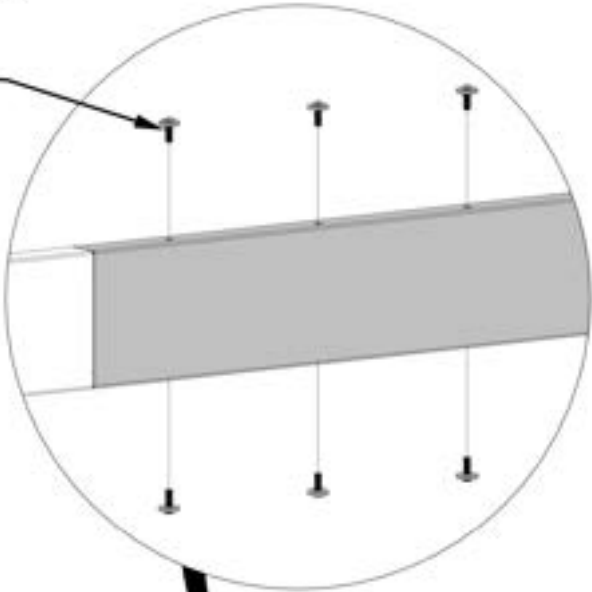


STEP 5 - BEAM ASSEMBLY

QTY	PartNo	DESCRIPTION
4	H101103	TORX SOCKET SCREW 1/4-20




UPPER BEAM ASSEMBLY STEPS 1 - 2



LOWER BEAM ASSEMBLY STEPS 3 - 4


- ALIGN THRU HOLES IN LOWER BEAM ASSEMBLY
WITH THREADED INSERTS IN UPPER BEAM ASSEMBLY

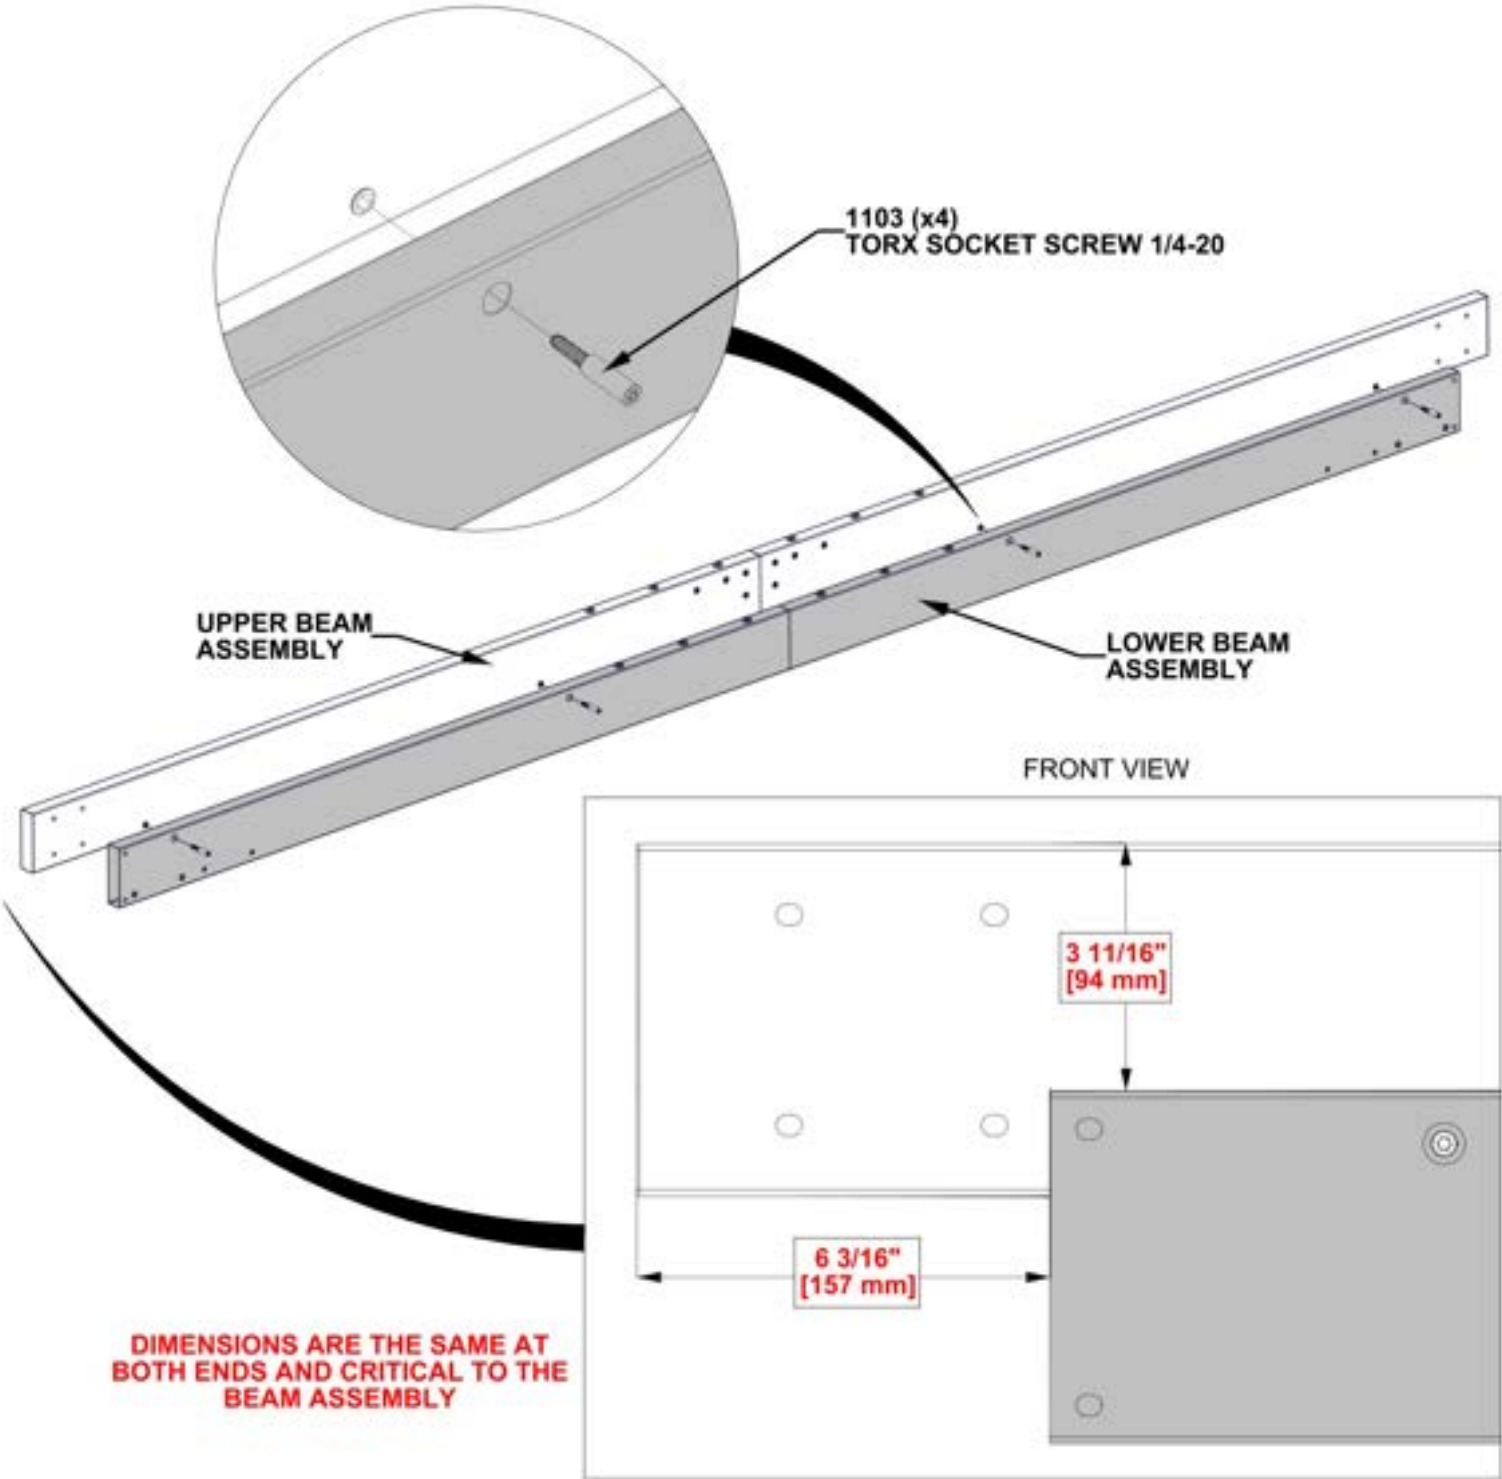

**REPEAT BEAM ASSEMBLY
STEPS 1 THROUGH 5**

STEP 6 - POST ASSEMBLY


QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

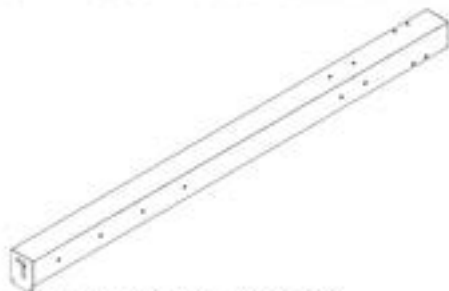

P03 BACK POST - A4M03505
(x1) 89 9/16"x6 1/8"x4 3/4" (120x155x2275)




J4 BEAM BRACKET - A4M02990
(x2) 1"x1 5/16"x5 1/16" (25x33.2x128)

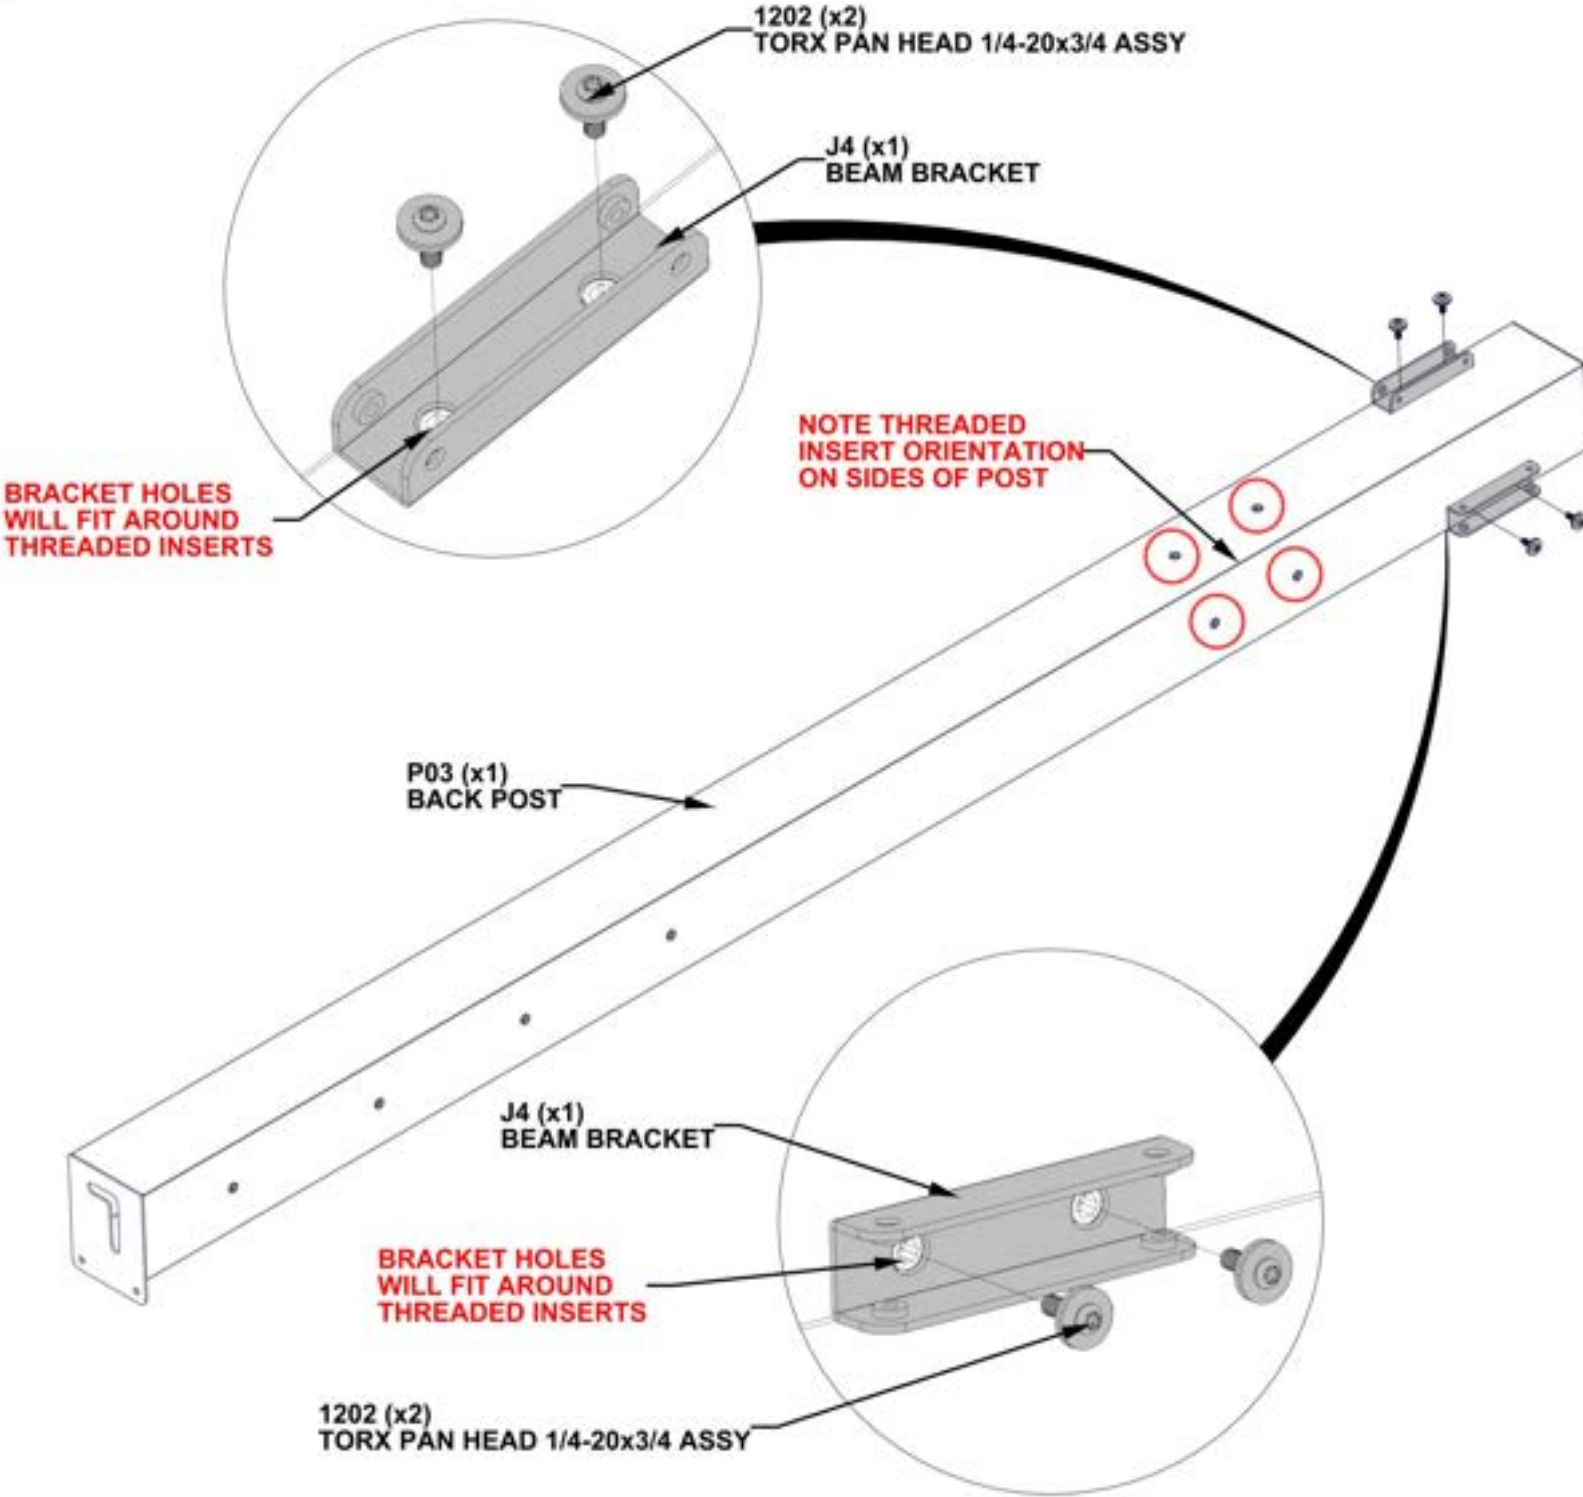

STEP 7 - POST ASSEMBLY

QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

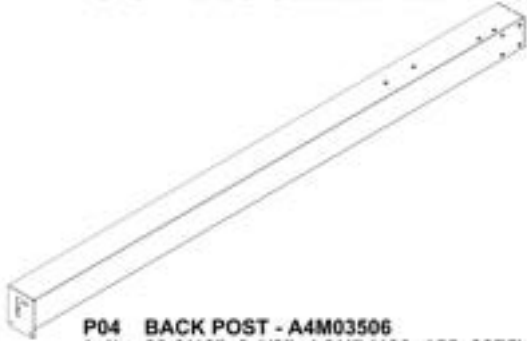


P04 BACK POST - A4M03506
(x1) 89 9/16"x6 1/8"x4 3/4" (120x155x2275)




J4 BEAM BRACKET - A4M02990
(x2) 1"x1 5/16"x5 1/16" (25x33.2x128)

1202 (x2)
TORX PAN HEAD 1/4-20x3/4 ASSY


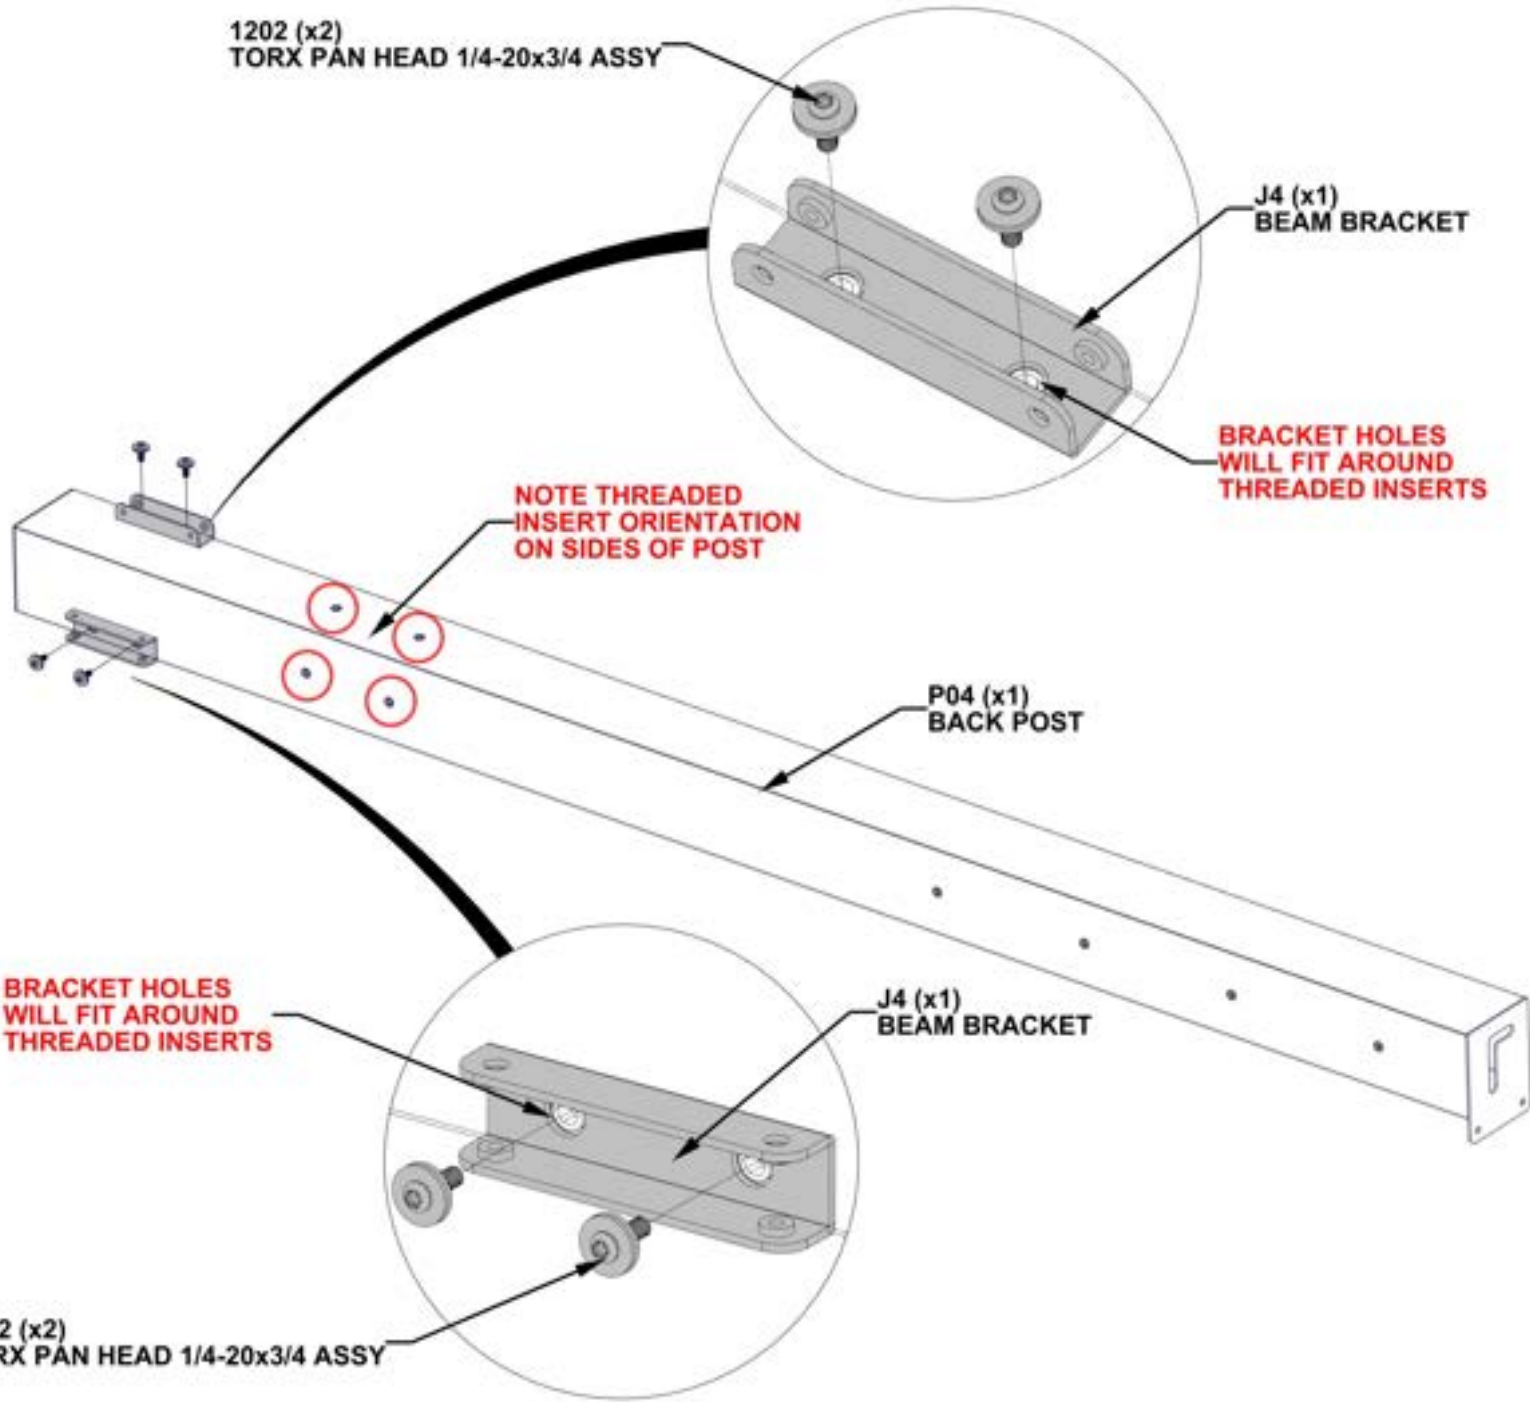


STEP 8A - FRAME ASSEMBLY




BEAM ASSEMBLY FROM STEPS 1 - 5

- SLIDE EACH POST ASSEMBLY INTO THE BEAM ASSEMBLY FROM STEPS 1 - 5.

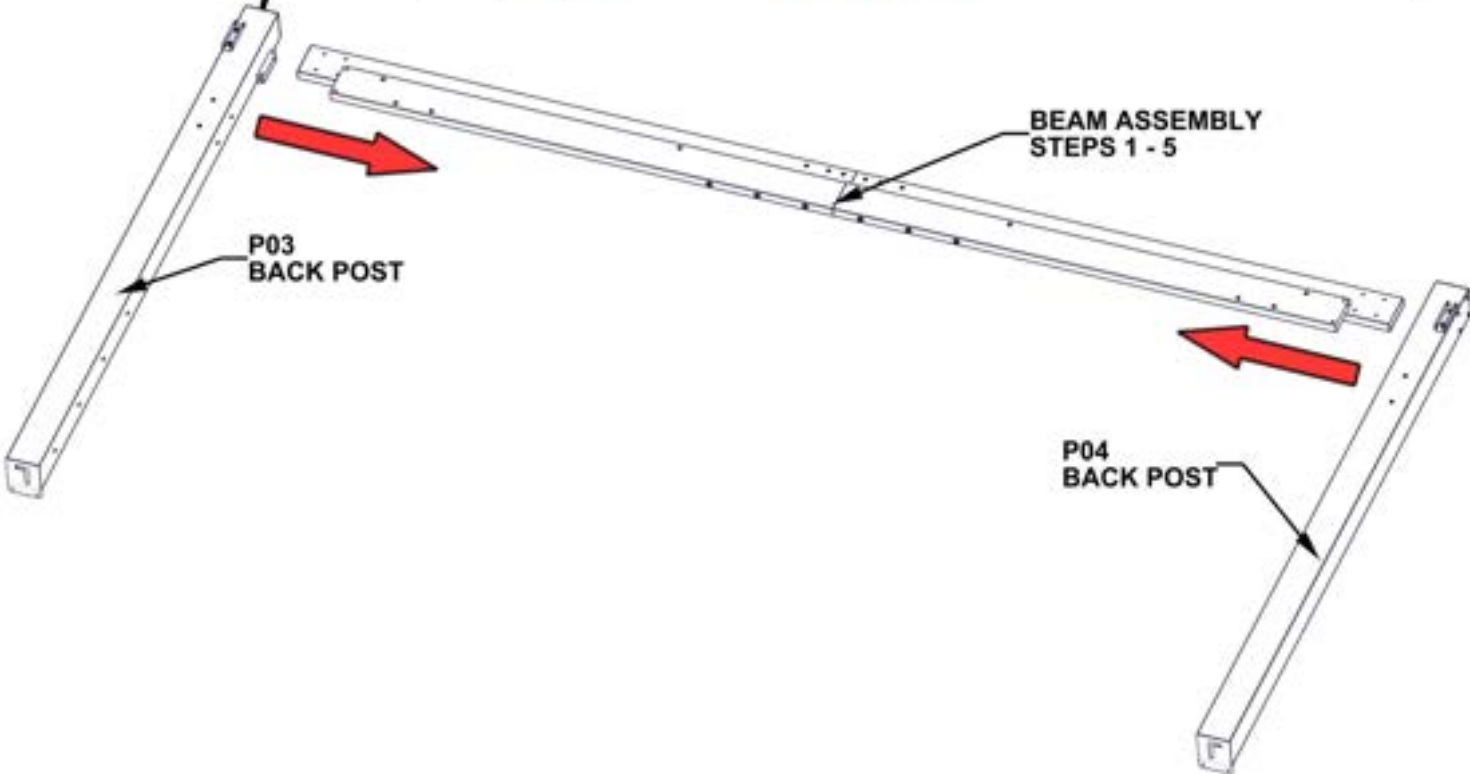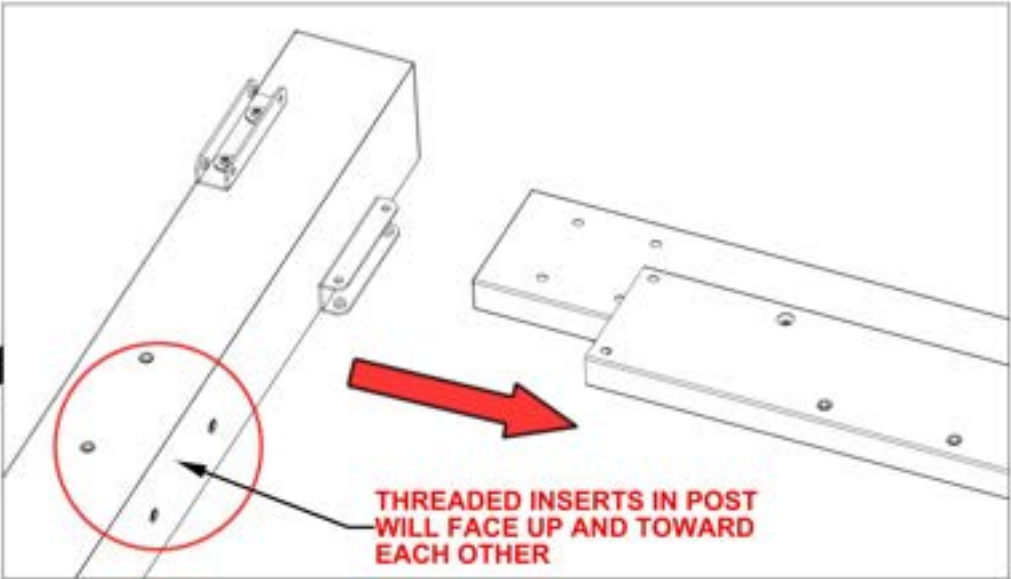

STEP 8B - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

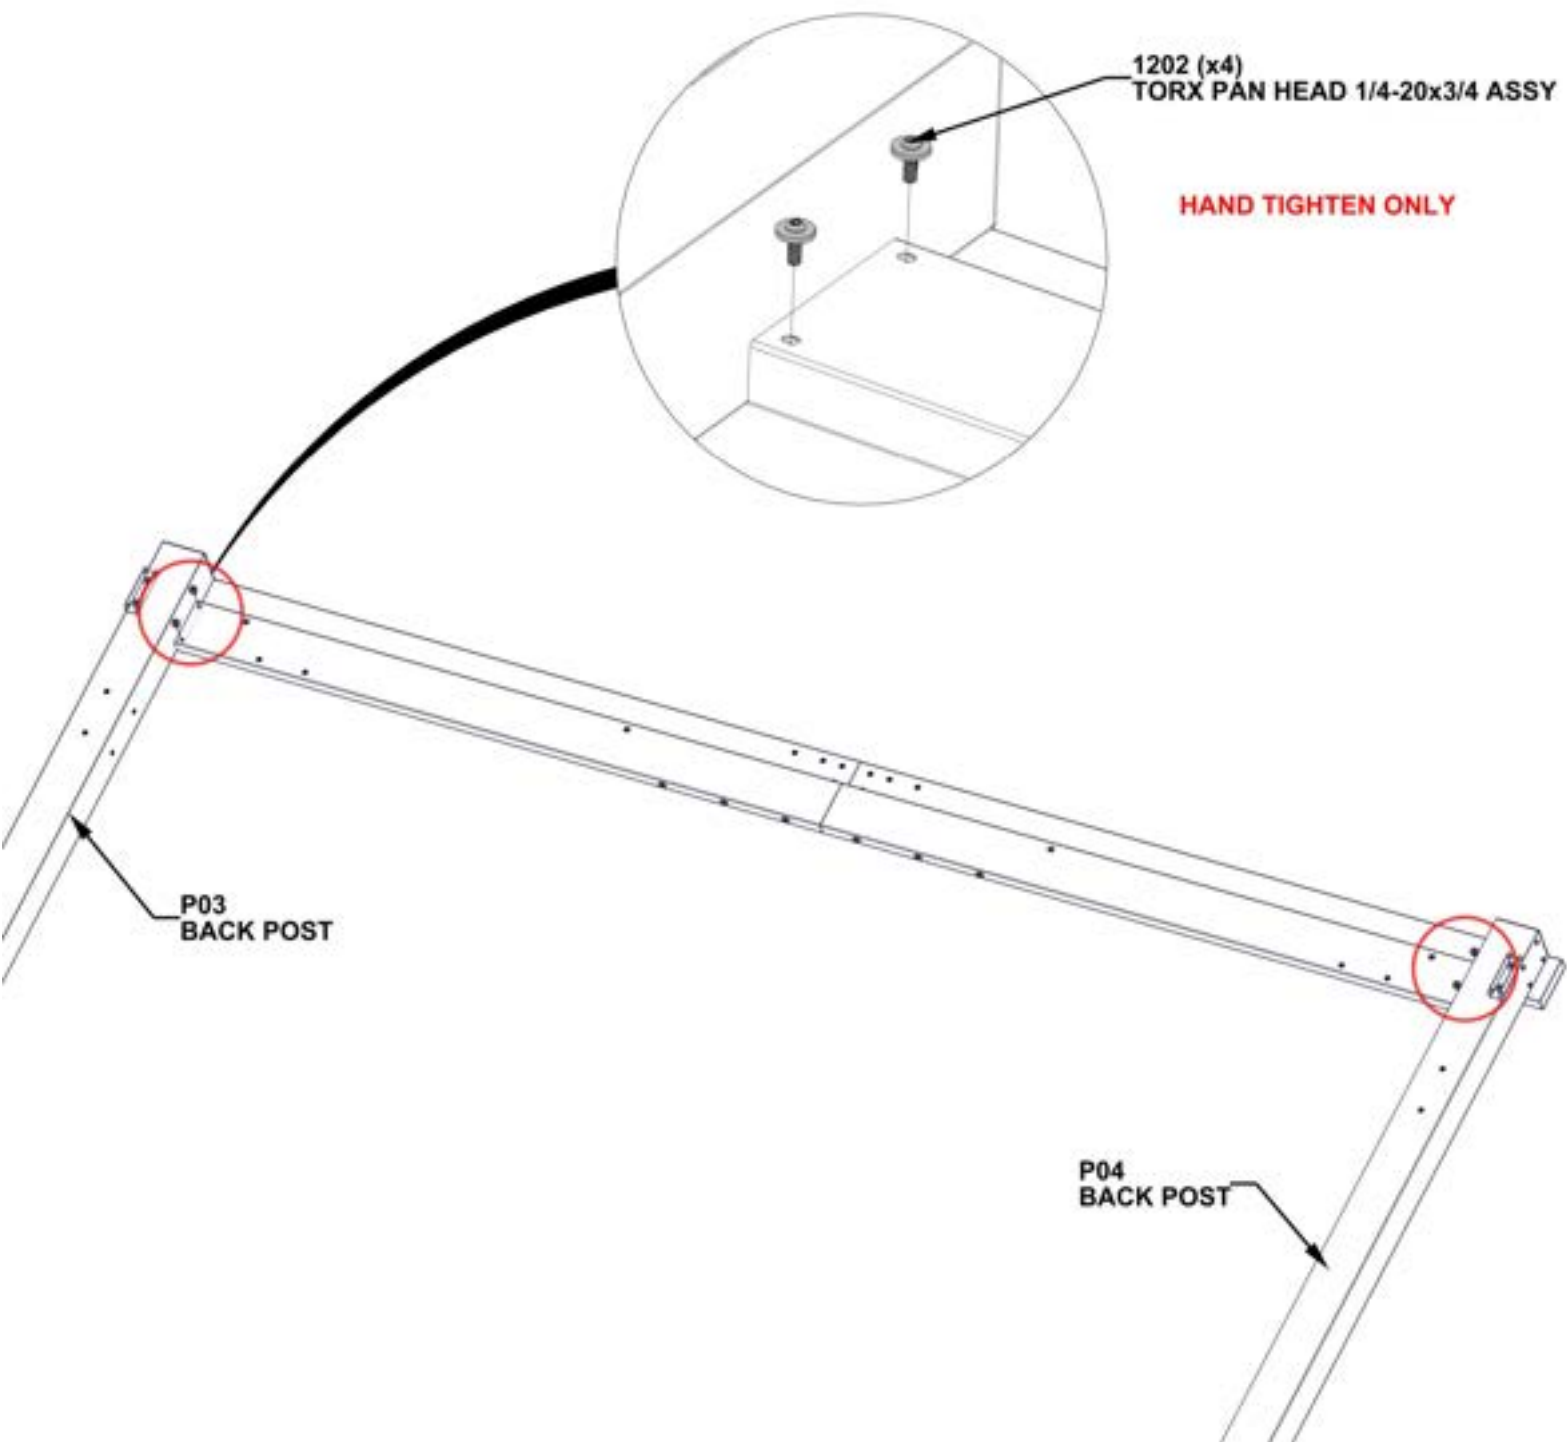

STEP 8C - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




C01 CORBEL ASSEMBLY - A4M03525
(x1) 21 13/16"x5 1/4"x2 3/4" (70x134x553.5)



C02 CORBEL ASSEMBLY - A4M03526
(x1) 21 13/16"x5 1/4"x2 3/4" (70x134x553.5)


- ATTACH CORBELS TO BEAM AND POST.
- SQUARE AS NEEDED BEFORE TIGHTENING ALL HARDWARE FROM PREVIOUS STEPS.

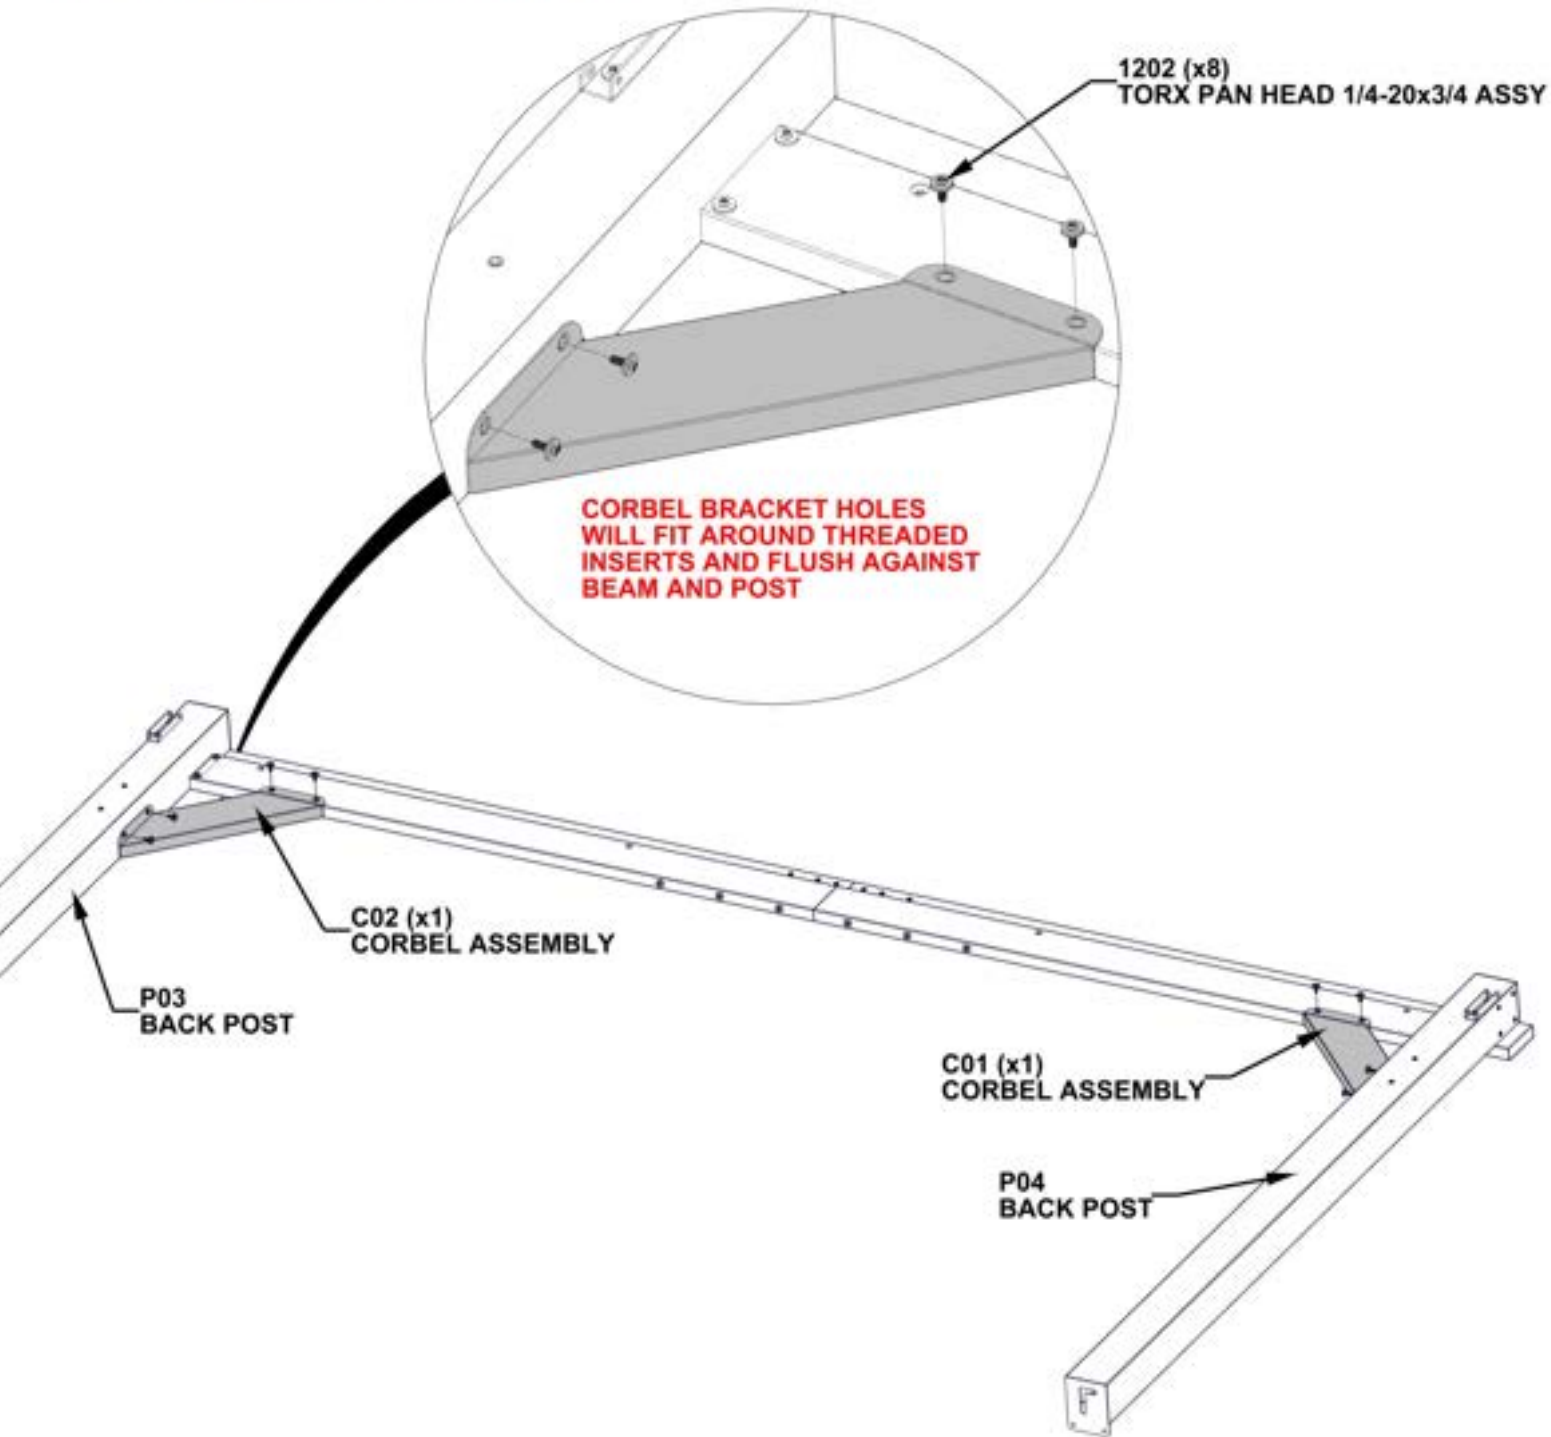

STEP 8D - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
8	H101103	TORX SOCKET SCREW 1/4-20

- WITH AN ADDITIONAL PERSON, FLIP POST AND BEAM ASSEMBLY

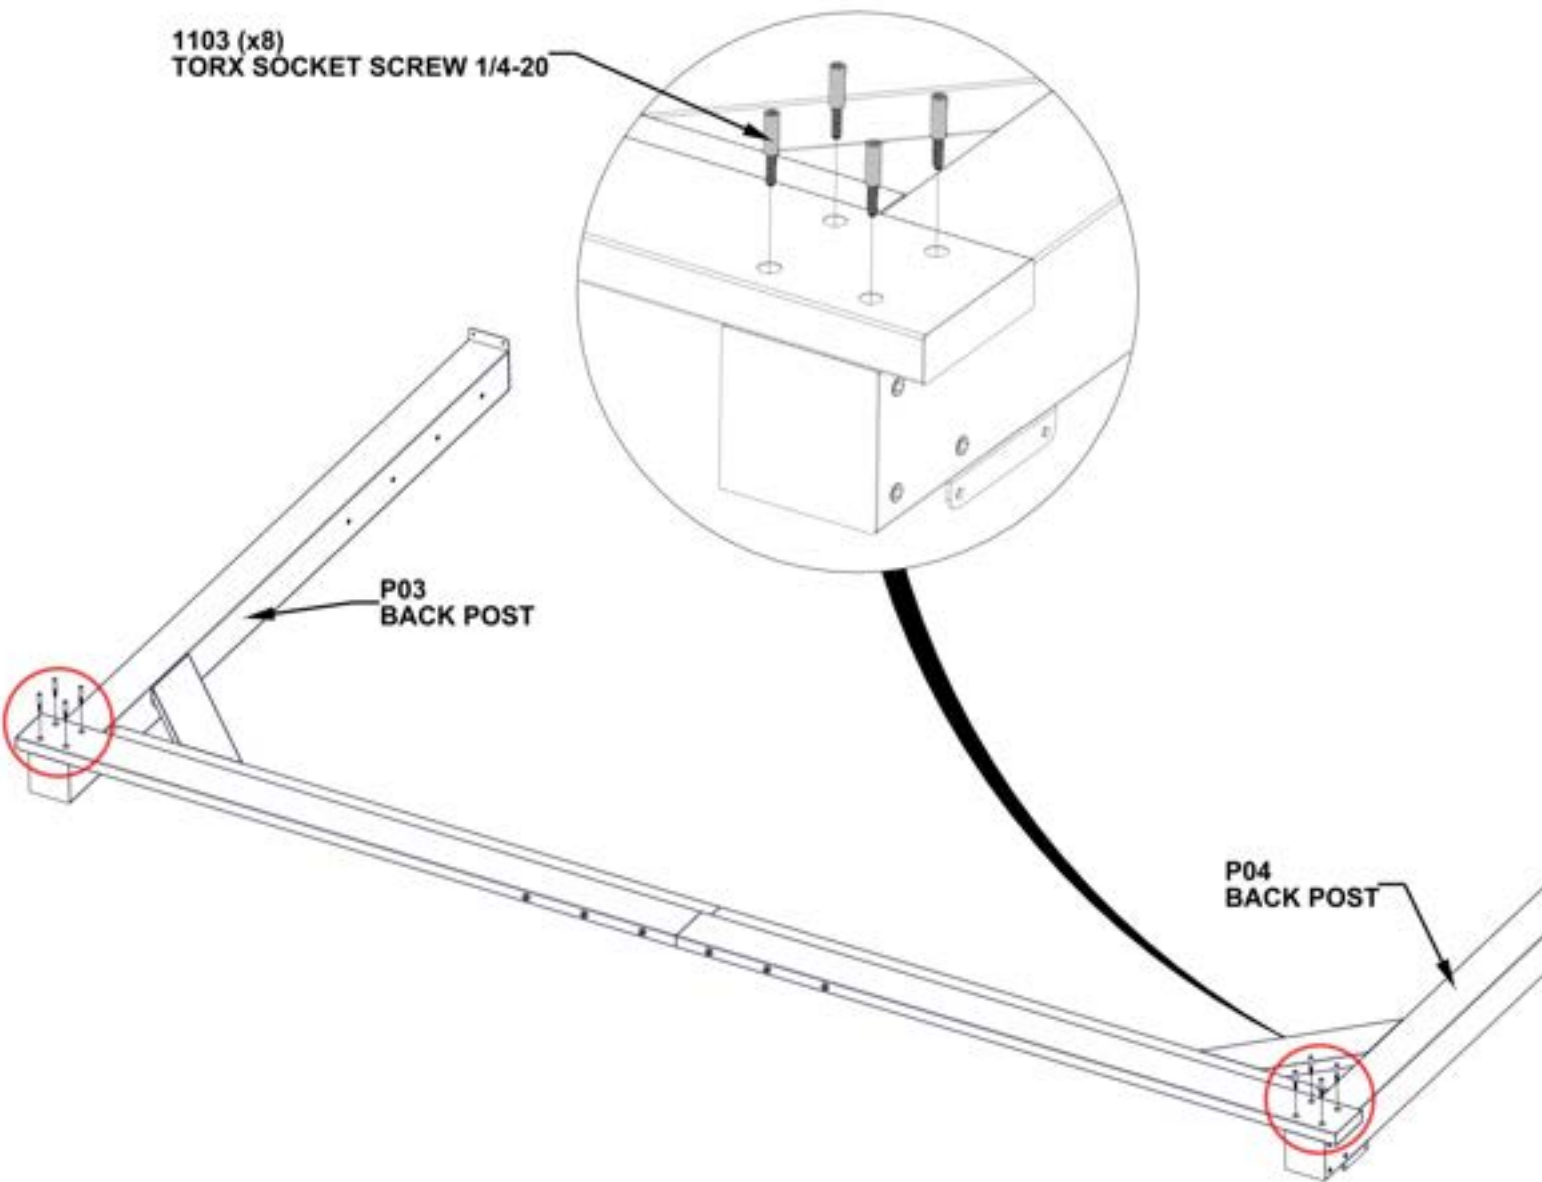

STEP 9 - BEAM ASSEMBLY

QTY	PartNo	DESCRIPTION
3	H101103	TORX SOCKET SCREW 1/4-20





B01 SIDE BEAM ASSEMBLY - A4M03507
(x1) 94 5/16"x5 1/4"x1 7/16" (36x134x2396)



B02 SIDE BEAM ASSEMBLY - A4M03508
(x1) 84 13/16"x5 1/4"x1 7/16" (36x134x2154)

- ALIGN THRU HOLES IN B02 BEAM WITH THREADED INSERTS IN B01 BEAM.

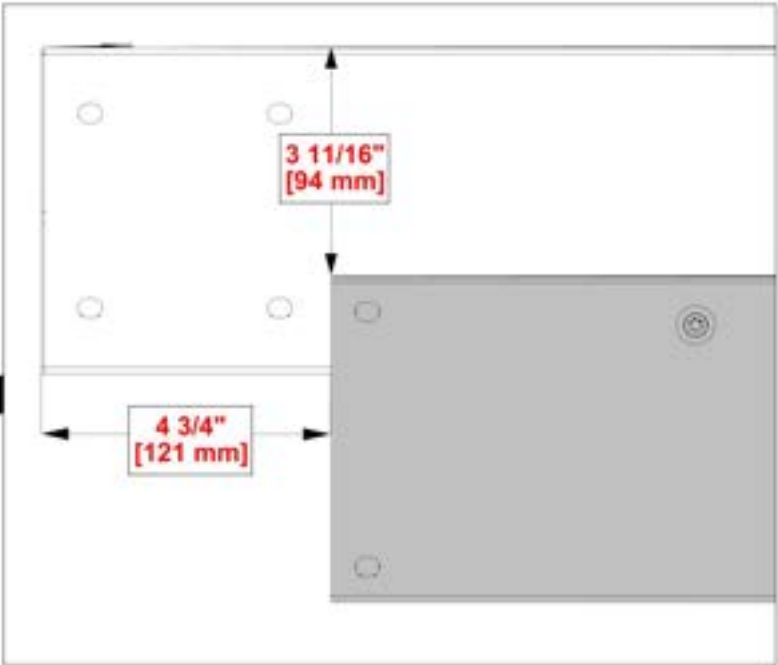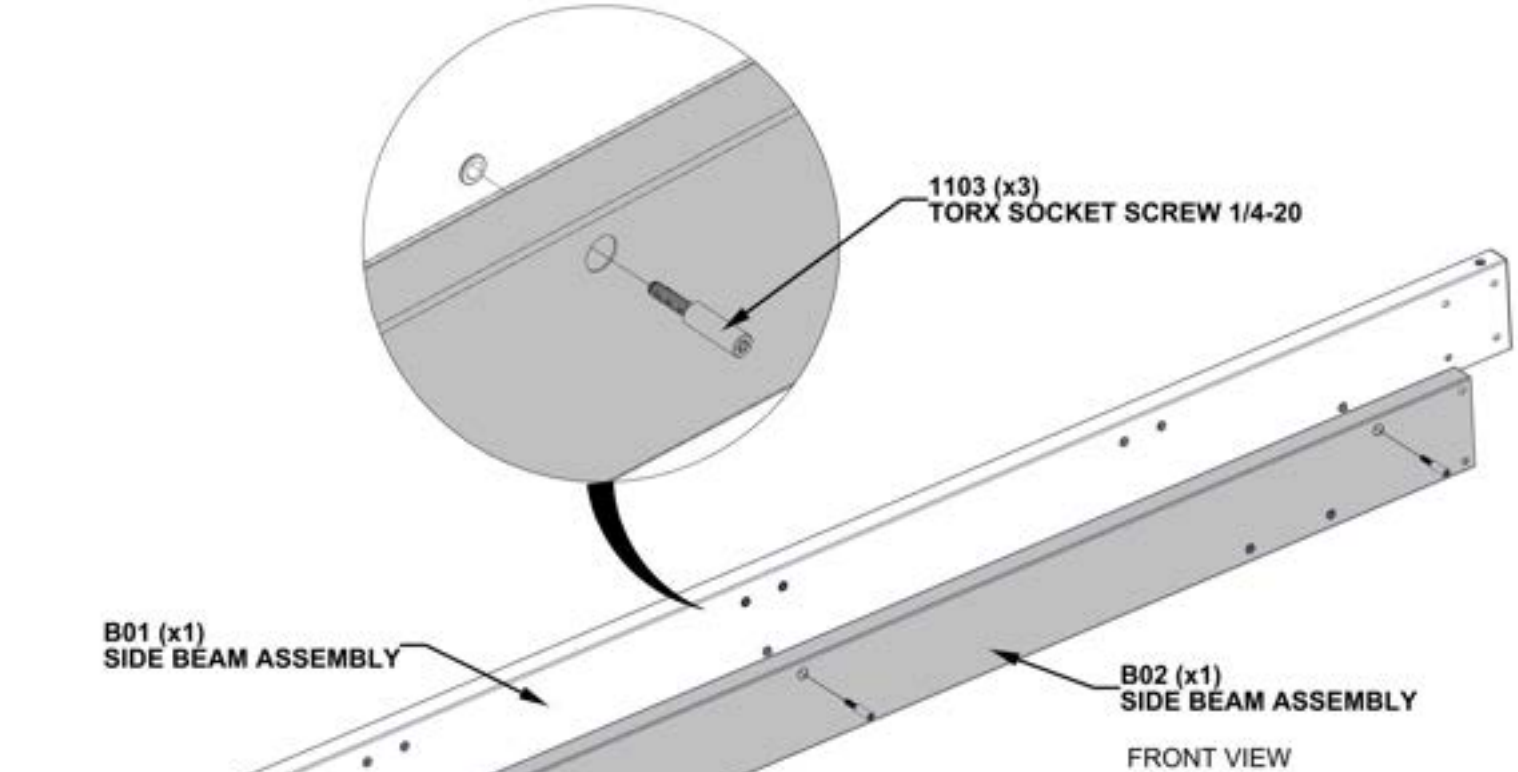


DIMENSIONS ARE THE SAME AT BOTH ENDS AND CRITICAL TO THE BEAM ASSEMBLY

STEP 10 - BEAM ASSEMBLY




J5 RAFTER BRACKET - A4M03803
(x3) 3 5/8"x2 11/16"x2 1/16" (52x68x91.5)

QTY	PartNo	DESCRIPTION
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

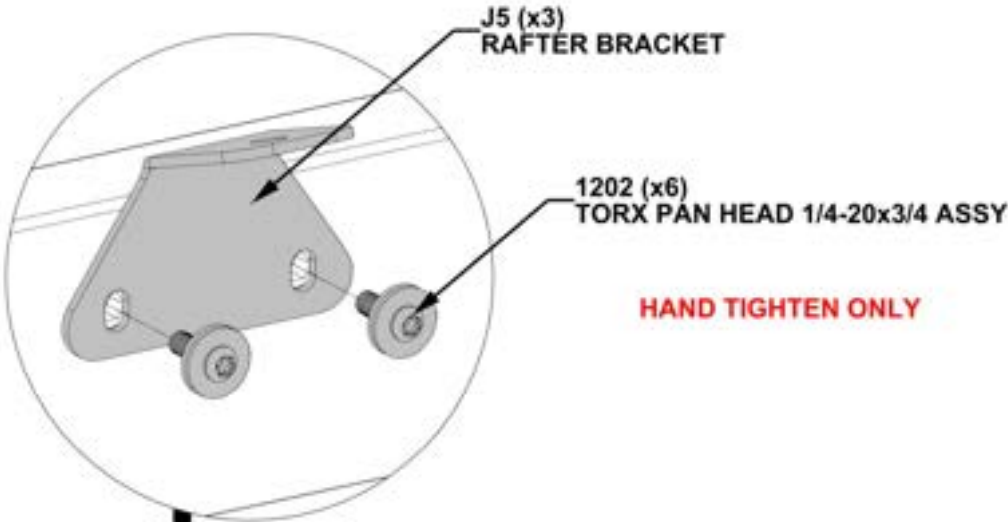


HAND TIGHTEN ONLY

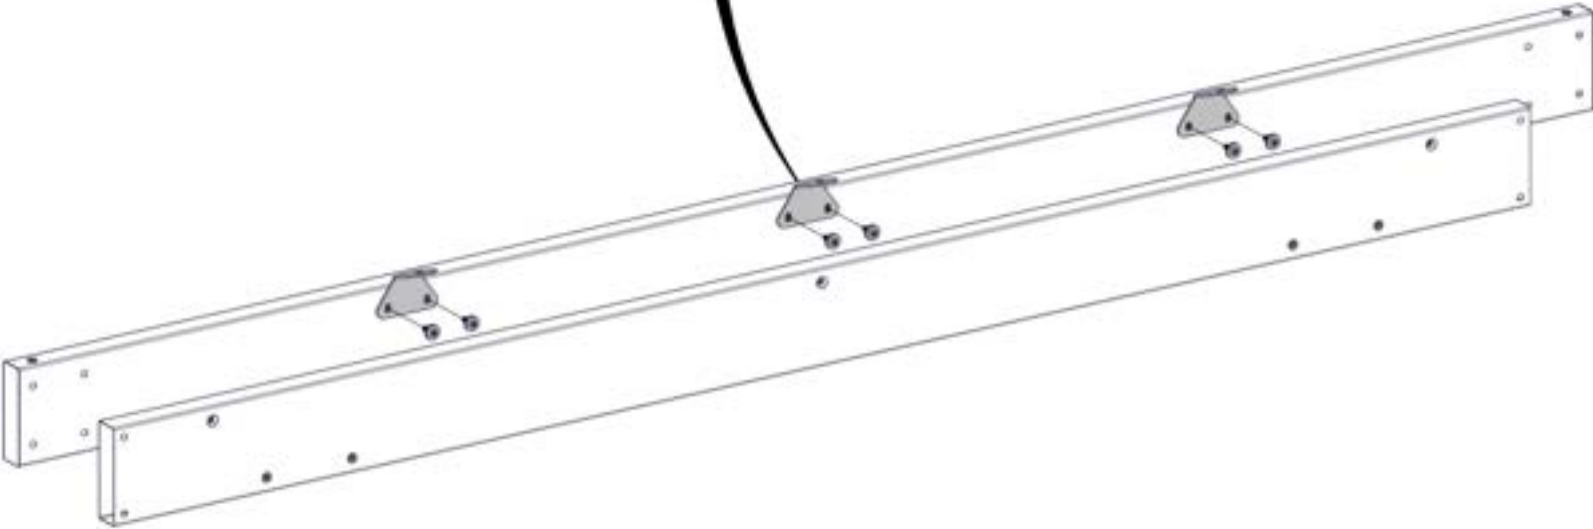

**REPEAT BEAM ASSEMBLY
STEPS 9 THROUGH 10**

STEP 11 - POST ASSEMBLY


QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

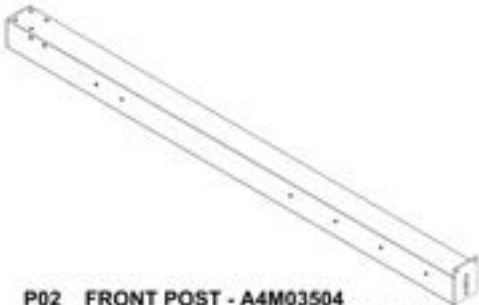


P02 FRONT POST - A4M03504
(x1) 89 9/16"x6 1/8"x4 3/4" (120x155x2275)



J4 BEAM BRACKET - A4M02990
(x2) 1"x1 5/16"x5 1/16" (25x33.2x128)


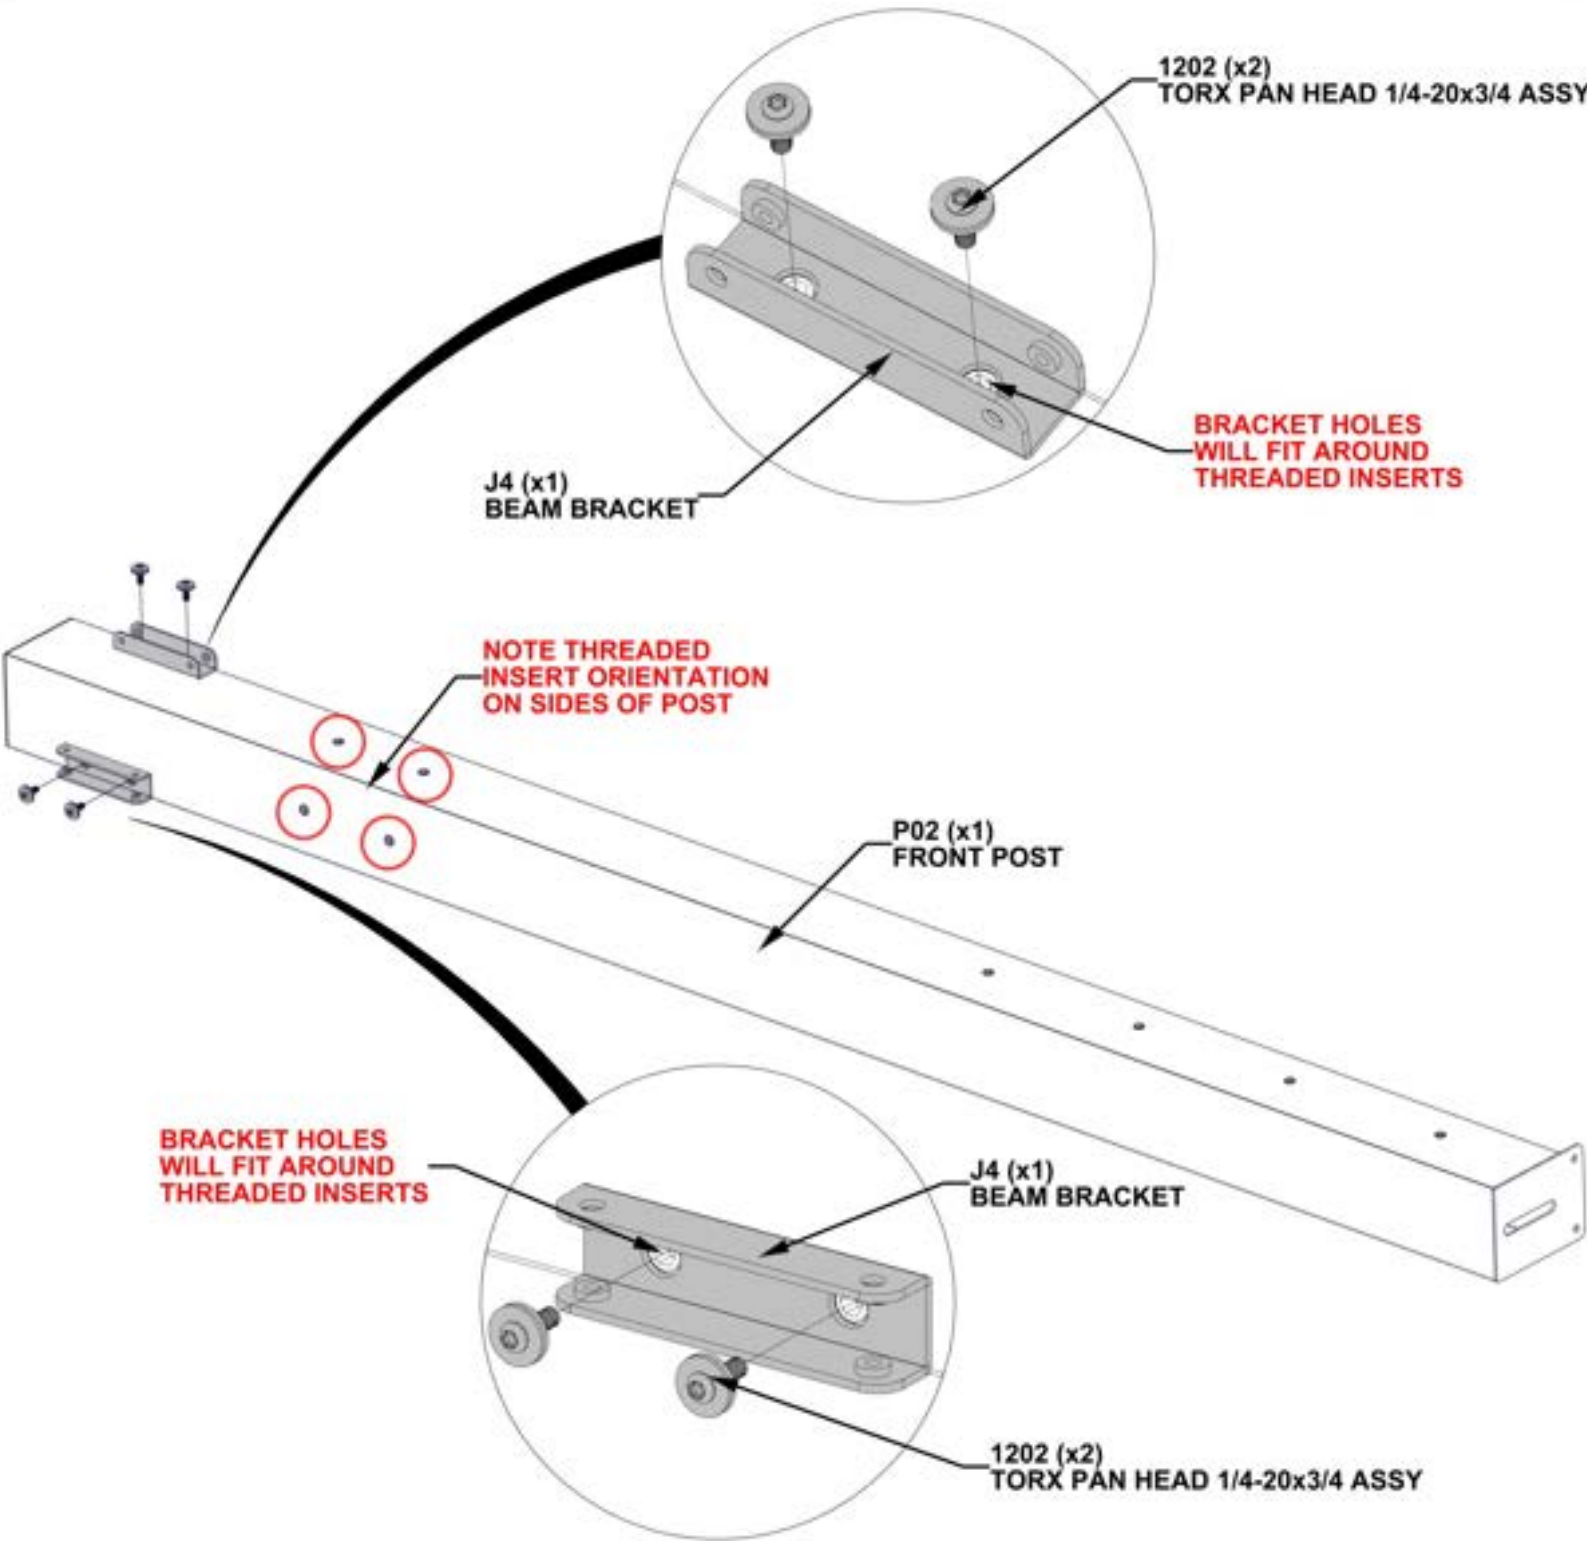


STEP 12A - FRAME ASSEMBLY

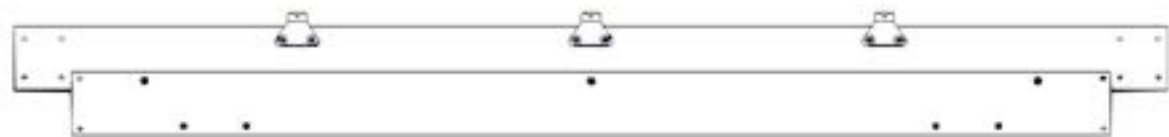


BEAM ASSEMBLY FROM STEPS 9 - 10

- SLIDE POST ASSEMBLY FROM STEP 11 INTO THE BEAM ASSEMBLY FROM STEPS 9 - 10.

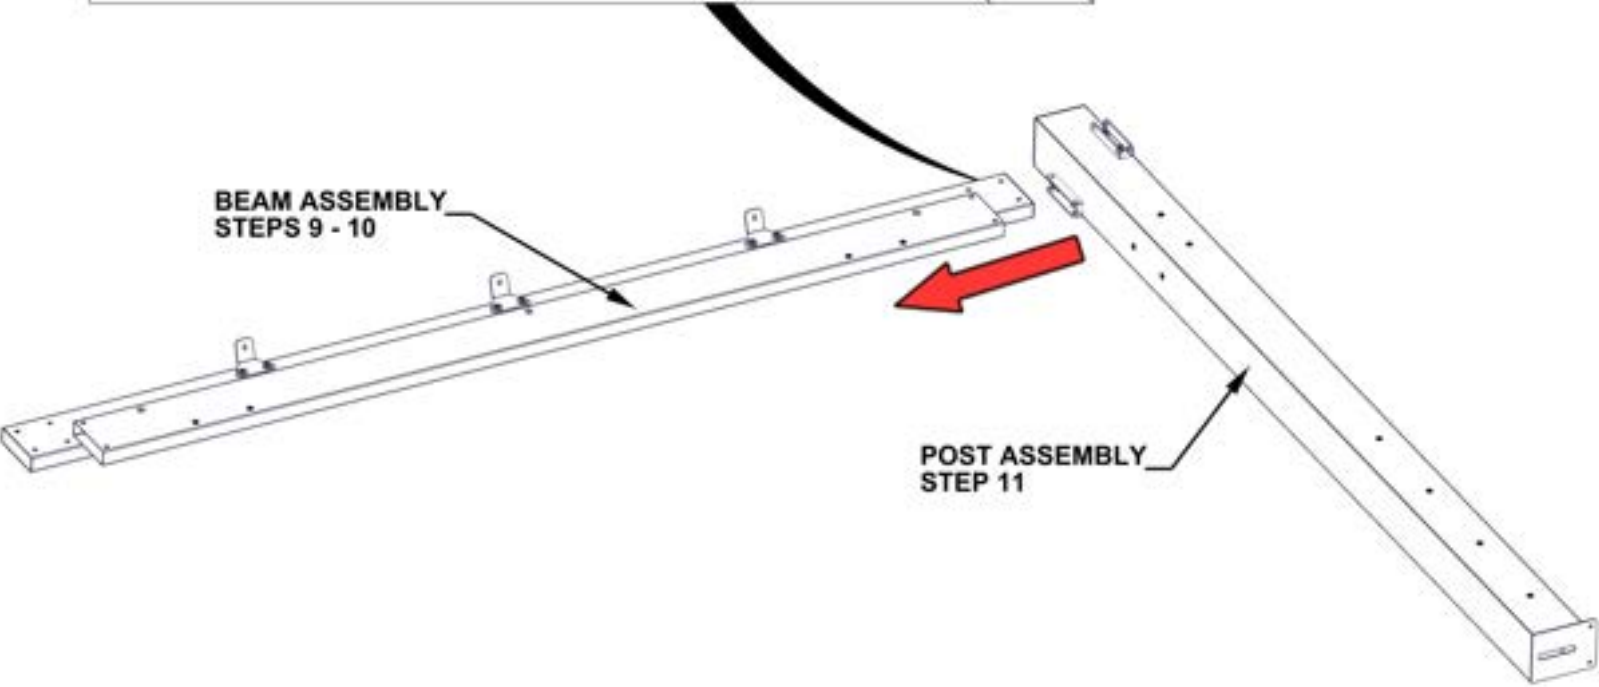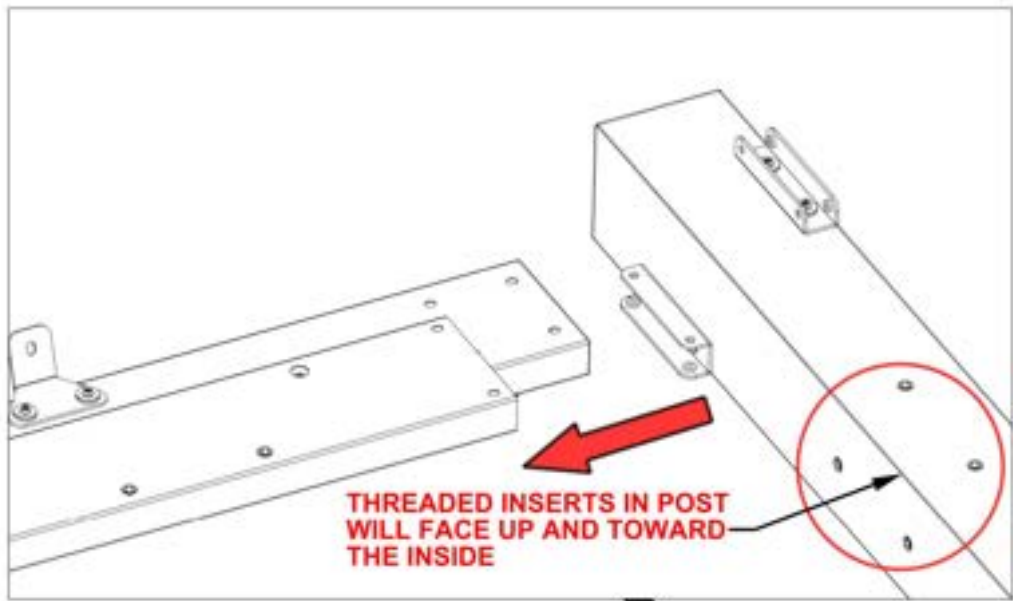

STEP 12B - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

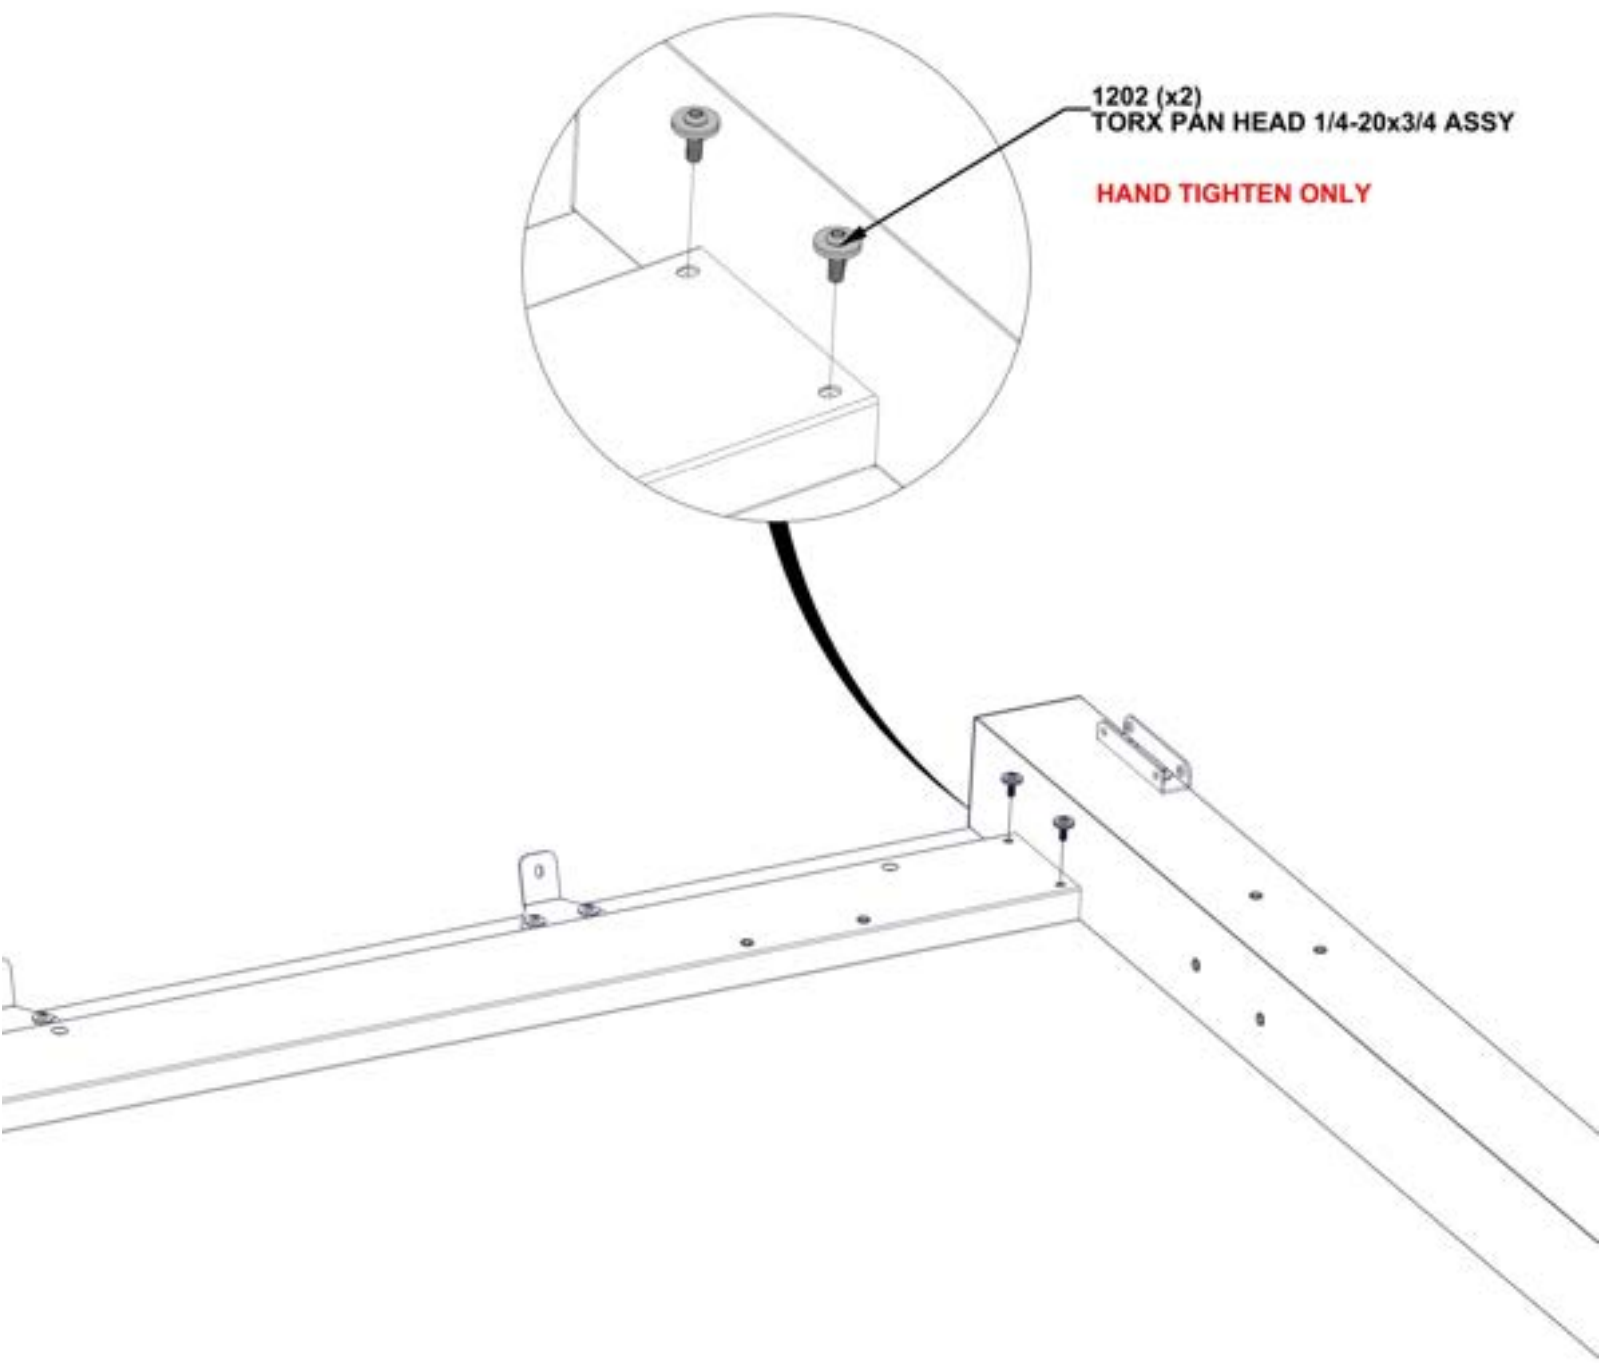

STEP 12C - FRAME ASSEMBLY




C01 CORBEL ASSEMBLY - A4M03525
(x1) 21 13/16"x5 1/4"x2 3/4" (70x134x553.5)


QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ATTACH CORBEL TO BEAM AND POST.
- SQUARE AS NEEDED BEFORE TIGHTENING ALL HARDWARE FROM PREVIOUS STEPS.

1202 (x4)
TORX PAN HEAD 1/4-20x3/4 ASSY

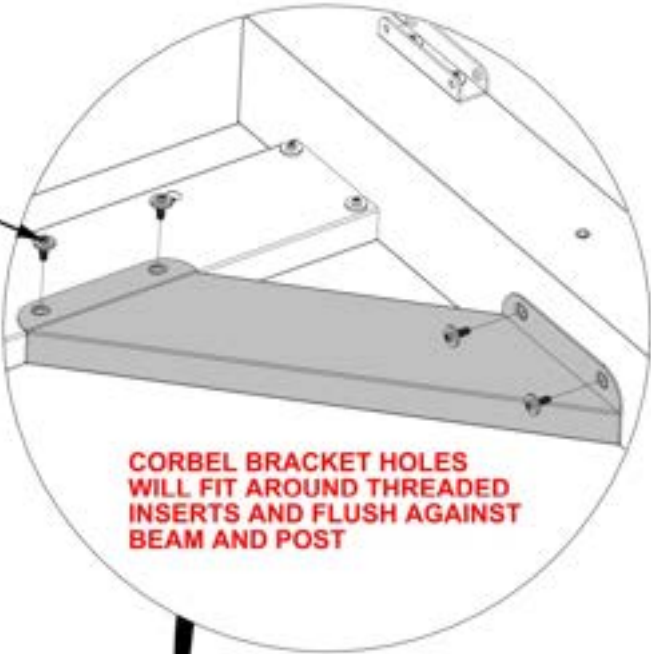

C01 (x1)
CORBEL ASSEMBLY


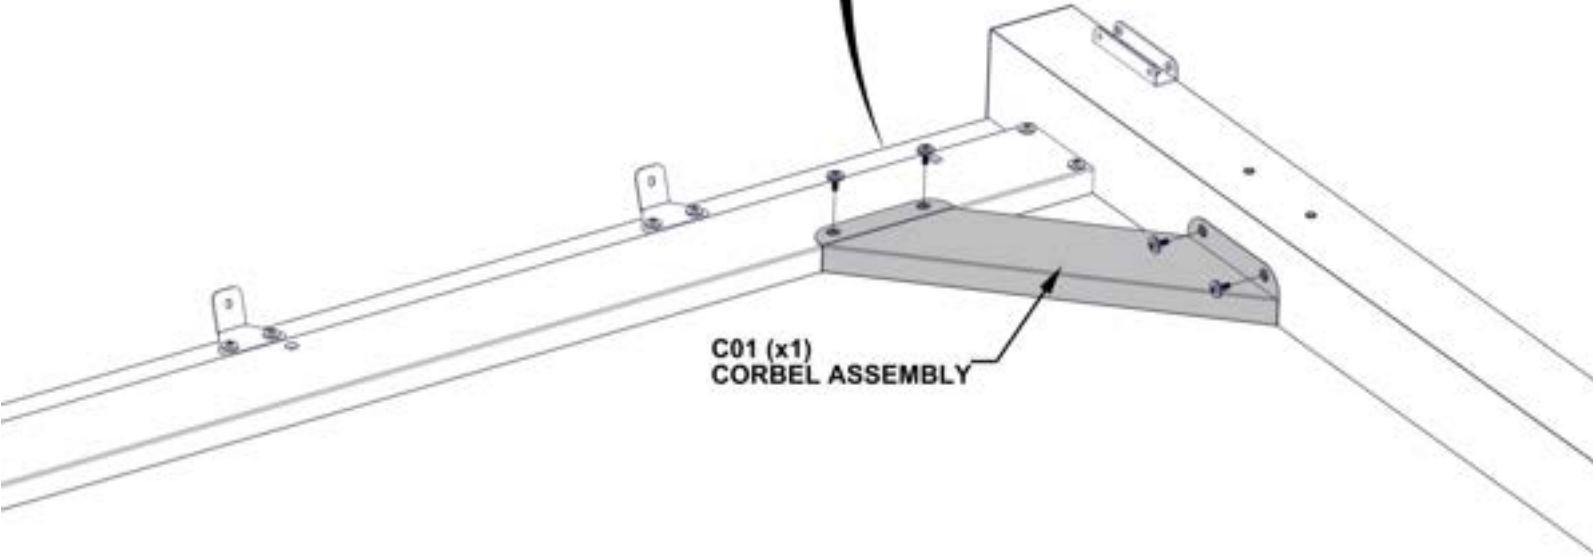


STEP 12D - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
4	H101103	TORX SOCKET SCREW 1/4-20



- WITH AN ADDITIONAL PERSON, FLIP POST AND BEAM ASSEMBLY

1103 (x4)
TORX SOCKET SCREW 1/4-20

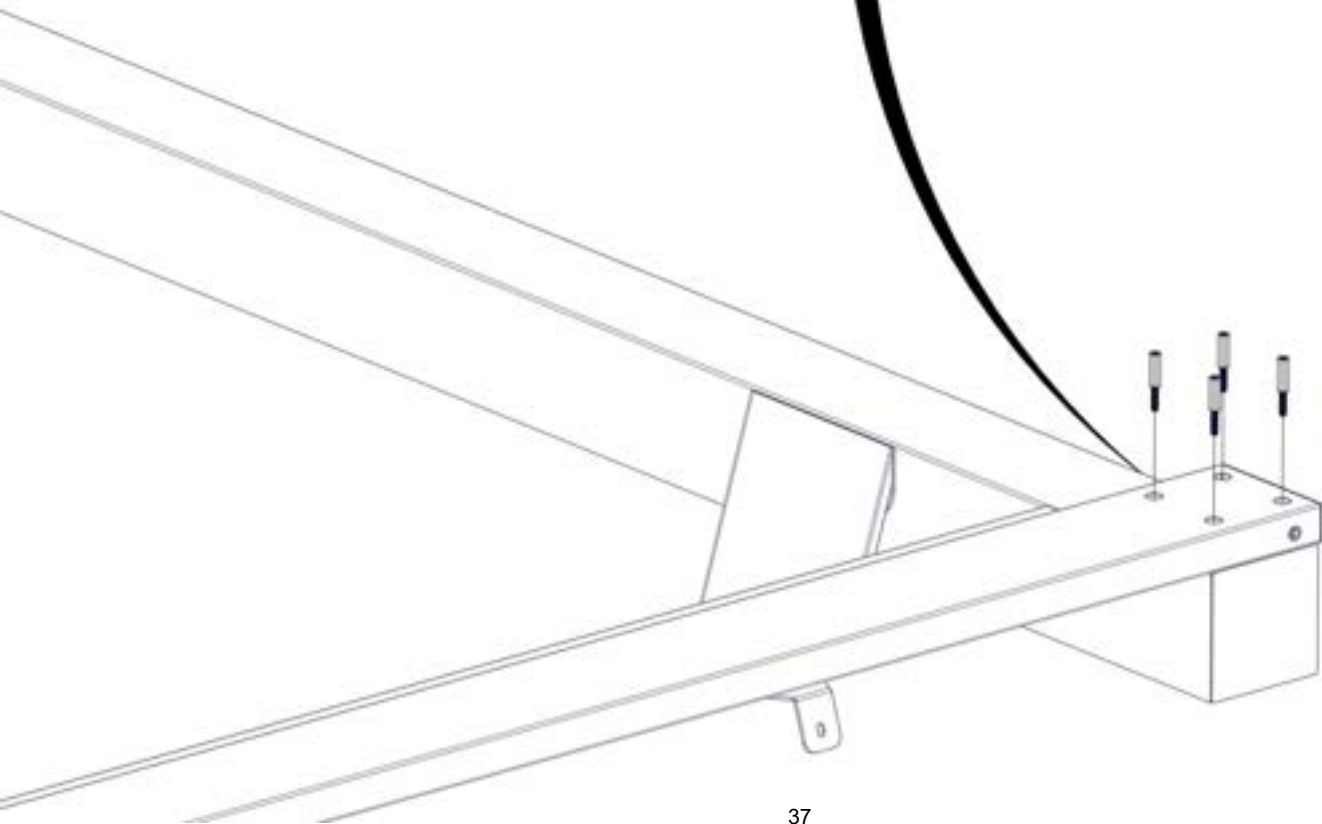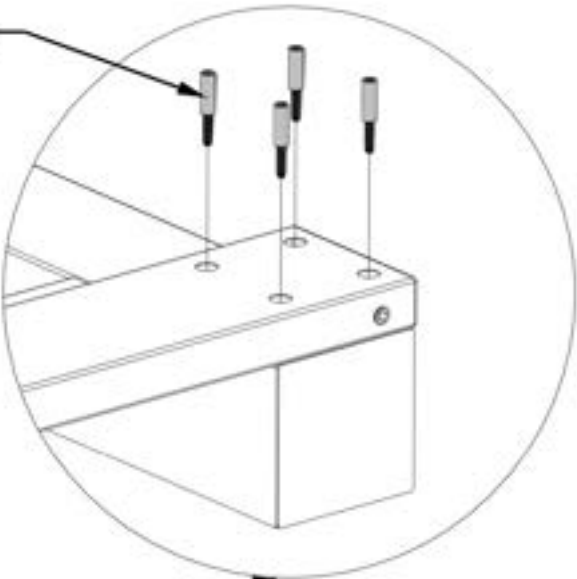


STEP 13A - FRAME ASSEMBLY

- WITH AT LEAST THREE OTHER PEOPLE, ATTACH BEAM AND POST ASSEMBLIES BY SLIDING IN PLACE.

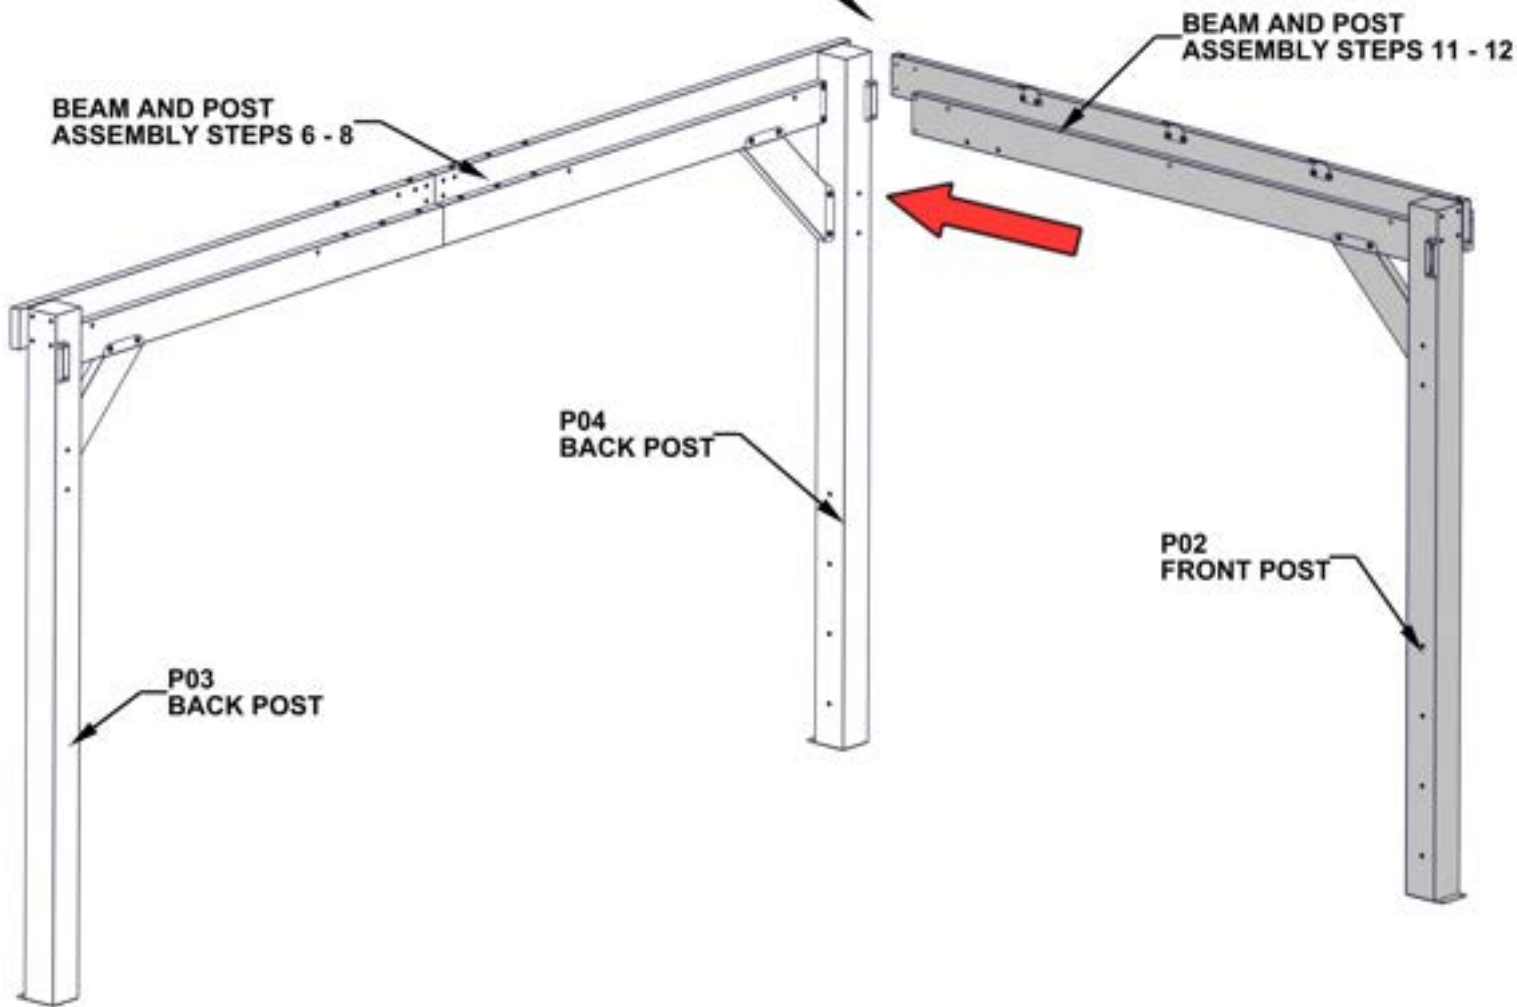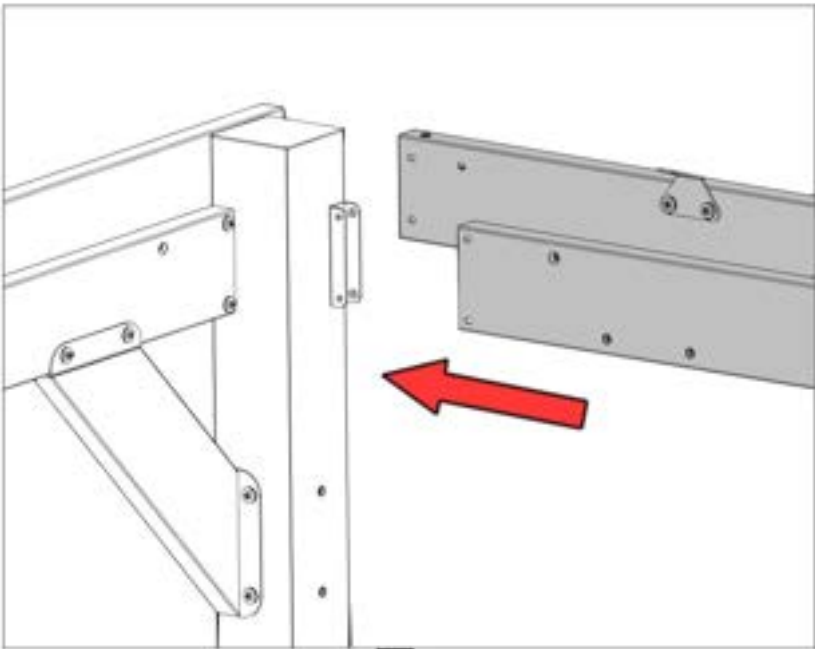

STEP 13B - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
4	H101103	TORX SOCKET SCREW 1/4-20

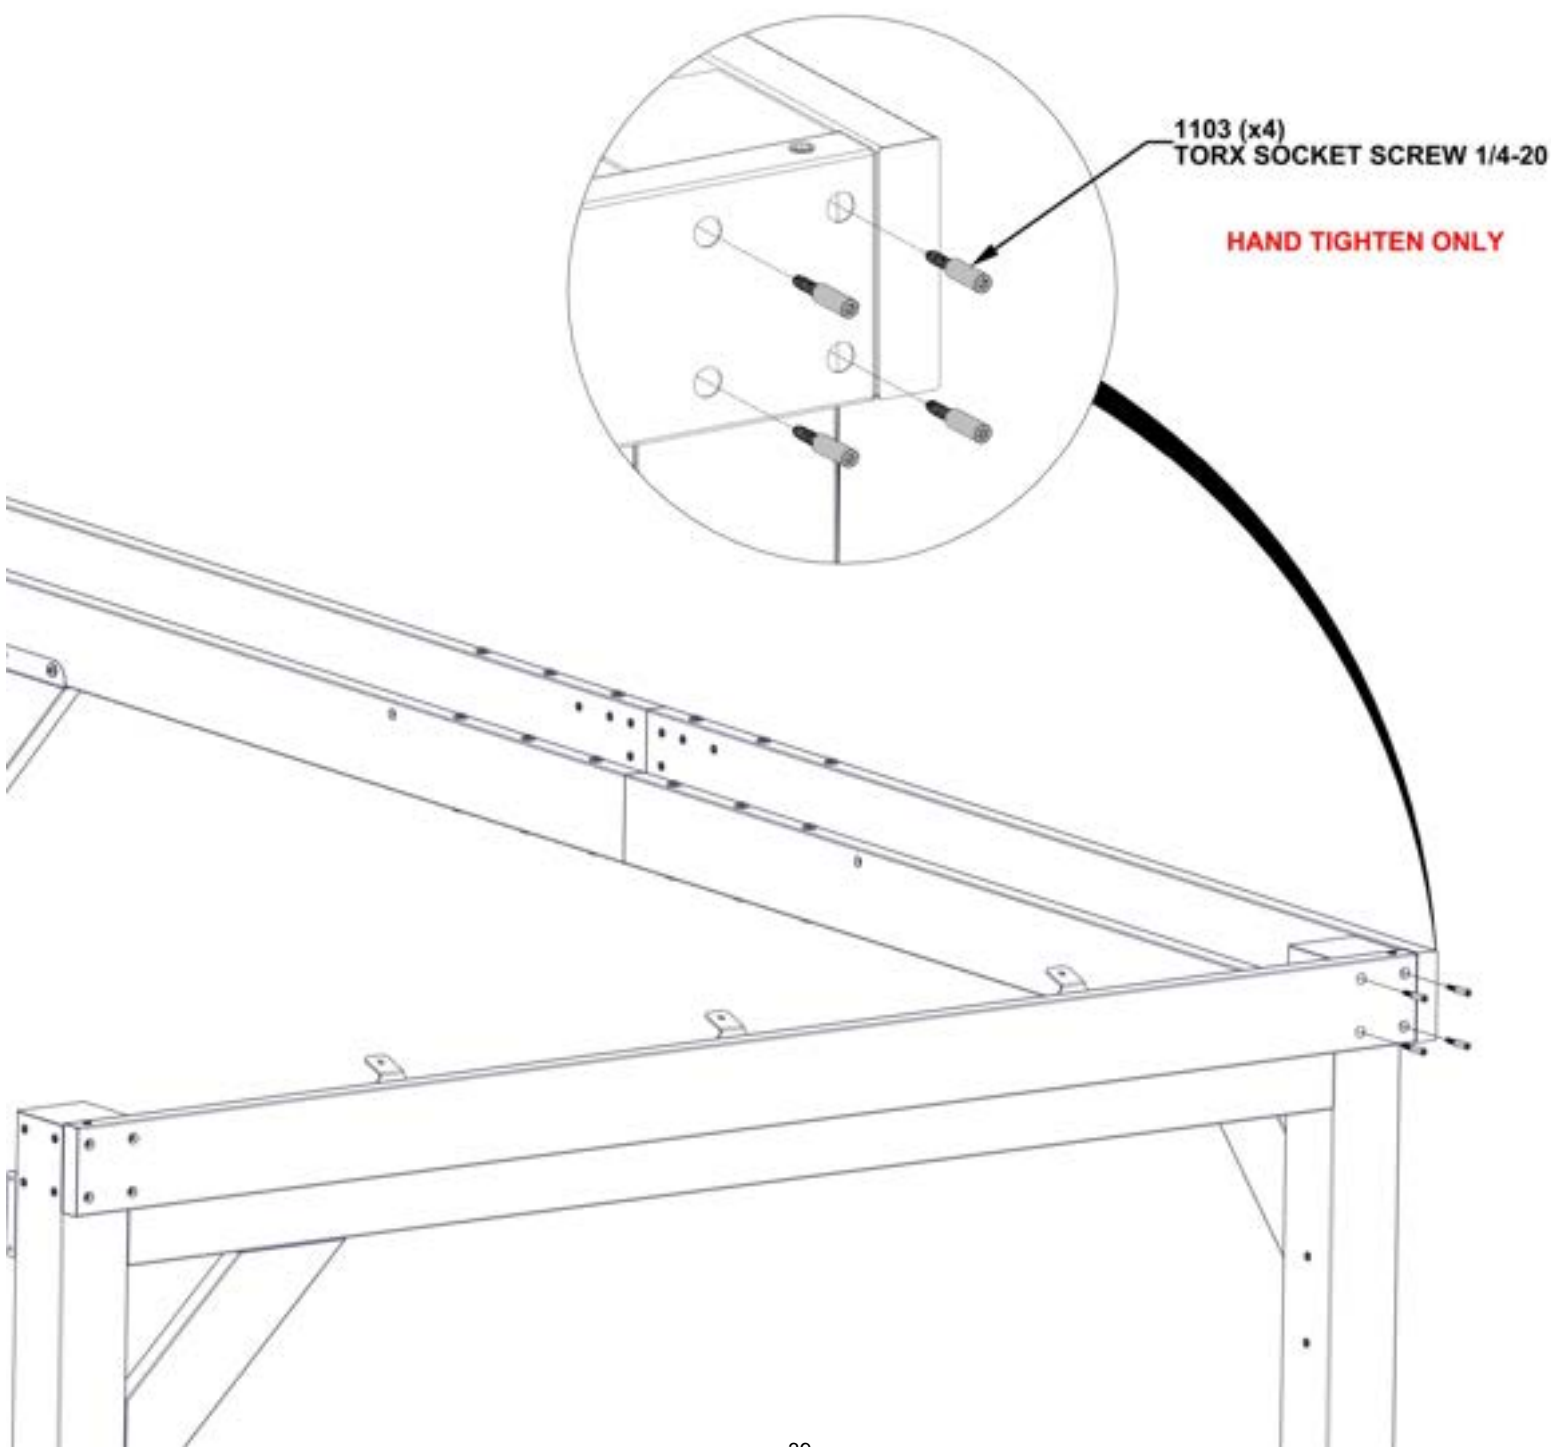


STEP 13C - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- SQUARE BEAM ASSEMBLY TO POST

1202 (x2)
TORX PAN HEAD 1/4-20x3/4 ASSY

TIGHTEN ALL HARDWARE

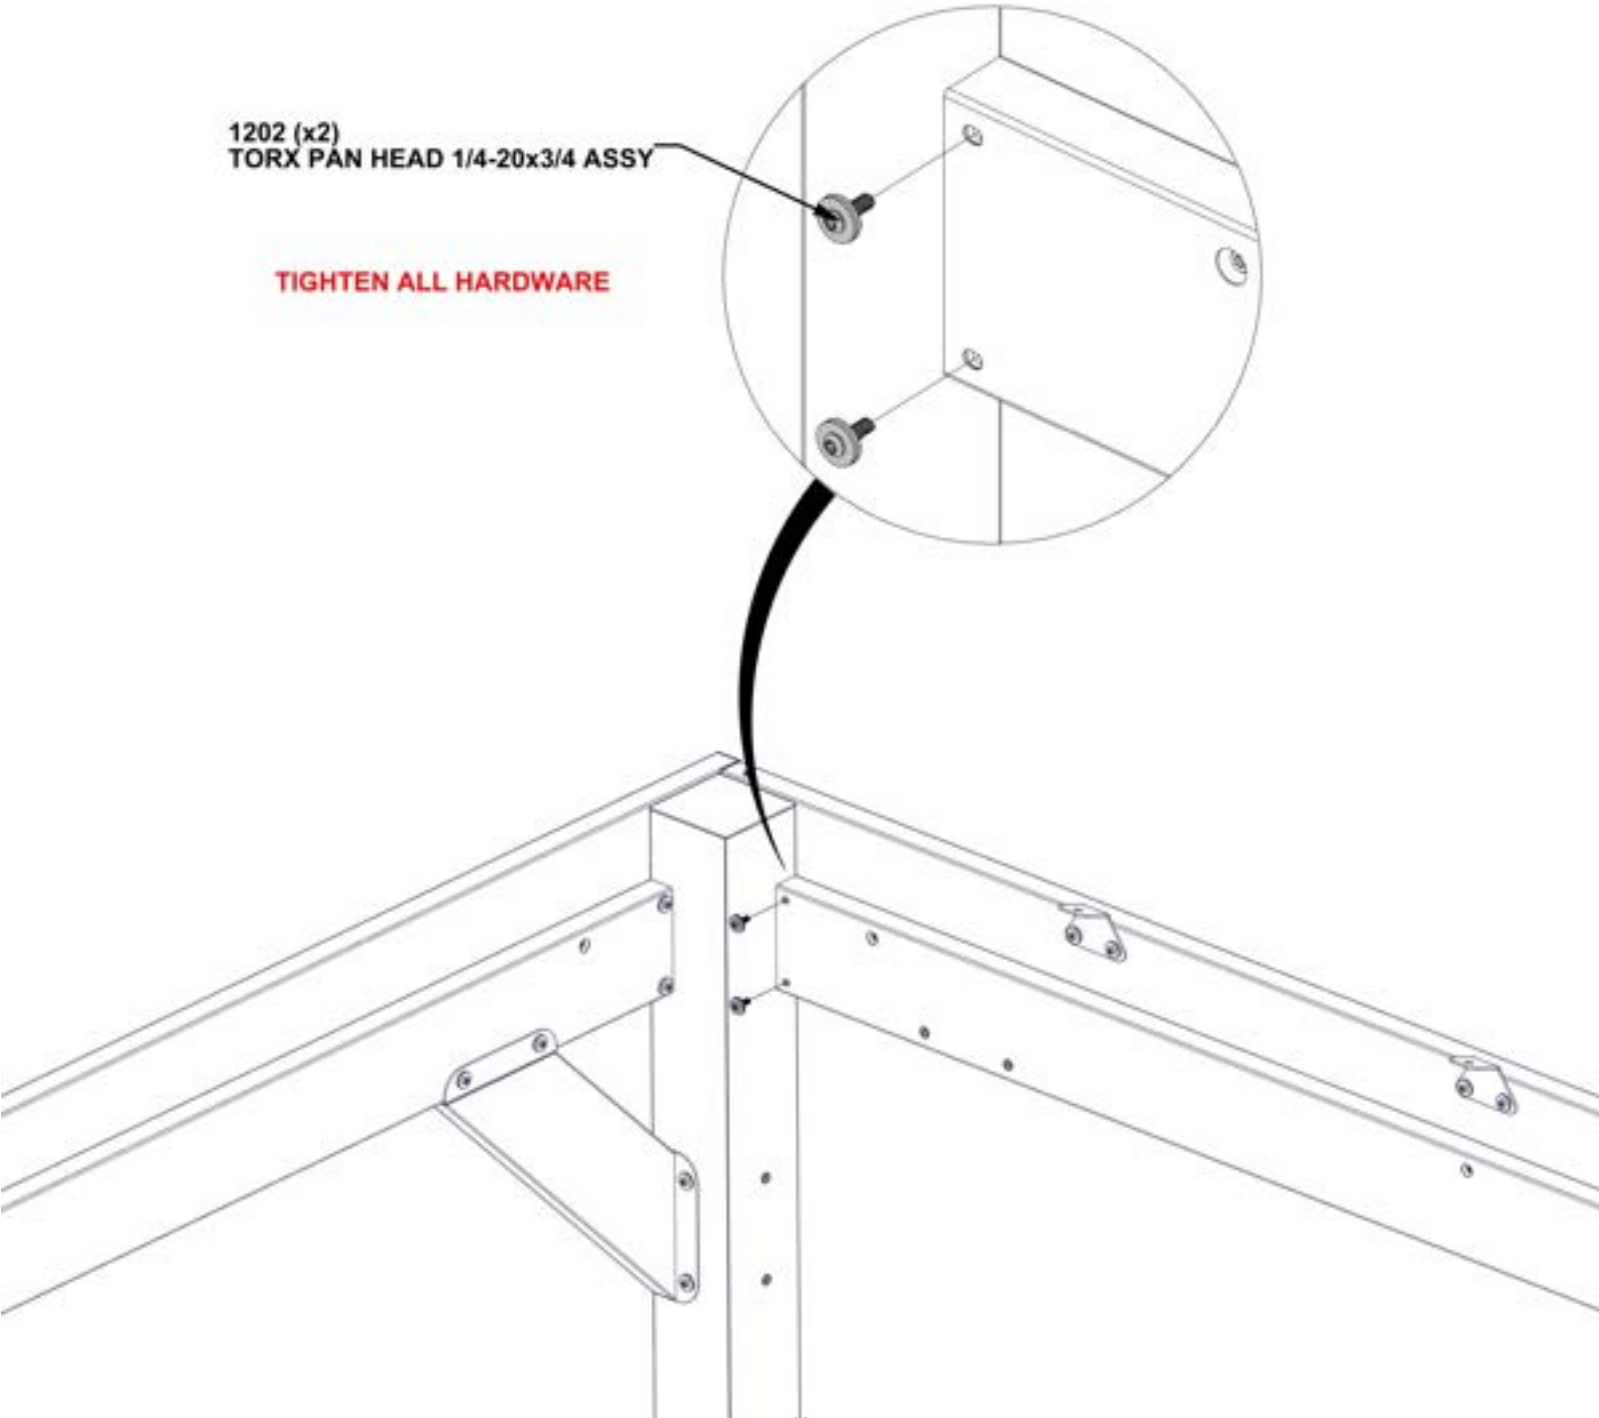


STEP 14 - FRAME ASSEMBLY



C02 CORBEL ASSEMBLY - A4M03526
(x1) 21 13/16"x5 1/4"x2 3/4" (70x134x553.5)


QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ATTACH CORBELS TO BEAM AND POST.
- SQUARE AS NEEDED BEFORE TIGHTENING ALL HARDWARE.

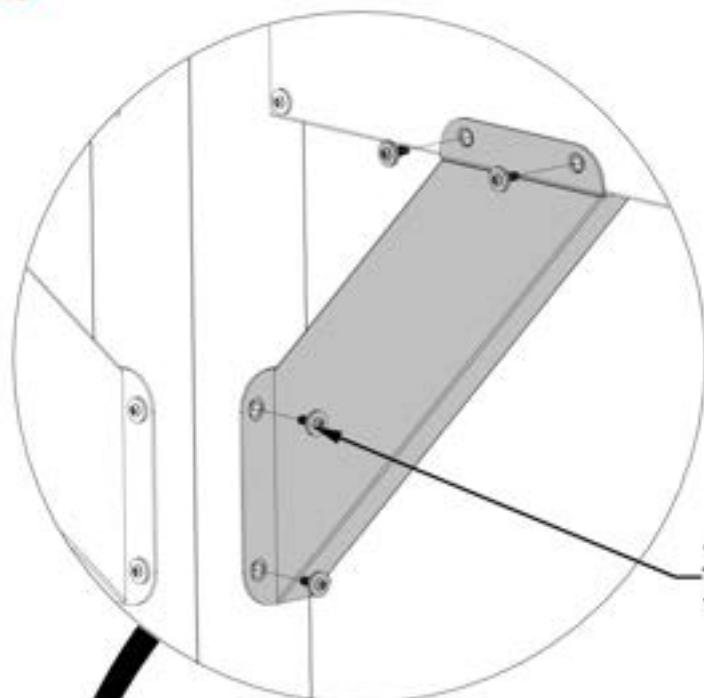

1202 (x4)
TORX PAN HEAD
1/4-20x3/4 ASSY


CORBEL BRACKET HOLES
WILL FIT AROUND THREADED
INSERTS AND FLUSH AGAINST
BEAM AND POST

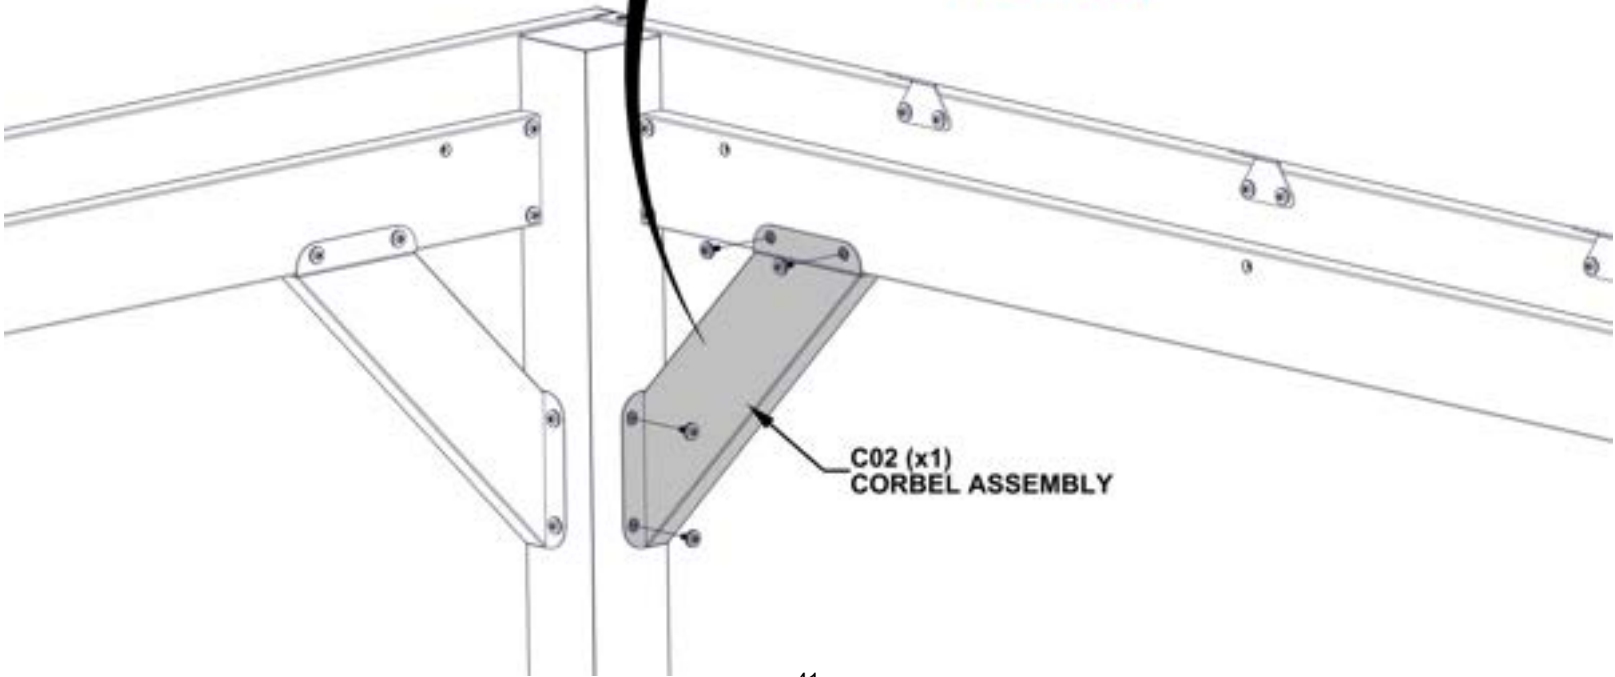


C02 (x1)
CORBEL ASSEMBLY

STEP 15 - POST ASSEMBLY


QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

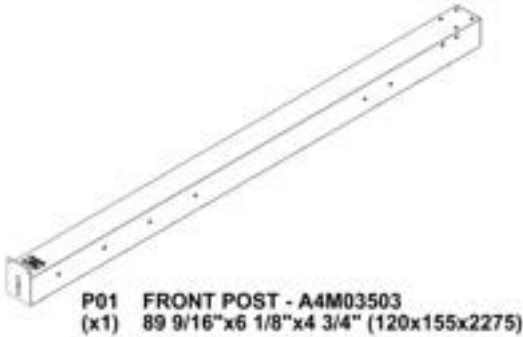

- FOR EASE OF ASSEMBLY, WE RECOMMEND USING SAW HORSES FOR STEPS 15 - 16.

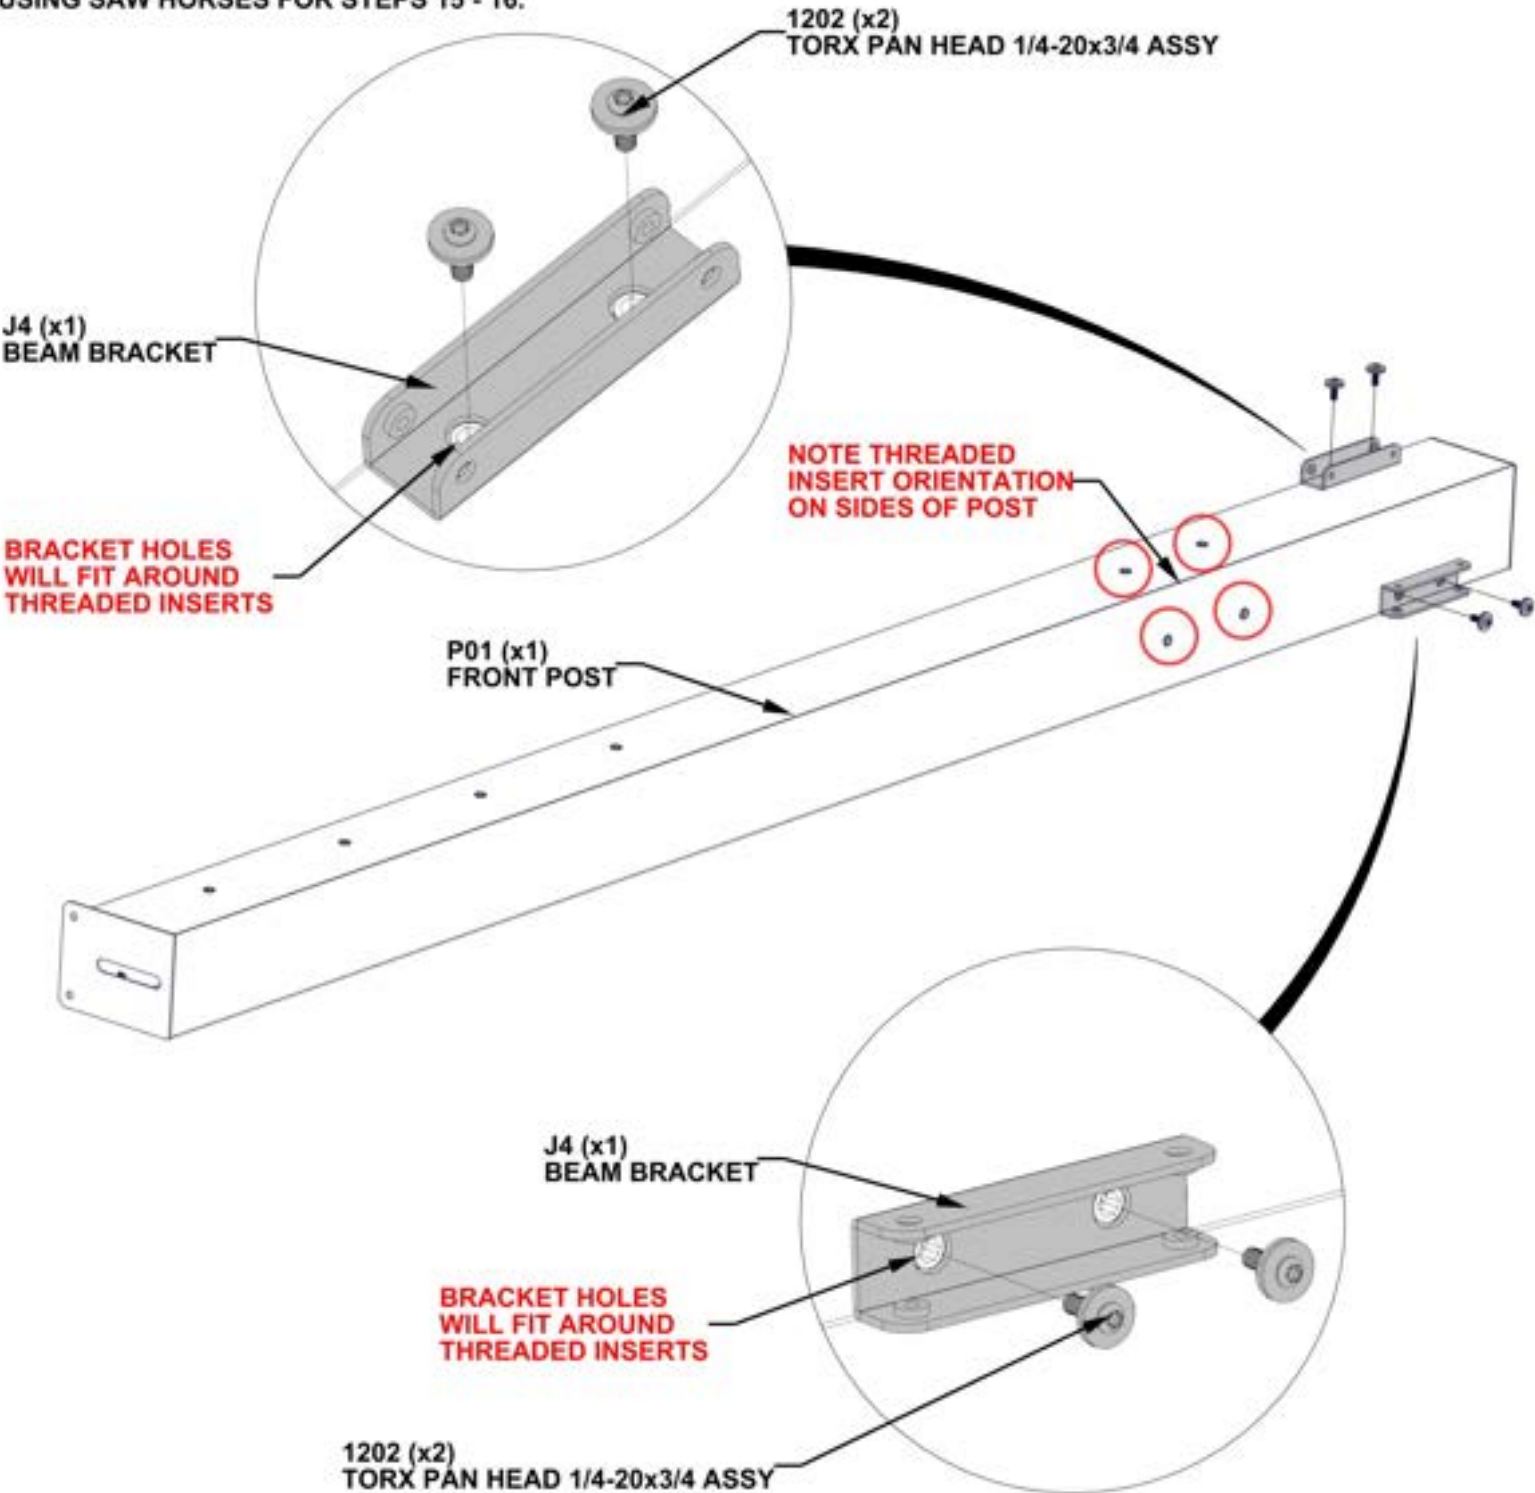


STEP 16A - FRAME ASSEMBLY

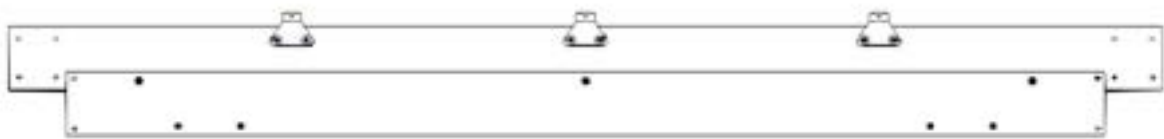


BEAM ASSEMBLY FROM STEPS 9 - 10

- SLIDE POST ASSEMBLY FROM STEP 15
INTO THE BEAM ASSEMBLY FROM STEPS 9 - 10.

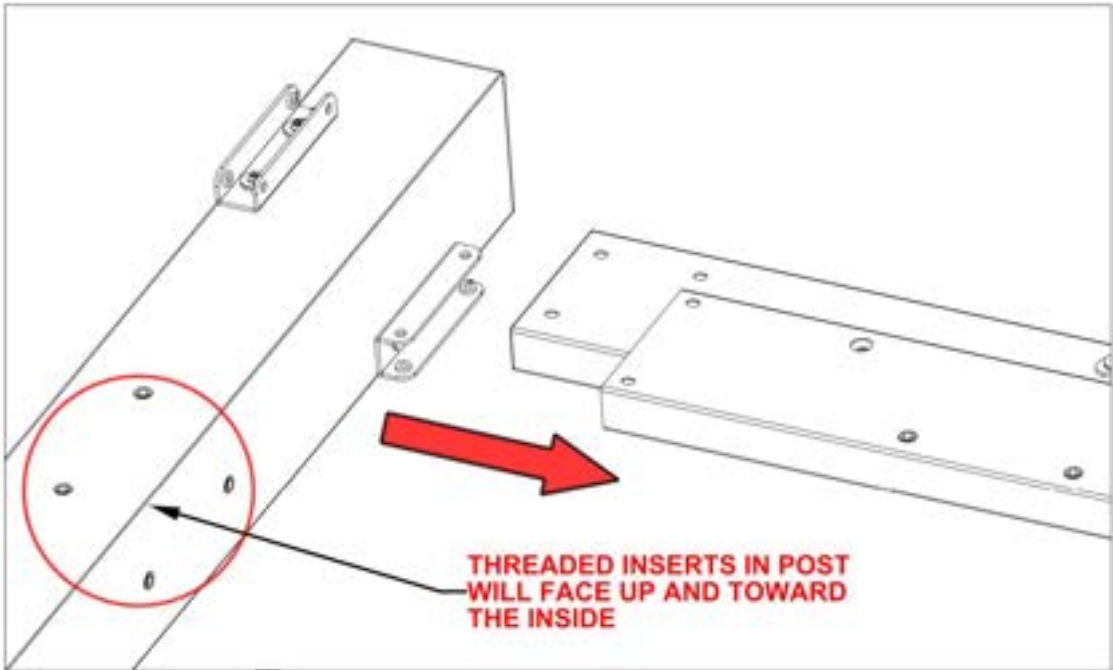

THREADED INSERTS IN POST
WILL FACE UP AND TOWARD
THE INSIDE

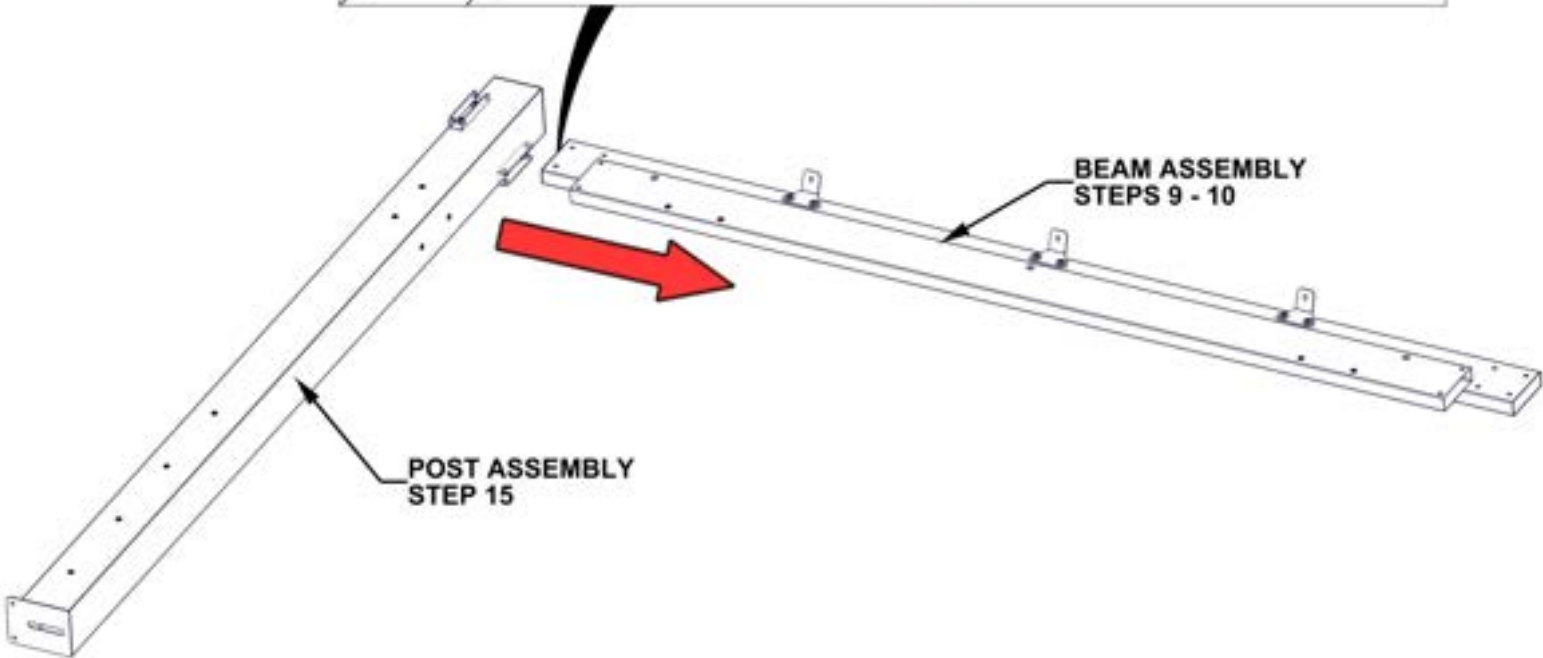

POST ASSEMBLY
STEP 15



BEAM ASSEMBLY
STEPS 9 - 10

STEP 16B - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

1202 (x2)
TORX PAN HEAD 1/4-20x3/4 ASSY

HAND TIGHTEN ONLY

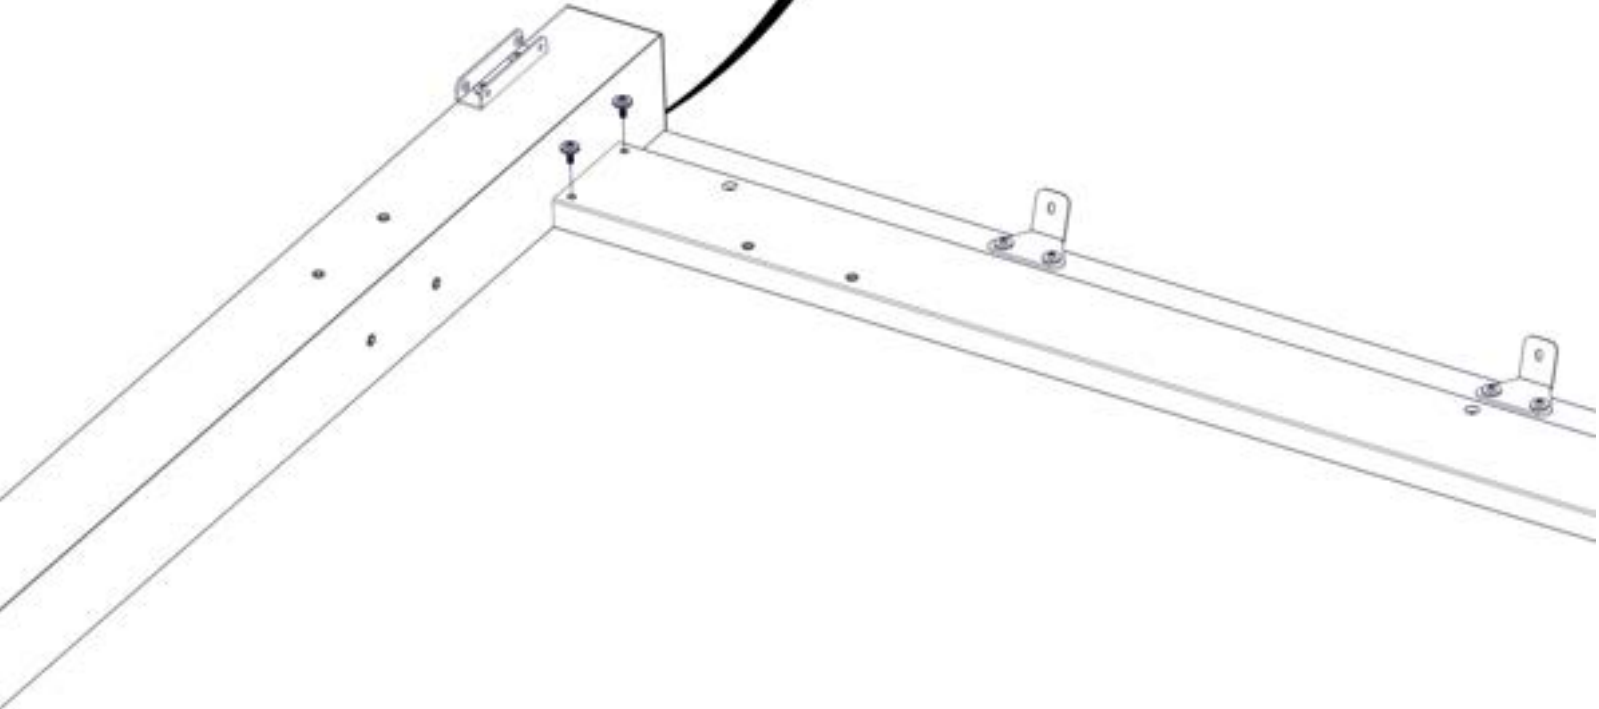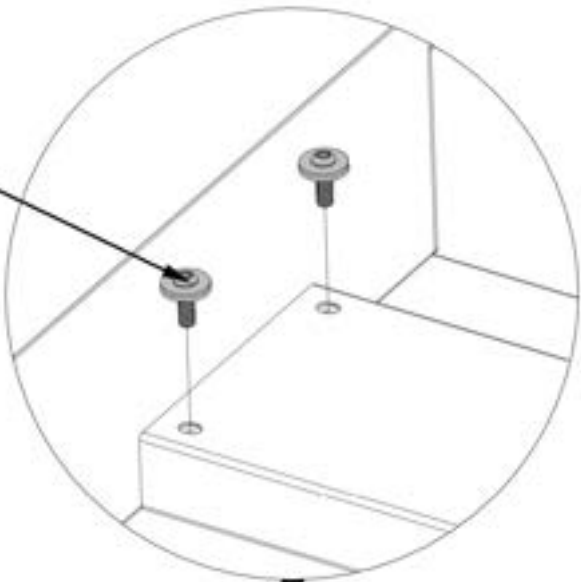


STEP 16C - FRAME ASSEMBLY



C02 CORBEL ASSEMBLY - A4M03526
(x1) 21 13/16"x5 1/4"x2 3/4" (70x134x553.5)


QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ATTACH CORBEL TO BEAM AND POST.
- SQUARE AS NEEDED BEFORE TIGHTENING ALL HARDWARE FROM PREVIOUS STEPS.

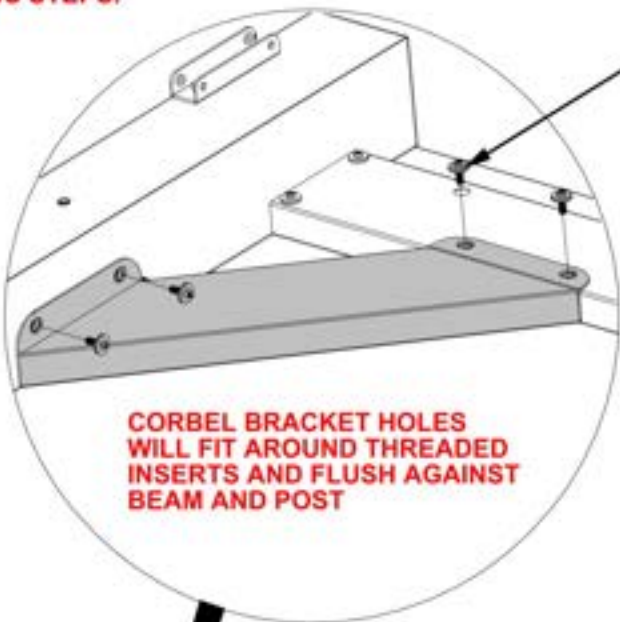

1202 (x4)
TORX PAN HEAD 1/4-20x3/4 ASSY

CORBEL BRACKET HOLES
WILL FIT AROUND THREADED
INSERTS AND FLUSH AGAINST
BEAM AND POST

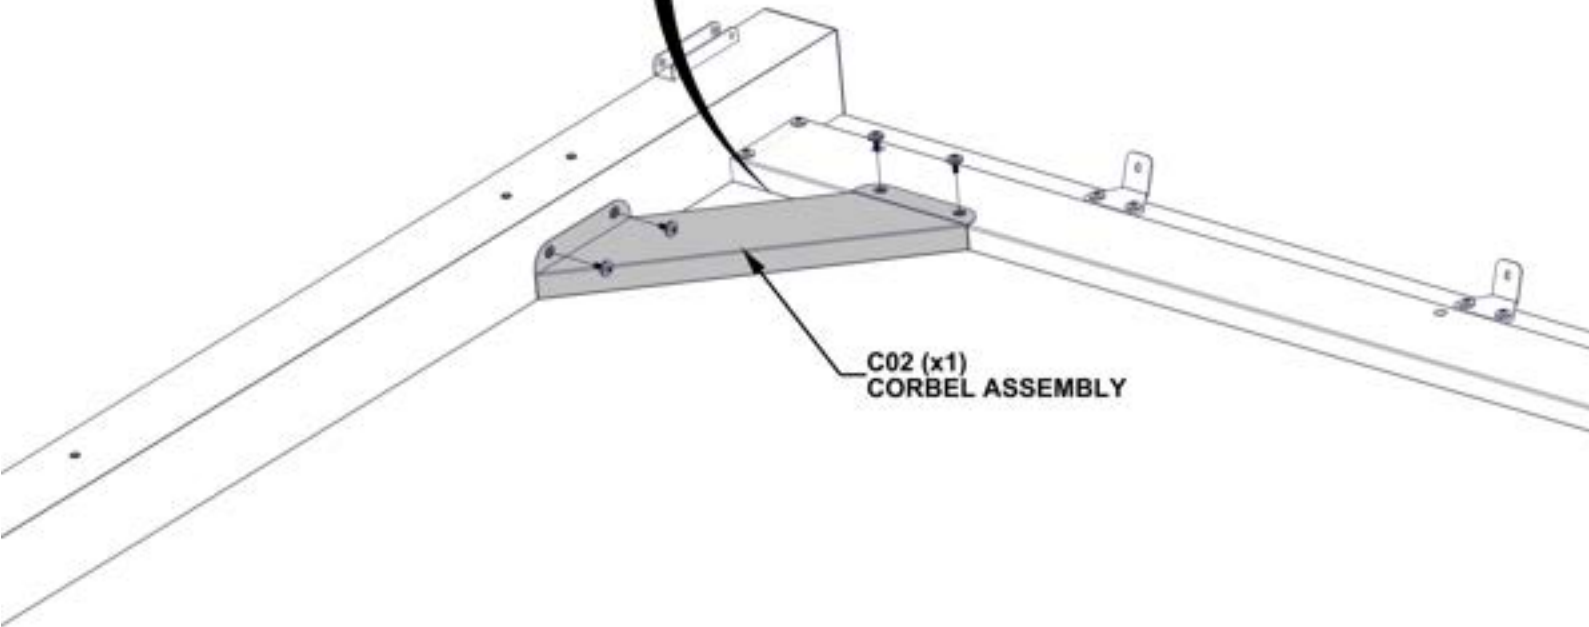


C02 (x1)
CORBEL ASSEMBLY

STEP 16D - FRAME ASSEMBLY


QTY	PartNo	DESCRIPTION
4	H101103	TORX SOCKET SCREW 1/4-20

- WITH AN ADDITIONAL PERSON, FLIP POST AND BEAM ASSEMBLY

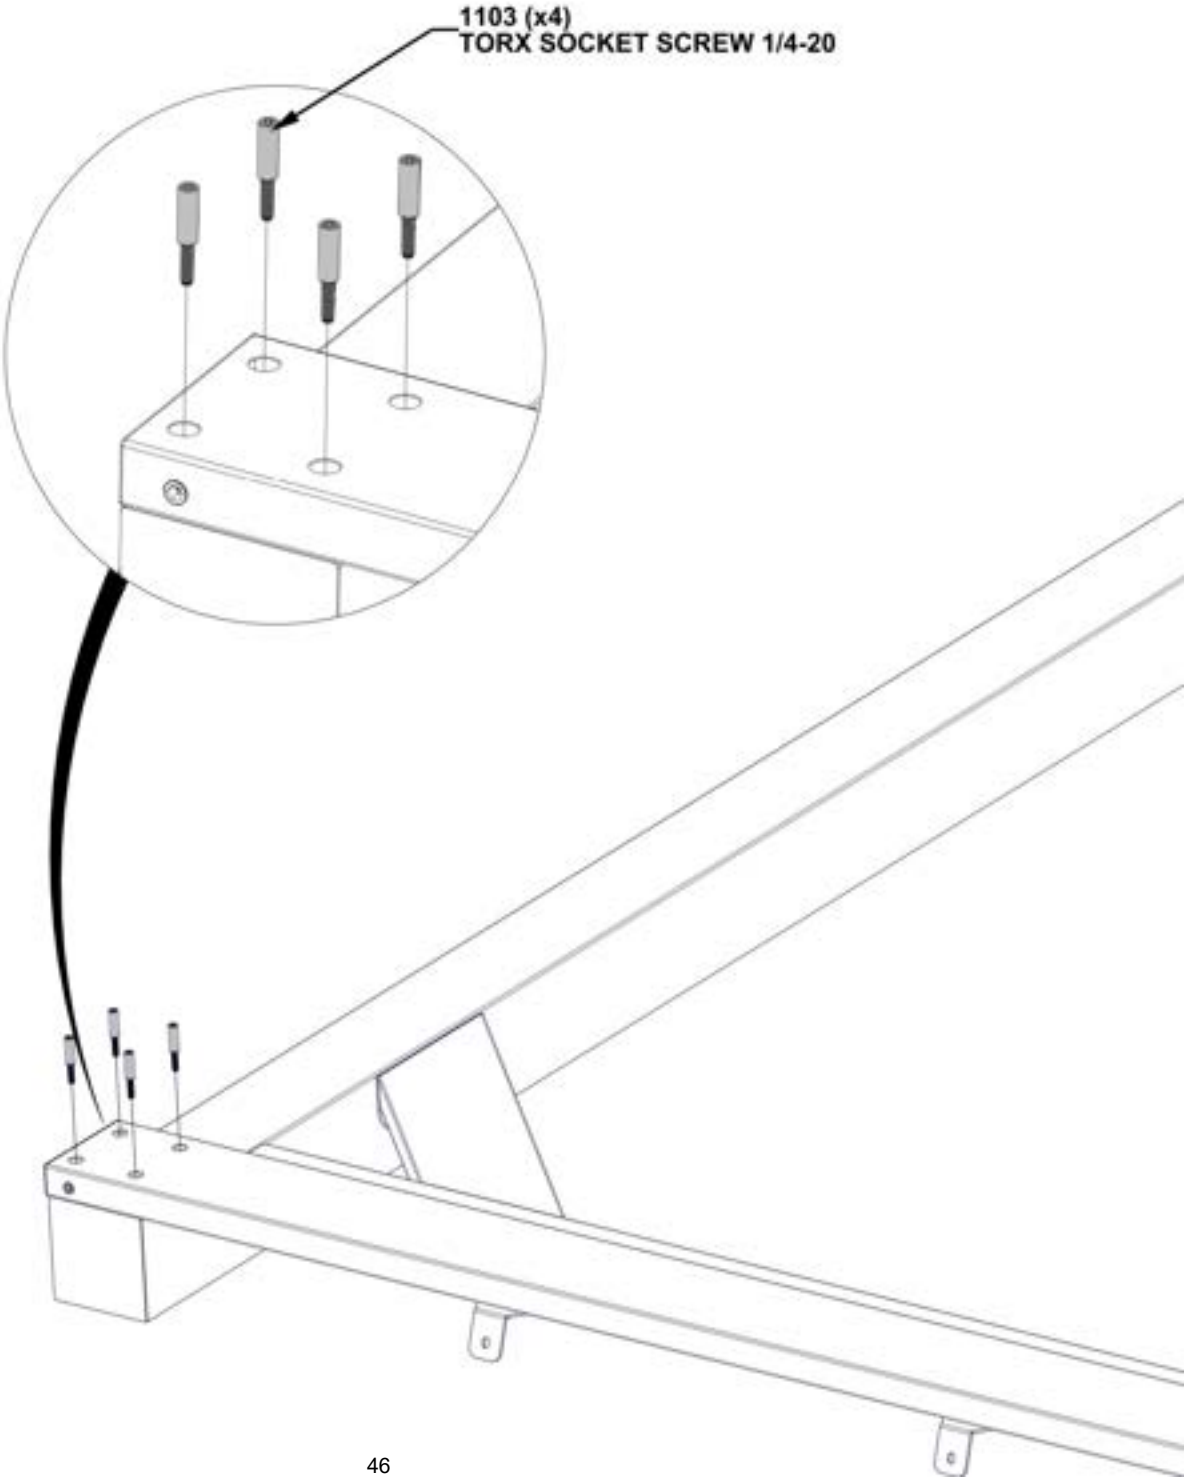


STEP 17A - FRAME ASSEMBLY

- WITH AT LEAST TWO OTHER PEOPLE, ATTACH BEAM AND POST ASSEMBLIES BY SLIDING IN PLACE.

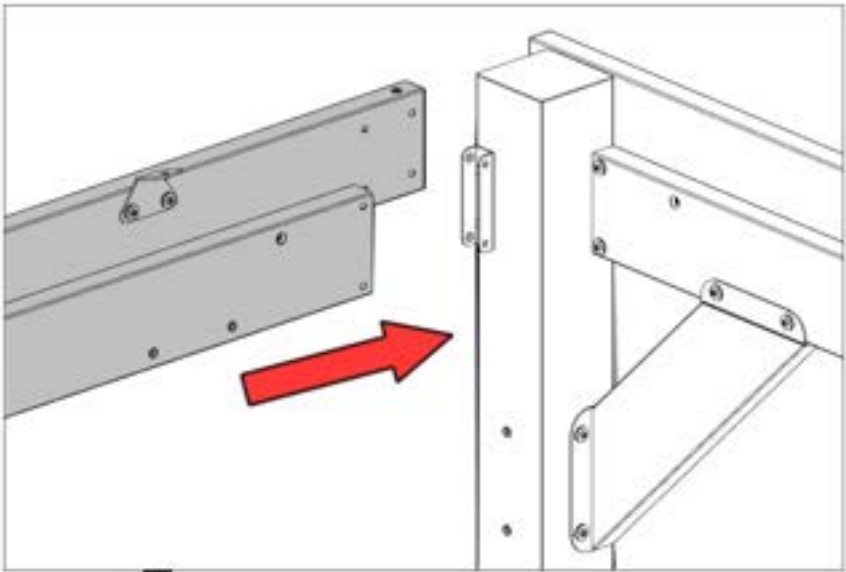


BEAM AND POST
ASSEMBLY STEPS 15 - 16

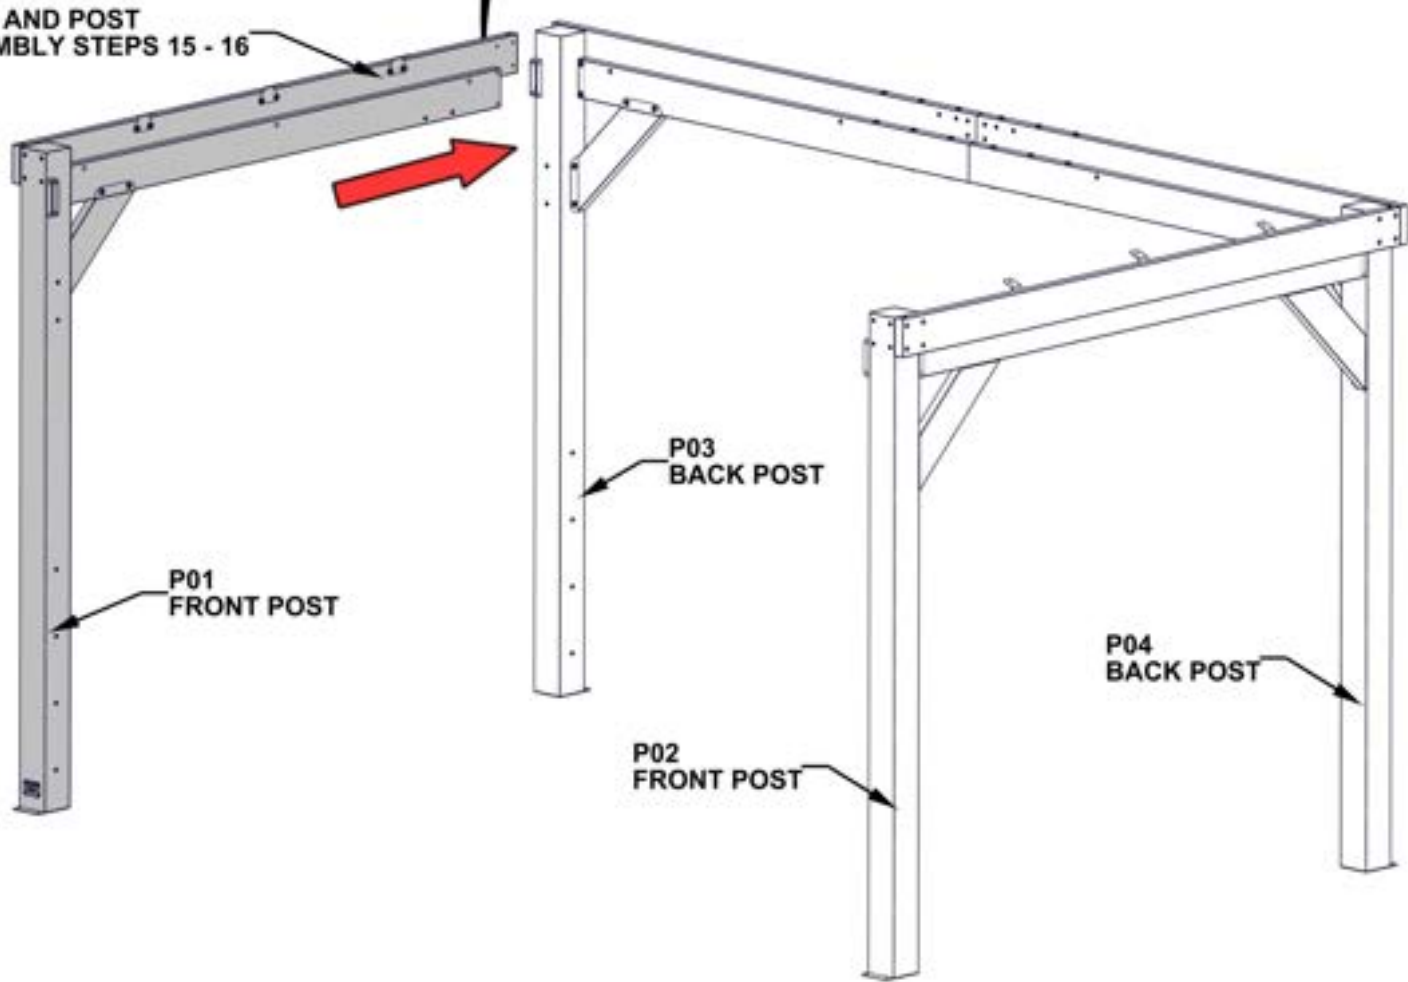

STEP 17B - FRAME ASSEMBLY


QTY	PartNo	DESCRIPTION
4	H101103	TORX SOCKET SCREW 1/4-20

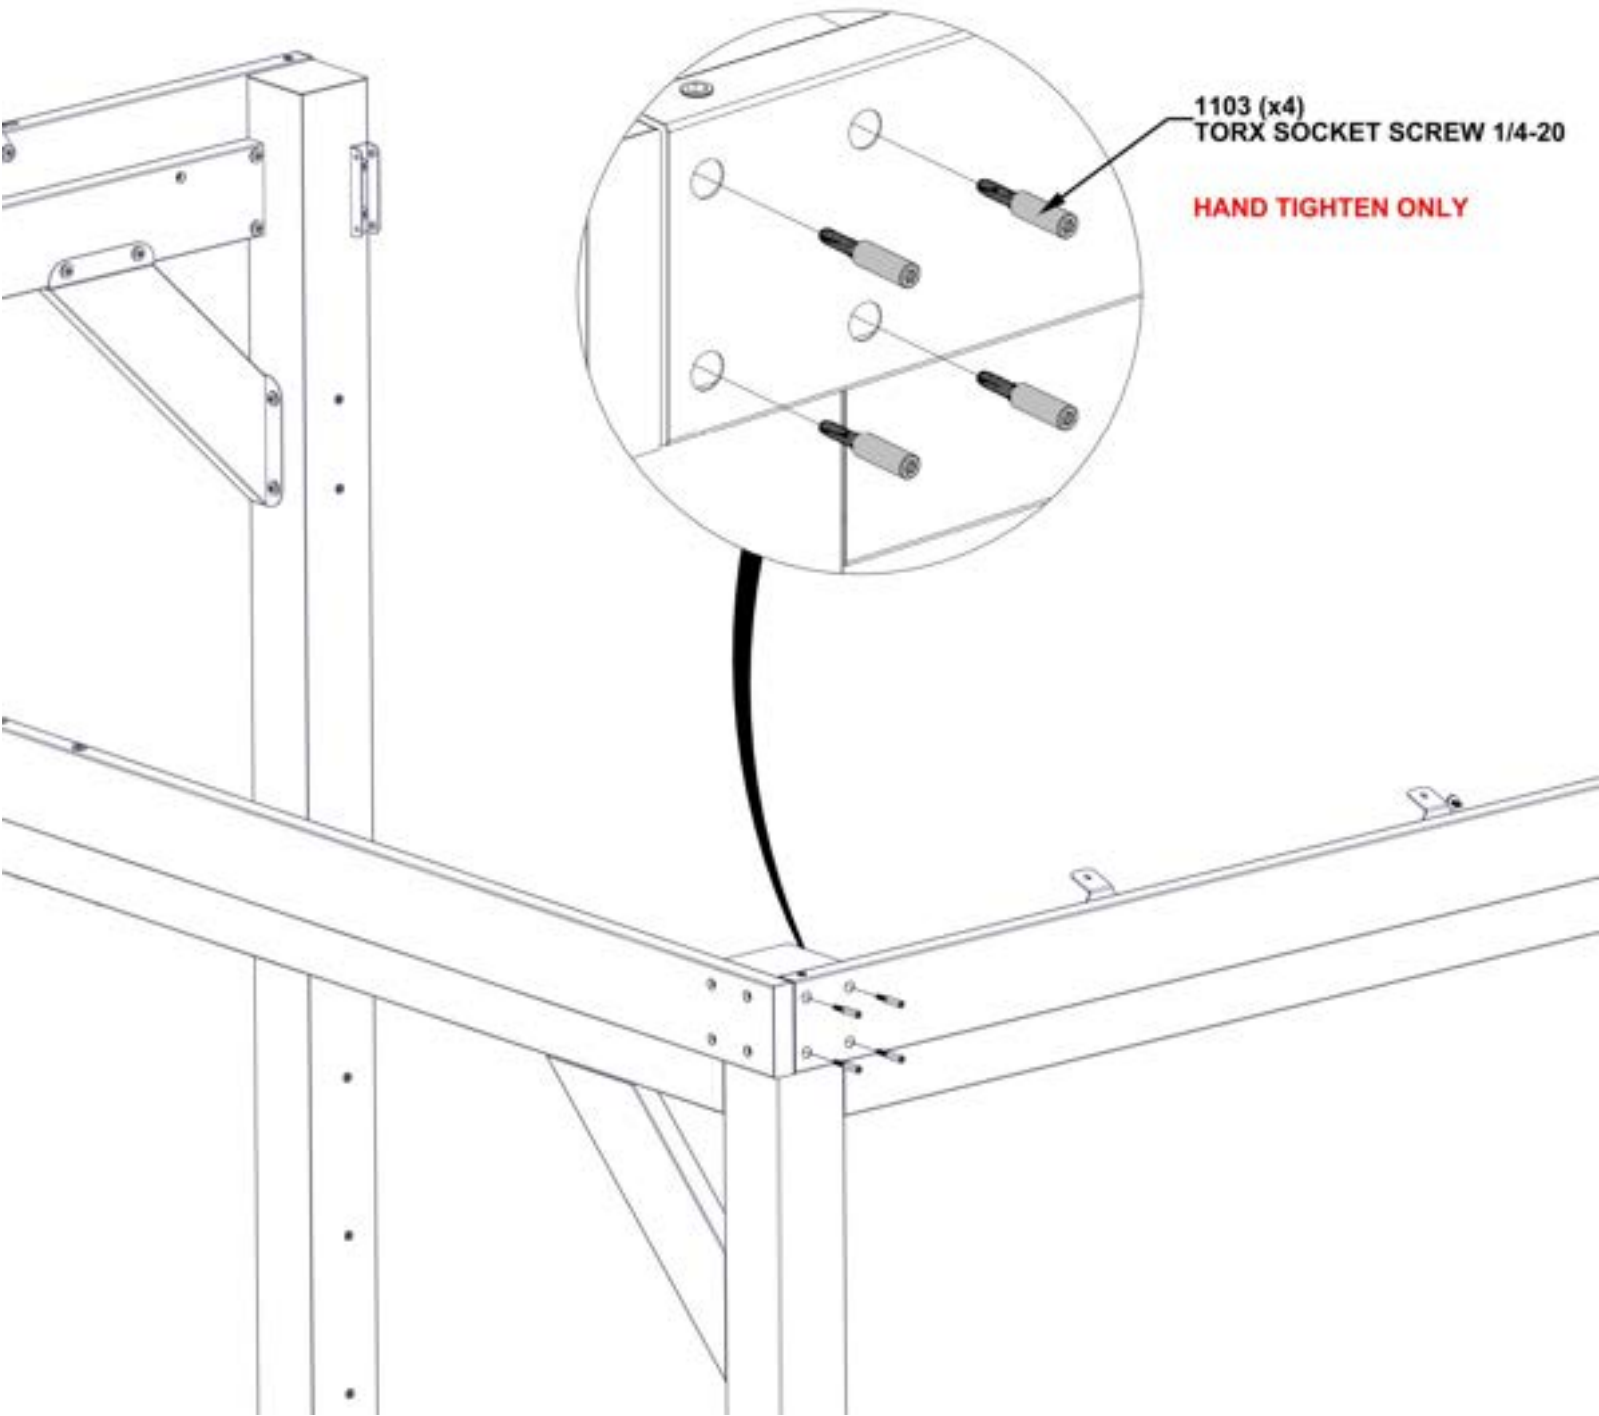

STEP 17C - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- SQUARE BEAM ASSEMBLY TO POST

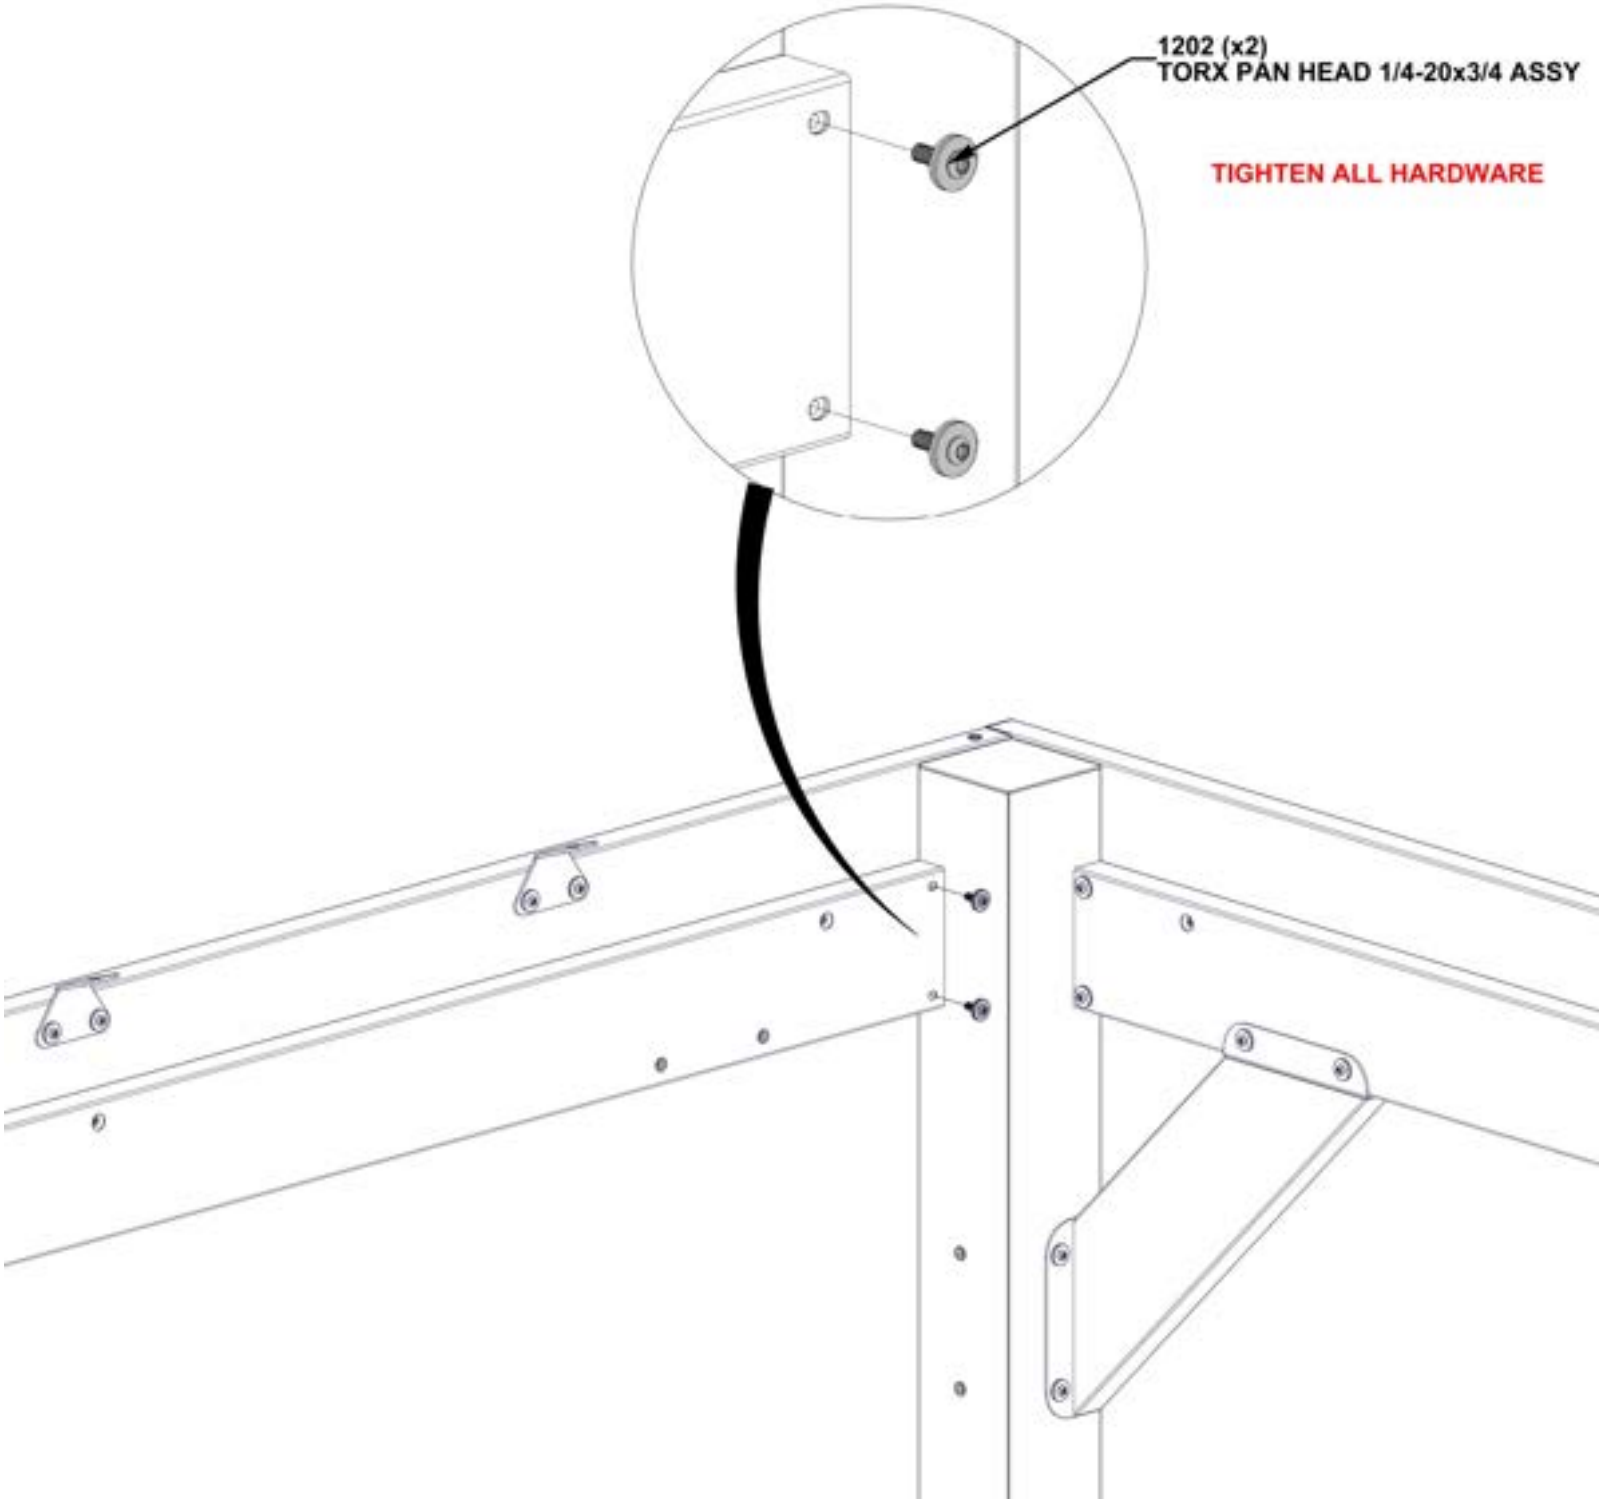


STEP 18 - FRAME ASSEMBLY



C01 CORBEL ASSEMBLY - A4M03525
(x1) 21 13/16"x5 1/4"x2 3/4" (70x134x553.5)


QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ATTACH CORBELS TO BEAM AND POST.
- SQUARE AS NEEDED BEFORE TIGHTENING ALL HARDWARE.

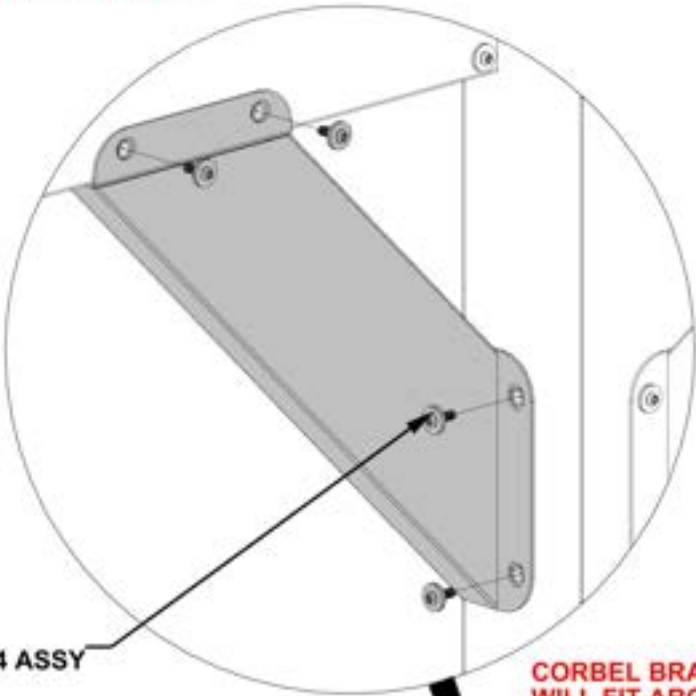


1202 (x4)
TORX PAN HEAD 1/4-20x3/4 ASSY

CORBEL BRACKET HOLES
WILL FIT AROUND THREADED
INSERTS AND FLUSH AGAINST
BEAM AND POST

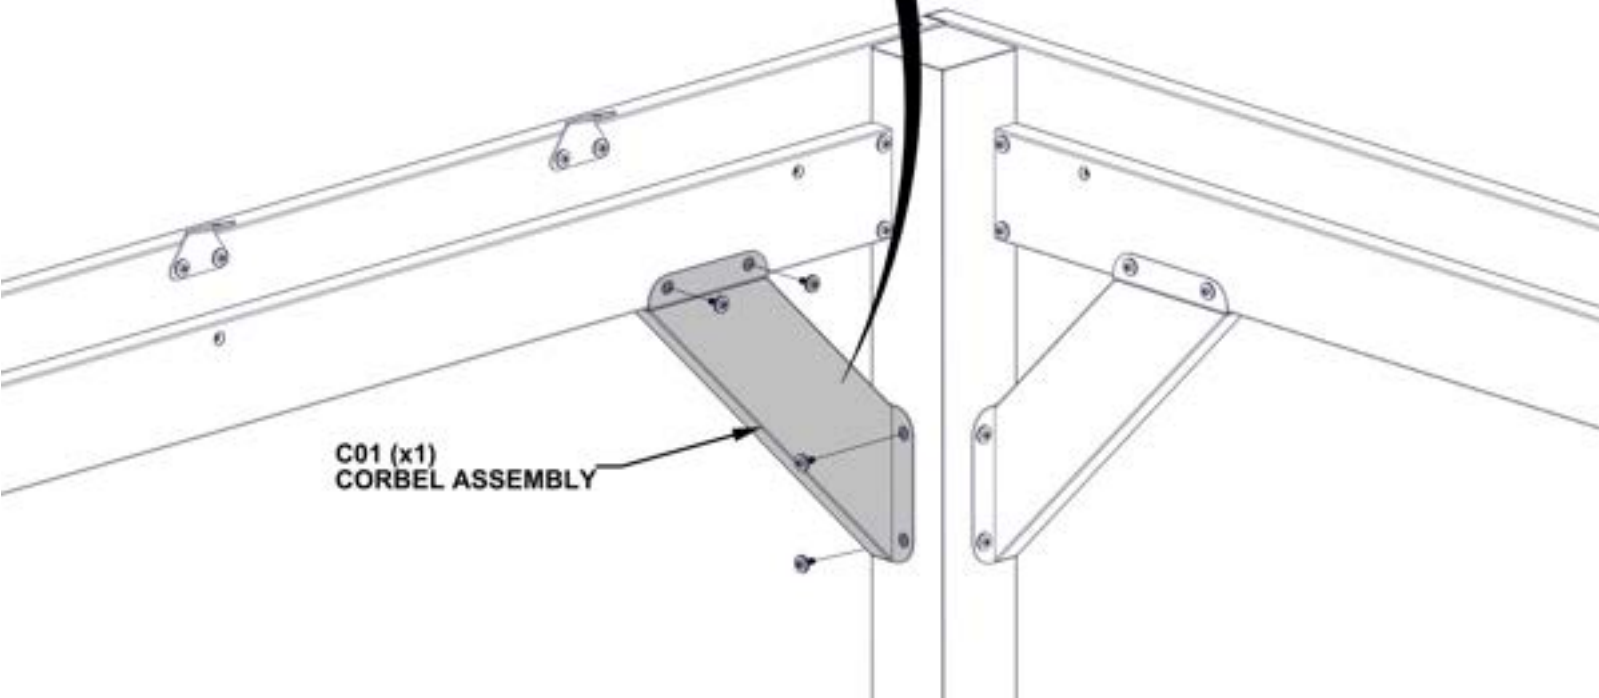


C01 (x1)
CORBEL ASSEMBLY

STEP 19A - FRAME ASSEMBLY

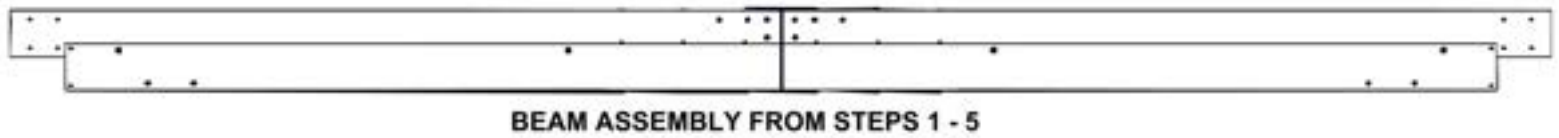


- WITH AT LEAST TWO OTHER PEOPLE, SPREAD FRONT POST APART ENOUGH TO ATTACH BEAM ASSEMBLY INTO BEAM BRACKETS.

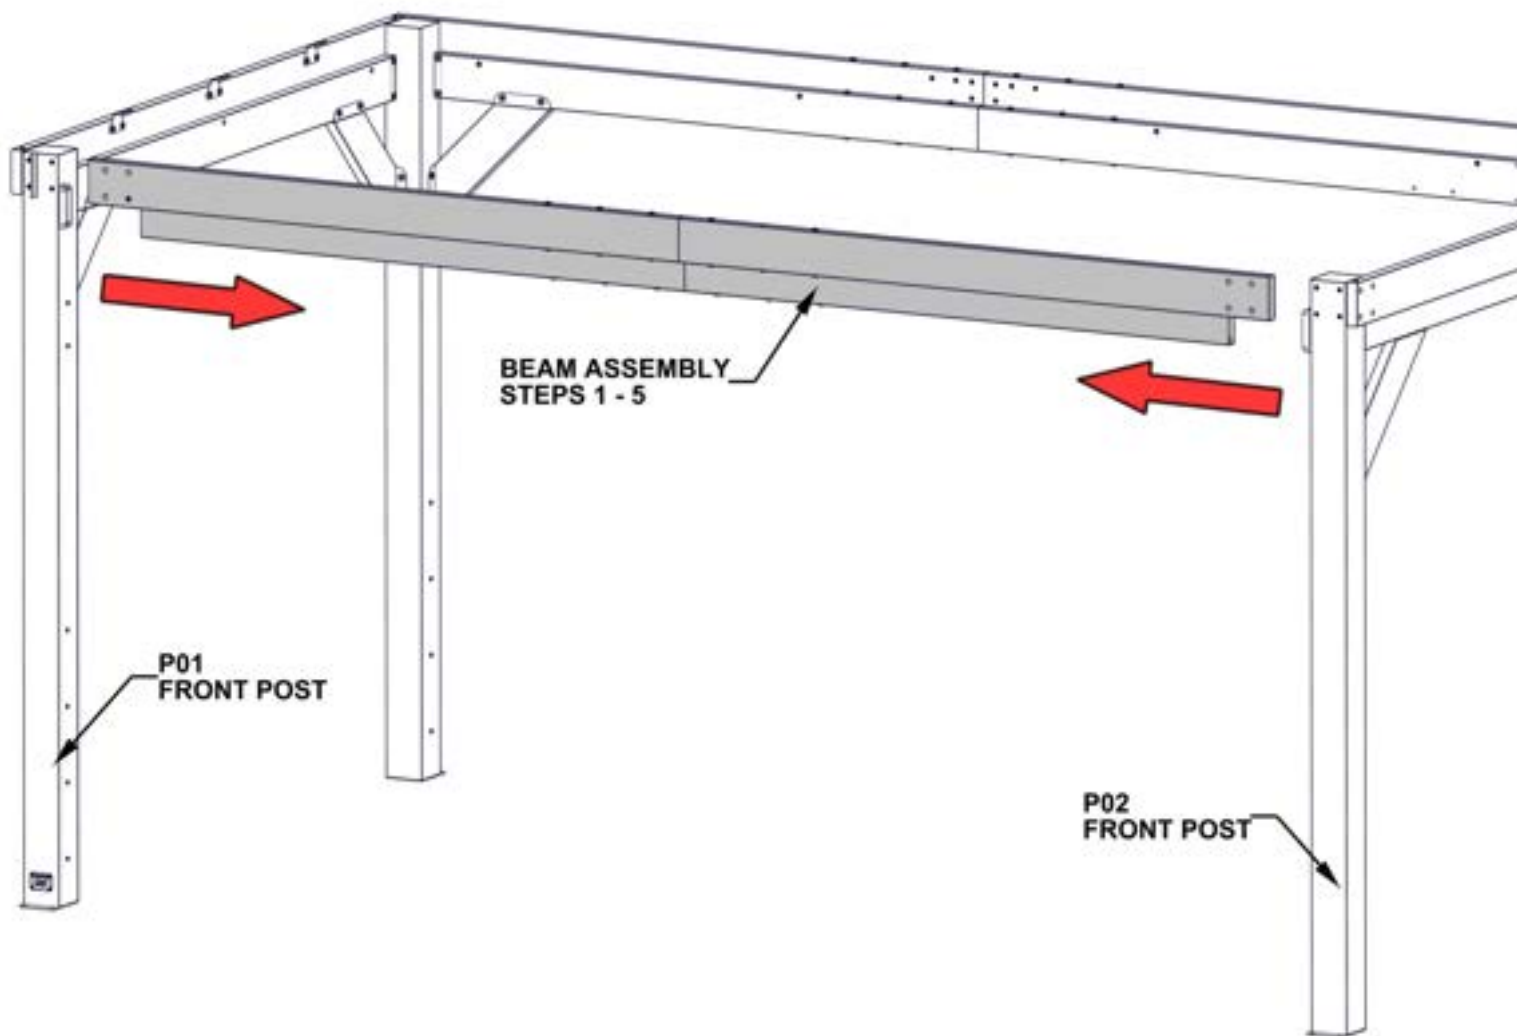

STEP 19B - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
8	H101103	TORX SOCKET SCREW 1/4-20

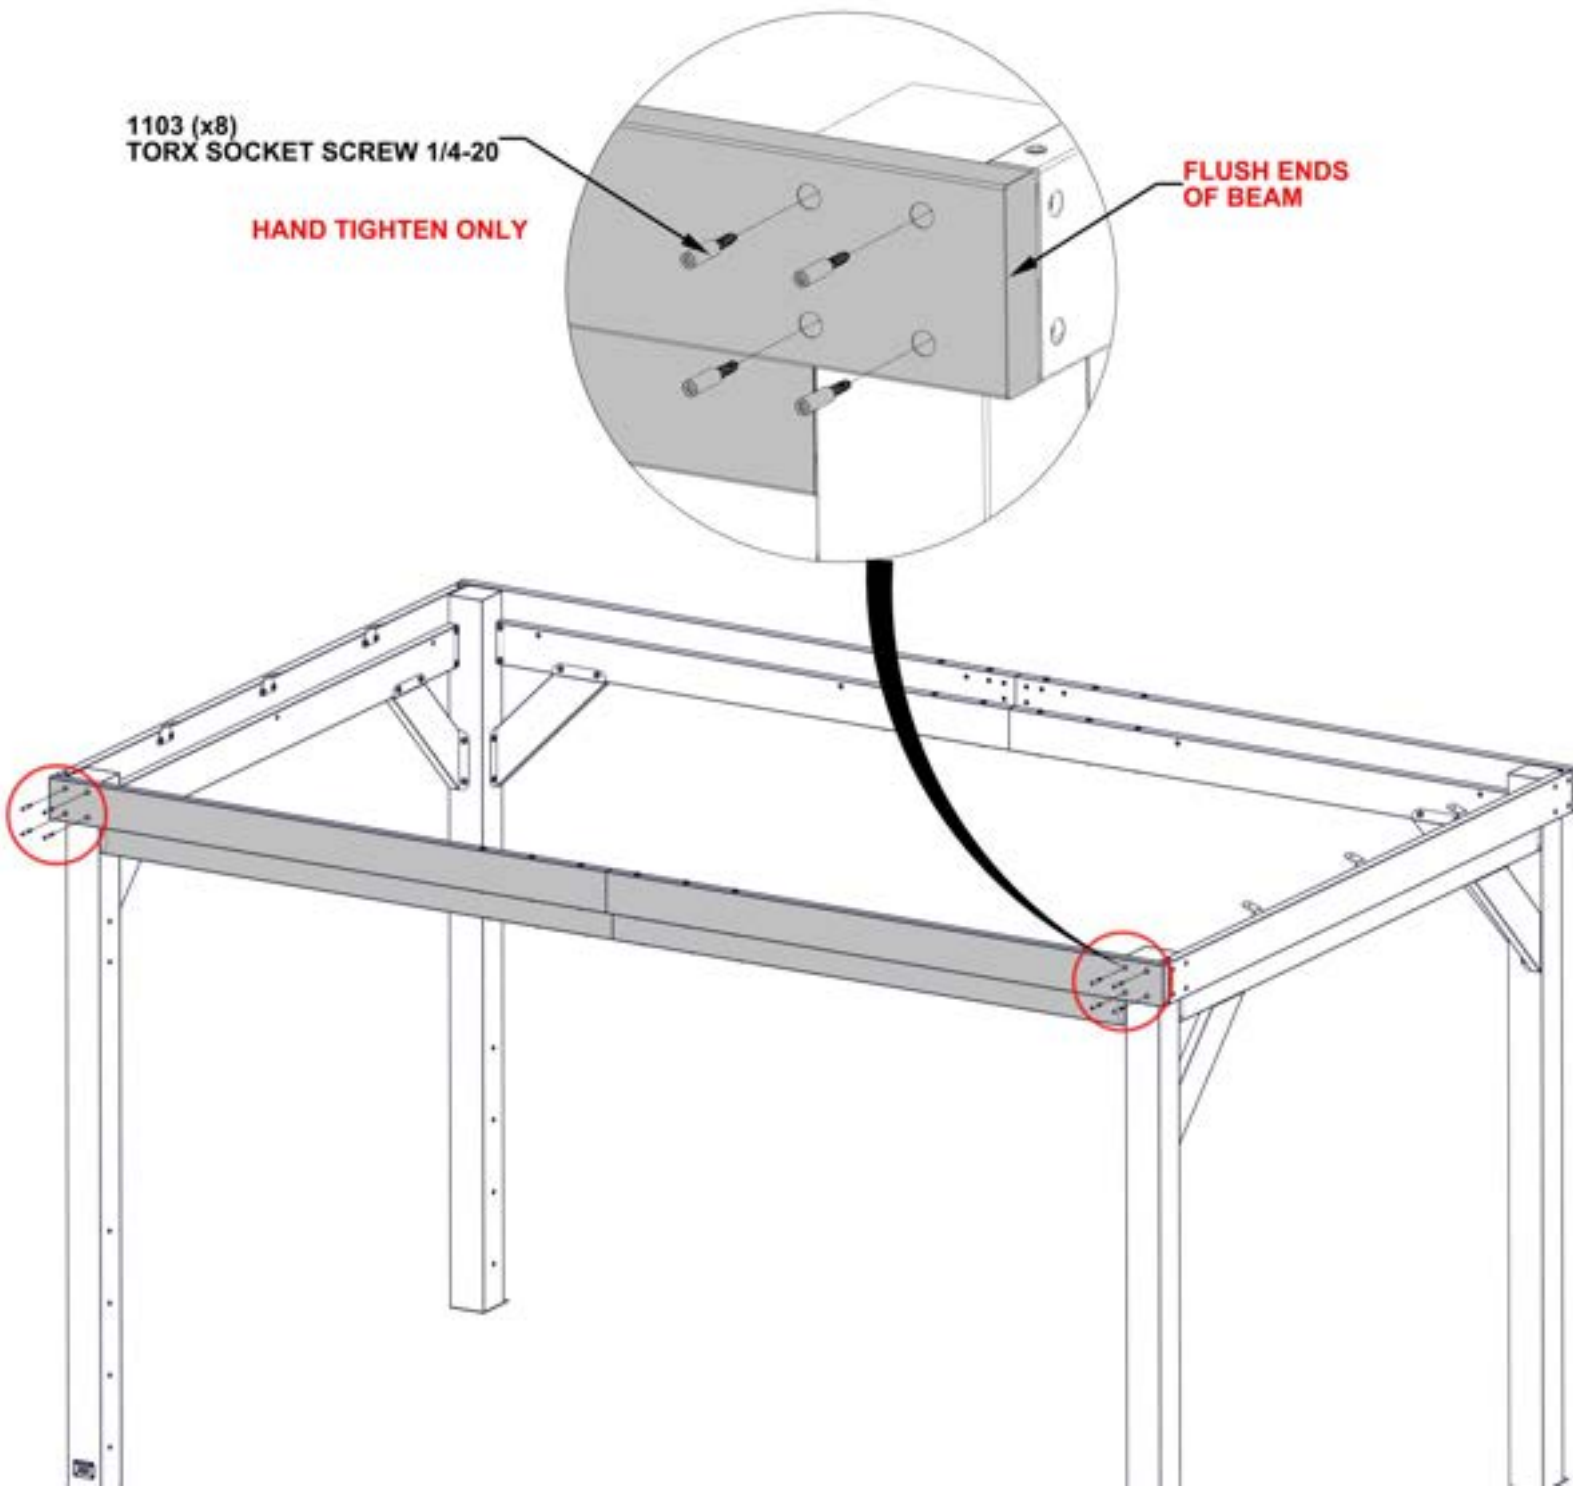


STEP 19C - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- SQUARE BEAM ASSEMBLY TO POST

1202 (x4)
TORX PAN HEAD 1/4-20x3/4 ASSY

TIGHTEN ALL HARDWARE

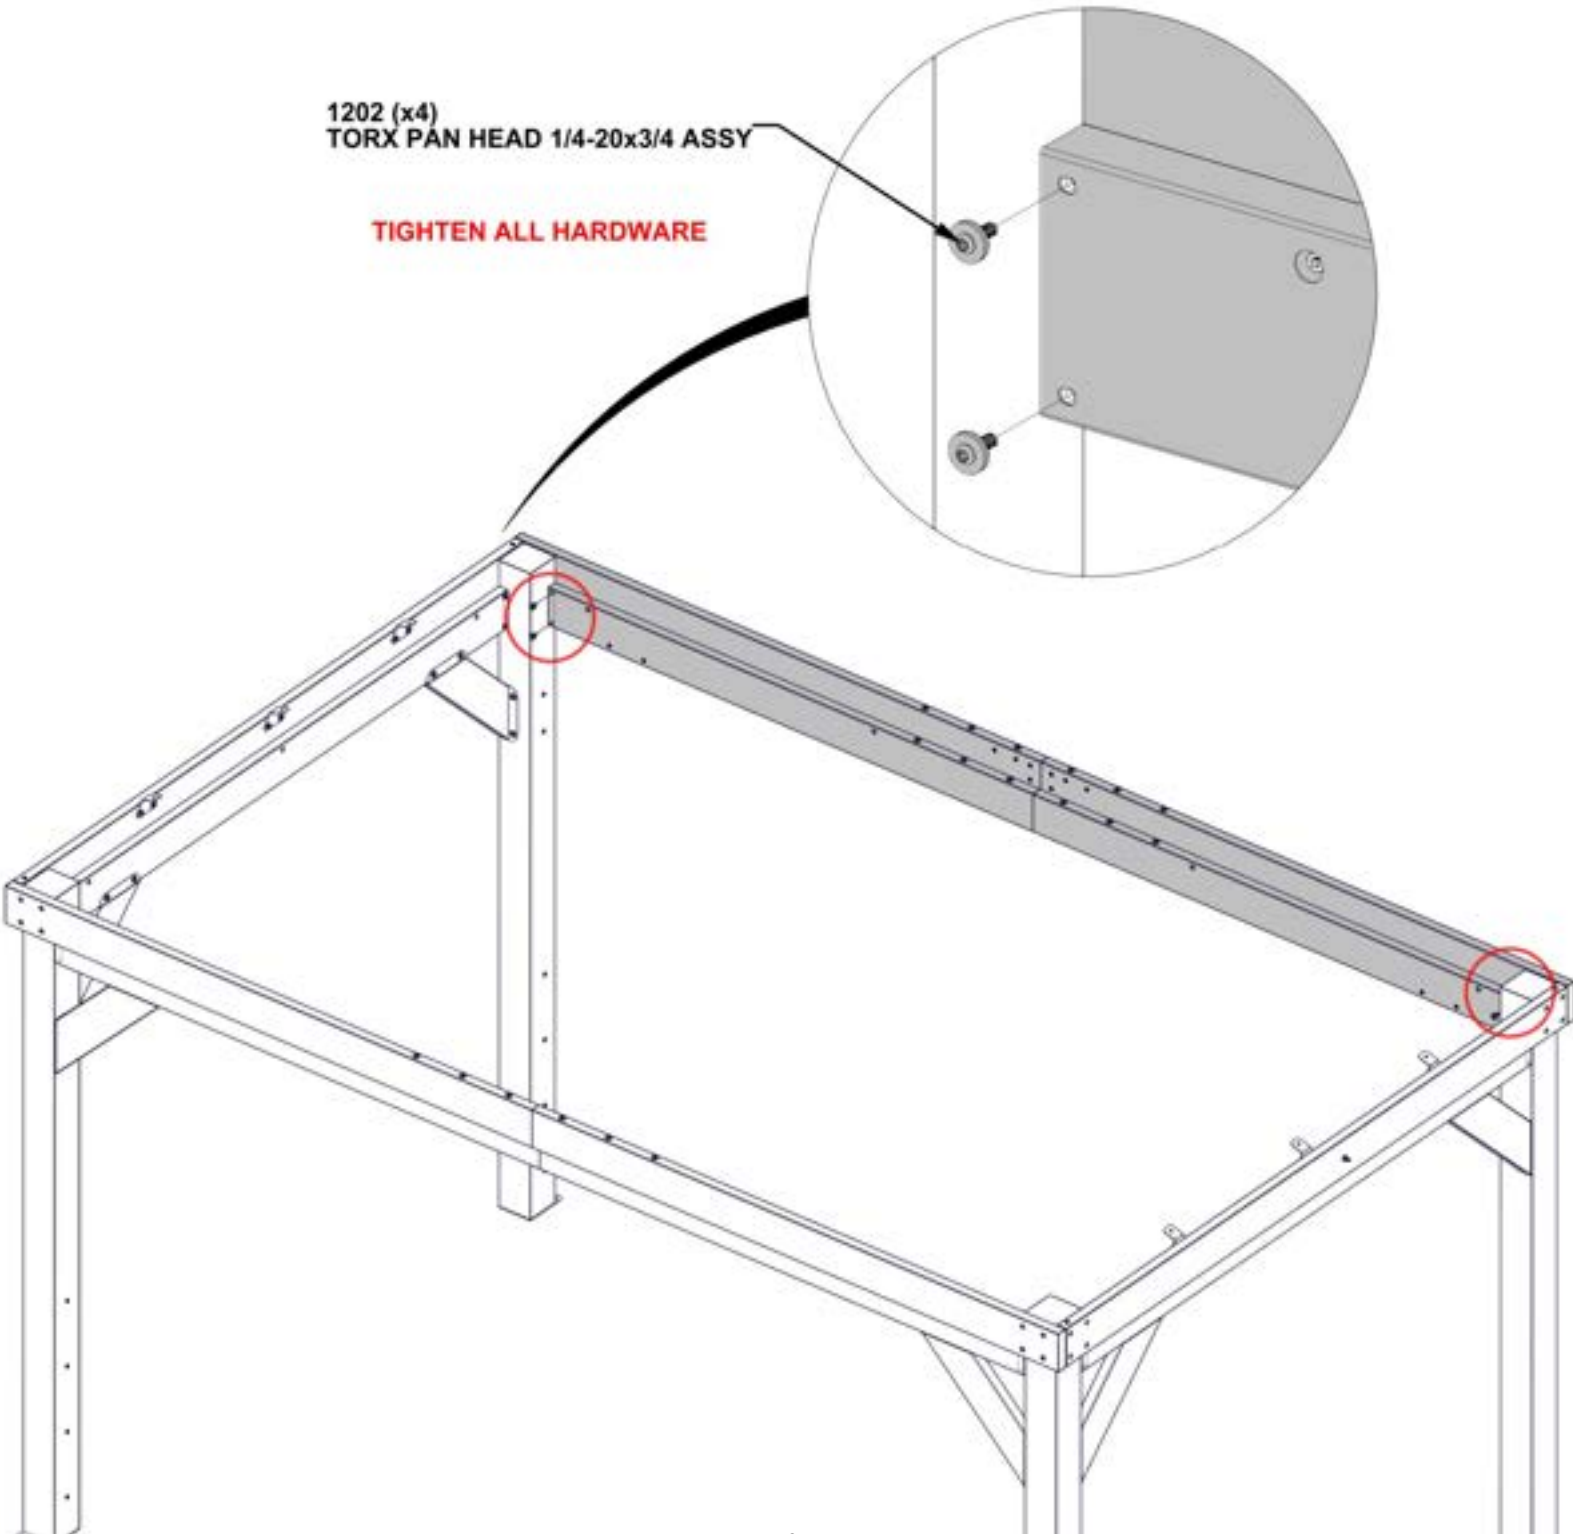

STEP 20 - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




C01 CORBEL ASSEMBLY - A4M03525
(x1) 21 13/16"x5 1/4"x2 3/4" (70x134x553.5)



C02 CORBEL ASSEMBLY - A4M03526
(x1) 21 13/16"x5 1/4"x2 3/4" (70x134x553.5)


- ATTACH CORBELS TO BEAM AND POST.
- SQUARE AS NEEDED BEFORE TIGHTENING ALL HARDWARE FROM PREVIOUS STEPS.

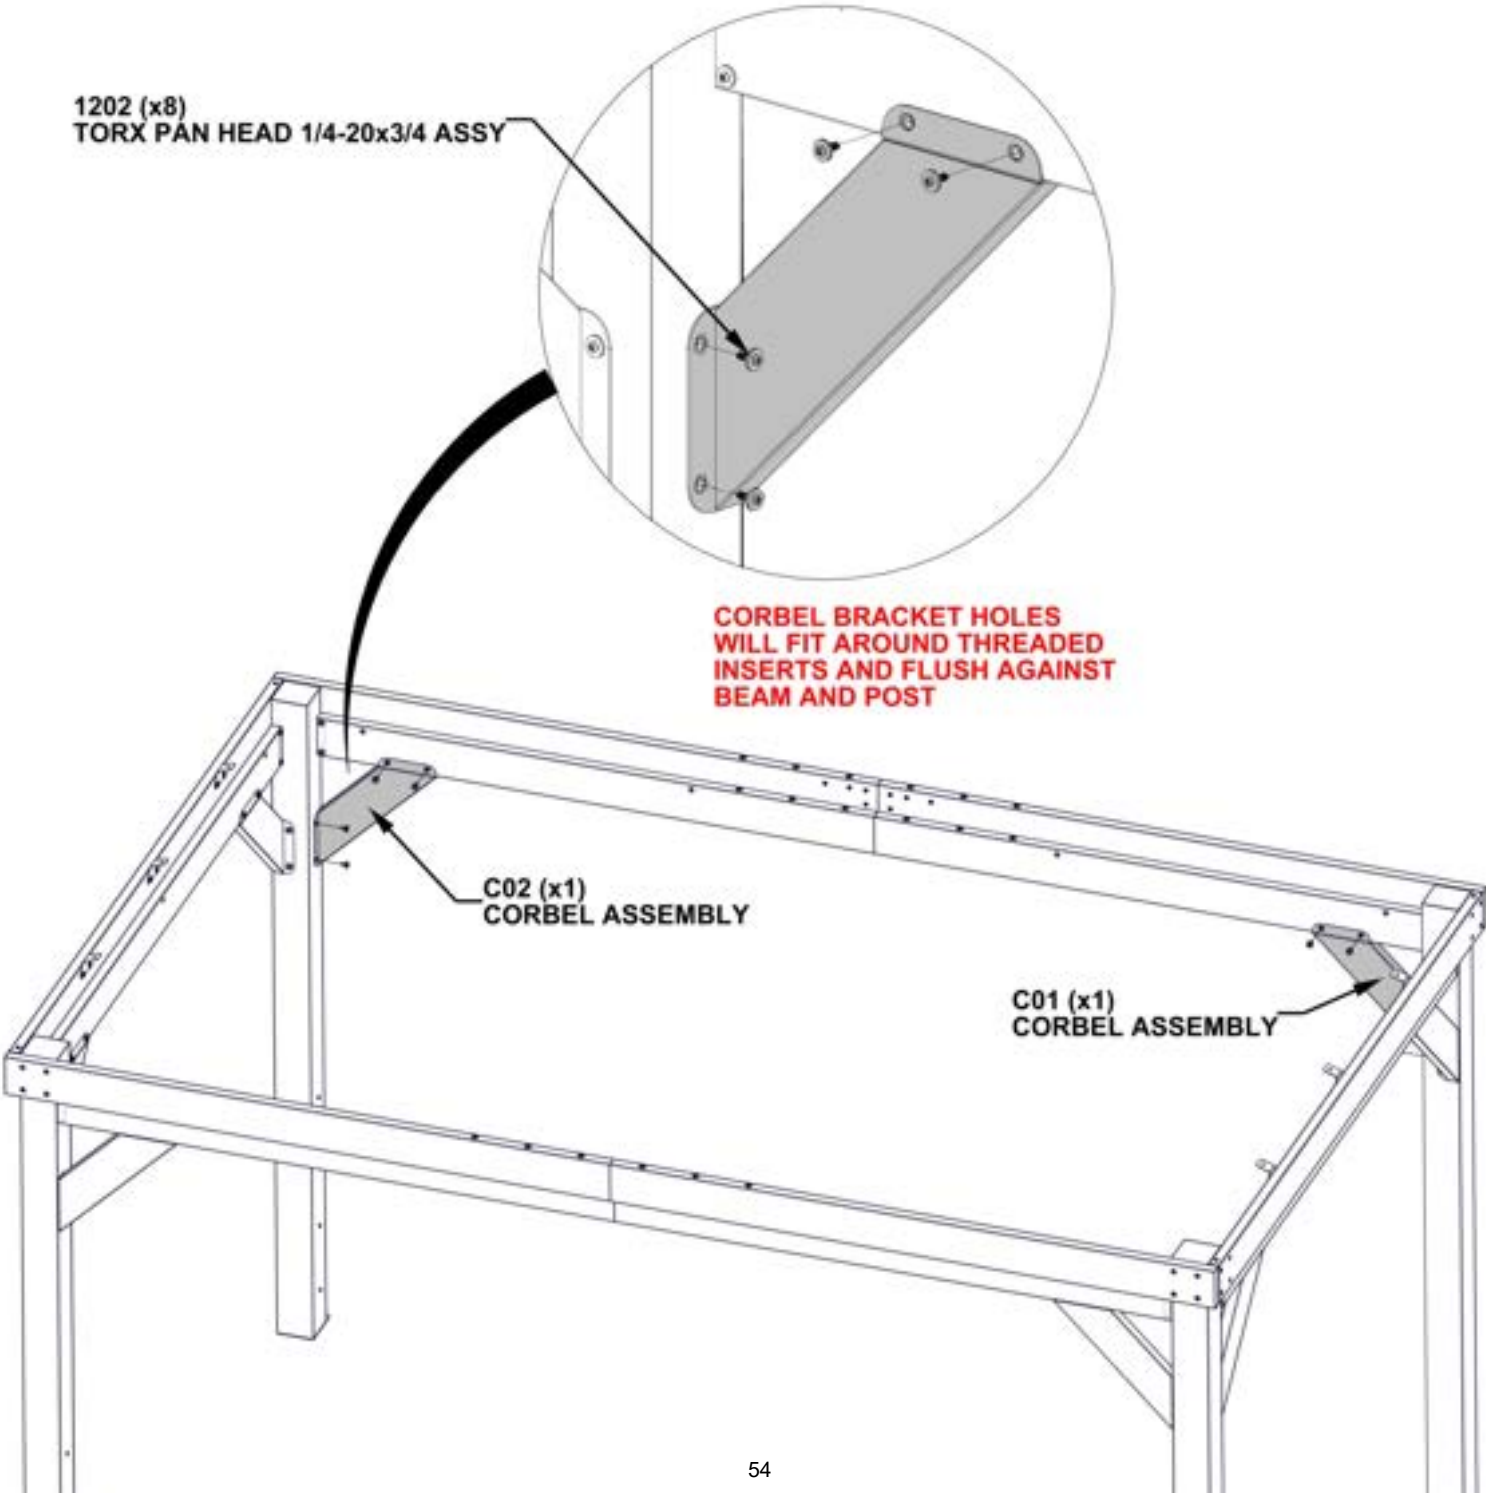

STEP 21 - SQUARE STRUCTURE

- CRITICAL:**
- SQUARE UNIT BEFORE PROCEEDING TO NEXT STEPS.
 - THE BELOW DIMENSIONS ARE CRITICAL TO THE FINAL ASSEMBLY.
 - MEASUREMENTS SHOULD BE WITHIN +/- 1/4" (6mm).
 - MEASUREMENTS OUTSIDE OF TOLERANCE WILL LEAD TO ISSUES ON FUTURE ASSEMBLY STEPS.
 - TIGHTEN ALL HARDWARE FROM PREVIOUS STEPS.

MEASUREMENTS TAKEN FROM INSIDE CORNER TO INSIDE CORNER OF POST

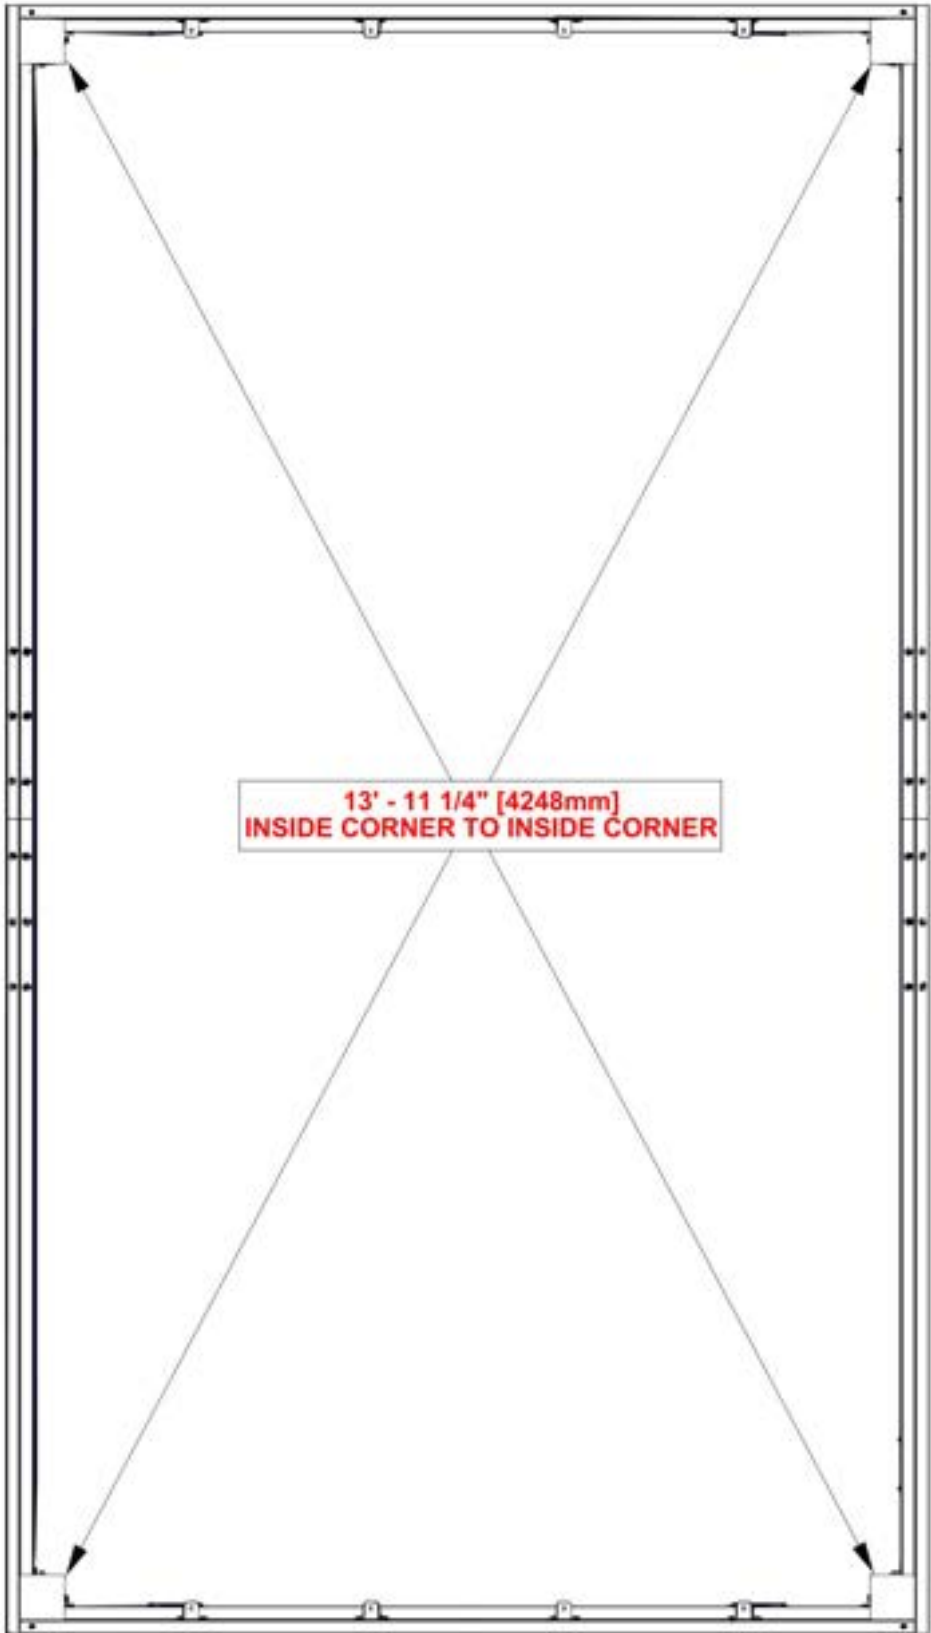


STEP 22 - GABLE ASSEMBLY



B07 GABLE ARM ASSEMBLY - A4M03513
(x2) 29 3/16"x5 1/4"x1 7/16" (36x134x741)

QTY	PartNo	DESCRIPTION
8	H101103	TORX SOCKET SCREW 1/4-20

- YOU WILL NEED A LADDER FOR STEPS 22 - 49.

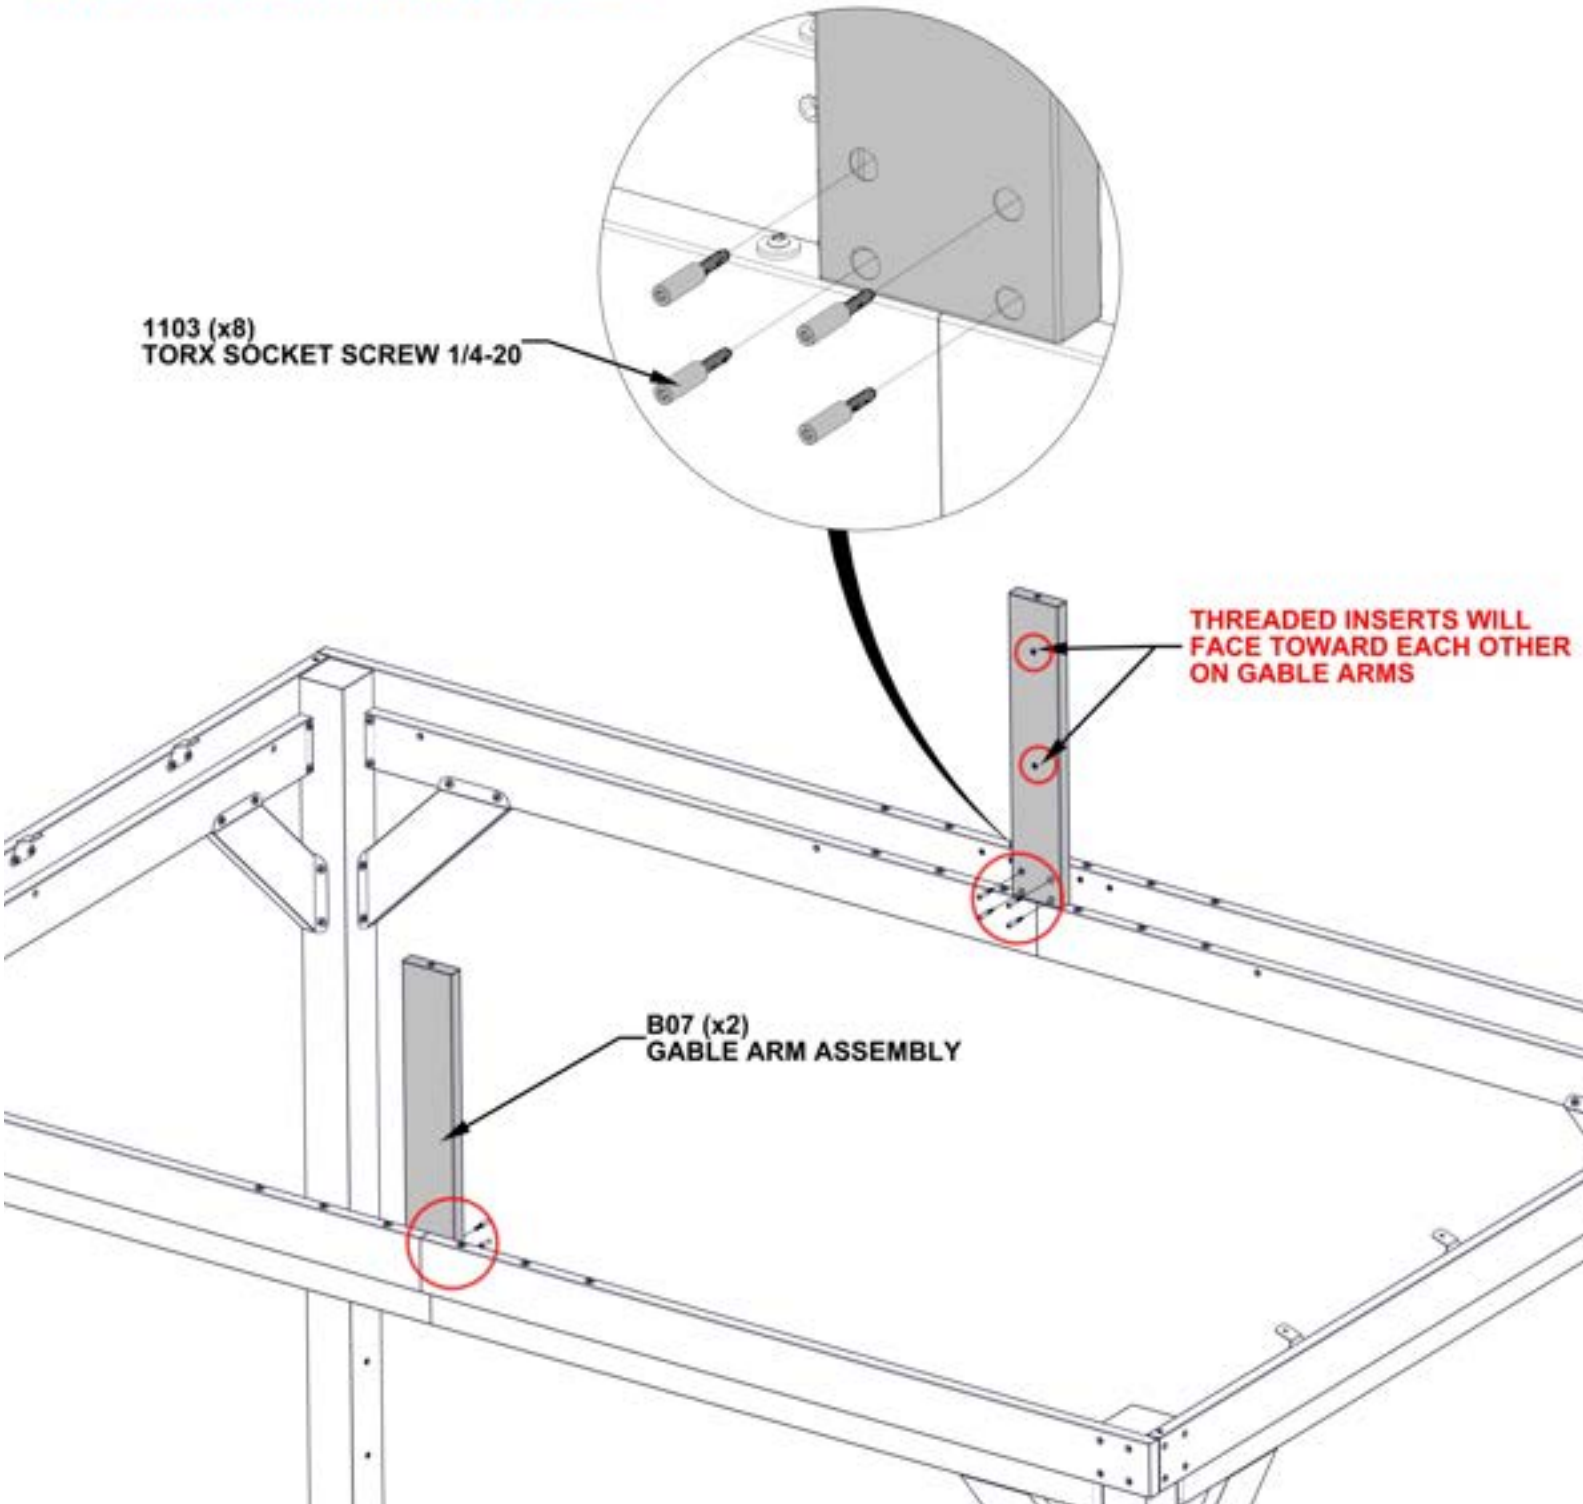

STEP 23 - RIDGE BEAM ASSEMBLY

QTY	PartNo	DESCRIPTION
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




B11 RIDGE BEAM ASSEMBLY - A4M03517
(x1) 61 3/16"x5 1/4"x1 7/16" (36x134x1554)



J2 SPLICE BRACKET - A4M01270
(x1) 1 1/4"X5 1/8"X15 3/4" (33x131x400)

- FOR EASE OF ASSEMBLY, WE RECOMMEND
USING SAW HORSES FOR STEPS 23 - 25.

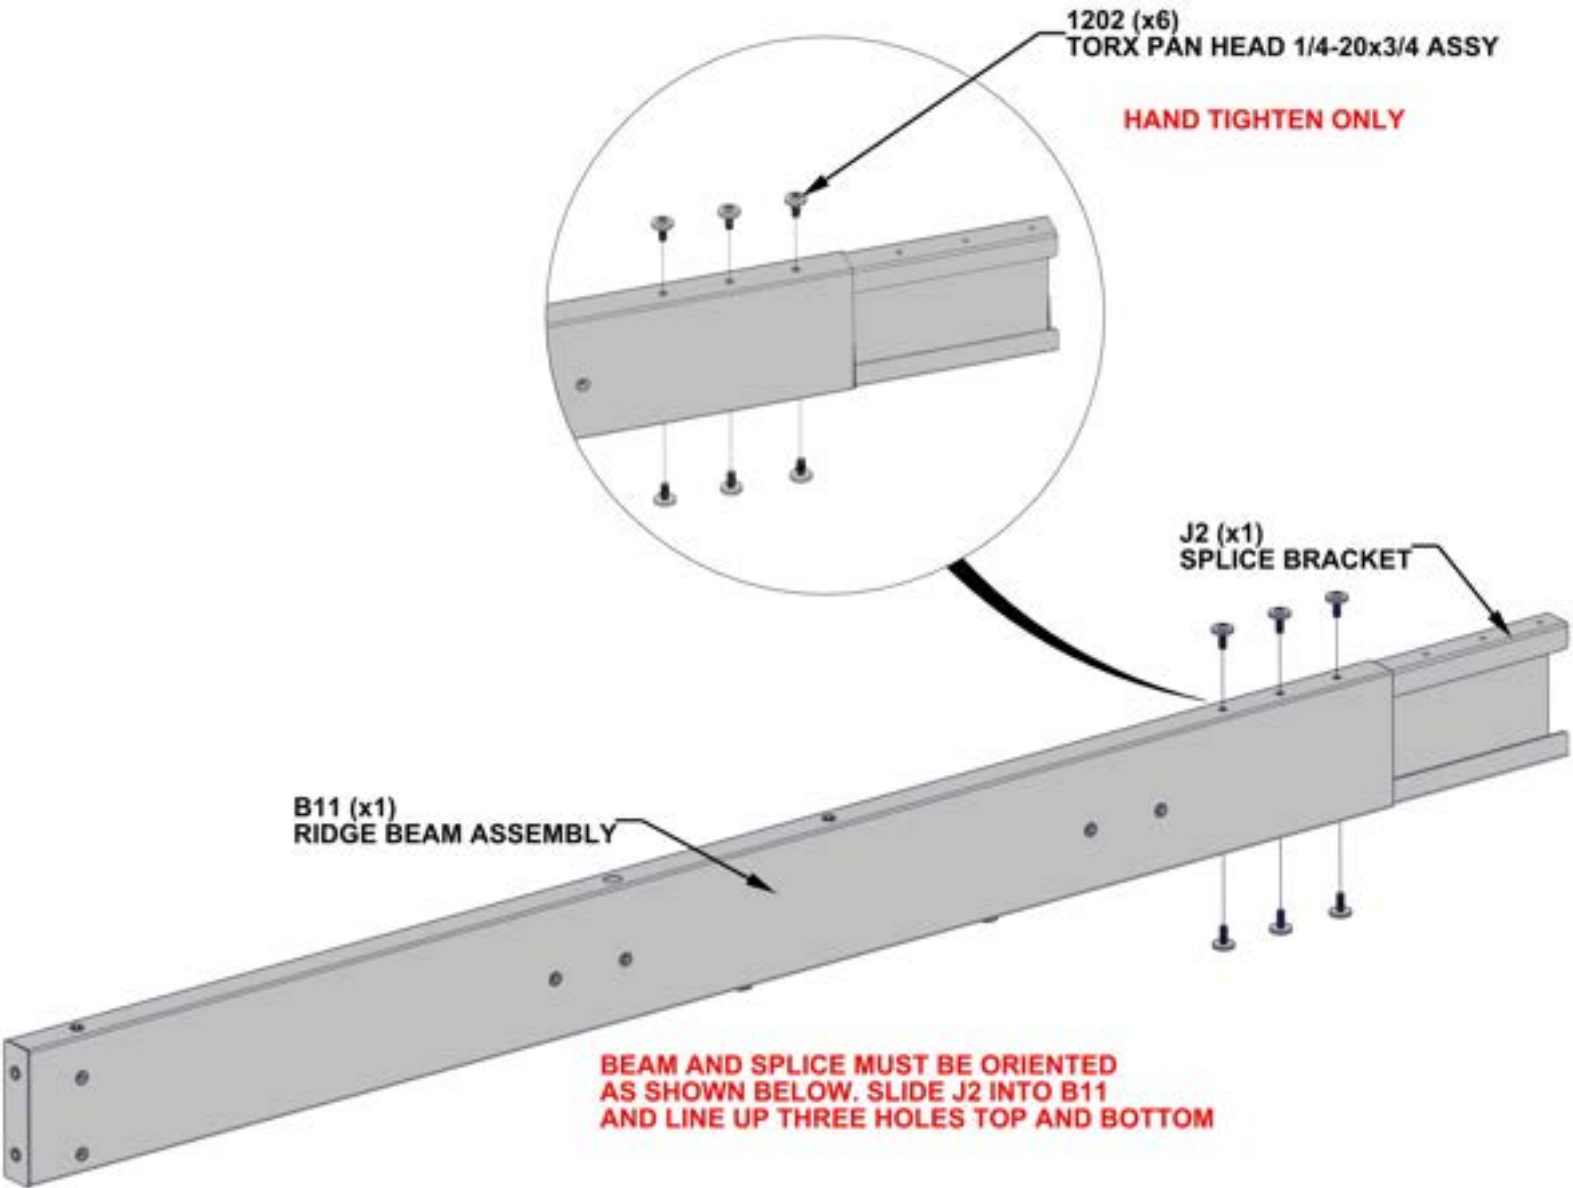

STEP 24 - RIDGE BEAM ASSEMBLY

QTY	PartNo	DESCRIPTION
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



B10 RIDGE BEAM ASSEMBLY - A4M03516
(x1) 67 1/16"x5 1/4"x1 7/16" (36x134x1704)

- SLIDE B10 INTO SPLICE BRACKET.
GENTLY TAP ENDS OF ASSEMBLY WITH
RUBBER Mallet UNTIL GAP CLOSES.

1202 (x6)
TORX PAN HEAD 1/4-20x3/4 ASSY

TIGHTEN ALL HARDWARE

B10 (x1)
RIDGE BEAM
ASSEMBLY


THREADED INSERTS CLOSEST
TO END OF BEAM INDICATE
TOP OF RIDGE

STEP 25 - RIDGE BEAM ASSEMBLY




QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

J3 GABLE BRACKET - A4M03805
(x2) 11 1/8"x6 7/16"x1/16" (2x163x282)

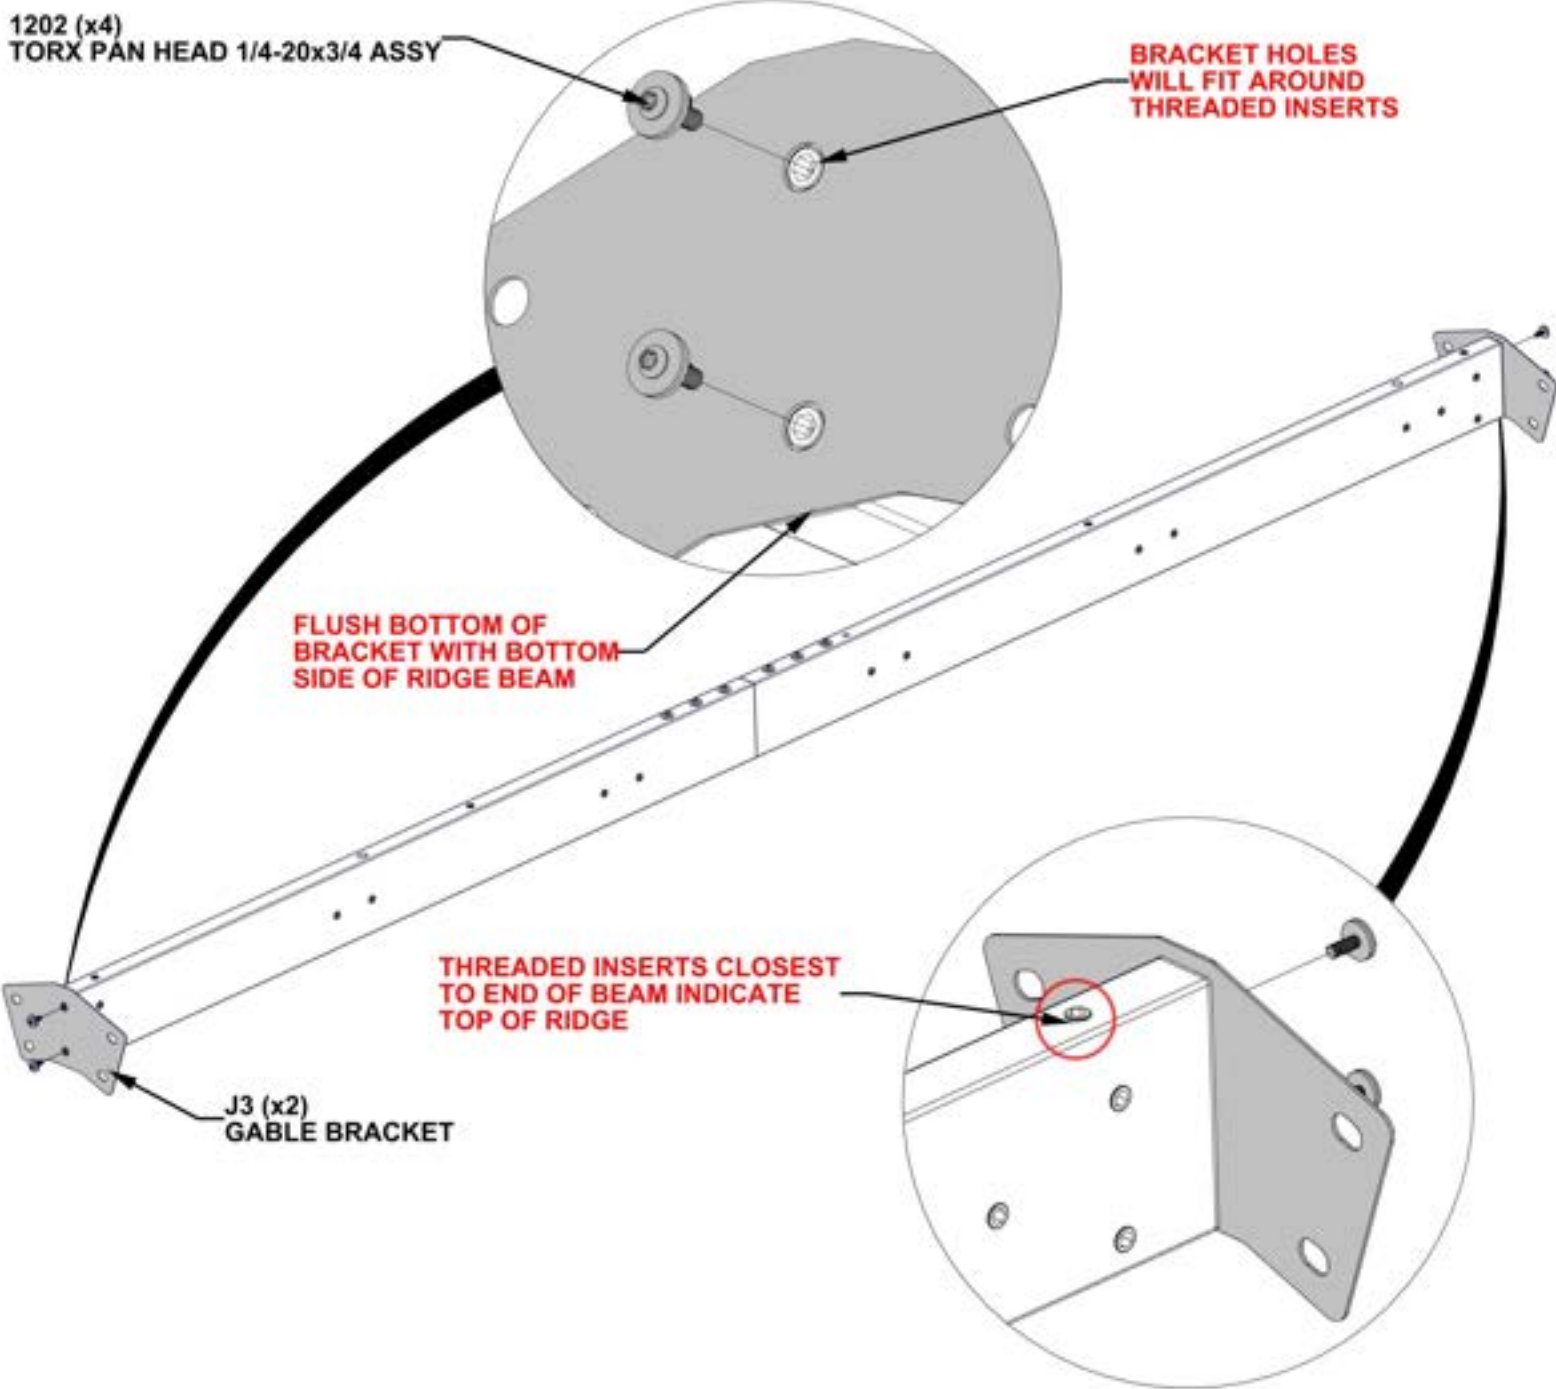


STEP 26 - RIDGE ASSEMBLY

QTY	PartNo	DESCRIPTION
2	H101230	BOLT WH 5/16x6 S.S.

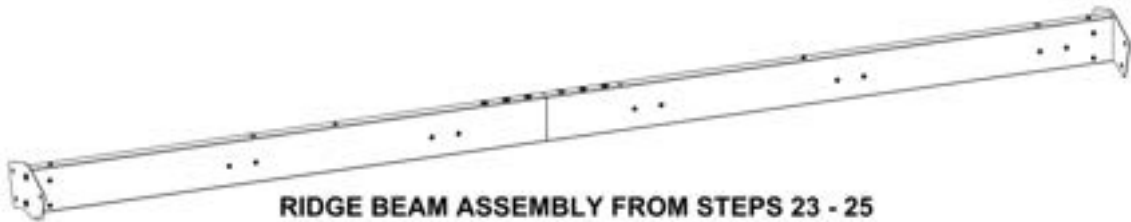

RIDGE BEAM ASSEMBLY FROM STEPS 23 - 25

- WITH AT LEAST TWO PEOPLE, ATTACH RIDGE ASSEMBLY TO GABLE UPRIGHTS.
- RIDGE BEAM ASSEMBLY MUST BE ORIENTED AS SHOWN BELOW WITH LONG OVERHANG TOWARD THE FRONT

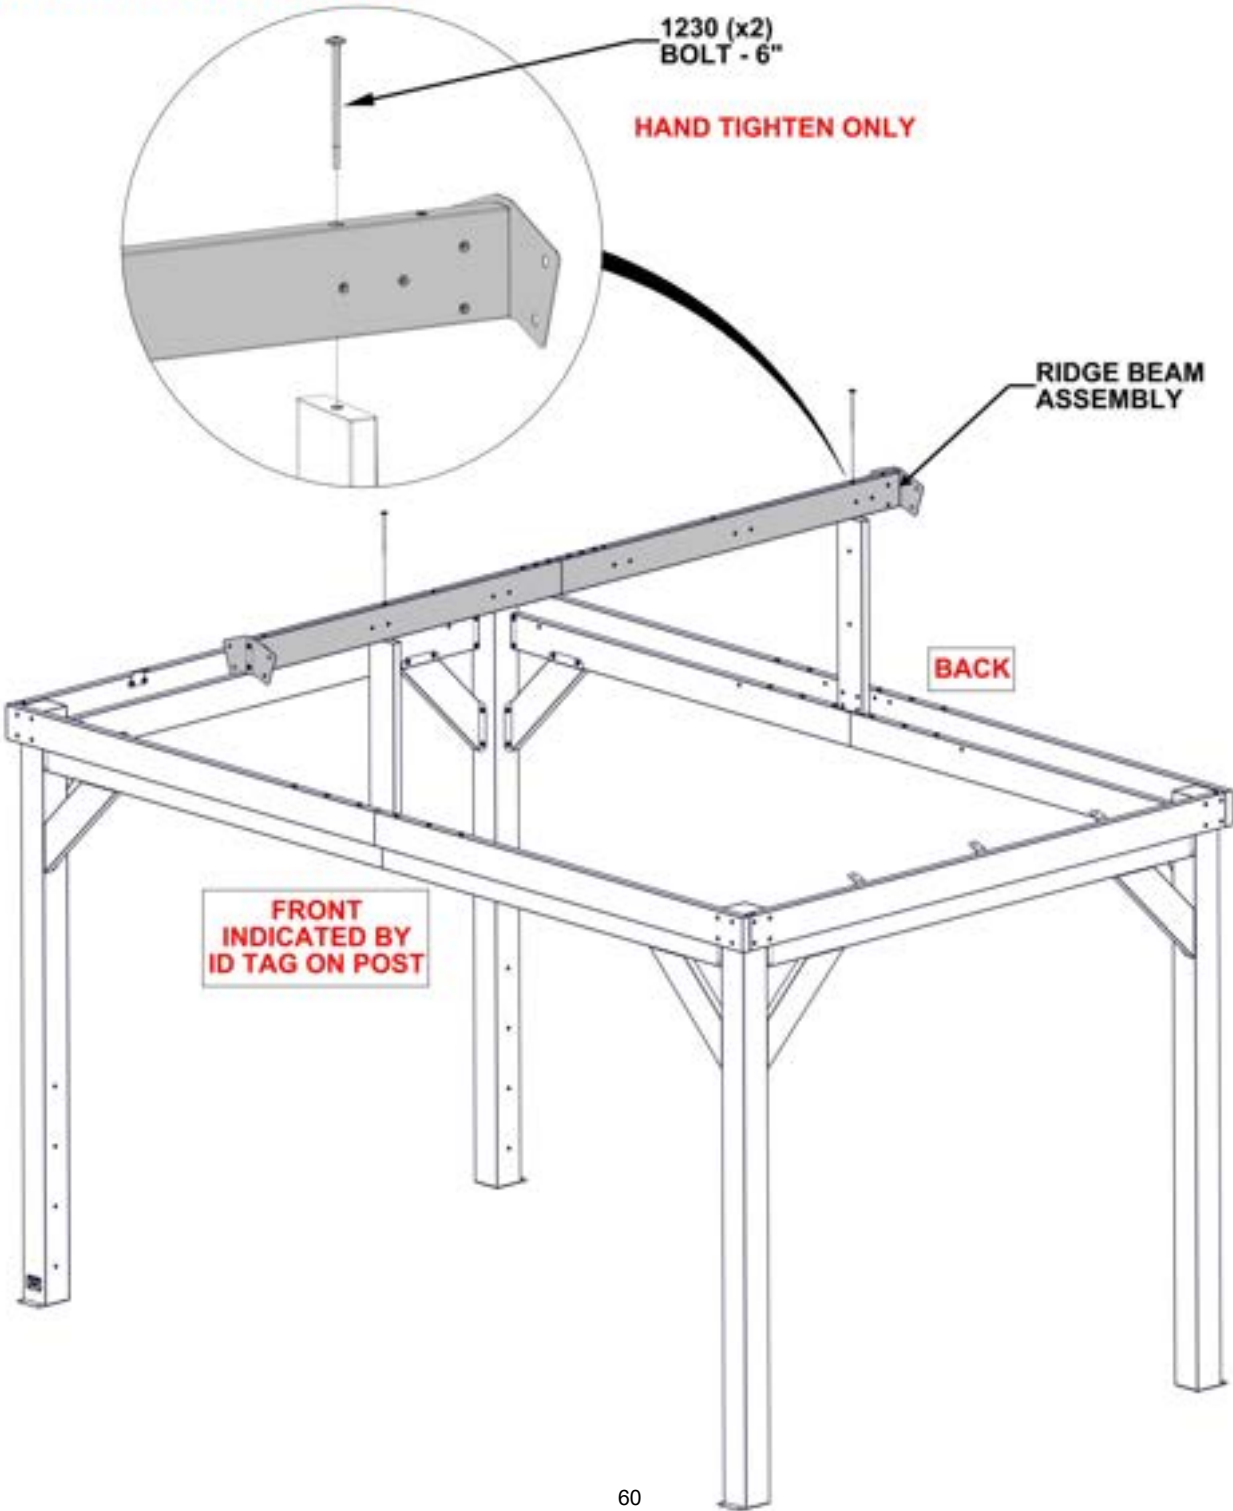

STEP 27 - RIDGE ASSEMBLY



C03 CORBEL ASSEMBLY - A4M03527
(x2) 23 3/8"x12"x1 7/16" (36x304x593)


QTY	PartNo	DESCRIPTION
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- IT IS RECOMMENDED TO USE PROVIDED ANGLE DRIVER TO INSTALL HARDWARE IN THIS STEP.
- ATTACH CORBELS TO RIDGE BEAM AND GABLE ARMS.
- SQUARE AS NEEDED BEFORE TIGHTENING ALL HARDWARE FROM PREVIOUS STEPS.

1202 (x8)
TORX PAN HEAD 1/4-20x3/4 ASSY


TIGHTEN ALL HARDWARE

CORBEL BRACKET HOLES
WILL FIT AROUND THREADED
INSERTS AND FLUSH AGAINST
RIDGE BEAM AND GABLE

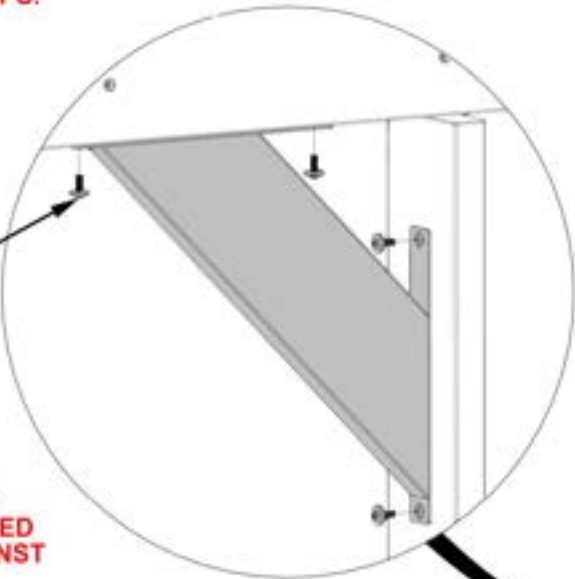


C03 (x1)
CORBEL ASSEMBLY

C03 (x1)
CORBEL ASSEMBLY

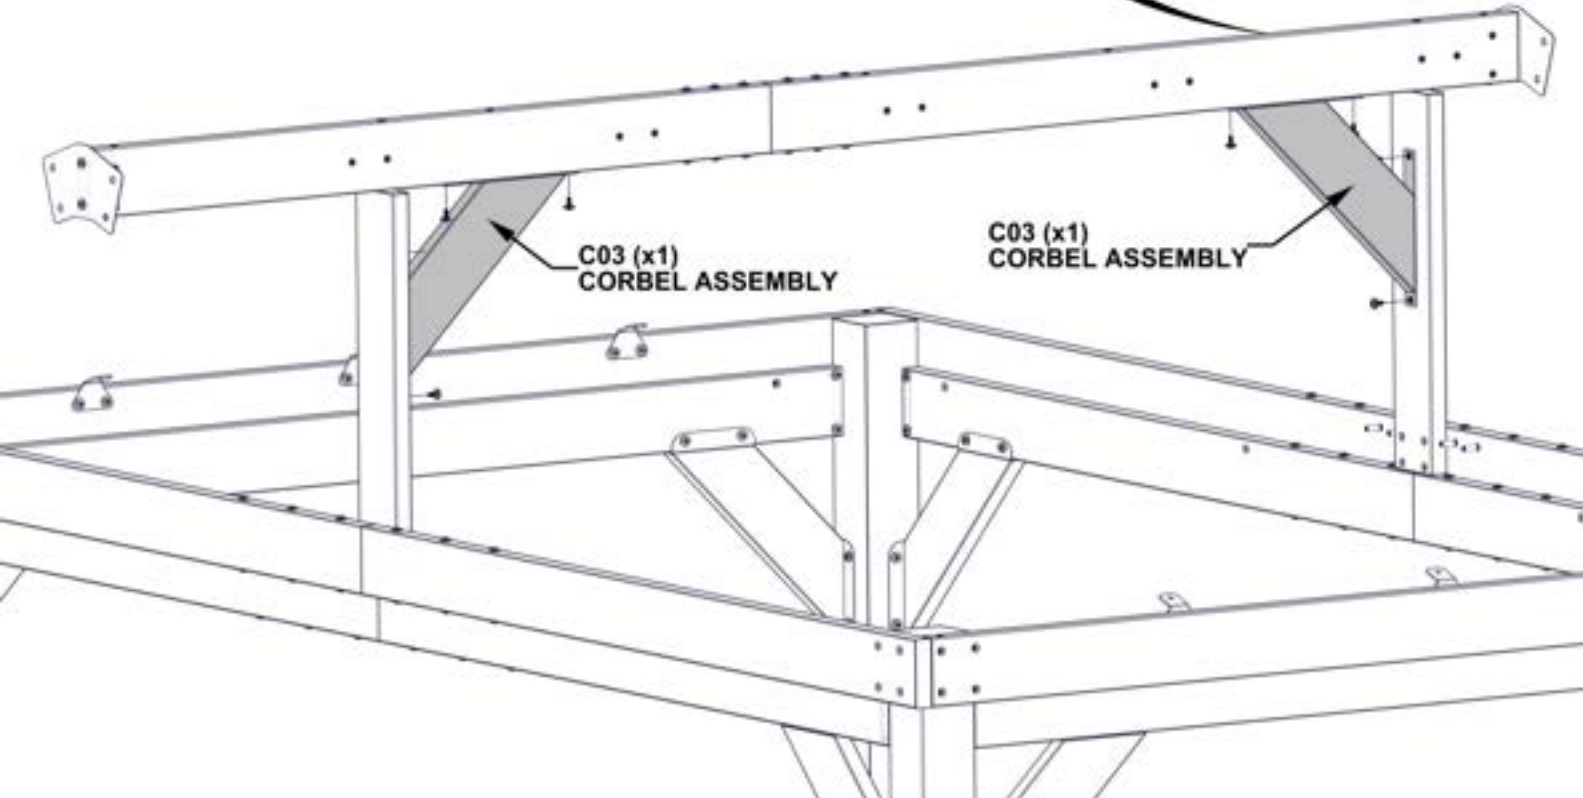

STEP 28A - RIDGE ASSEMBLY

QTY	PartNo	DESCRIPTION
3	H101053	STEEL WASHER 6x20
3	H101054	SEALANT WASHER
3	H101293	TORX PAN HEAD 1/4-20x1 3/8"

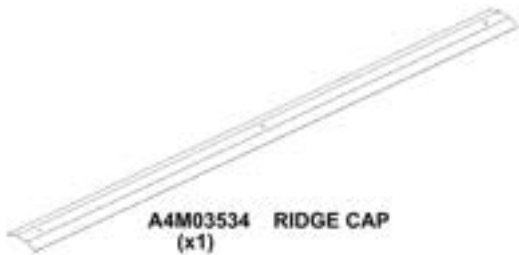

J10 SUPPORT RING - A4M03808
(x3) 13/16"x7/16" (11x20x)


- REMOVE PROTECTIVE FILM.
- ORIENT RIDGE CAP AS SHOWN BELOW.
- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**

FLUSH END OF
RIDGE CAP
WITH RIDGE PLATE

- 1293 (x3)
TORX PAN HEAD
1/4-20x1 3/8"
- 1053 (x3)
STEEL WASHER 6x20
- 1054 (x3)
SEALANT WASHER

J10 (x3)
SUPPORT RING

3534 (x1)
RIDGE CAP

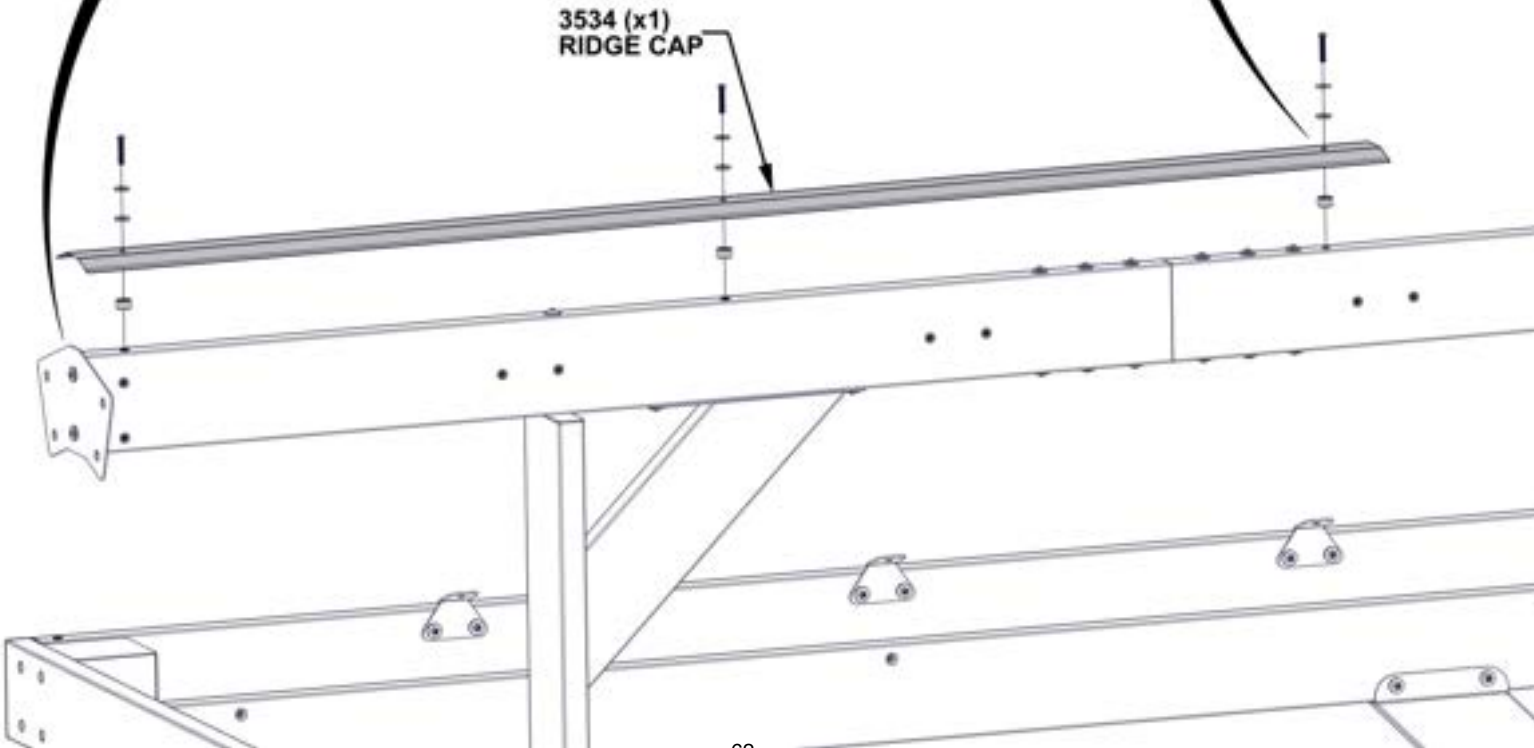

STEP 28B - RIDGE ASSEMBLY





A4M03535 RIDGE CAP SPLICE
(x1)

- REMOVE PROTECTIVE FILM.
- ORIENT RIDGE CAP SPLICE AS SHOWN BELOW.


- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**

3535 (x1)
RIDGE CAP SPLICE

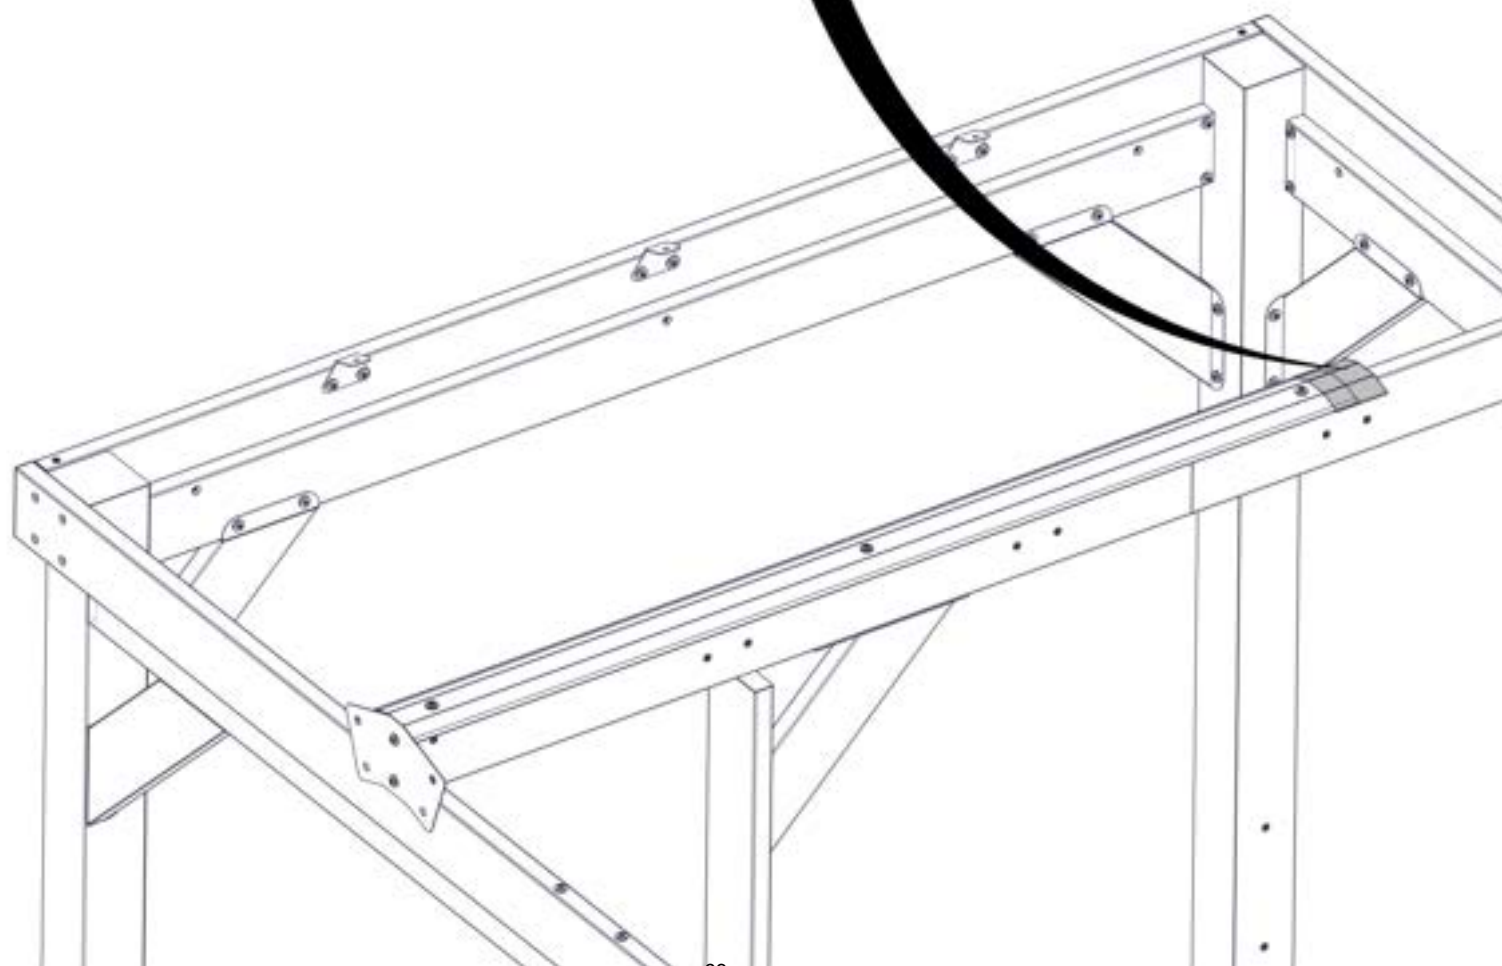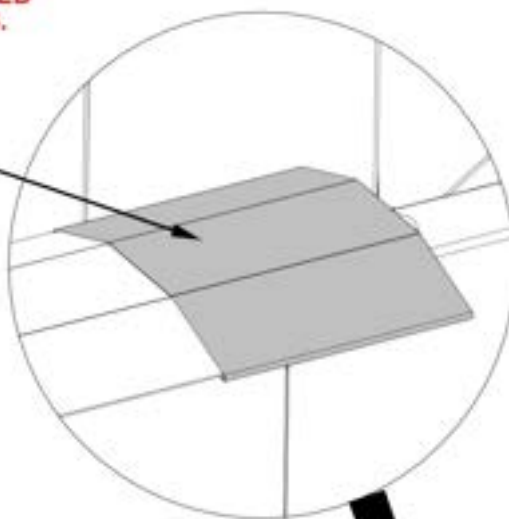


STEP 28C - RIDGE ASSEMBLY

QTY	PartNo	DESCRIPTION
2	H101053	STEEL WASHER 6x20
2	H101054	SEALANT WASHER
2	H101293	TORX PAN HEAD 1/4-20x1 3/8"

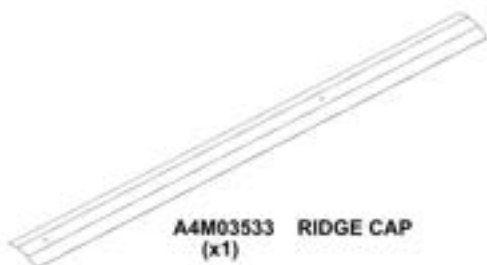

J10 SUPPORT RING - A4M03808
(x2) 13/16"x7/16" (11x20x)

- REMOVE PROTECTIVE FILM.
- ORIENT RIDGE CAP AND SLIDE INTO RIDGE CAP SPLICE AS SHOWN BELOW.
- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**

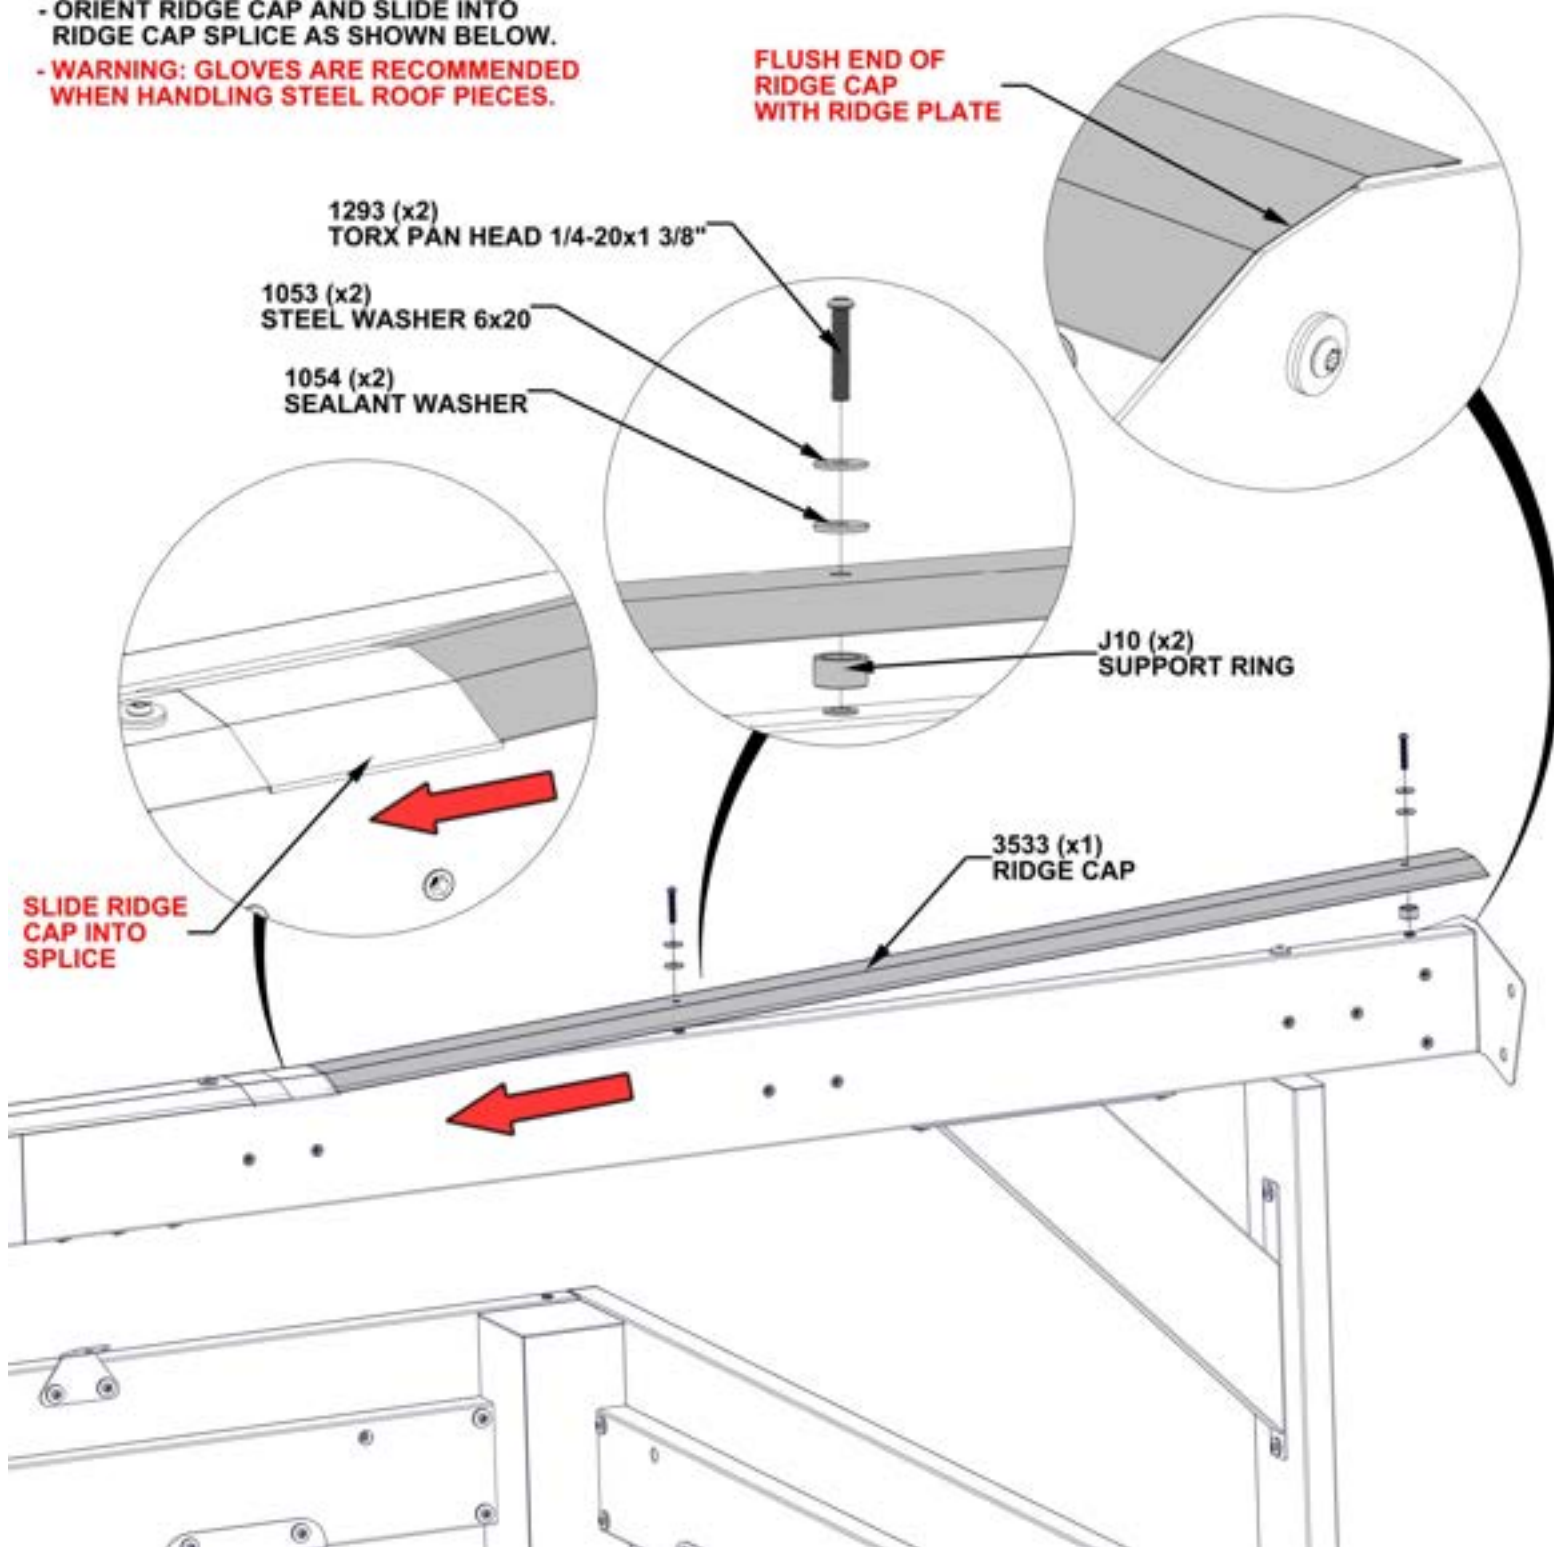


STEP 29 - ROOF ASSEMBLY




J7 RAFTER BRACKET - A4M03802
(x4) 3 5/8"x2 3/16"x2" (50x55x92)

QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

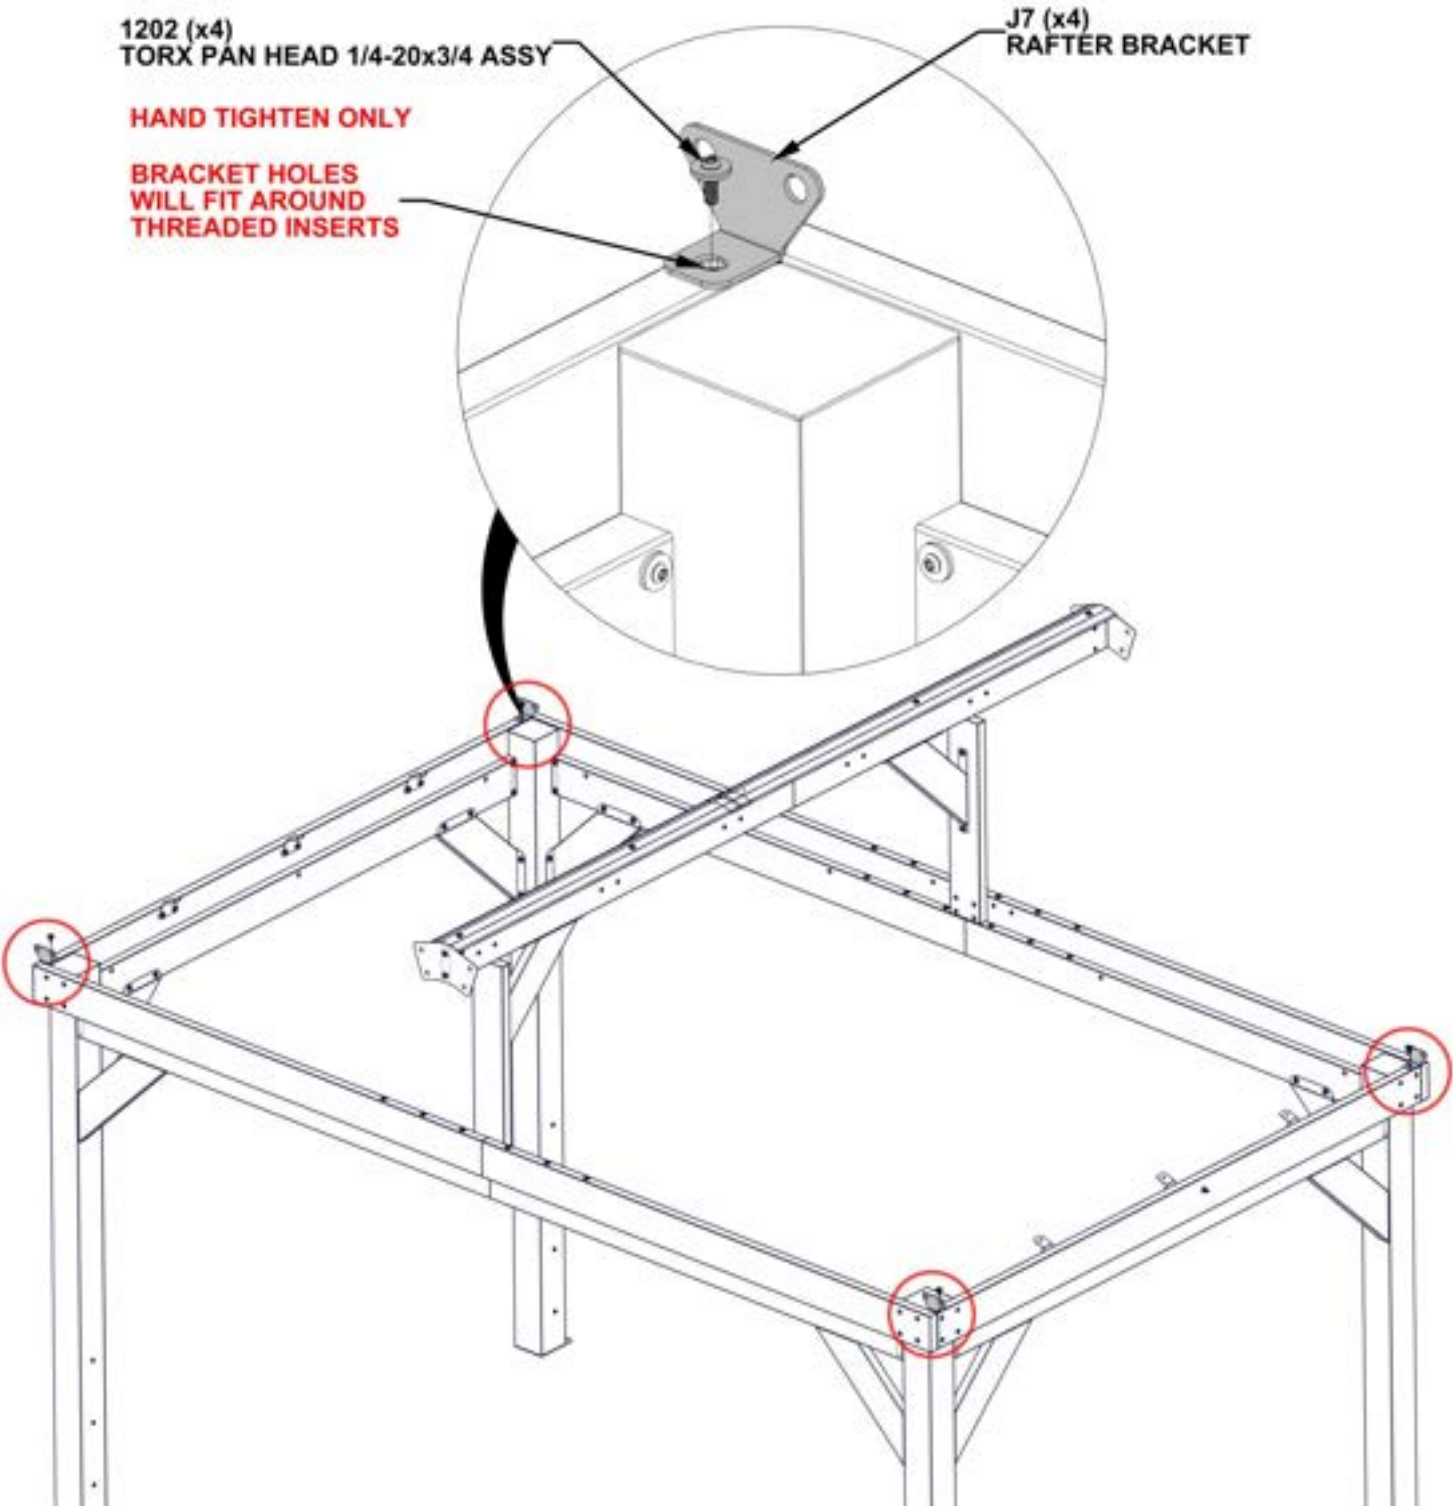

STEP 30 - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
16	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




R01 RAFTER ASSEMBLY - A4M03522
(x2) 86 3/8"x4 5/16"x3 1/8" (80x110x2194.6)



R02 RAFTER ASSEMBLY - A4M03523
(x2) 86 3/8"x4 5/16"x3 1/8" (80x110x2194.6)

- INSERTS ON THE SIDE OF EACH RAFTER MUST FACE TOWARD THE INSIDE OF THE STRUCTURE.
- ATTACH EACH RAFTER AT THE RIDGE AS SHOWN BELOW.
- ONCE SUPPORTED, ATTACH END OF RAFTER TO RAFTER BRACKETS AT TOP OF EACH POST.

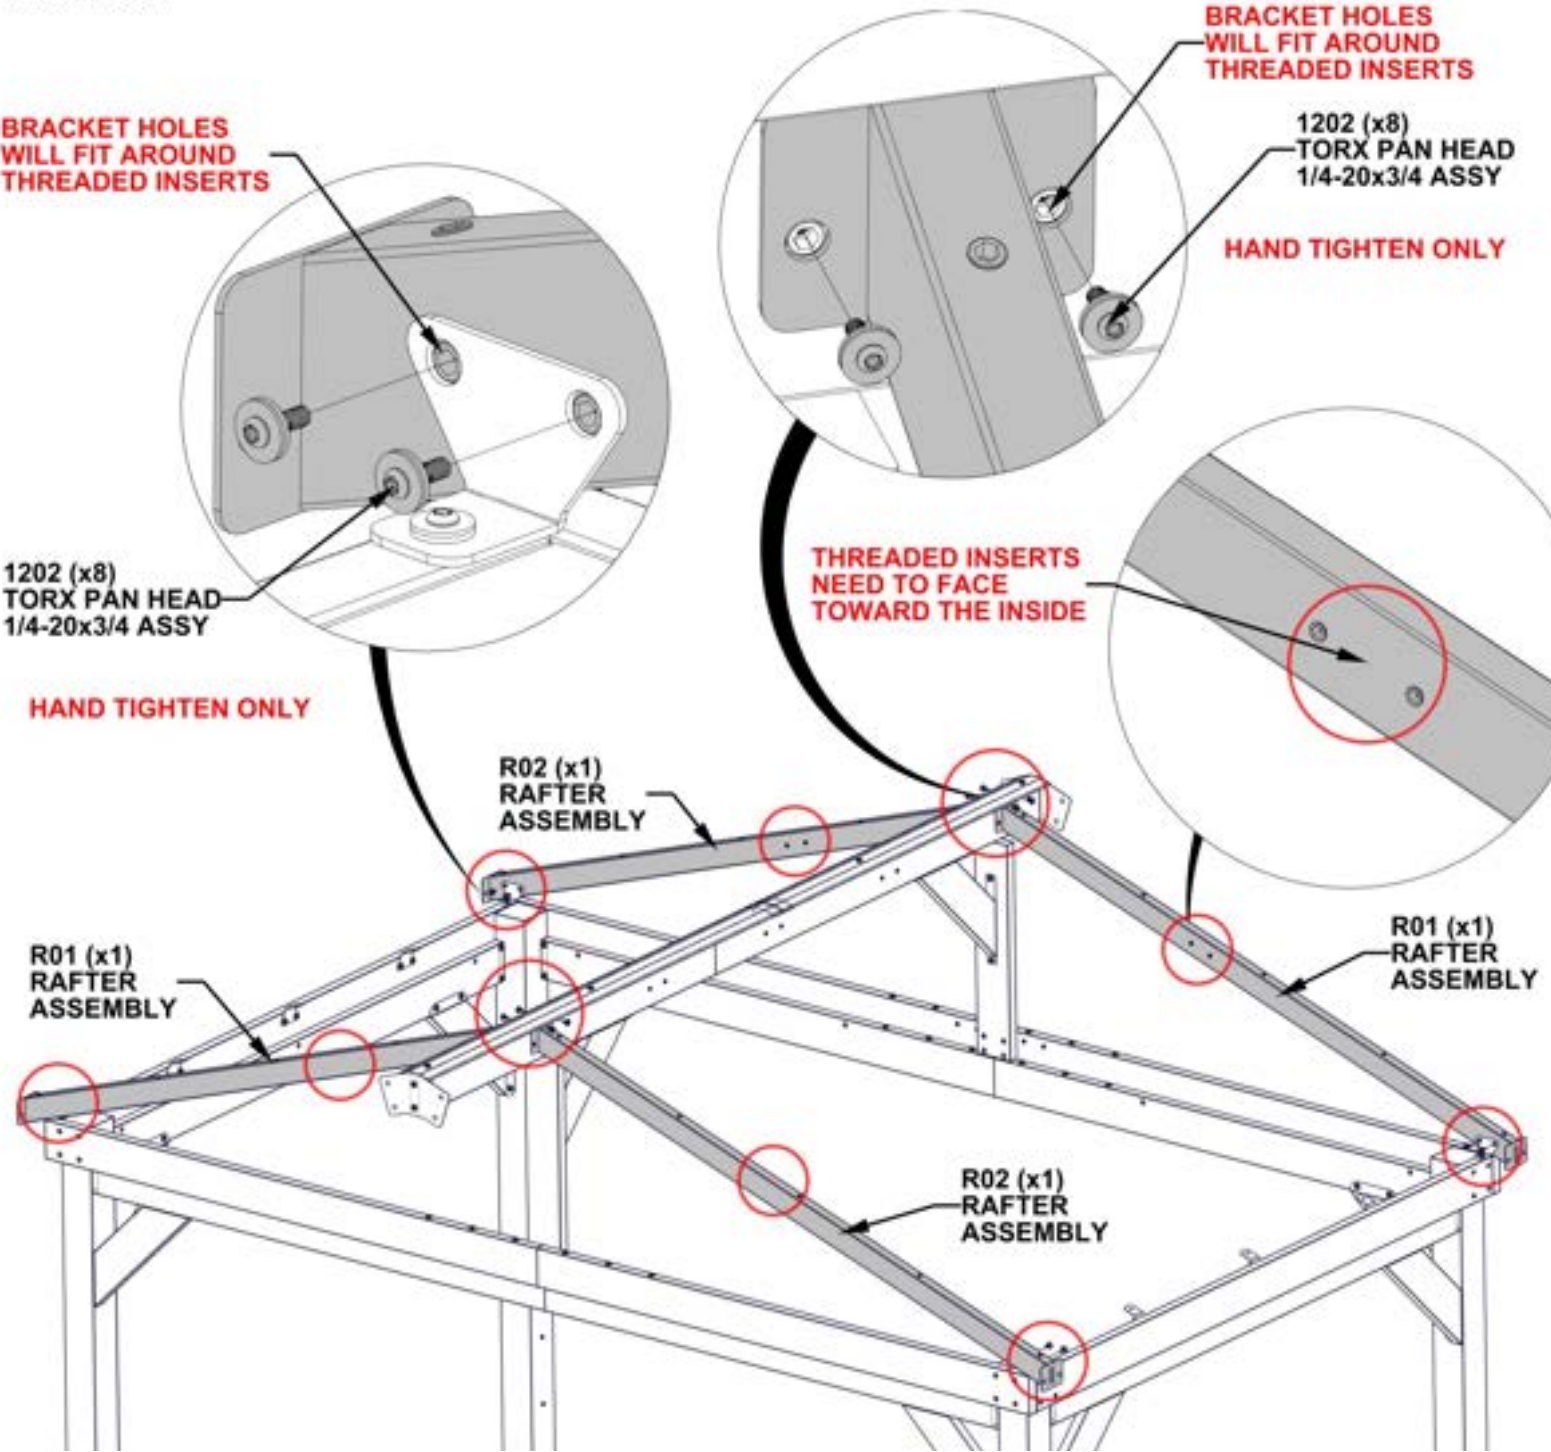

STEP 31 - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
16	H101103	TORX SOCKET SCREW 1/4-20



B08 GABLE ARM ASSEMBLY - A4M03514
(x2) 40 1/16"x5 1/4"x1 7/16" (36x134x1017)



B09 GABLE ARM ASSEMBLY - A4M03515
(x2) 40 1/16"x5 1/4"x1 7/16" (36x134x1017)

FLUSH TOP SURFACE
OF GABLE AND RAFTER

1103 (x8)
TORX SOCKET
SCREW 1/4-20

TIGHTEN ALL HARDWARE

1103 (x8)
TORX SOCKET
SCREW 1/4-20

B09 (x1)
GABLE ARM
ASSEMBLY

B08 (x1)
GABLE ARM
ASSEMBLY

B08 (x1)
GABLE ARM
ASSEMBLY

B09 (x1)
GABLE ARM
ASSEMBLY

STEP 32A - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
12	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




R03 RAFTER ASSEMBLY - A4M03524
(x6) 86 3/8"x4 5/16"x3 1/8" (80x110x2194.6)

- ATTACH EACH RAFTER AT THE RIDGE AS SHOWN BELOW.


BRACKET HOLES
WILL FIT AROUND
THREADED INSERTS

1202 (x12)
TORX PAN HEAD 1/4-20x3/4 ASSY

HAND TIGHTEN ONLY

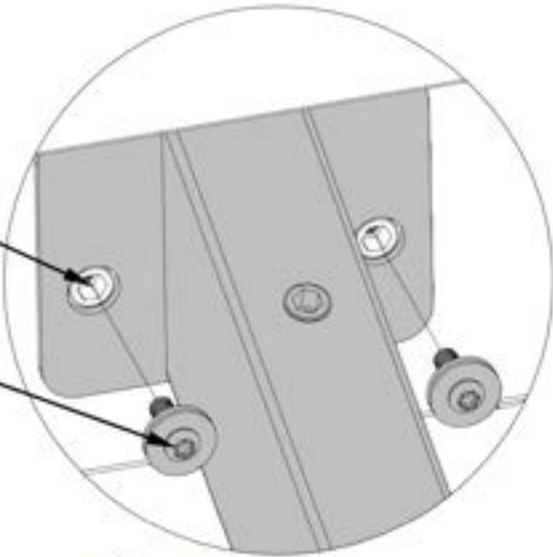


R03 (x6)
RAFTER ASSEMBLY

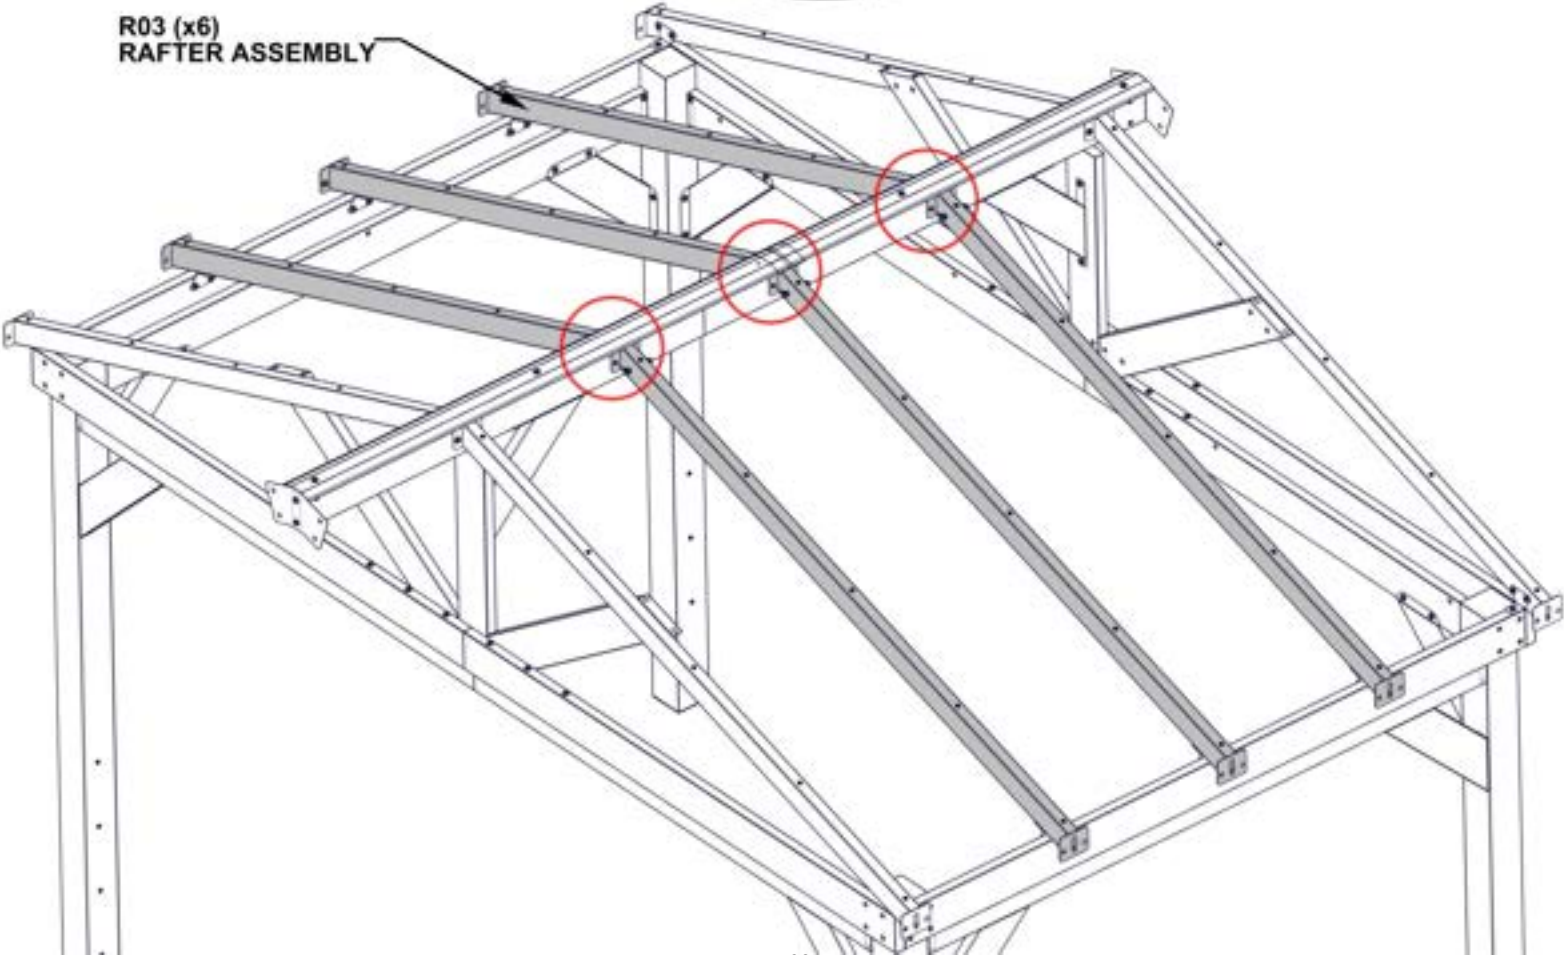

STEP 32B - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ATTACH END OF EACH RAFTER TO BRACKETS ALONG SIDE BEAMS.

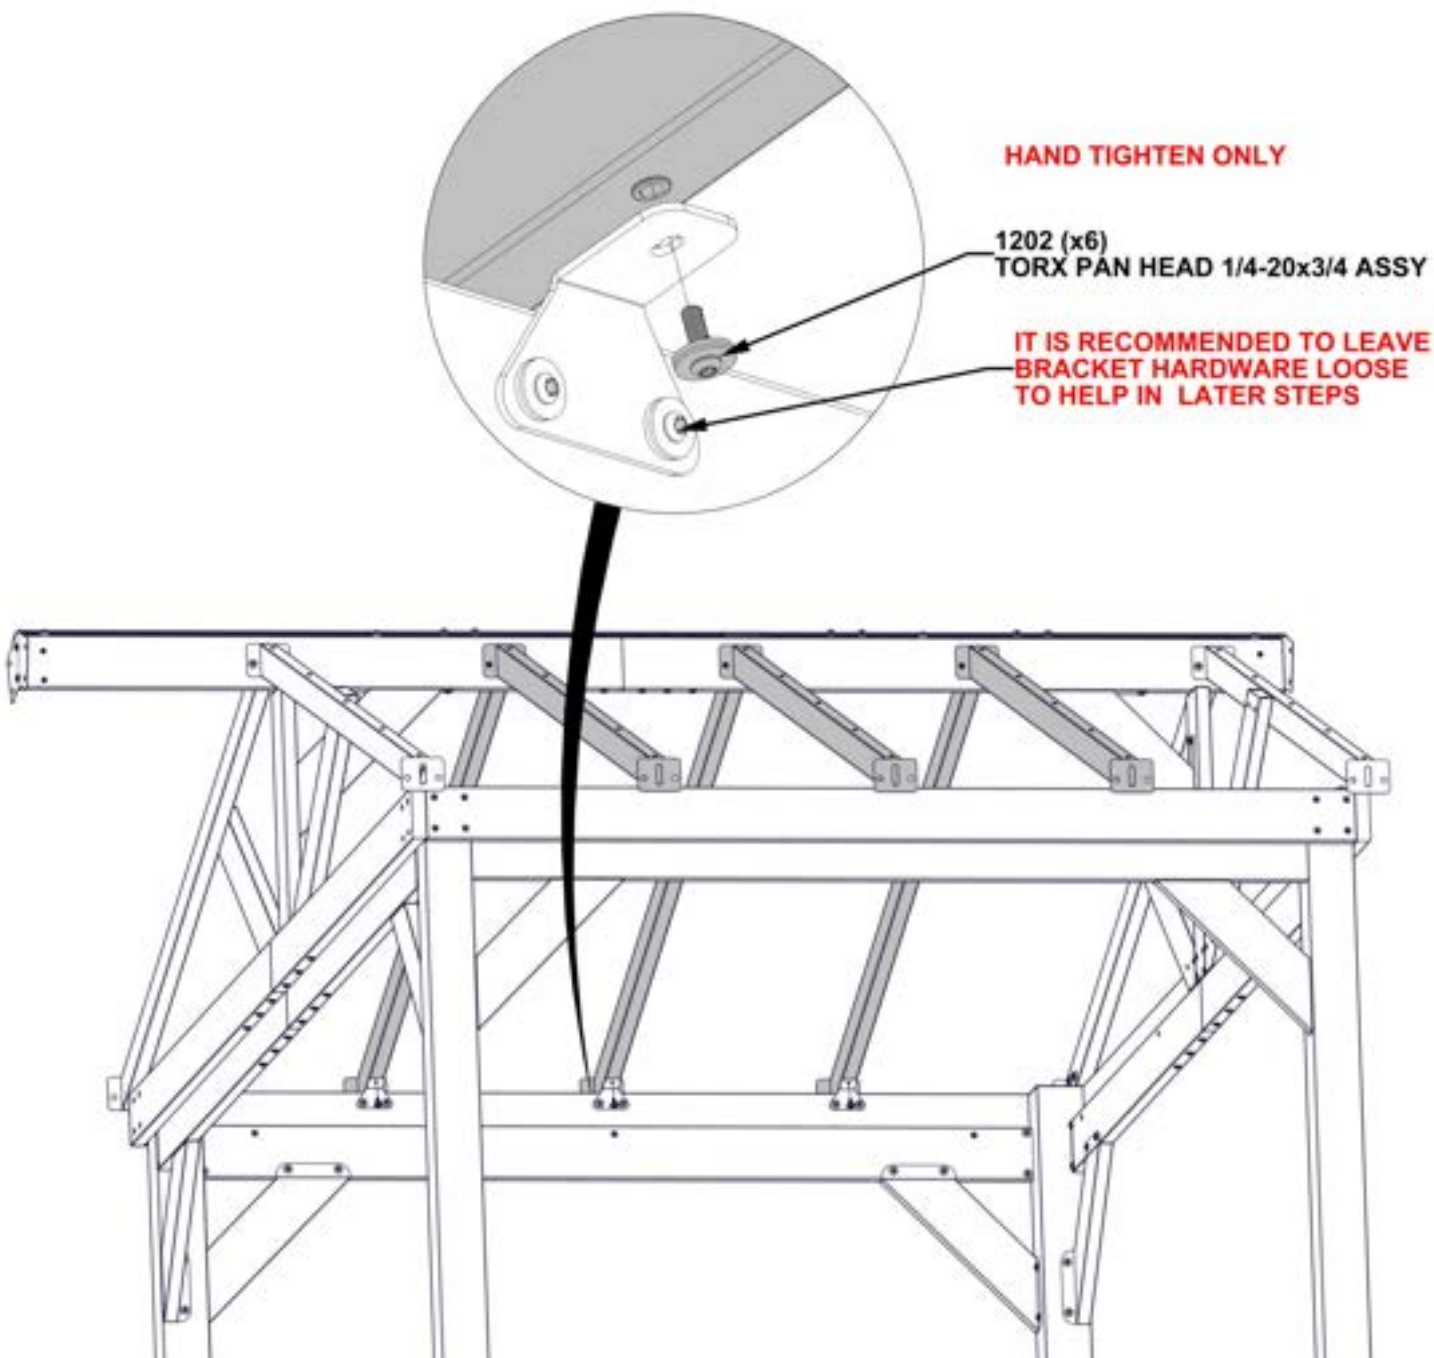

STEP 33 - BEAM ASSEMBLY

QTY	PartNo	DESCRIPTION
12	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




B15 DRIP BEAM ASSEMBLY - A4M03521
(x2) 71 3/4"x4 13/16"x1 7/16" (36x122x1822)




J6 SPLICE BRACKET - A4M03806
(x2) 19 11/16"x4 11/16"x32.5 (32.5x118.5x500)

- FOR EASE OF ASSEMBLY, WE RECOMMEND USING SAW HORSES FOR STEPS 33 - 34.

- REPEAT THIS STEP TWICE

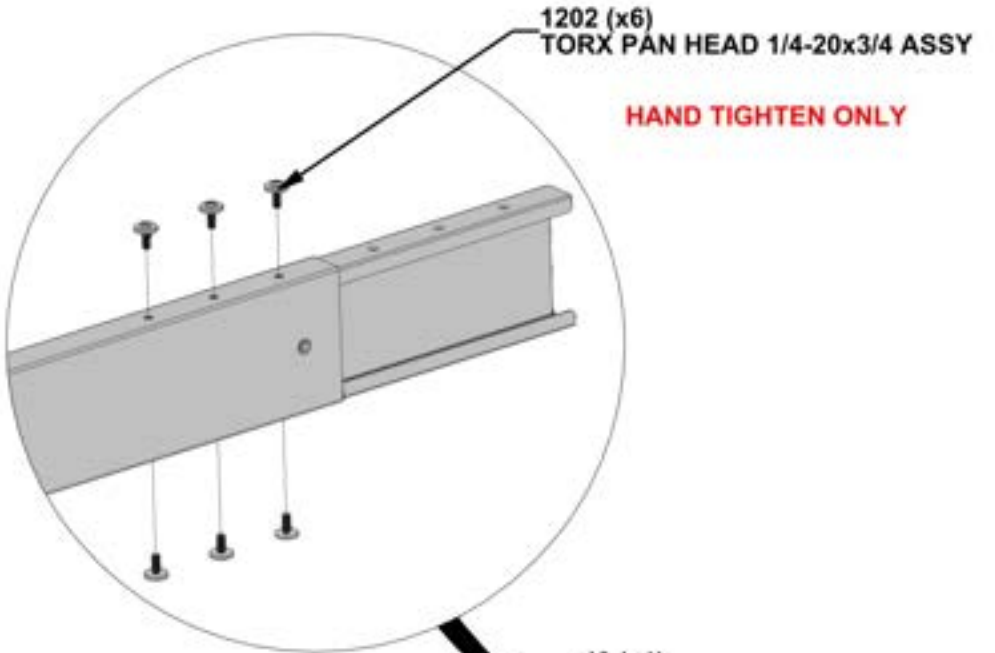

BEAM AND SPLICE MUST BE ORIENTED AS SHOWN BELOW. SLIDE J6 INTO B15 AND LINE UP THREE HOLES TOP AND BOTTOM

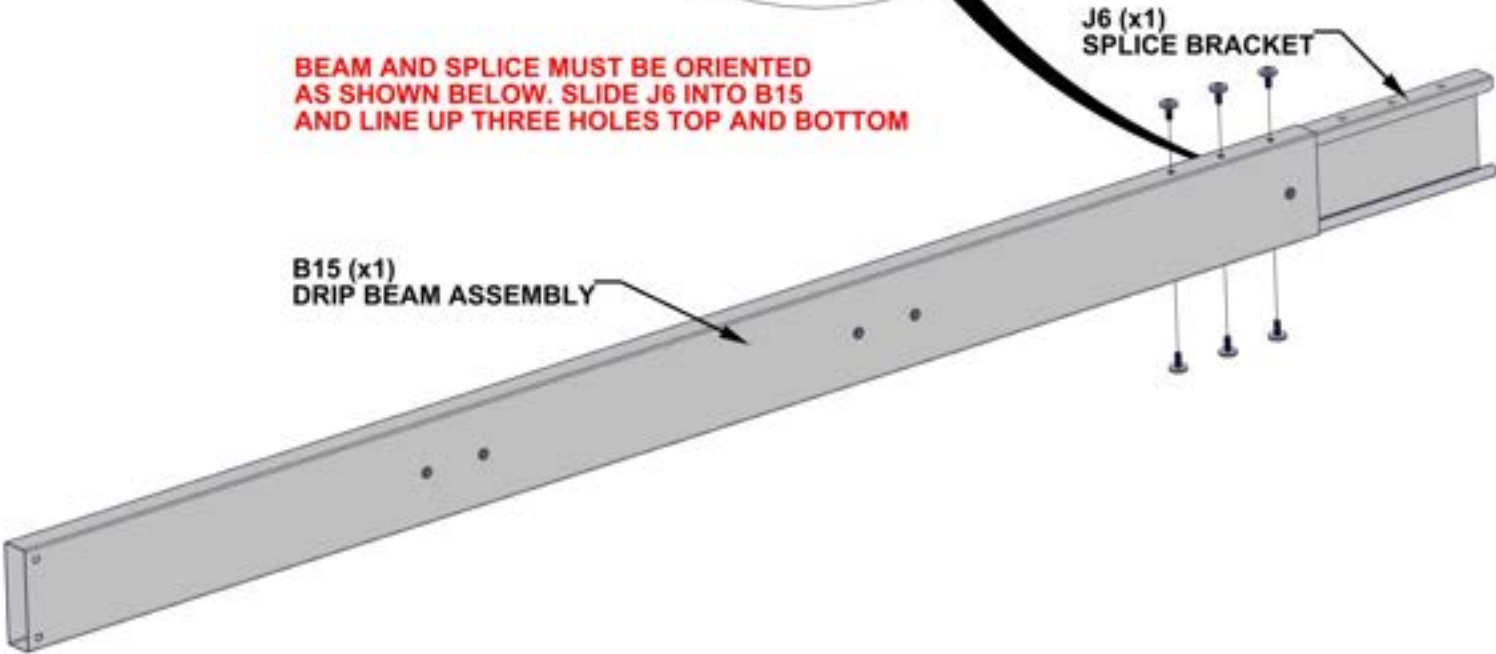

STEP 34 - BEAM ASSEMBLY


QTY	PartNo	DESCRIPTION
12	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



B14 DRIP BEAM ASSEMBLY - A4M03520
(x2) 53 11/16"x4 13/16"x1 7/16" (36x122x1364)


- SLIDE B14 INTO SPLICE BRACKET.
GENTLY TAP ENDS OF ASSEMBLY WITH
RUBBER Mallet UNTIL GAP CLOSES.

- REPEAT THIS STEP TWICE

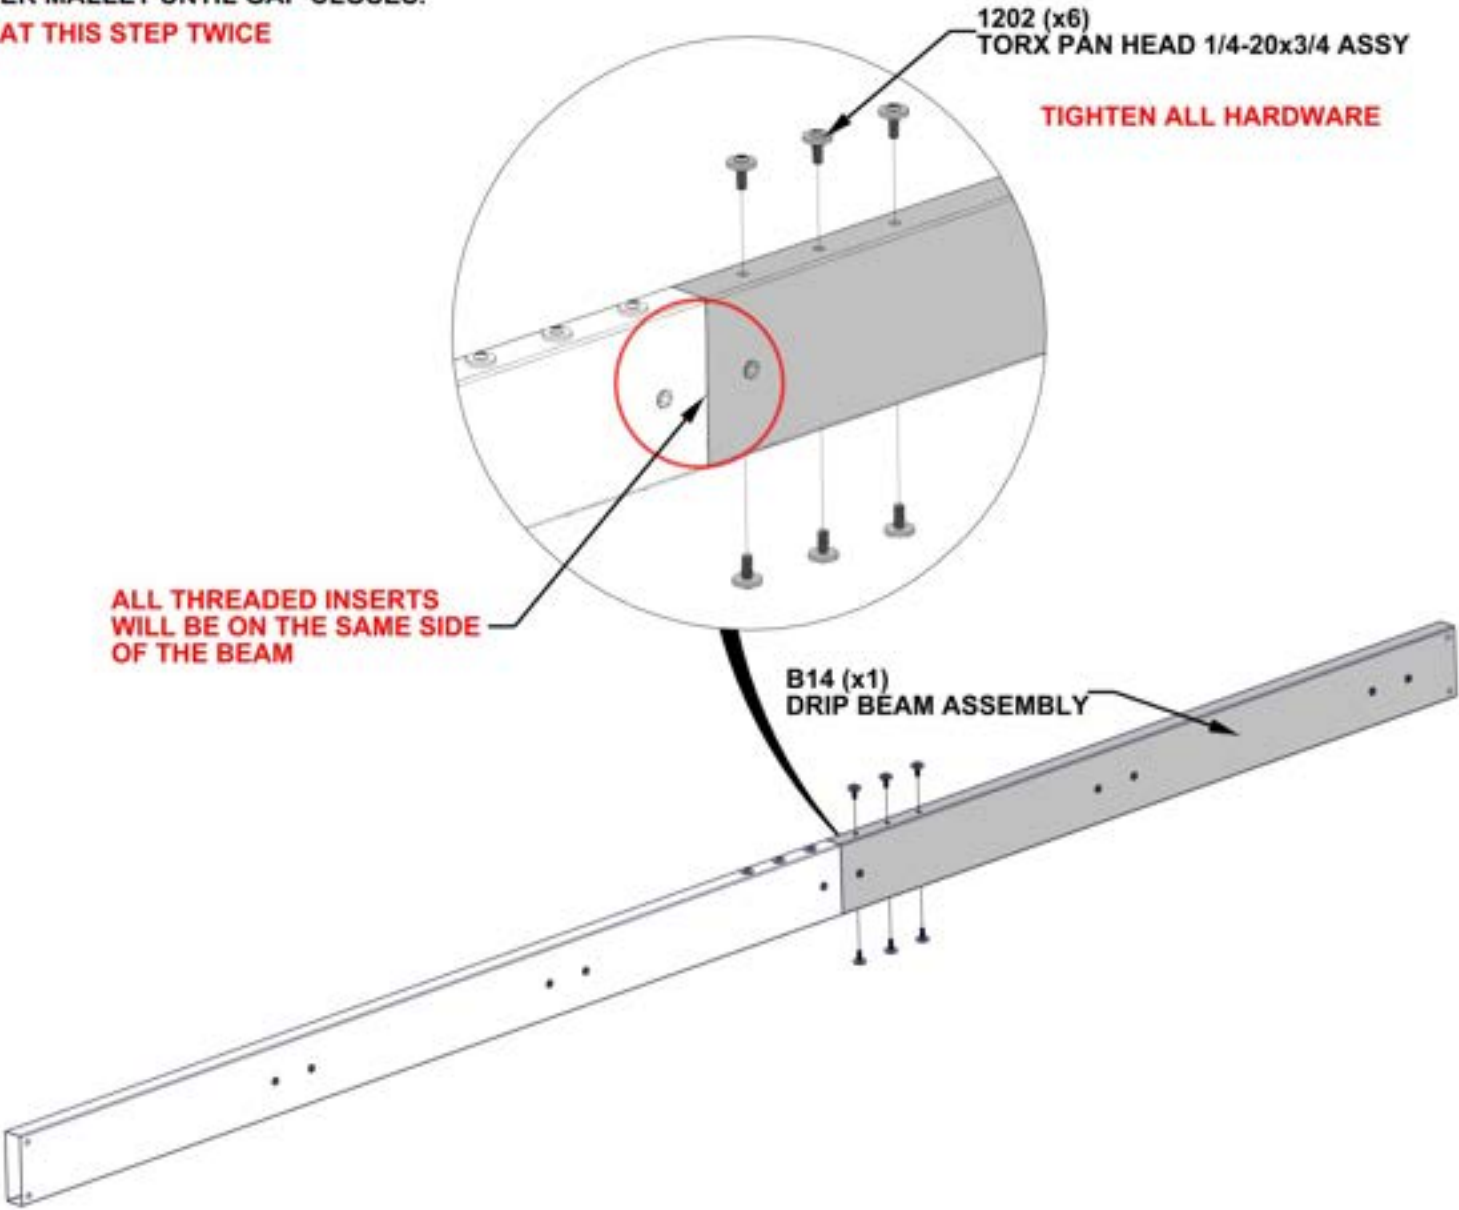


STEP 35 - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
20	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



BEAM ASSEMBLIES FROM
STEPS 33 - 34 (x2)

- WITH AT LEAST TWO ADDITIONAL PEOPLE, ATTACH BEAM ASSEMBLY TO RAFTER ENDS.
- BEAM ASSEMBLY MUST BE ORIENTED AS SHOWN BELOW WITH LONG OVERHANG TOWARD THE FRONT

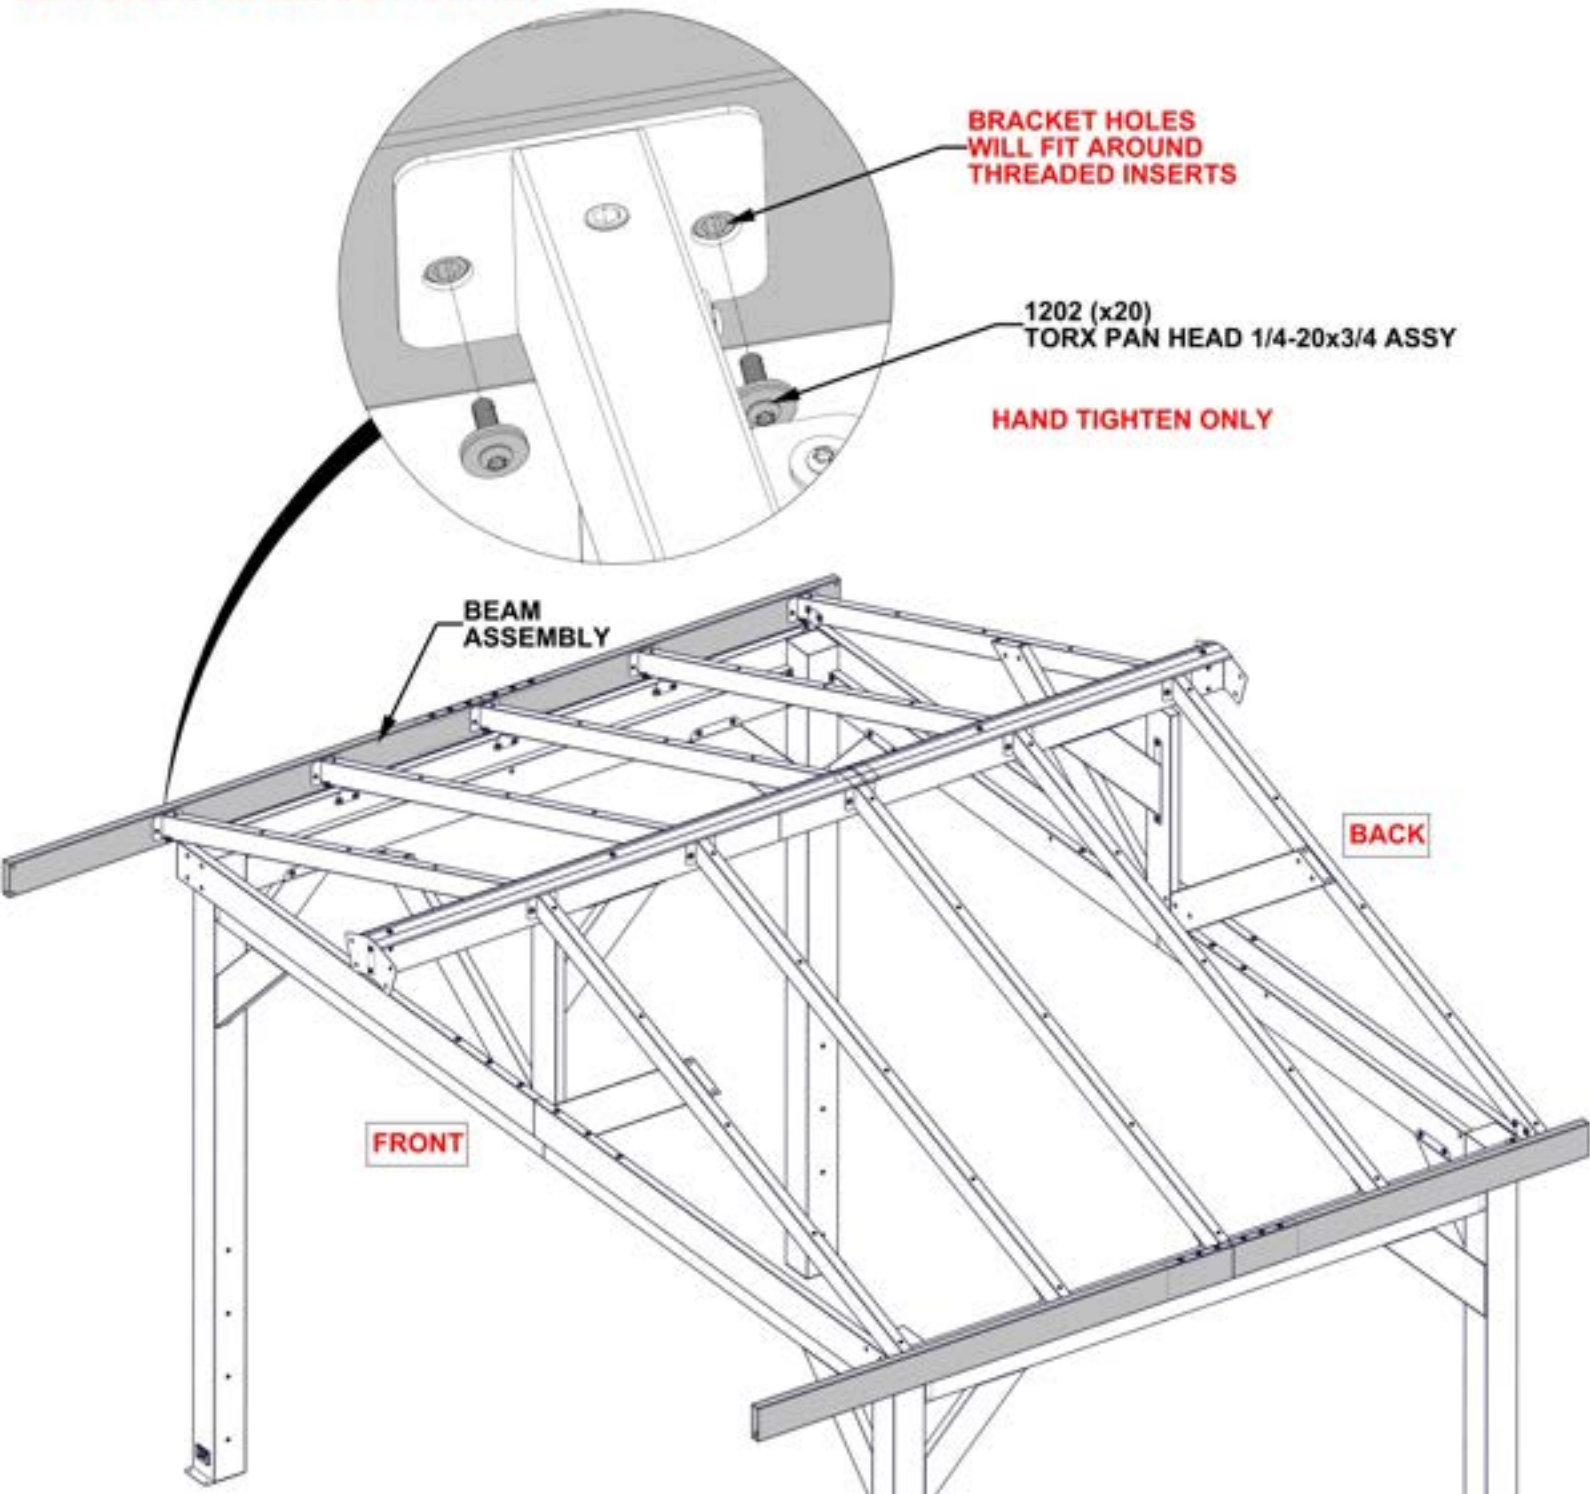

STEP 36 - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




B13 GABLE BEAM ASSEMBLY - A4M03519
(x2) 88 13/16"x5 1/4"x1 7/16" (36x134x2255)



J9 BEAM BRACKET - A4M03807
(x2) 1"x1 5/16"x4 9/16" (25x33.20x116)

- REPEAT THIS STEP TWICE

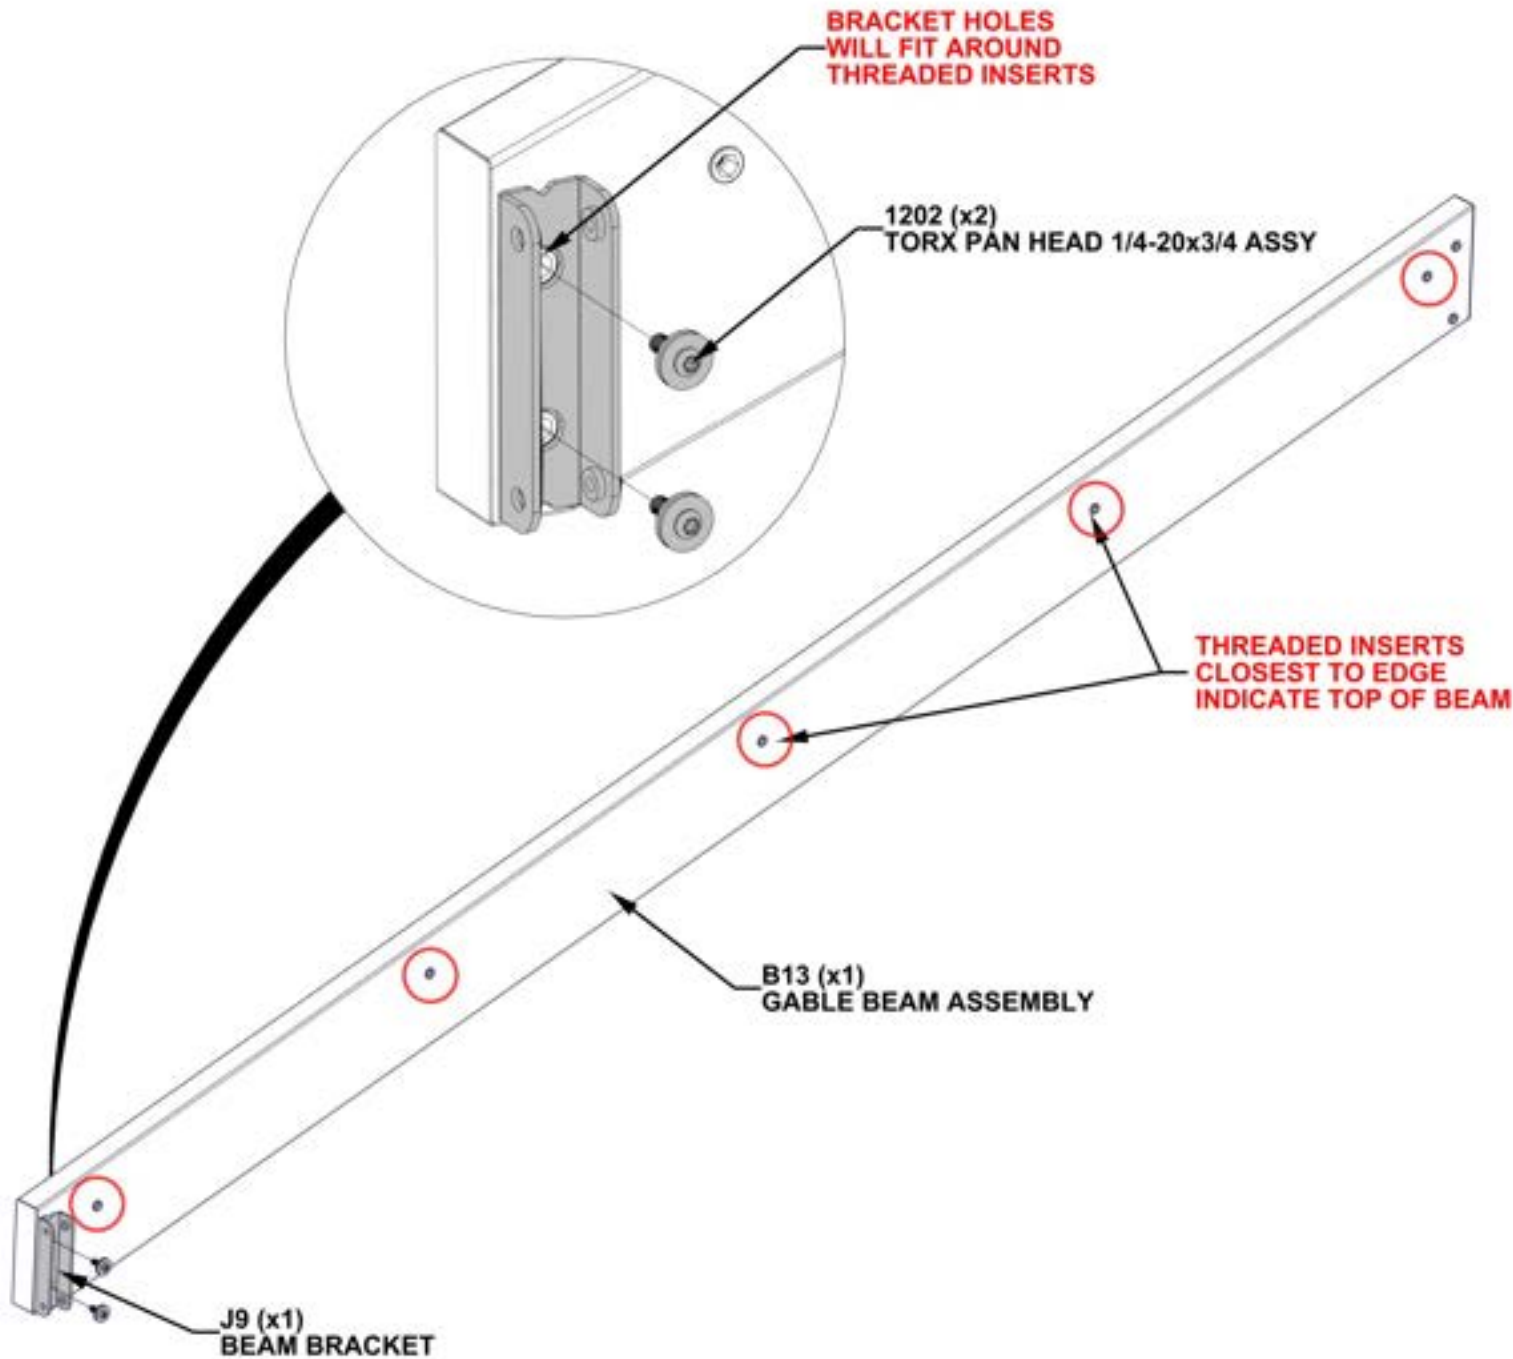


STEP 37 - ROOF ASSEMBLY



J8 GABLE BRACKET - A4M03804
(x2) 4 13/16"x1 9/16"x1 9/16" (40x40x123)

QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- REPEAT THIS STEP TWICE

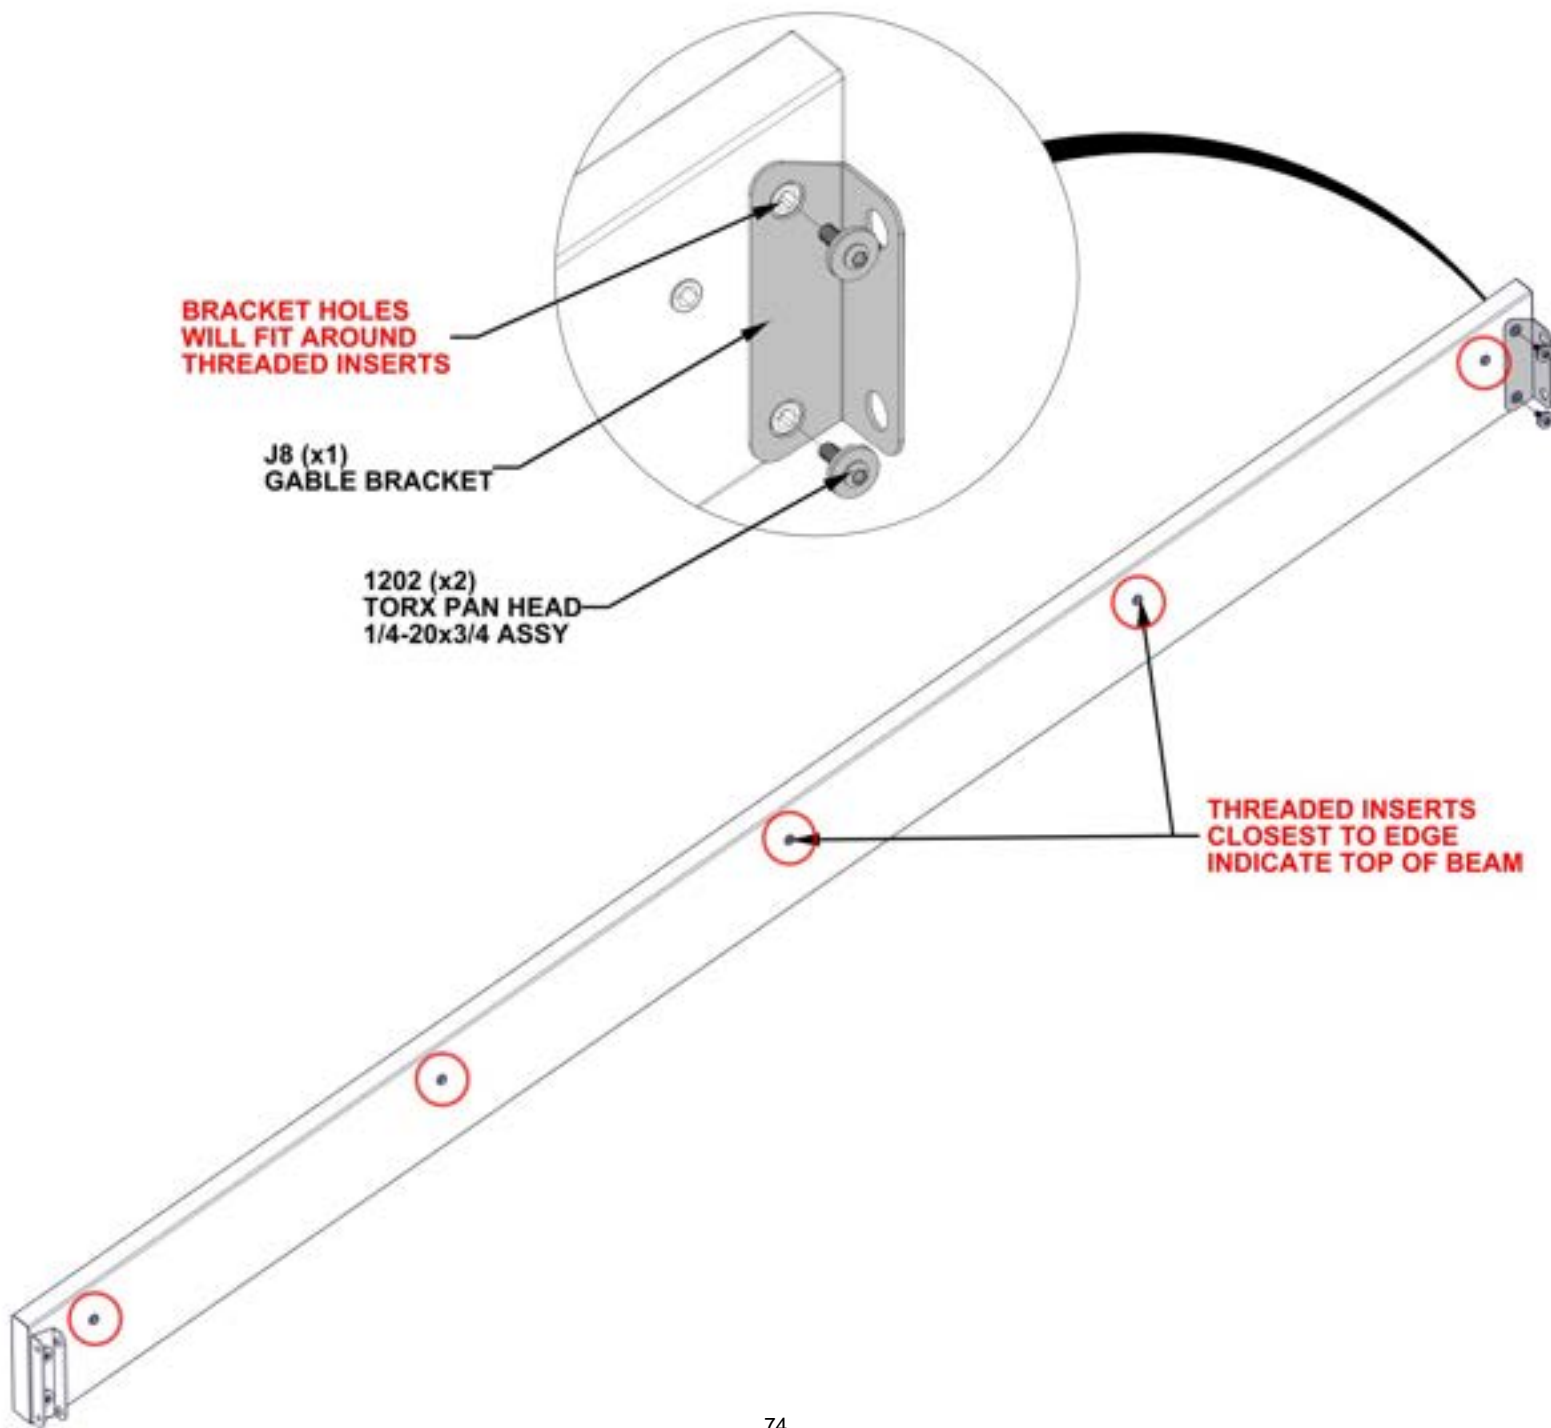


STEP 38A - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



GABLE BEAM ASSEMBLY FROM STEPS 36 - 37


- WITH AT LEAST TWO ADDITIONAL PEOPLE, ATTACH GABLE BEAM ASSEMBLIES.
- REPEAT THIS STEP TWICE FOR BOTH SIDES OF STRUCTURE.
- GABLE BEAM ASSEMBLIES WILL BE ATTACHED ON OPPOSITE SIDES OF ROOF STRUCTURE.

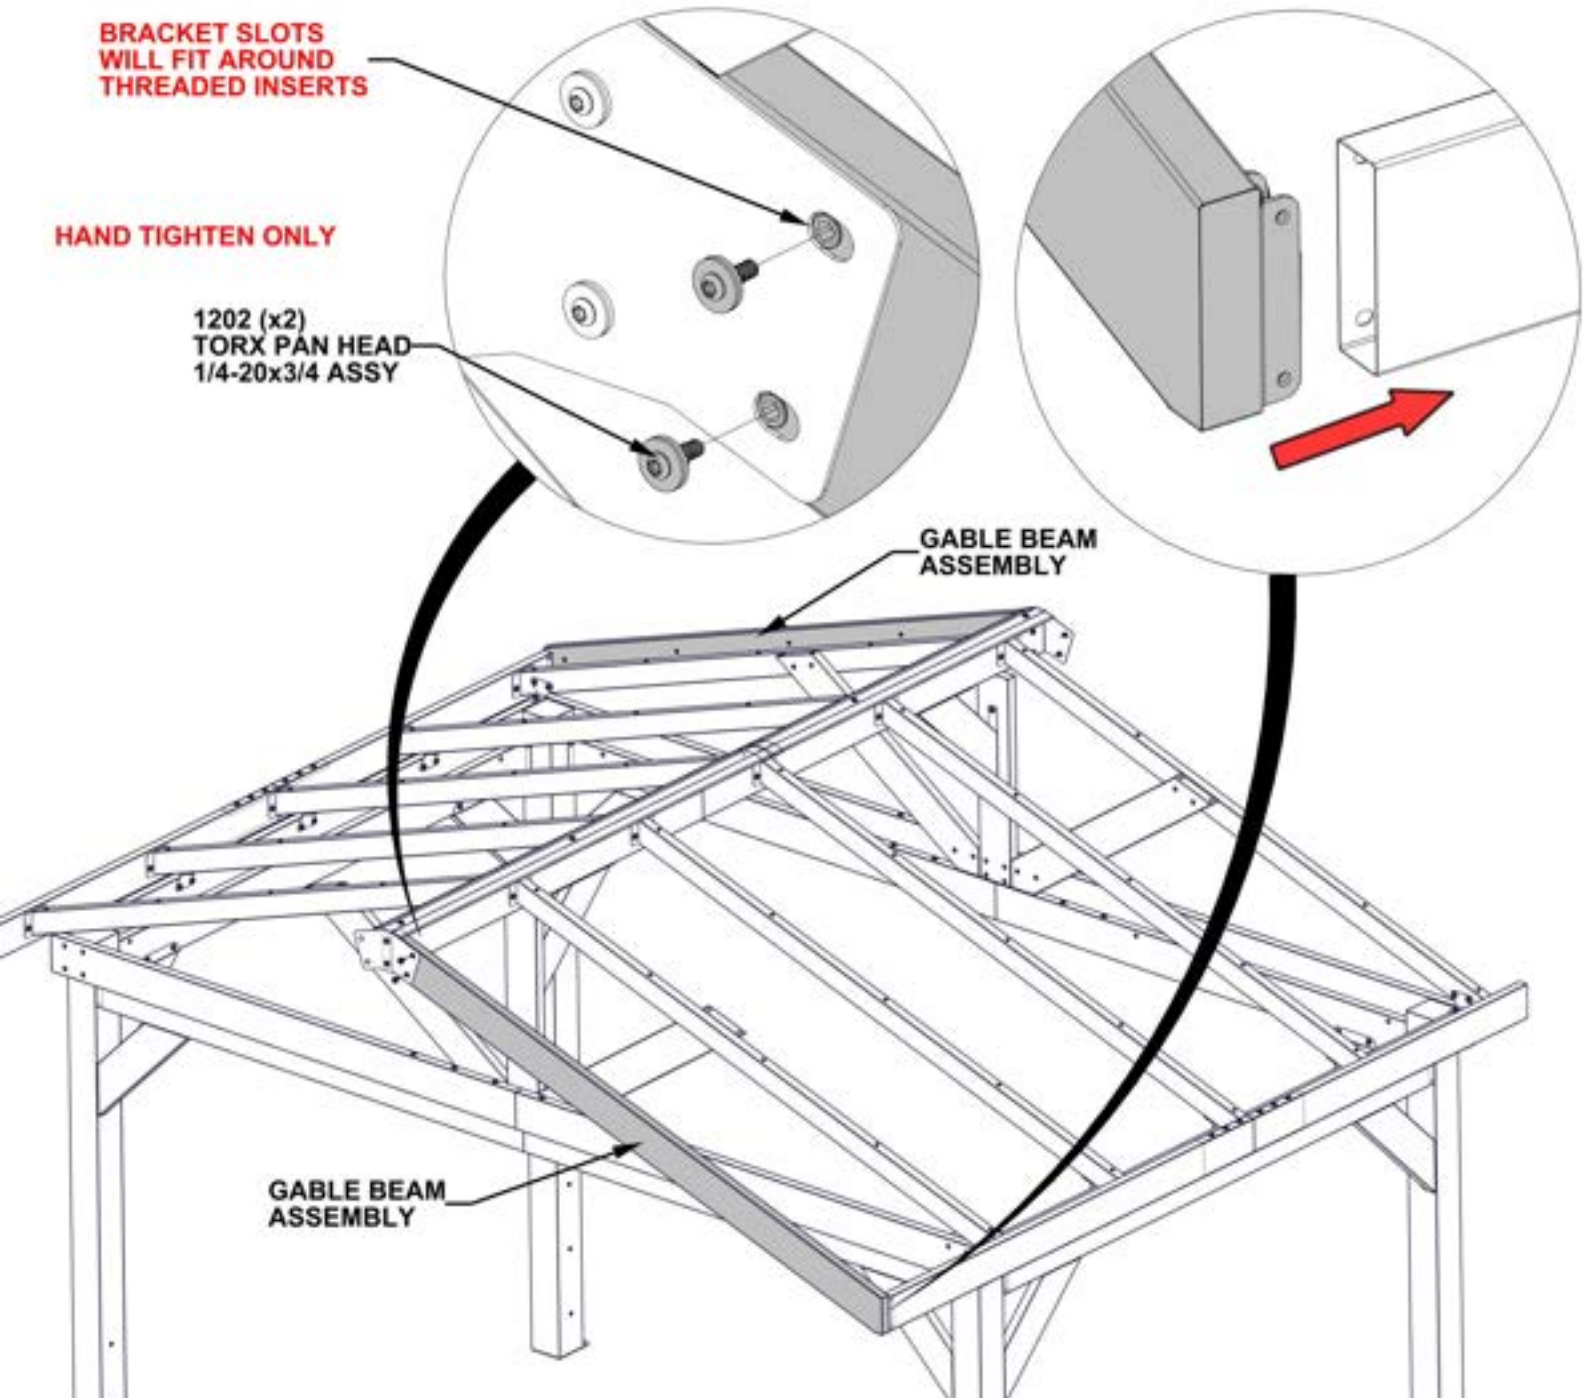

STEP 38B - ROOF ASSEMBLY


QTY	PartNo	DESCRIPTION
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- REPEAT THIS STEP TWICE FOR BOTH SIDES OF STRUCTURE

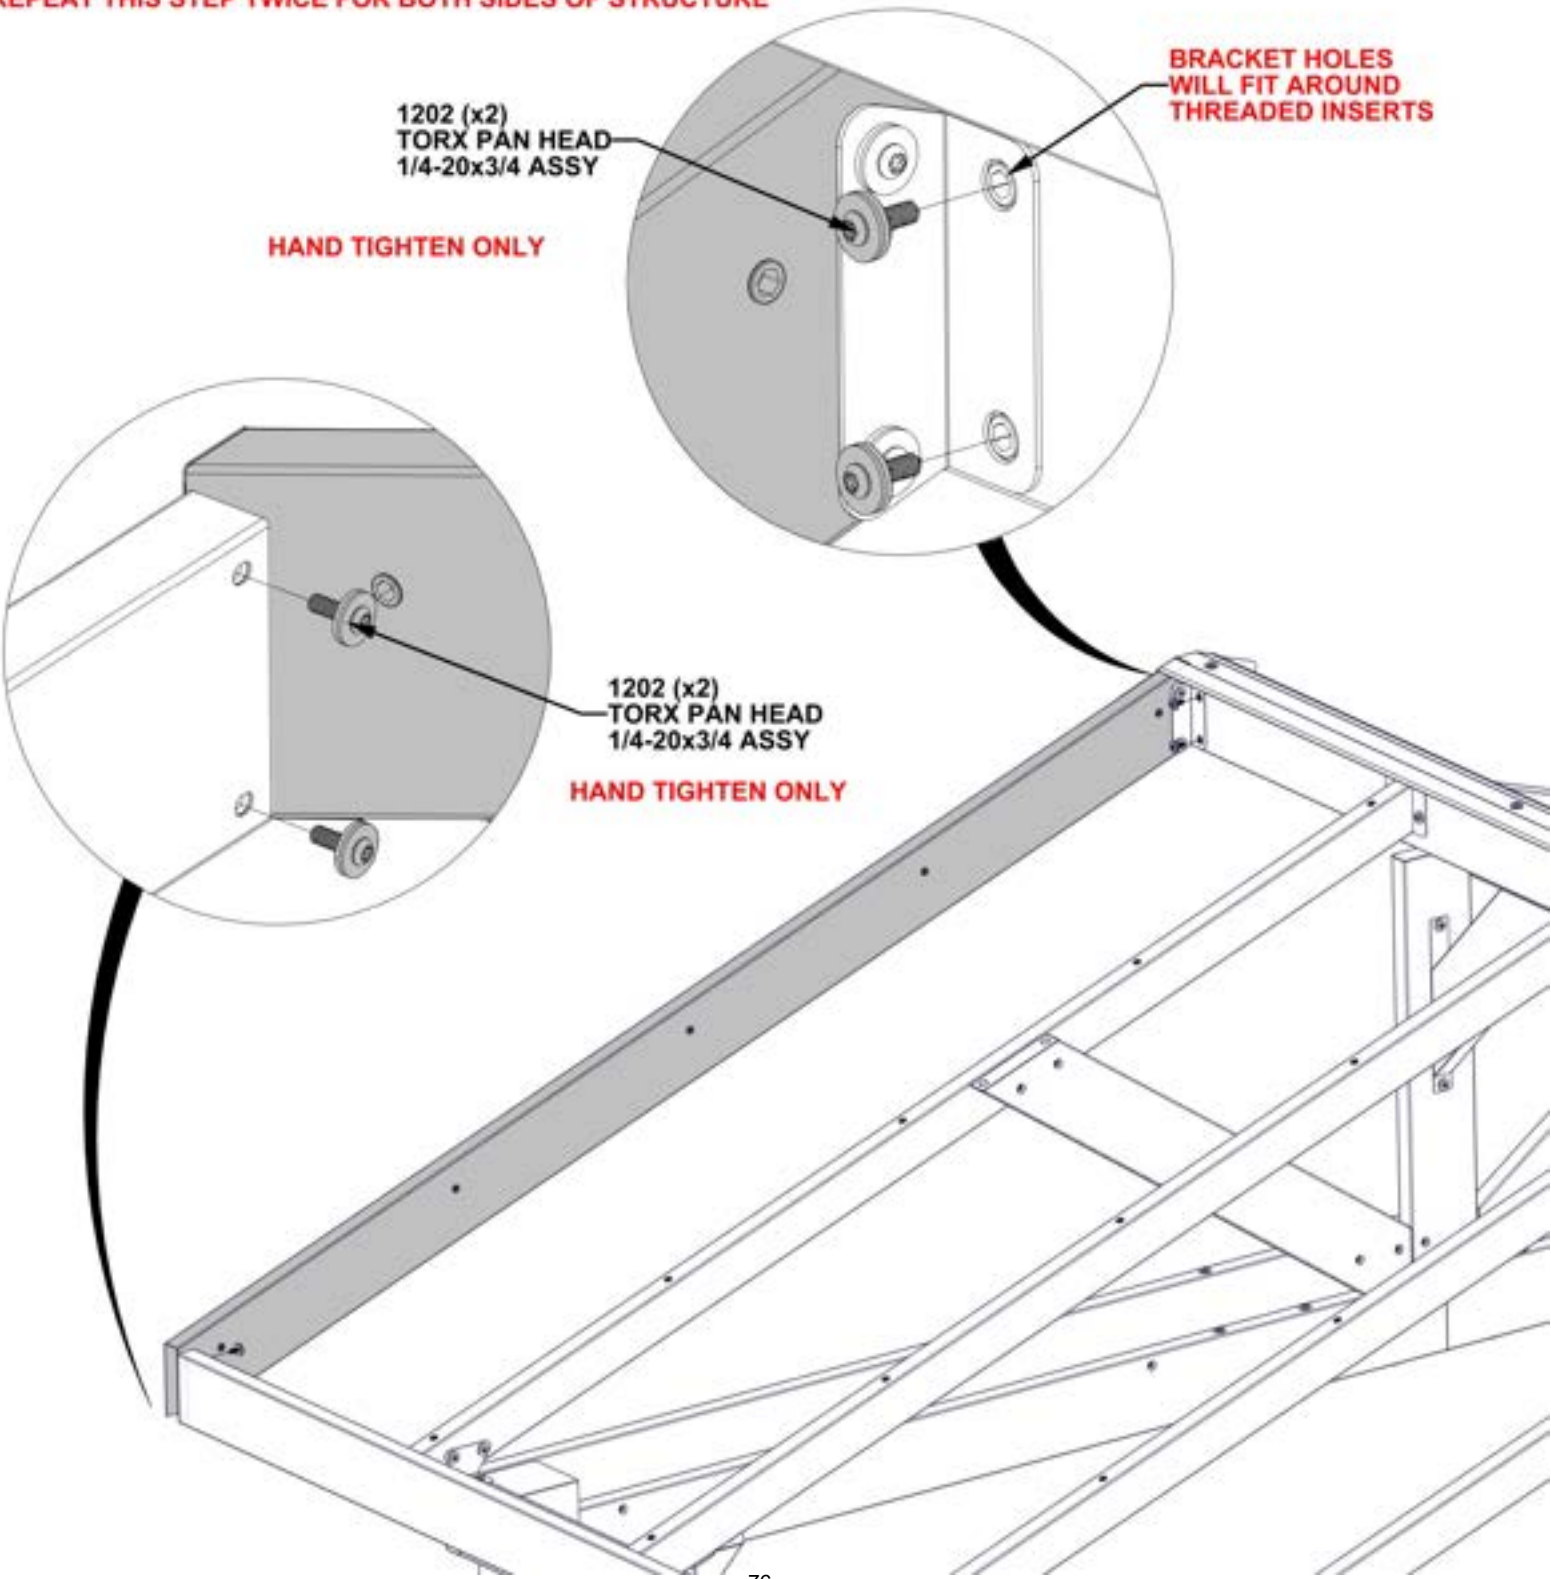

STEP 39 - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




B12 GABLE BEAM ASSEMBLY - A4M03518
(x2) 88 13/16"x5 1/4"x1 7/16" (36x134x2255)



J9 BEAM BRACKET - A4M03807
(x2) 1"x1 5/16"x4 9/16" (25x33.20x116)

- REPEAT THIS STEP TWICE

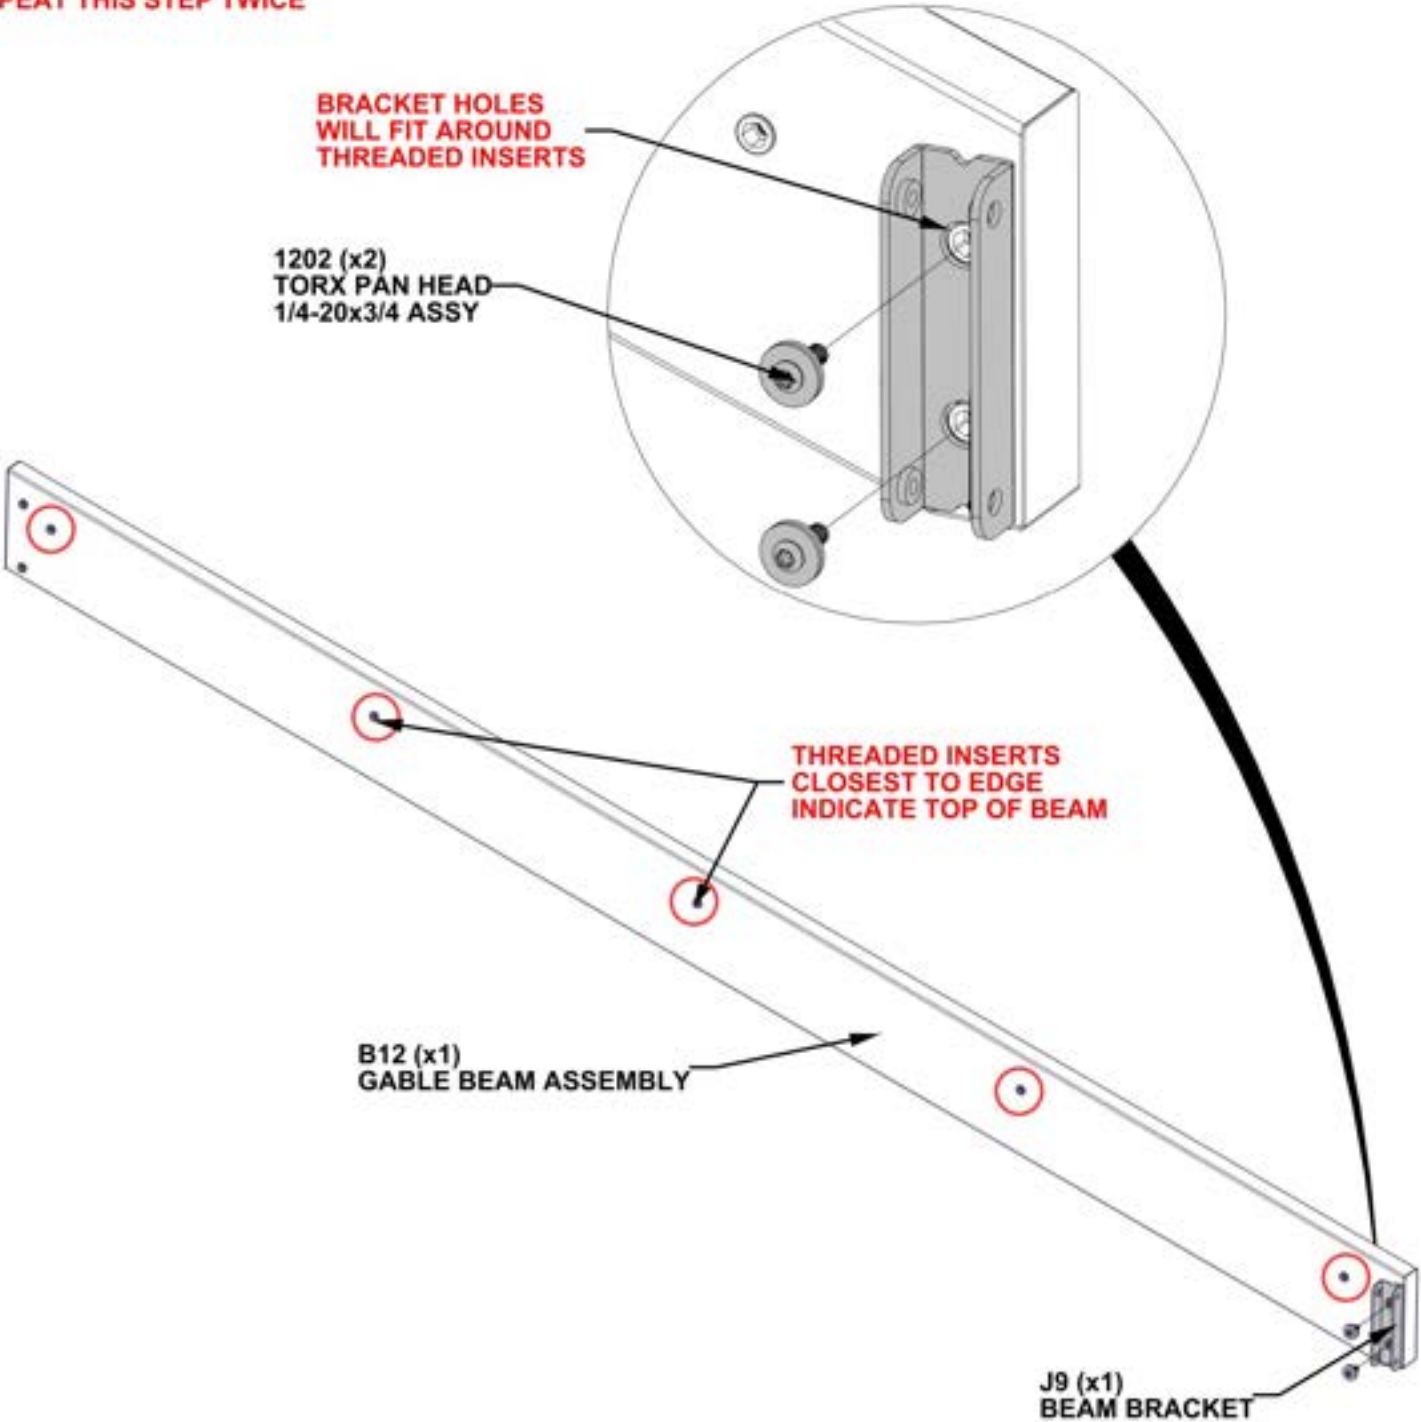


STEP 40 - ROOF ASSEMBLY



J8 GABLE BRACKET - A4M03804
(x2) 4 13/16"x1 9/16"x1 9/16" (40x40x123)

QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- REPEAT THIS STEP TWICE

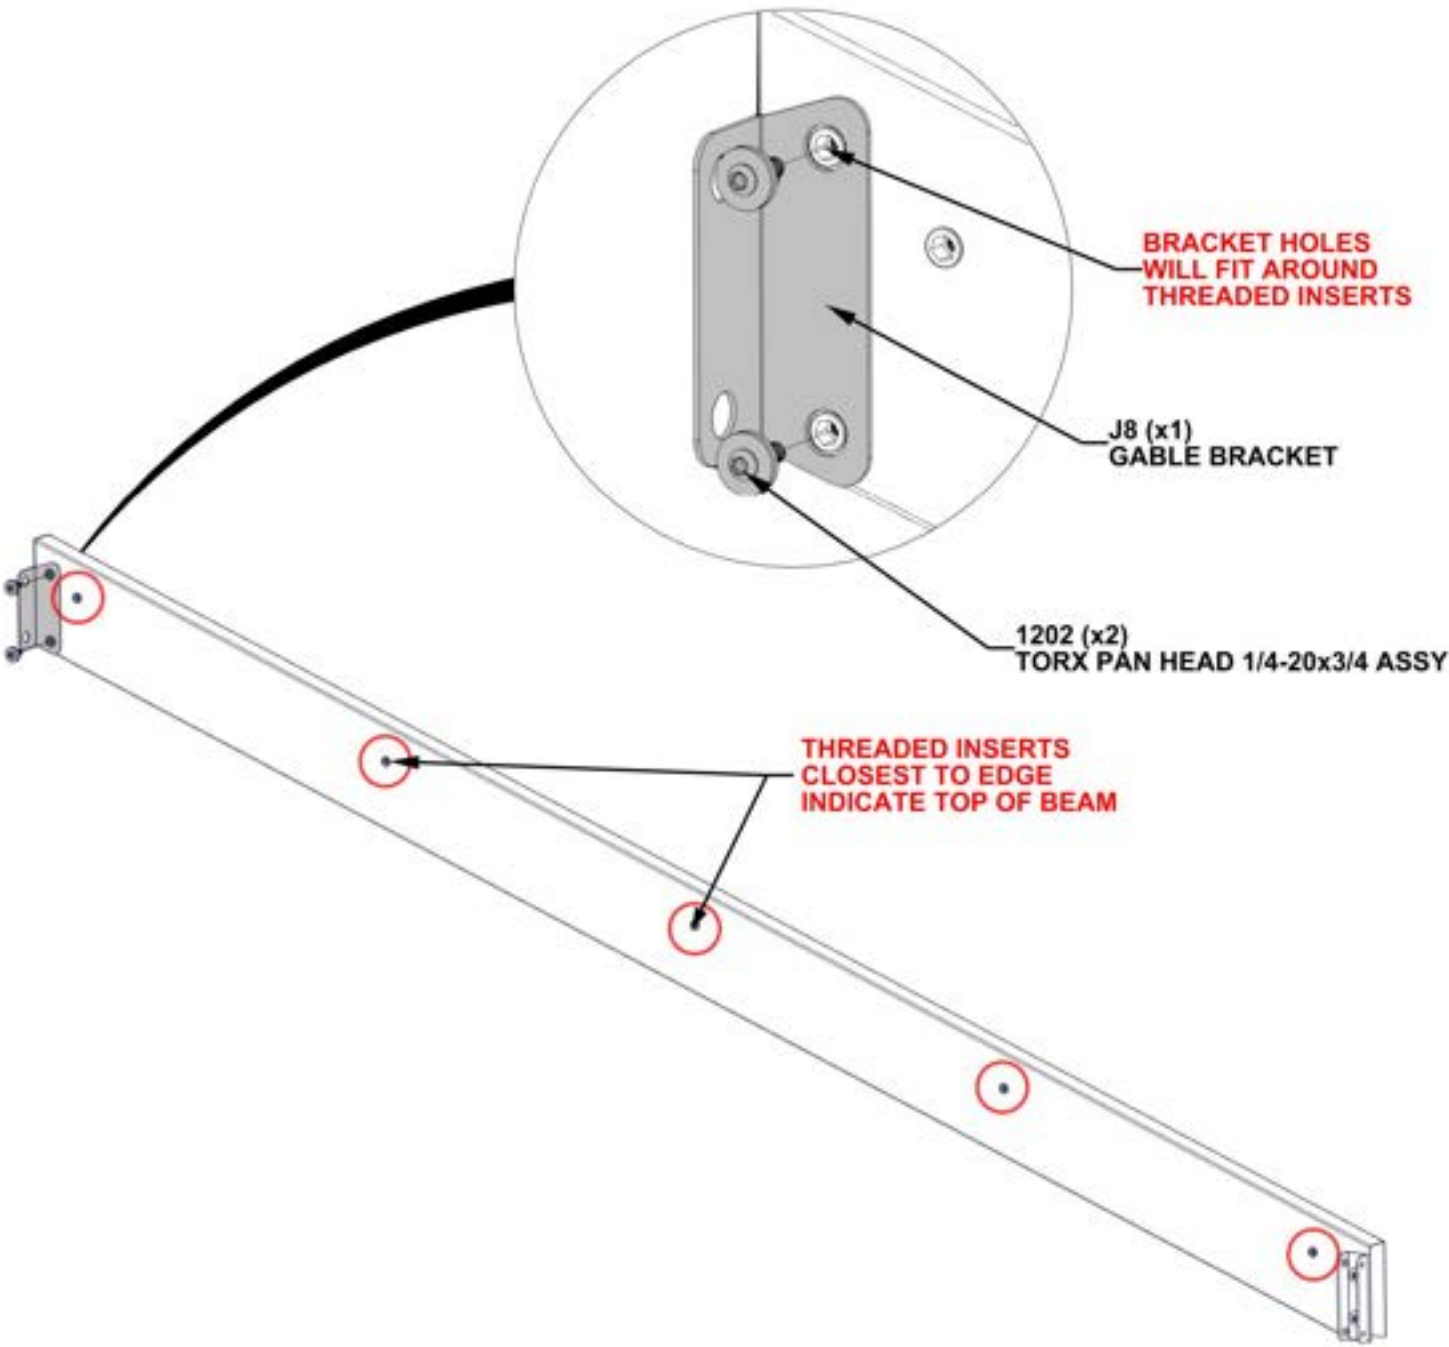


STEP 41A - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




- WITH AT LEAST TWO ADDITIONAL PEOPLE, ATTACH GABLE BEAM ASSEMBLIES.
- REPEAT THIS STEP TWICE FOR BOTH SIDES OF STRUCTURE.
- GABLE BEAM ASSEMBLIES WILL BE ATTACHED ON OPPOSITE SIDES OF ROOF STRUCTURE.

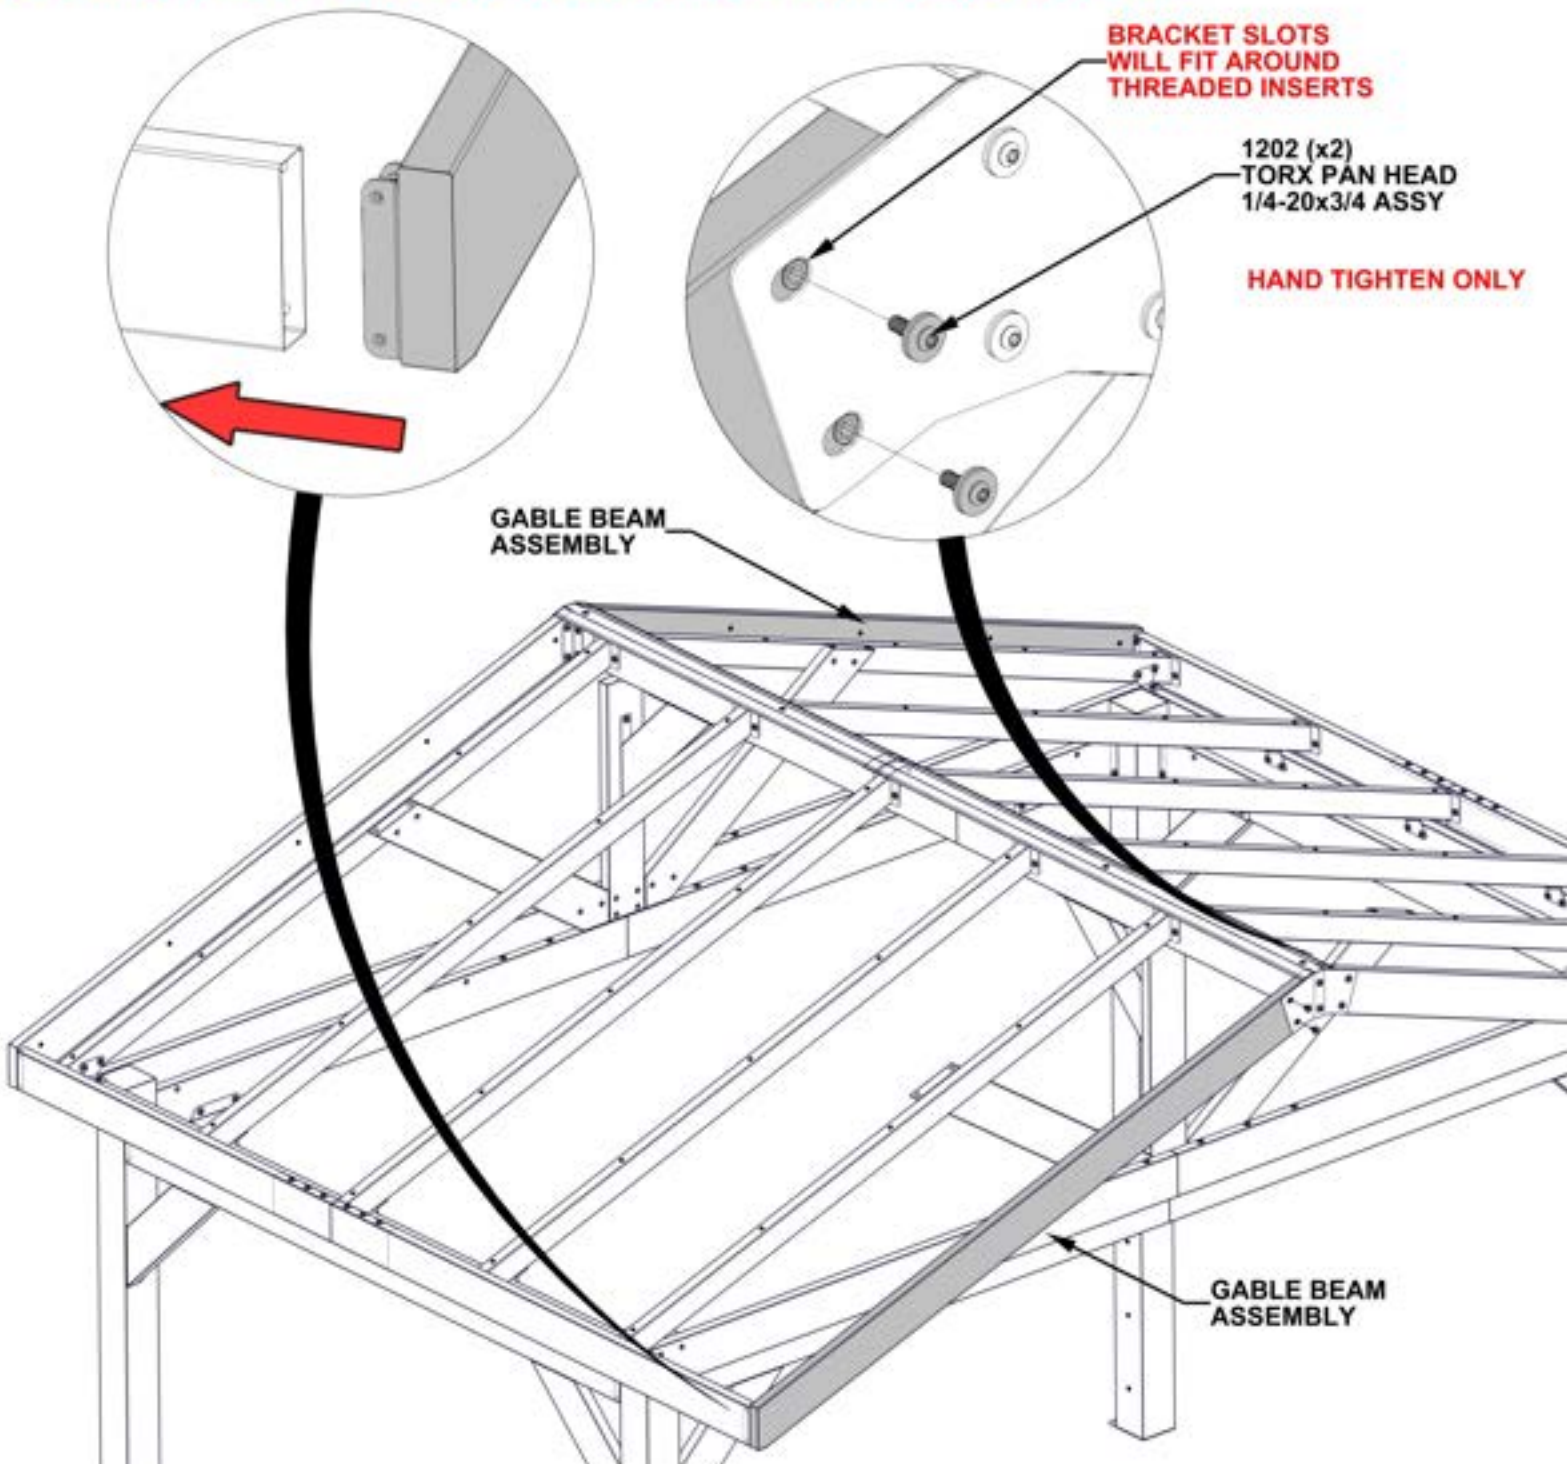

STEP 41B - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- REPEAT THIS STEP TWICE FOR BOTH SIDES OF STRUCTURE

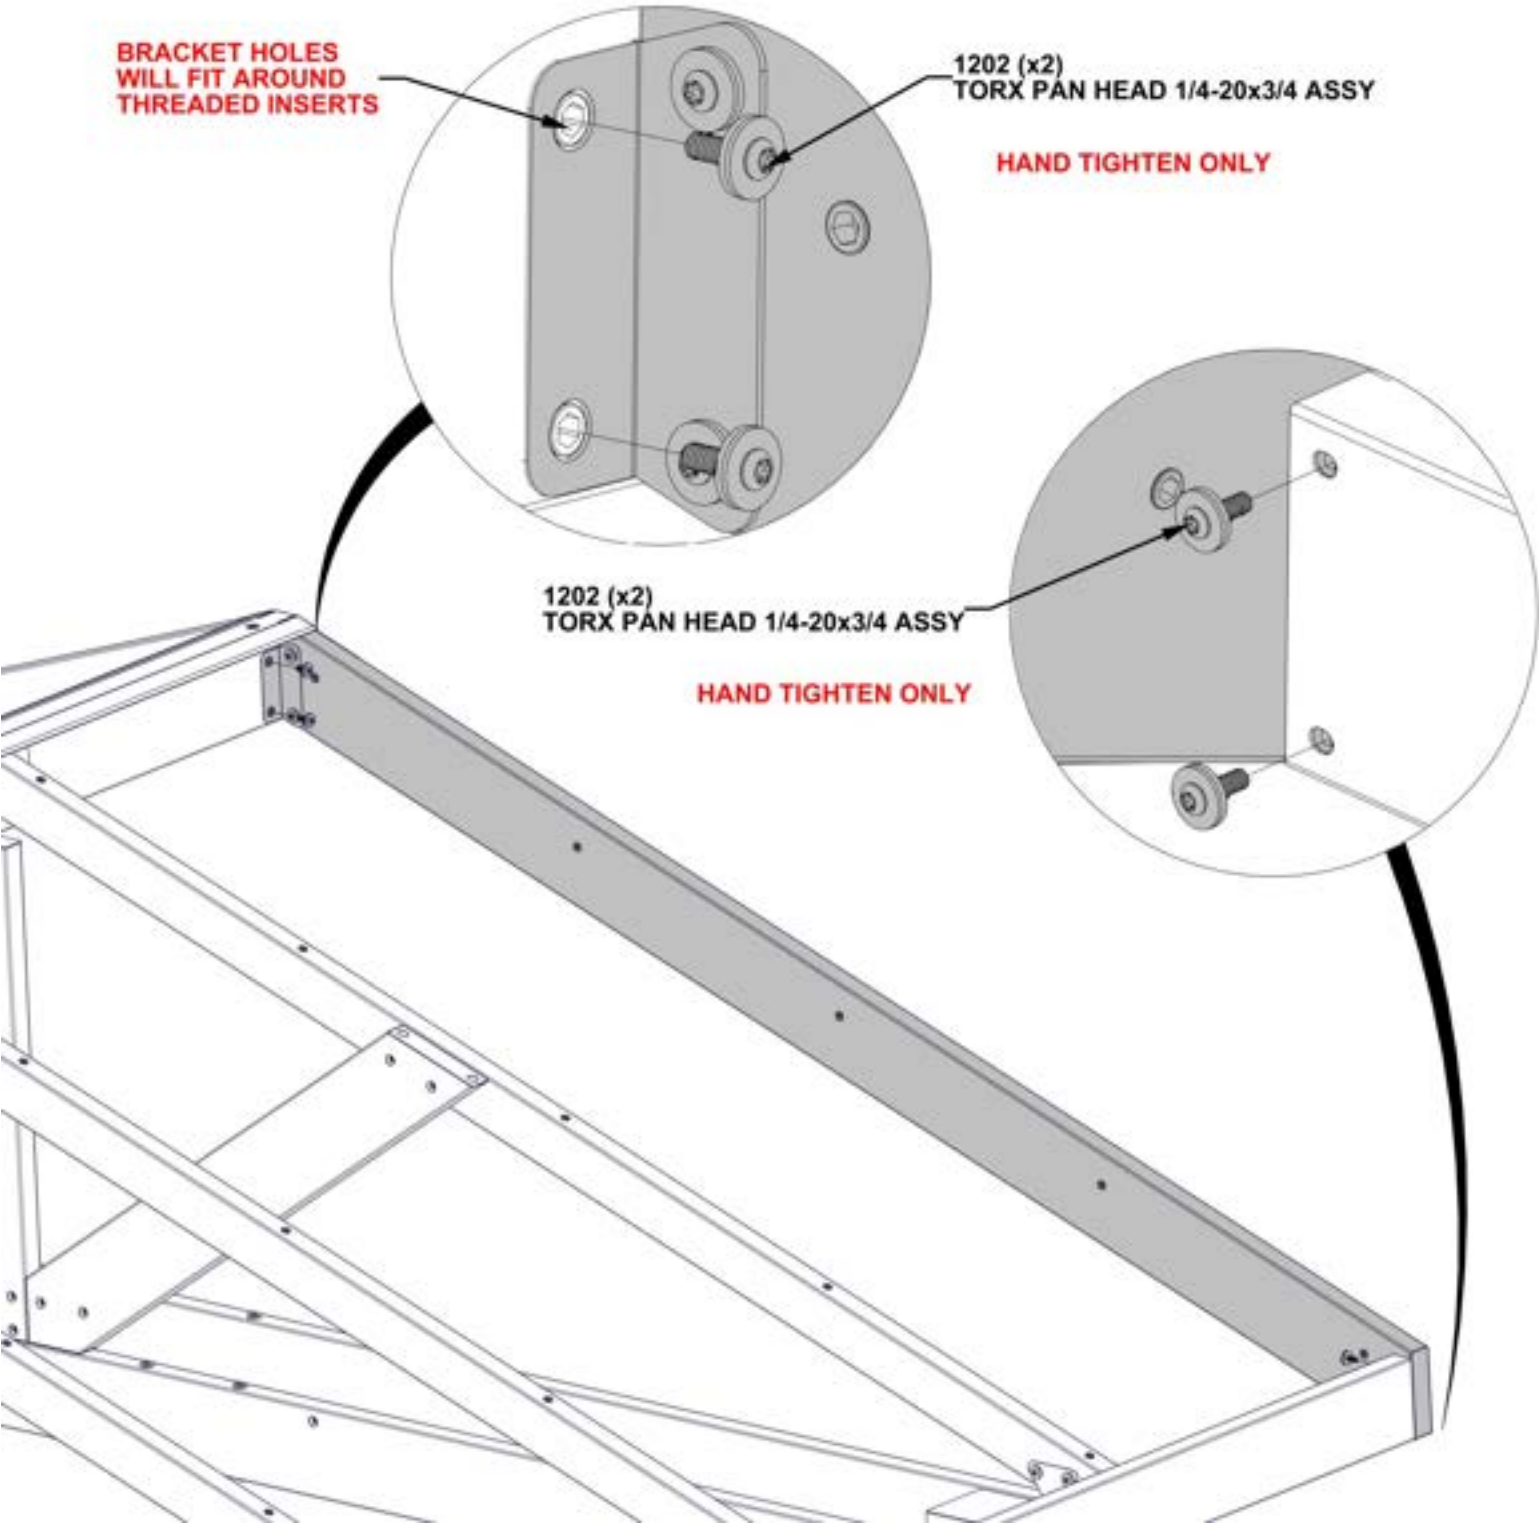

STEP 42 - PURLIN ASSEMBLY




E01 PURLIN ASSEMBLY - A4M03800
(x10) 71 11/16"x1 15/16"x1 9/16" (40x50x1820.60)



A6P00530 2-WAY SQUARE PLUG
(x10)

- COMPLETE THIS STEP TEN TIMES
- USE A RUBBER MALLET TO TAP 2-WAY SQUARE PLUG INTO END OF PURLIN

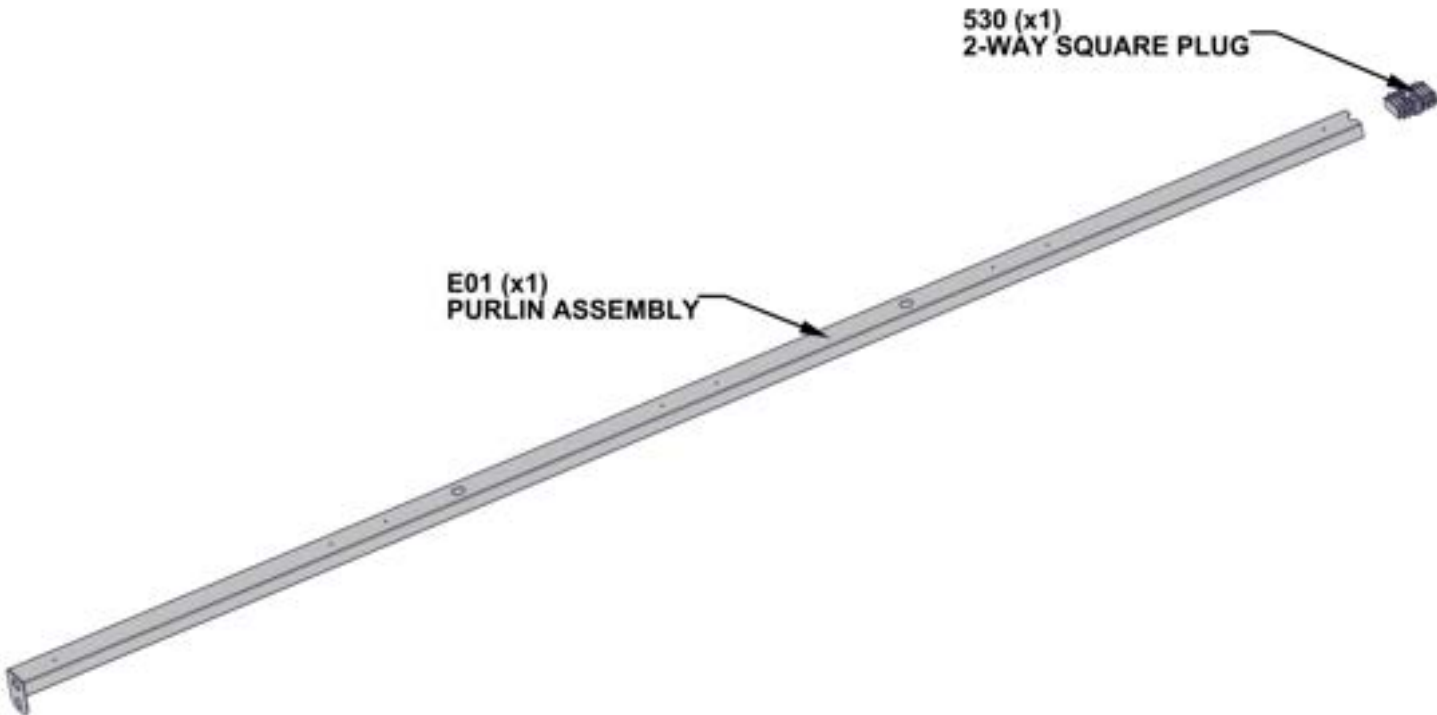


STEP 43 - PURLIN ASSEMBLY



E02 PURLIN ASSEMBLY - A4M03801
(x10) 53 5/8"x1 15/16"x1 9/16" (40x50x1362.40)

- COMPLETE THIS STEP TEN TIMES
- USE A RUBBER Mallet TO TAP ENDS OF EACH PURLIN UNTIL TIGHT AGAINST 2-WAY PLUG

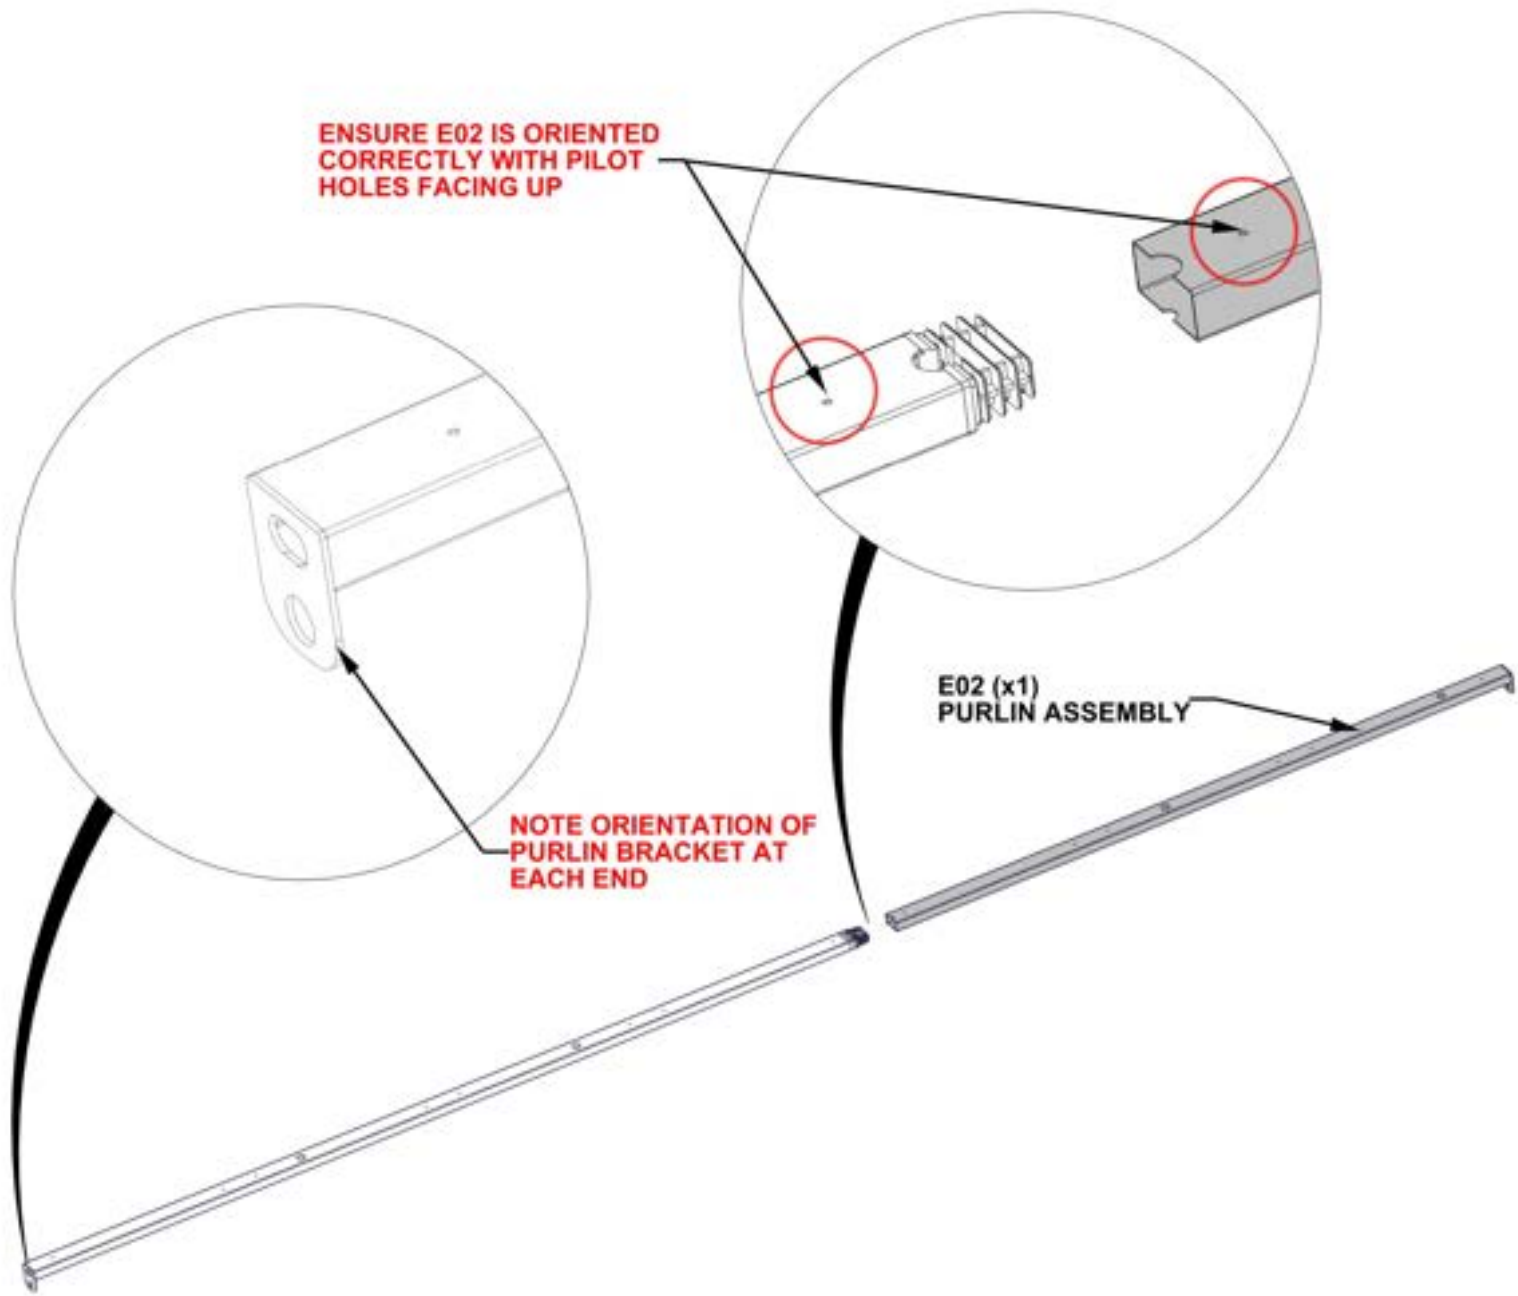


STEP 44A - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
50	H101132	TORX SOCKET SCREW SHORT 1/4-20



PURLIN ASSEMBLIES
STEP 42 - 43 (x10)


- MAKE SURE MIDDLE OF PURLIN ASSEMBLY IS SUPPORTED WHEN LIFTING.
- ALIGN ALL PURLIN JOINTS ALONG THE THIRD RAFTER FROM THE BACK.
- STARTING AT THE RIDGE AND WORKING DOWN WILL MAKE IT EASIER TO INSTALL PURLIN ASSEMBLIES.

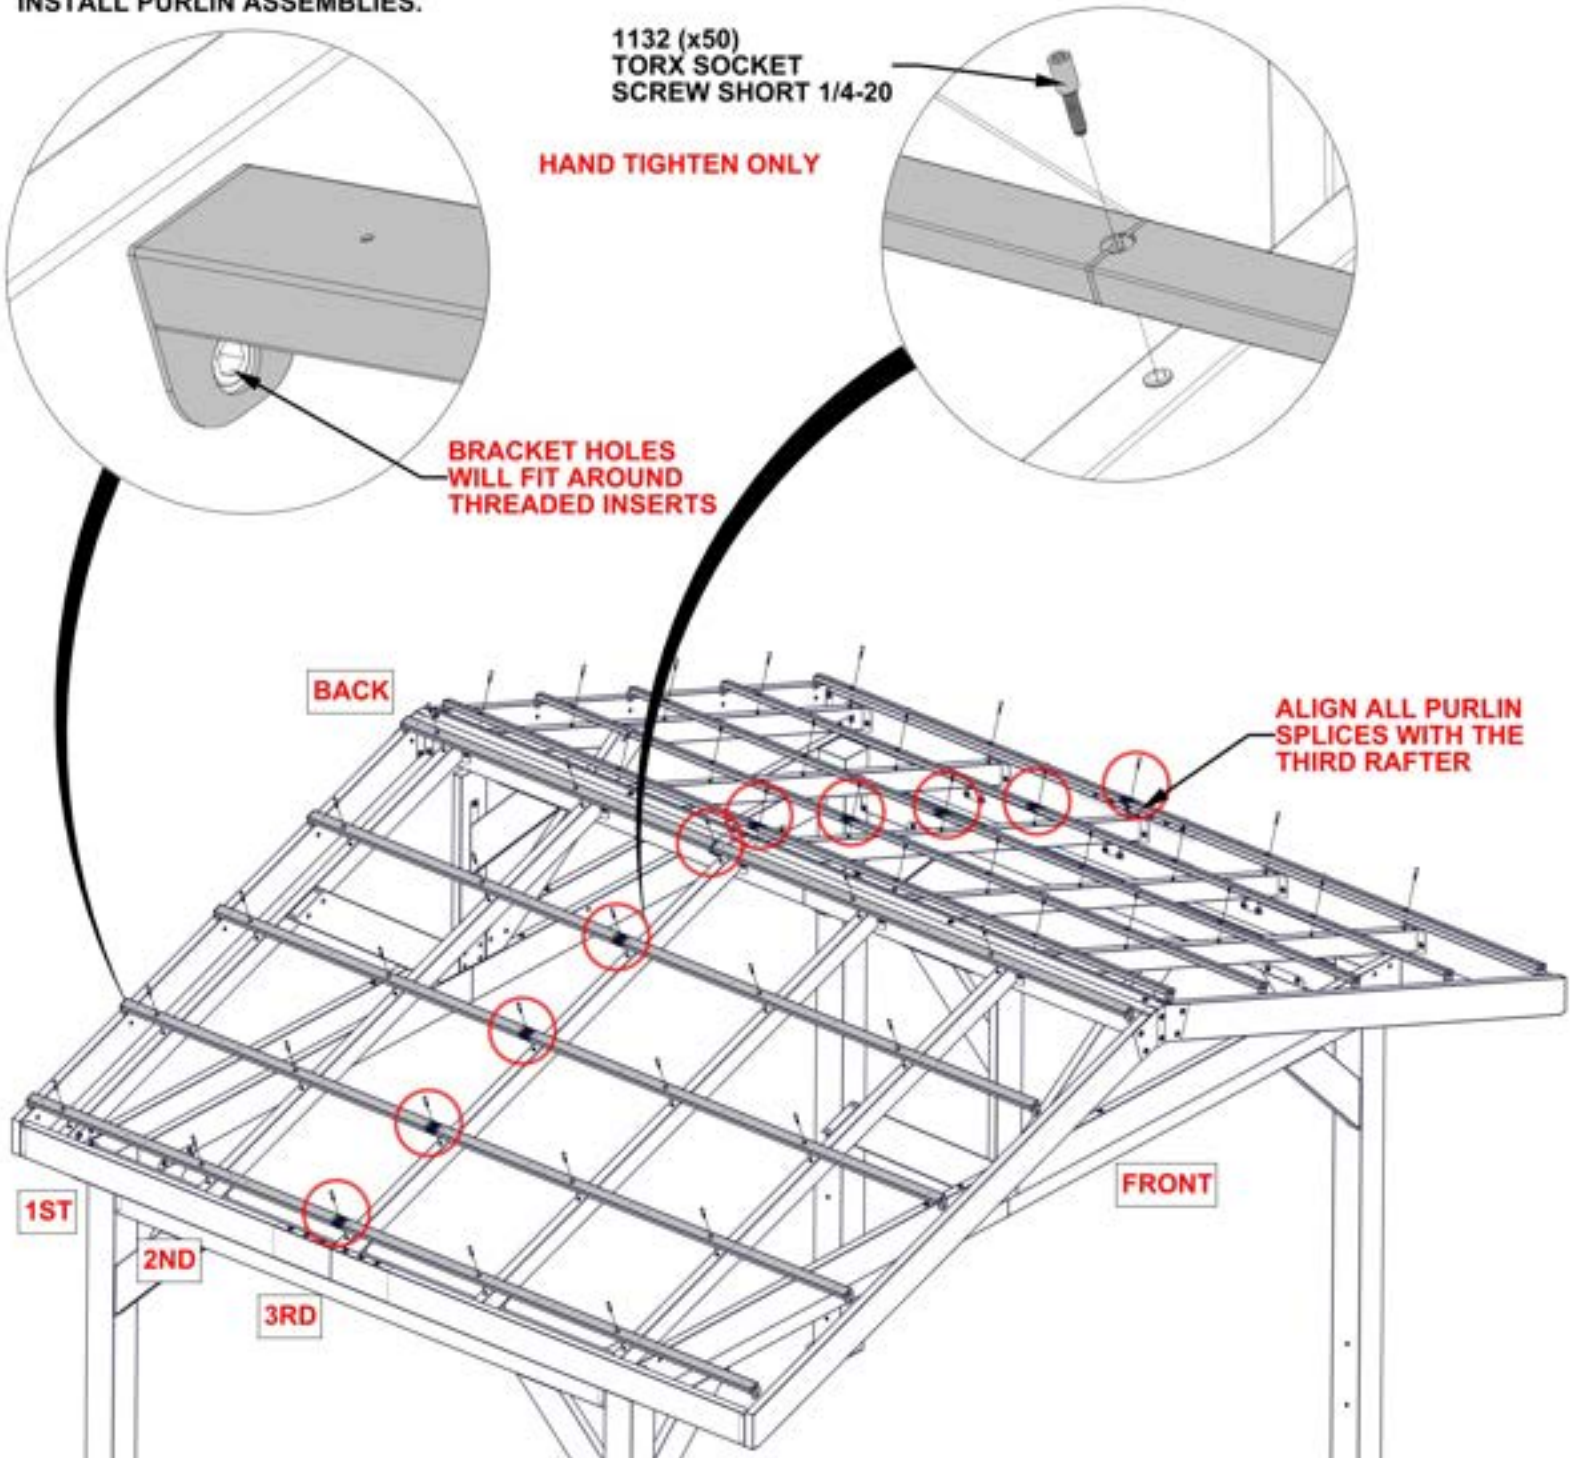

STEP 44B - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
20	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ONCE PURLINS HAVE BEEN INSTALLED,
TIGHTEN ALL HARDWARE FROM PREVIOUS STEPS.

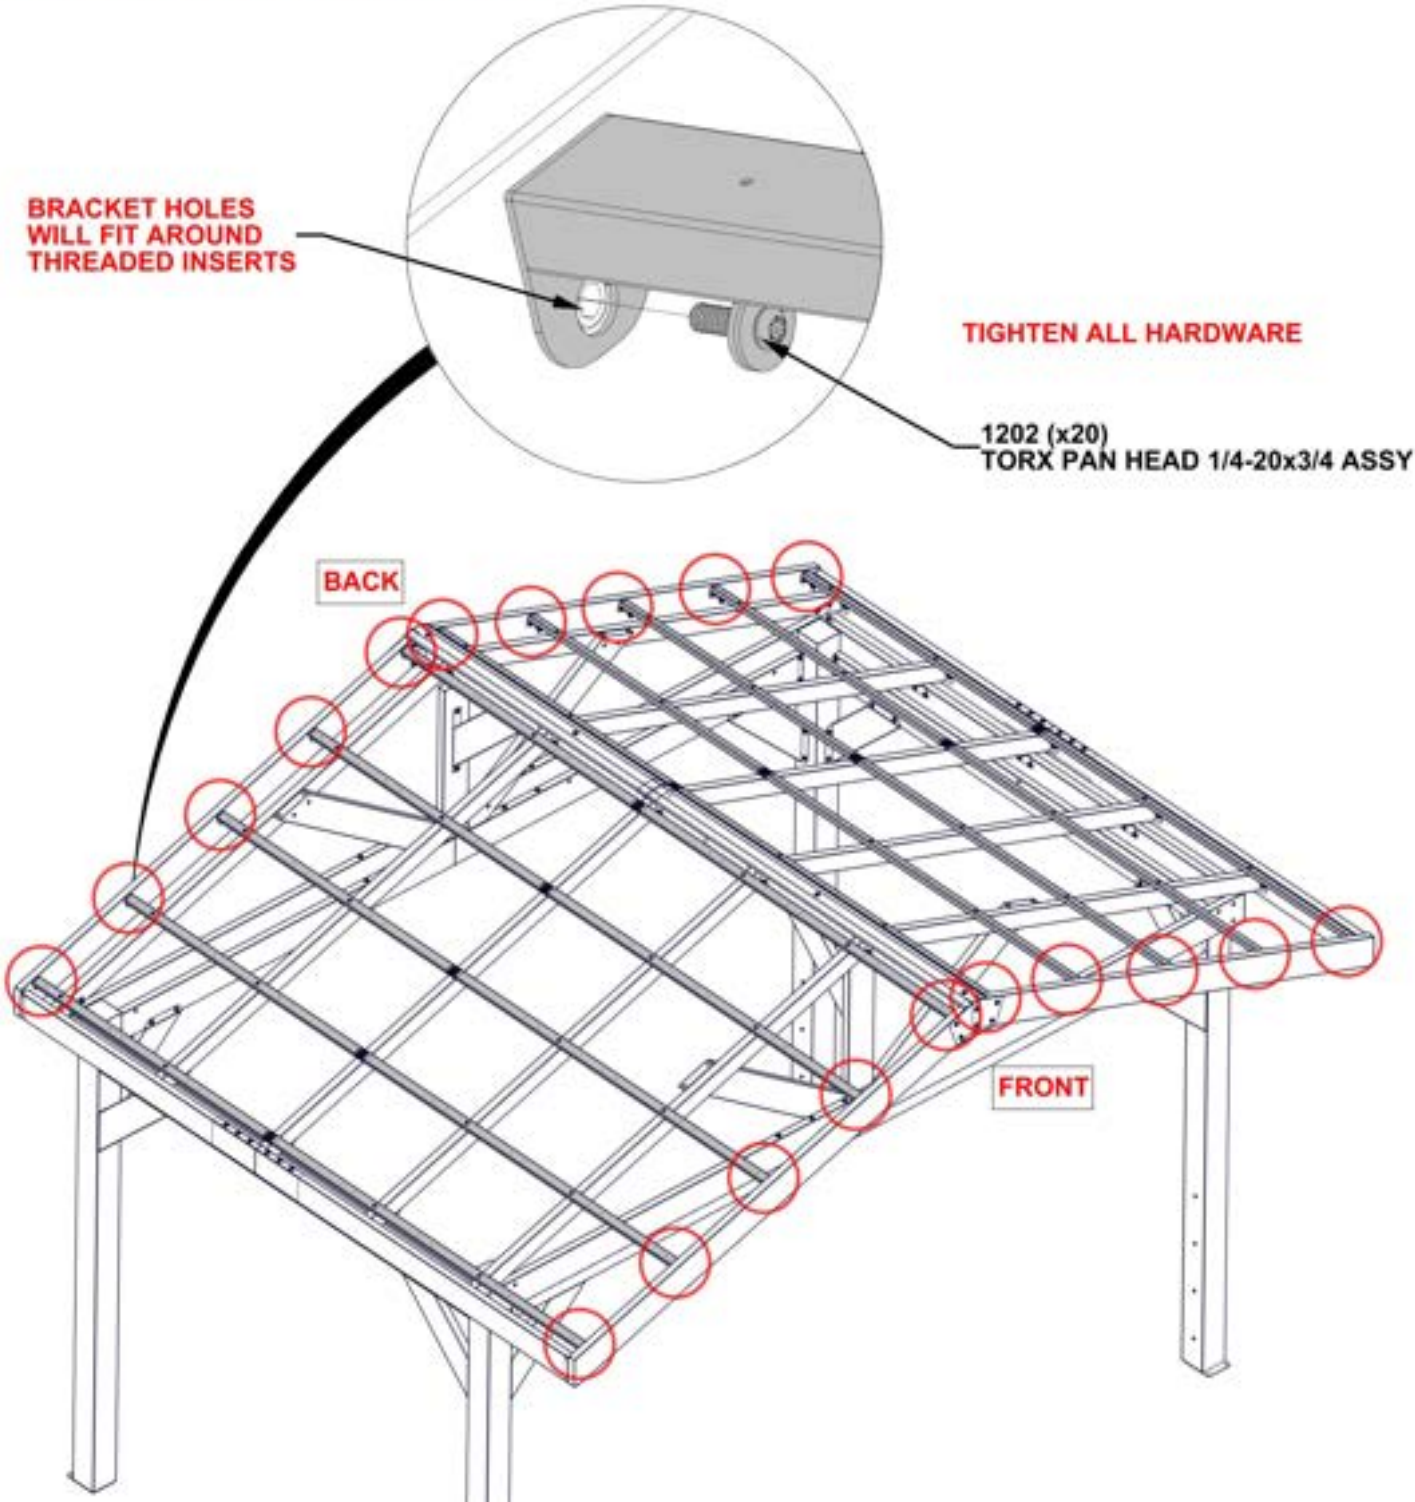



STEP 45 - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
10	H101117	SCREW WOODGRIP 10-16x3/4" BLK



A4M03528 STEEL SHEETING
(x1)

- REMOVE PROTECTIVE FILM.
- SLIDE ROOF SHEET UP, MAKING SURE IT SLIDES UNDERNEATH THE RIDGE CAP.
- STARTING AT THE LEFT SIDE AND WORKING TO THE RIGHT, LINE UP THE HOLES IN THE ROOF SHEET WITH THE PILOT HOLES IN THE PURLINS.
- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**
- **LINE UP THE PILOT HOLES IN THE ROOF SHEET WITH THE PILOT HOLES IN THE PURLINS.**

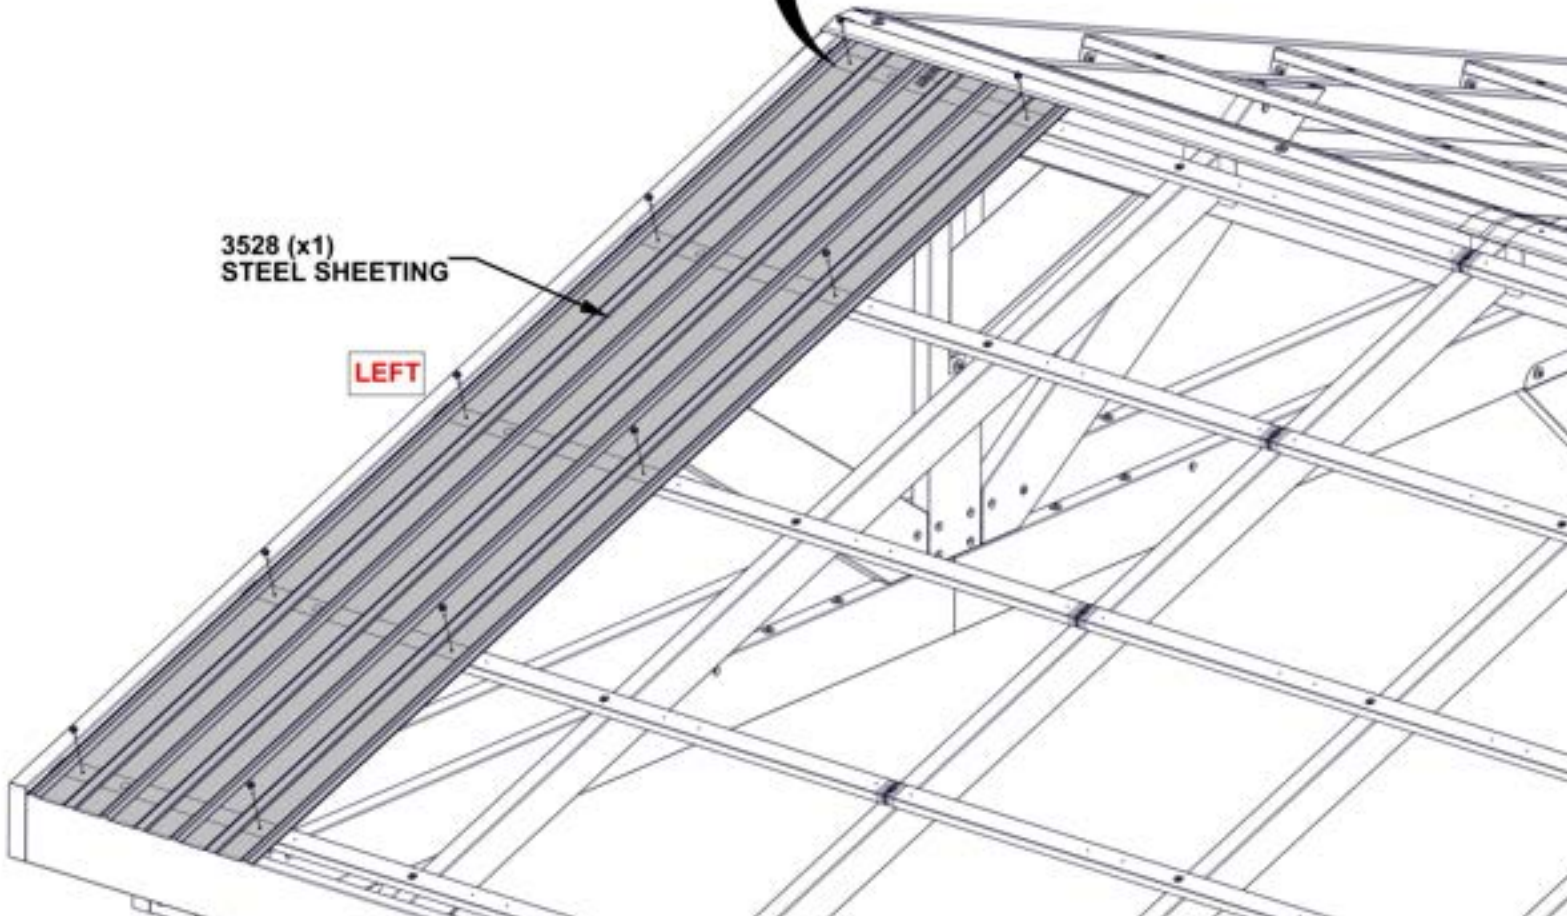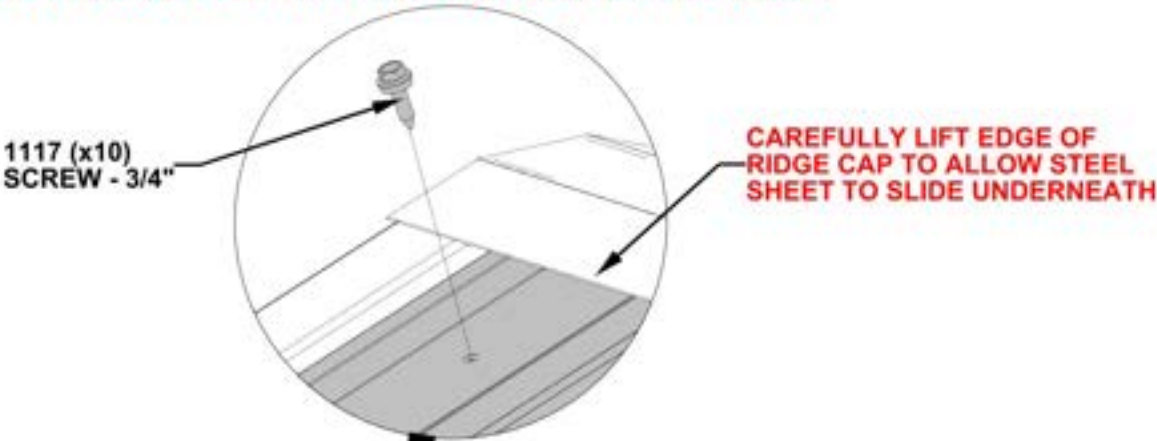


STEP 46 - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
10	H101117	SCREW WOODGRIP 10-16x3/4" BLK



A4M03528 STEEL SHEETING
(x1)

- REMOVE PROTECTIVE FILM.
- SLIDE ROOF SHEET UP, MAKING SURE IT SLIDES UNDERNEATH THE RIDGE CAP.
- STARTING AT THE LEFT SIDE AND WORKING TO THE RIGHT, LINE UP THE HOLES IN THE ROOF SHEET WITH THE PILOT HOLES IN THE PURLINS.
- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**
- **LINE UP THE PILOT HOLES IN THE ROOF SHEET WITH THE PILOT HOLES IN THE PURLINS.**

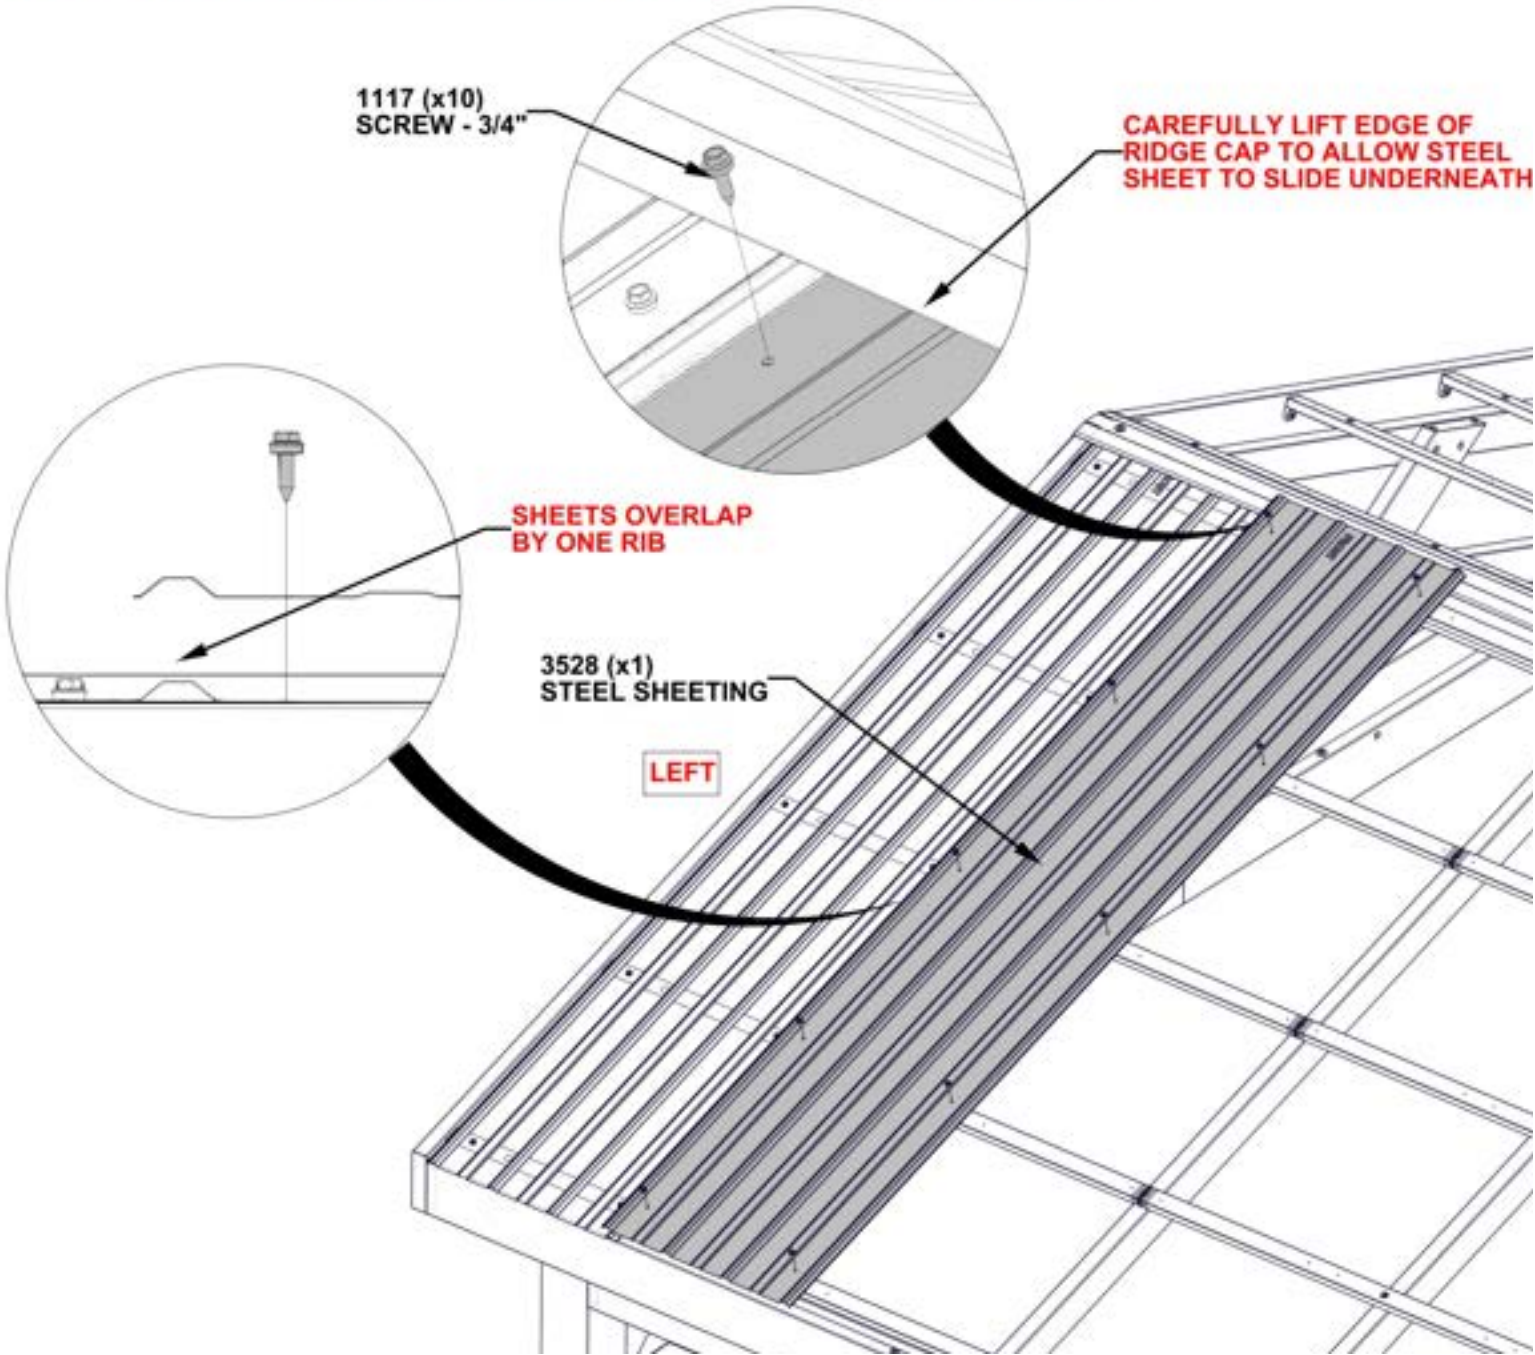


STEP 47 - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
50	H101117	SCREW WOODGRIP 10-16x3/4" BLK




A4M03528 STEEL SHEETING
(x5)

- REMOVE PROTECTIVE FILM.
- INSTALL FIVE SHEETS IN THE SAME WAY AS THE FIRST TWO.
- ATTACH AND FULLY TIGHTEN ALL SCREWS ON EACH ROOF SHEET BEFORE ATTACHING THE NEXT ONE. THIS MAKES IT POSSIBLE TO REACH ALL THE SCREWS WITHOUT GETTING ON THE ROOF.
- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**
- **LINE UP THE PILOT HOLES IN THE ROOF SHEET WITH THE PILOT HOLES IN THE PURLINS.**

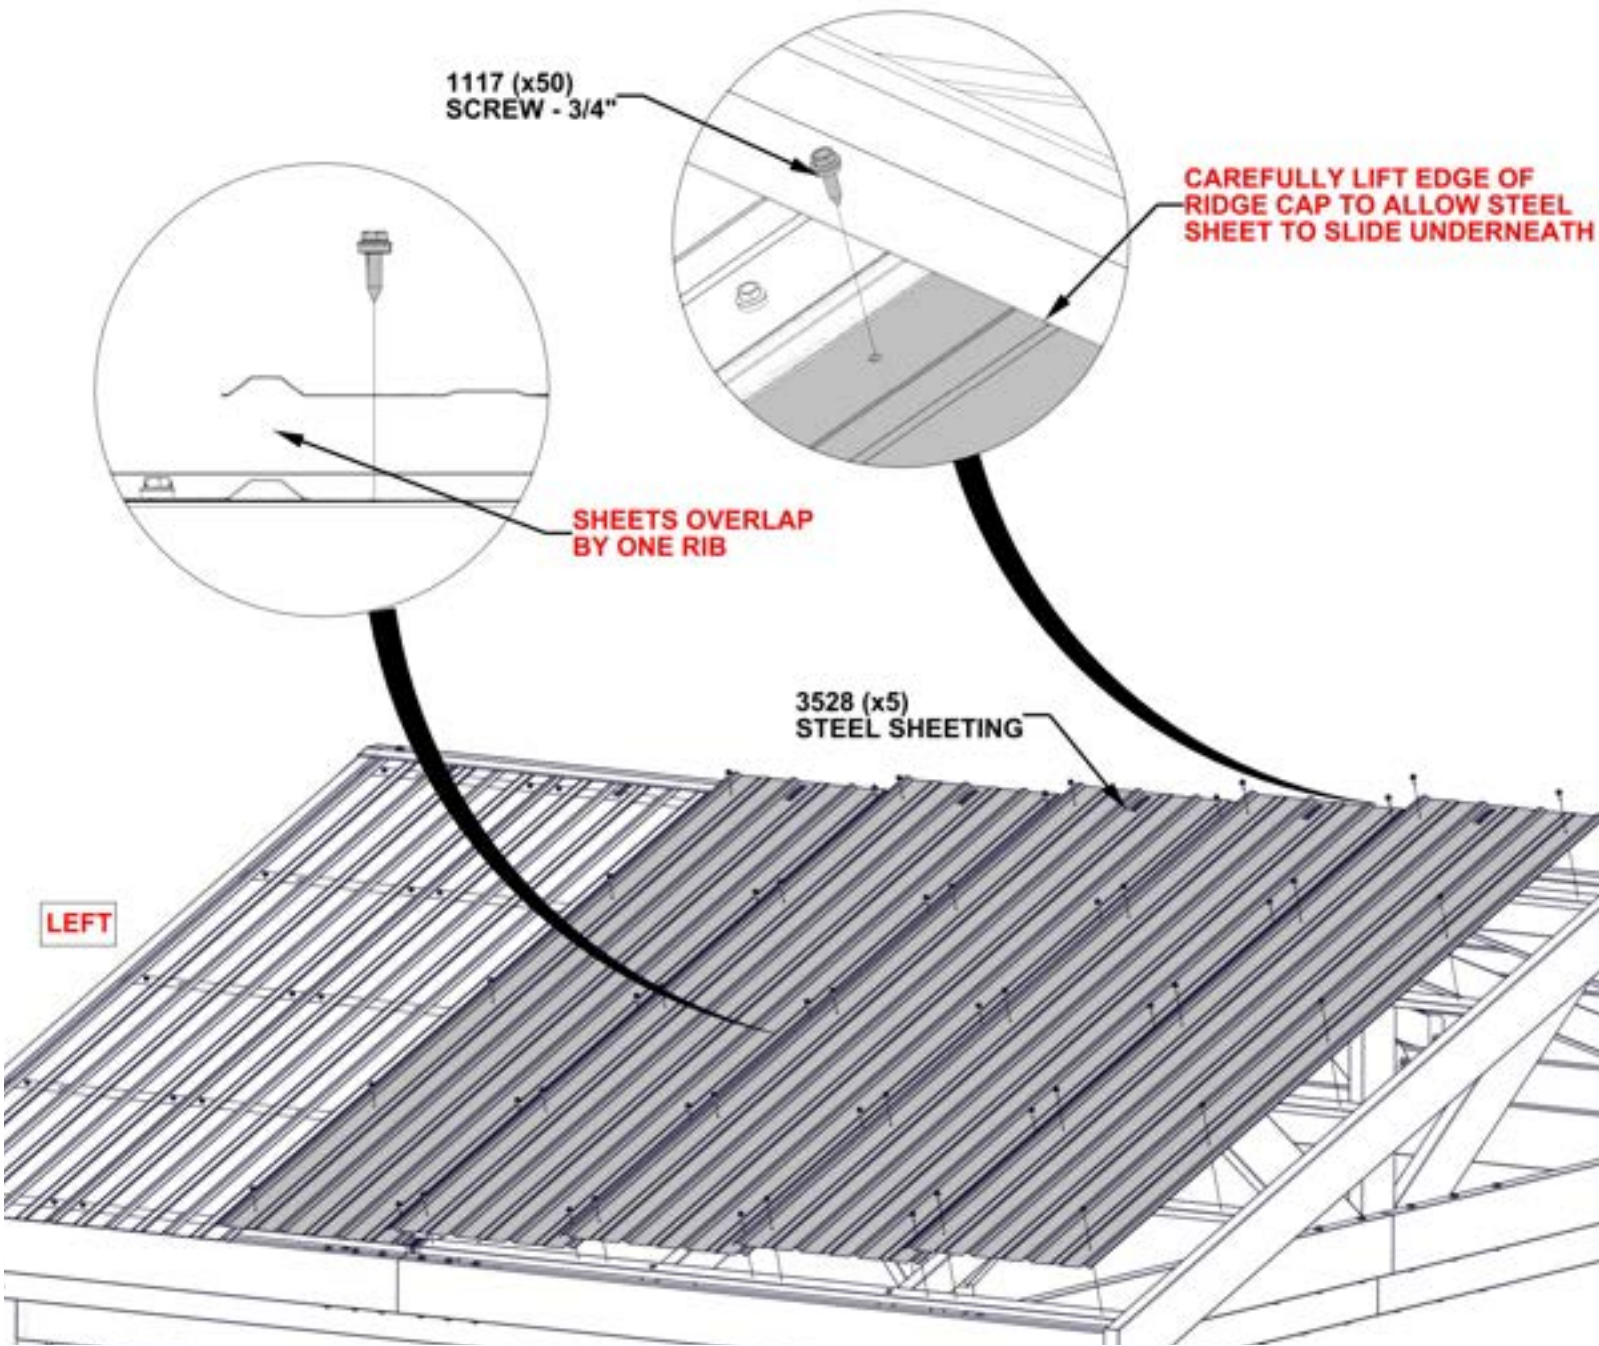


STEP 48 - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
8	H101116	SCREW SELF TAPPING 1/4x1 BLK

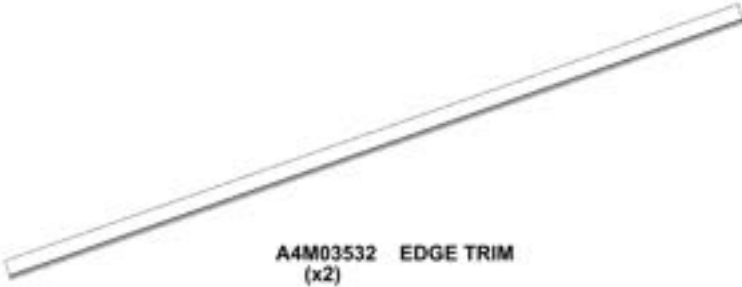

- REMOVE PROTECTIVE FILM.
- SLIDE EDGE TRIM UNTIL ONE END IS POSITIONED UNDERNEATH RIDGE CAP AND OTHER END IS FLUSH WITH END.
- STARTING AT THE TOP. ALIGN SCREWS WITH SHEET SCREWS.
- **DUE TO MULTIPLE LAYERS OF METAL ON THE DRIP EDGE, IT IS RECOMMENDED THAT A 1/8" (3mm) DRILL BIT BE USED TO CREATE STARTER HOLES.**
- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**

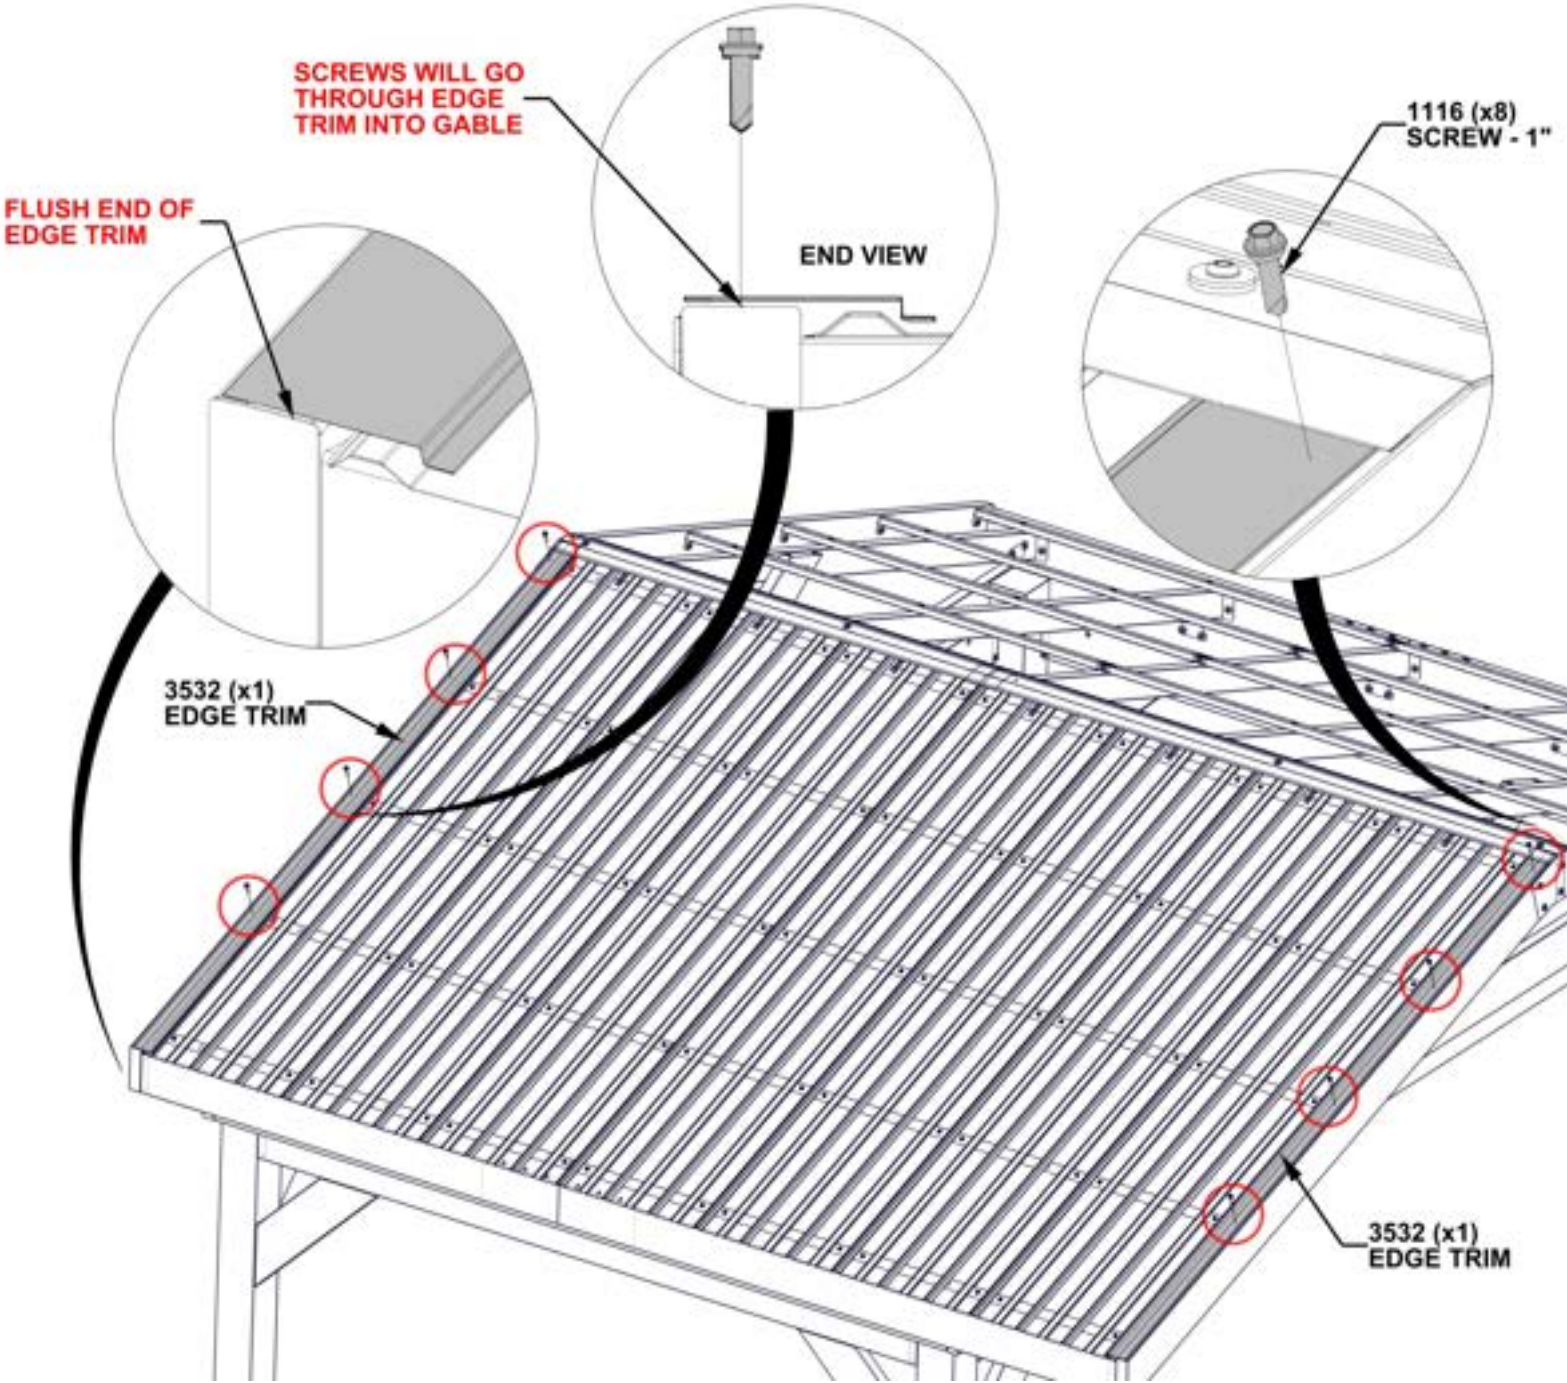

STEP 49A - ROOF ASSEMBLY



A4M03529 DRIP TRIM
(x1)




A4M03530 DRIP TRIM
(x1)




A4M03531 DRIP TRIM SPLICE
(x1)


- REMOVE PROTECTIVE FILM.
- ORIENT DRIP EDGE AND SPLICE AS SHOWN BELOW.
- STARTING IN THE FRONT CORNER, ATTACH SCREWS SPACING EVERY OTHER RIB.
- **DUE TO MULTIPLE LAYERS OF METAL ON THE DRIP EDGE, IT IS RECOMMENDED THAT A 1/8" (3mm) DRILL BIT BE USED TO CREATE STARTER HOLES.**
- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**

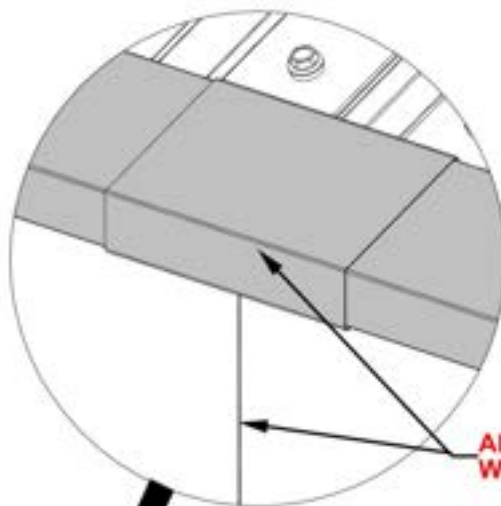

ALIGN SPLICE
WITH SEAM

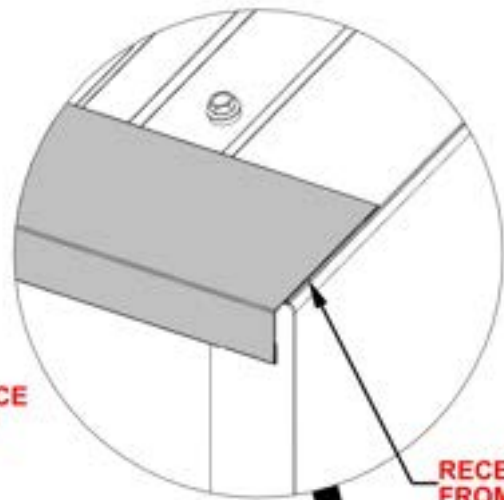

RECESS TRIM
FROM EDGE

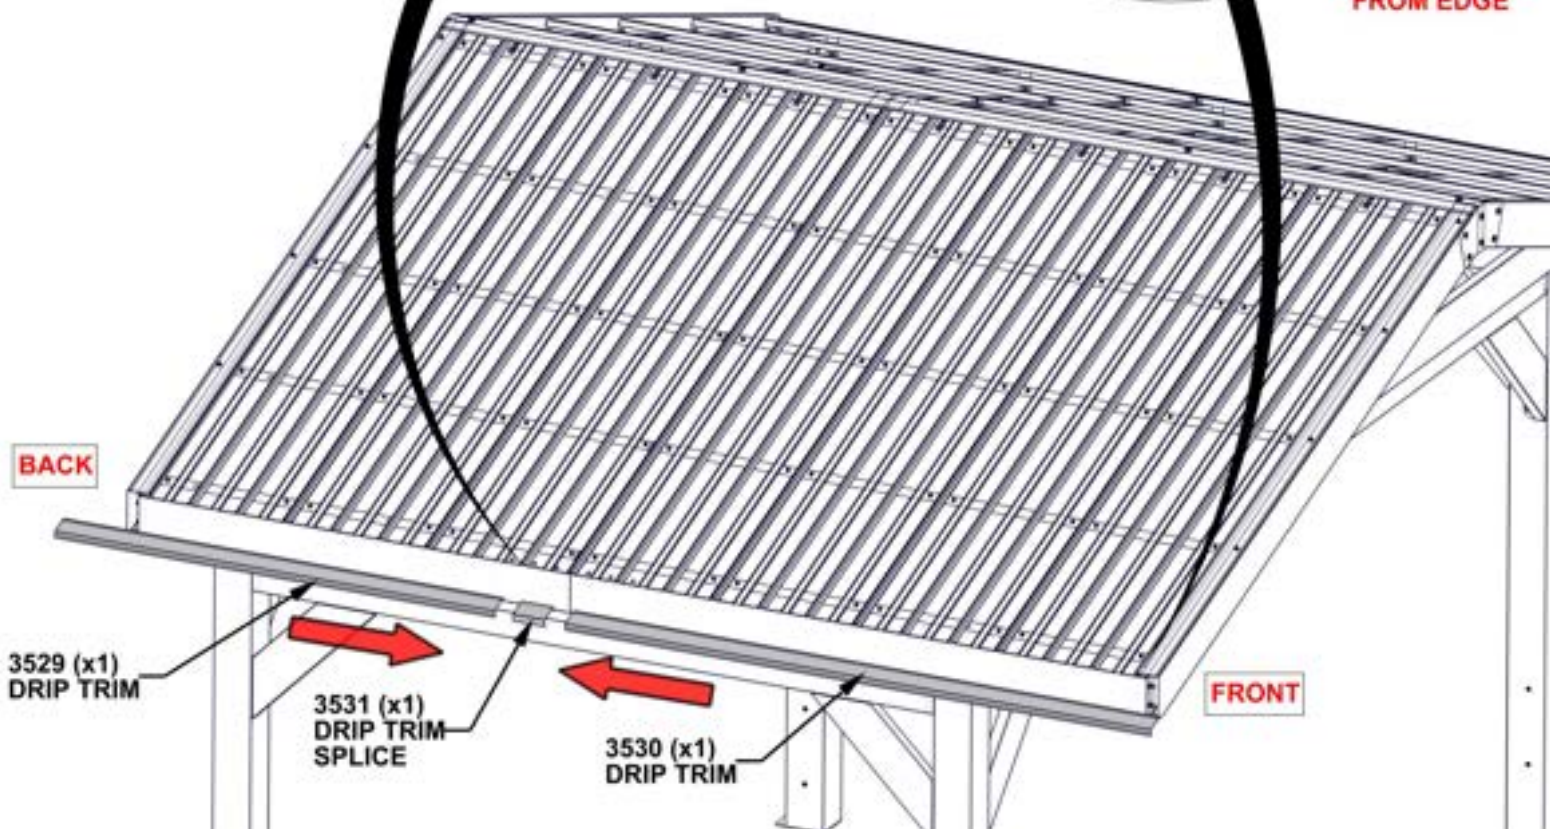

3529 (x1)
DRIP TRIM


3531 (x1)
DRIP TRIM
SPLICE

3530 (x1)
DRIP TRIM

STEP 49B - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
12	H101116	SCREW SELF TAPPING 1/4x1 BLK

- REMOVE PROTECTIVE FILM.
- ORIENT DRIP EDGE AND SPLICE AS SHOWN BELOW.
- STARTING IN THE FRONT CORNER, ATTACH SCREWS SPACING EVERY OTHER RIB.
- DUE TO MULTIPLE LAYERS OF METAL ON THE DRIP EDGE, IT IS RECOMMENDED THAT A 1/8" (3mm) DRILL BIT BE USED TO CREATE STARTER HOLES.
- WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.

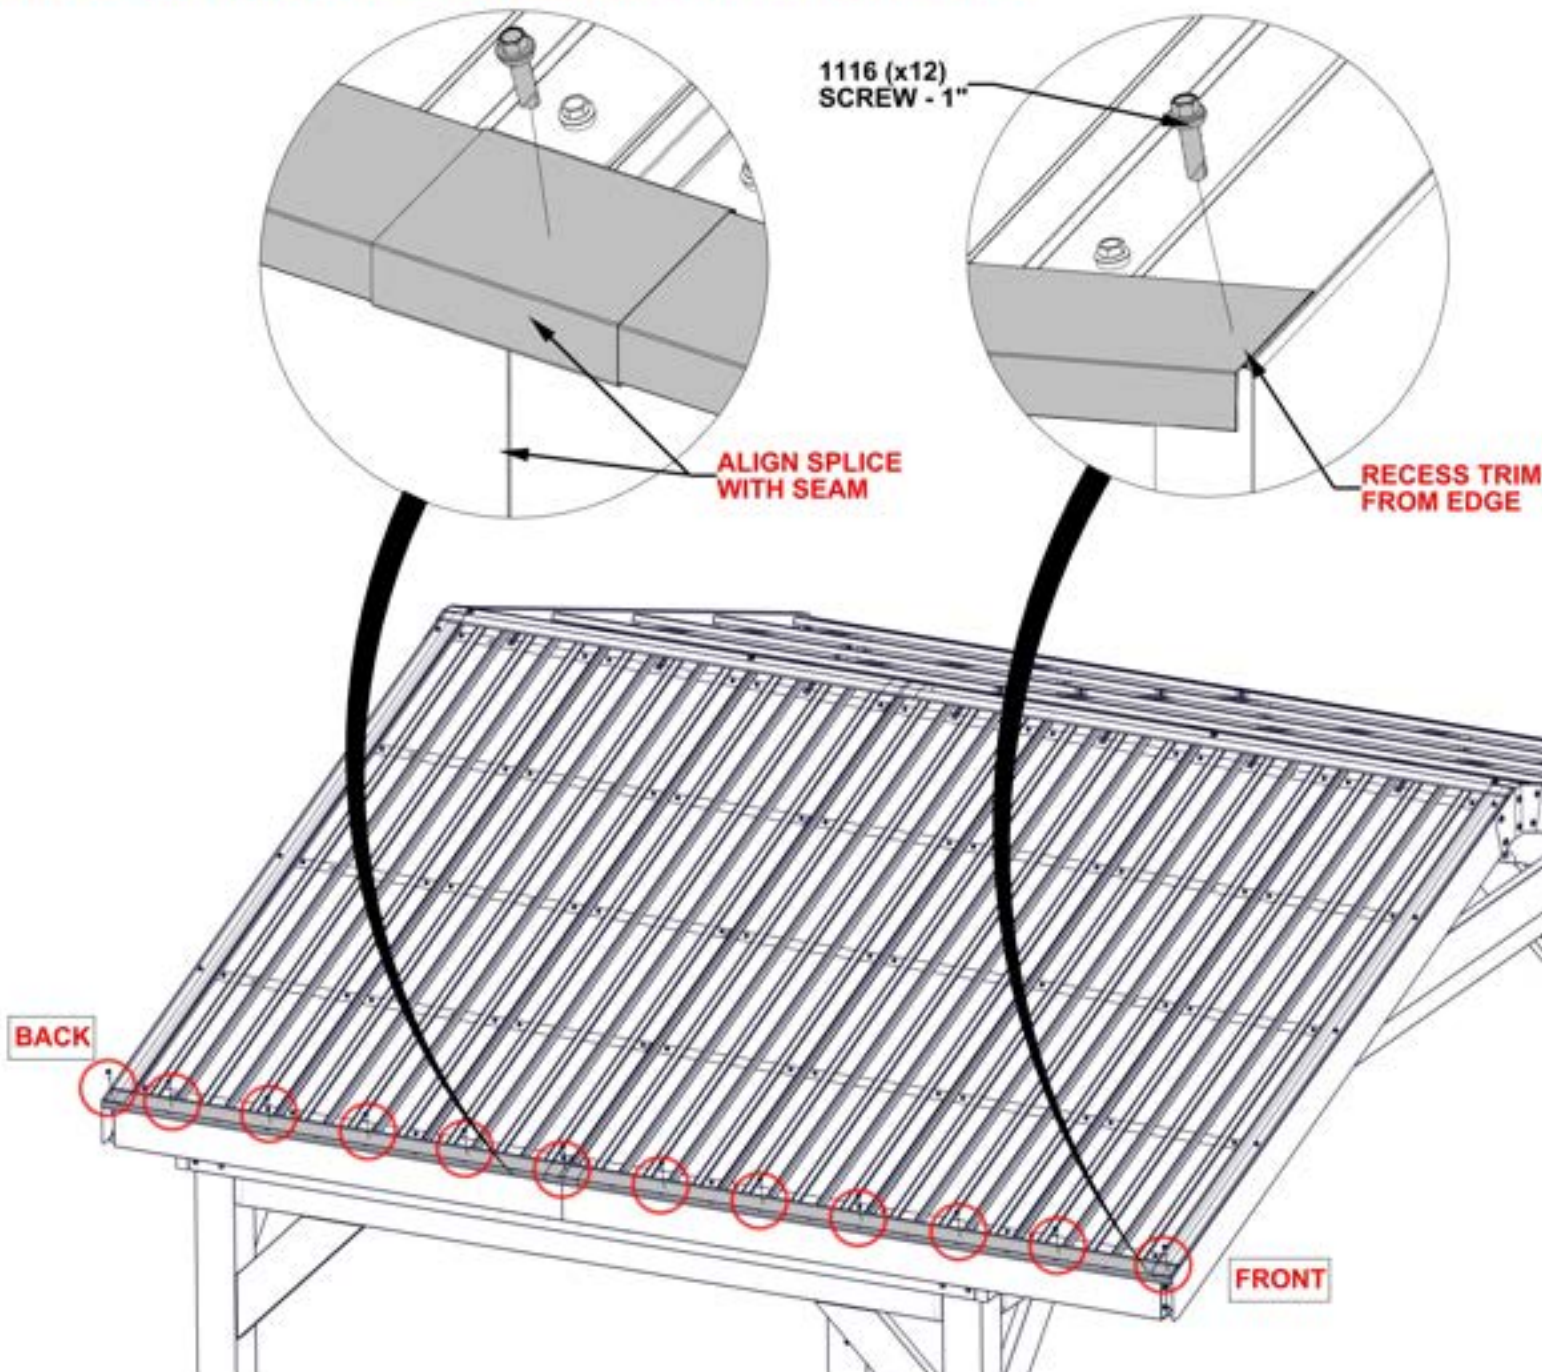


**REPEAT ROOF ASSEMBLY STEPS 45 - 49
TO INSTALL SHEETMETAL ON OPPOSITE SIDE OF ROOF**

STEP 50 - STRUCTURE ASSEMBLY



- USE A SMALL PIECE OF WOOD AND RUBBER Mallet TO TAP HOLE COVERS IN.
- DO NOT TAP DIRECTLY WITH A HAMMER AS YOU MAY DAMAGE THE POWDER COAT FINISH ON PRODUCT.

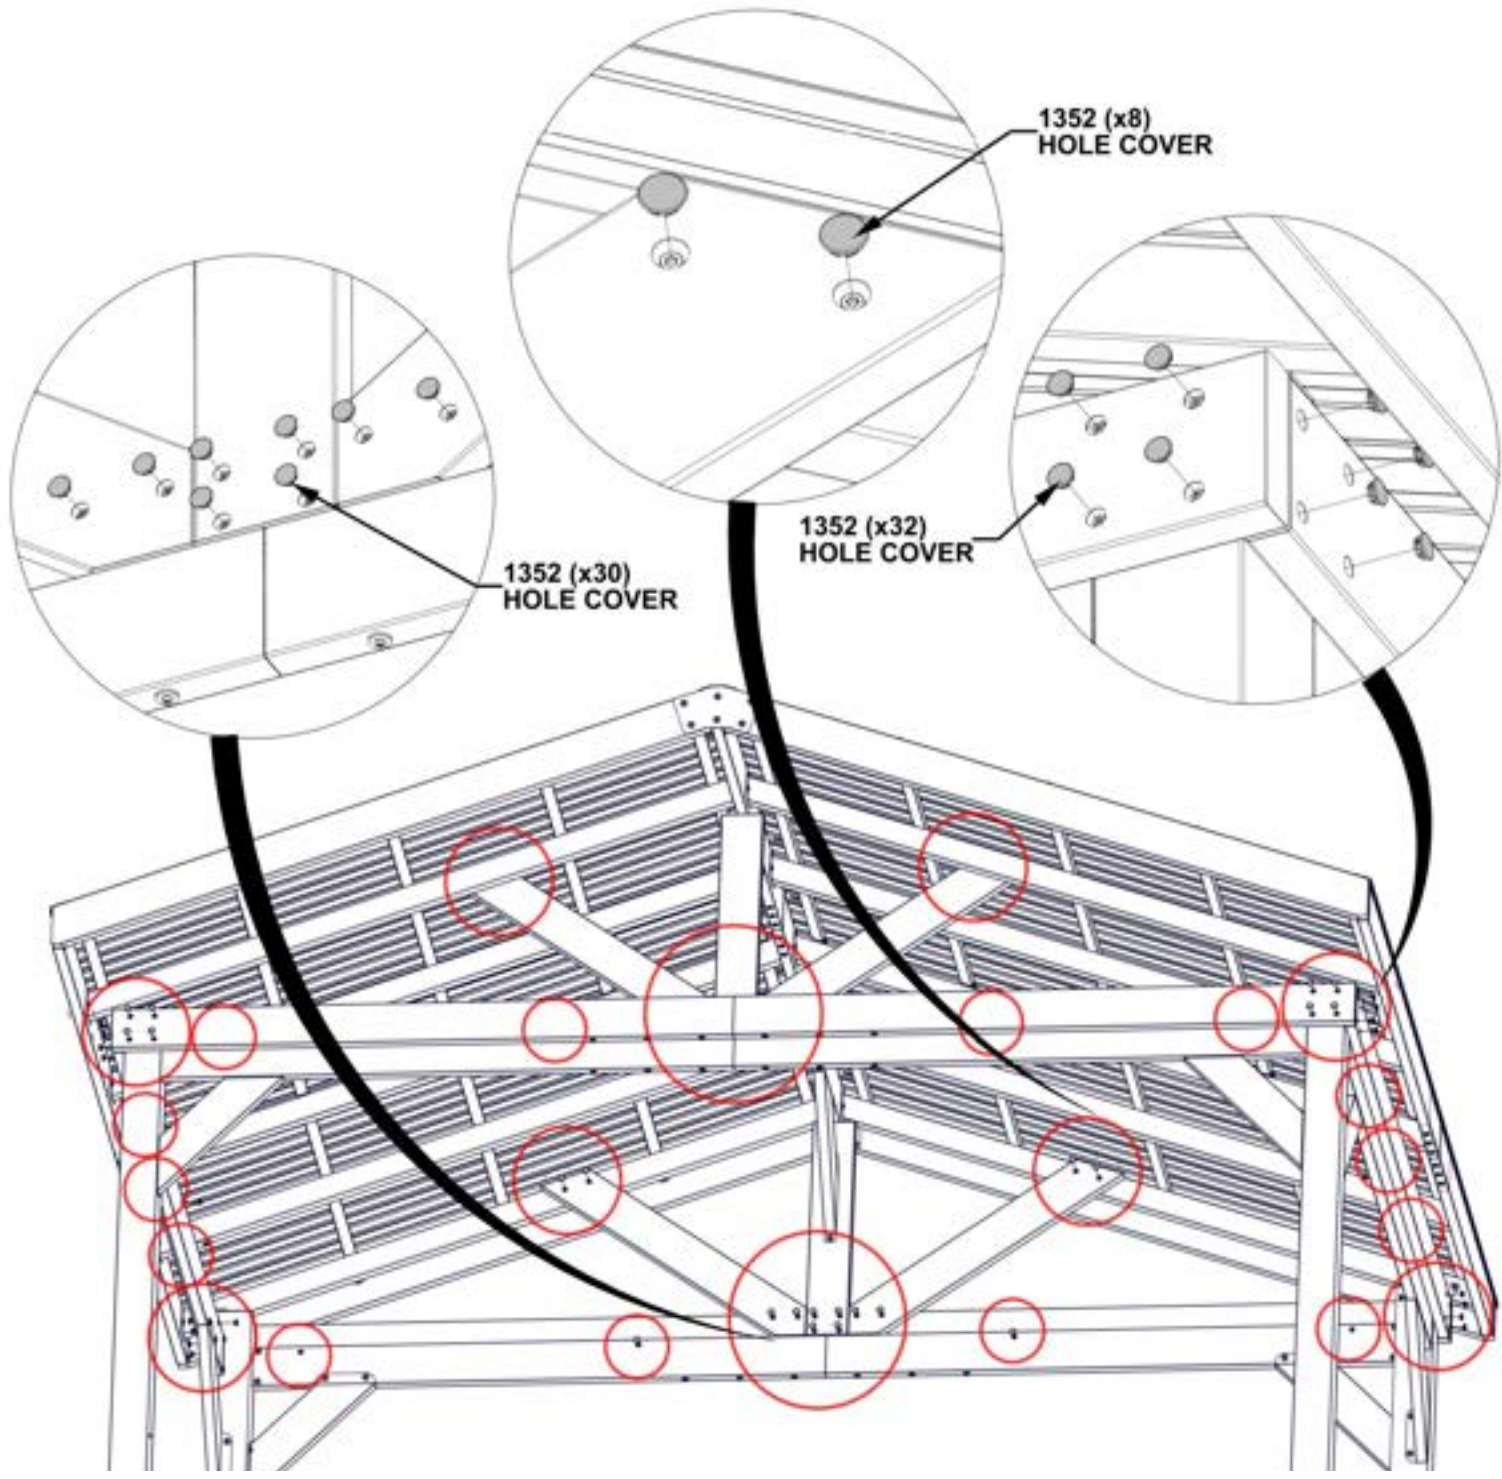

**COMPLETE STEPS 51 - 138 FOR
LANCASTER GALLEY OUTDOOR KITCHEN CABINETS**

STEP 51 - FRIDGE CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




F4 FRIDGE CABINET FLOOR PANEL ASSEMBLY - A4M03595
(x1) 28 1/8"x23 3/8"x2 5/8" (66x594x715)



S8 FRIDGE CABINET SIDE PANEL ASSEMBLY R - A4M03598
(x1) 33 3/8"x23 3/8"x1 15/16" (50x594x848.20)

- POSITION FLOOR PANEL IN THE PROXIMITY OF WHERE YOUR KITCHEN WILL BE.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.

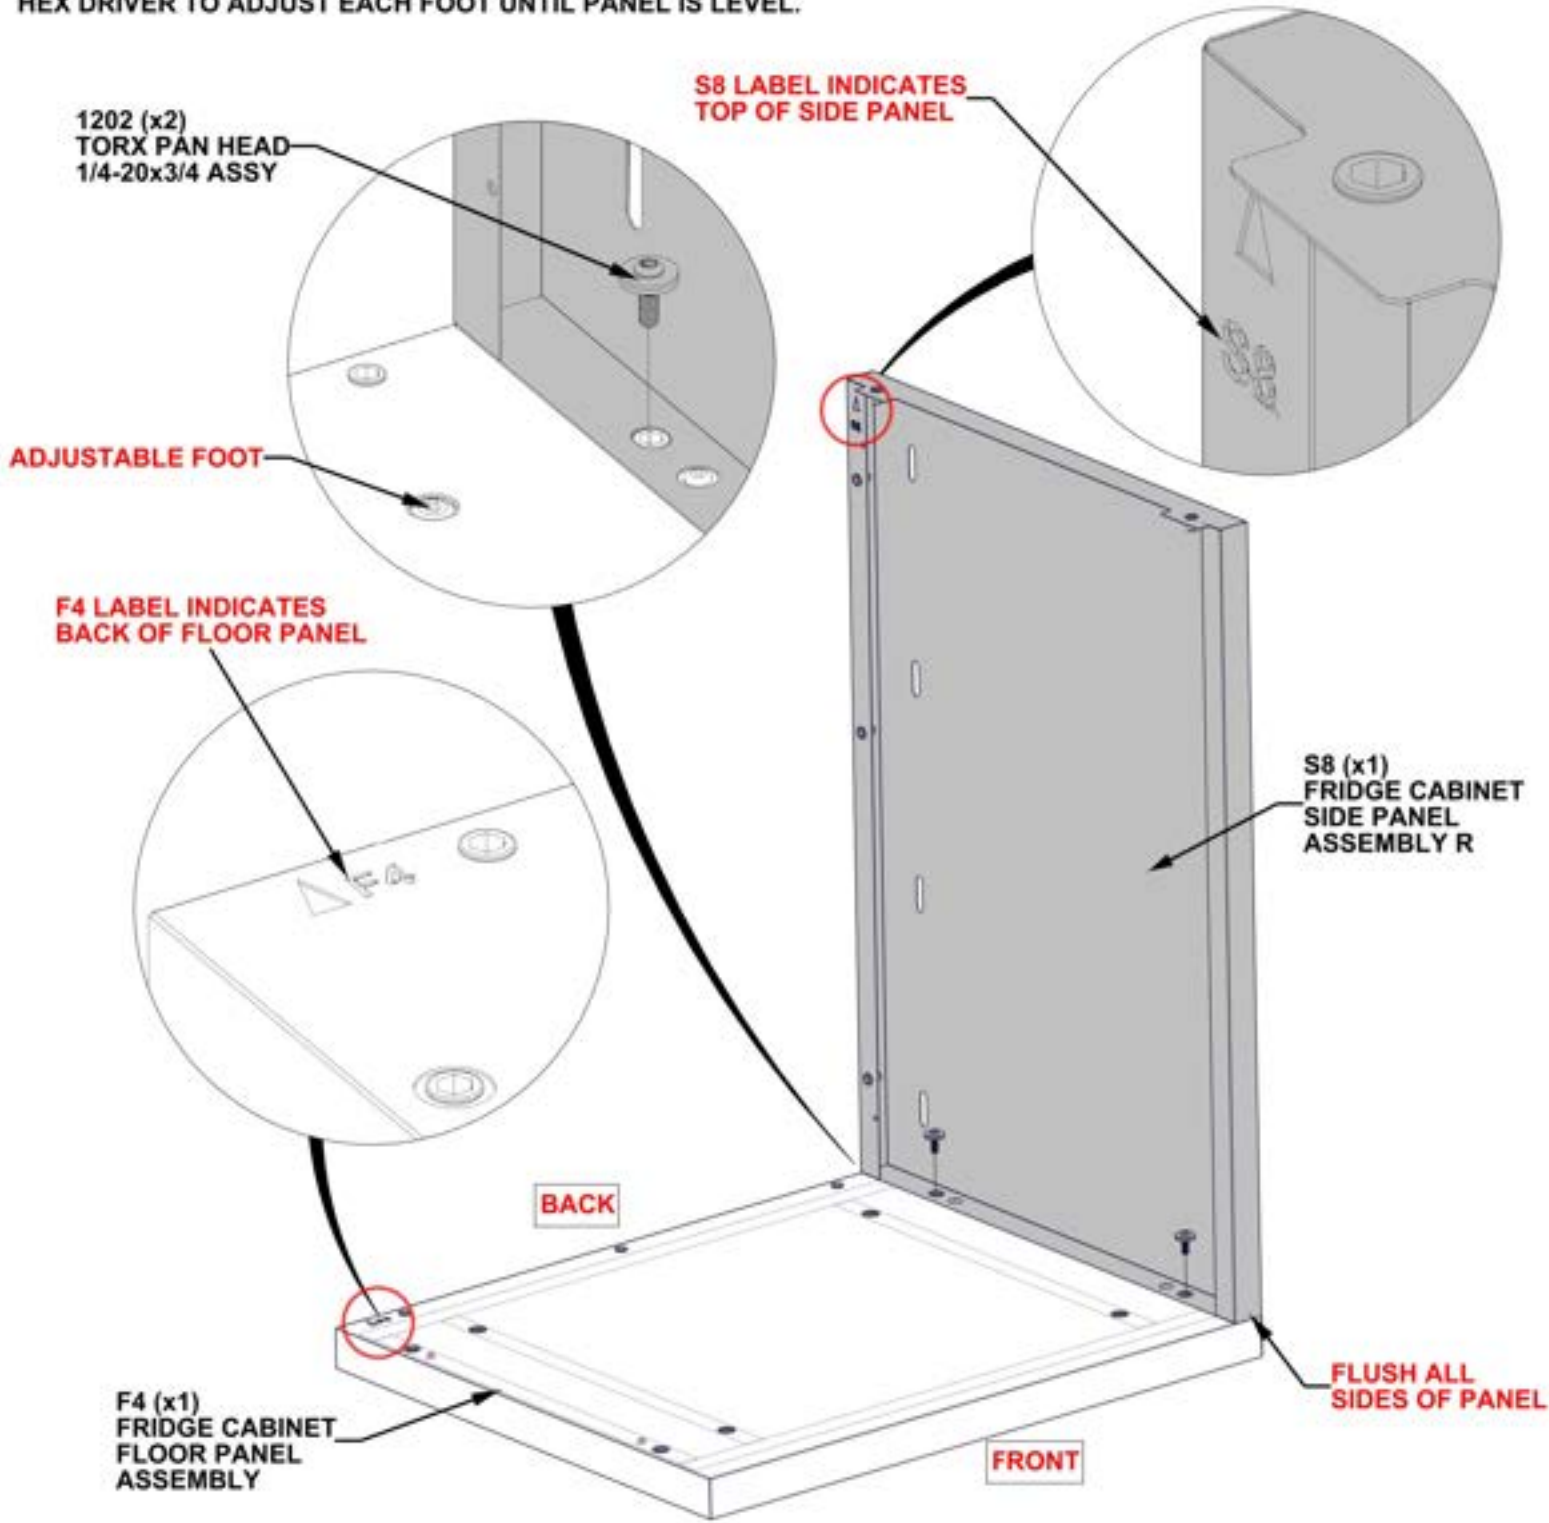


STEP 52 - FRIDGE CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



S7 FRIDGE CABINET SIDE PANEL ASSEMBLY L - A4M03597
(x1) 33 7/16"x23 3/8"x2 1/16" (53x594x849.7)

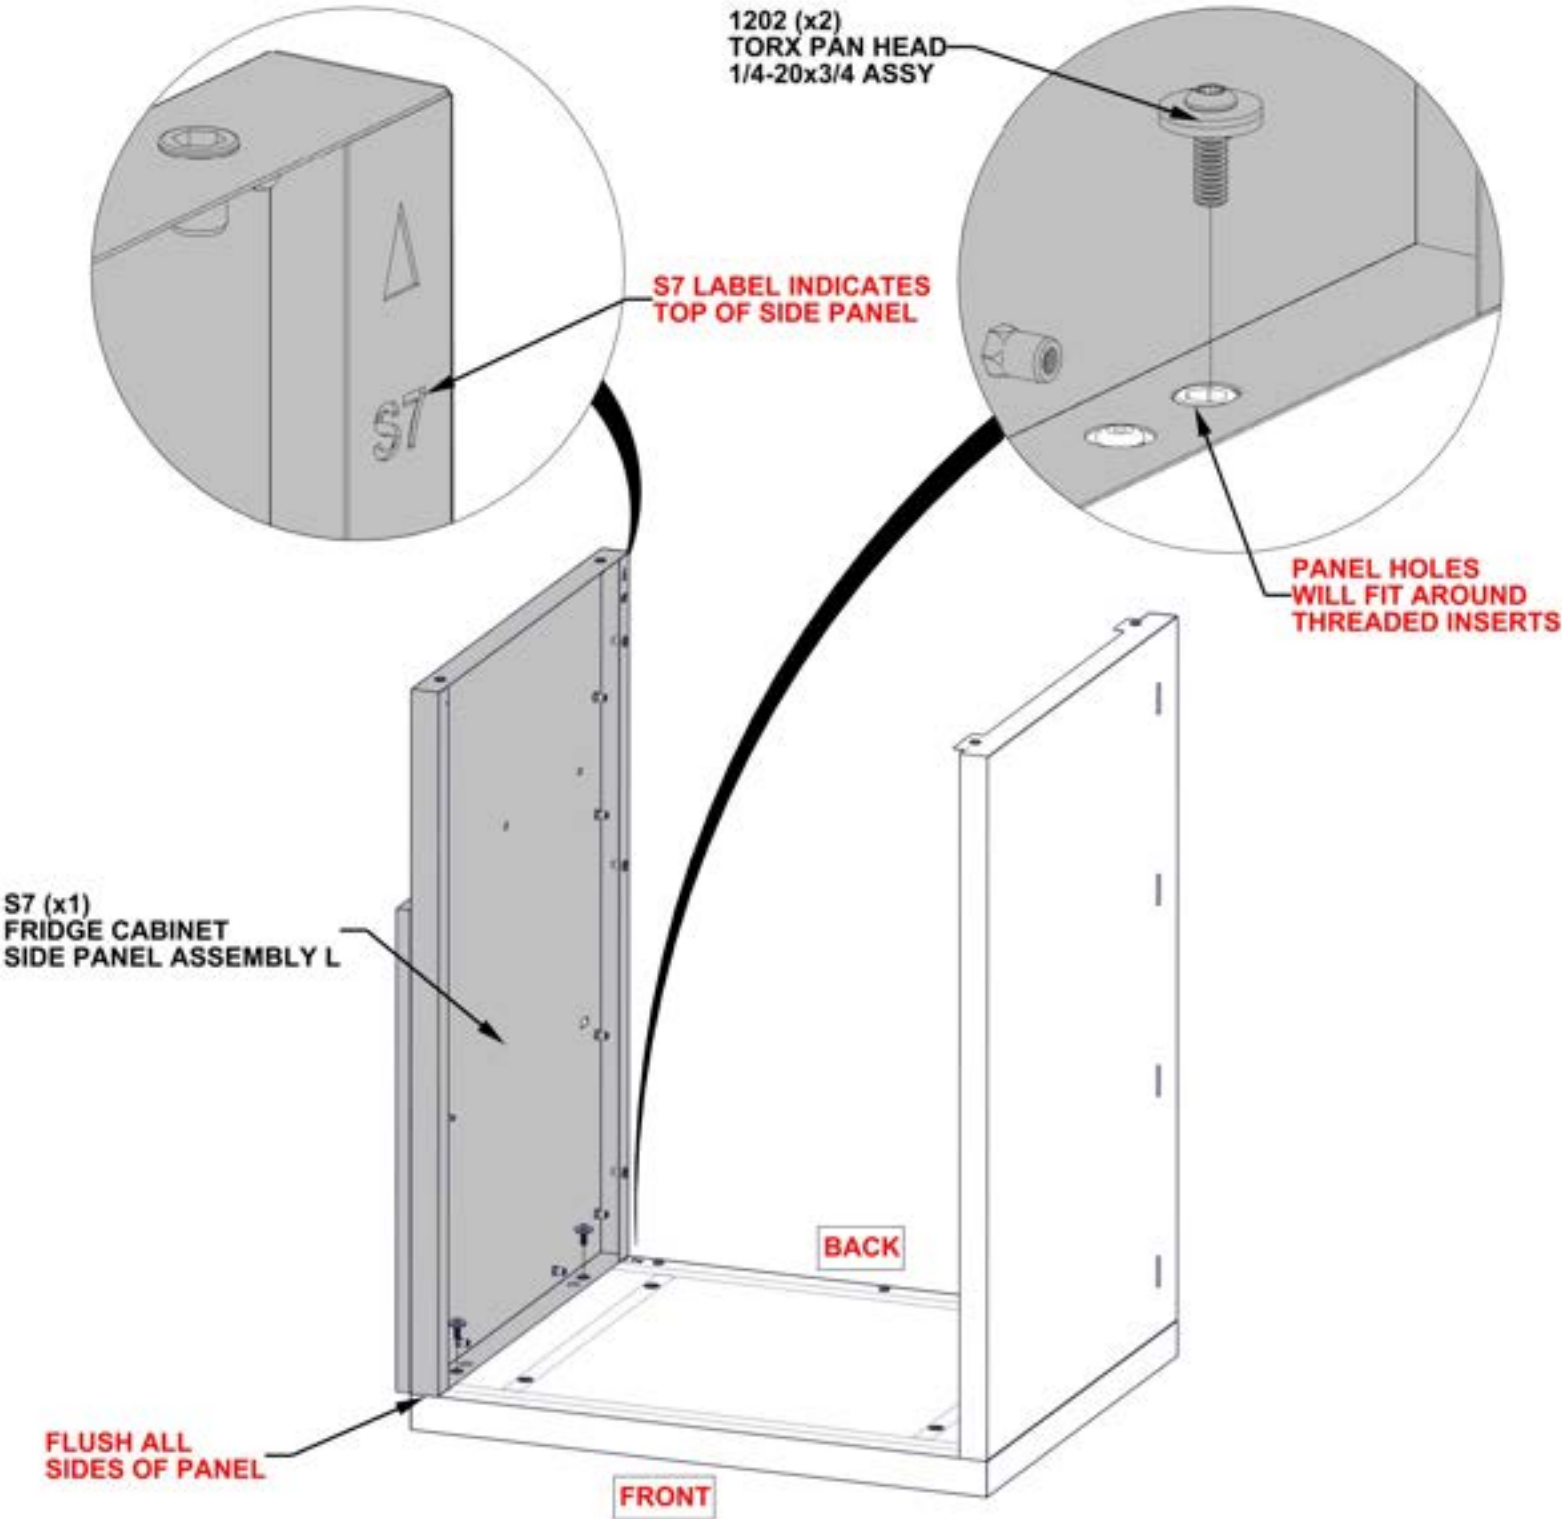


STEP 53 - FRIDGE CABINET ASSEMBLY

Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



G4 FRIDGE CABINET BACK PANEL ASSEMBLY - A4M03599
 (x1) 25 5/16"x33 3/8"x1 3/16" (30x847.2x643)

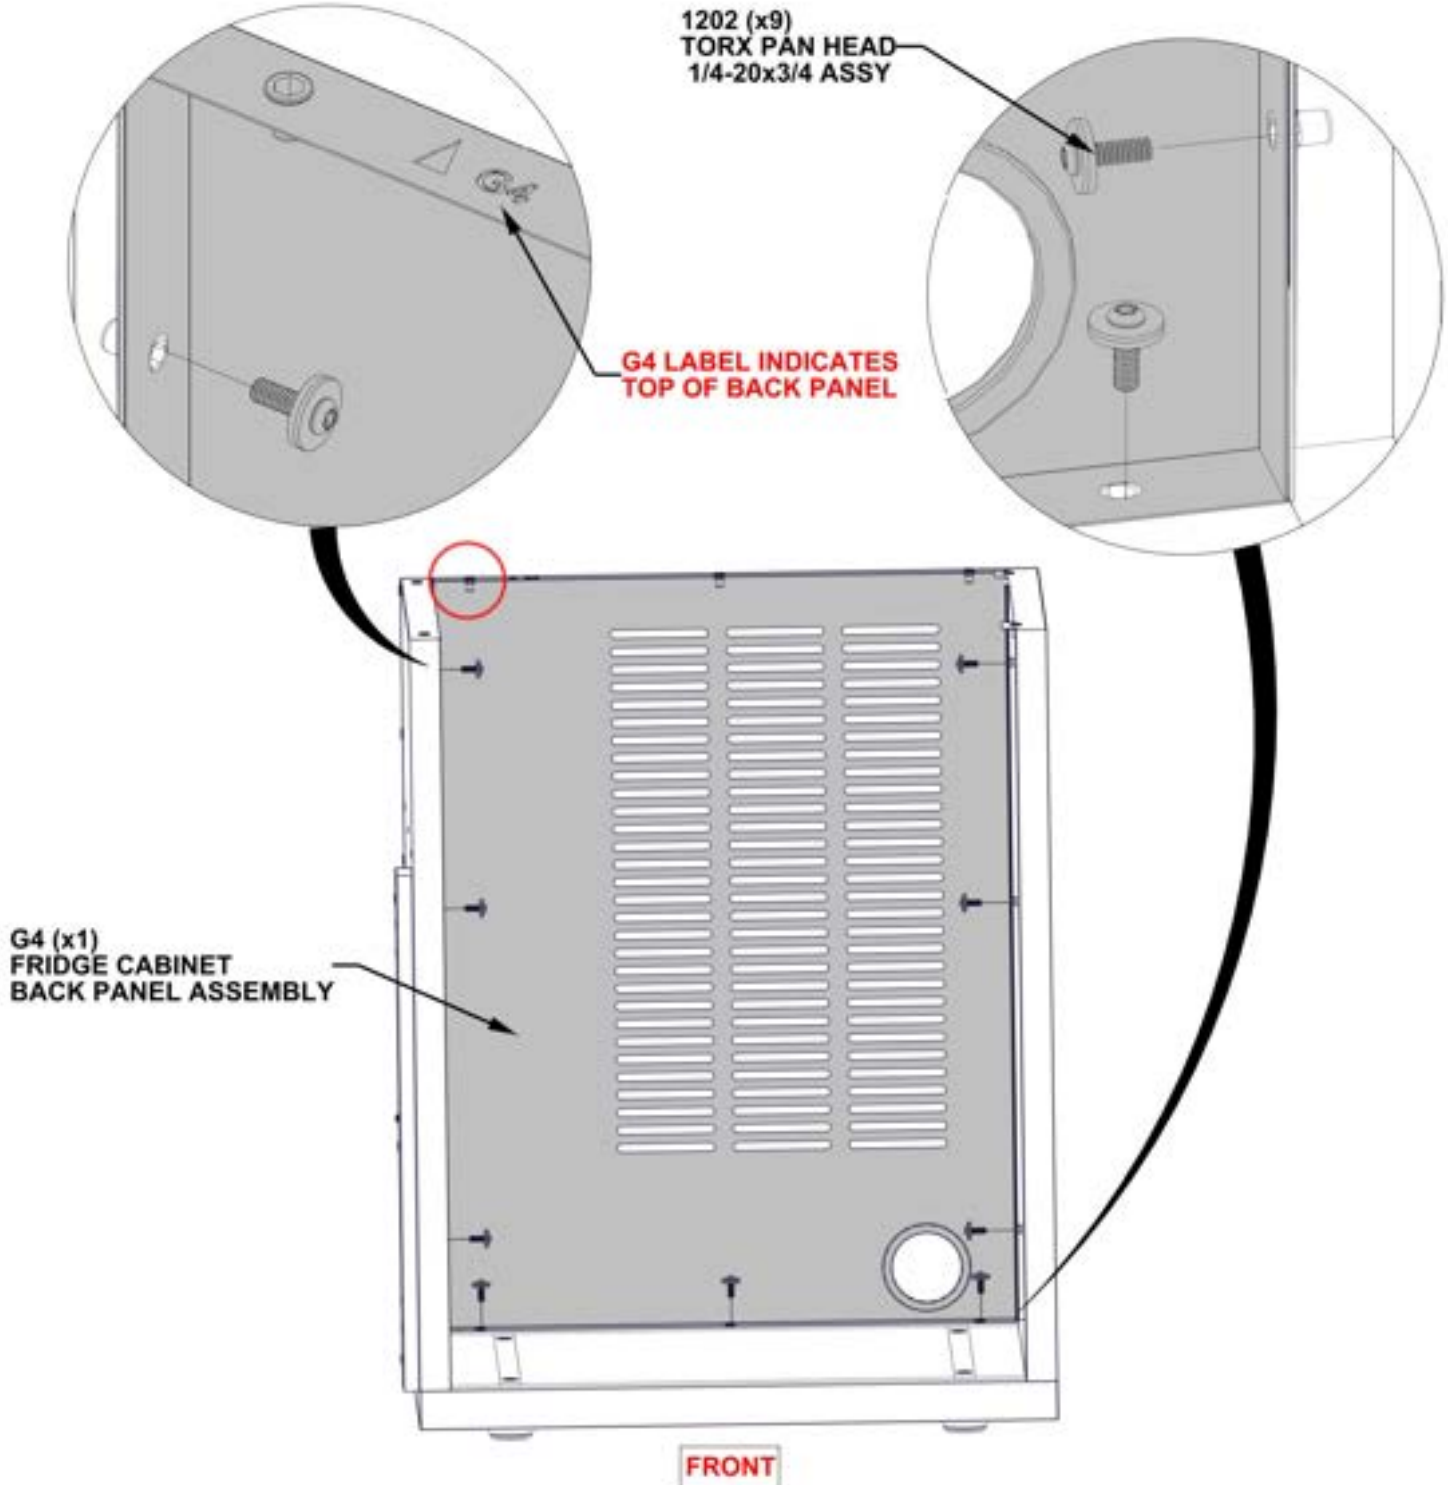


STEP 54 - FRIDGE CABINET ASSEMBLY

Qty	PartNo	Description
7	H101103	TORX SOCKET SCREW 1/4-20




T7 FRIDGE CABINET TABLETOP - A4M03641
(x1) 27 3/8"x24 1/8"x1 1/4" (32x612x696)

- FLUSH BACK AND SIDES OF PANEL ASSEMBLY.
- **SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.**

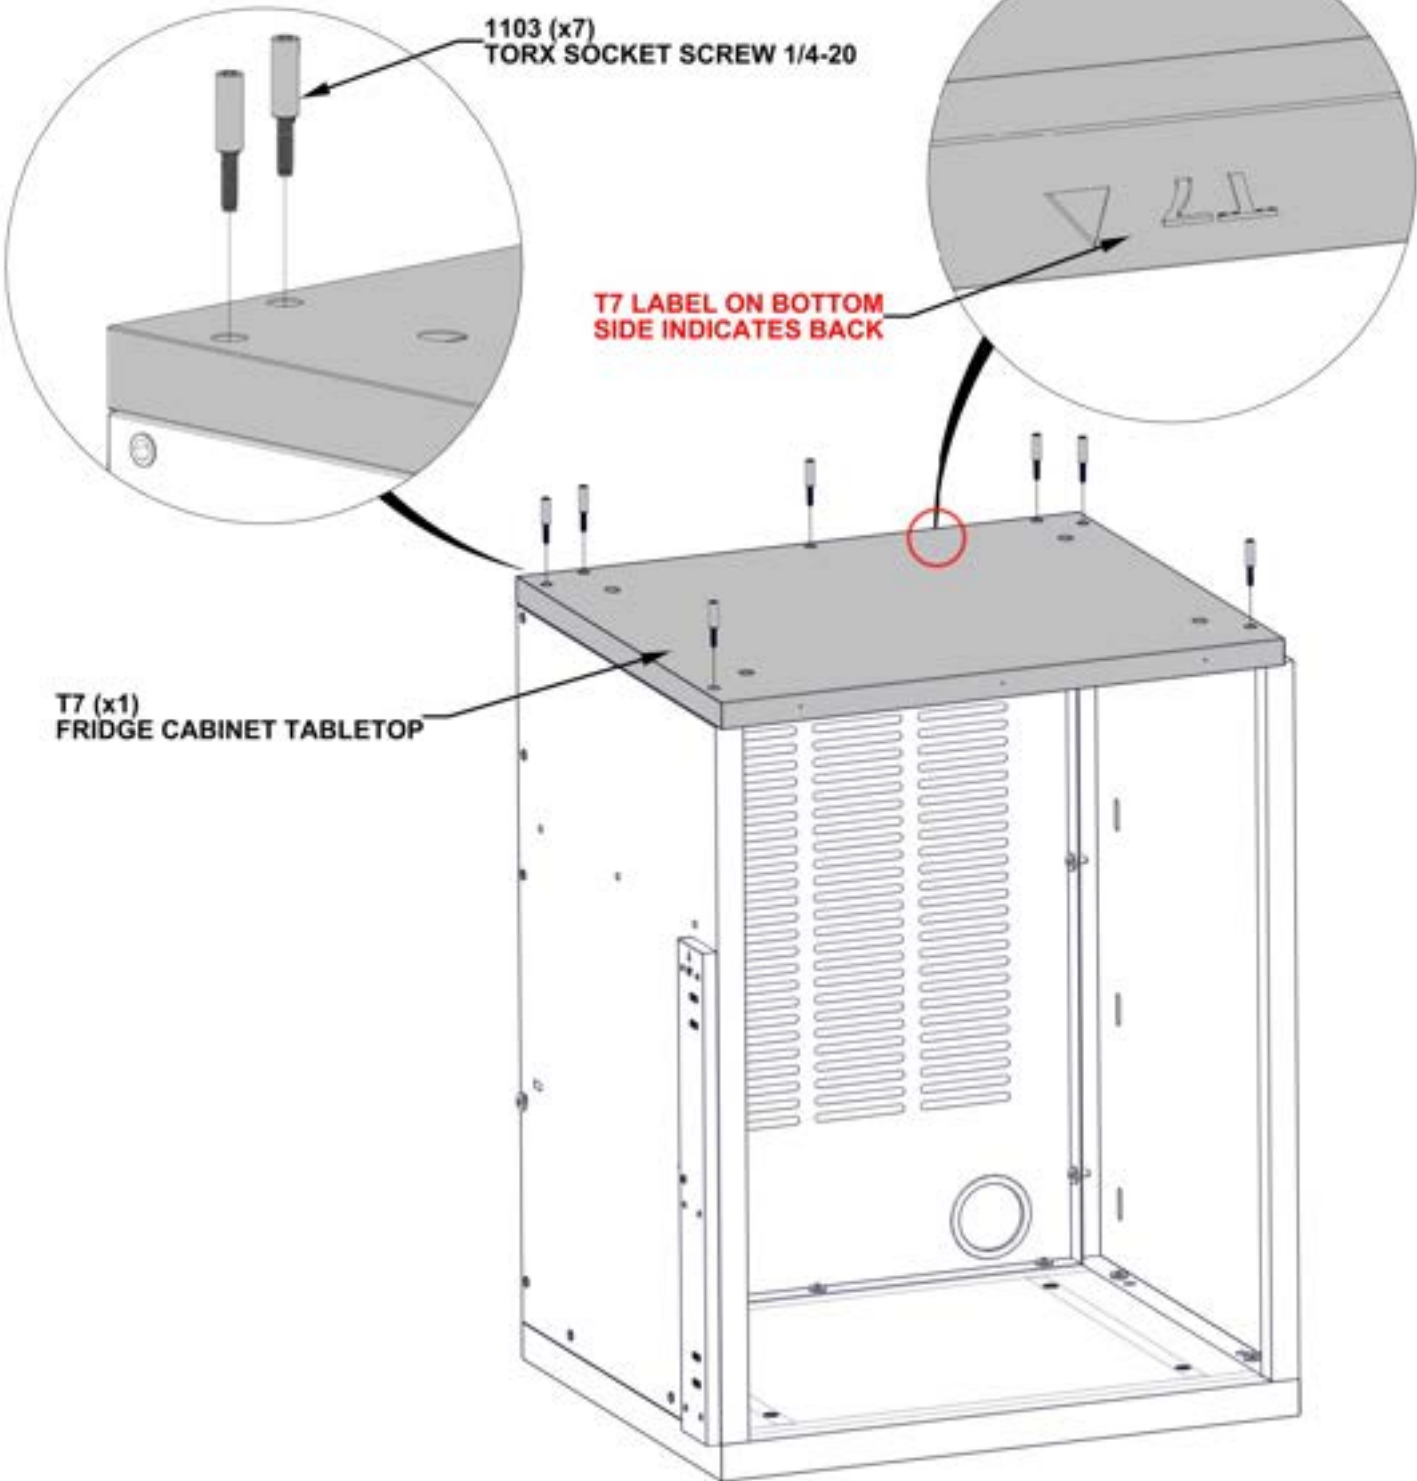


STEP 55 - FRIDGE CABINET INSTALLATION

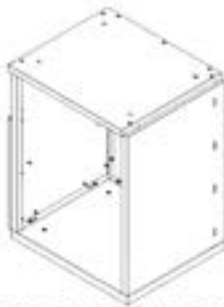

FRIDGE CABINET FROM
STEPS 51 - 54

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- POSITION FRIDGE CABINET ASSEMBLY UNDERNEATH LANCASTER GALLEY STRUCTURE.
- SIDE OF FRIDGE CABINET WILL SIT AGAINST THE INSIDE OF THE BACK RIGHT POST.
- BACKSIDE OF FRIDGE CABINET WILL SIT FLUSH WITH BACKSIDE OF POST.
- **BEFORE TIGHTENING HARDWARE, ADJUST CABINET FEET AS NEEDED UNTIL FRIDGE CABINET IS LEVEL.**

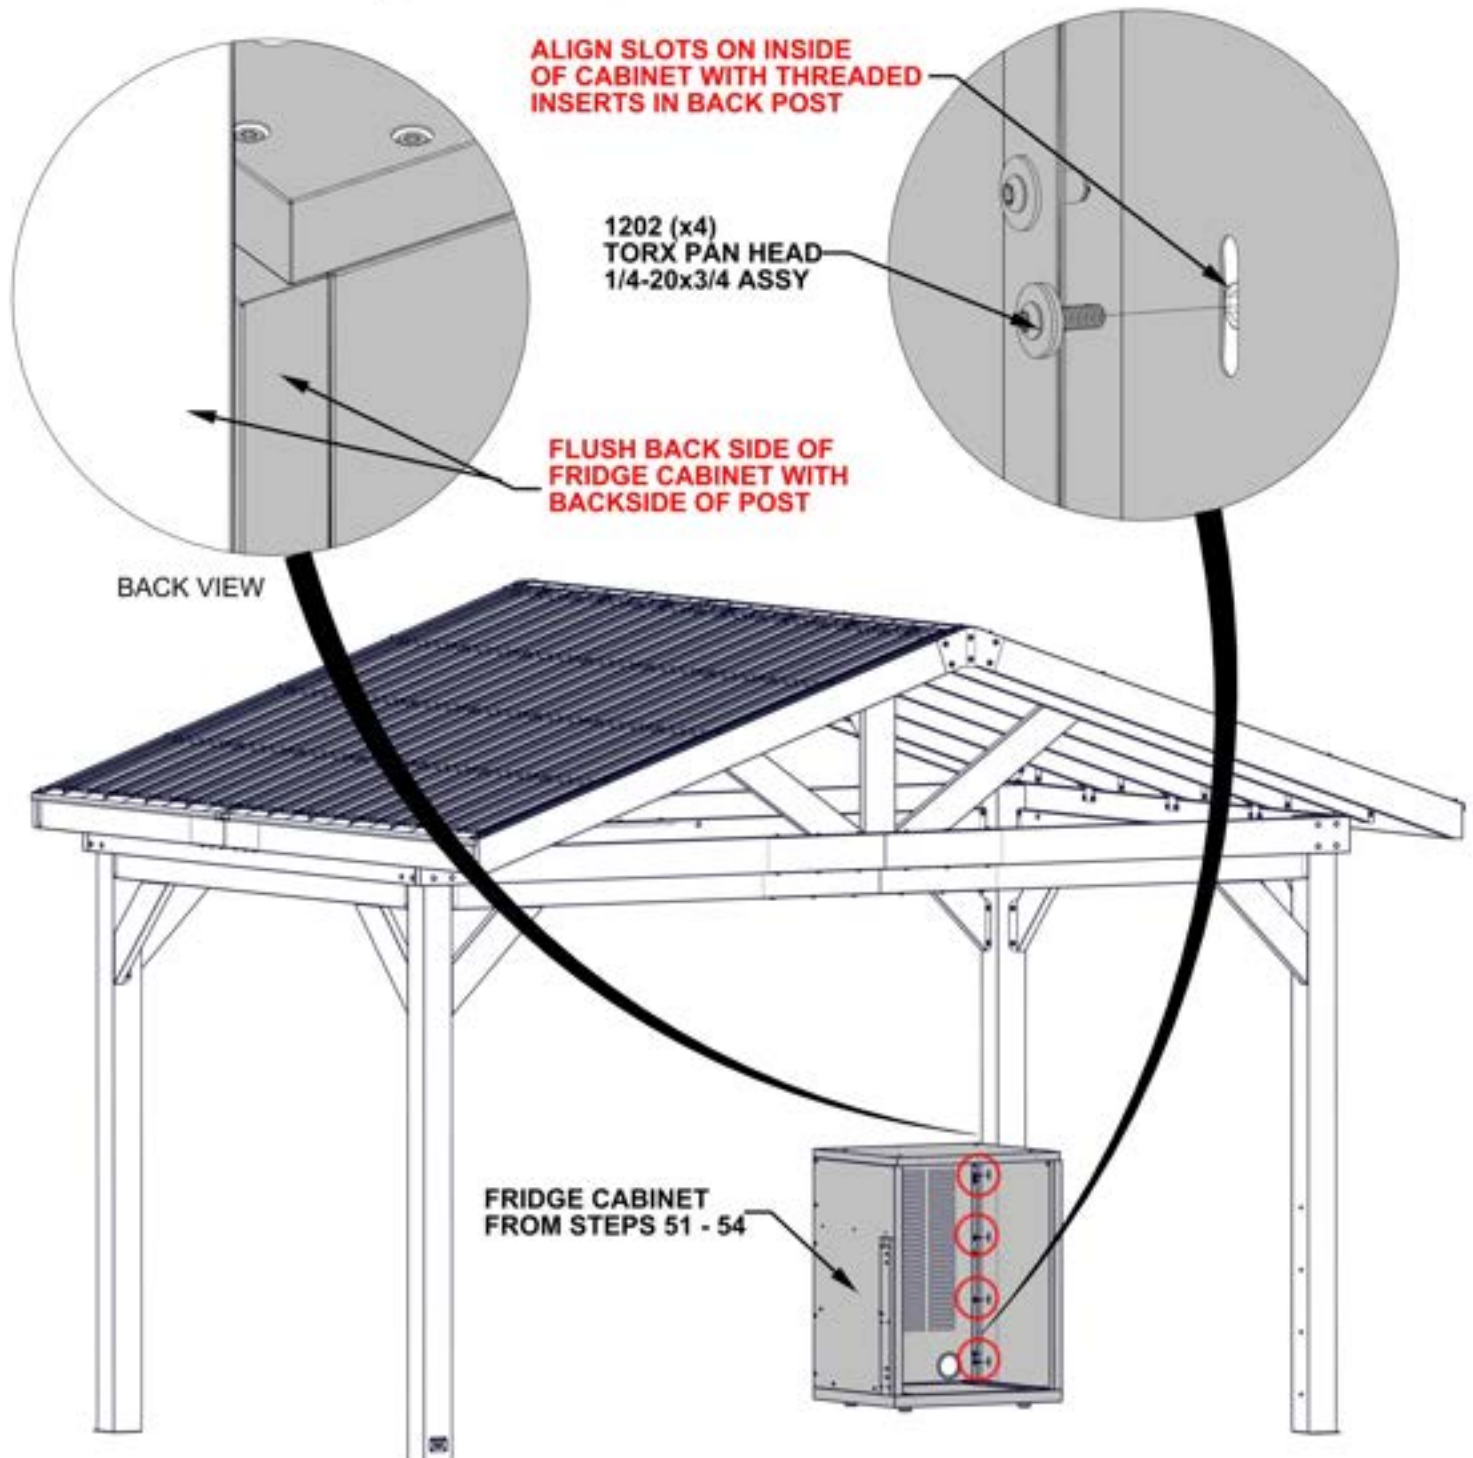

STEP 56 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




F3 SINK CABINET FLOOR PANEL ASSEMBLY - A4M03560
(x1) 37 3/16"x23 3/8"x2 5/8" (66x594x944)




S3 SINK CABINET SIDE PANEL ASSEMBLY L - A4M03562
(x1) 33 3/8"x23 3/8"x1 3/8" (35.00x594.00x848.20)

- POSITION FLOOR PANEL IN THE PROXIMITY OF WHERE YOUR KITCHEN WILL BE.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.

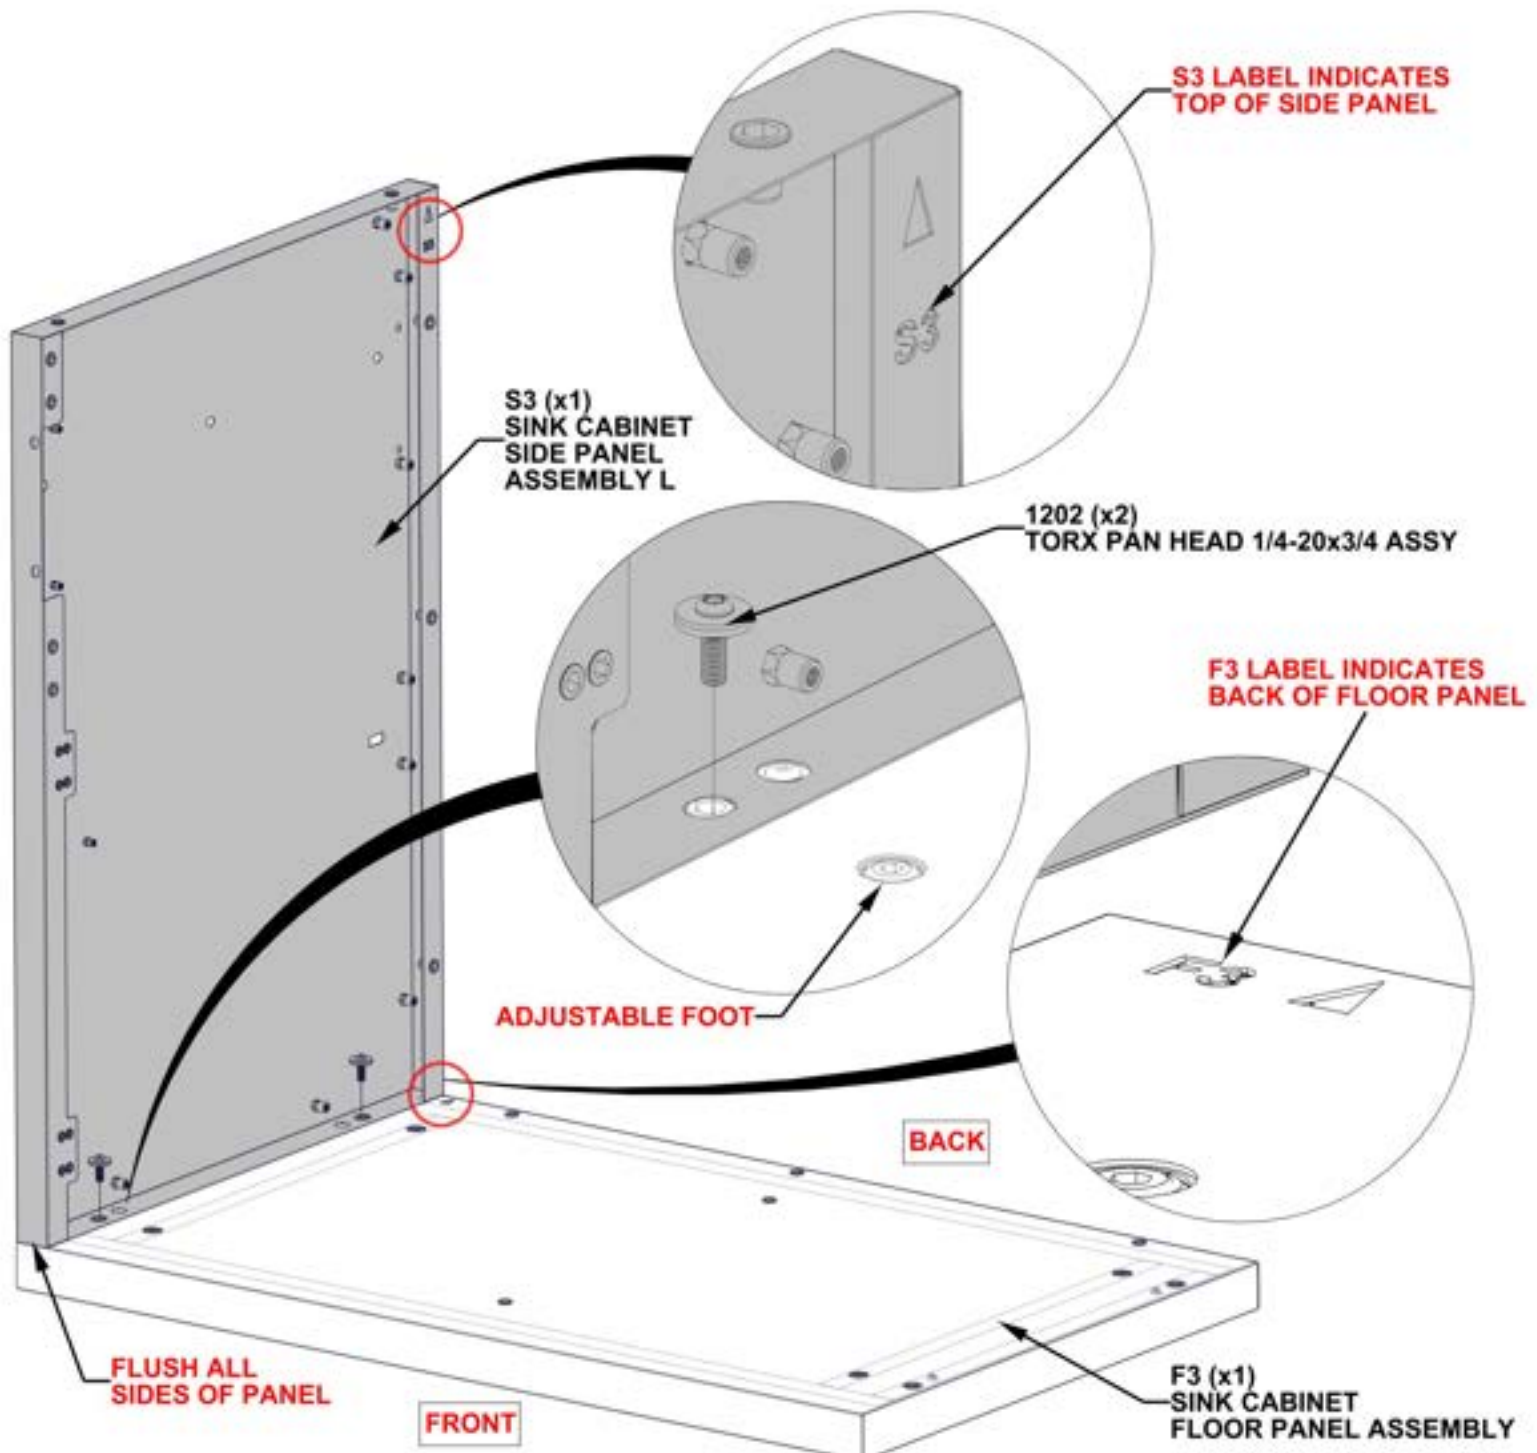


STEP 57 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

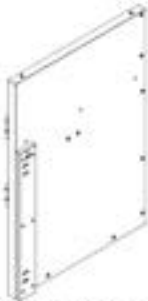

S4 SINK CABINET SIDE PANEL ASSEMBLY R - A4M03563
(x1) 33 3/8"x23 3/8"x2 5/8" (67x594x848.20)

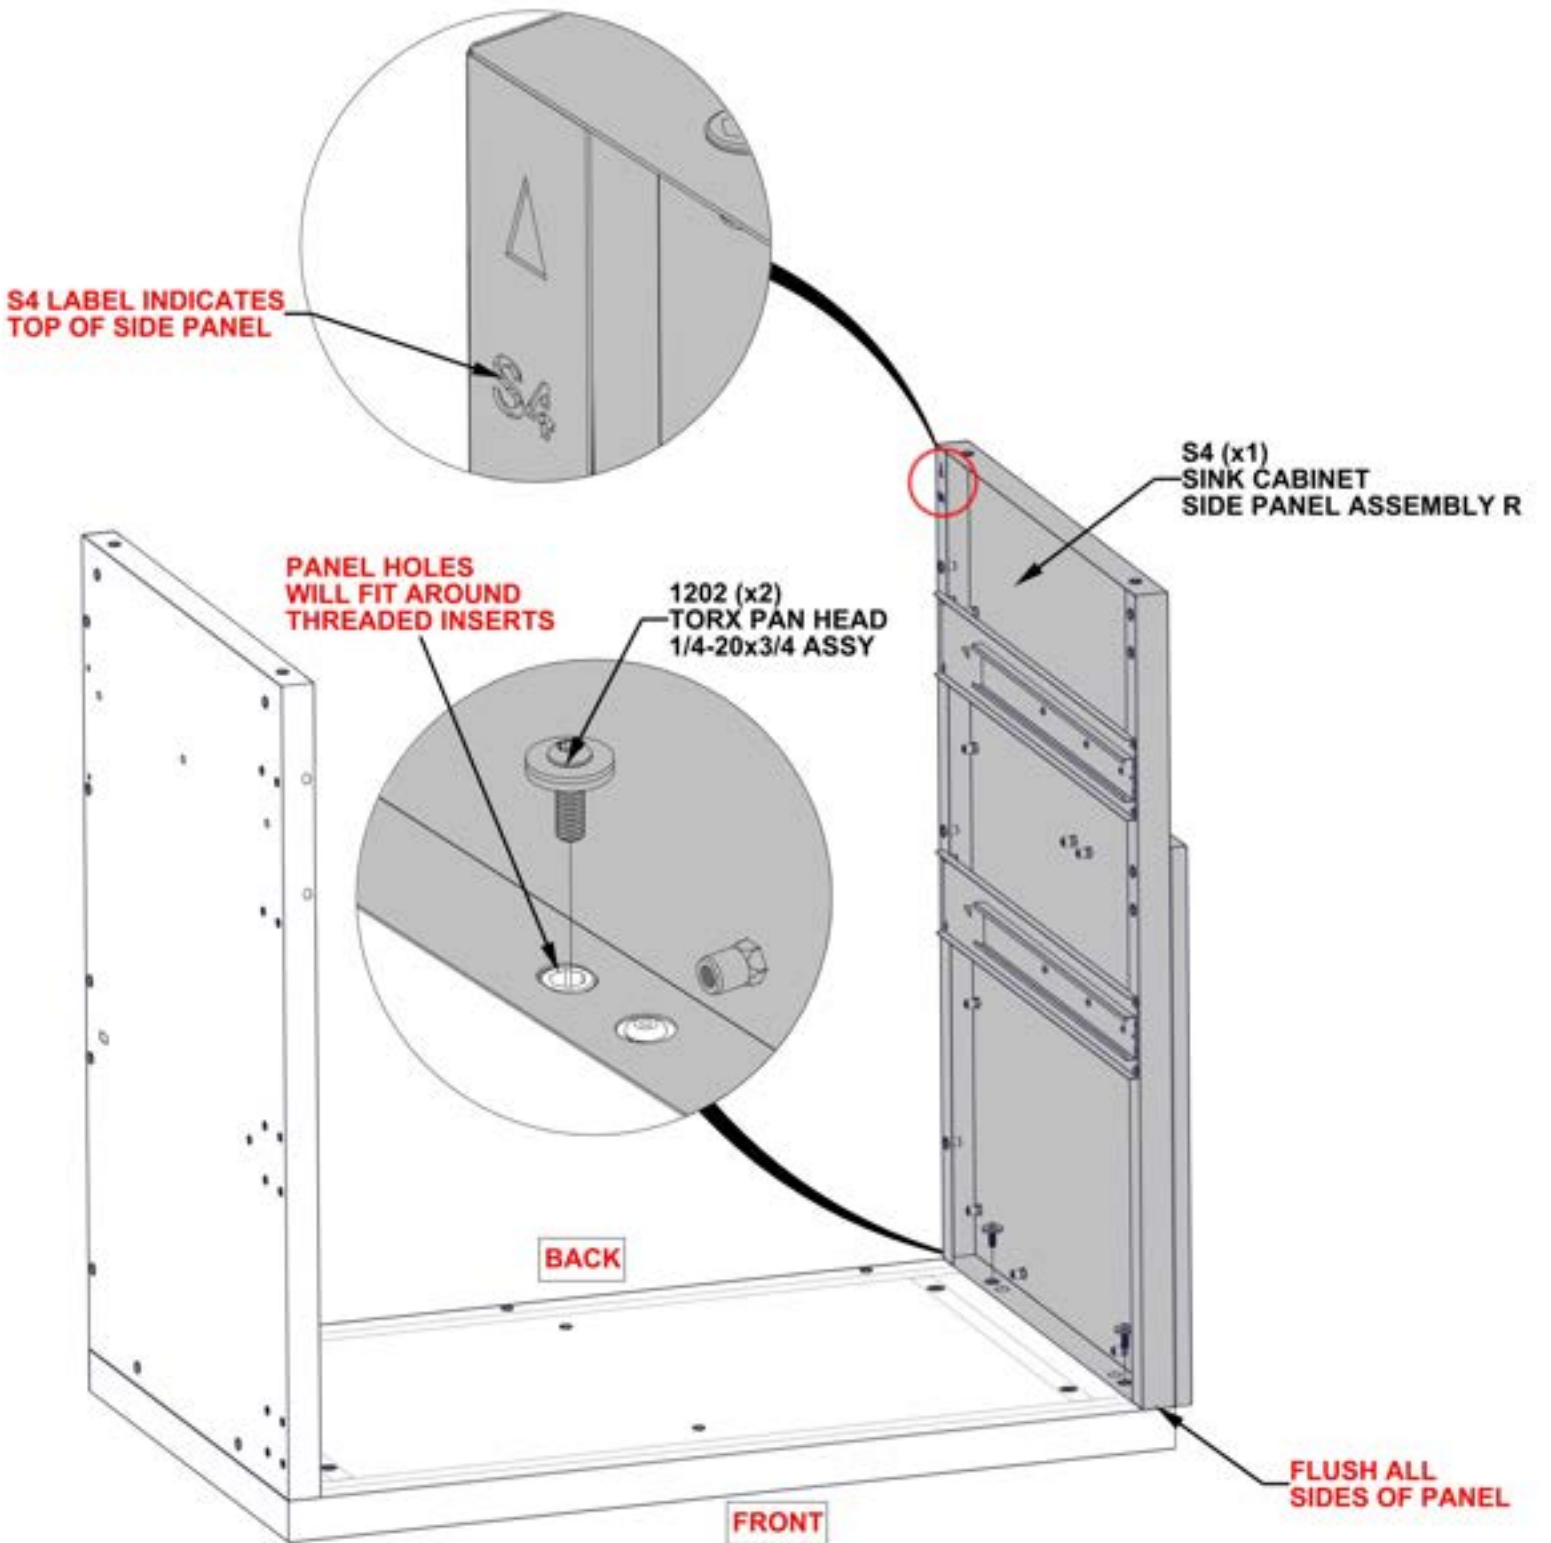


STEP 58 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY





G3 SINK CABINET BACK PANEL ASSEMBLY - A4M03564
(x1) 34 5/16"x33 3/8"x1 3/16" (30x847.2x872)

G3 LABEL INDICATES
TOP OF BACK PANEL

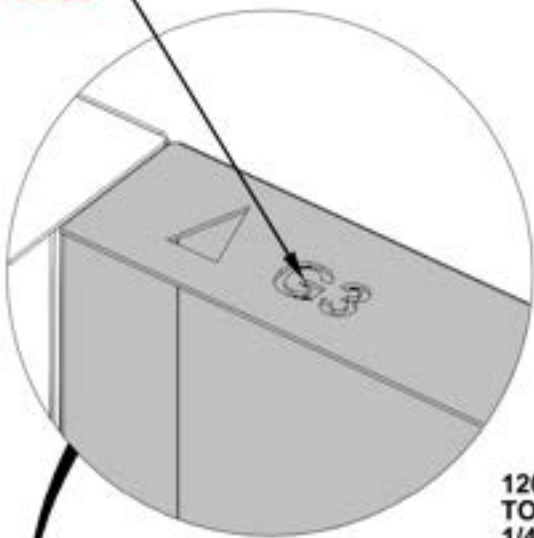

1202 (x9)
TORX PAN HEAD
1/4-20x3/4 ASSY

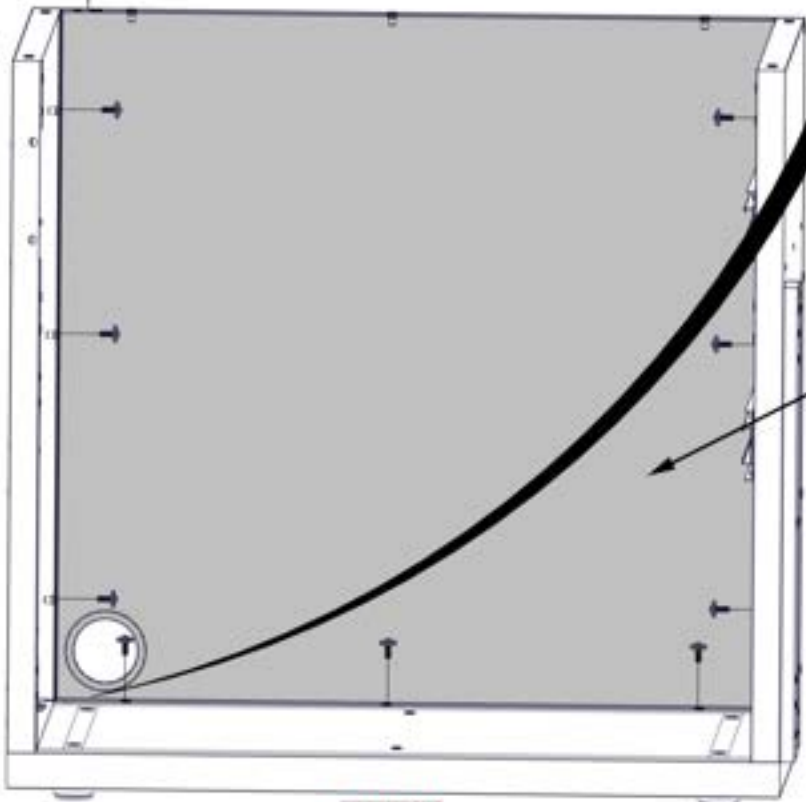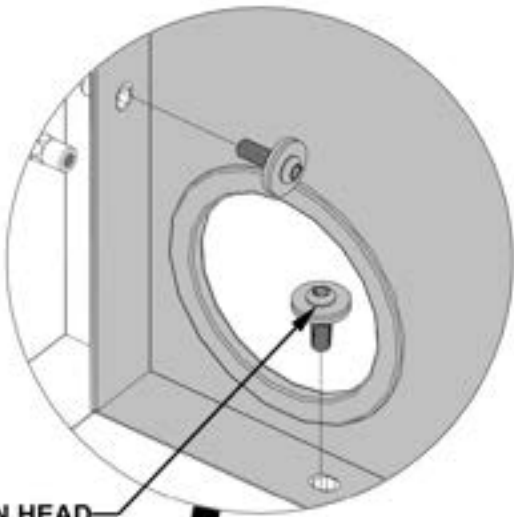

G3 (x1)
SINK CABINET BACK
PANEL ASSEMBLY

FRONT


STEP 59 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




S5 SINK CABINET SIDE PANEL ASSEMBLY M - A4M03567
(x1) 33 3/8"x23 3/8"x2 3/16" (56.2x59.3x8.47)

1202 (x2)
TORX PAN HEAD
1/4-20x3/4 ASSY

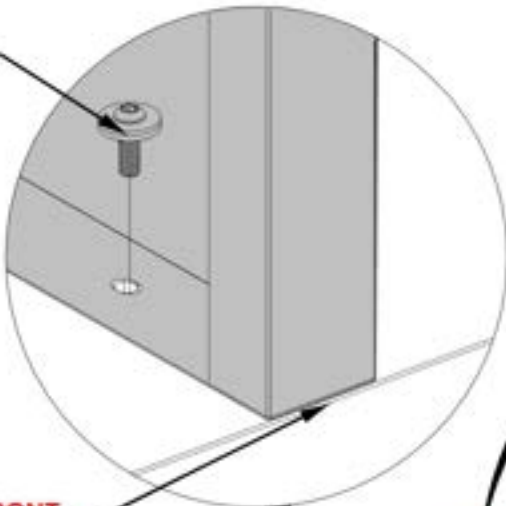


FLUSH FRONT
SURFACE

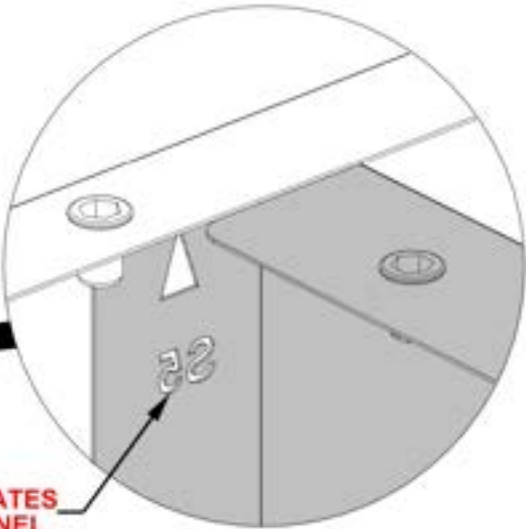

S5 LABEL INDICATES
TOP OF SIDE PANEL

S5 (x1)
SINK CABINET SIDE
PANEL ASSEMBLY M

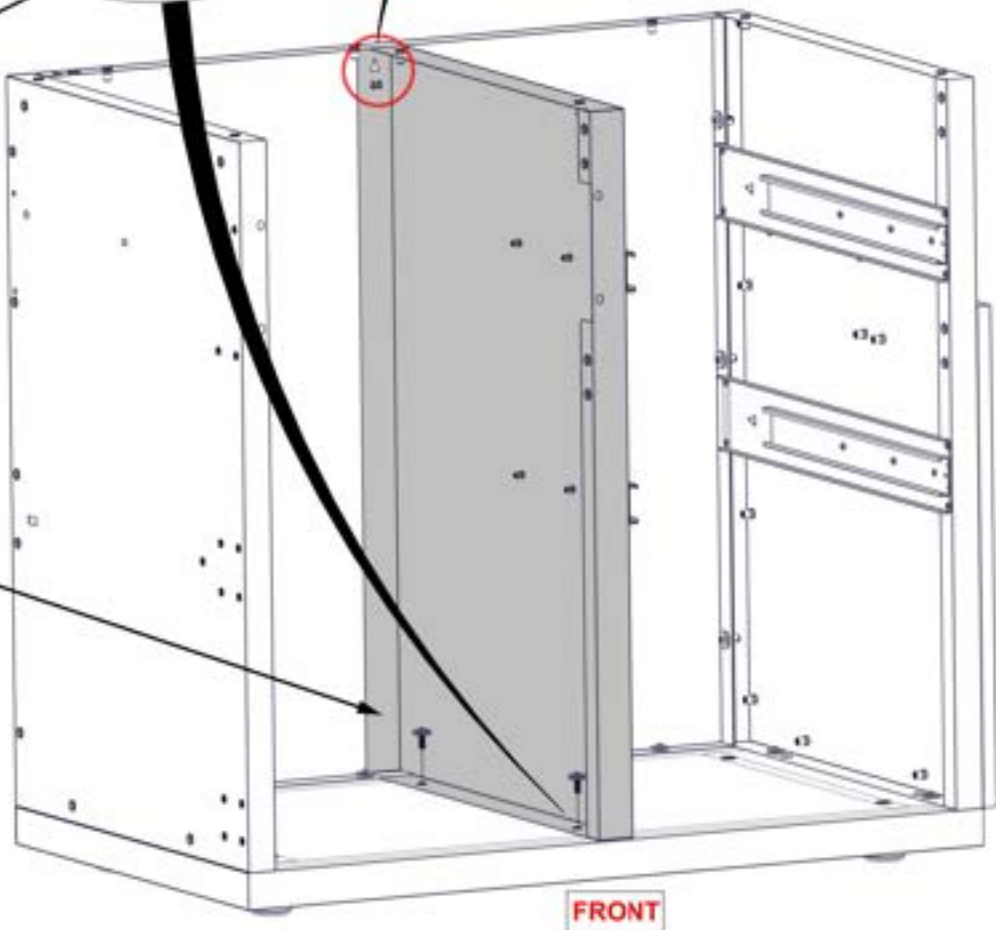


STEP 60 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
16	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



H4 HORIZONTAL BEAM ASSEMBLY L - A4M03575
(x4) 16 1/4"x3 3/8"x1" (25x85x413)

- HARDWARE ATTACHES ON INSIDE OF CABINET

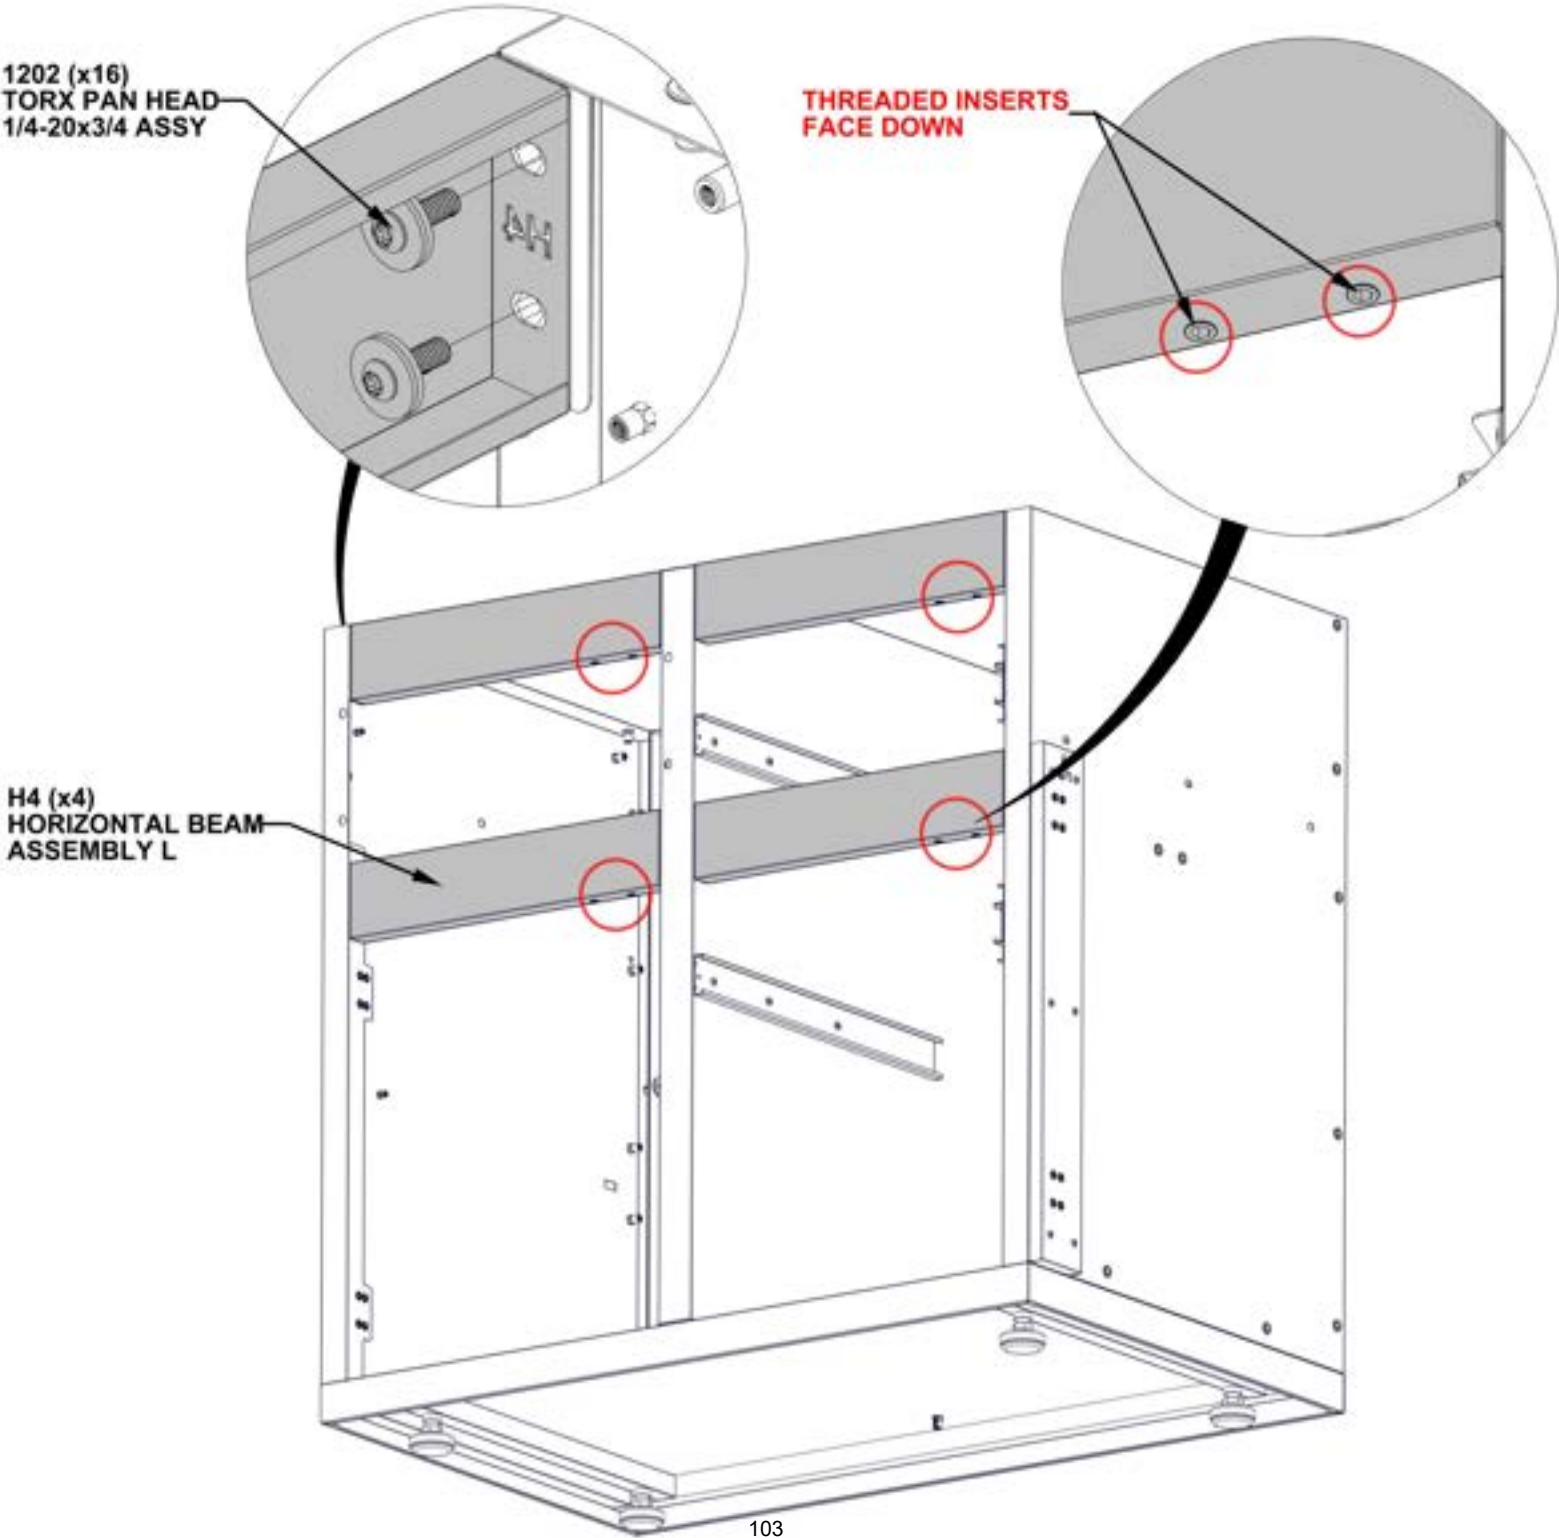


STEP 61 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
2	H101289	PAN HEAD SCREW 8-32x1/2" SS



A2 MAGNET BRACKET - A4M03026
(x1) 1"x1 1/4"x3 1/8" (25x31x80)

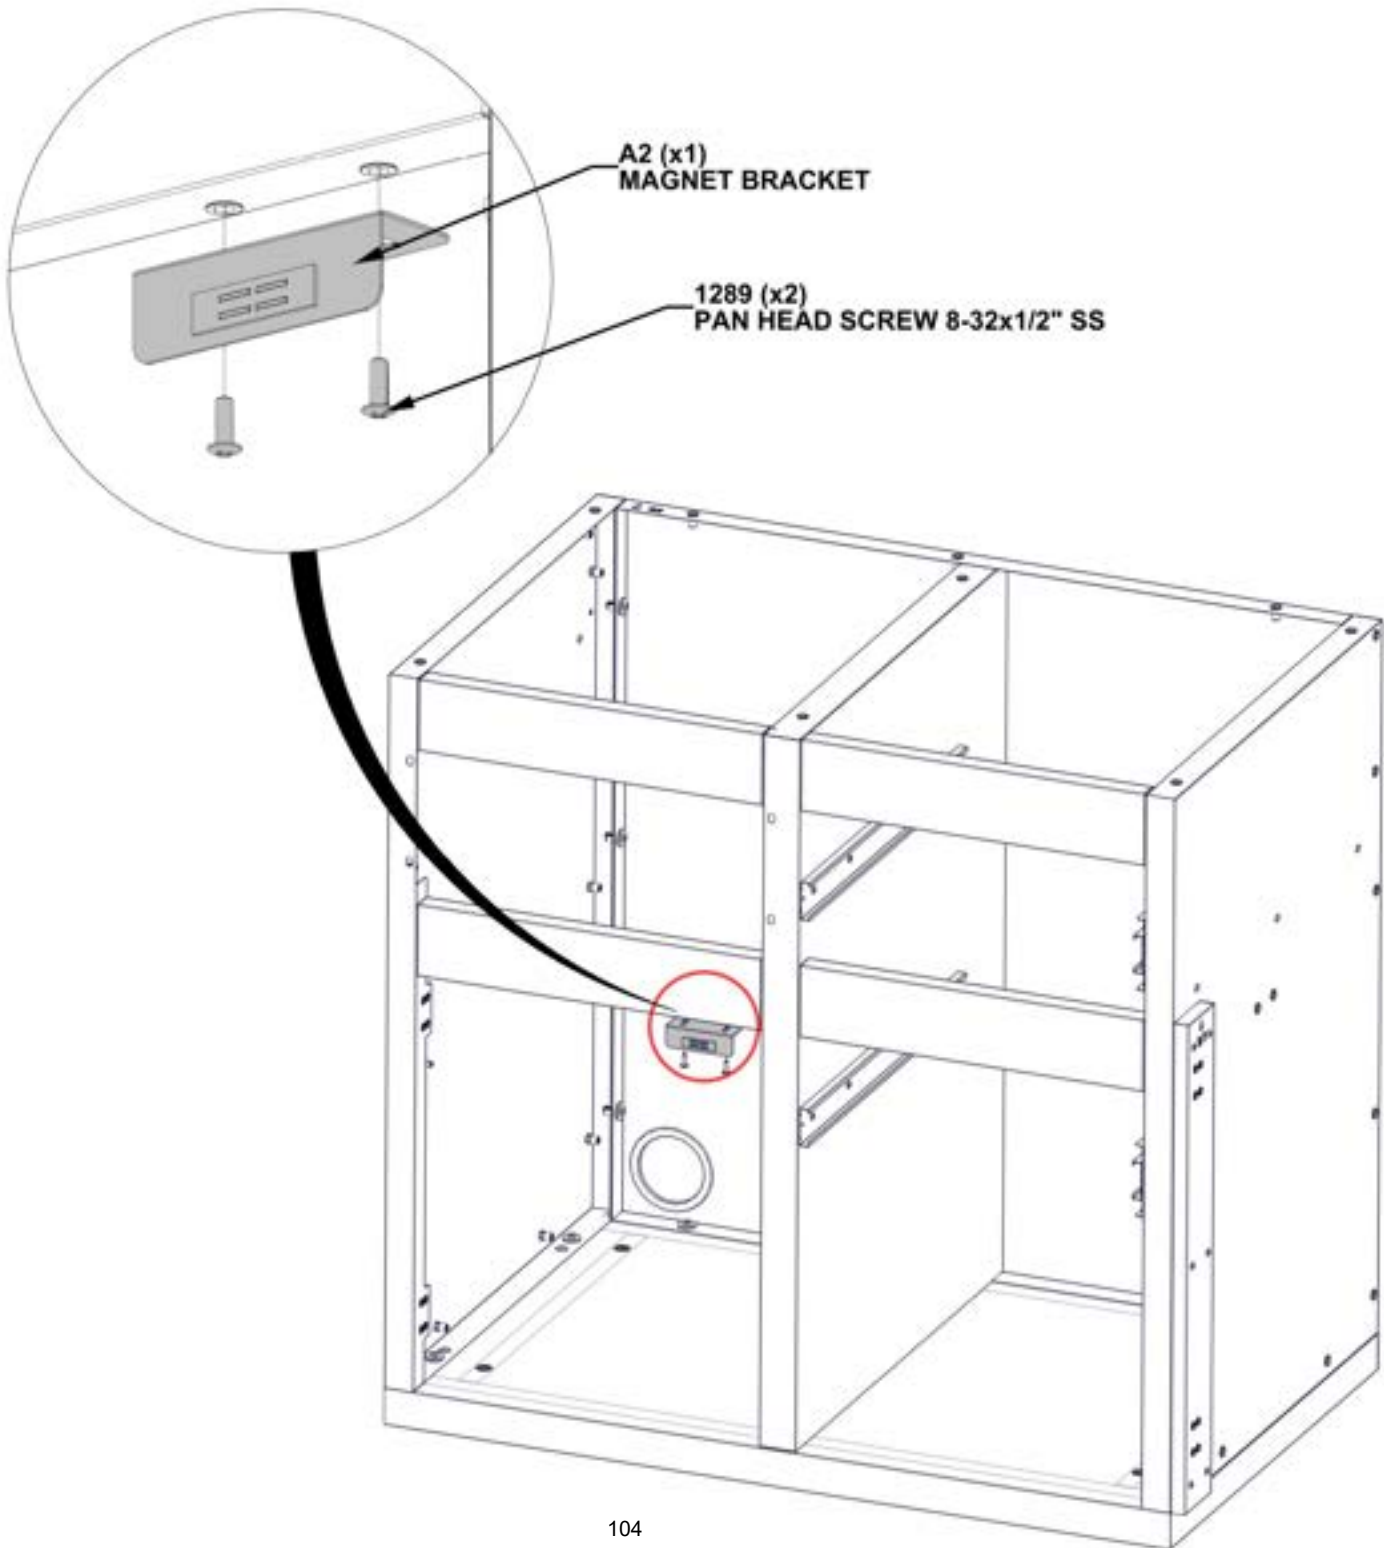


STEP 62 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
6	H101287	PAN HEAD SCREW 8-32x1" SS




H5 PIZZA OVEN CABINET HINGE CHANNEL ASSEMBLY - A4M03558
(x1) 26 5/8"x2 15/16"x11/16" (18x74.80x676)

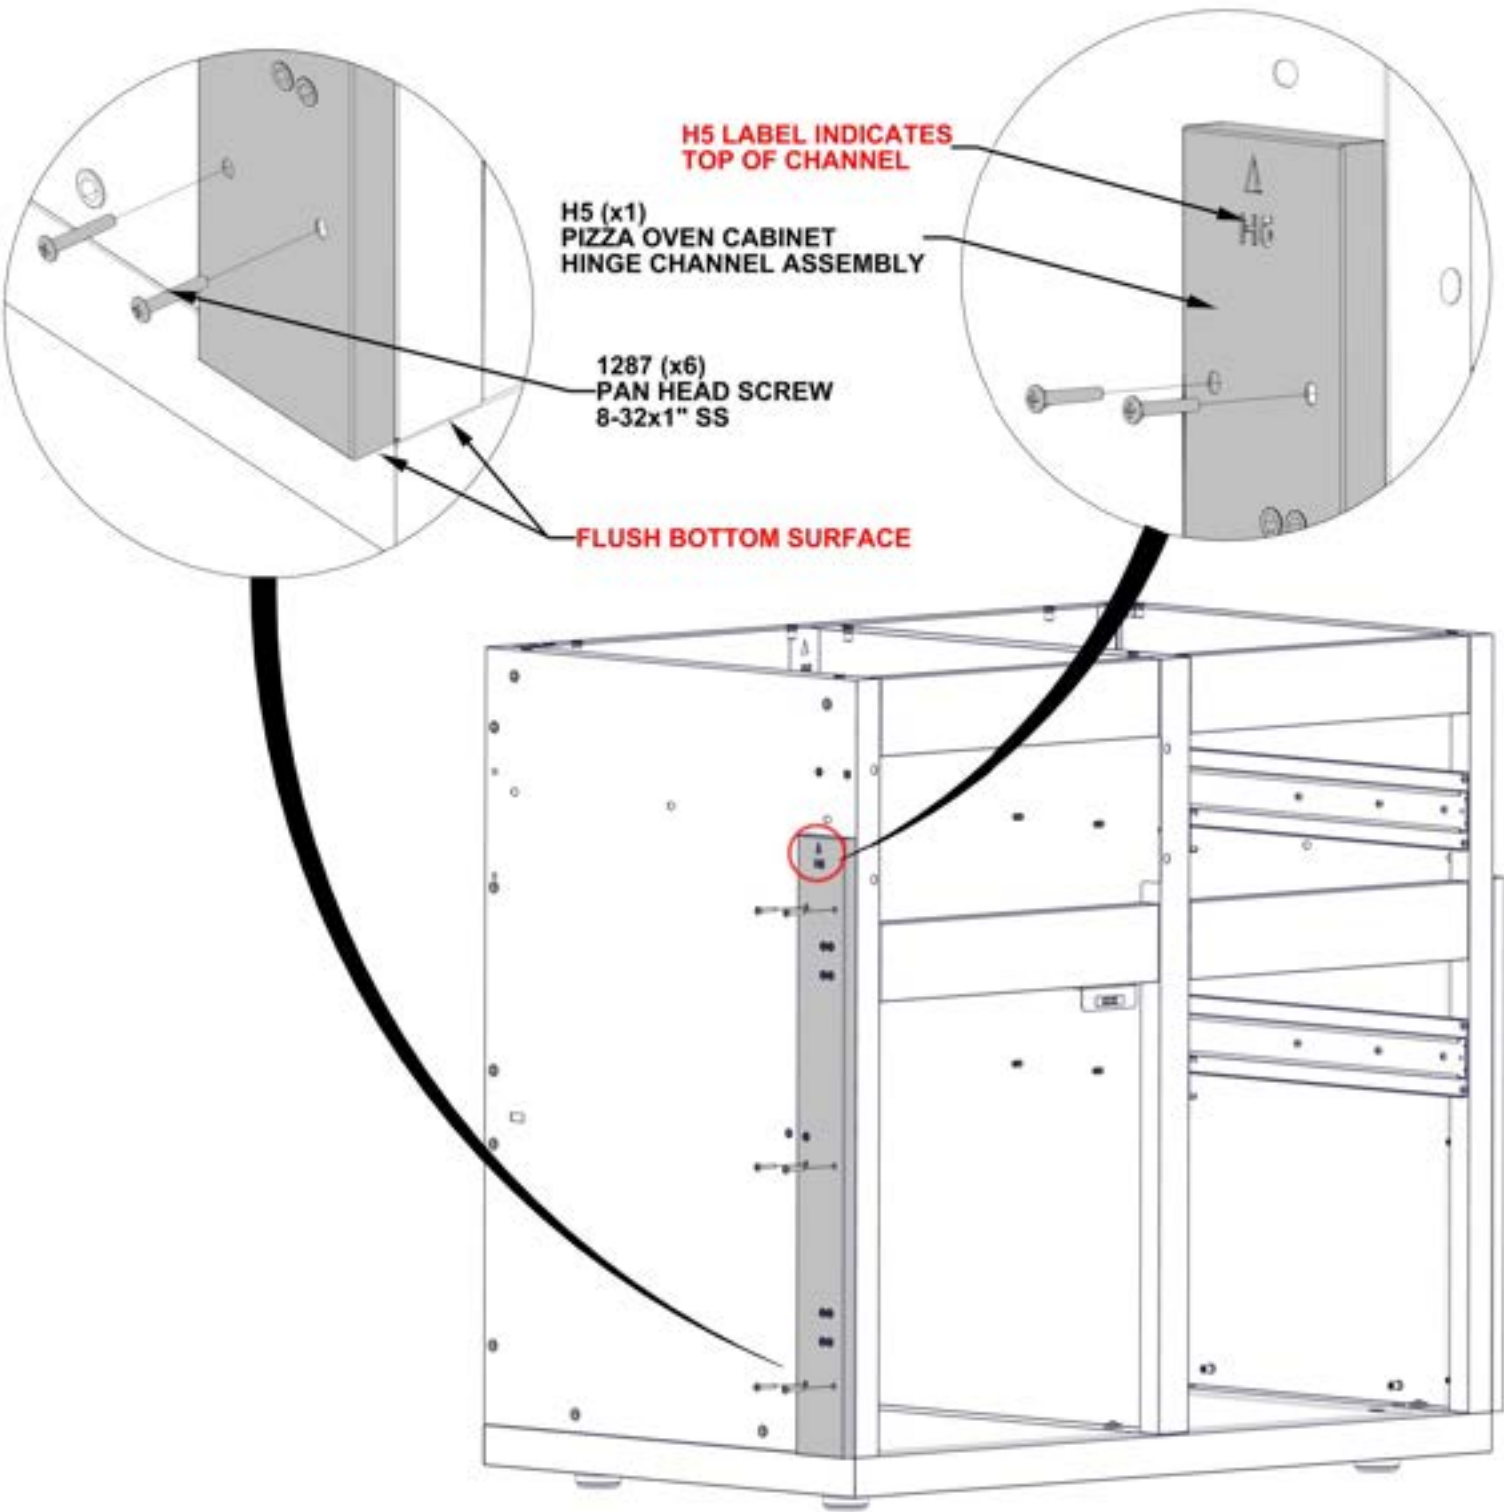


STEP 63 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
9	H101103	TORX SOCKET SCREW 1/4-20

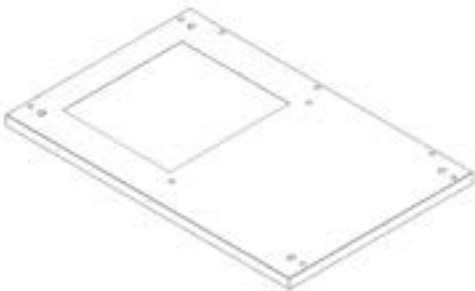

T4 SINK CABINET TABLETOP FRAME - A4M03566
(x1) 37 3/16"x24 1/8"x1 1/4" (32x612x944)

- FLUSH BACK AND SIDE OF PANEL ASSEMBLY.
- SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.

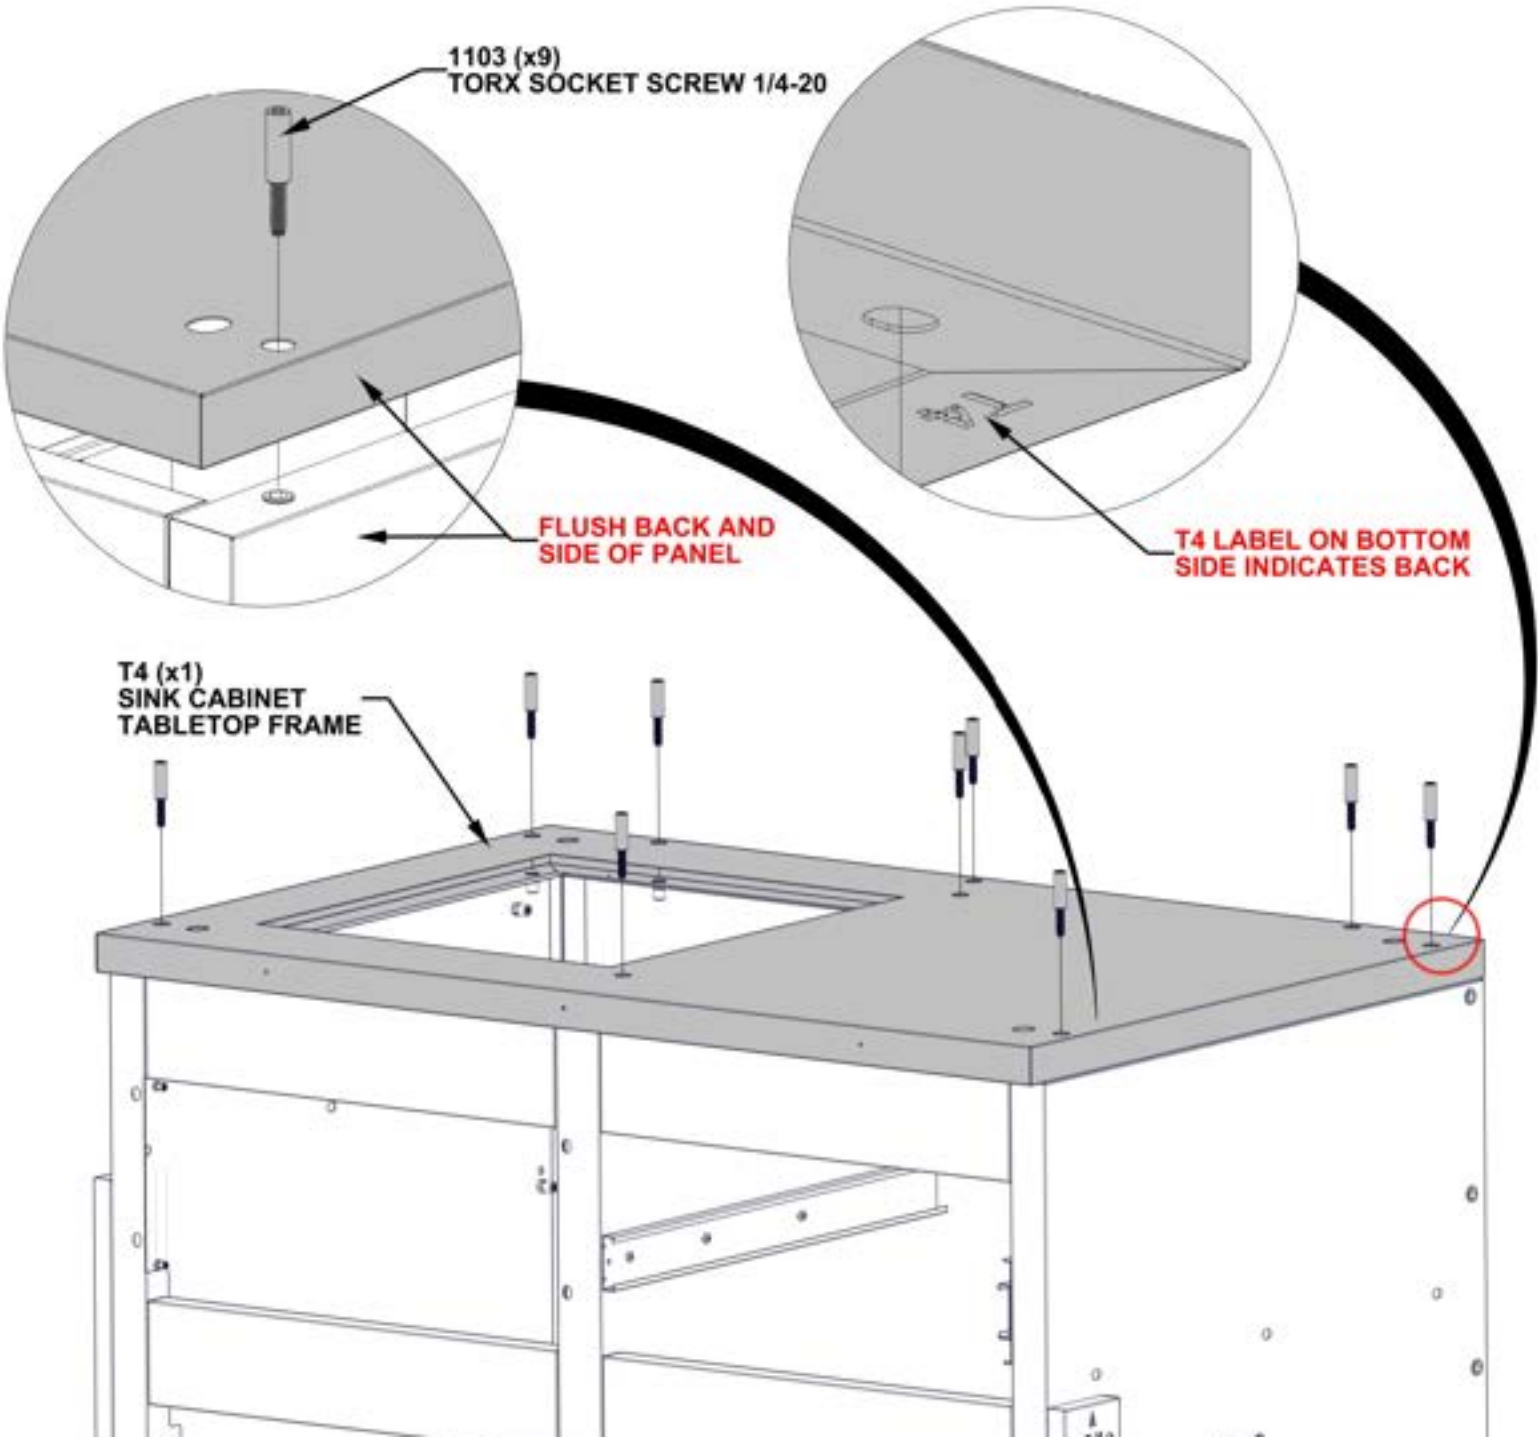


STEP 64 - SINK CABINET INSTALLATION




SINK CABINET FROM
STEPS 56 - 63

- POSITION SINK CABINET ASSEMBLY UNDERNEATH LANCASTER GALLEY STRUCTURE.
- DISTANCE BETWEEN FRIDGE CABINET WILL BE DETERMINED IN NEXT STEP.

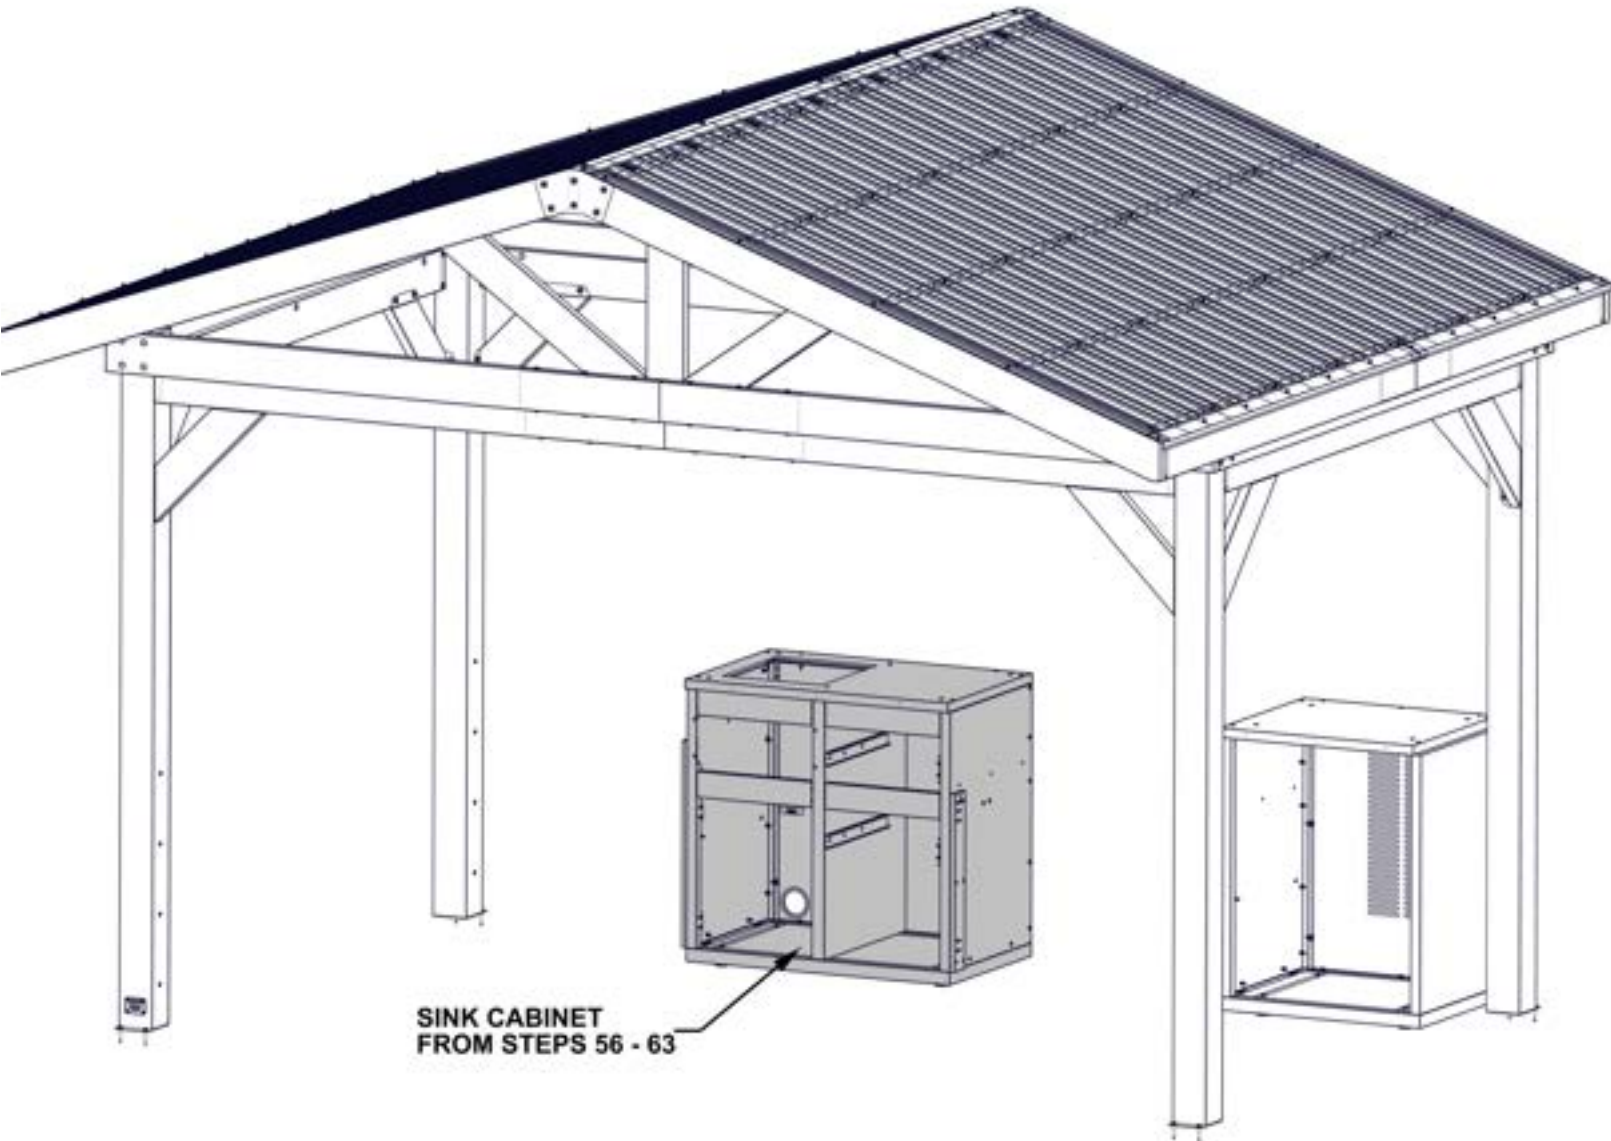


SINK CABINET
FROM STEPS 56 - 63

STEP 65 - GRILL CABINET ASSEMBLY

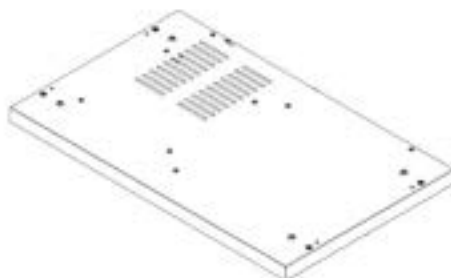


F2 GRILL CABINET FLOOR PANEL ASSEMBLY - A4M03048
(x1) 2 5/8"x23 3/8"x38 1/4" (66x594x972)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **LOOKING AT THE FRONT SIDE OF THE CABINETS,
SLIDE FLOOR PANEL IN BETWEEN SINK AND FRIDGE CABINETS.**

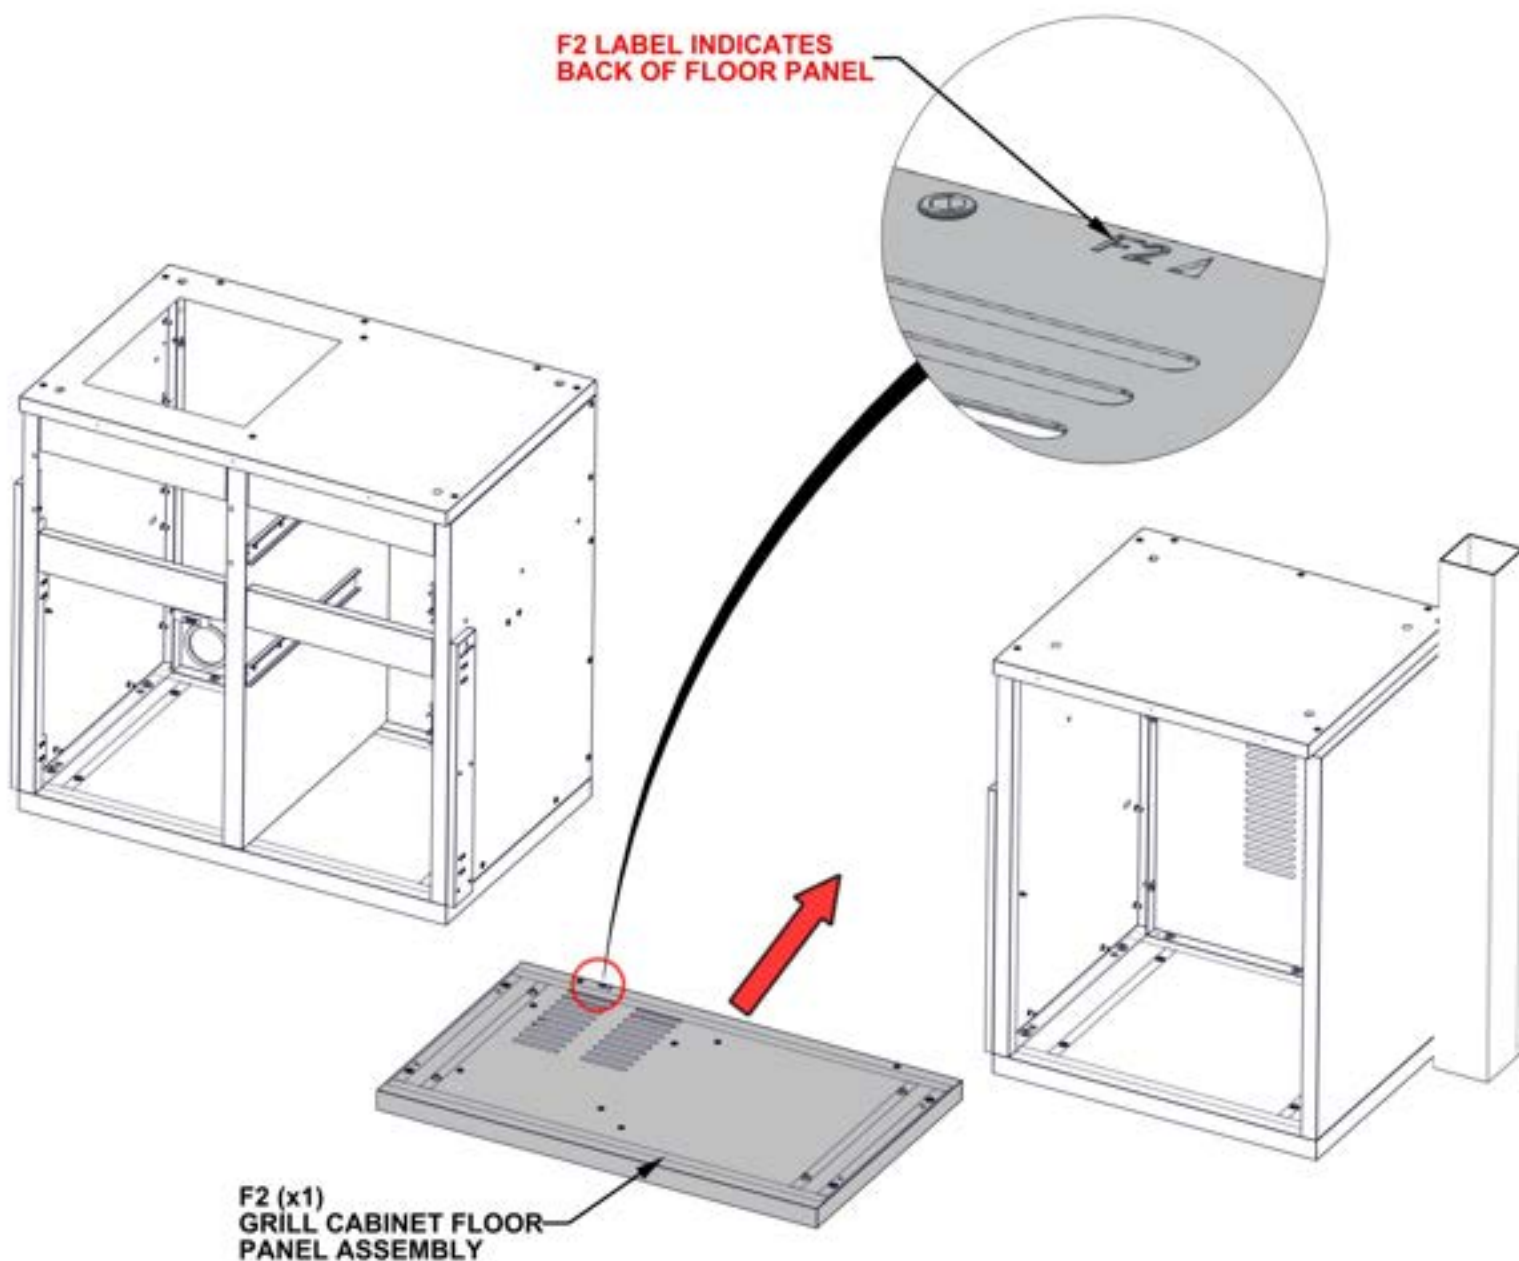


STEP 66 - GRILL CABINET ASSEMBLY

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- POSITION FLOOR PANEL AS SHOWN BELOW.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.
- ADJUST LEFT AND RIGHT CORNER CABINET TO ELIMINATE ANY GAPS BETWEEN FLOOR PANEL AND CABINETS.

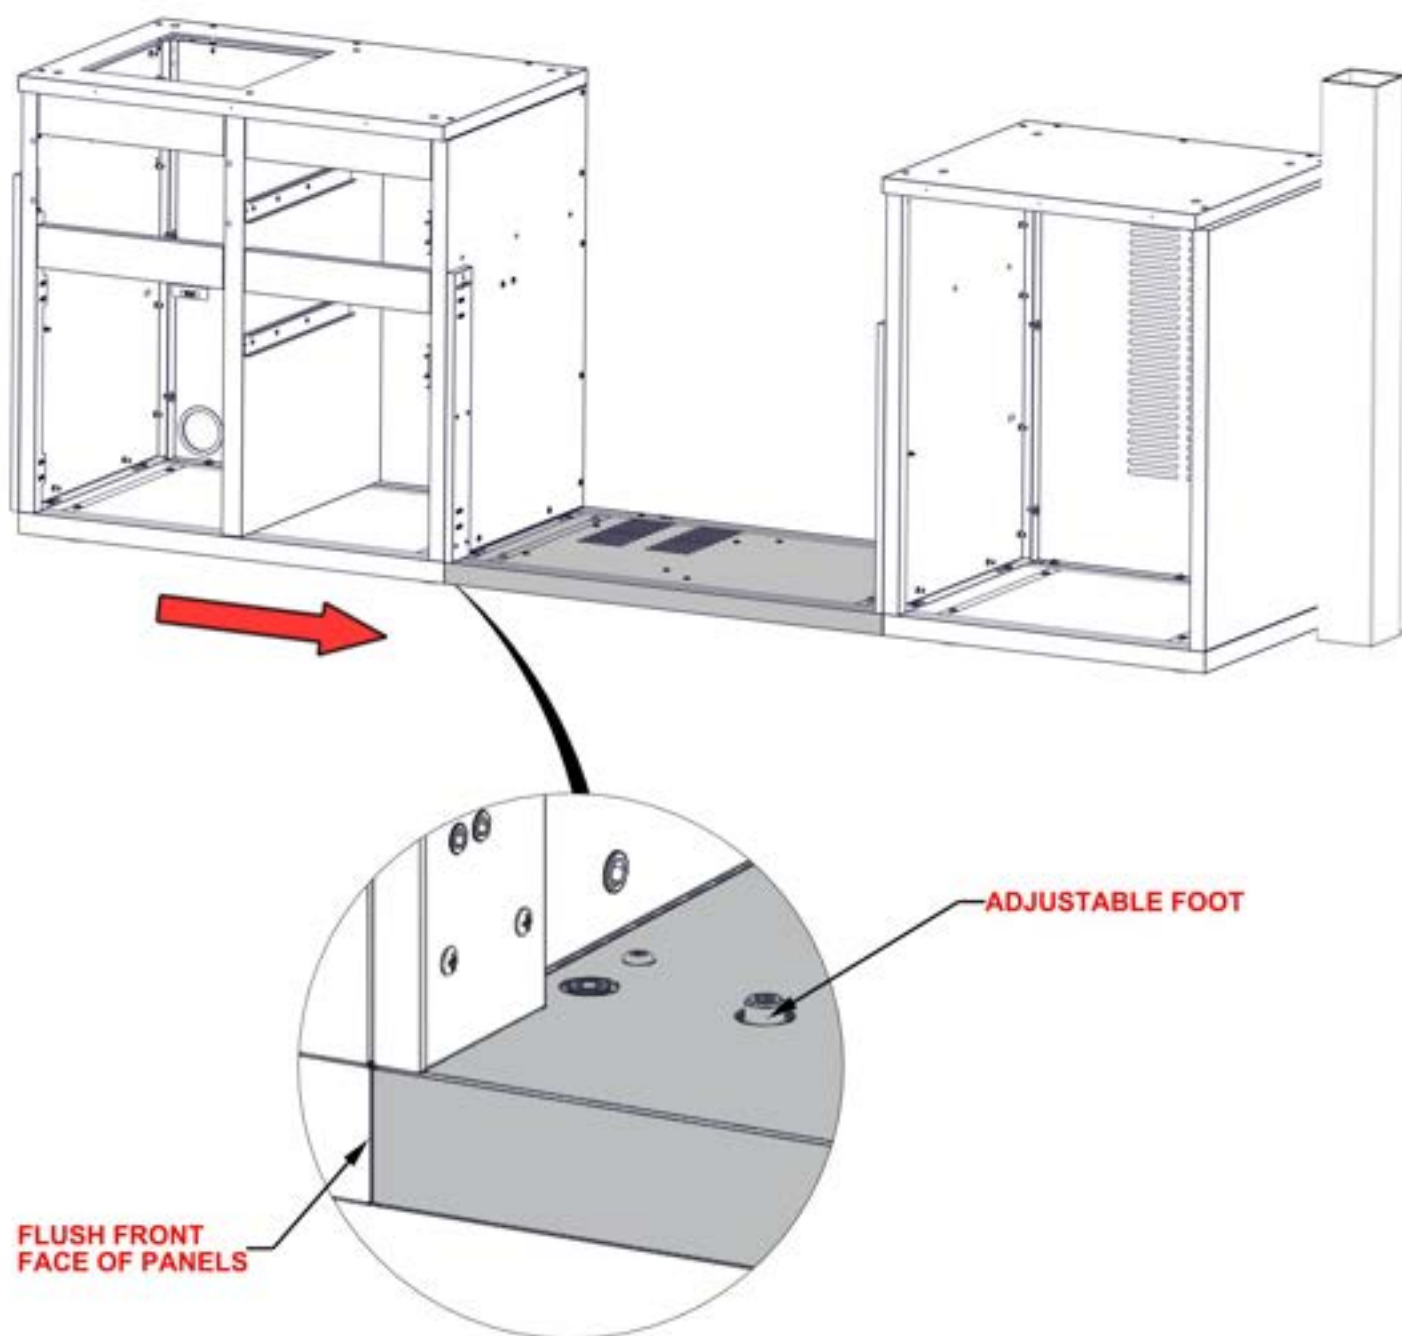



STEP 67 - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

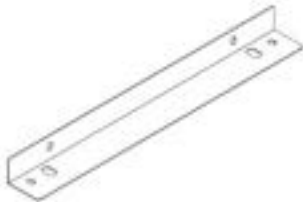

A6 ANGLED BRACKET - A4M03053
(x1) 1 3/8"x1 5/16"x17 1/8" (35x50x435)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

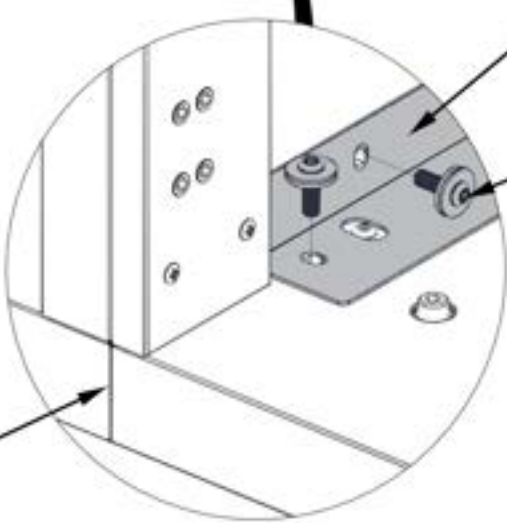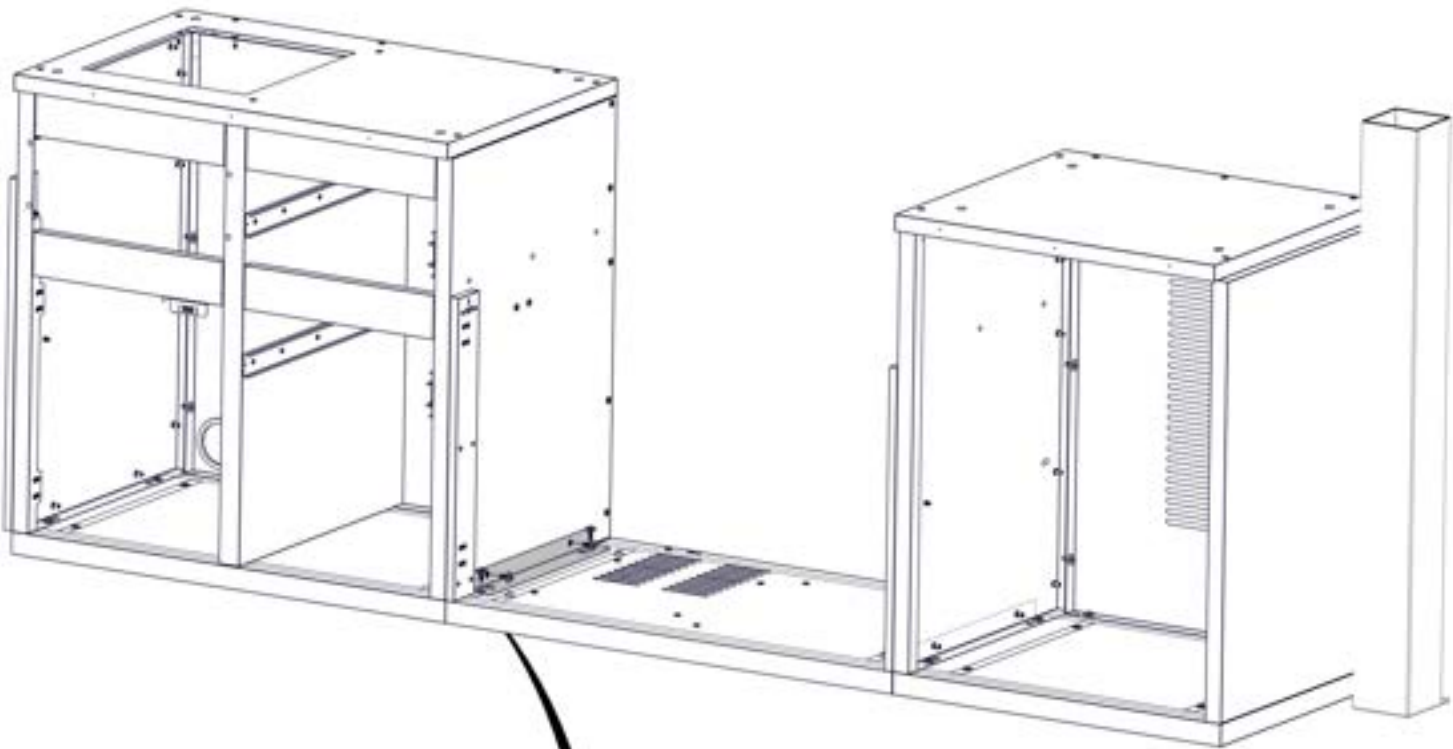


A6 (x1)
ANGLED BRACKET

1202 (x4)
TORX PAN HEAD 1/4-20x3/4 ASSY

MAKE SURE FRONT
FACE OF FLOOR
PANELS ARE FLUSH


STEP 68 - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

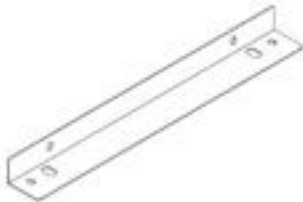


A6 ANGLED BRACKET - A4M03053
(x1) 1 3/8"x1 15/16"x17 1/8" (35x50x435)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

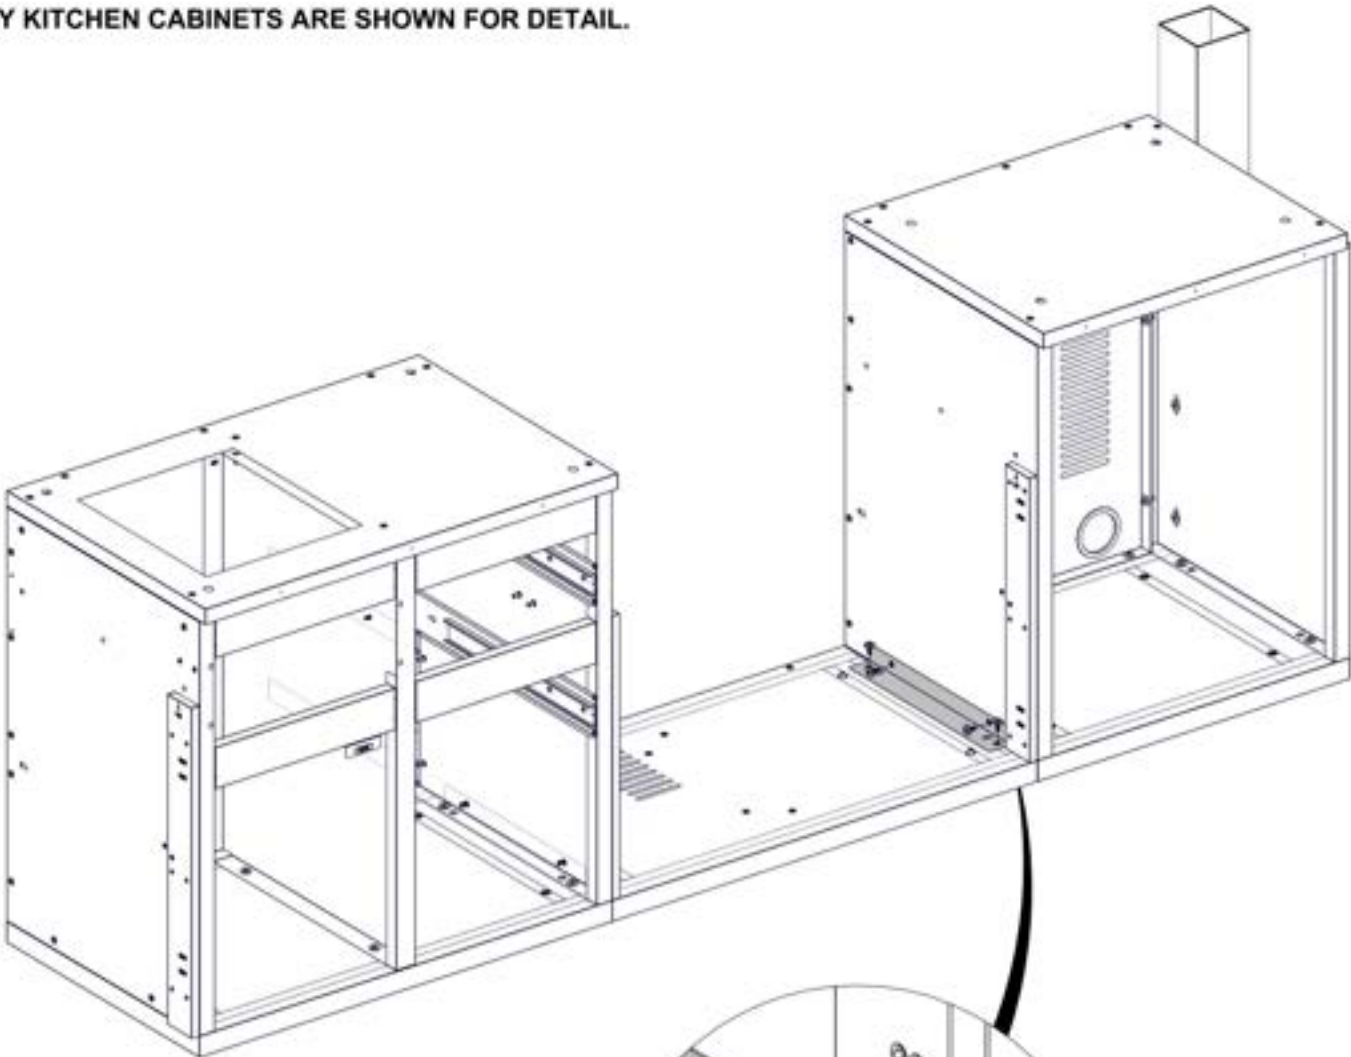

1202 (x4)
TORX PAN HEAD 1/4-20x3/4 ASSY

A6 (x1)
ANGLED BRACKET

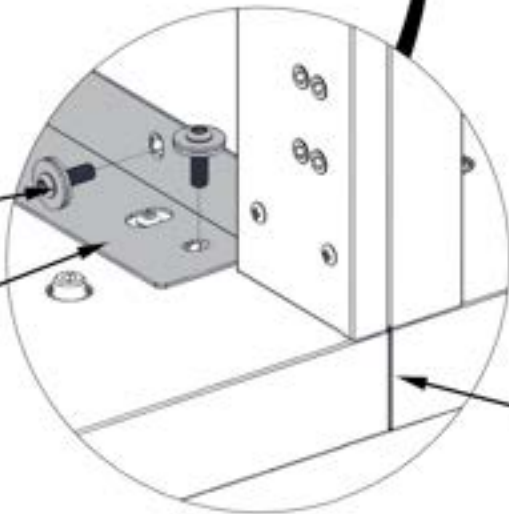

MAKE SURE FRONT
FACE OF FLOOR
PANELS ARE FLUSH


STEP 69 - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



G10 GRILL CABINET BACK PANEL ASSEMBLY - A4M03055
(x1) 1 3/16"x22 7/8"x38 3/16" (30x581x970)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

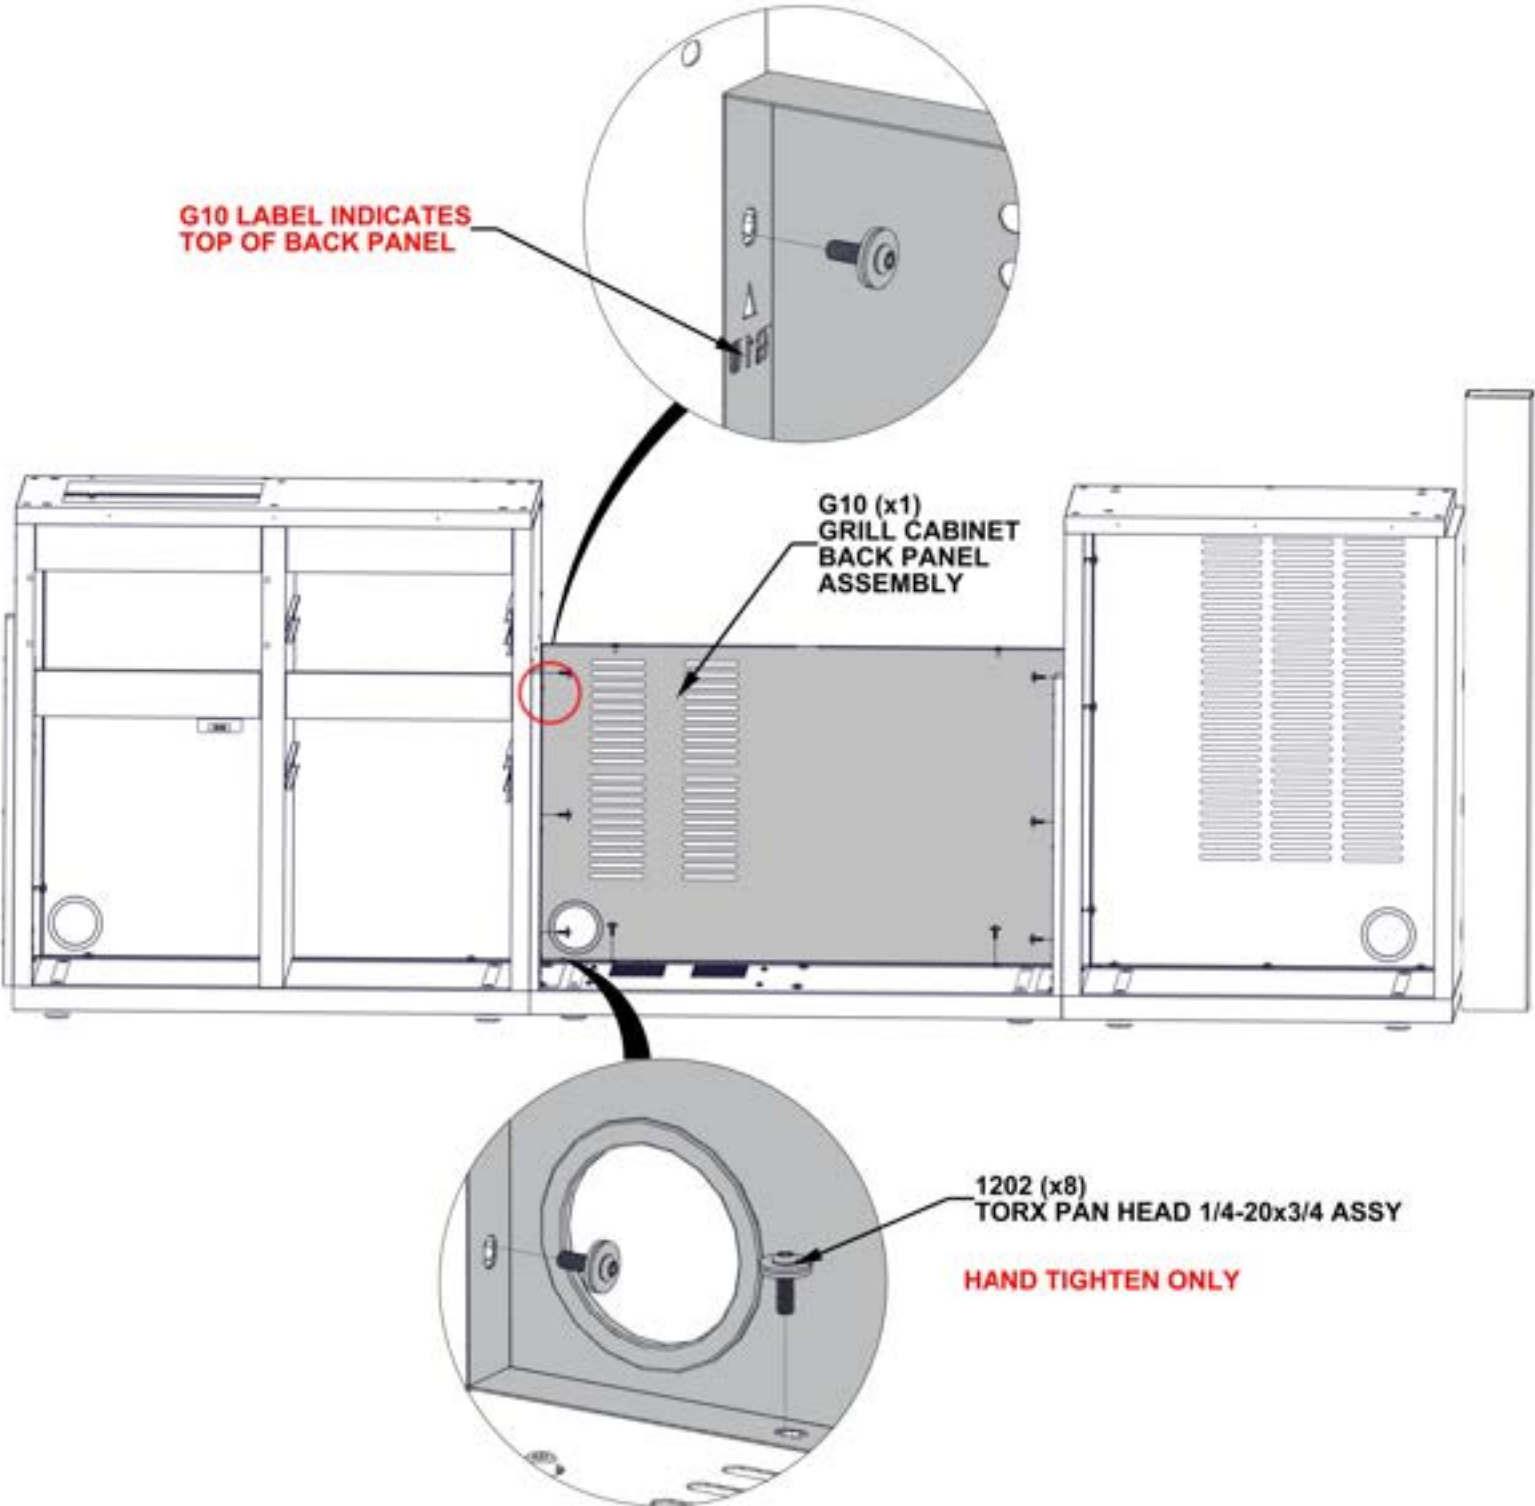


STEP 70 - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



S6 GRILL CABINET SIDE PANEL ASSEMBLY M - A4M03586
(x1) 23 3/8"x22 7/8"x1 3/8" (35x581x593)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

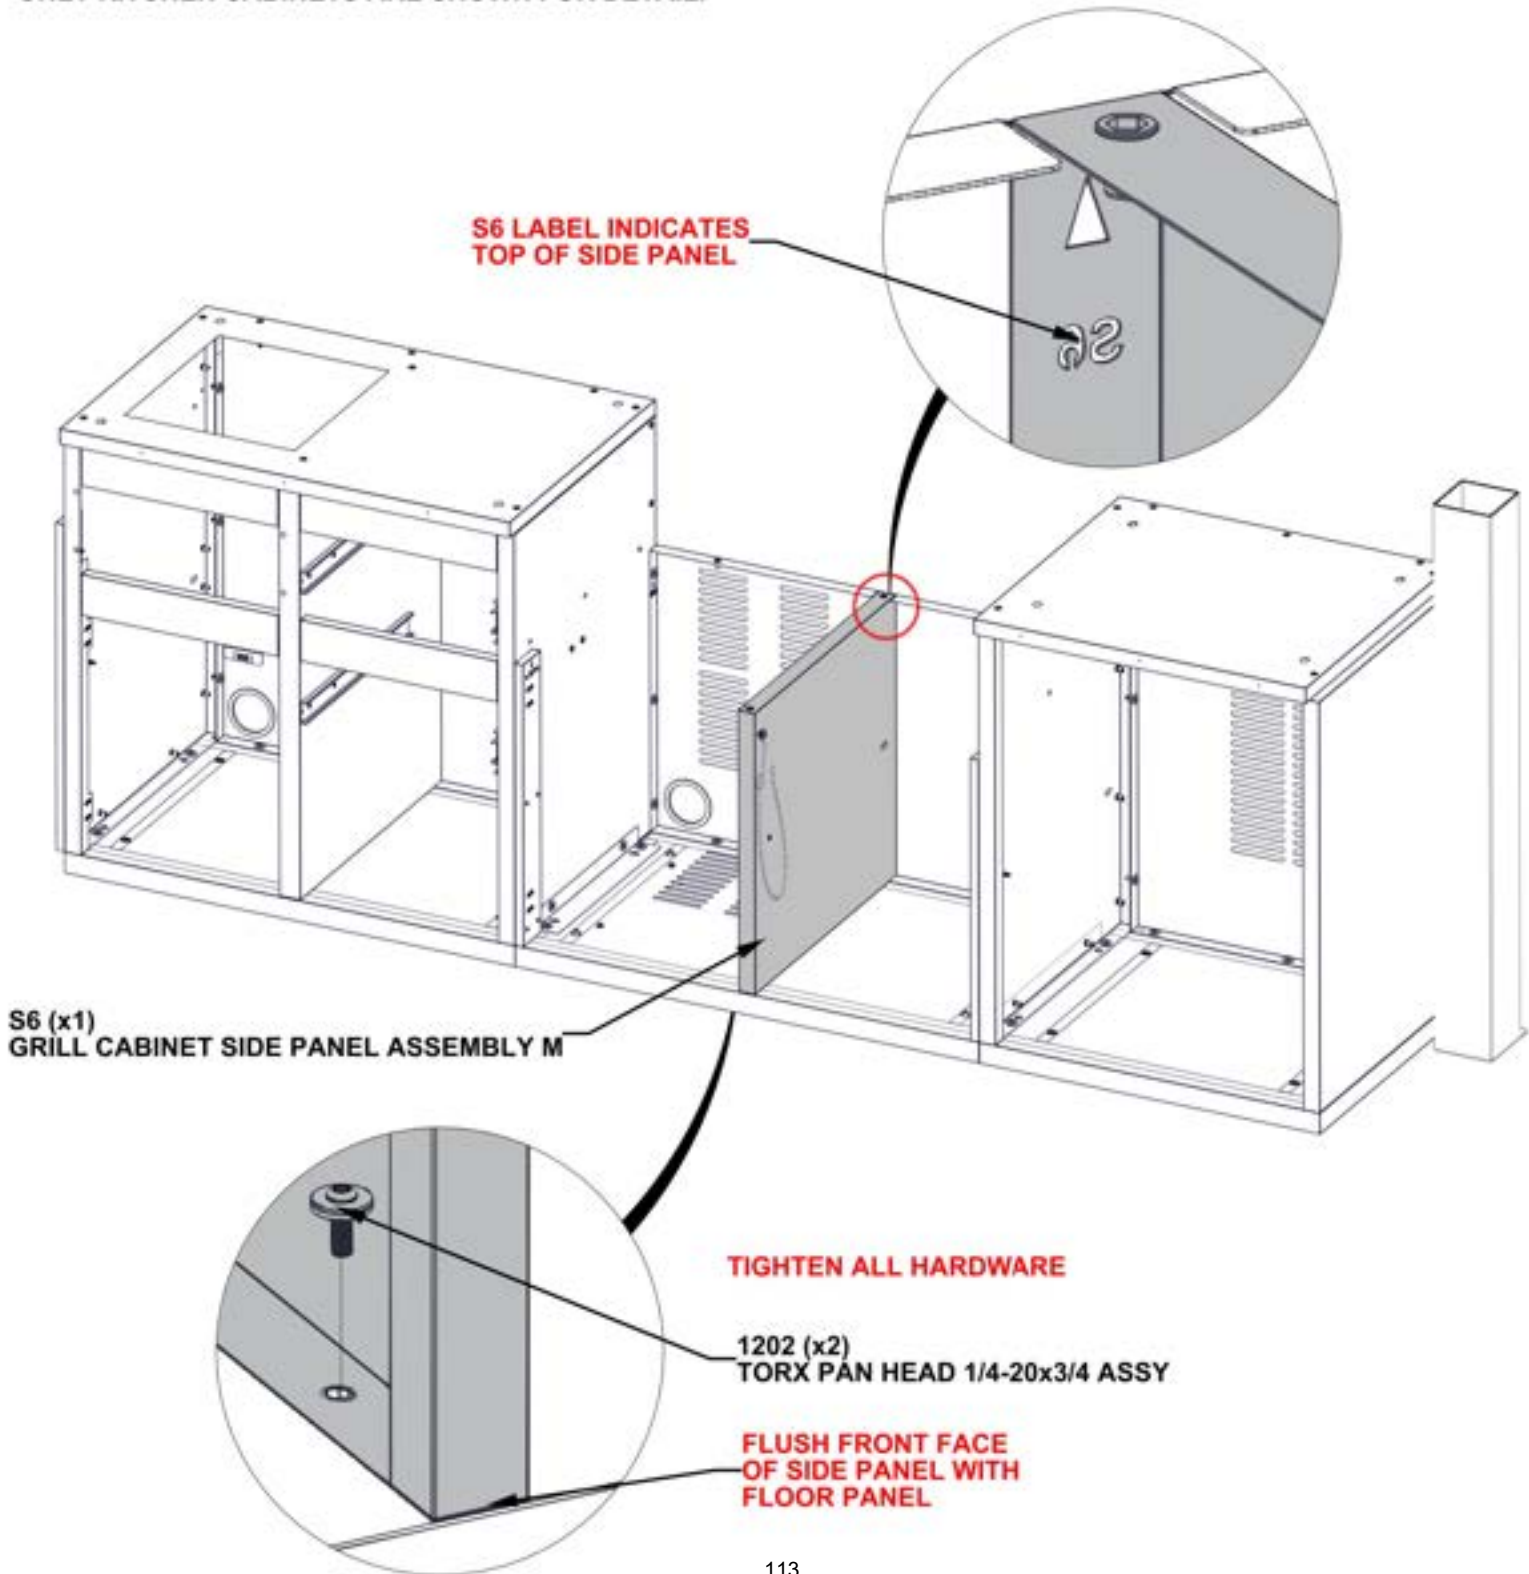


STEP 71A - GRILL CABINET ASSEMBLY



A5 SHELF BRACKET - A4M03141
(x2) 5/8"x7/8"x2 1/16" (16x22x53)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ATTACH SHELF BRACKETS ON BOTH SIDES OF CENTER GRILL CABINET.

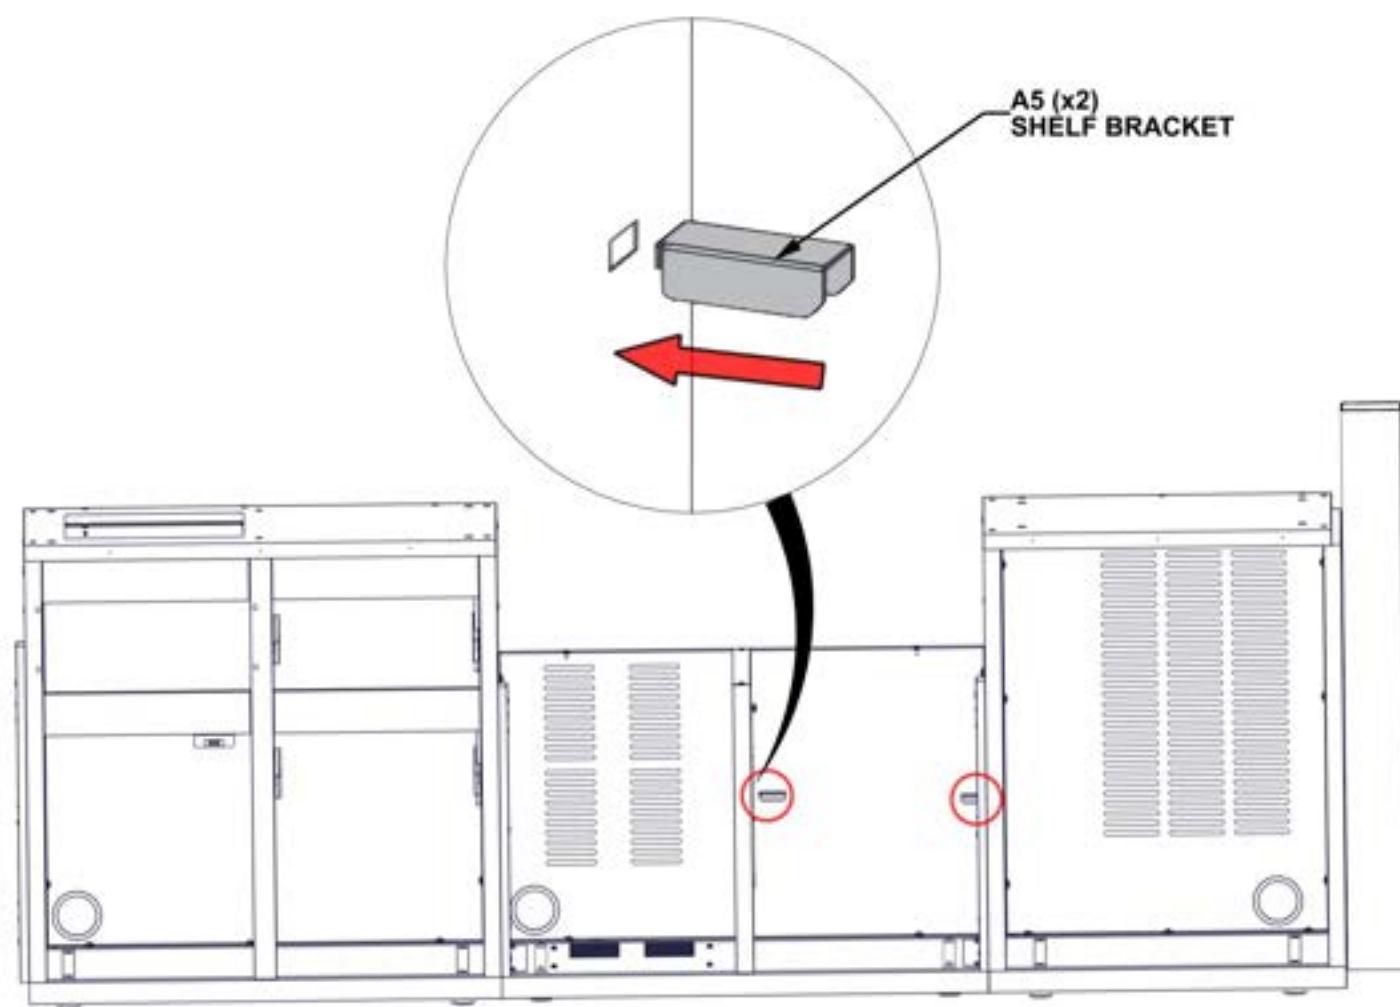


STEP 71B - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
3	H101289	PAN HEAD SCREW 8-32x1/2" SS




L2 GRILL CABINET SHELF ASSEMBLY - A4M03589
(x1) 23 1/4"x18 3/8"x1" (25.00x467.00x591.00)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ALIGN SHELF WITH THREADED INSERTS AND ATTACH HARDWARE TO FASTEN IN PLACE.

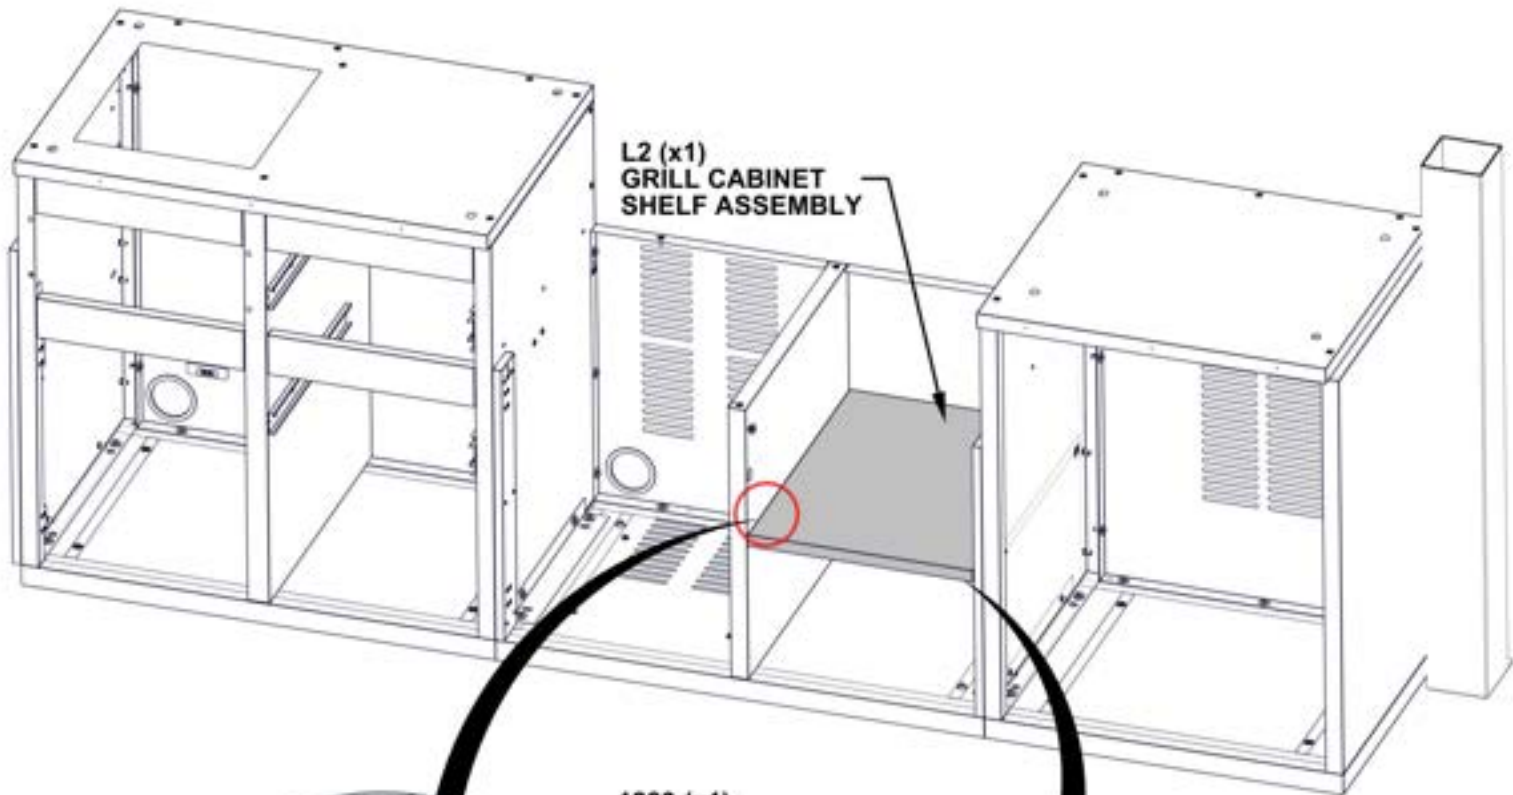

L2 (x1)
GRILL CABINET
SHELF ASSEMBLY

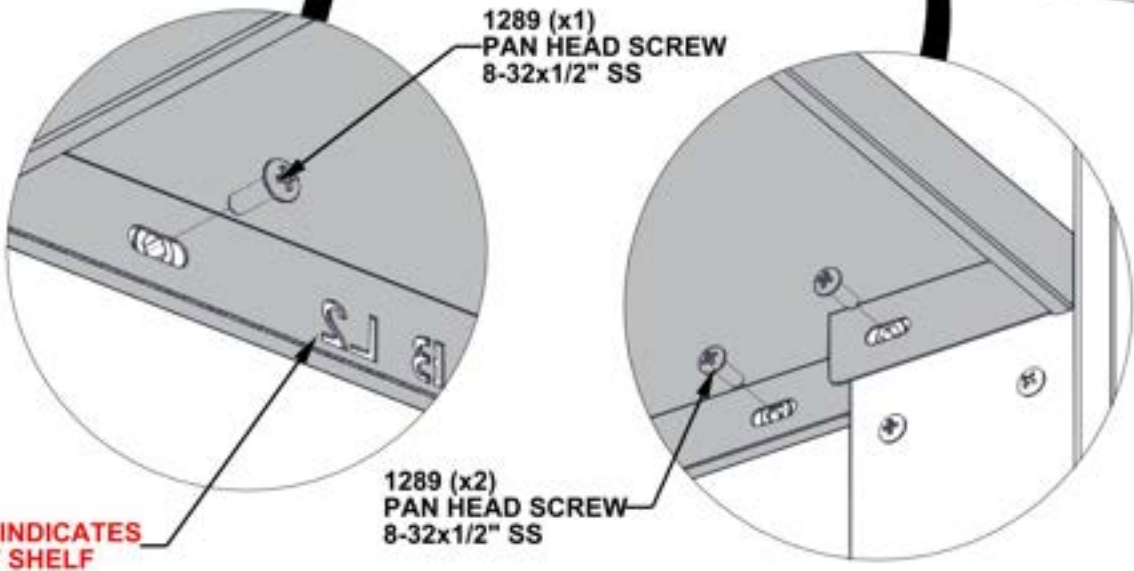

1289 (x1)
PAN HEAD SCREW
8-32x1/2" SS

1289 (x2)
PAN HEAD SCREW
8-32x1/2" SS

L2 LABEL INDICATES
FRONT OF SHELF


STEP 72 - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



A9 HOSE BRACKET ASSEMBLY - A4M03060
(x1) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

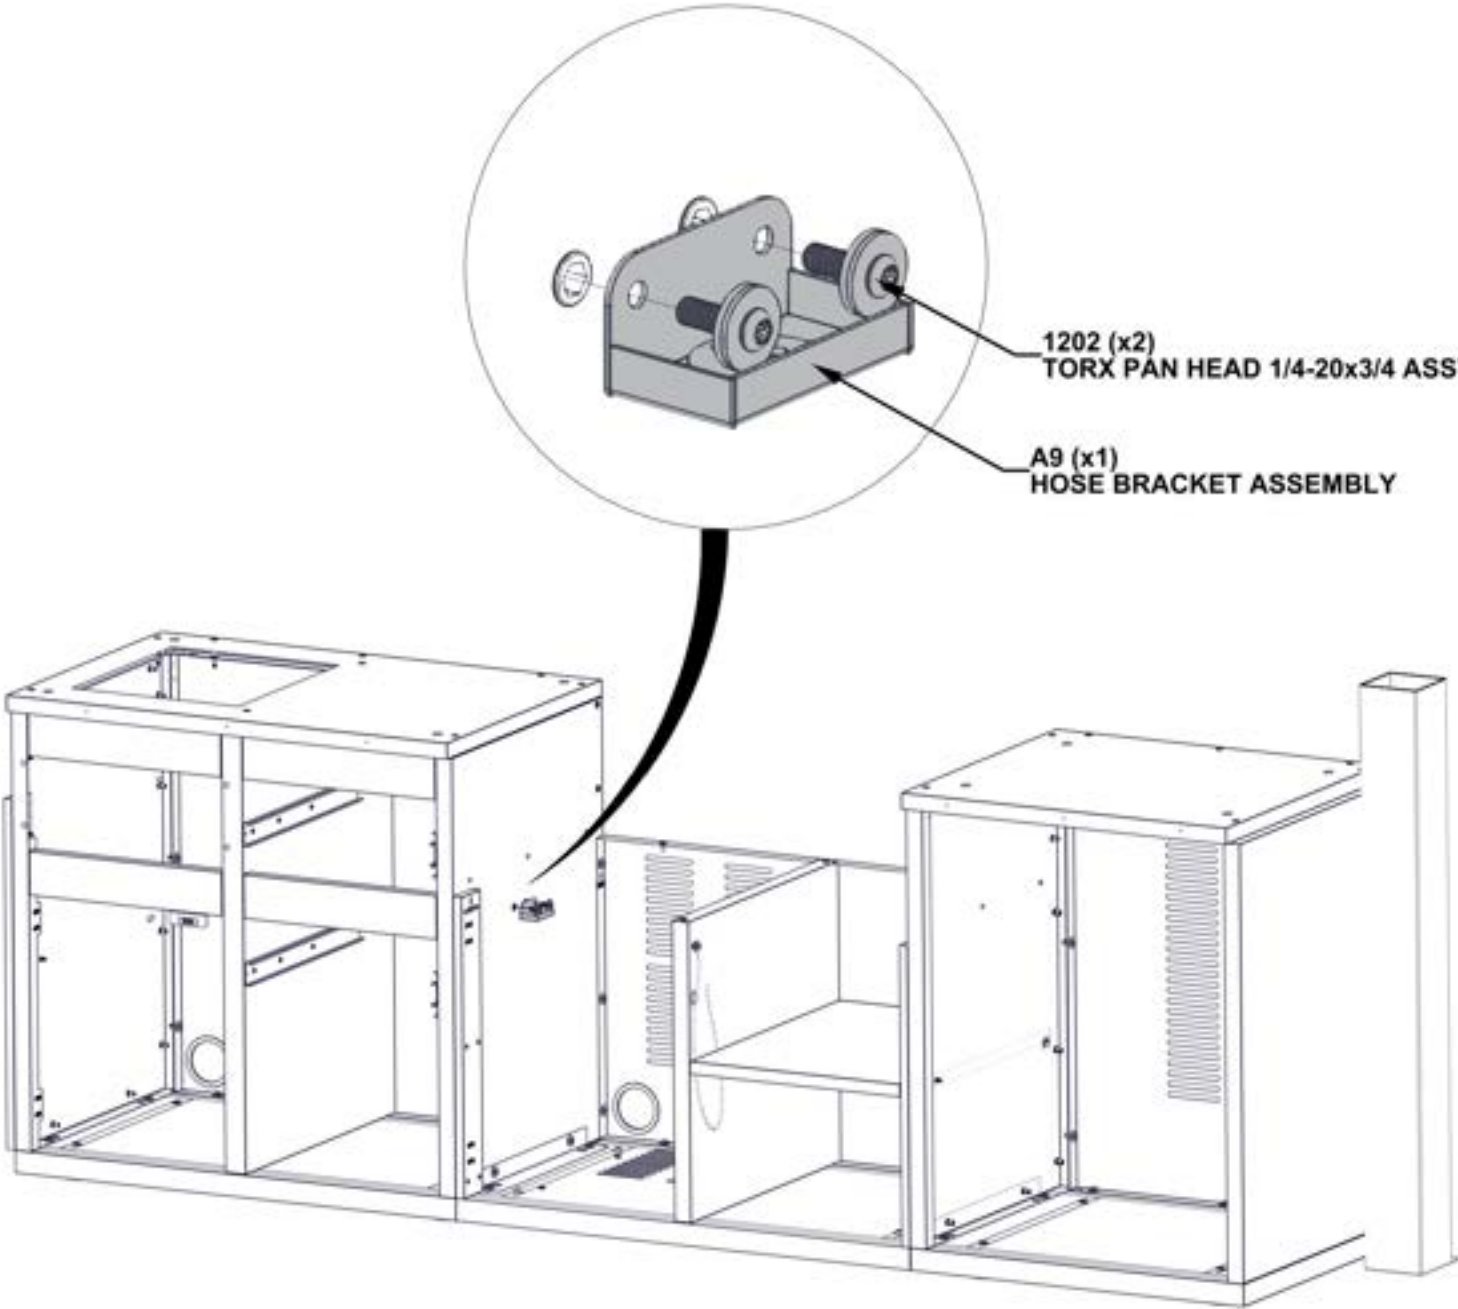


STEP 73 - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"




A13 GAS TANK HOLDER ASSEMBLY - A4M03047
(x1) 1 15/16"x12 7/8"x14 3/4" (49x327x374)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

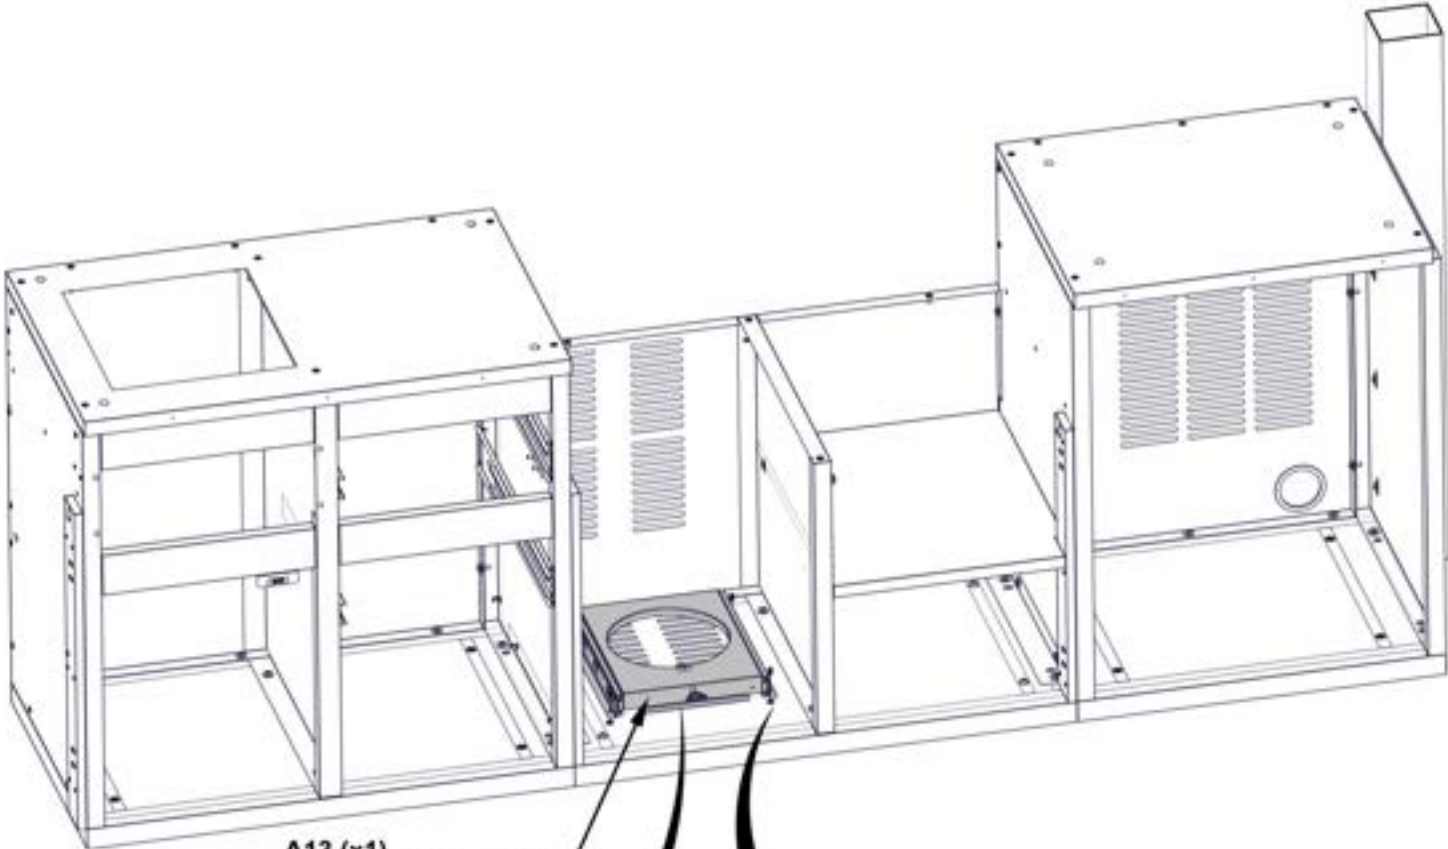


A13 (x1)
GAS TANK HOLDER
ASSEMBLY

1292 (x4)
TORX PAN HEAD 1/4-20x13/32"

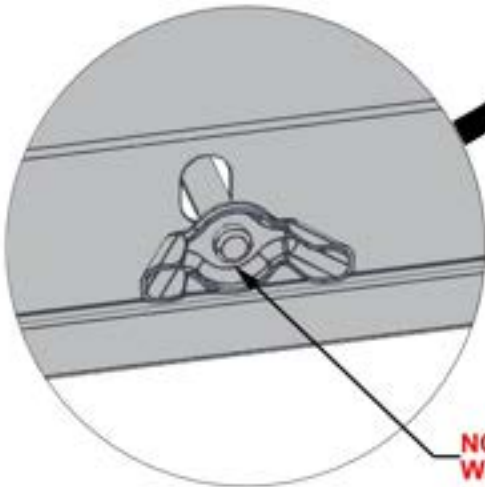

NOTE ORIENTATION OF
WING NUT TOWARDS FRONT

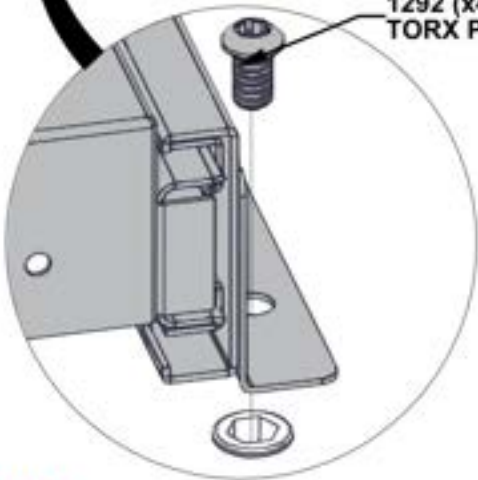

STEP 74 - GRILL CABINET ASSEMBLY


Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS



T2 GRILL TABLETOP ASSEMBLY - A4M03057
(x1) 1 1/4"x23 3/8"x38 3/16" (32x594x970)



A2 MAGNET BRACKET - A4M03026
(x2) 1"x1 1/4"x3 1/8" (25x31x80)

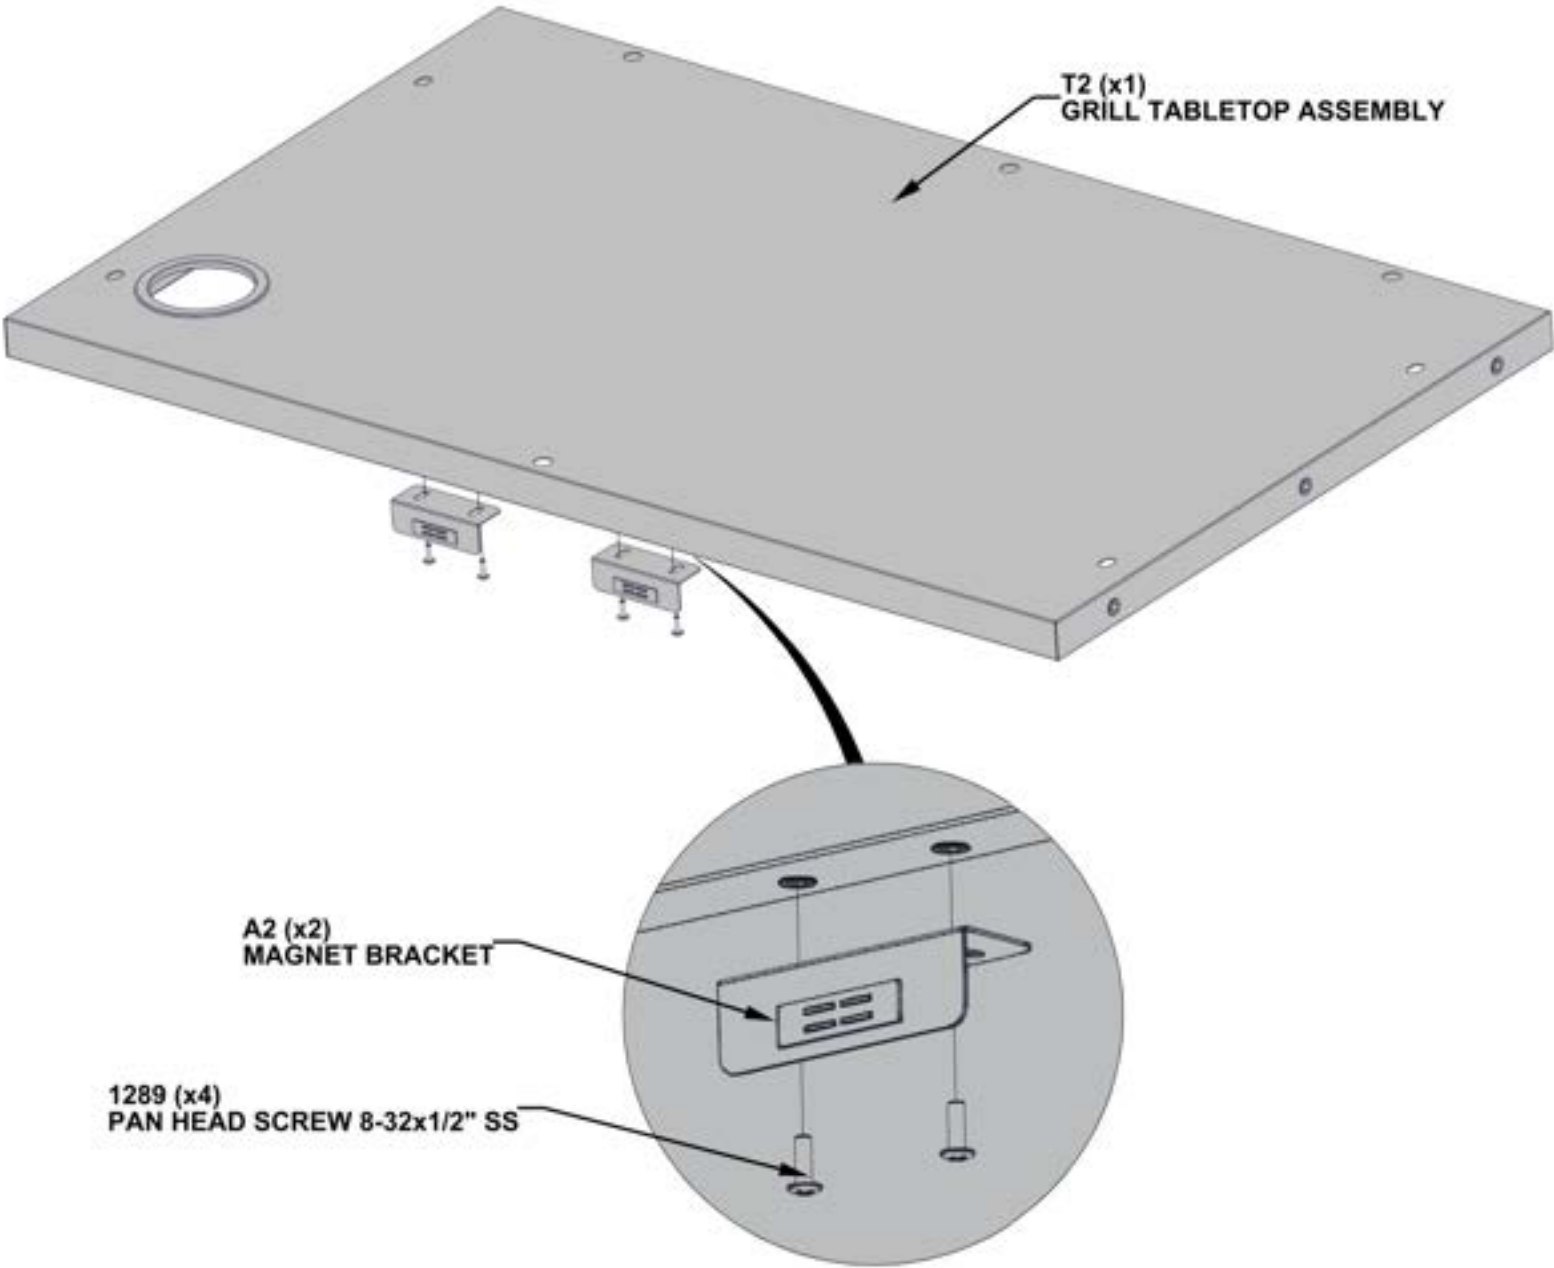

T2 (x1)
GRILL TABLETOP ASSEMBLY

A2 (x2)
MAGNET BRACKET

1289 (x4)
PAN HEAD SCREW 8-32x1/2" SS


STEP 75A - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



GRILL TABLETOP
ASSEMBLY FROM STEP 74

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **HARDWARE ATTACHES ON INSIDE OF CABINET**

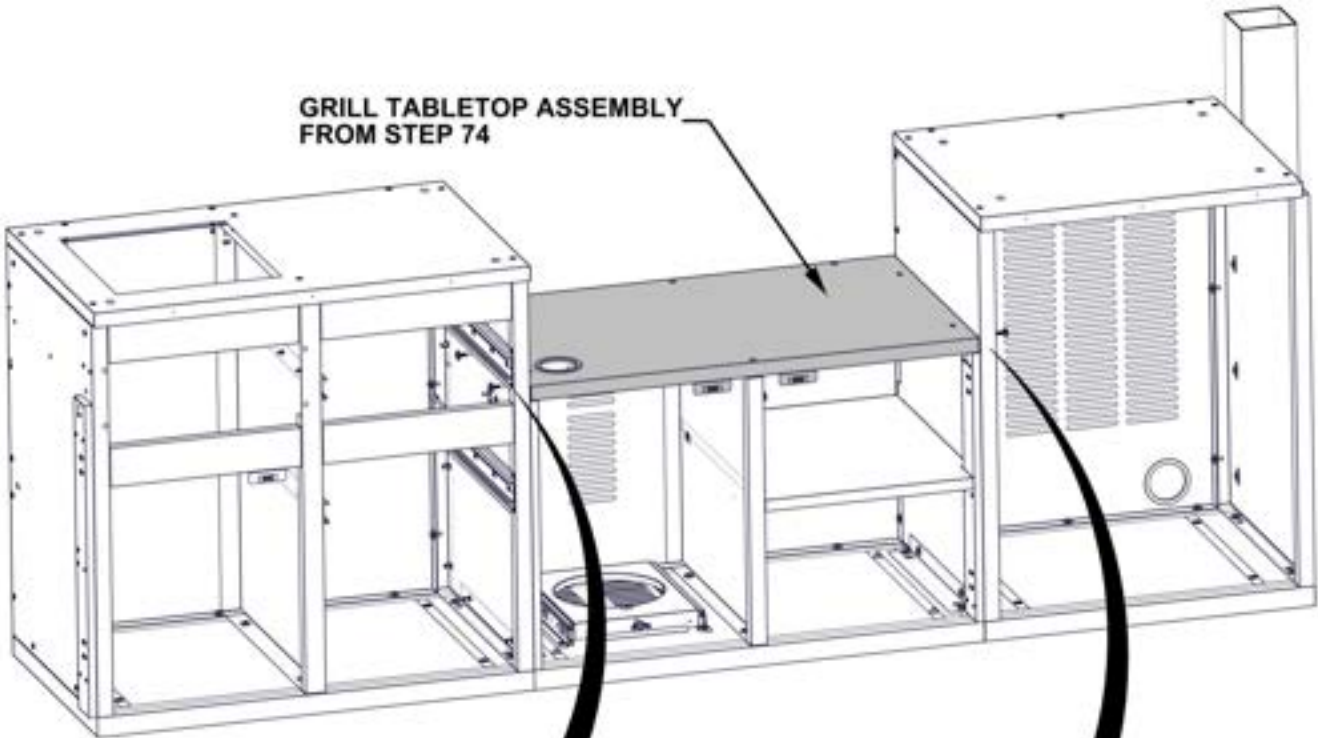

GRILL TABLETOP ASSEMBLY
FROM STEP 74


HAND TIGHTEN ONLY

1202 (x3)
TORX PAN HEAD
1/4-20x3/4 ASSY



HAND TIGHTEN ONLY


1202 (x3)
TORX PAN HEAD
1/4-20x3/4 ASSY

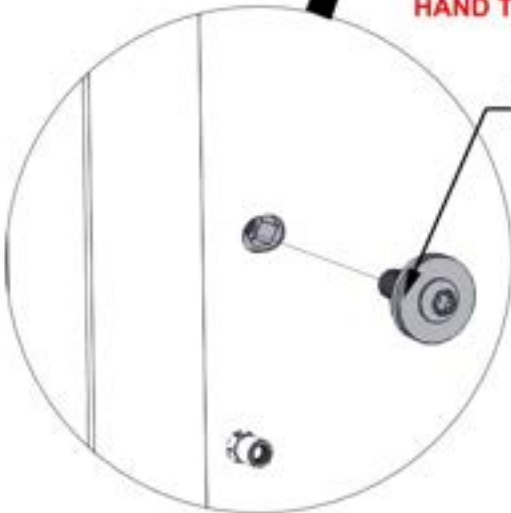

STEP 75B - GRILL CABINET ASSEMBLY


Qty	PartNo	Description
4	H101103	TORX SOCKET SCREW 1/4-20

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

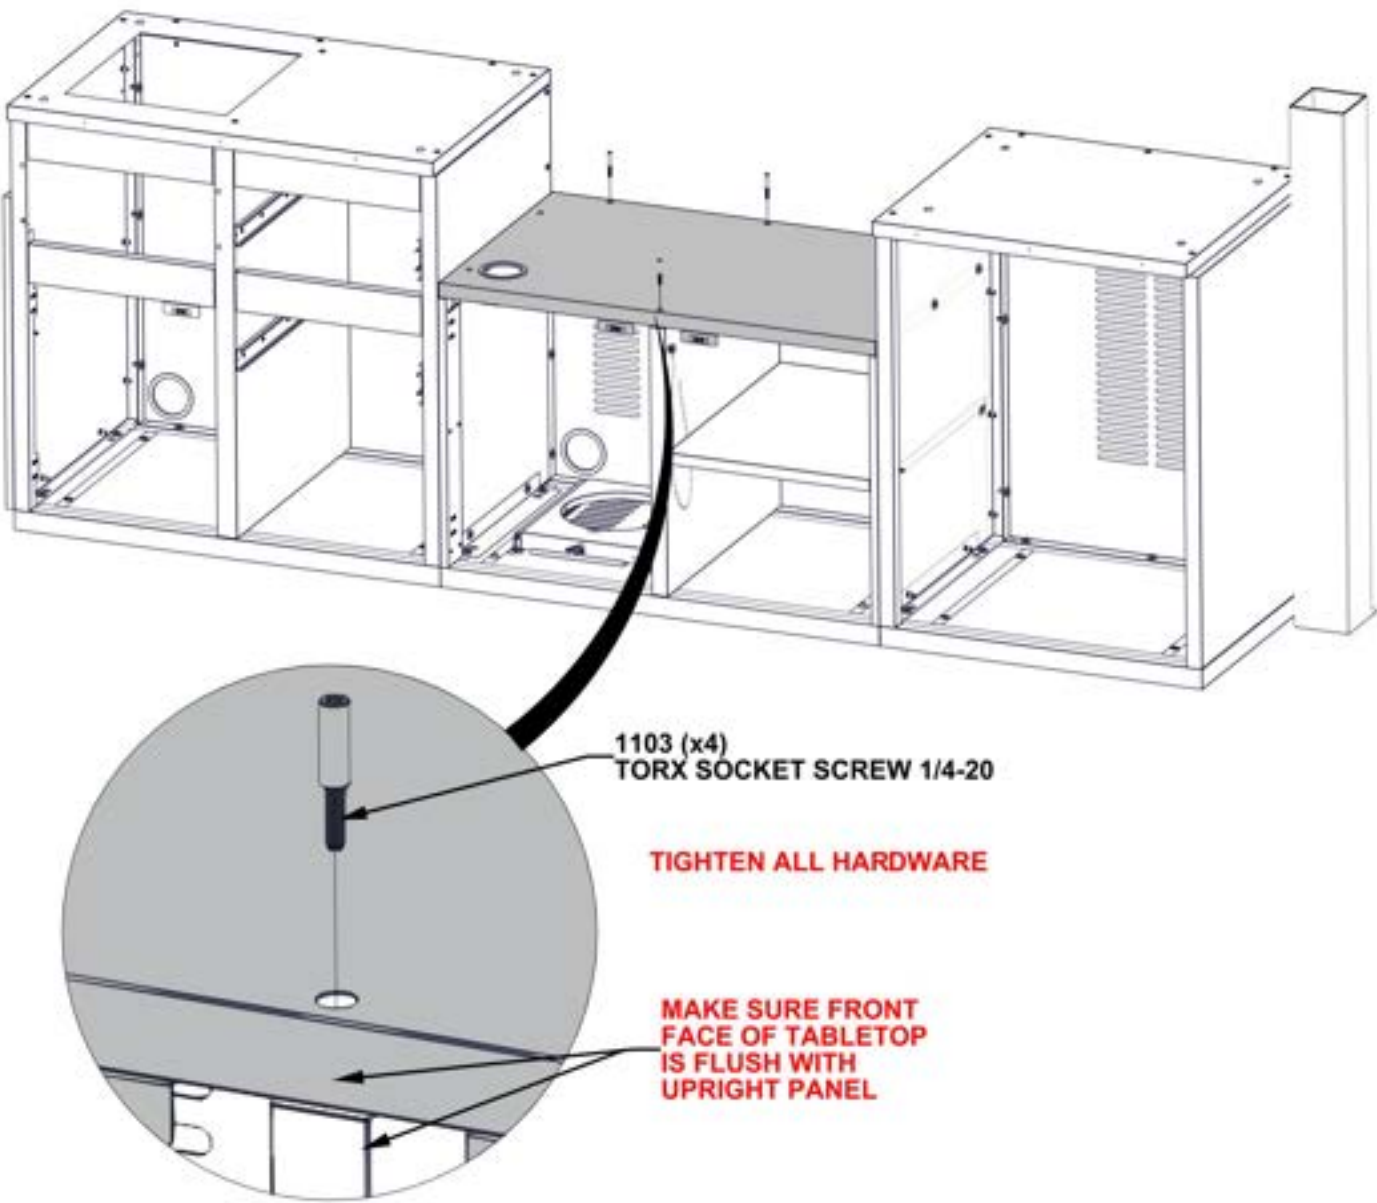


STEP 76 - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

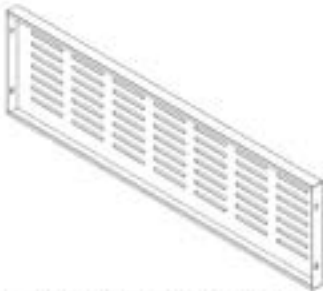


G11 GRILL VENTILATION PANEL - A4M03056
(x1) 1 5/16"x11 3/16"x38 3/16" (33x284x970)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

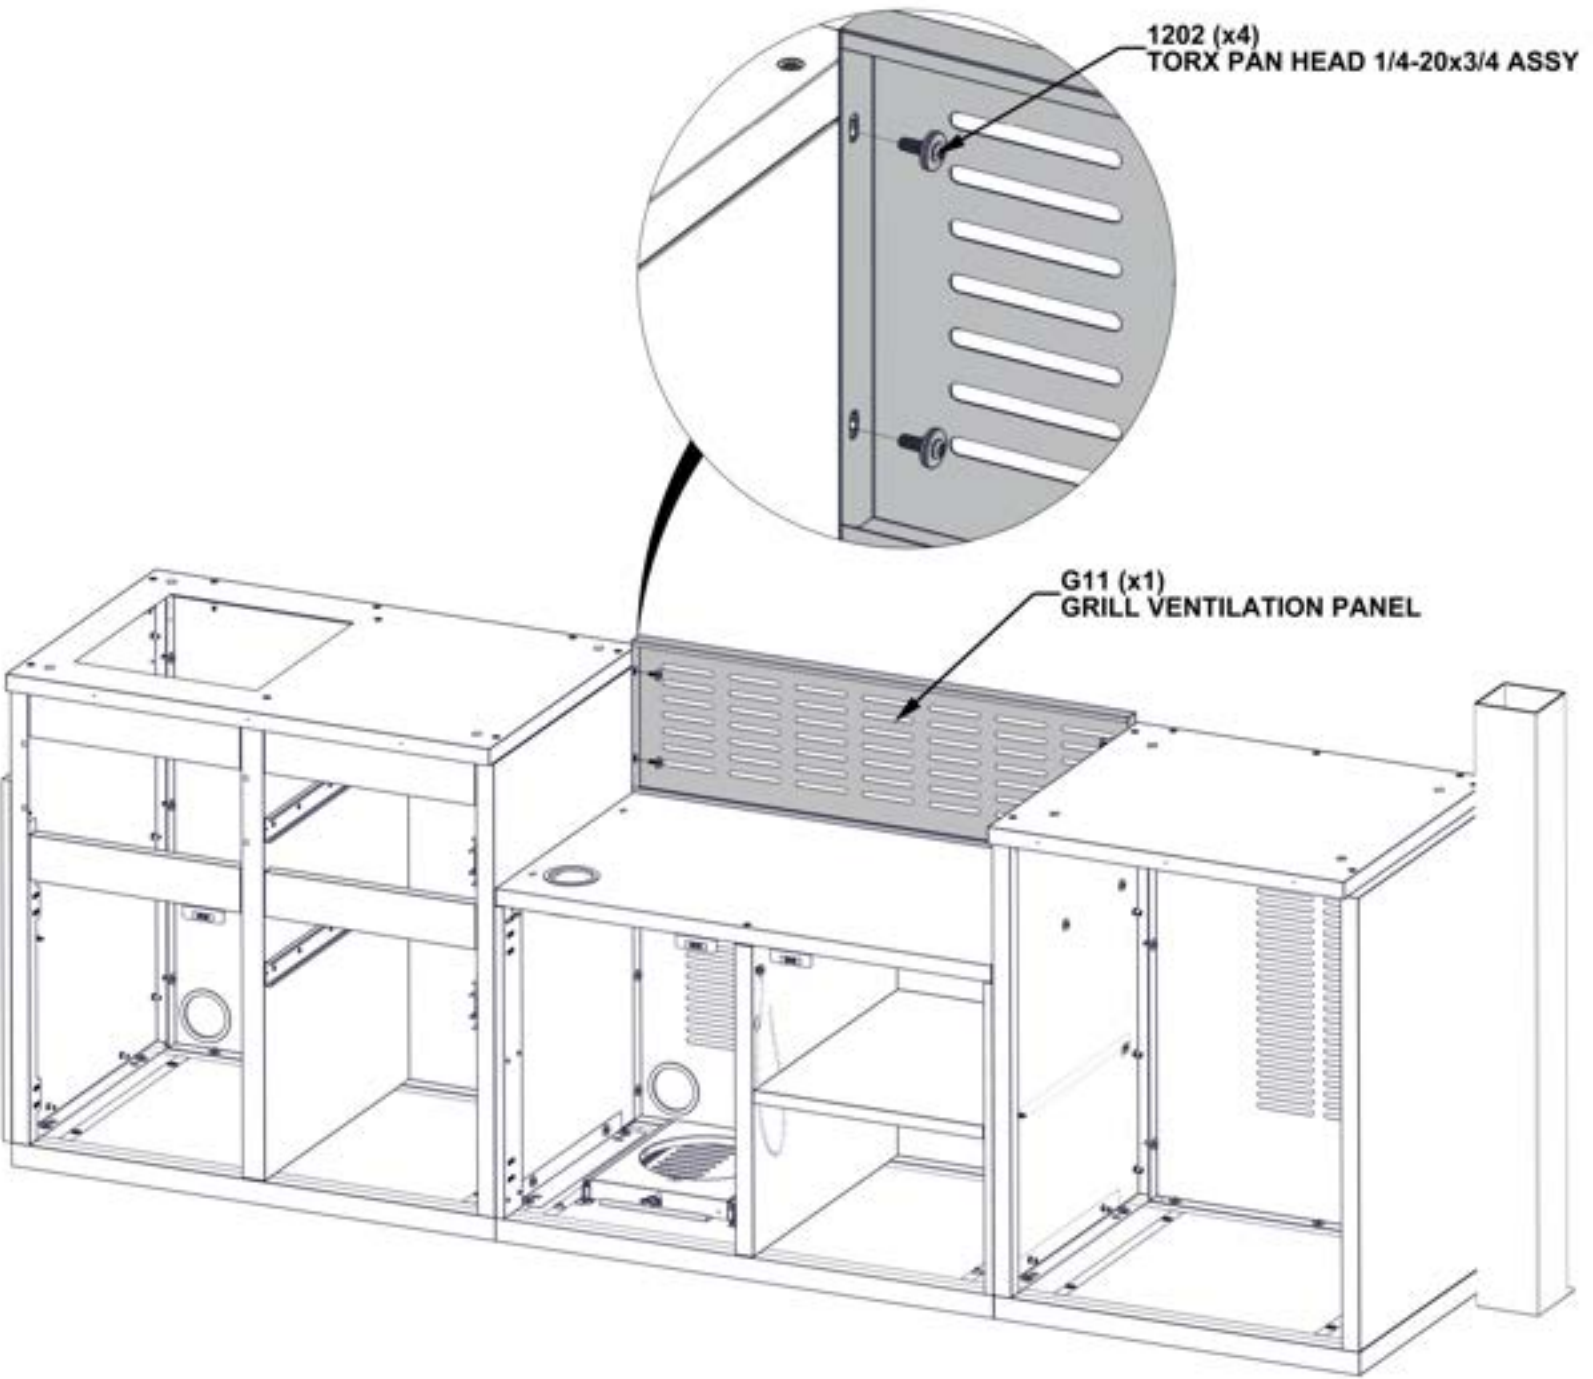


STEP 77A - PIZZA OVEN CABINET ASSEMBLY

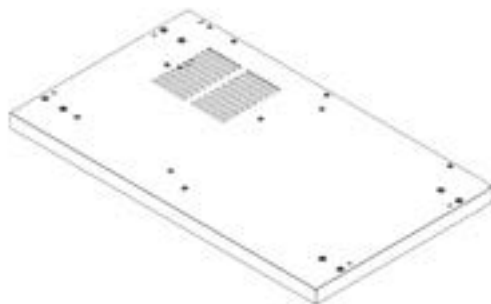


F1 PIZZA OVEN CABINET FLOOR PANEL ASSEMBLY - A4M03538
(x1) 40 3/16"x23 3/8"x2 5/8" (66x594x1020)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **LOOKING AT THE FRONT SIDE OF THE CABINETS, SLIDE FLOOR PANEL IN BETWEEN P03 POST AND SINK CABINET.**

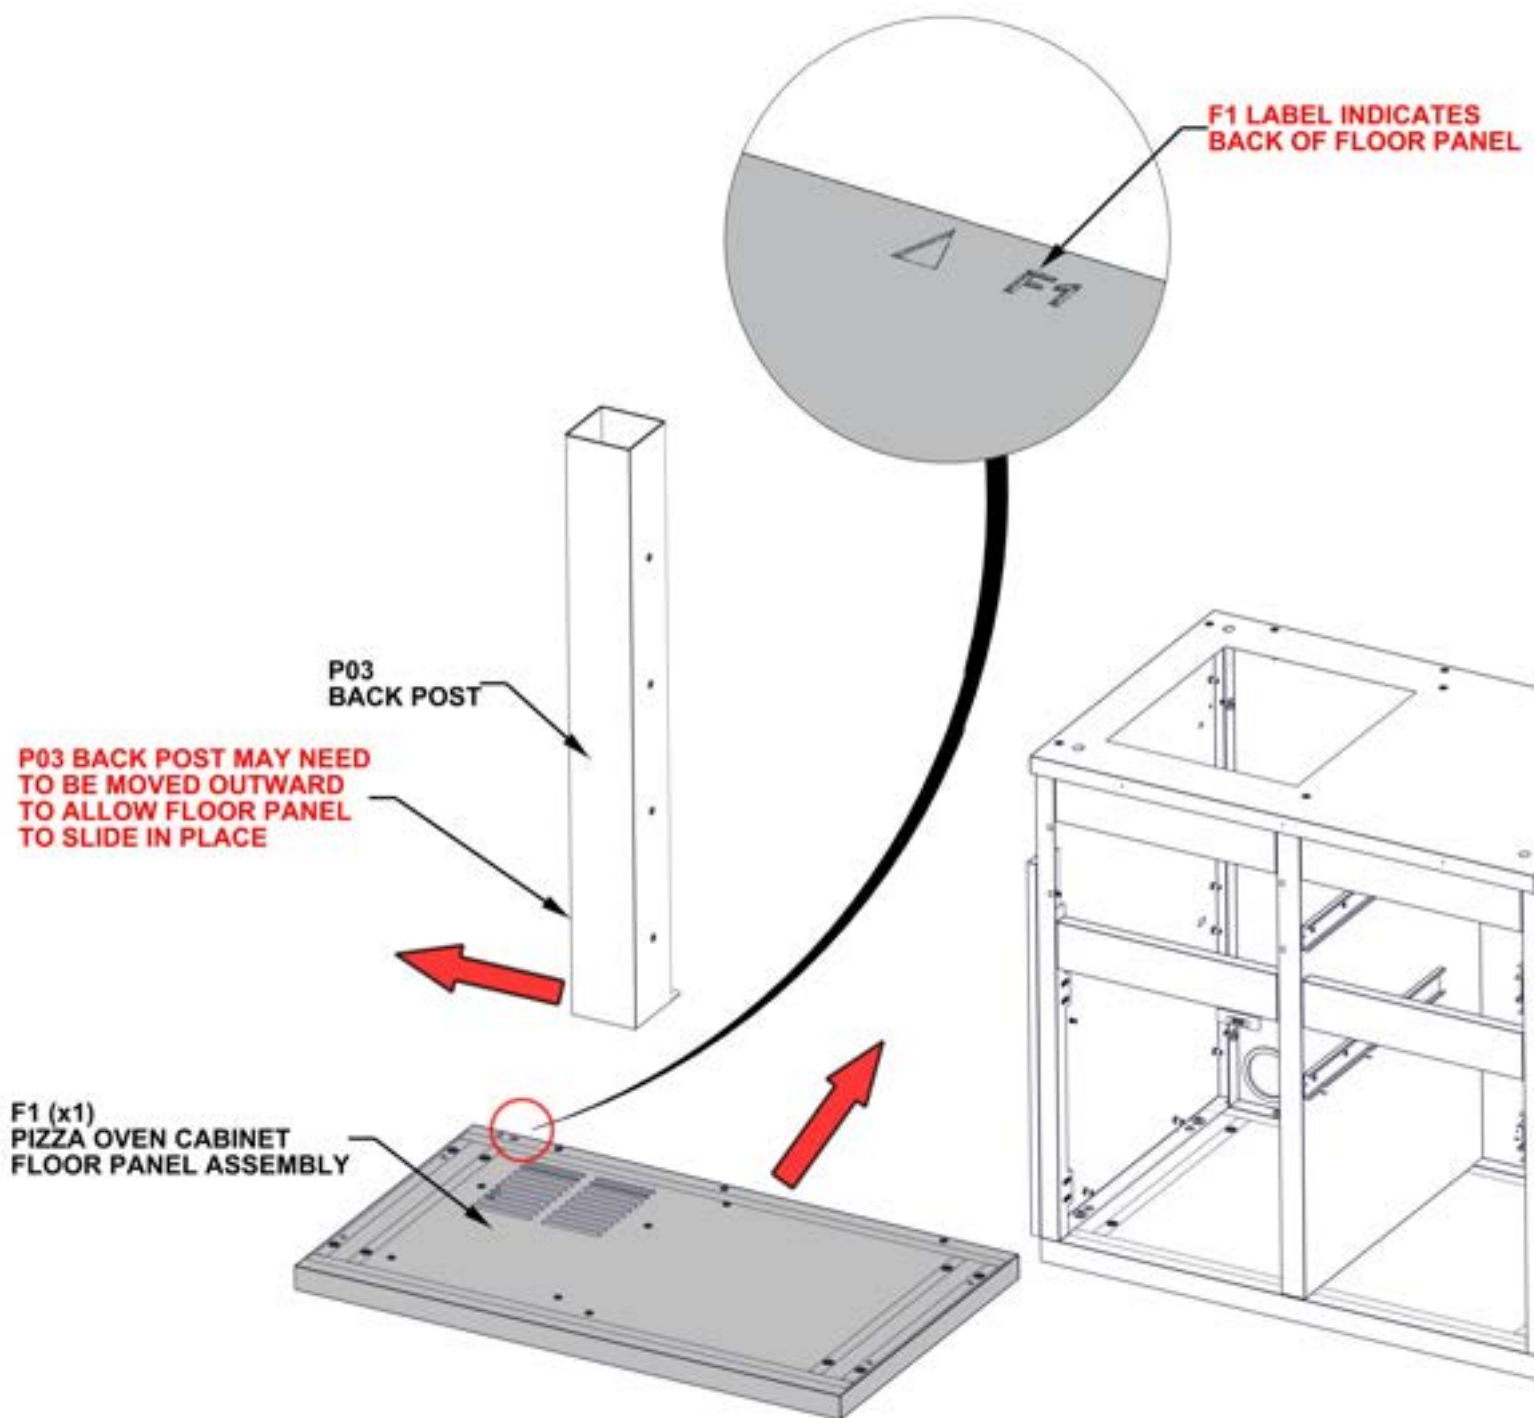

STEP 77B - GRILL CABINET ASSEMBLY

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- POSITION FLOOR PANEL AS SHOWN BELOW.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.
- ADJUST LEFT AND RIGHT CORNER CABINET TO ELIMINATE ANY GAPS BETWEEN FLOOR PANEL AND CABINETS.

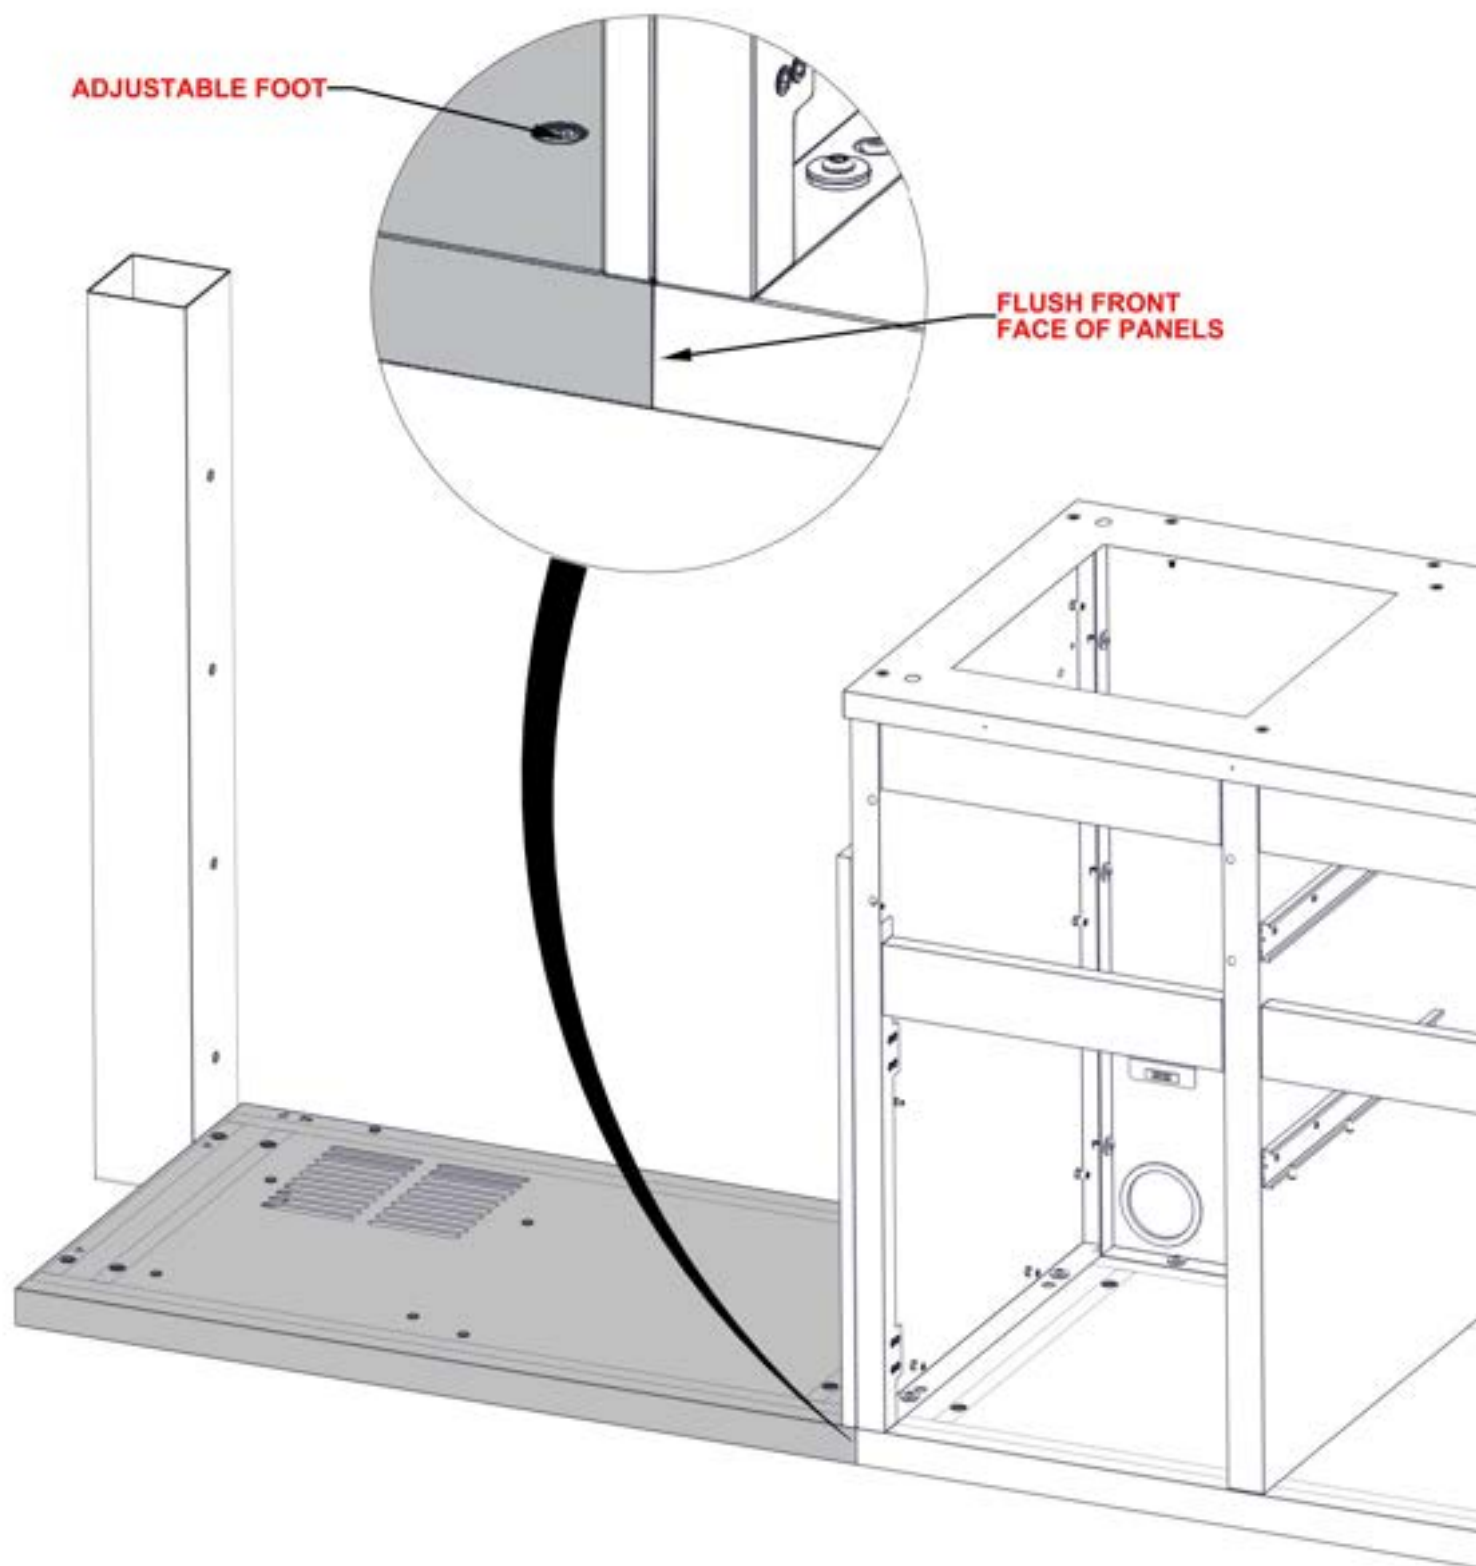


STEP 78 - PIZZA OVEN CABINET ASSEMBLY



A6 ANGLED BRACKET - A4M03053
(x1) 1 3/8"x1 15/16"x17 1/8" (35x50x435)

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

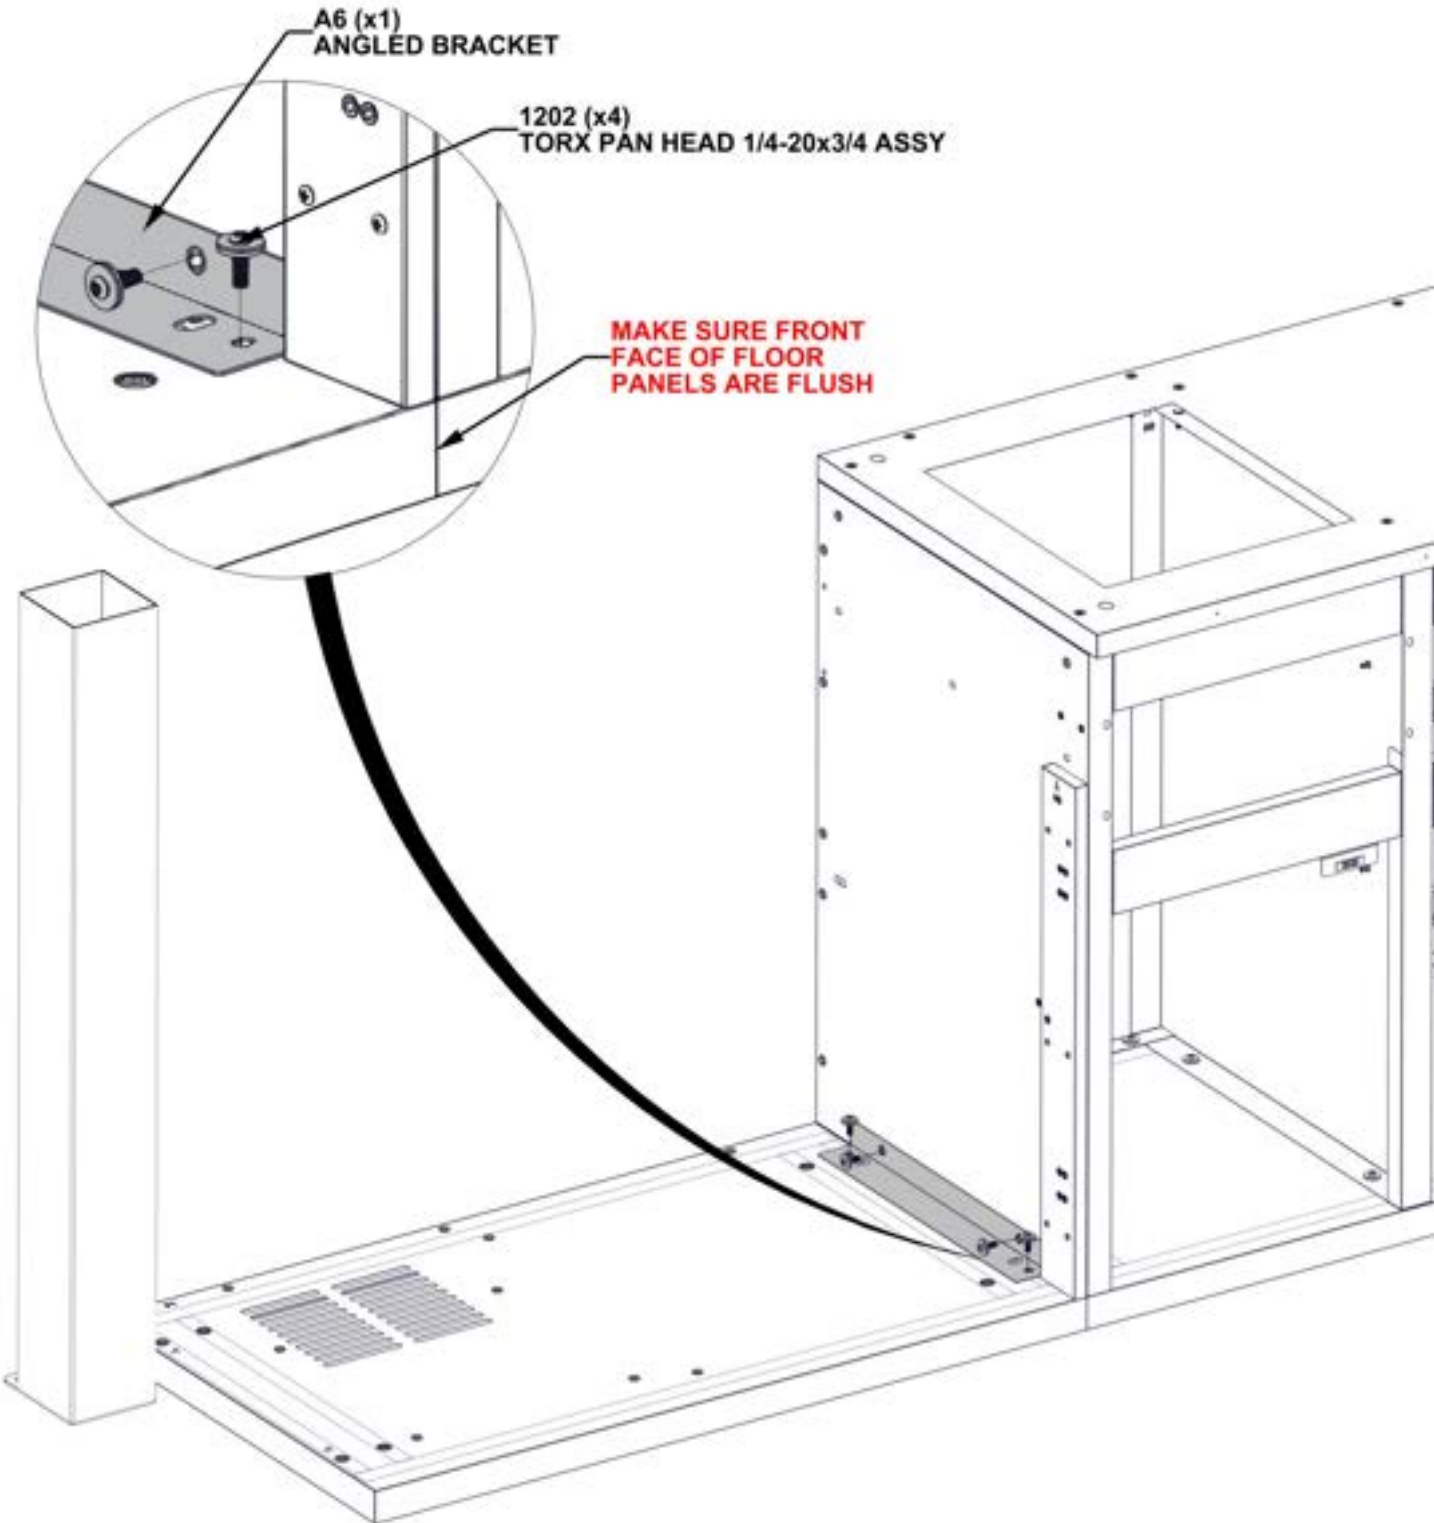


STEP 79 - PIZZA OVEN CABINET ASSEMBLY



Qty	PartNo	Description
5	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S1 PIZZA OVEN CABINET SIDE PANEL ASSEMBLY - A4M03540
(x1) 26 9/16"x23 3/8"x1 3/8" (35x594x675)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

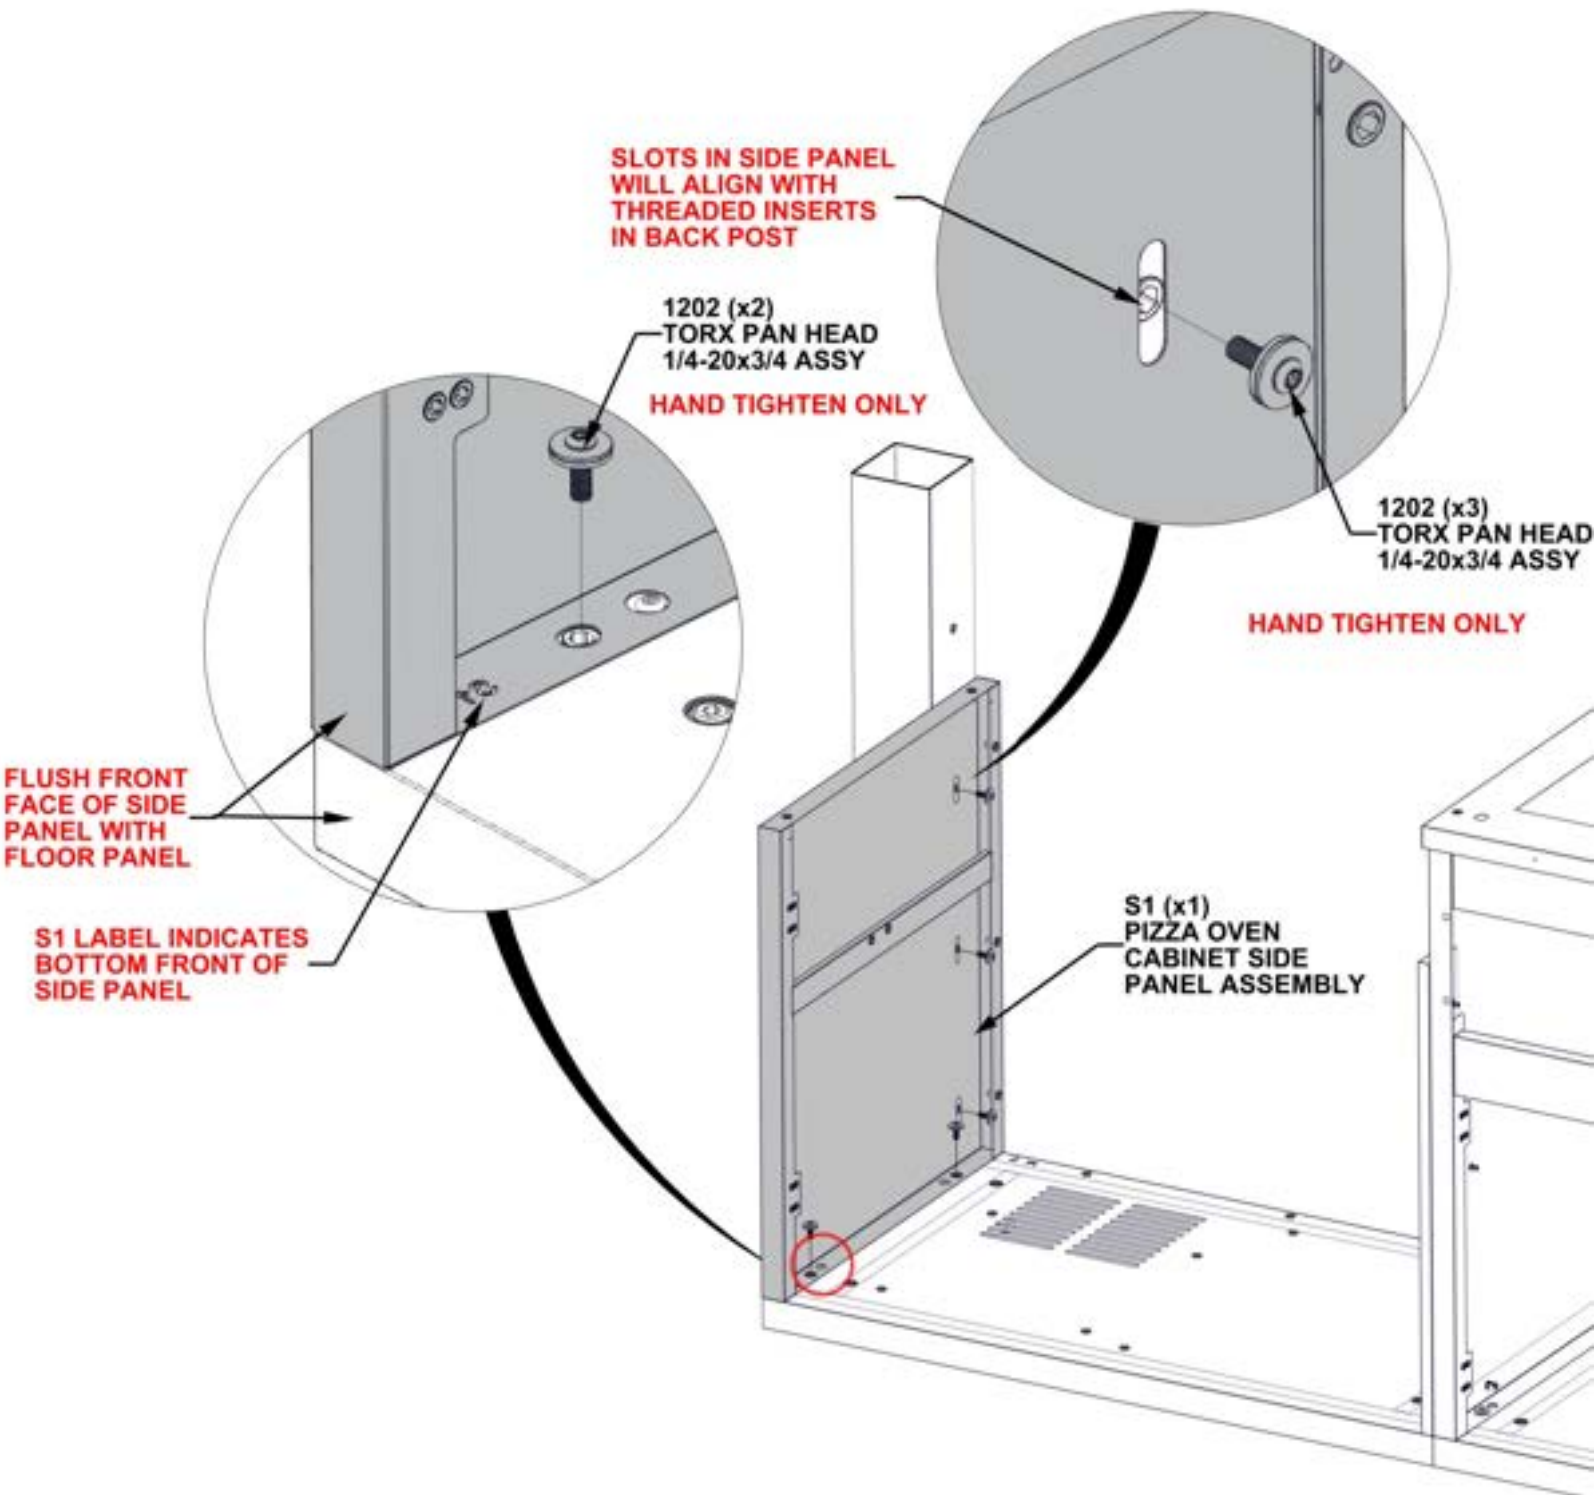


STEP 80 - PIZZA OVEN CABINET ASSEMBLY



Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

G1 PIZZA OVEN CABINET BACK PANEL ASSEMBLY - A4M03542
(x1) 38 3/4"x26 1/2"x1 3/16" (30x673.5x984)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

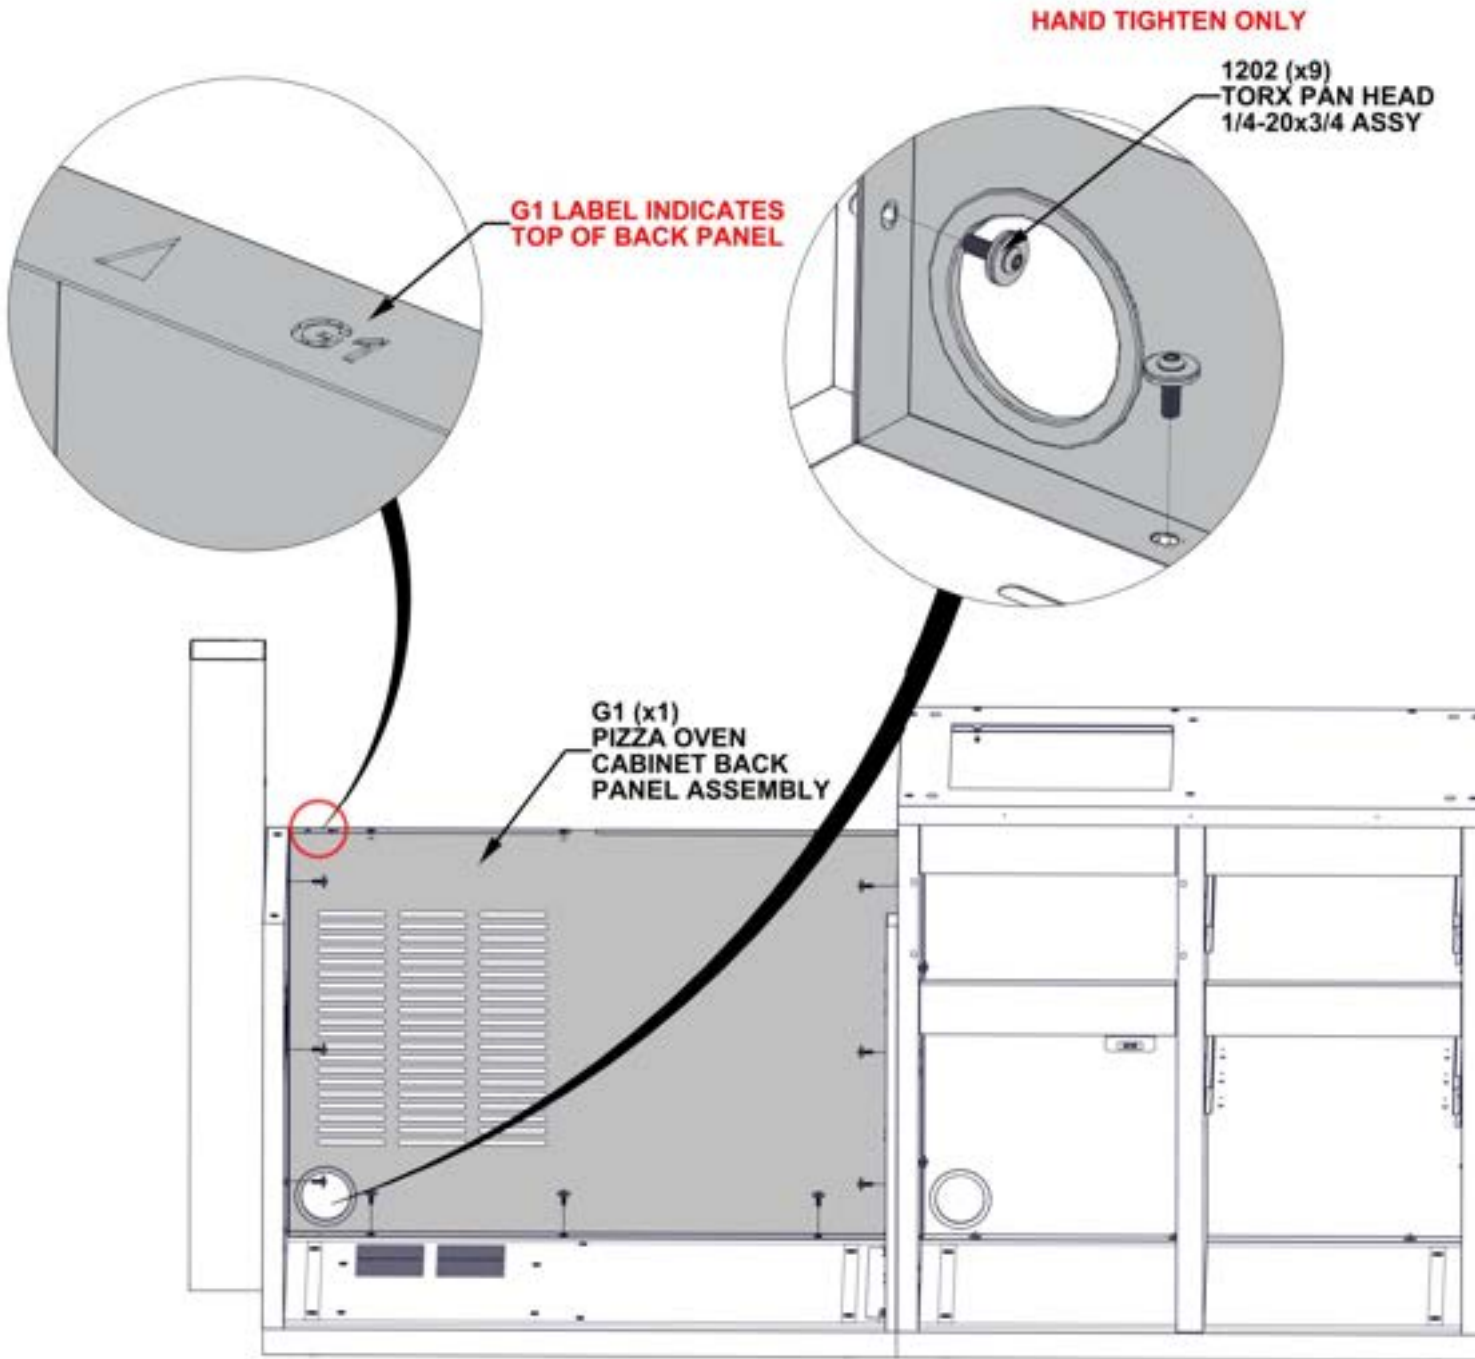


STEP 81 - PIZZA OVEN CABINET ASSEMBLY



Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S2 PIZZA OVEN CABINET SIDE PANEL ASSEMBLY M - A4M03545
(x1) 26 1/2"x23 3/8"x1 3/8" (35x593x673.5)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

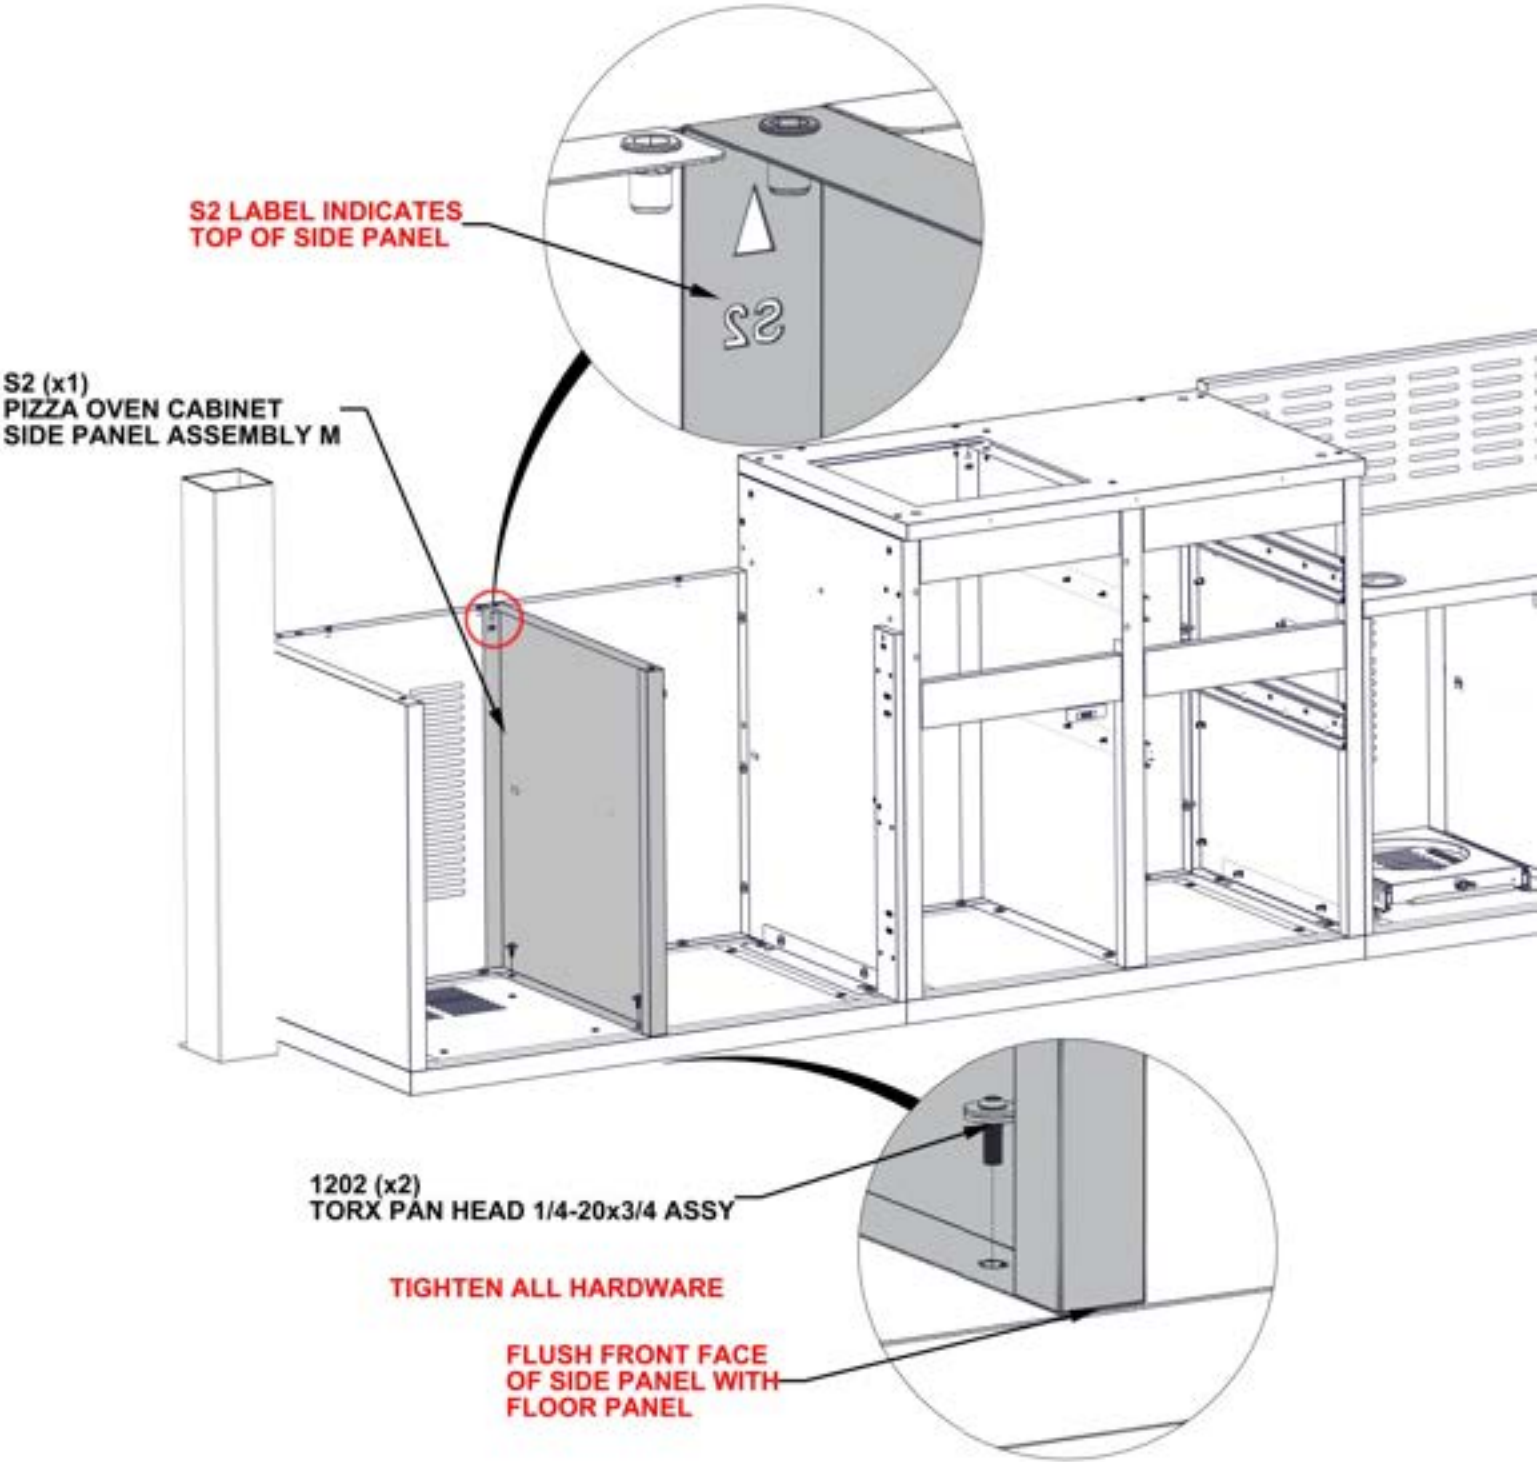


STEP 82A - PIZZA OVEN CABINET ASSEMBLY



A5 SHELF BRACKET - A4M03141
(x2) 5/8"x7/8"x2 1/16" (16x22x53)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ATTACH SHELF BRACKETS ON BOTH SIDES OF CENTER PIZZA OVEN CABINET.

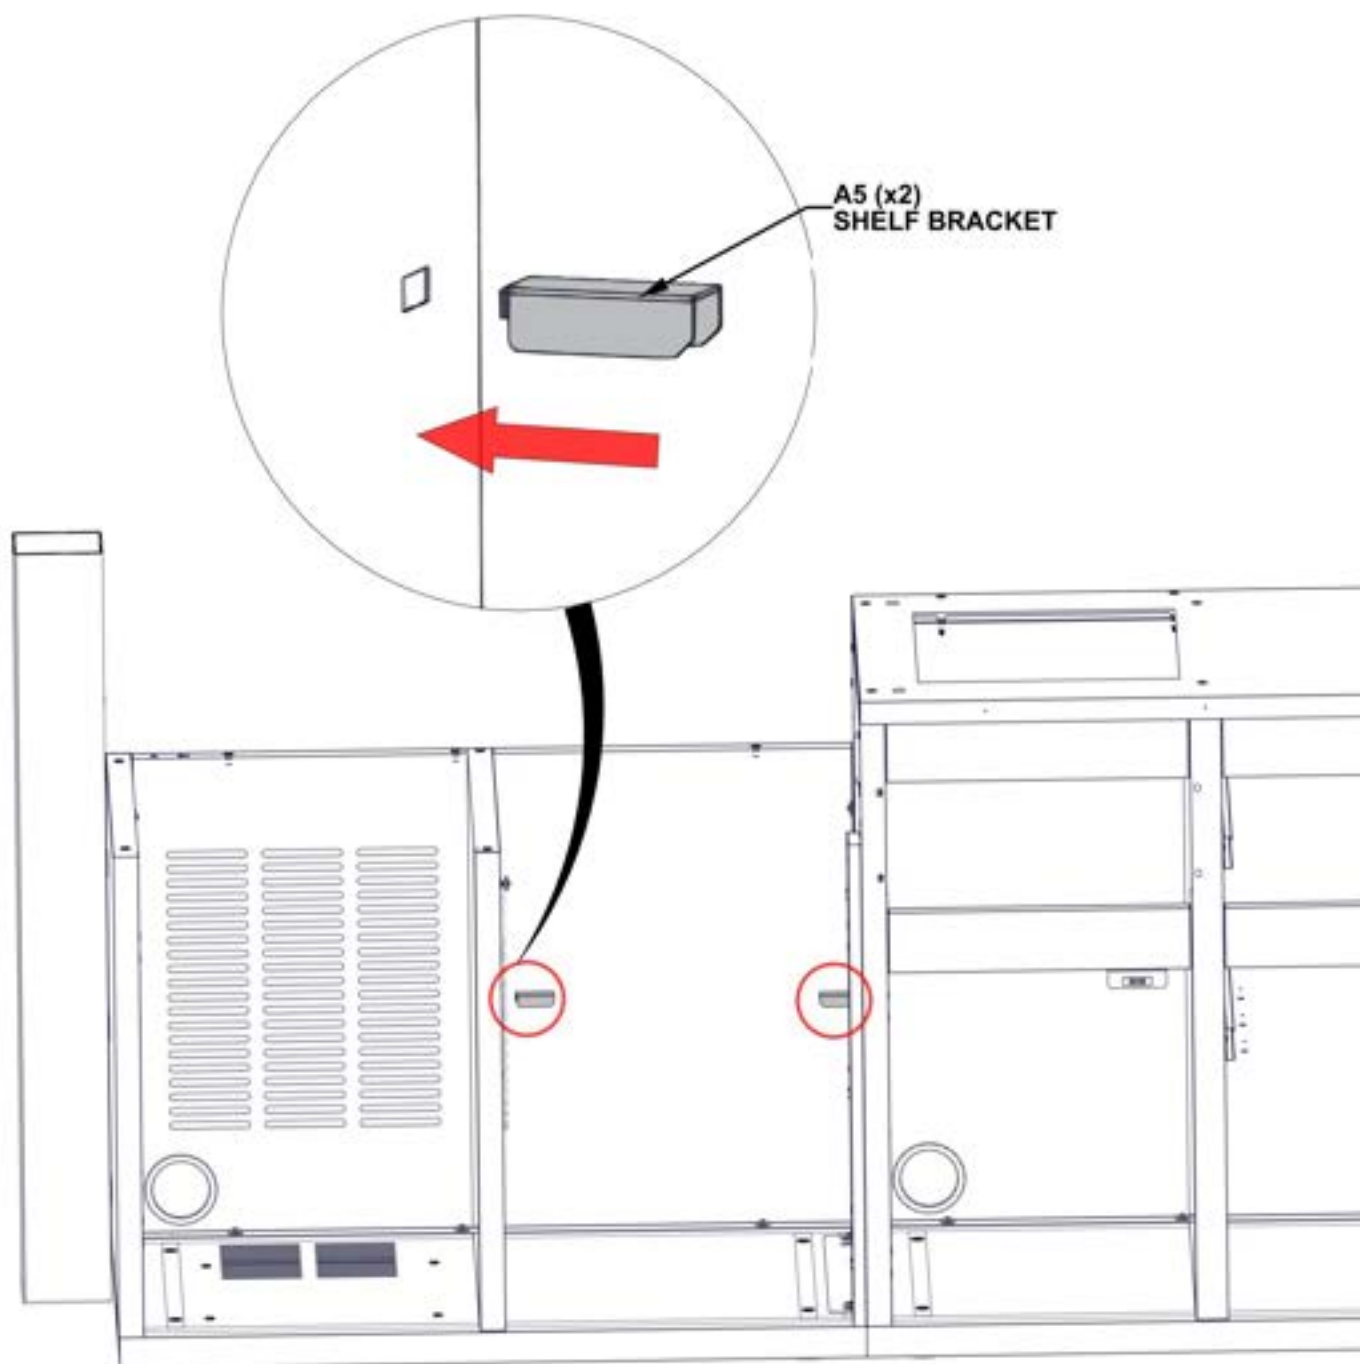


STEP 82B - PIZZA OVEN CABINET ASSEMBLY



Qty	PartNo	Description
3	H101289	PAN HEAD SCREW 8-32x1/2" SS

L1 PIZZA OVEN CABINET SHELF - A4M03548
(x1) 23 1/4"x19 5/16"x1" (25.00x490.50x591.00)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ALIGN SHELF WITH THREADED INSERTS AND ATTACH HARDWARE TO FASTEN IN PLACE.

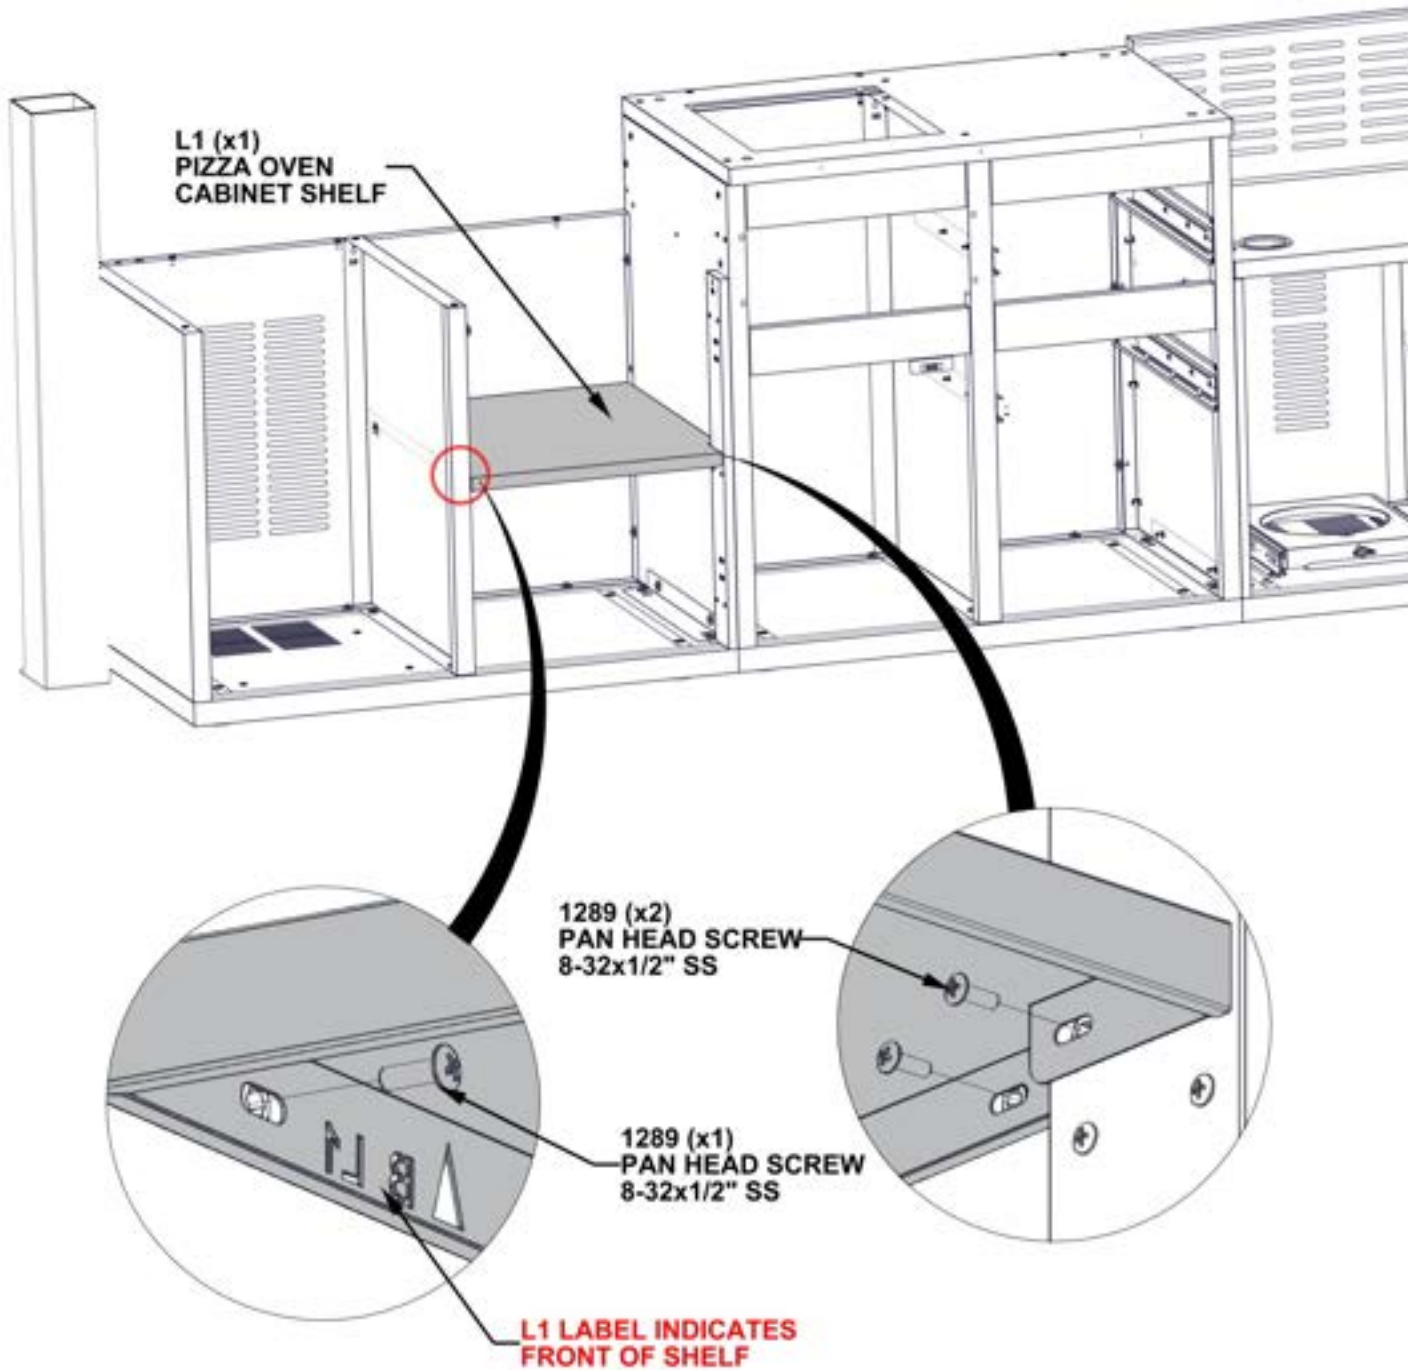


STEP 83 - PIZZA OVEN CABINET ASSEMBLY



A9 HOSE BRACKET ASSEMBLY - A4M03060
(x1) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

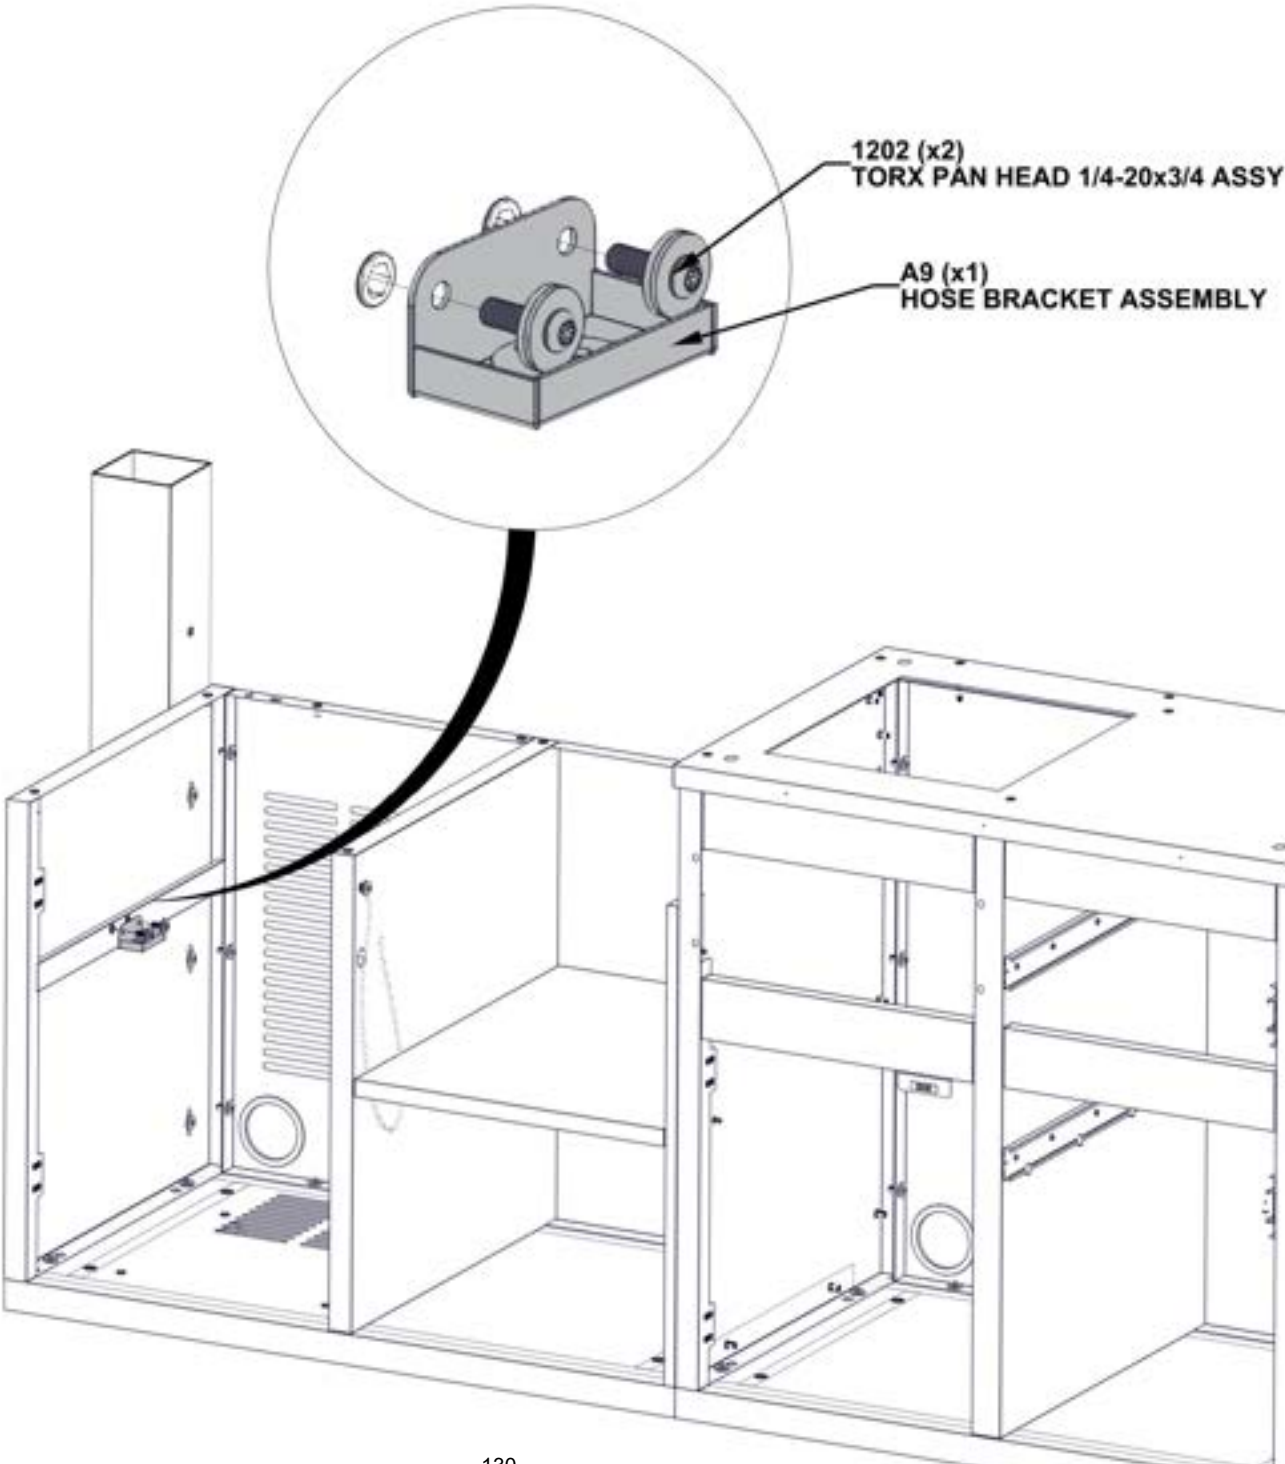


STEP 84 - GRILL CABINET ASSEMBLY



Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"

A13 GAS TANK HOLDER ASSEMBLY - A4M03047
(x1) 1 15/16"x12 7/8"x14 3/4" (49x327x374)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

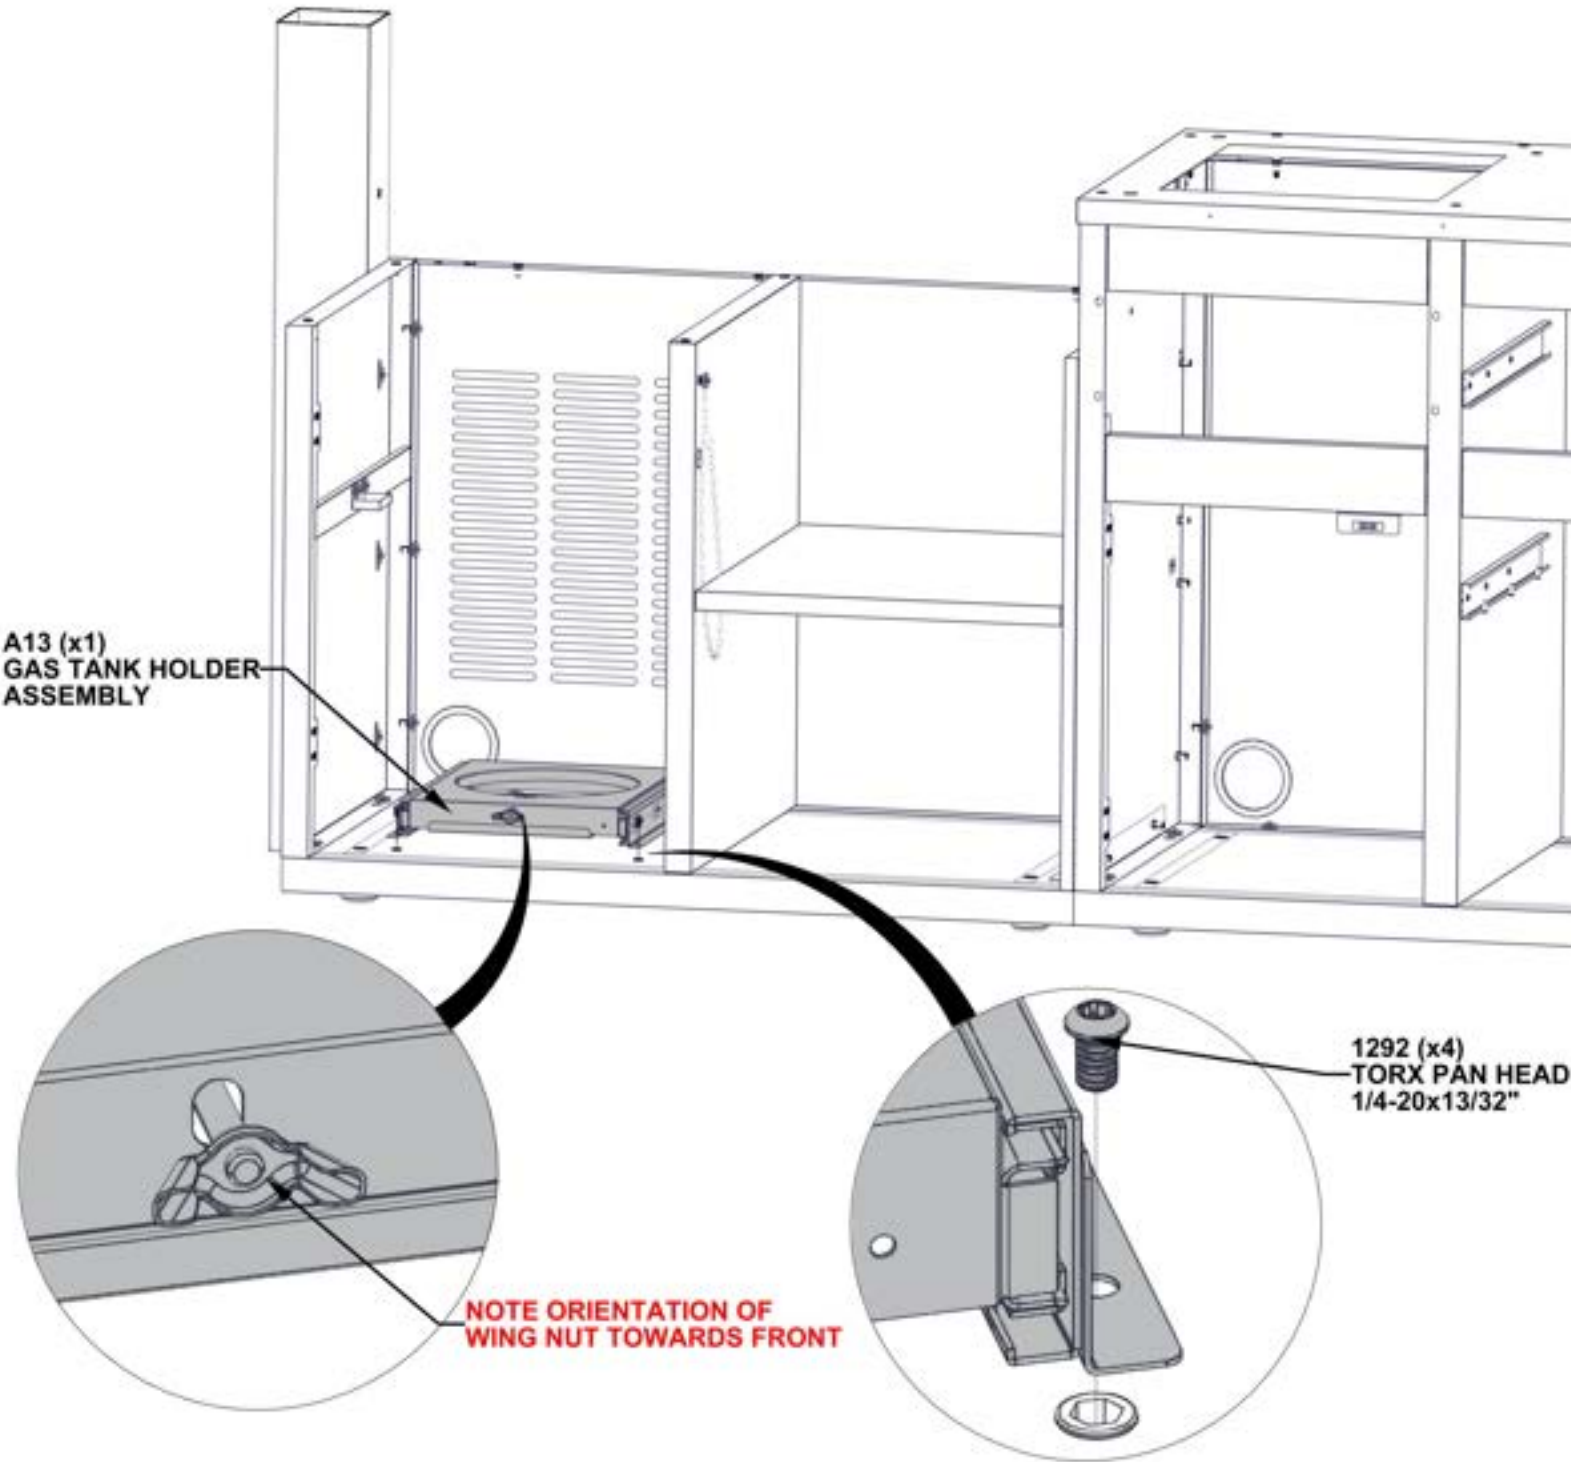

STEP 85 - PIZZA OVEN CABINET ASSEMBLY


Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS



T1 PIZZA OVEN CABINET TABLETOP ASSEMBLY - A4M03543
(x1) 40 3/16"x23 3/8"x1 1/4" (32x594x1020)



A2 MAGNET BRACKET - A4M03026
(x2) 1"x1 1/4"x3 1/8" (25x31x80)

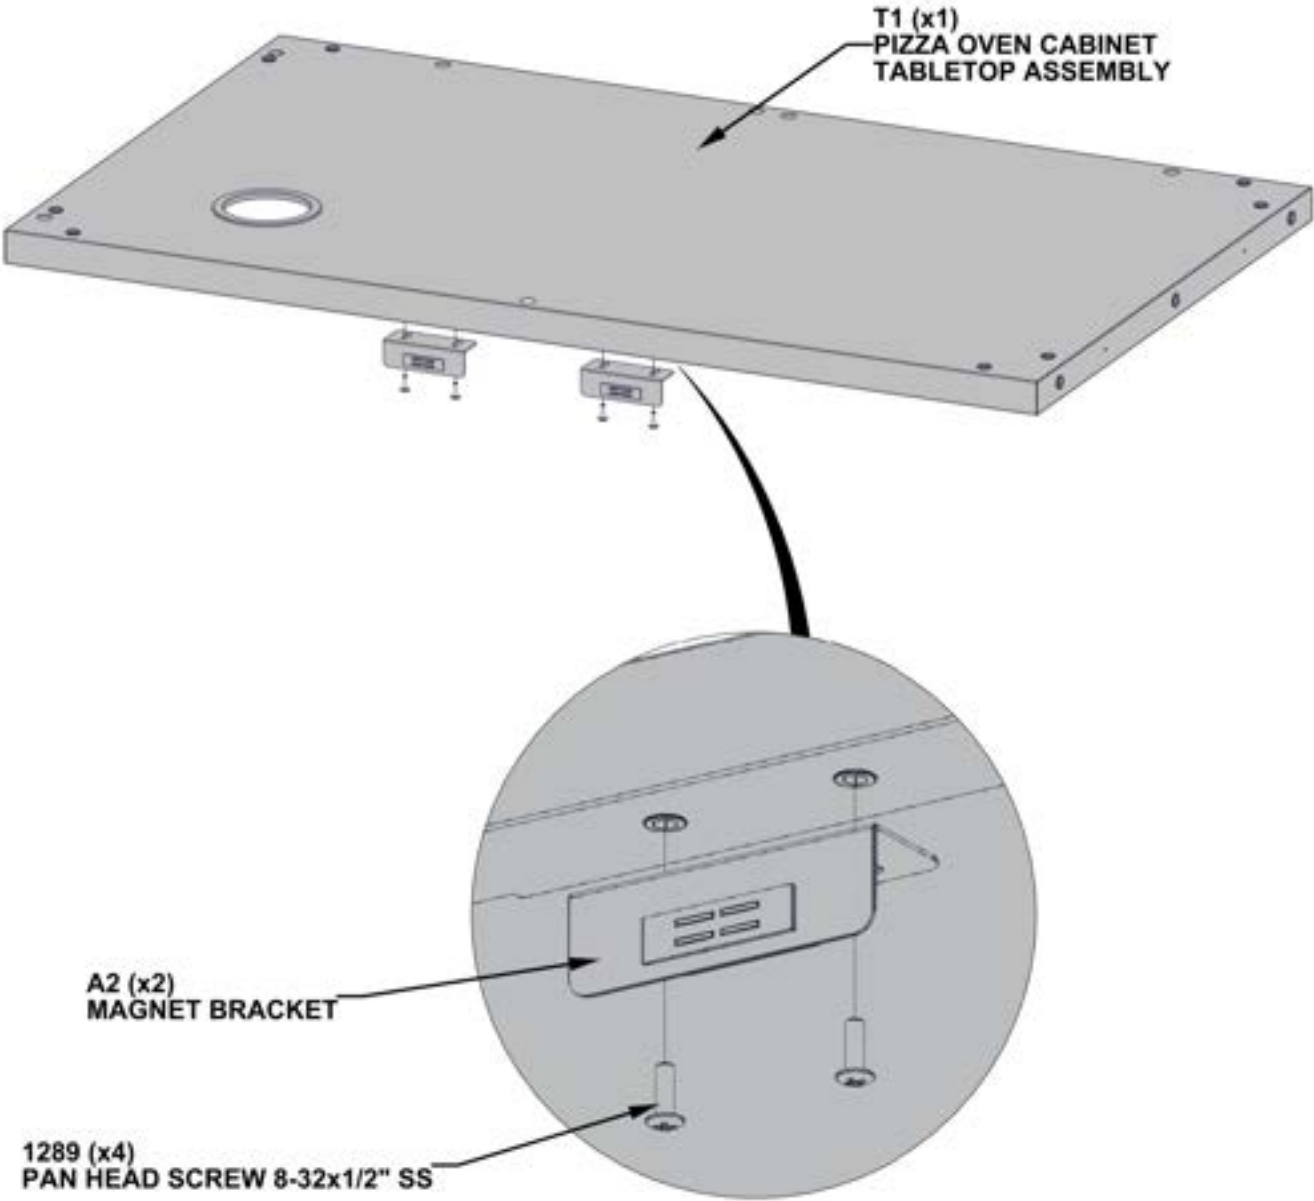


STEP 86A - PIZZA OVEN CABINET ASSEMBLY



PIZZA OVEN TABLETOP
ASSEMBLY FROM STEP 85

Qty	PartNo	Description
3	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **HARDWARE ATTACHES ON INSIDE OF CABINET**

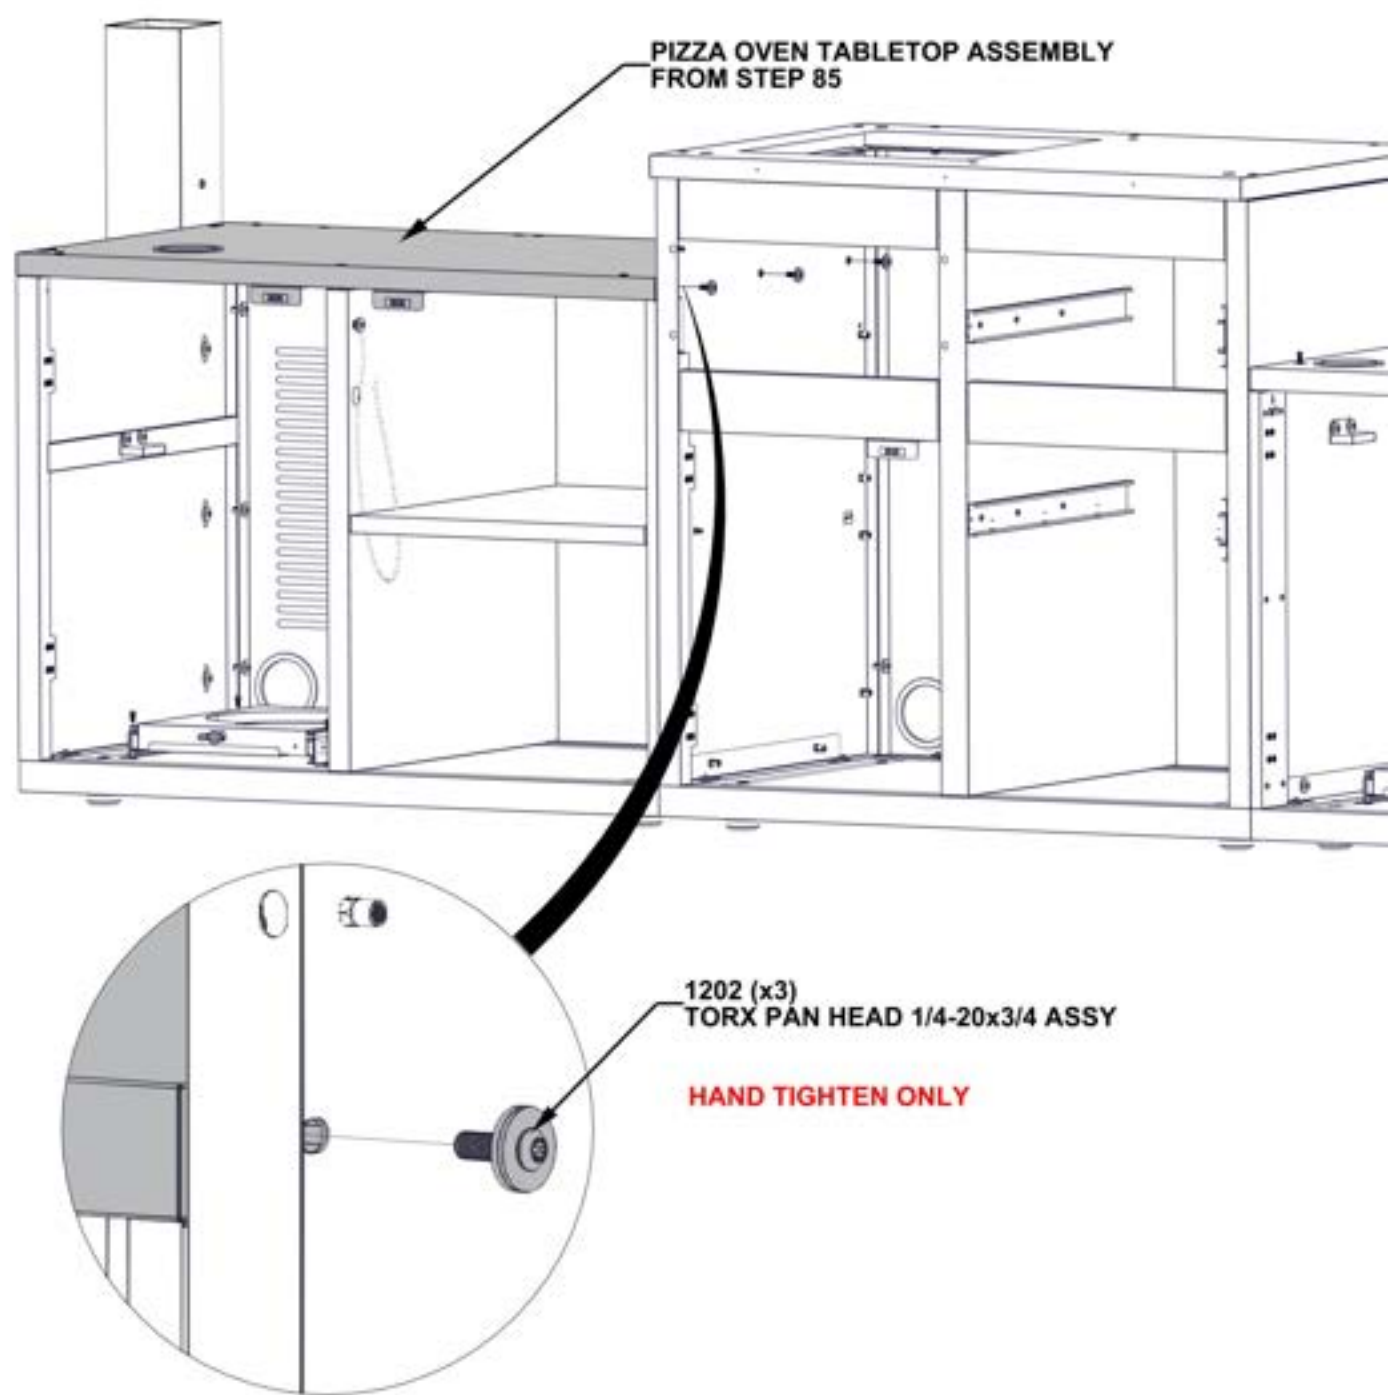

PIZZA OVEN TABLETOP ASSEMBLY
FROM STEP 85


1202 (x3)
TORX PAN HEAD 1/4-20x3/4 ASSY

HAND TIGHTEN ONLY


STEP 86B - PIZZA OVEN CABINET ASSEMBLY

Qty	PartNo	Description
7	H101103	TORX SOCKET SCREW 1/4-20

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

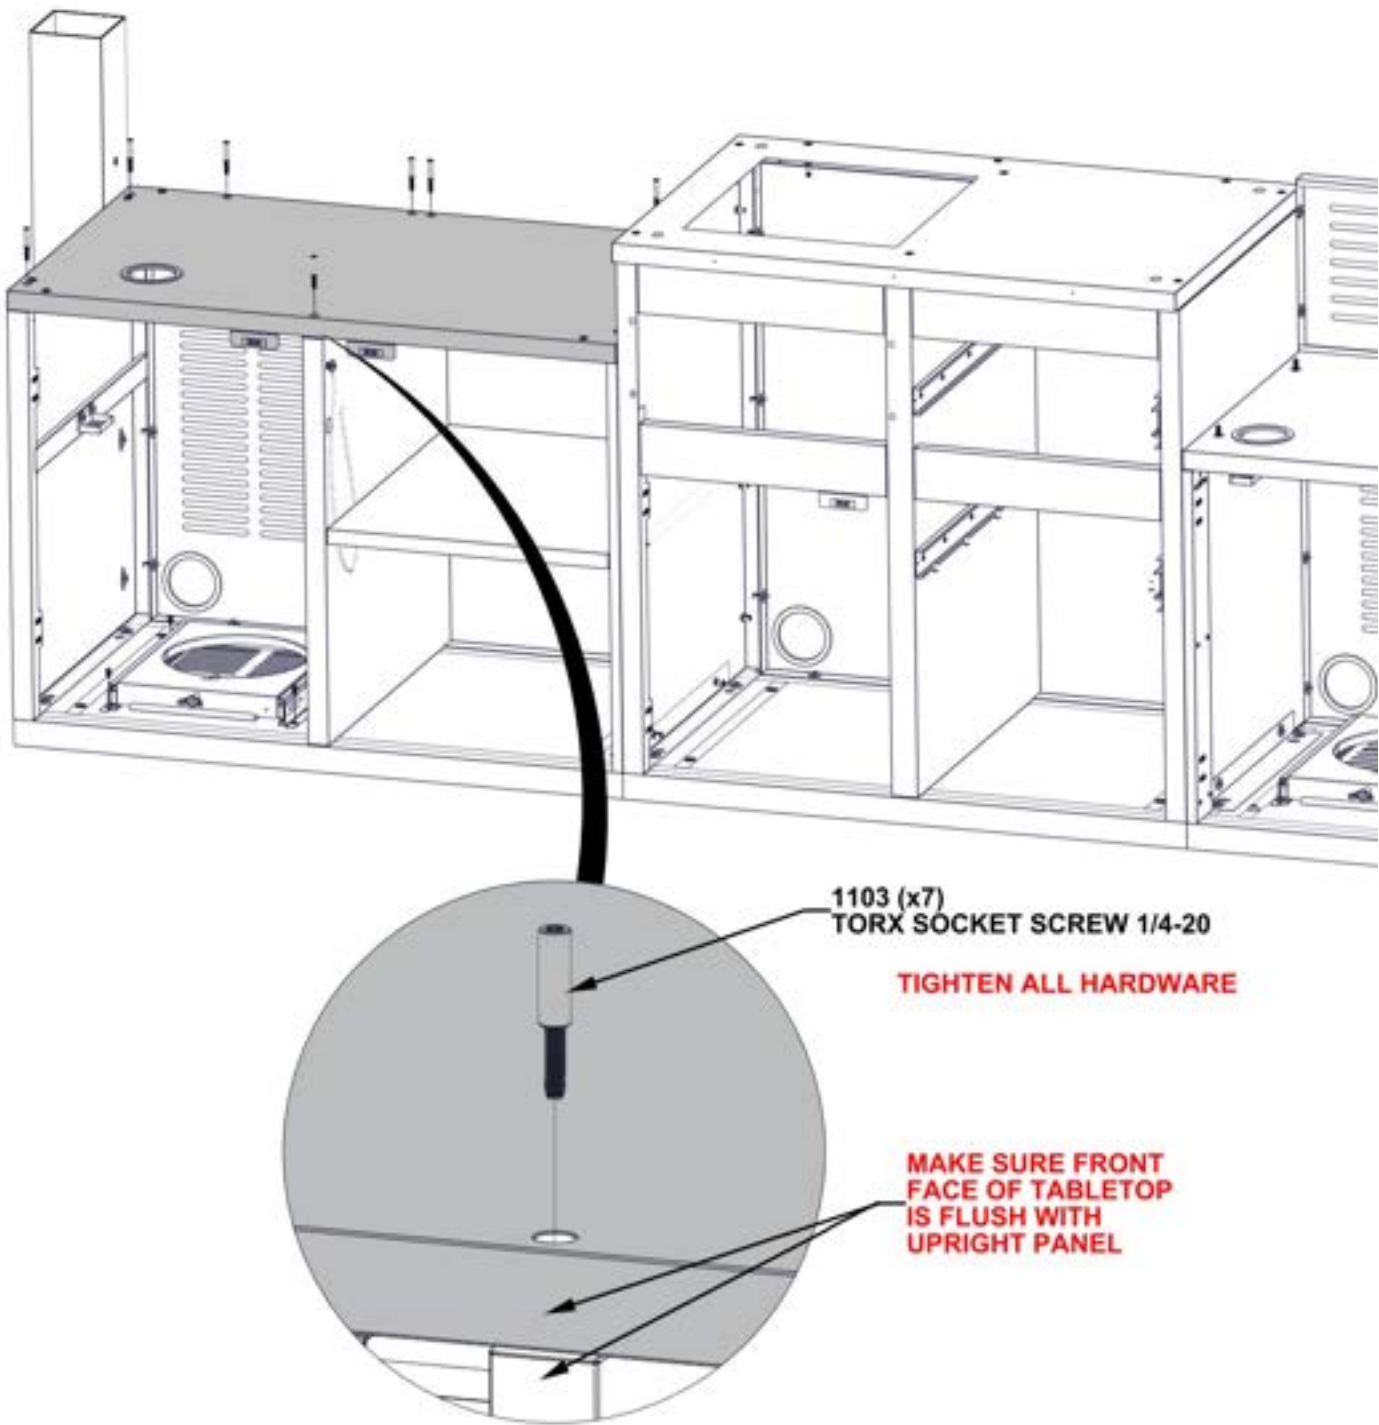


STEP 87 - PIZZA OVEN CABINET ASSEMBLY

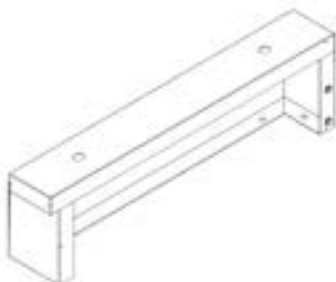


Qty	PartNo	Description
5	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

T5 PIZZA OVEN CABINET MARBLE PANEL ASSEMBLY L - A4M03549
(x1) 24 1/8"x4 5/16"x6 3/4" (109x172.2x612)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

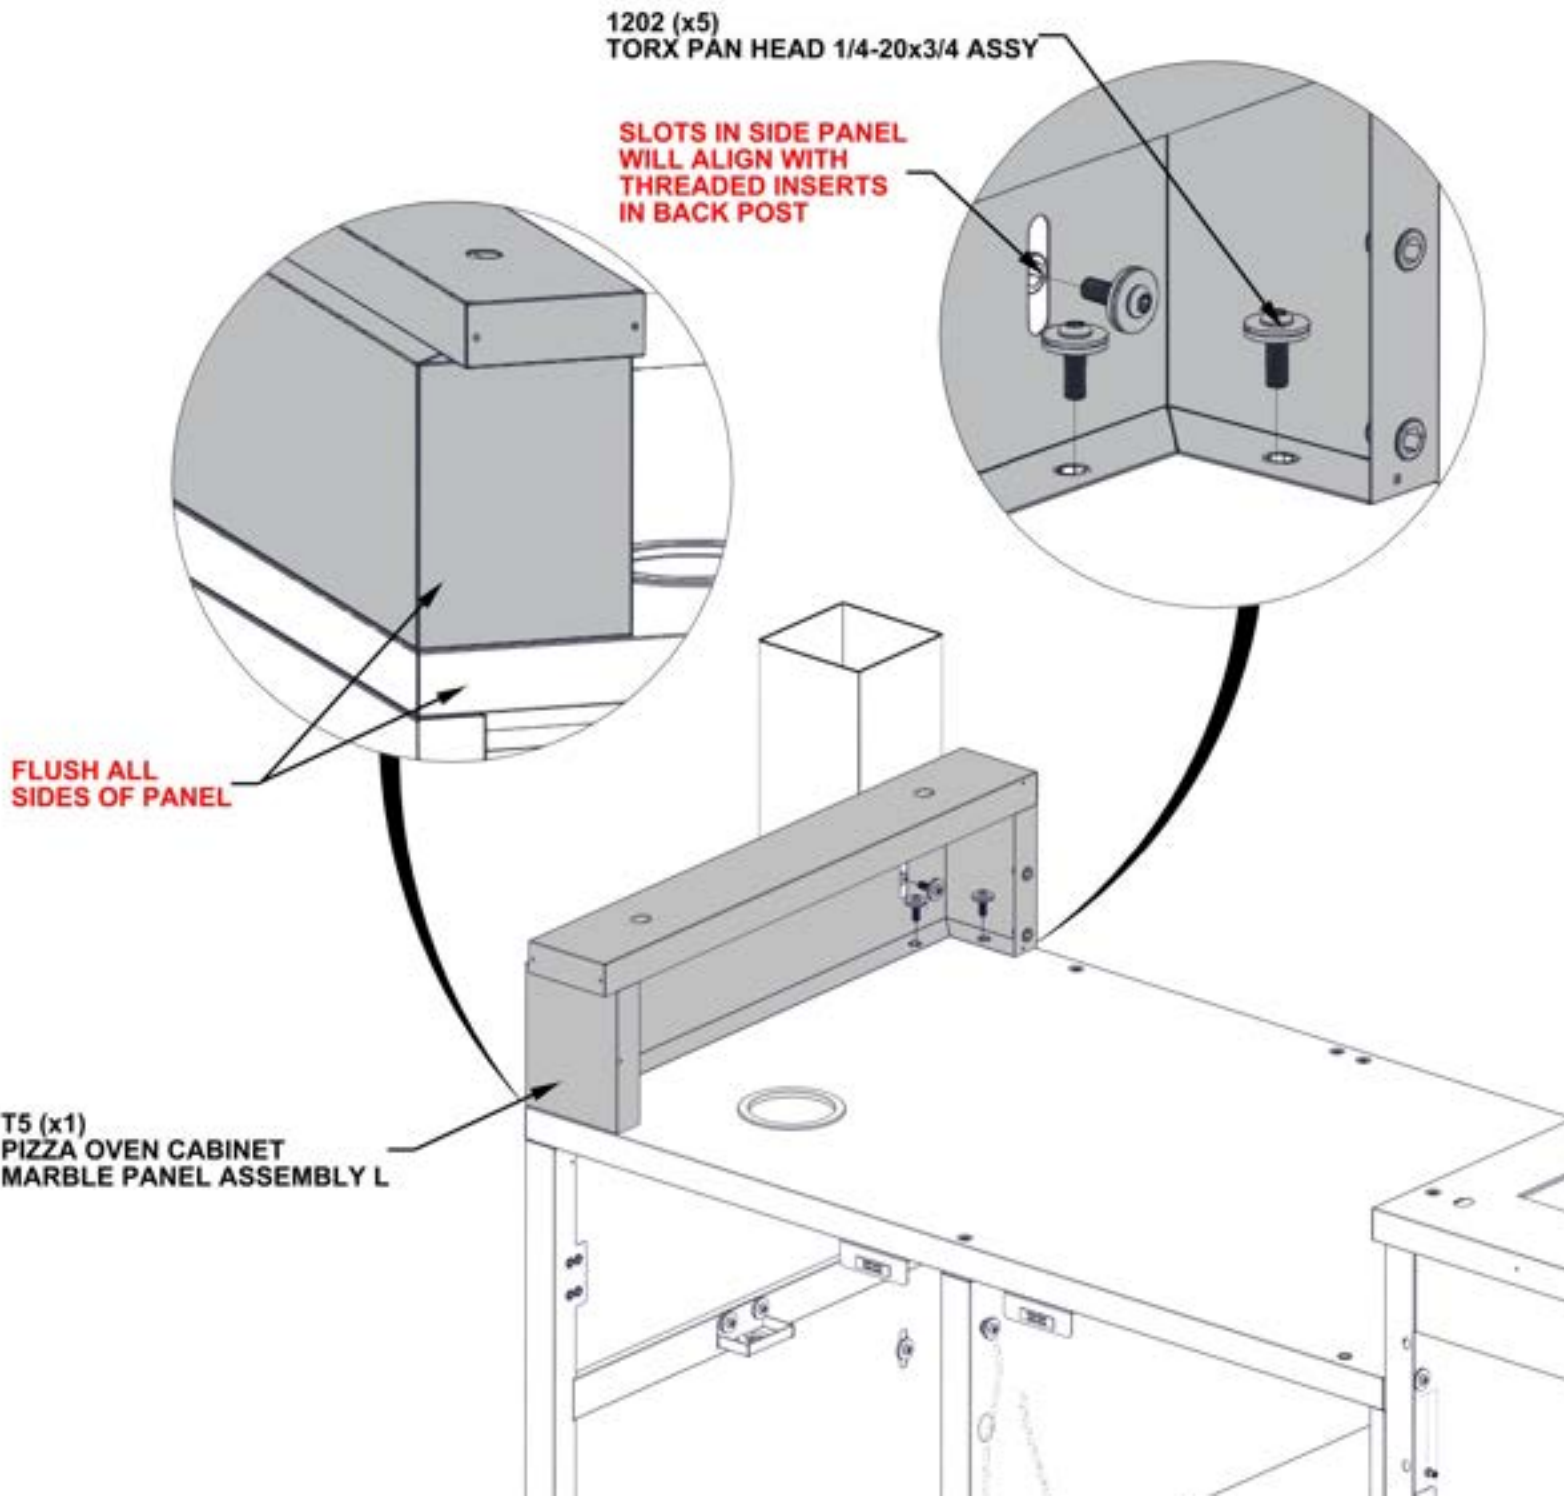


STEP 88 - PIZZA OVEN CABINET ASSEMBLY

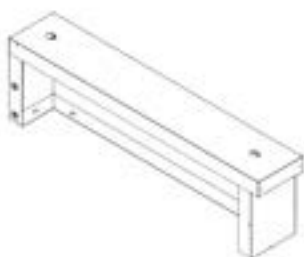

Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

T3 PIZZA OVEN CABINET MARBLE PANEL ASSEMBLY R - A4M03551
(x1) 612x4 5/16"x6 3/4" (109x172.2x612)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

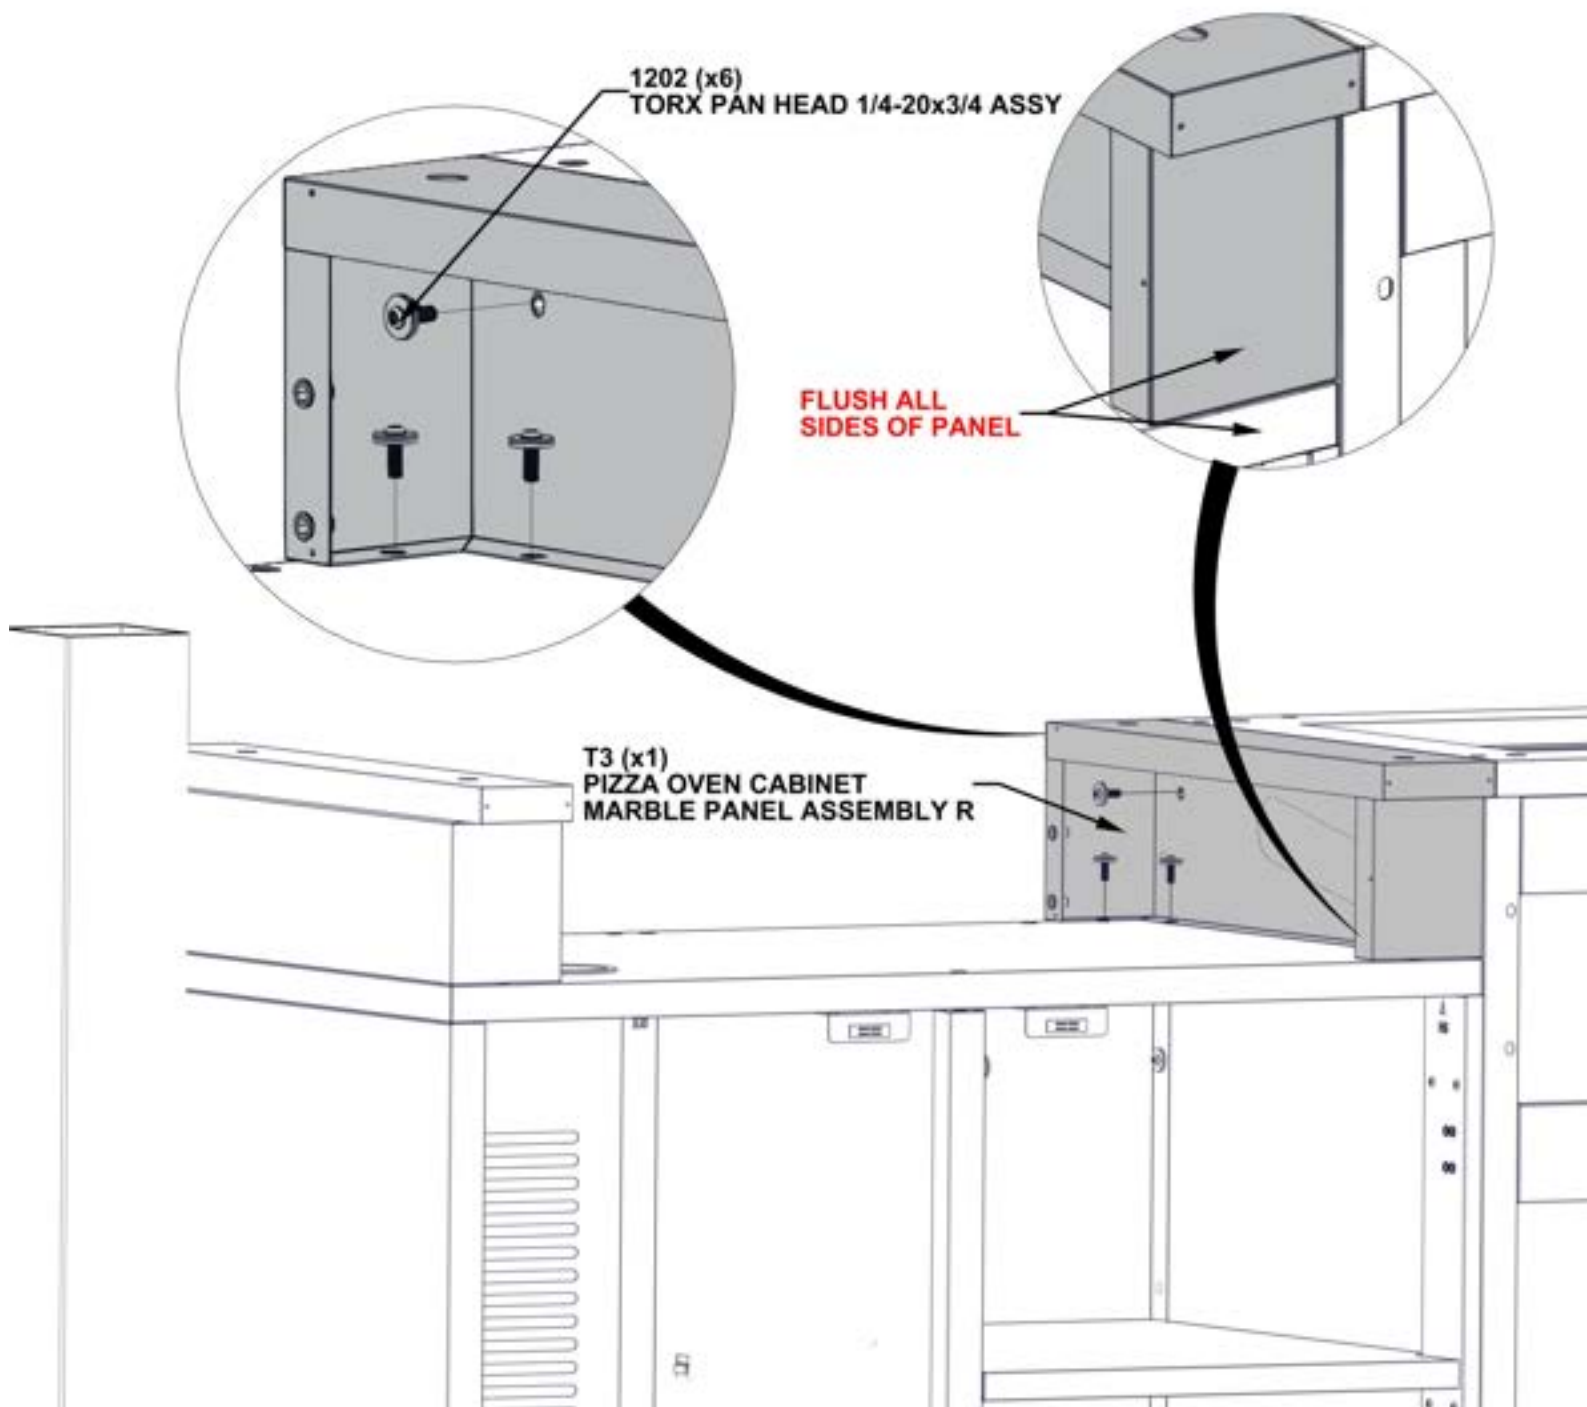


STEP 89 - PIZZA OVEN CABINET ASSEMBLY



Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY


O8 PIZZA OVEN VENTILATION PANEL - A4M03078
(x1) 1 3/16"x3 3/4"x31 7/16" (30x95x798)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

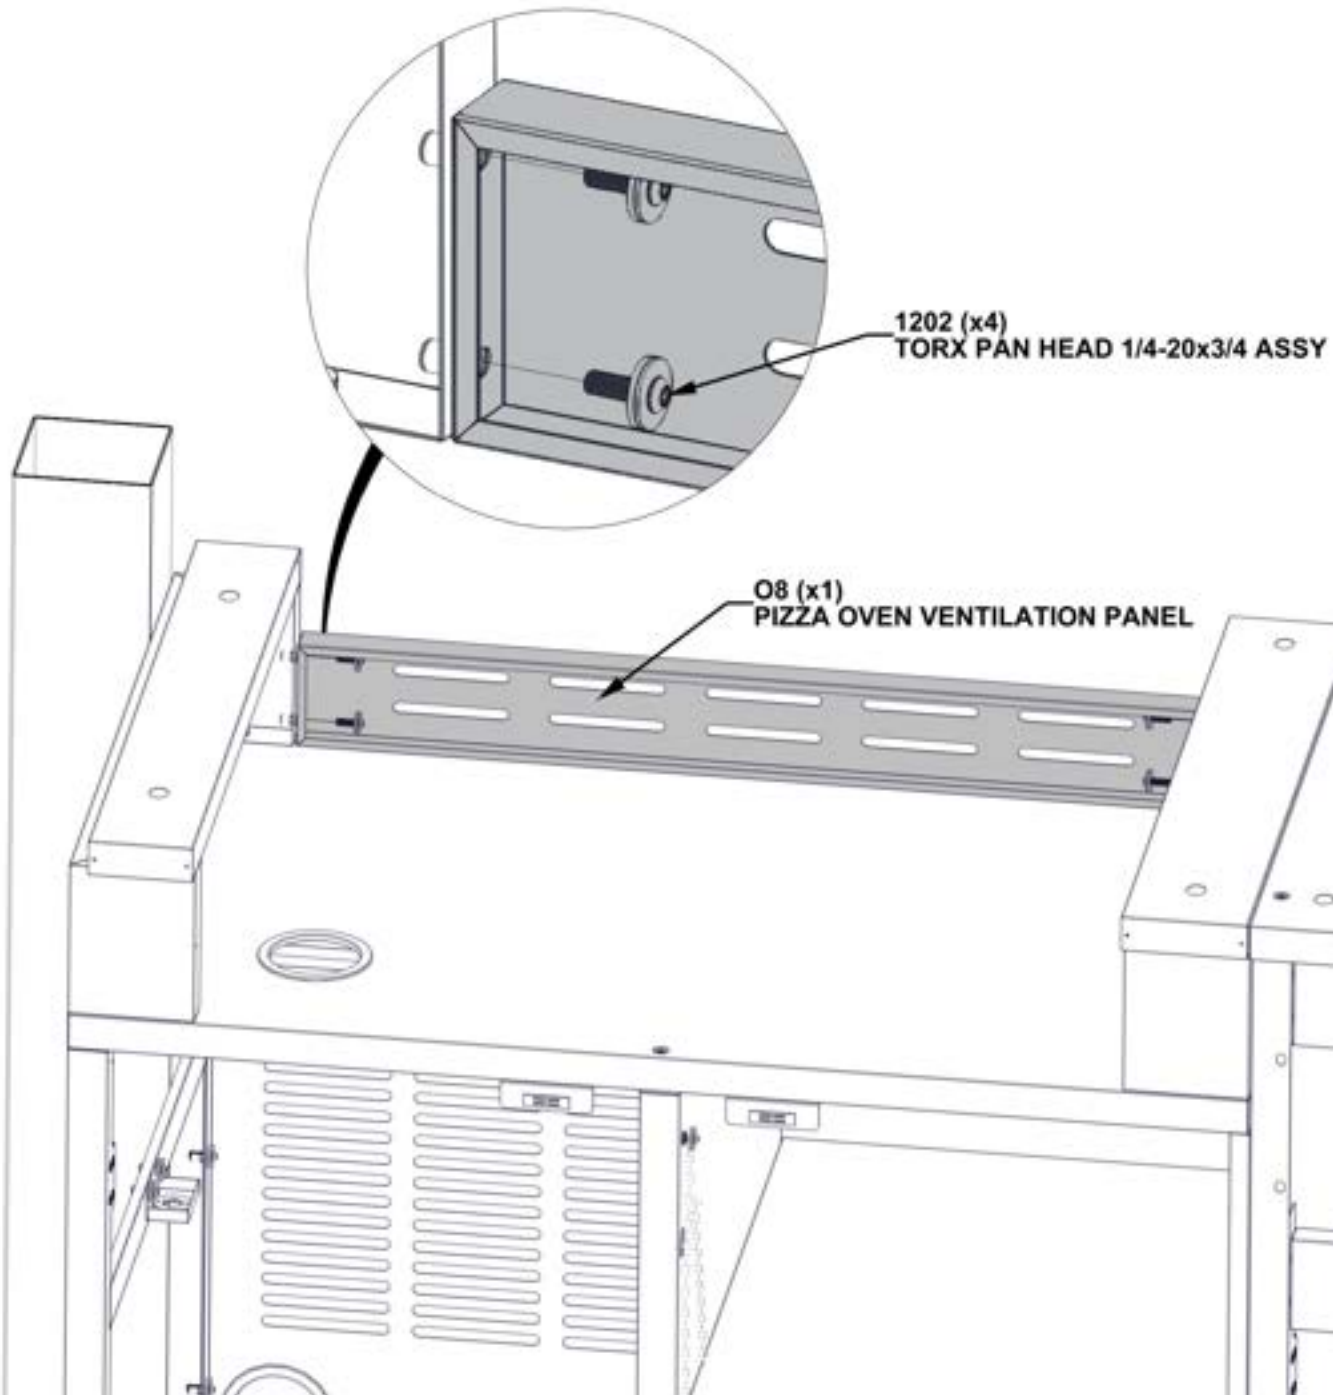

STEP 90 - SINK CABINET FALSE PANEL ASSEMBLY


Qty	PartNo	Description
2	H101289	PAN HEAD SCREW 8-32x1/2" SS

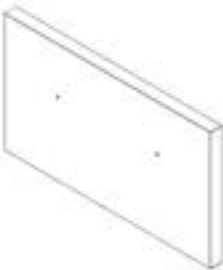

D5 SINK CABINET TRIM PANEL - A4M03576
(x1) 17 13/16"x10 1/4"x1" (26x260x452)



H2 STAINLESS STEEL HANDLE - A4M03024
(x1) 5/8"x1 9/16"x11 13/16" (16x40x300)

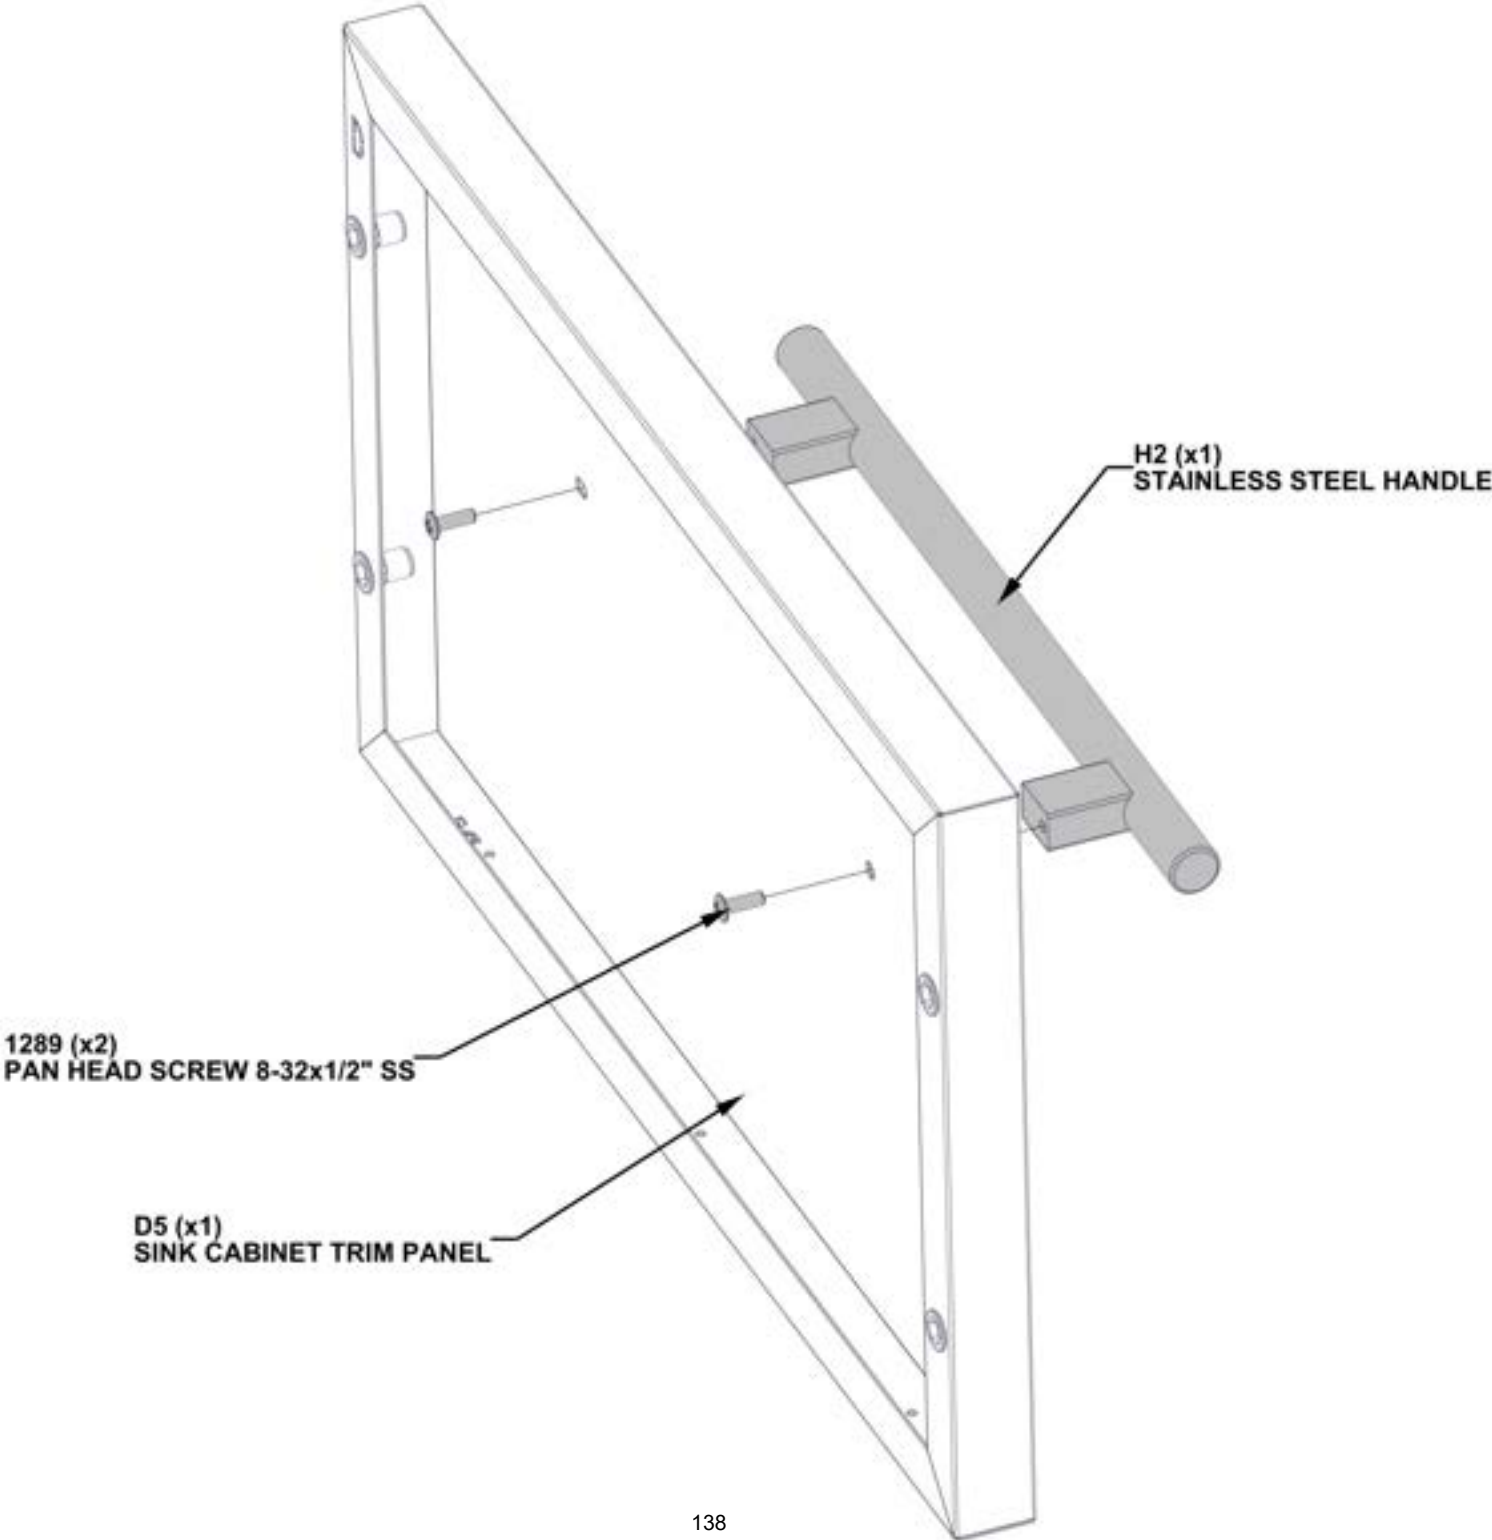


STEP 91 - SINK CABINET FALSE PANEL ATTACHMENT



FALSE PANEL ASSEMBLY
FROM STEP 90

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **HARDWARE ATTACHES ON INSIDE OF CABINET.**

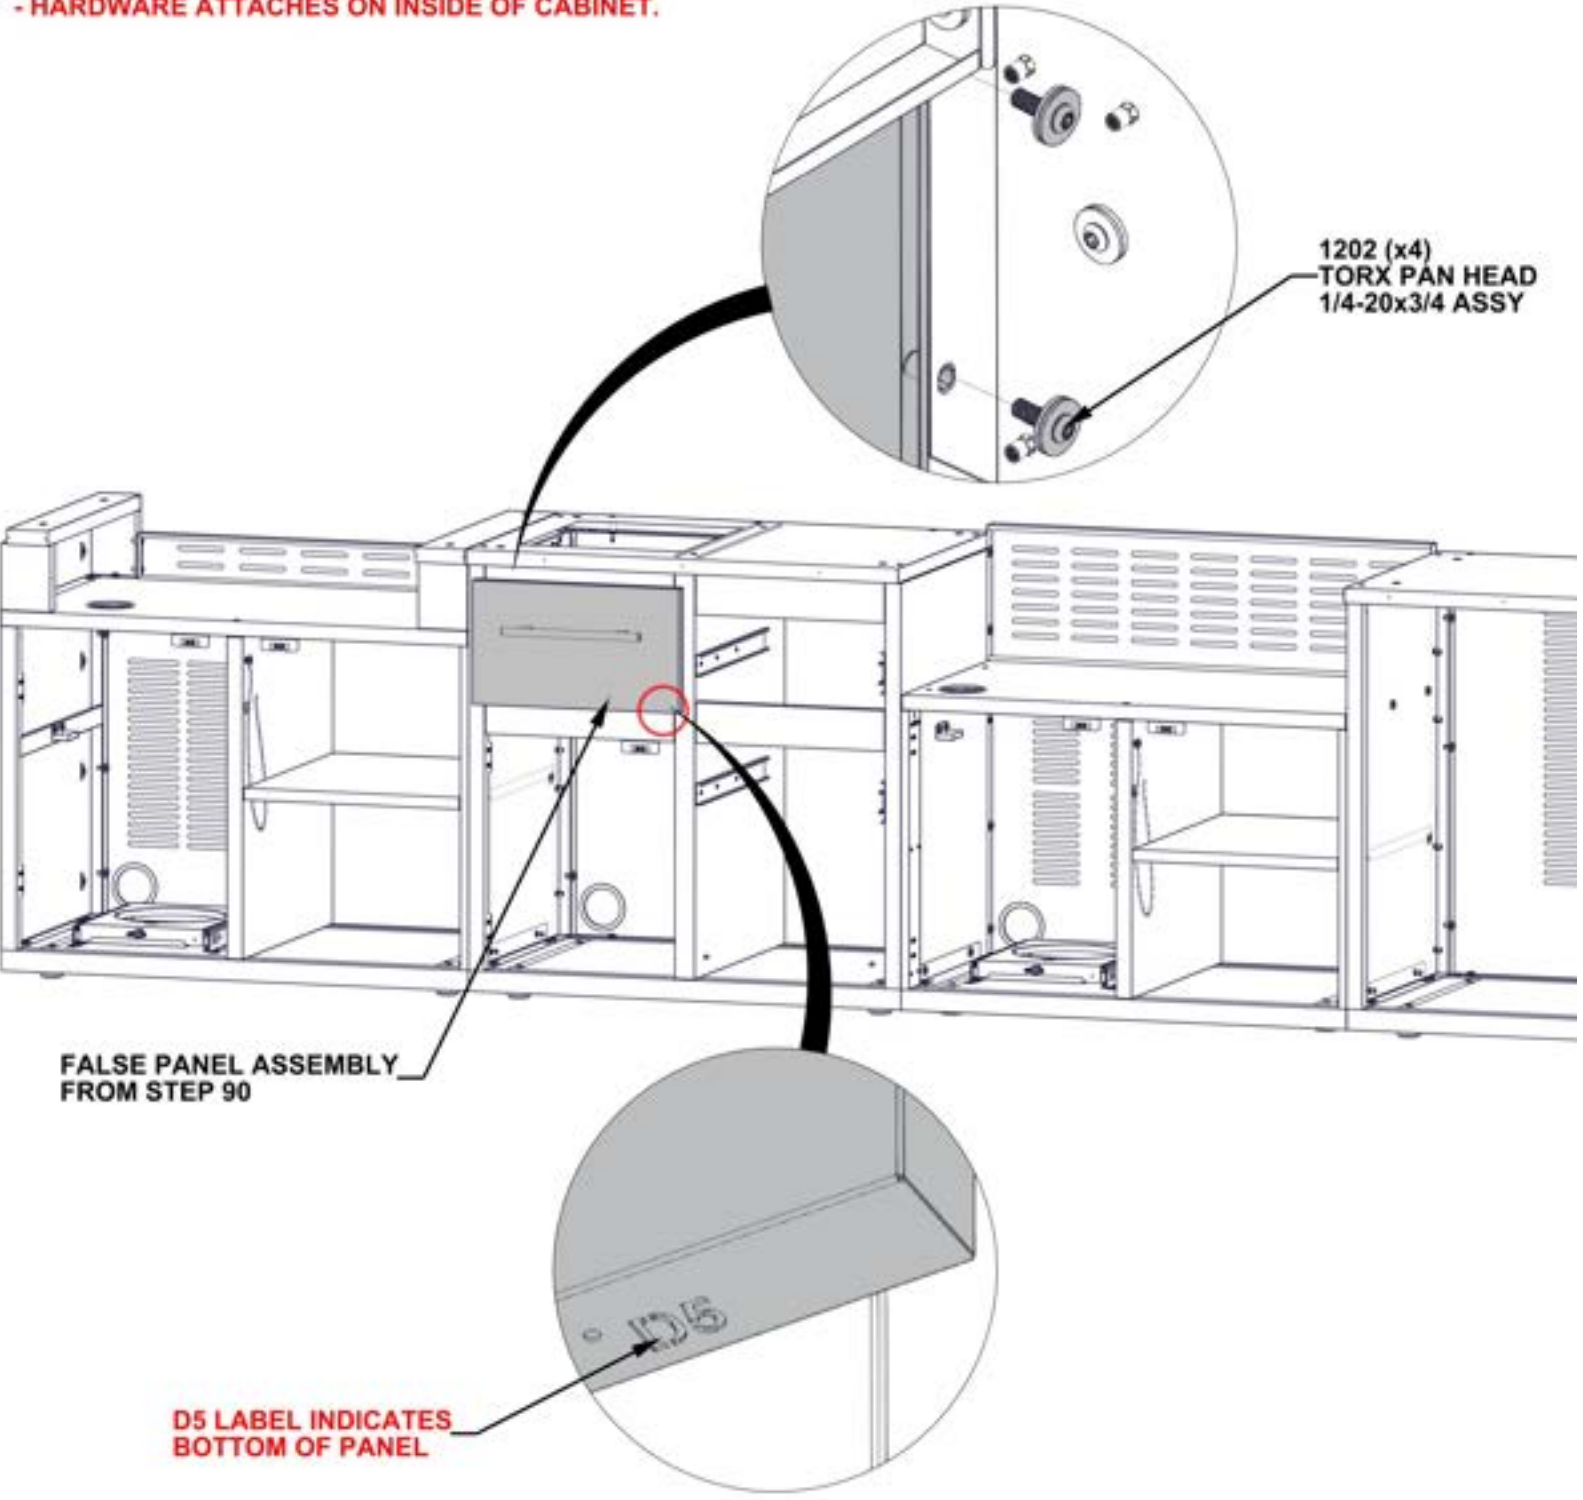


STEP 92A - SINK PRE-ASSEMBLY



A16 SINK ASSEMBLY - A4M03143
(x1) 15 1/8"x15 5/16"x16 7/8" (384x389x429)


1. INSTALLING THE SINK DRAIN

- SET DRAIN INSIDE OF SINK BODY, PLACING FOAM GASKET BETWEEN SURFACES.
- FASTEN IN PLACE USING RUBBER GASKET AND DRAIN NUT FROM BOTTOM SIDE.

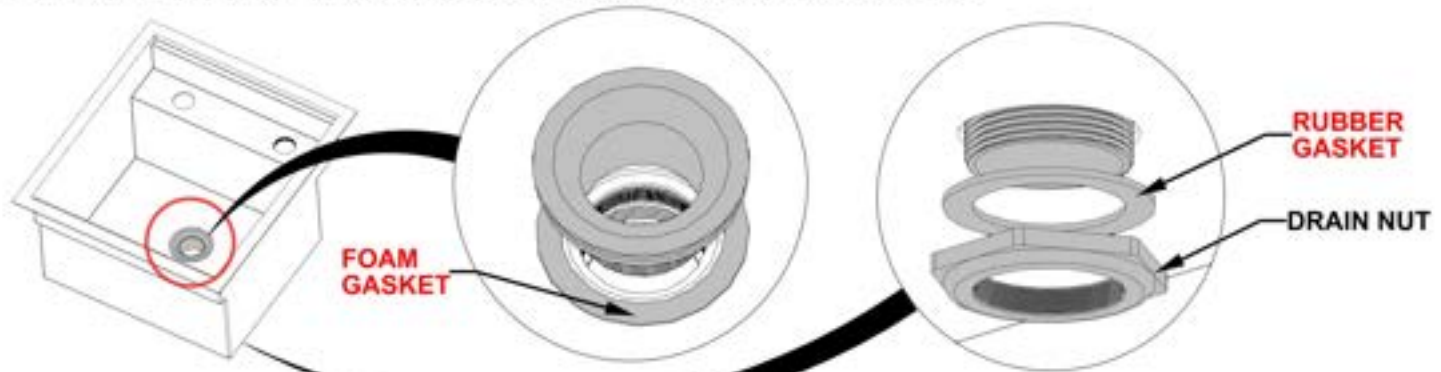


2. INSTALLING THE FAUCET

- INSTALL FAUCET BY PLACING HANDLE AND SPOUT INTO SINK OPENINGS AND SECURING IN PLACE VIA NUT.
- INSERT SCREWS TO LOCK.
- CONNECT WATER FAUCET LINES TOGETHER.

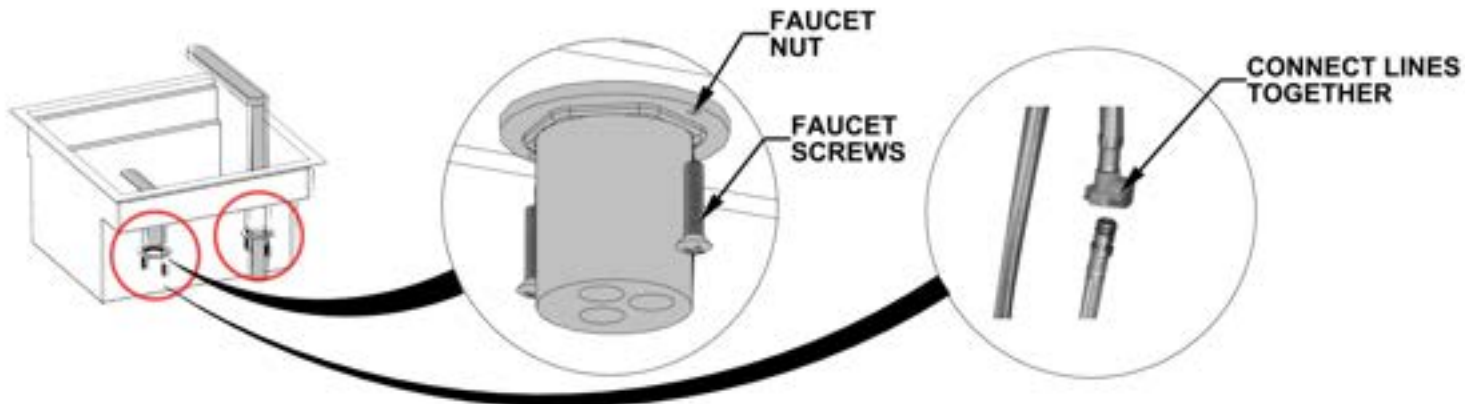

3. INSTALLING THE DRAIN FITTING

- ATTACH DRAIN FITTING TO SINK DRAIN.

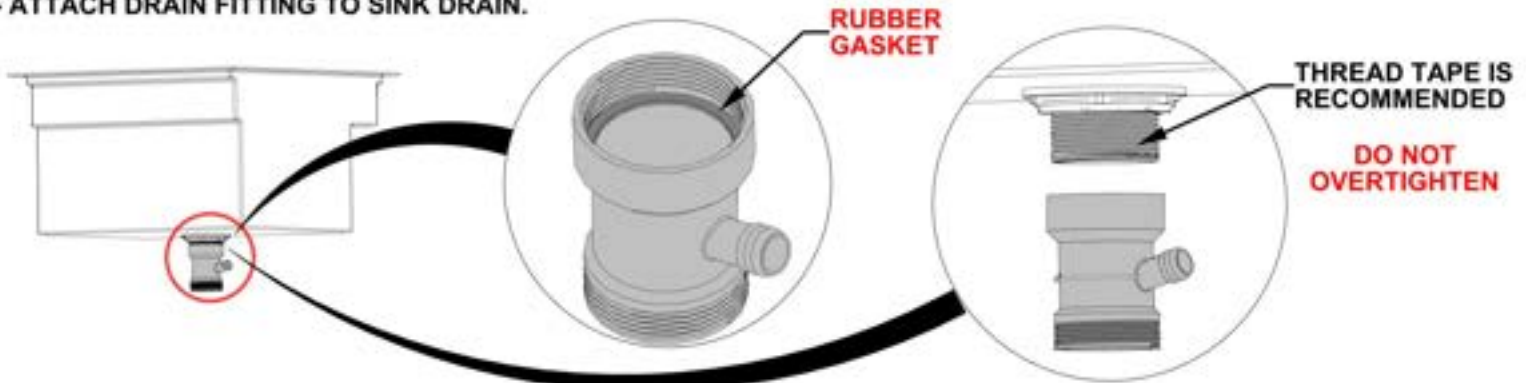


STEP 92B - SINK PRE-ASSEMBLY



A16 SINK ASSEMBLY - A4M03143
(x1) 15 1/8"x15 5/16"x16 7/8" (384x389x429)


4. INSTALLING THE OVERFLOW DRAIN

- MAKE SURE RUBBER GASKET IS INSTALLED IN OVERFLOW DRAIN.
- INSERT DRAIN SCREW TO HOLD IN PLACE.

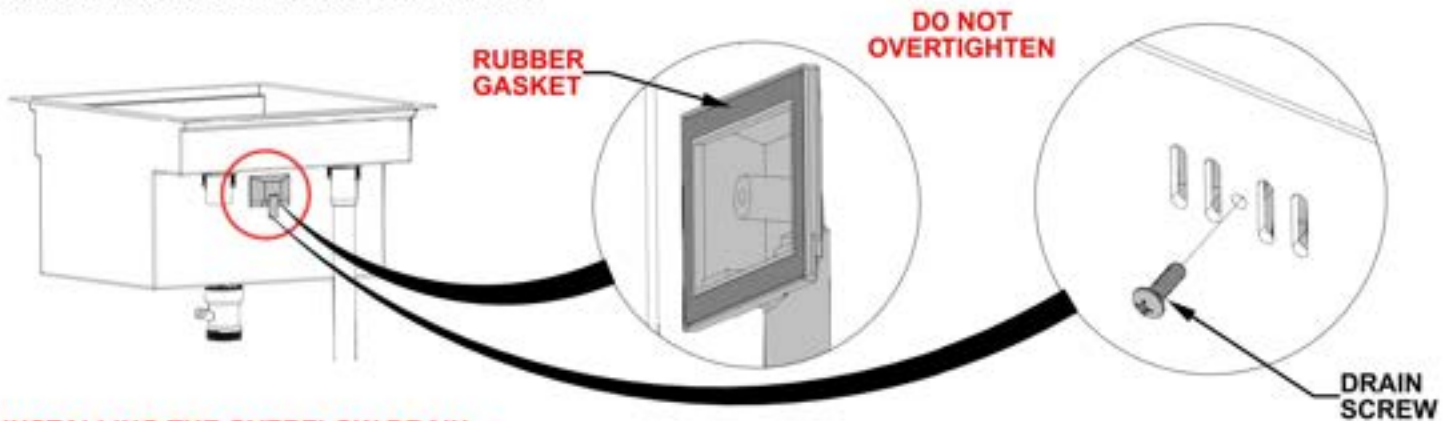


5. INSTALLING THE OVERFLOW DRAIN

- ATTACH OVERFLOW DRAIN BY CONNECTING EACH END AS SHOWN.

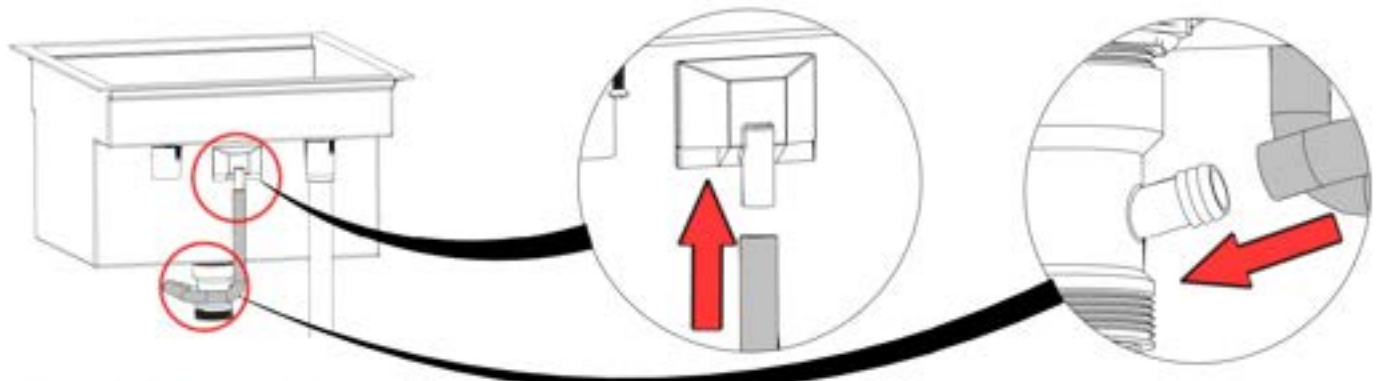

6. INSTALLING THE MAIN DRAIN AND TRAP

- ATTACH TRAP AND CORRUGATED DRAIN HOSE TO DRAIN FITTING.

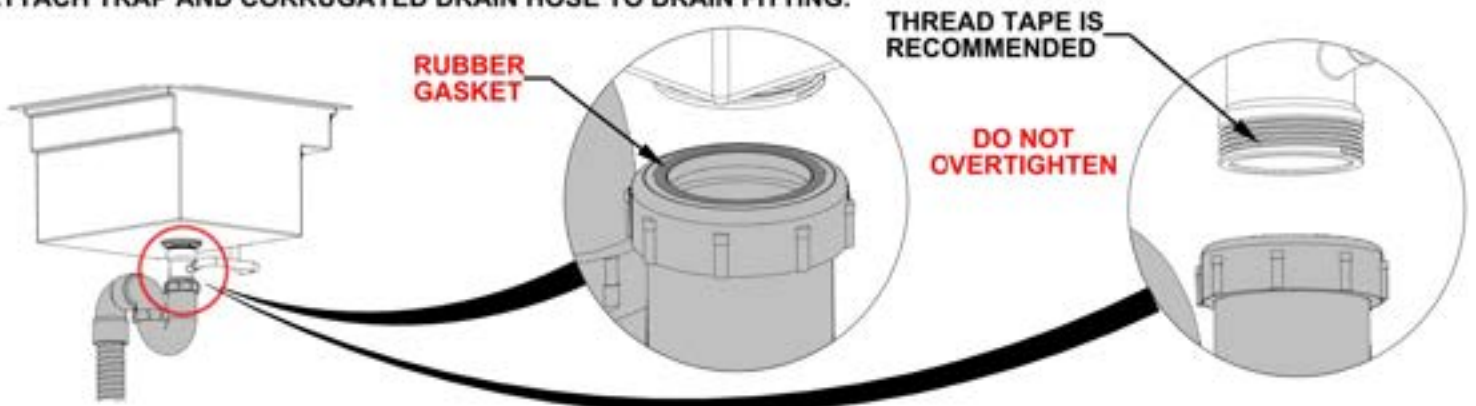

STEP 92C - SINK INSTALLATION



A16 SINK ASSEMBLY - A4M03143
(x1) 15 1/8"x15 5/16"x16 7/8" (384x389x429)



A4M03151 GARDEN HOSE ADAPTER
(x1)

- DRAIN STRAINER MUST BE USED WHEN DISCARDING FOOD INSIDE OF SINK.
- DO NOT LET SOLID MATERIAL ENTER SINK BASIN.

OPTIONS FOR WATER INLET SUPPLY HOOKUP:

- GARDEN HOSE ATTACHMENT USING PROVIDED ADAPTER
- WATER INLET SUPPLY LINE

ATTACH ADAPTER
TO INLET LINE AND
TIGHTEN WITH WRENCH


OPTIONS FOR DRAIN DISCHARGE:

- BUCKET OR GREY WATER CONTAINER
- FRENCH DRAIN OR DRY BASIN
- INTEGRATED SEWER SYSTEM
- CHECK YOUR LOCAL REQUIREMENTS.

IT IS RECOMMENDED TO
APPLY A FINE BEAD OF
SILICONE, TO UNDERNEATH
SIDE OF ALL SINK FLANGES
BEFORE INSTALLING

3151 (x1)
GARDEN HOSE
ADAPTER

A16 (x1)
SINK ASSEMBLY

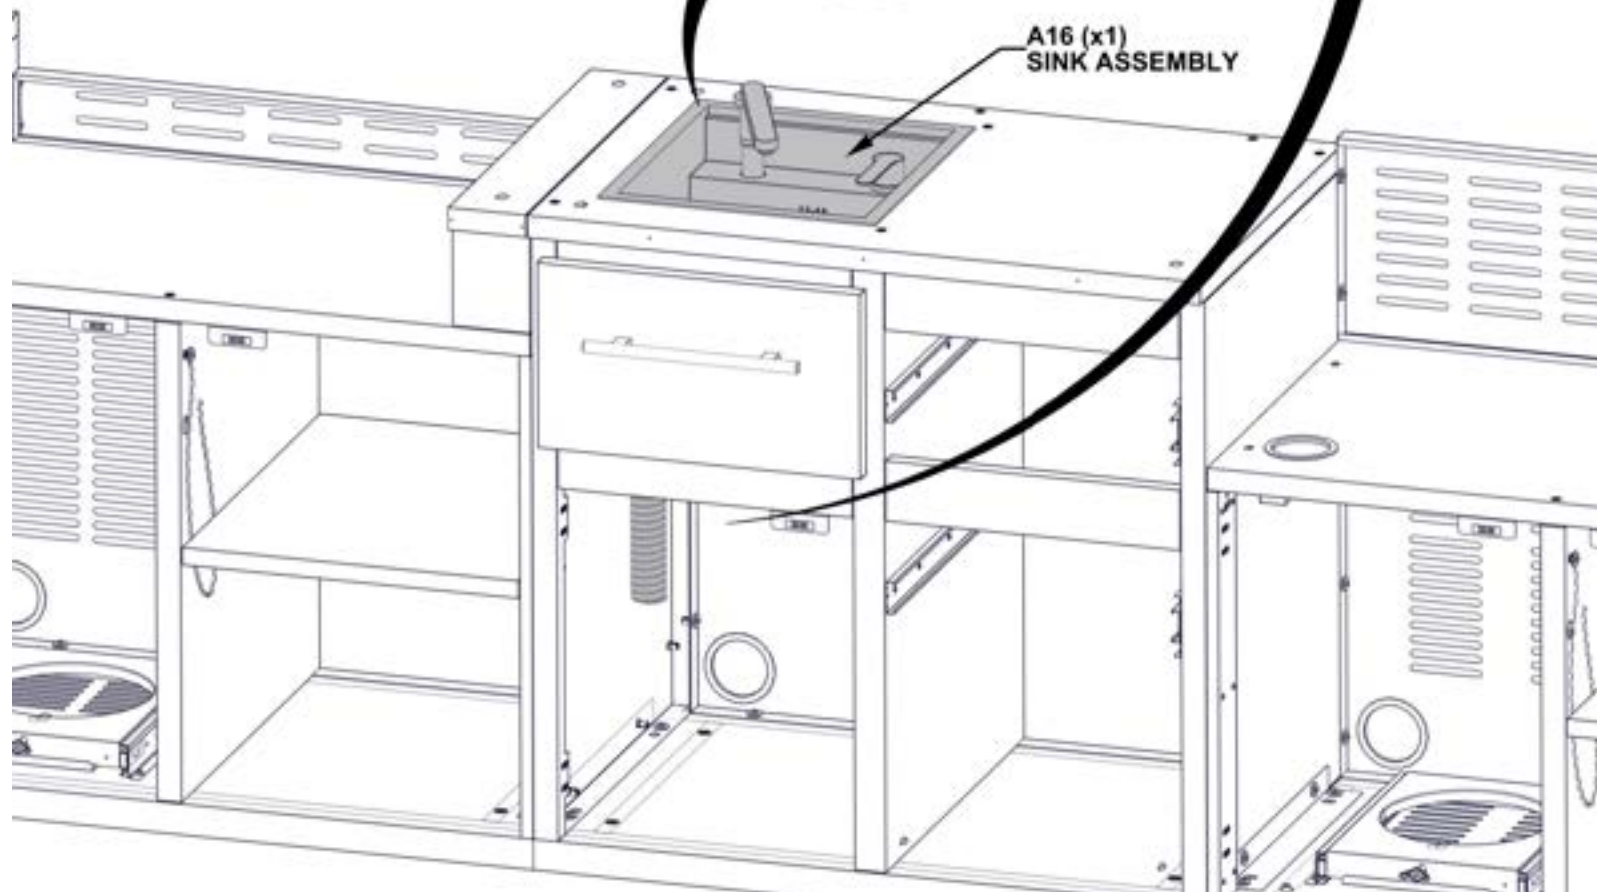


STEP 93A - FRIDGE CABINET MARBLE INSTALLATION




M3 FRIDGE CABINET MARBLE - A4M03602
(x1) 28 1/8"x24 15/16"x1 15/16" (50x634x715)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET MARBLE COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL MARBLE IS TIGHT AGAINST POST AND SIDES ARE FLUSH WITH PANEL.
- **WHEN SETTING MARBLE IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH MARBLE.**

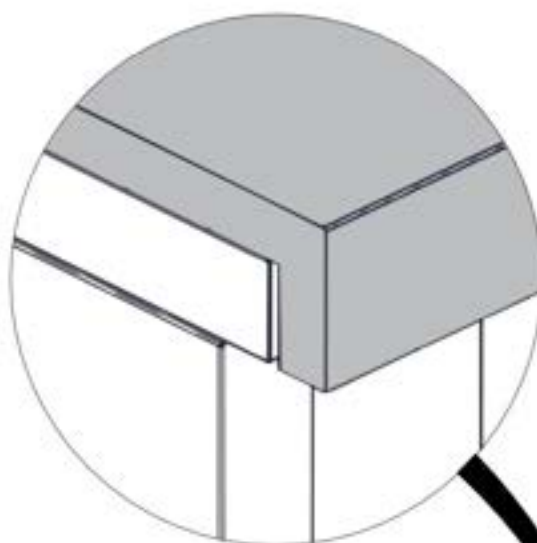


M3 (x1)
FRIDGE CABINET
MARBLE

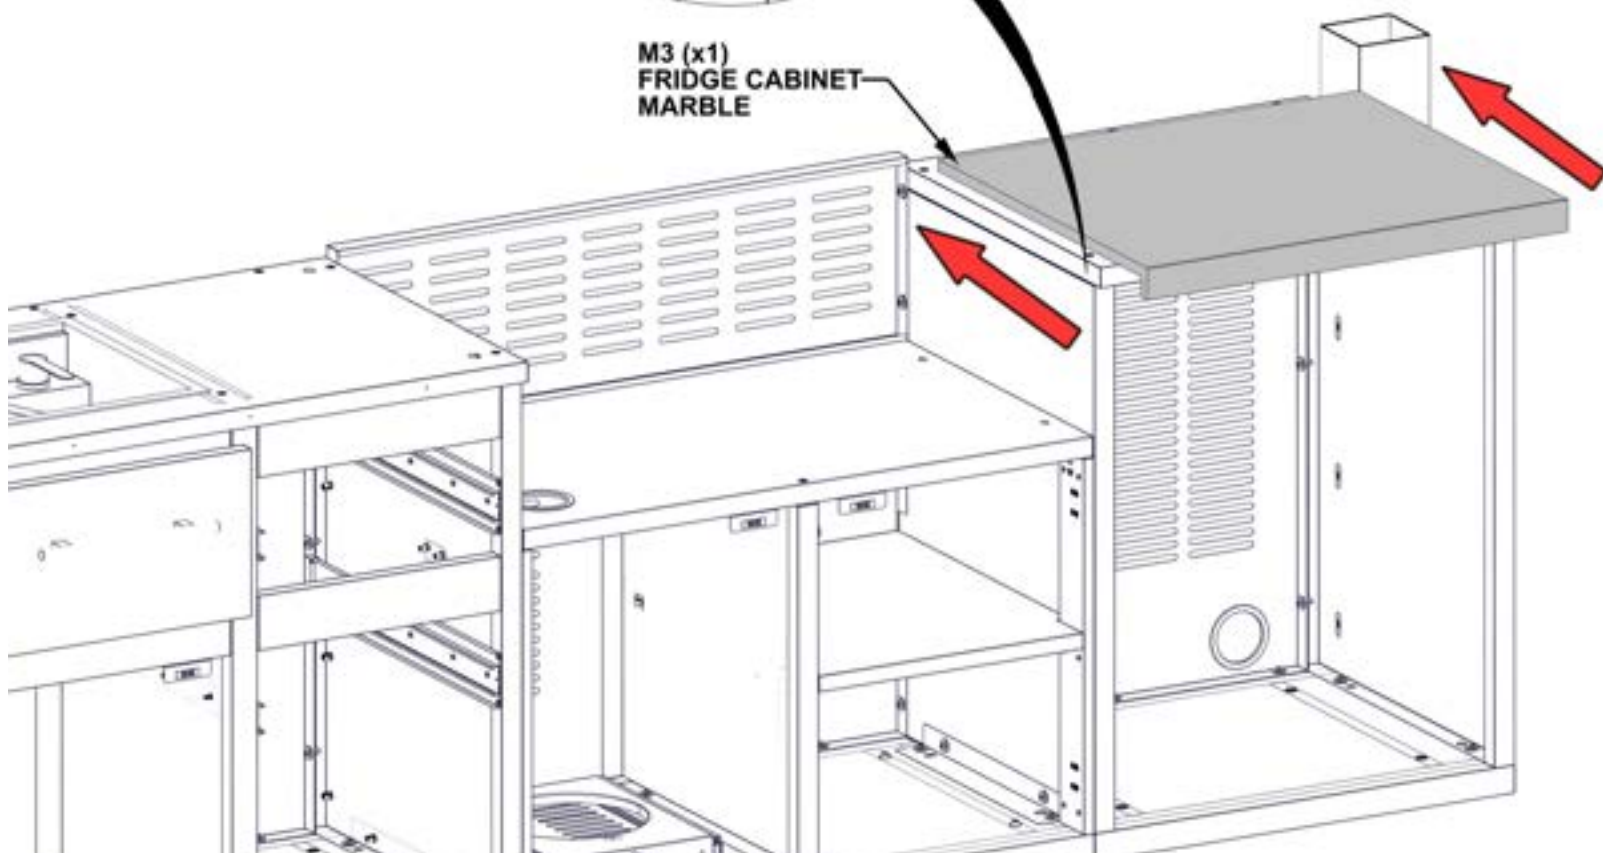

STEP 93B - FRIDGE CABINET MARBLE INSTALLATION

Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"
4	H101053	STEEL WASHER 6x20
4	H101054	SEALANT WASHER

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.
- ONCE MARBLE IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.
- DO NOT USE MARBLE SURFACE AS A WORK BENCH.

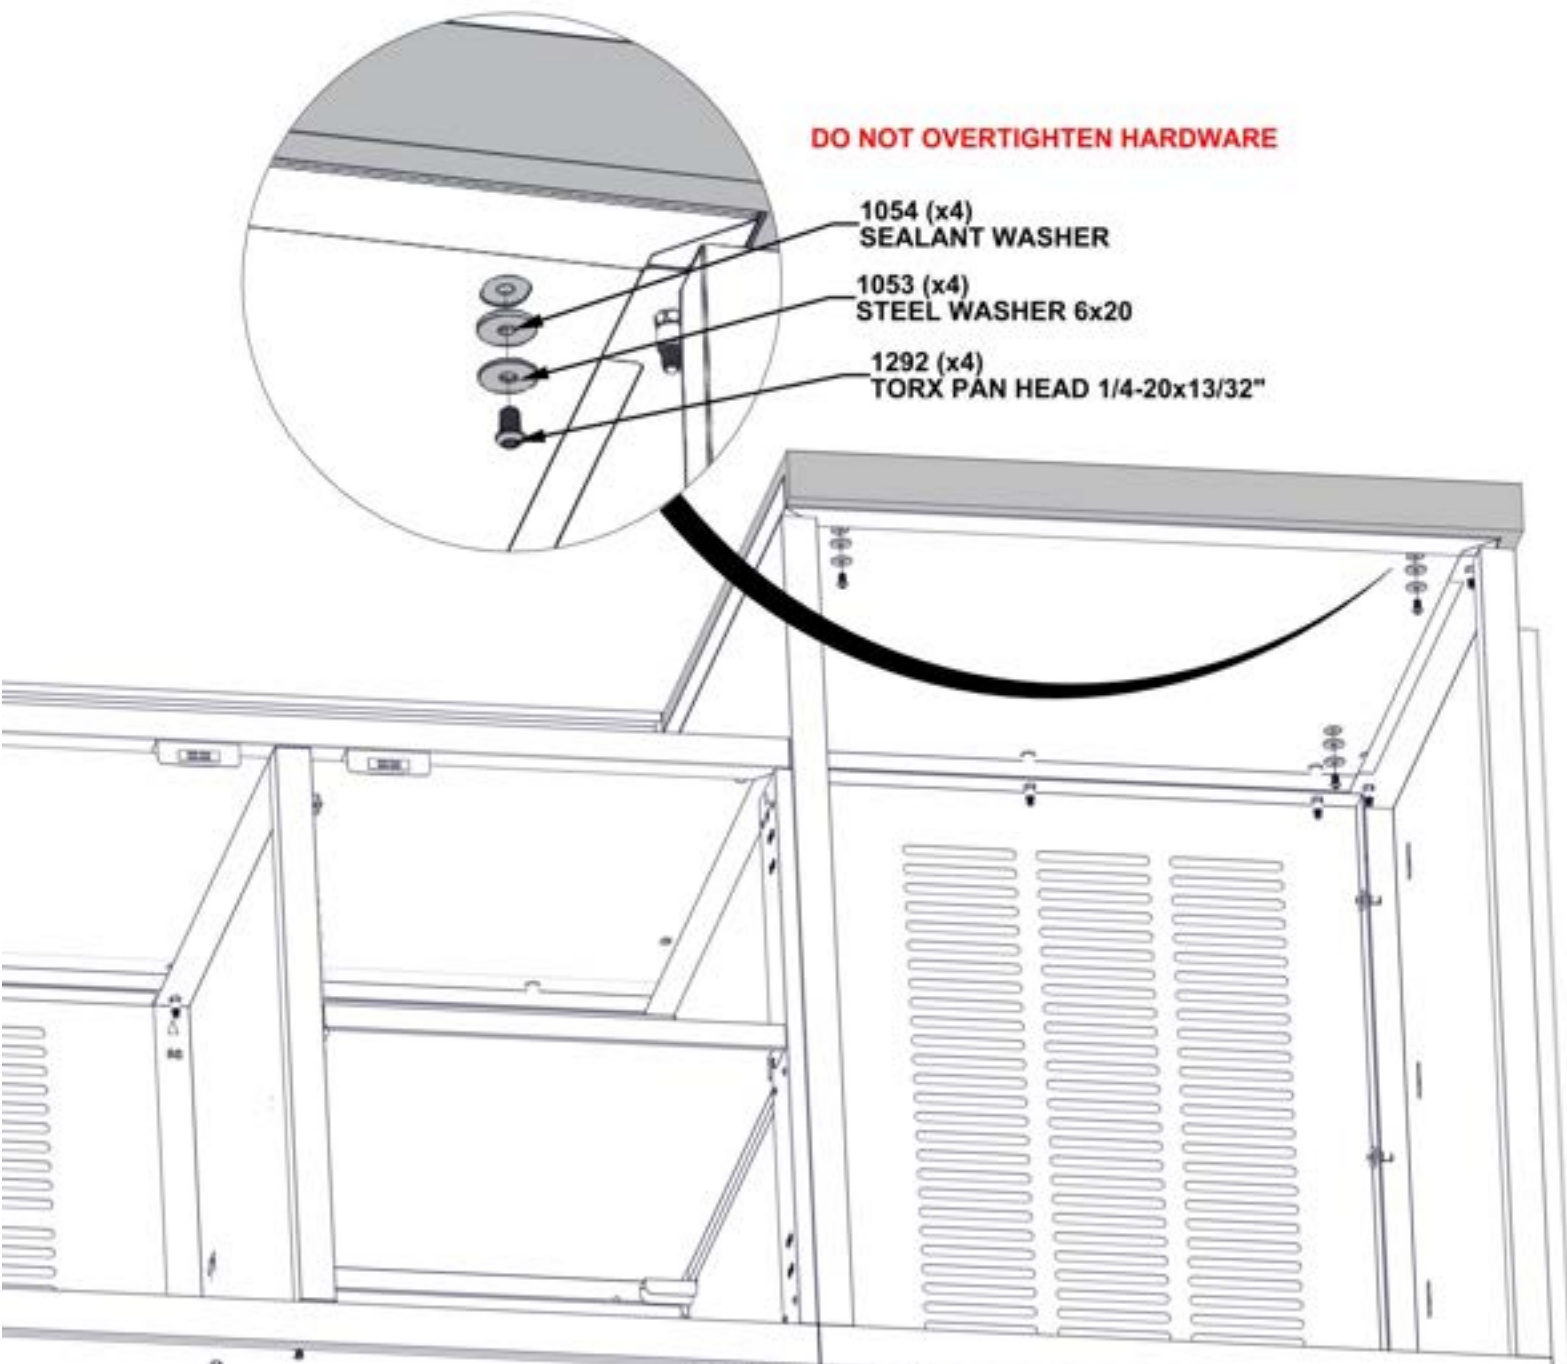


STEP 94A - SINK CABINET MARBLE INSTALLATION



M2 SINK CABINET MARBLE - A4M03568
(x1) 41 1/2"x24 15/16"x1 15/16" (49x633x1054)


- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET MARBLE COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL MARBLE IS TIGHT AGAINST POST AND SIDES ARE FLUSH WITH PANEL.
- **WHEN SETTING MARBLE IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH MARBLE.**

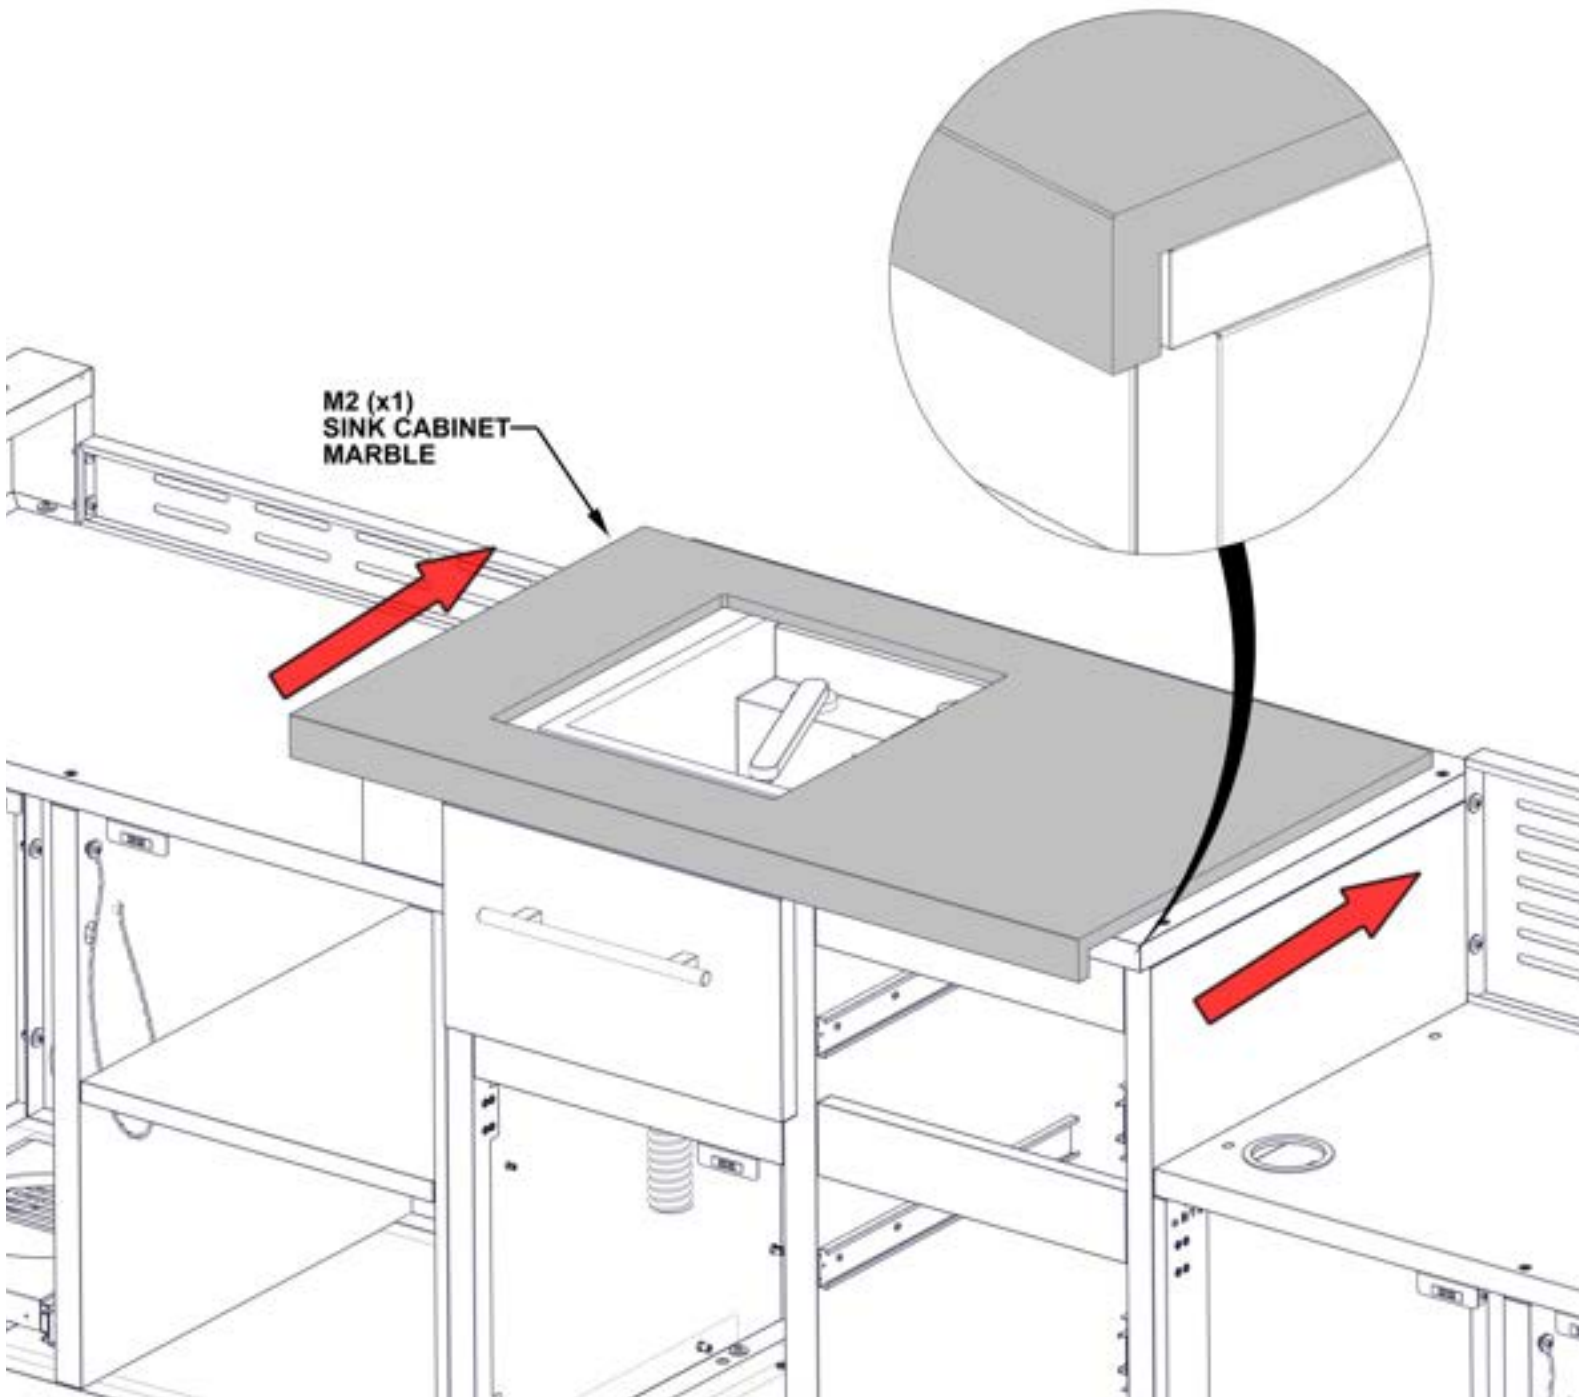


STEP 94B - SINK CABINET MARBLE INSTALLATION

Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"
4	H101053	STEEL WASHER 6x20
4	H101054	SEALANT WASHER


- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.
- ONCE MARBLE IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.
- DO NOT USE MARBLE SURFACE AS A WORK BENCH.

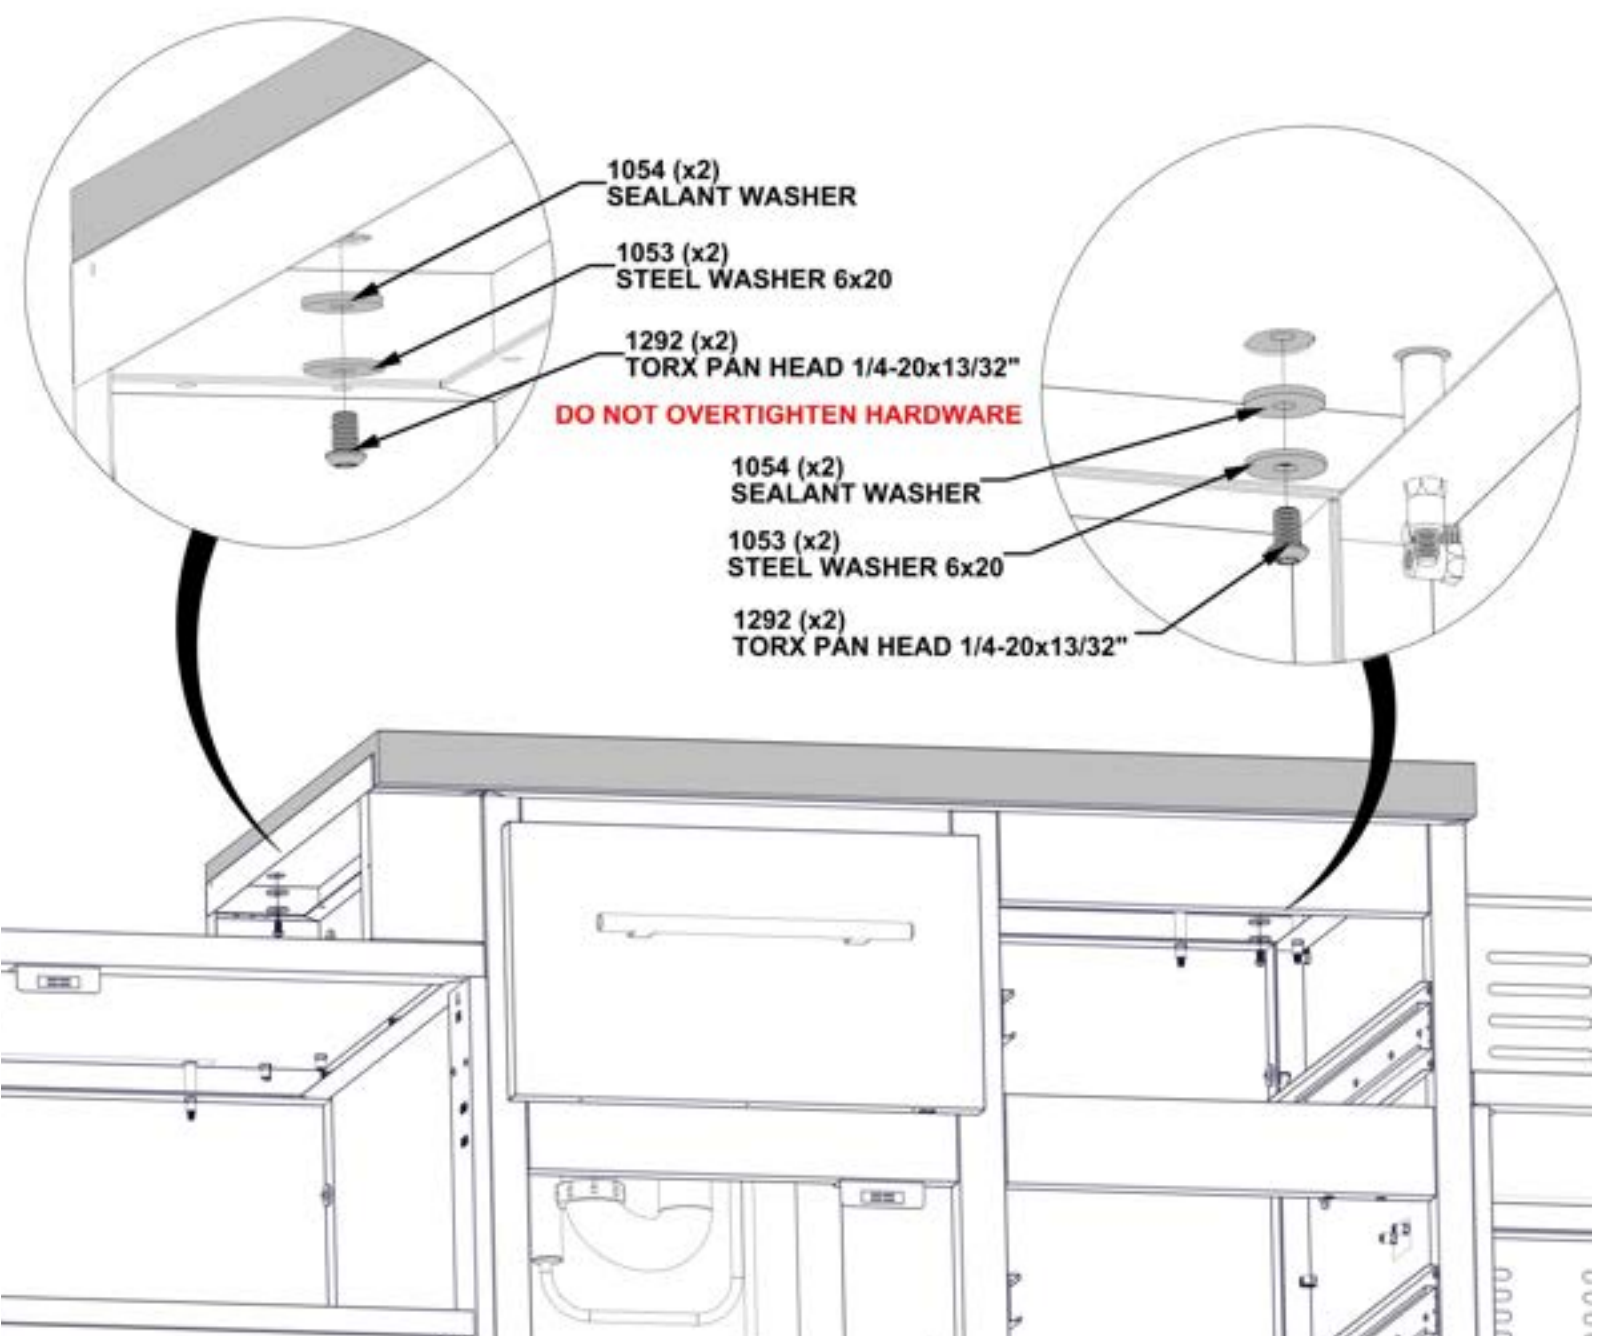

STEP 95 - SINK CABINET MARBLE INSTALLATION

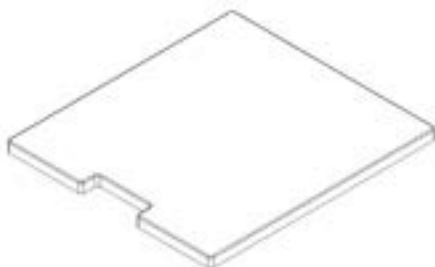

M5 SINK COVER MARBLE - A4M03147
(x1) 11/16"x14 3/4"x16 5/16" (18x375x415)

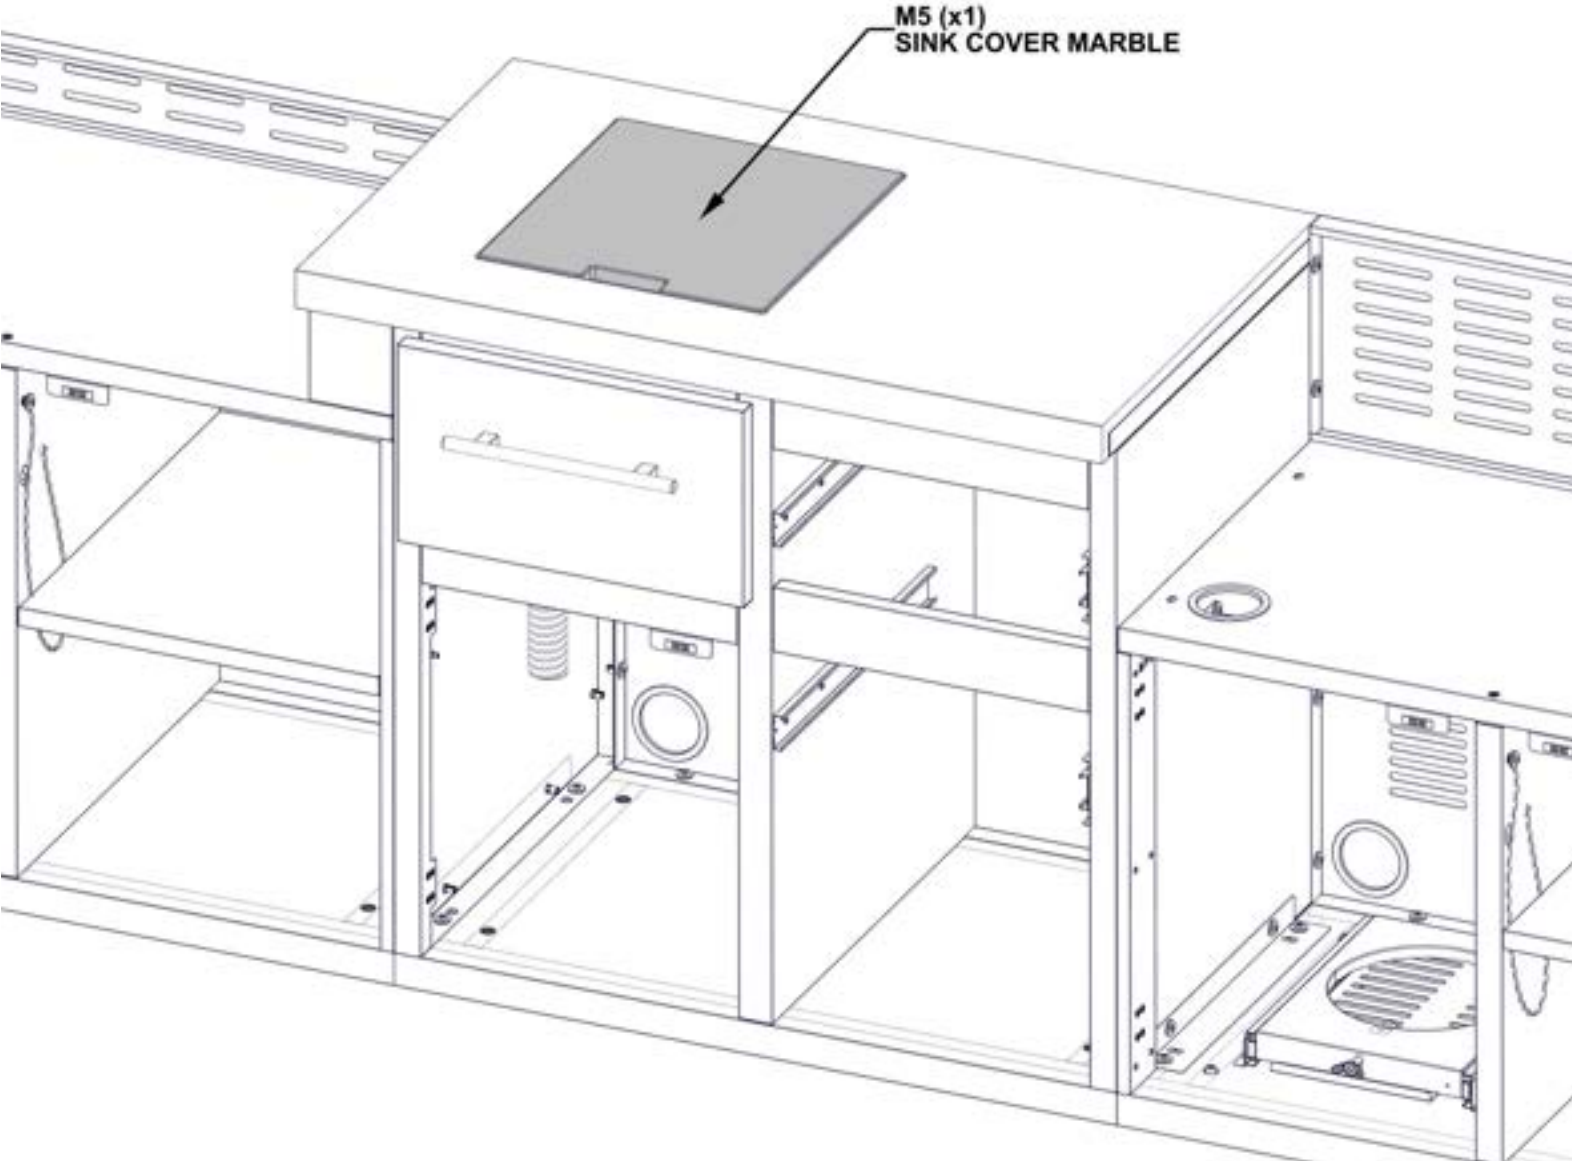


STEP 96A - PIZZA OVEN CABINET MARBLE INSTALLATION



M1 PIZZA OVEN CABINET MARBLE - A4M03553
(x1) 24 13/16"x4 5/16"x1 15/16" (50x109x630)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET MARBLE COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL MARBLE IS TIGHT AGAINST POST AND SIDES ARE FLUSH WITH PANEL.
- **WHEN SETTING MARBLE IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH MARBLE.**

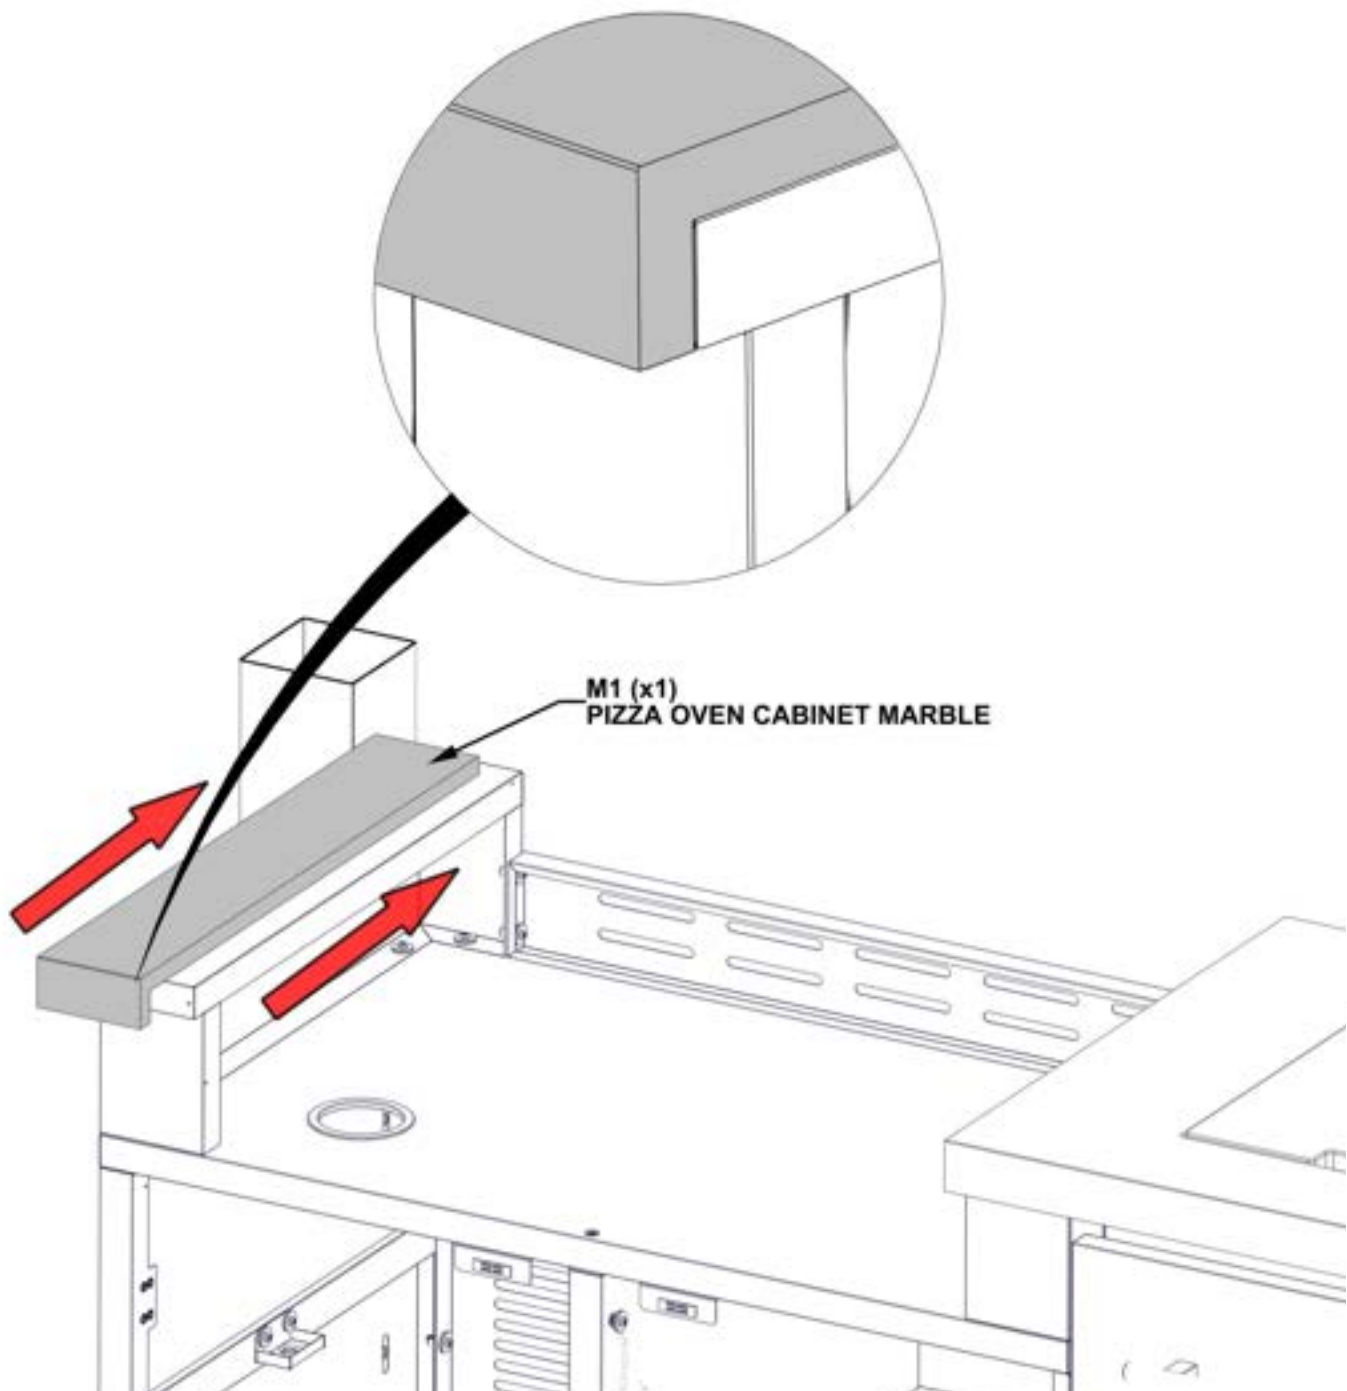

STEP 96B - SINK CABINET MARBLE INSTALLATION

Qty	PartNo	Description
2	H101292	TORX PAN HEAD 1/4-20x13/32"
2	H101053	STEEL WASHER 6x20
2	H101054	SEALANT WASHER


- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.
- ONCE MARBLE IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.
- DO NOT USE MARBLE SURFACE AS A WORK BENCH.

DO NOT OVERTIGHTEN HARDWARE

1054 (x2)
SEALANT WASHER

1053 (x2)
STEEL WASHER 6x20

1292 (x2)
TORX PAN HEAD 1/4-20x13/32"

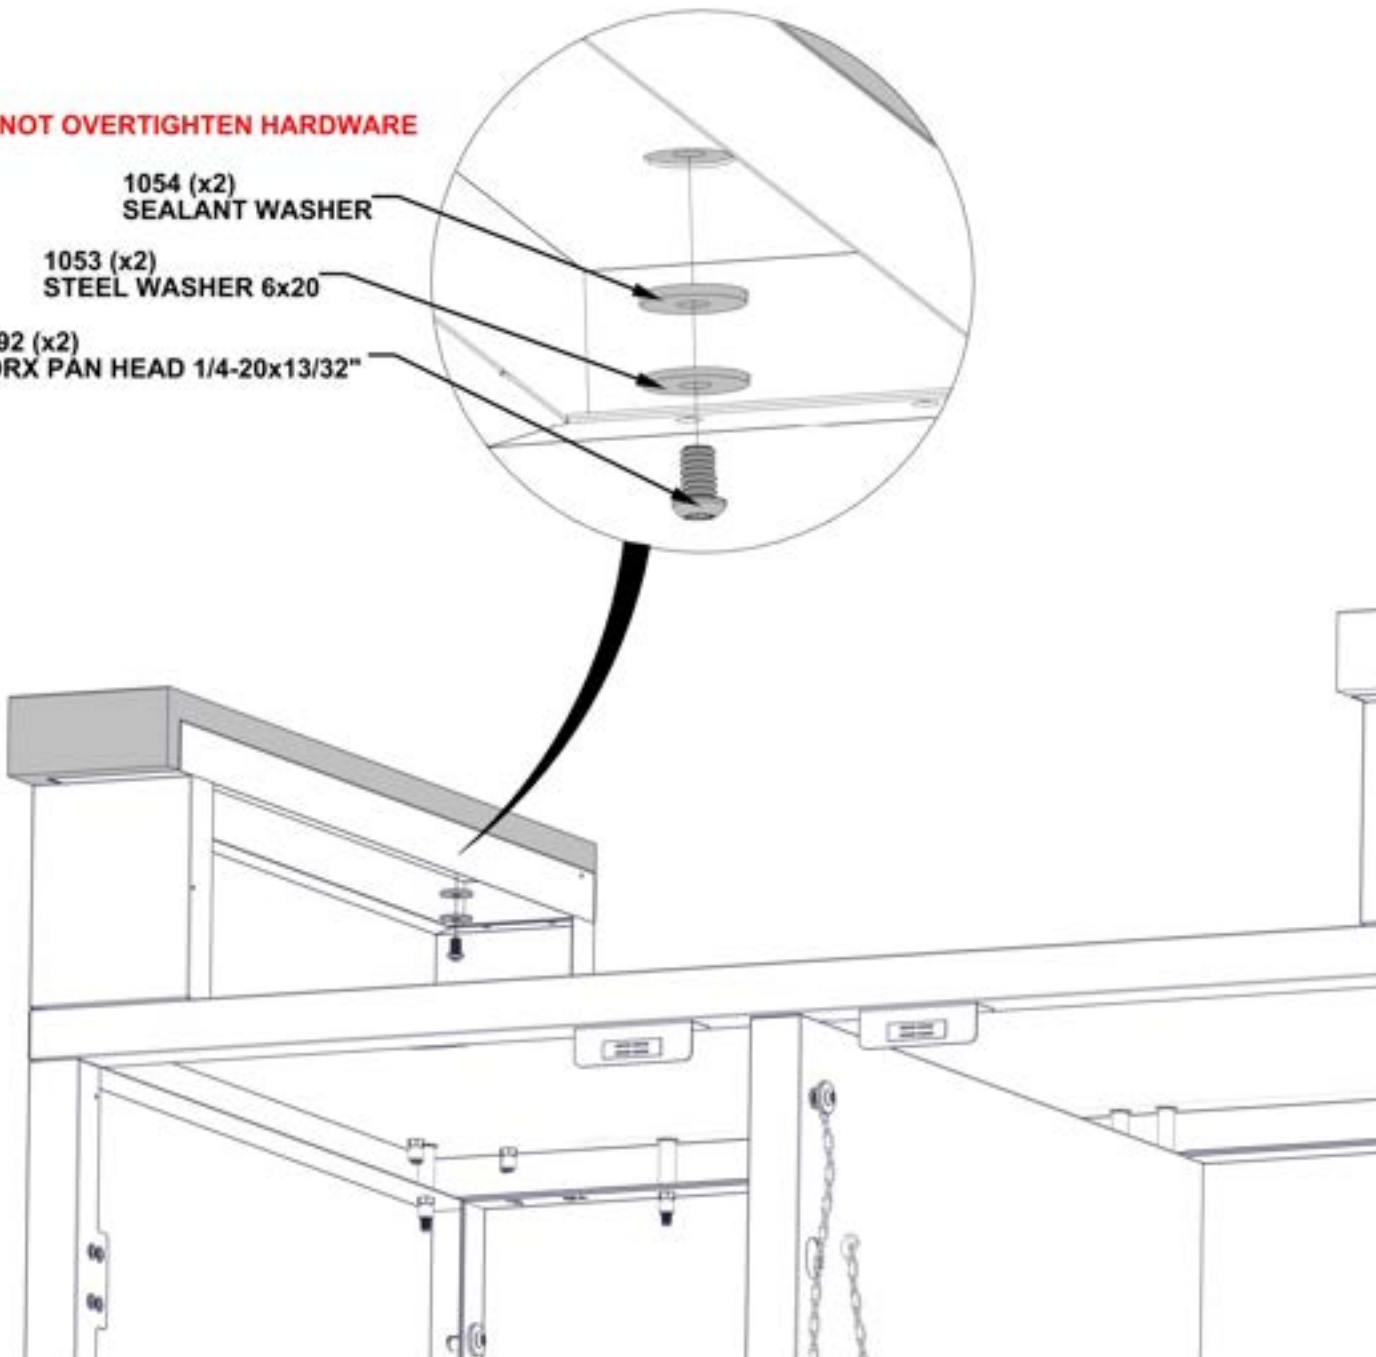

STEP 97A - KITCHEN TRASH CAN ASSEMBLY


Qty	PartNo	Description
6	H101289	PAN HEAD SCREW 8-32x1/2" SS



H3 TRASH CAN BRACKET ASSEMBLY - A4M03610
(x1) 18 1/16"x15 13/16"x (35x401.60x458)



A11 TRIANGLE PANEL - A4M03086
(x2) 13/16"x13 3/4"x13 3/4" (20x350x350)

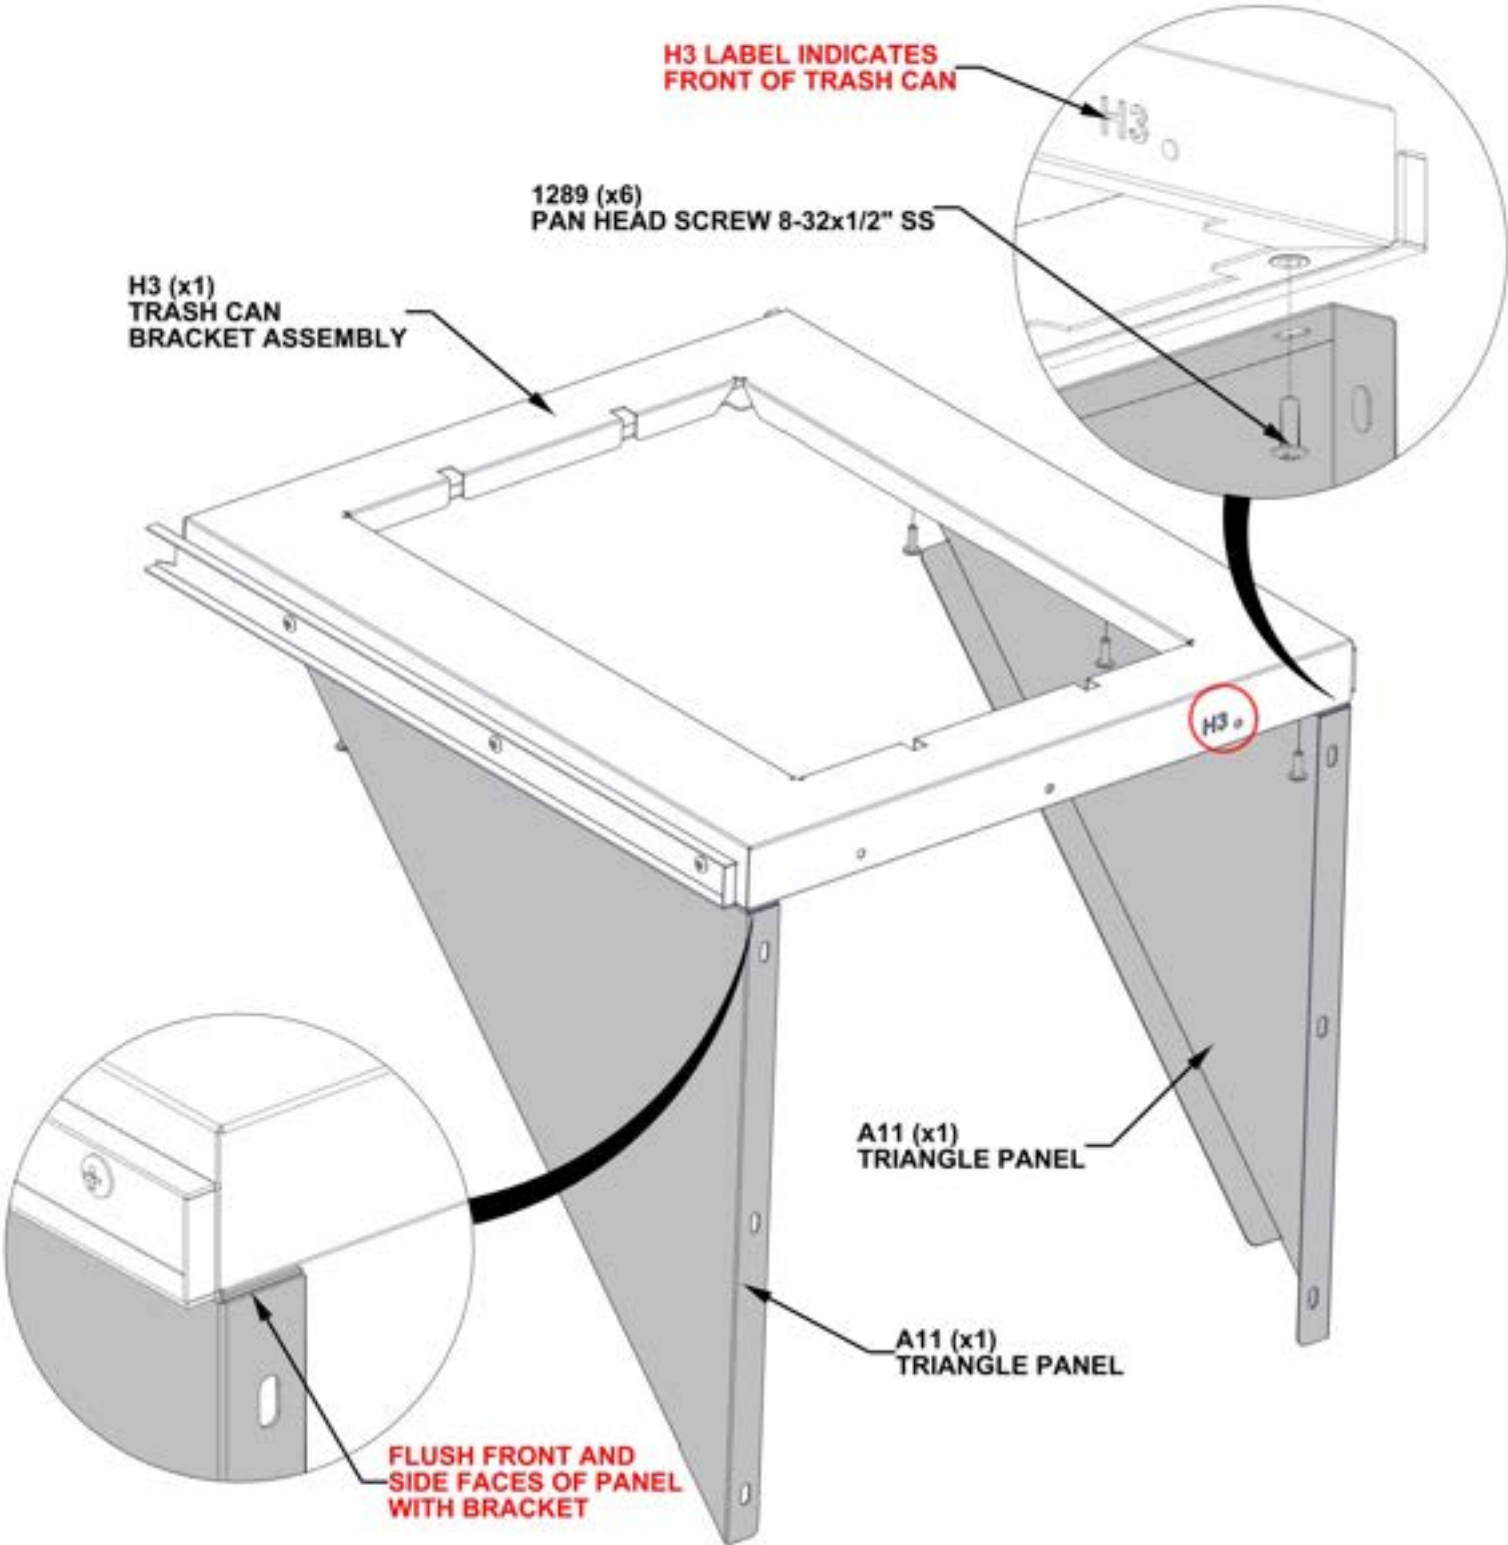


STEP 97B - KITCHEN TRASH CAN ASSEMBLY



Qty	PartNo	Description
9	H101289	PAN HEAD SCREW 8-32x1/2" SS

D9 TRASH CAN PANEL ASSEMBLY - A4M03608
(x1) 22 1/4"x17 3/4"x15/16" (24.00x451.00x565.00)

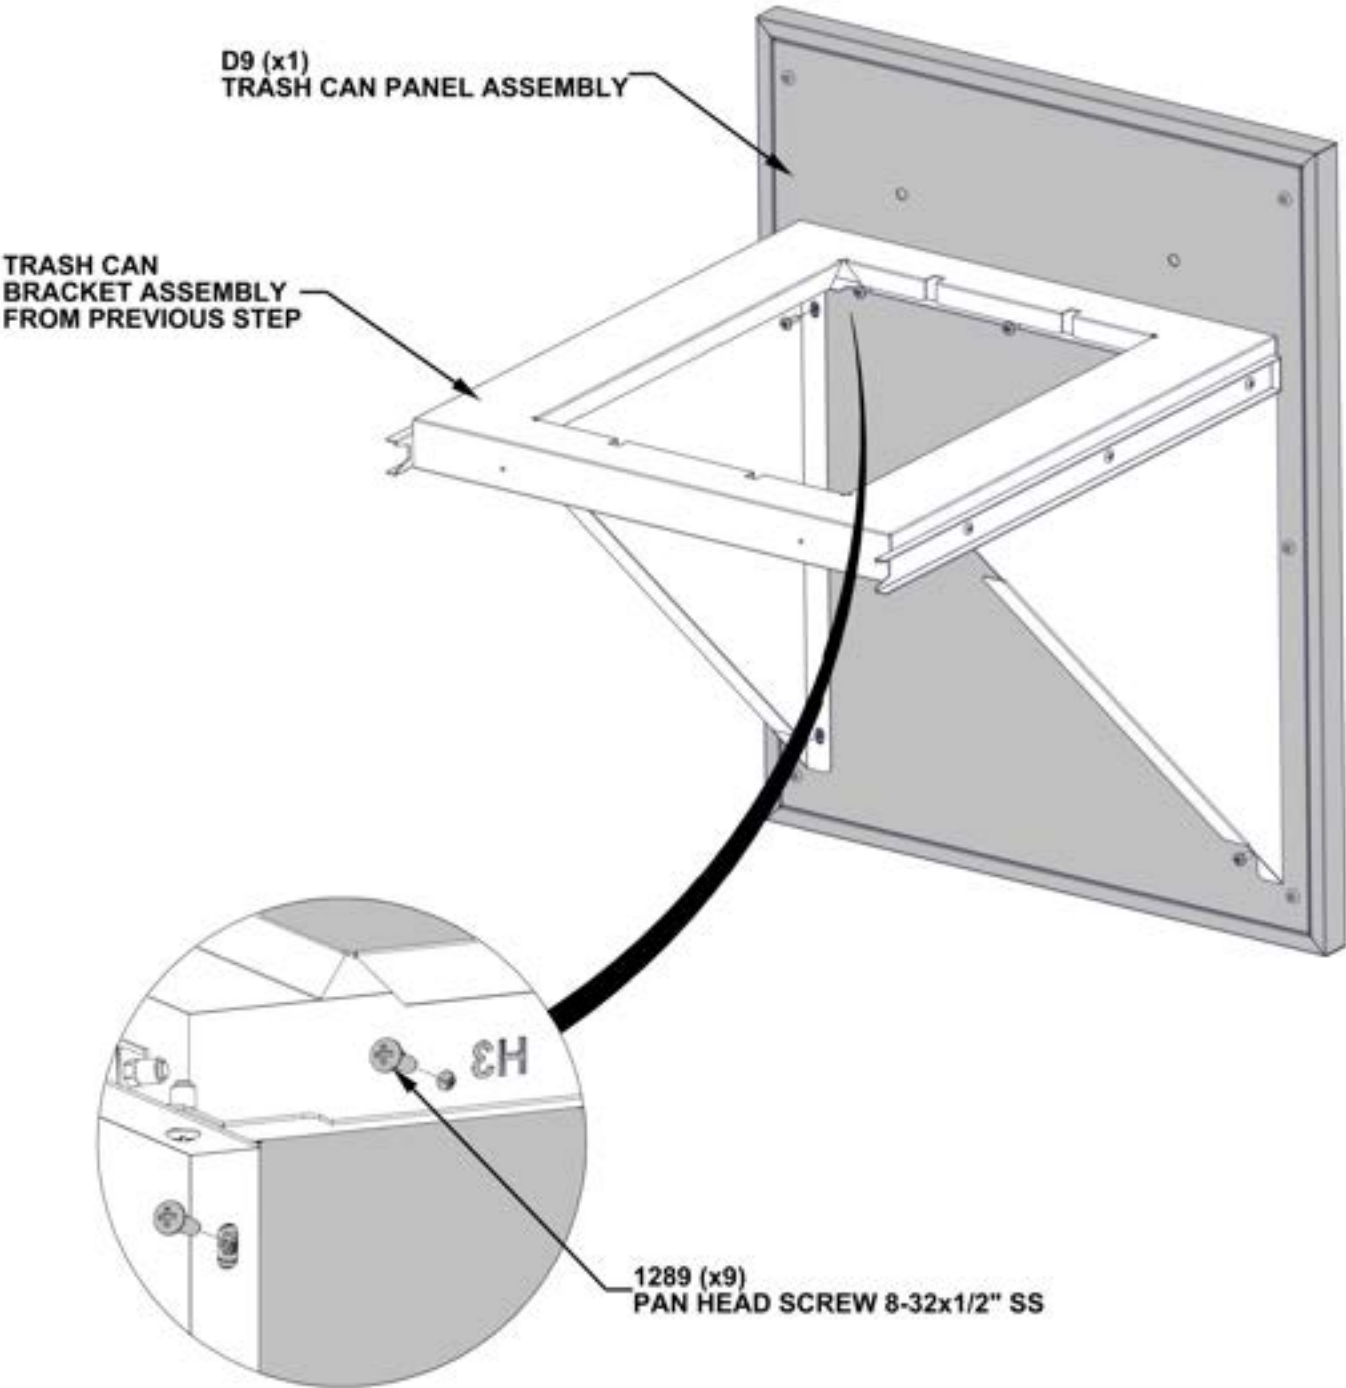


STEP 97C - KITCHEN TRASH CAN ASSEMBLY



Qty	PartNo	Description
2	H101307	SHOULDER BOLT 8-32x30mm SS

H2 STAINLESS STEEL HANDLE - A4M03024
(x1) 5/8"x1 9/16"x11 13/16" (16x40x300)

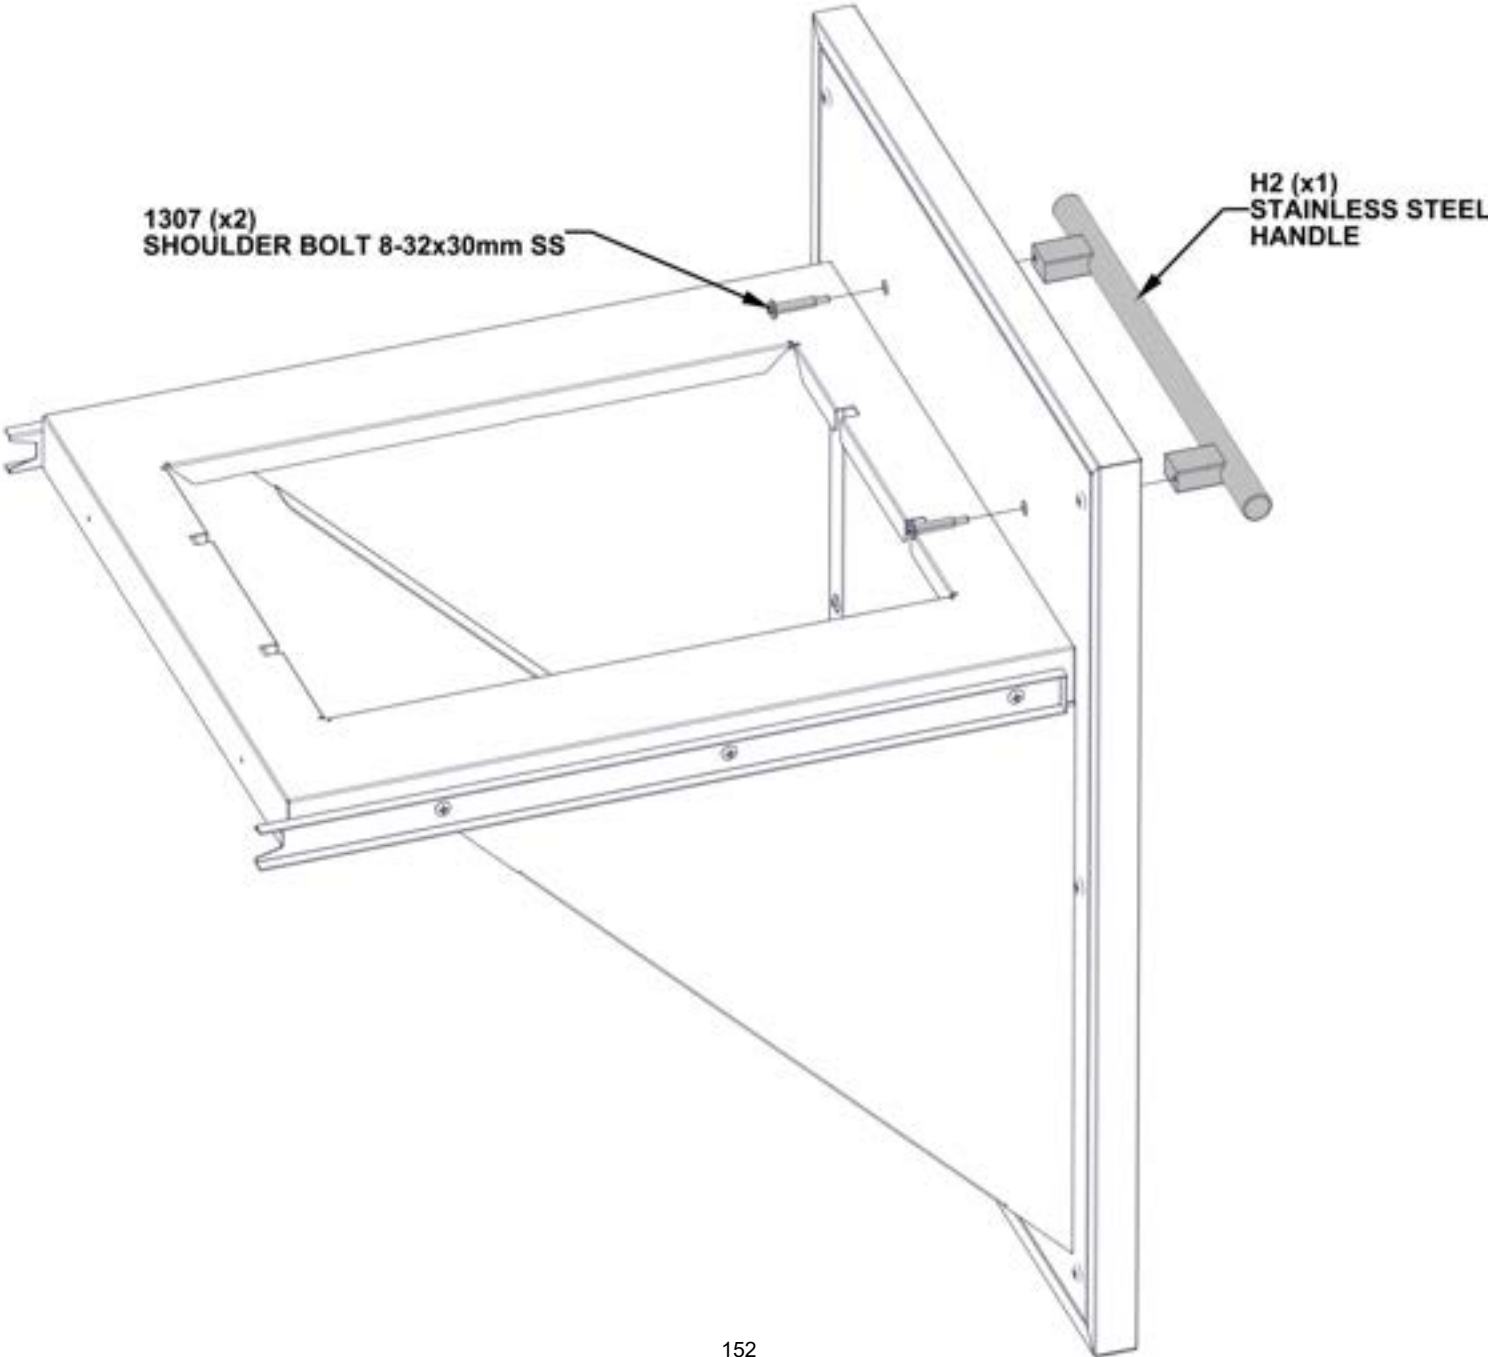


STEP 98 - KITCHEN TRASH CAN INSTALLATION




TRASH CANL ASSEMBLY
FROM STEP 97

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ATTACH TRASH CAN ASSEMBLY BY ALIGNING BOTH ENDS OF FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.
- PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.

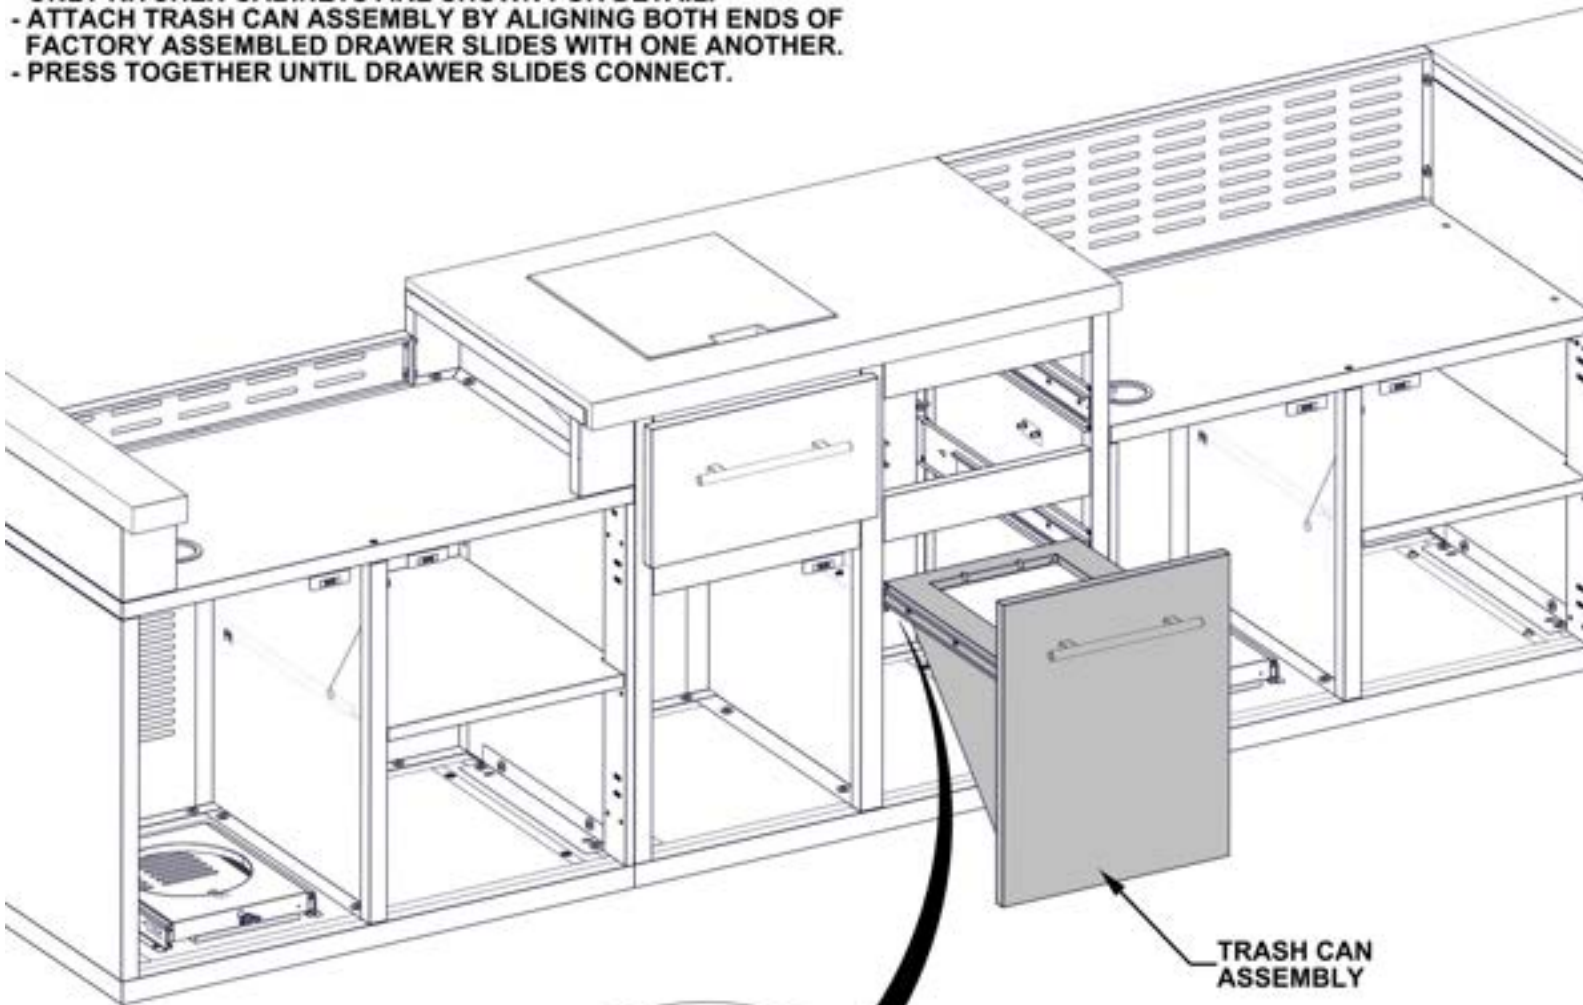

TRASH CAN
ASSEMBLY

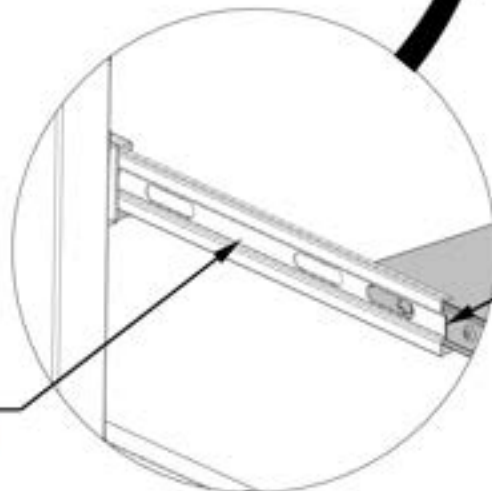

ALIGN DRAWER SLIDES
ON BOTH SIDES OF TRASH
CAN HOLDER


SLIDE INNER RACE
OF DRAWER SLIDE OUT
BEFORE ATTACHING SLIDES

STEP 99A - KITCHEN DRAWER ASSEMBLY


Qty	PartNo	Description
9	H101289	PAN HEAD SCREW 8-32x1/2" SS




D4 SINK CABINET DRAWER BODY ASSEMBLY - A4M03571
(x1) 22 1/4"x16 1/16"x6 7/16" (164.2x408.4x565.4)

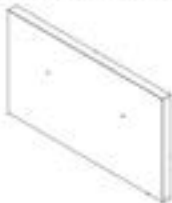

D3 SINK CABINET DRAWER PANEL ASSEMBLY - A4M03569
(x1) 17 3/4"x10 1/4"x15/16" (24x260x451)

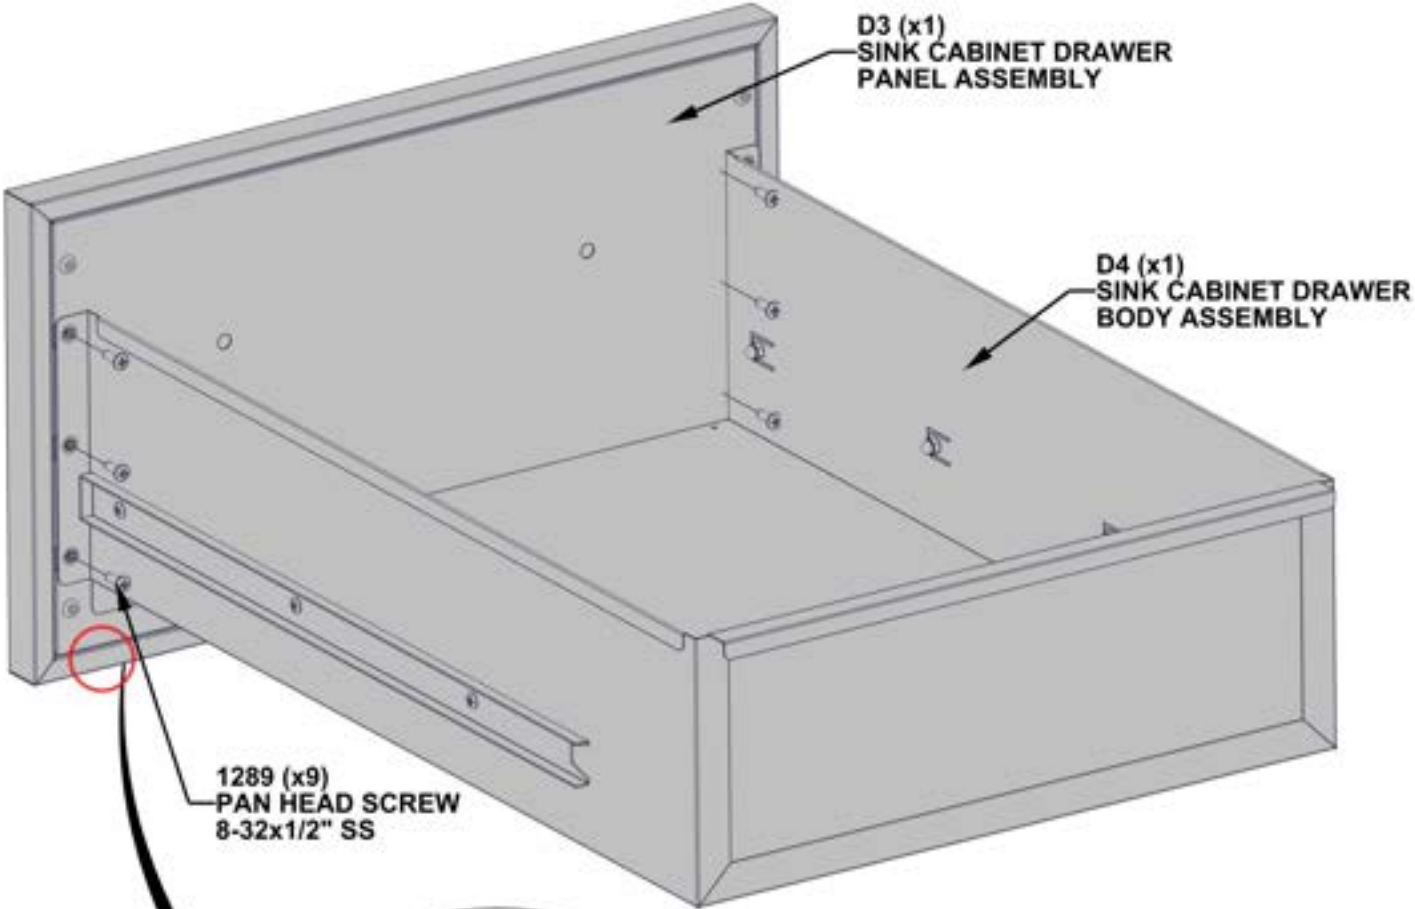

1289 (x9)
PAN HEAD SCREW
8-32x1/2" SS

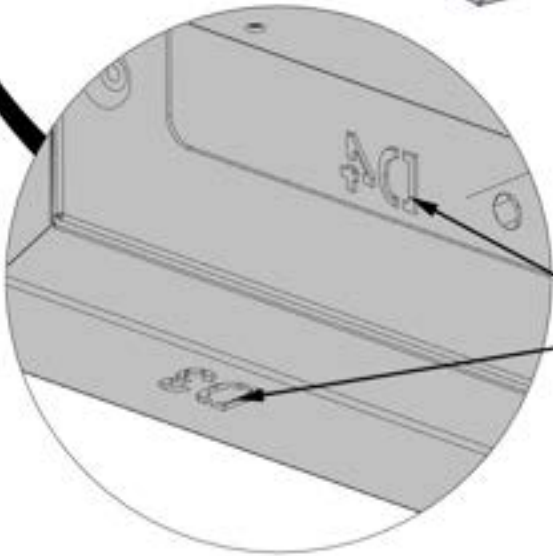

D3 AND D4 LABELS INDICATE
BOTTOM OF DRAWER

STEP 99B - KITCHEN DRAWER ASSEMBLY




Qty	PartNo	Description
2	H101307	SHOULDER BOLT 8-32x30mm SS

H2 STAINLESS STEEL HANDLE - A4M03024
(x1) 5/8"x1 9/16"x11 13/16" (16x40x300)

1307 (x2)
SHOULDER BOLT 8-32x30mm SS

H2 (x1)
STAINLESS STEEL
HANDLE

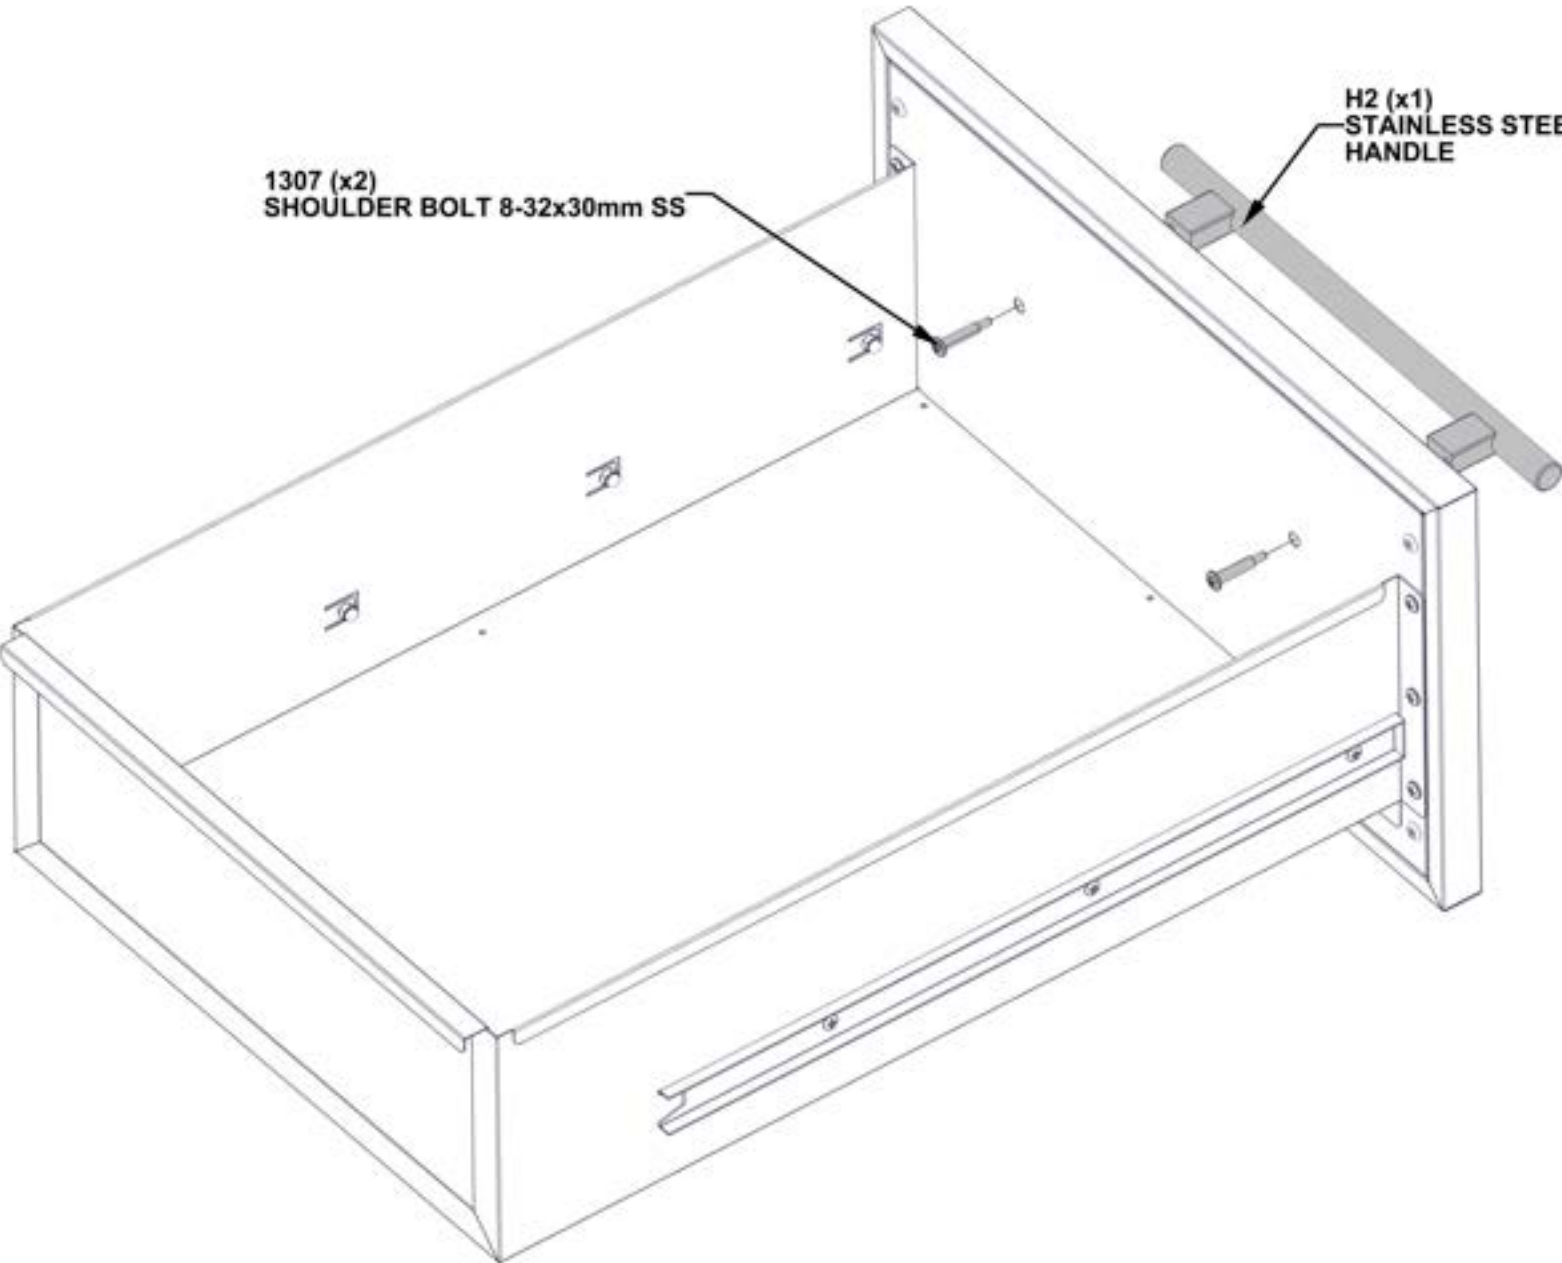


STEP 100 - KITCHEN DRAWER INSTALLATION



DRAWER ASSEMBLY
FROM STEP 99

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ATTACH DRAWER ASSEMBLY BY ALIGNING BOTH ENDS OF FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.
- PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.

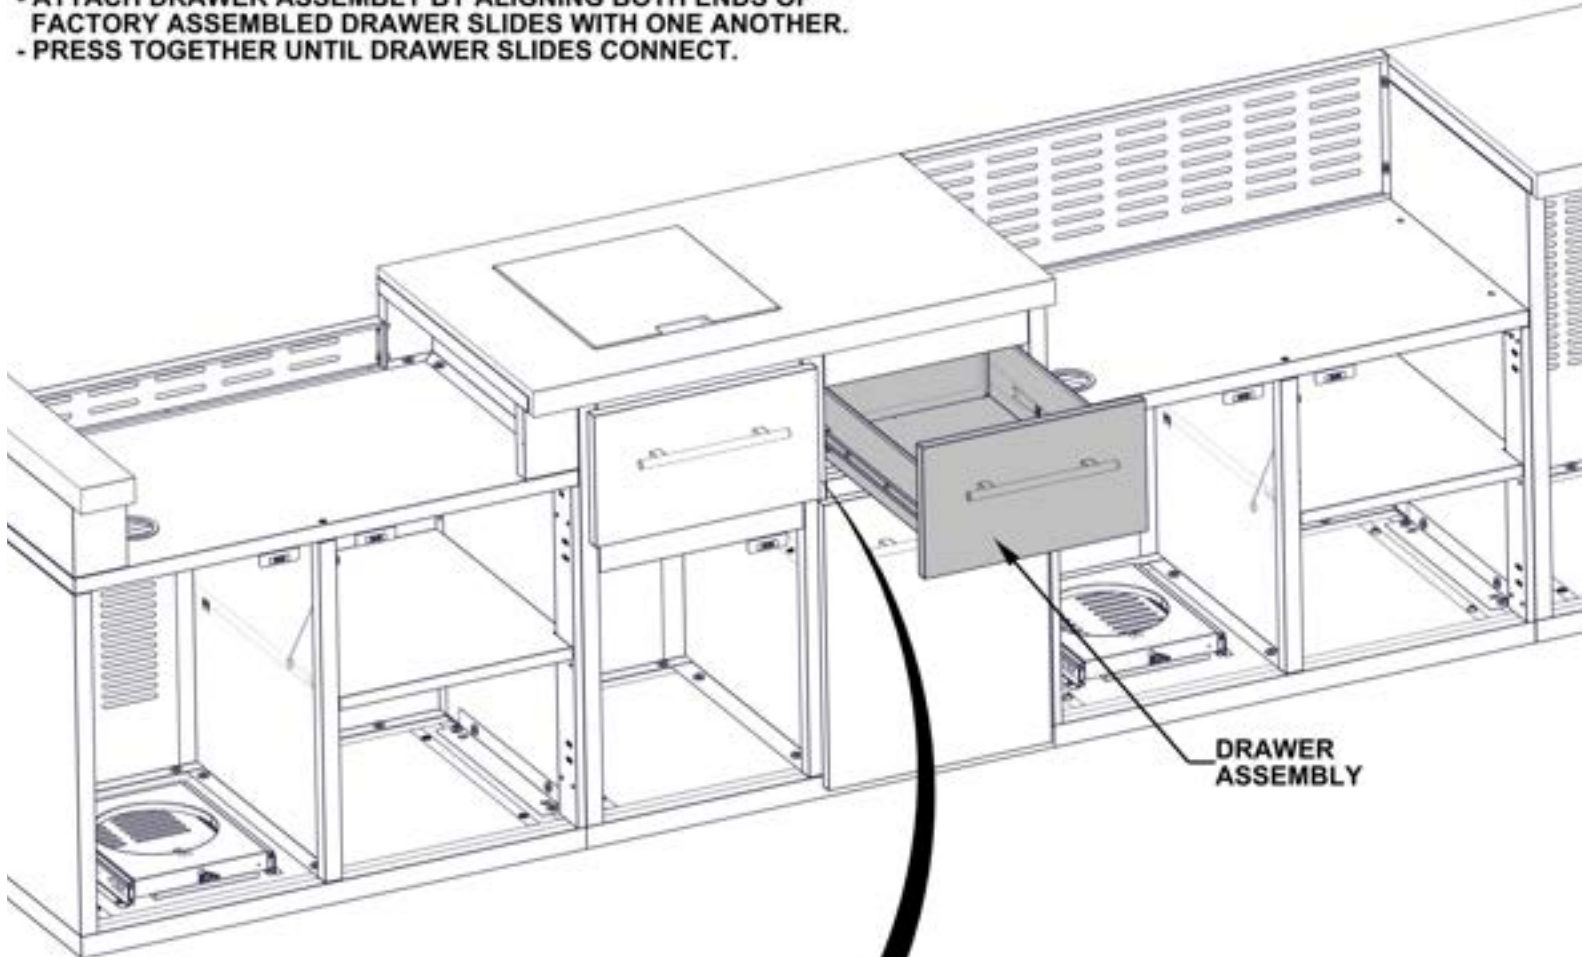

DRAWER
ASSEMBLY

SLIDE INNER RACE
OF DRAWER SLIDE OUT
BEFORE ATTACHING SLIDES

ALIGN DRAWER SLIDES
ON BOTH SIDES OF DRAWER

STEP 101A - DOOR ASSEMBLY

Qty	PartNo	Description
20	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW



D1 PIZZA OVEN CABINET DOOR ASSEMBLY L - A4M03546
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)



D2 PIZZA OVEN CABINET DOOR ASSEMBLY R - A4M03555
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)



D6 SINK CABINET DOOR ASSEMBLY L - A4M03577
(x1) 22 1/4"x17 13/16"x15/16" (24x452x565)



D7 GRILL CABINET DOOR ASSEMBLY L - A4M03587
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)




D8 GRILL CABINET DOOR ASSEMBLY R - A4M03590
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)



A4M03025 FULL OVERLAY HINGE
(x10)

- INSTALL CABINET HINGES TO THE FIVE DOORS.

DO NOT OVERTIGHTEN HARDWARE

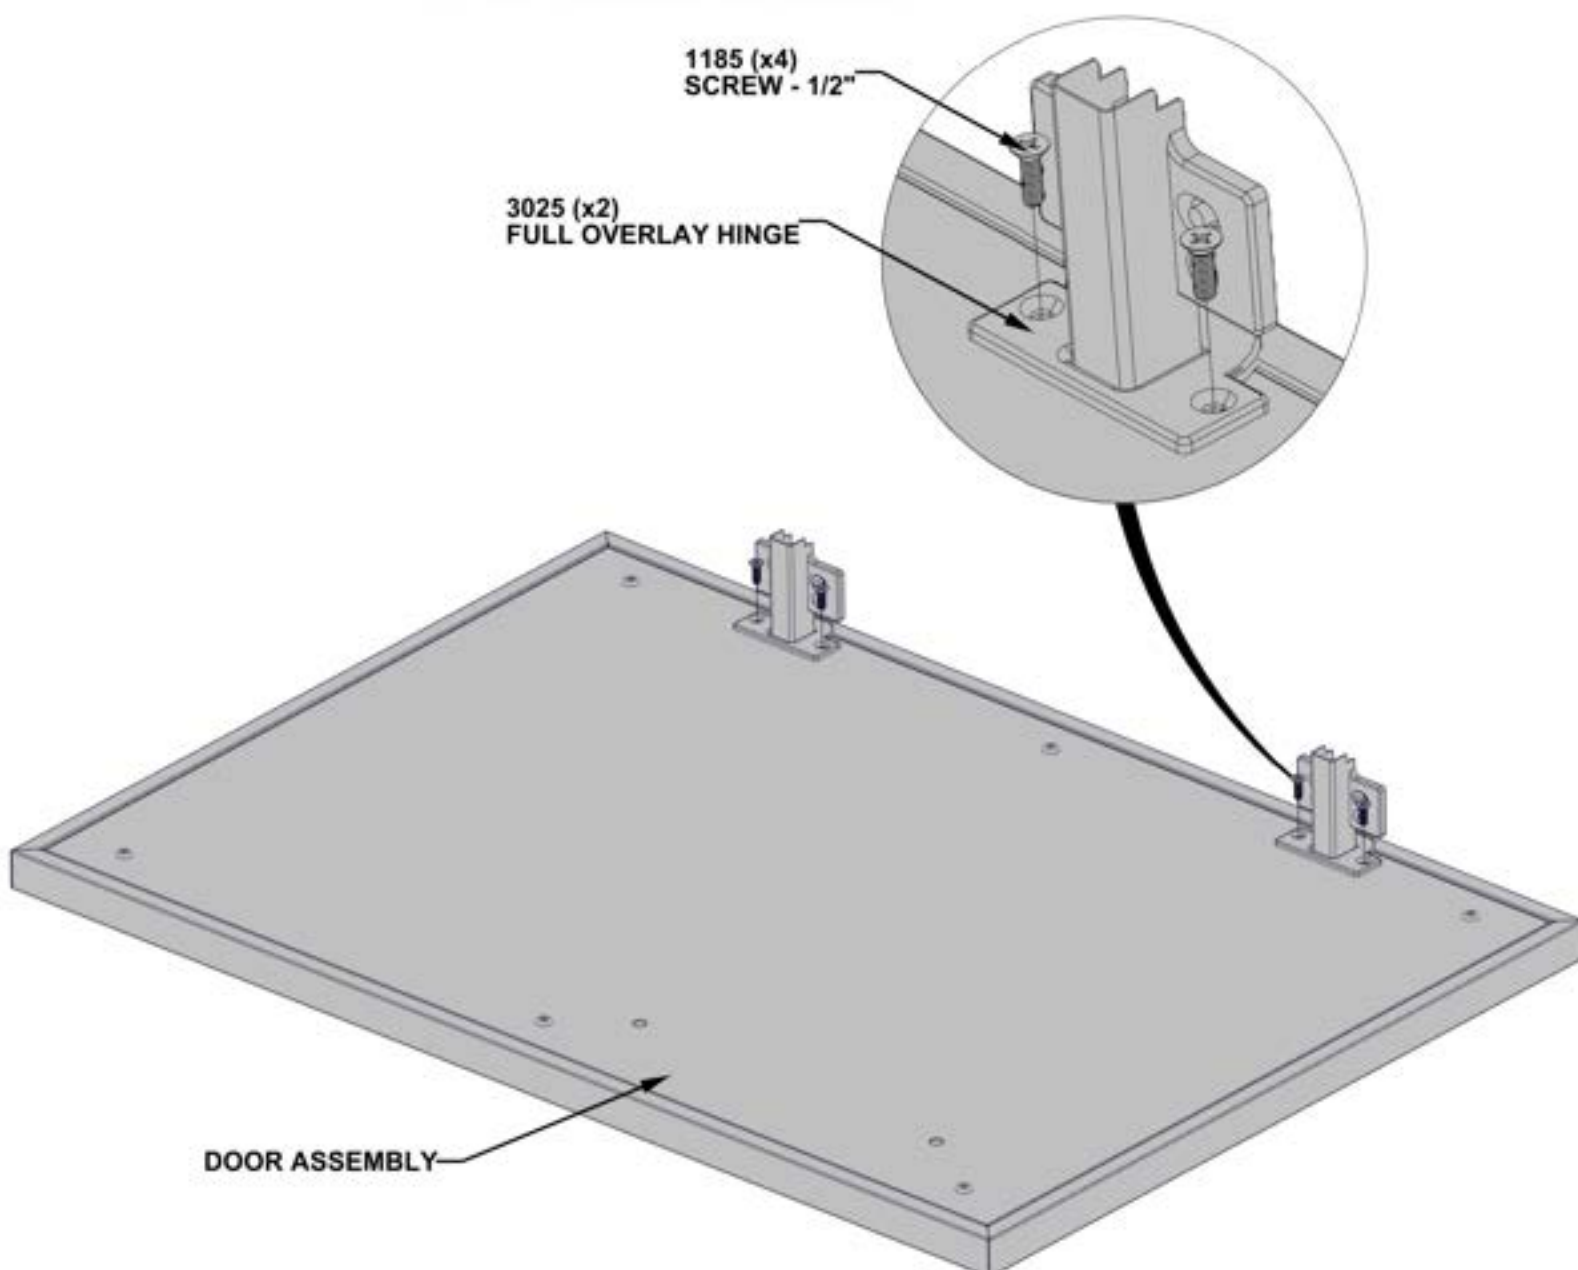


STEP 101B - DOOR ASSEMBLY

Qty	PartNo	Description
10	H101307	SHOULDER BOLT 8-32x30mm SS



H2 STAINLESS STEEL HANDLE - A4M03024
(x5) 5/8"x1 9/16"x11 13/16" (16x40x300)

- INSTALL CABINET HANDLES ON THE FIVE DOORS FROM PREVIOUS STEP.

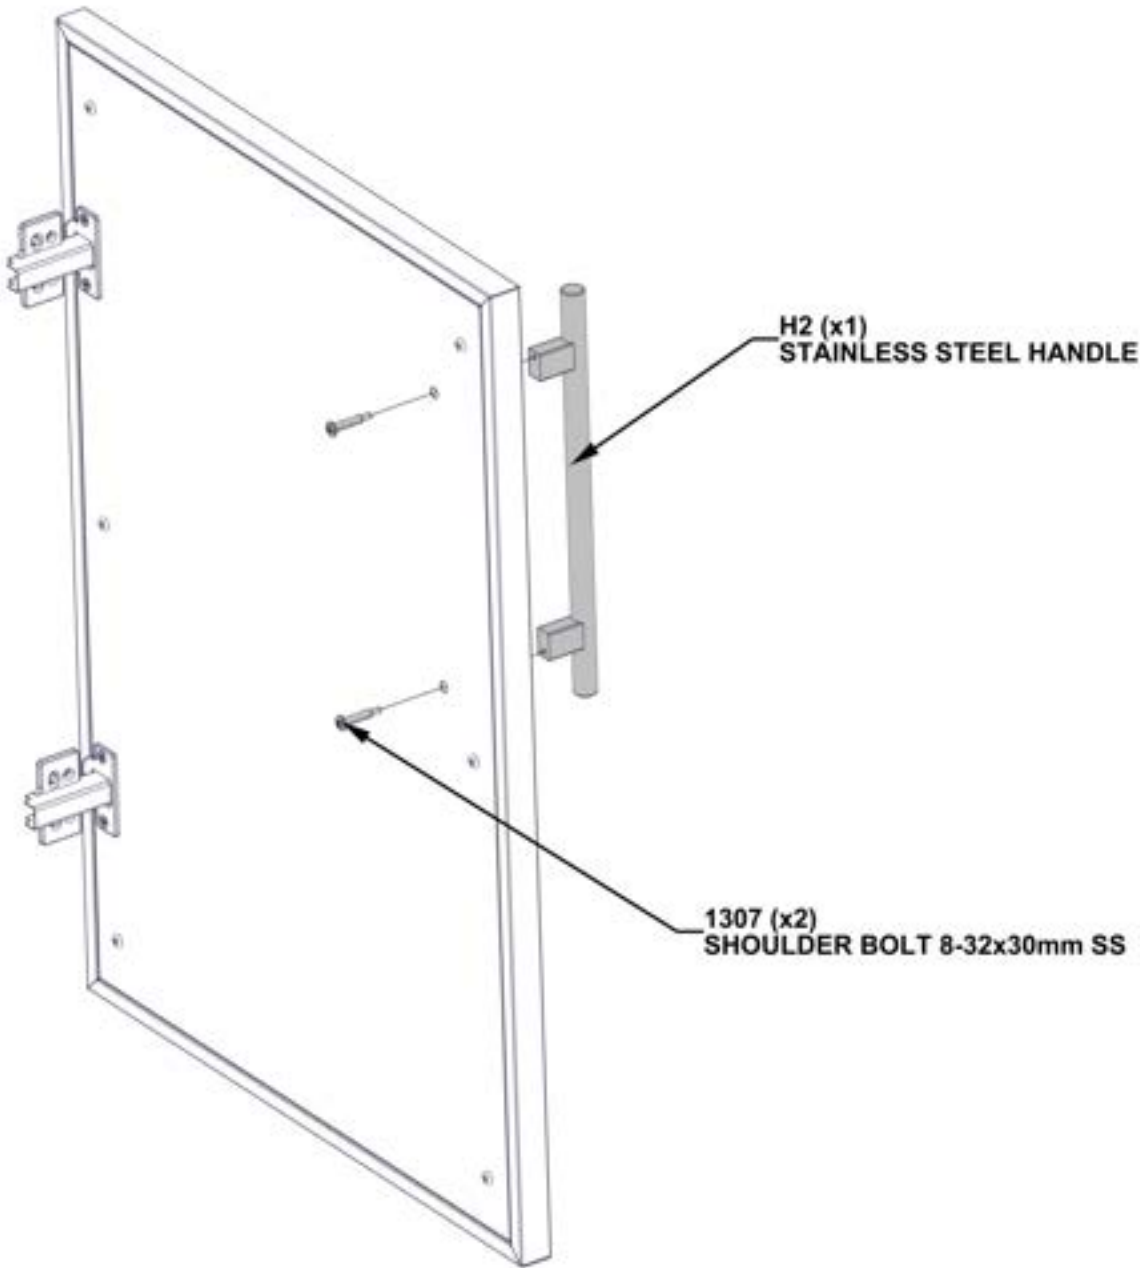


STEP 102 - CABINET DOOR ATTACHMENT




D1 PIZZA OVEN CABINET DOOR ASSEMBLY L - A4M03546
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)

Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

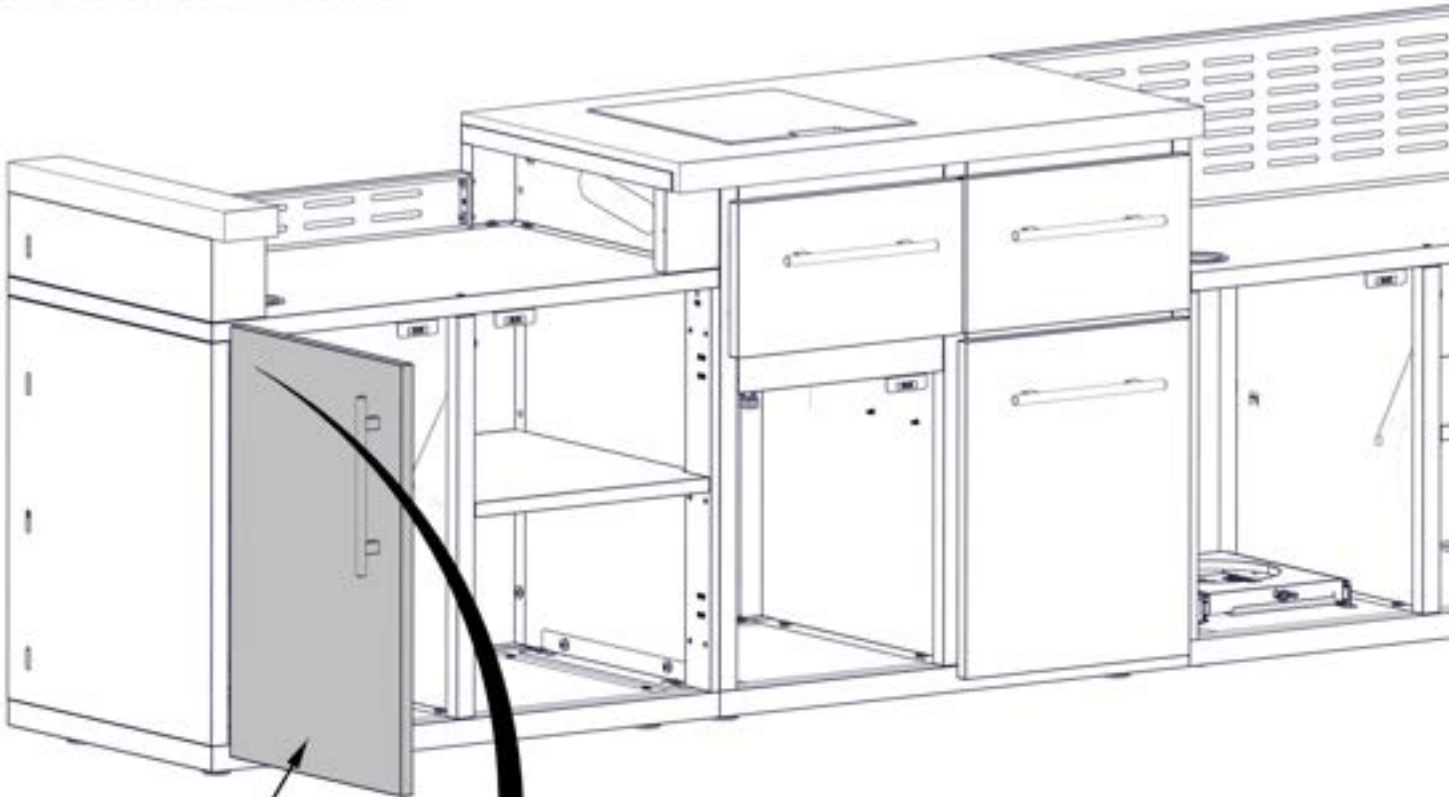

D1 (x1)
PIZZA OVEN CABINET
DOOR ASSEMBLY

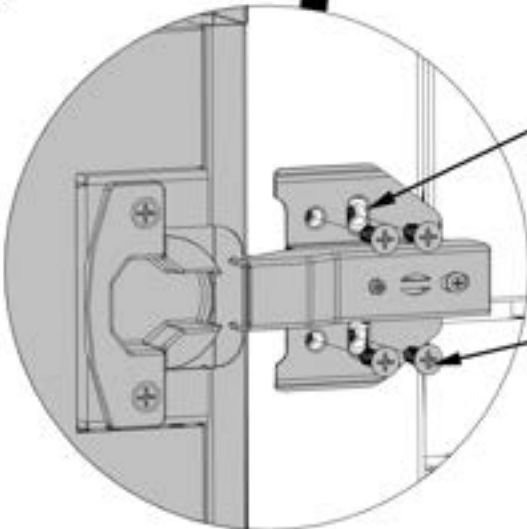

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

DO NOT OVERTIGHTEN HARDWARE

1185 (x8)
SCREW - 1/2"


STEP 103 - CABINET DOOR ATTACHMENT



Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D2 PIZZA OVEN CABINET DOOR ASSEMBLY R - A4M03555
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

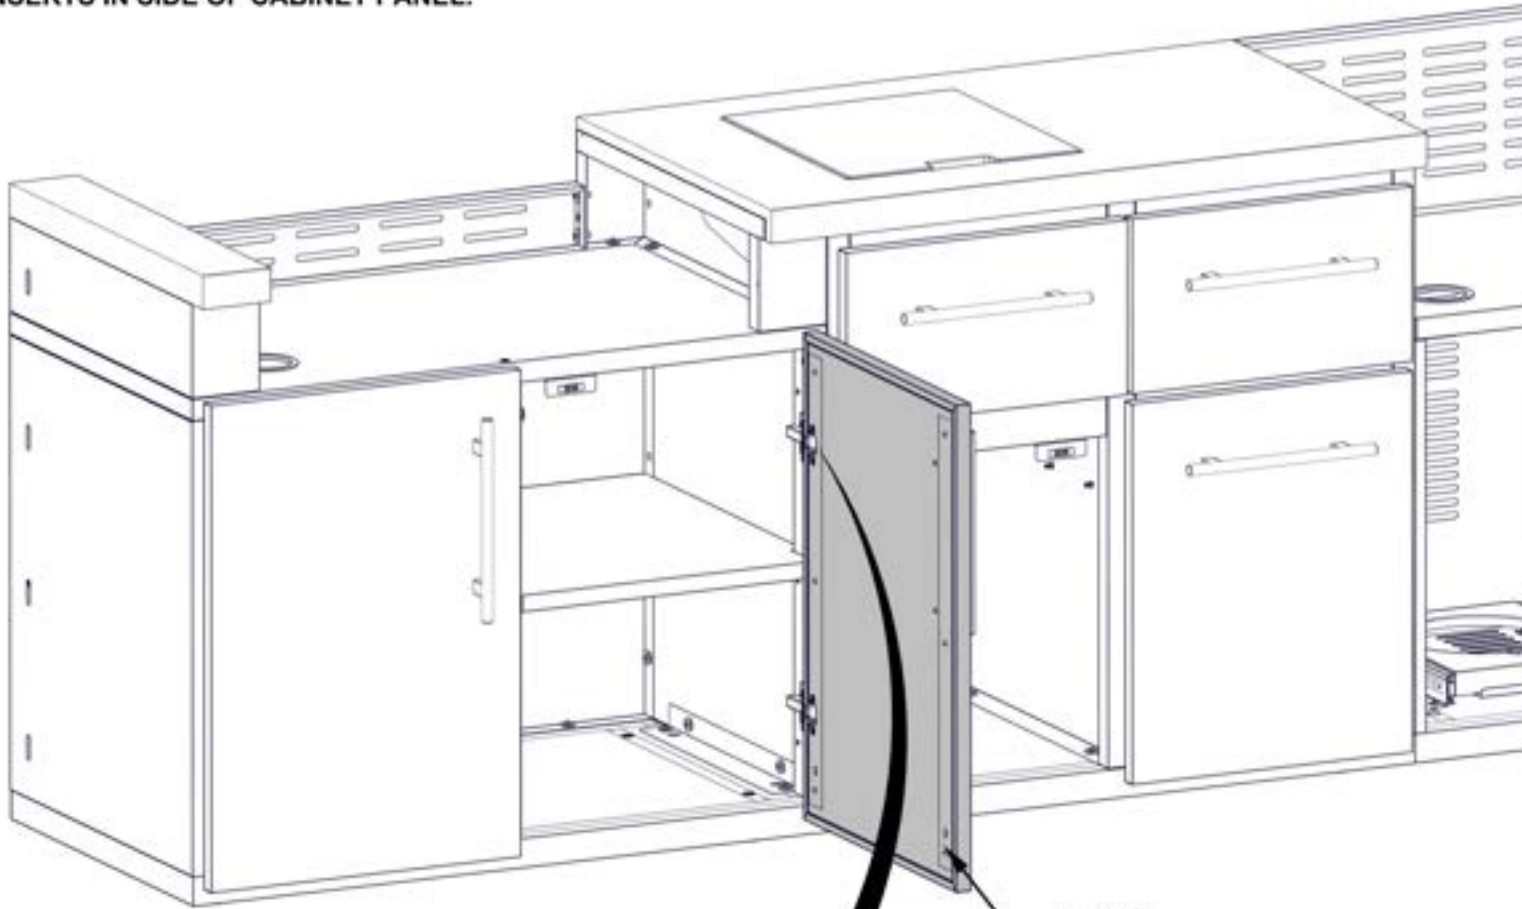


D2 (x1)
PIZZA OVEN CABINET
DOOR ASSEMBLY R

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

DO NOT OVERTIGHTEN HARDWARE

1185 (x8)
SCREW - 1/2"

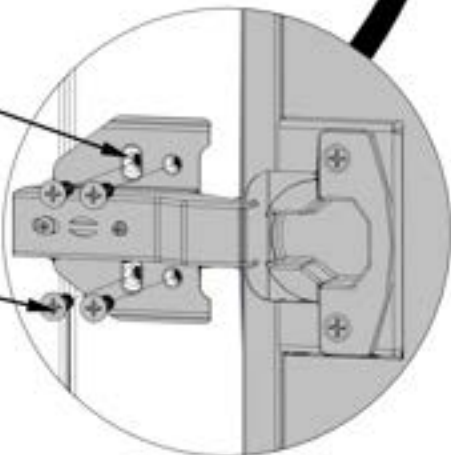



STEP 104 - CABINET DOOR ATTACHMENT



Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D6 SINK CABINET DOOR ASSEMBLY L - A4M03577
(x1) 22 1/4"x17 13/16"x15/16" (24x452x565)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

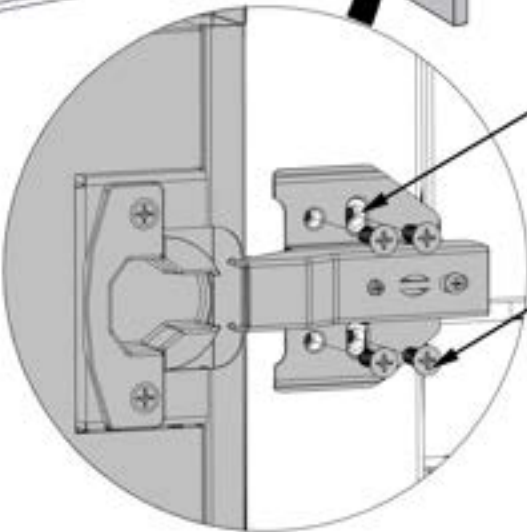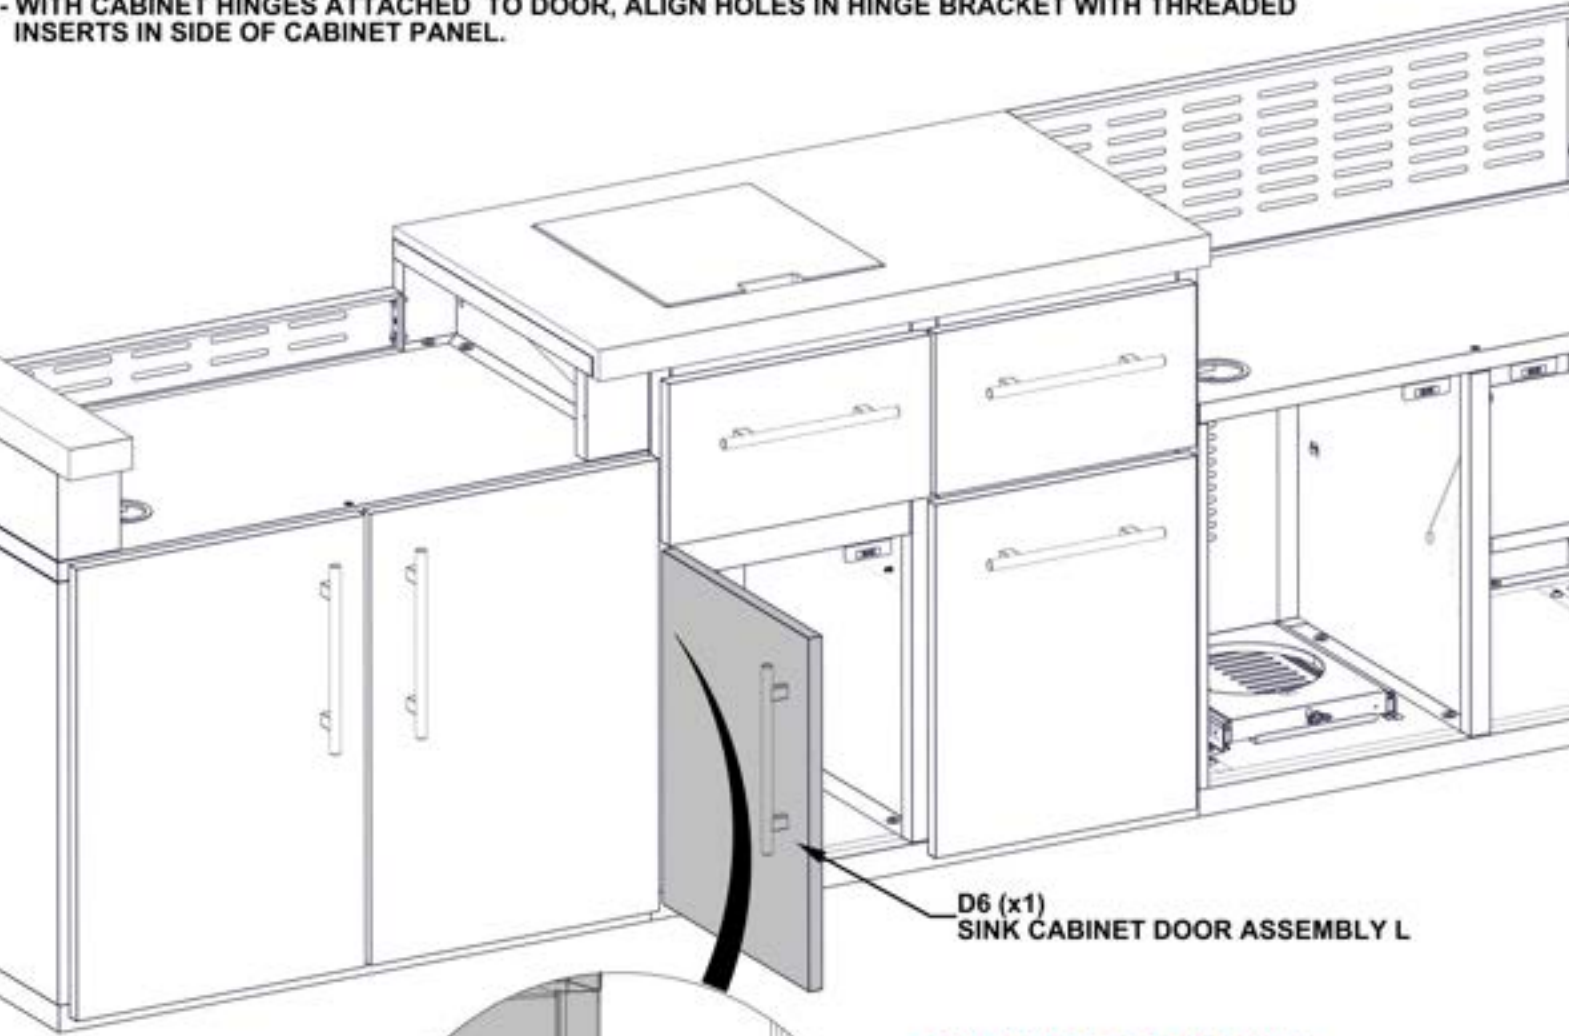

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

DO NOT OVERTIGHTEN HARDWARE

1185 (x8)
SCREW - 1/2"



STEP 105 - CABINET DOOR ATTACHMENT



Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D7 GRILL CABINET DOOR ASSEMBLY L - A4M03587
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

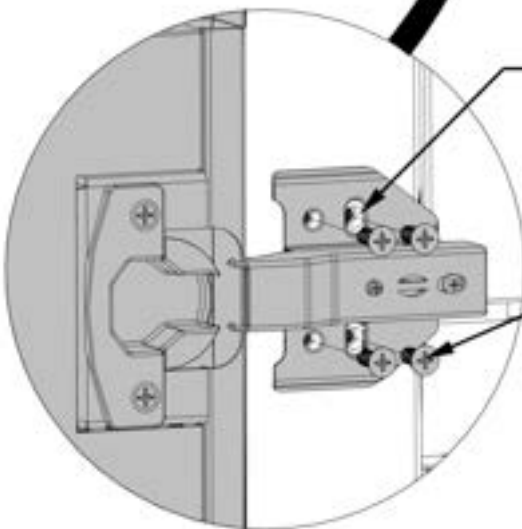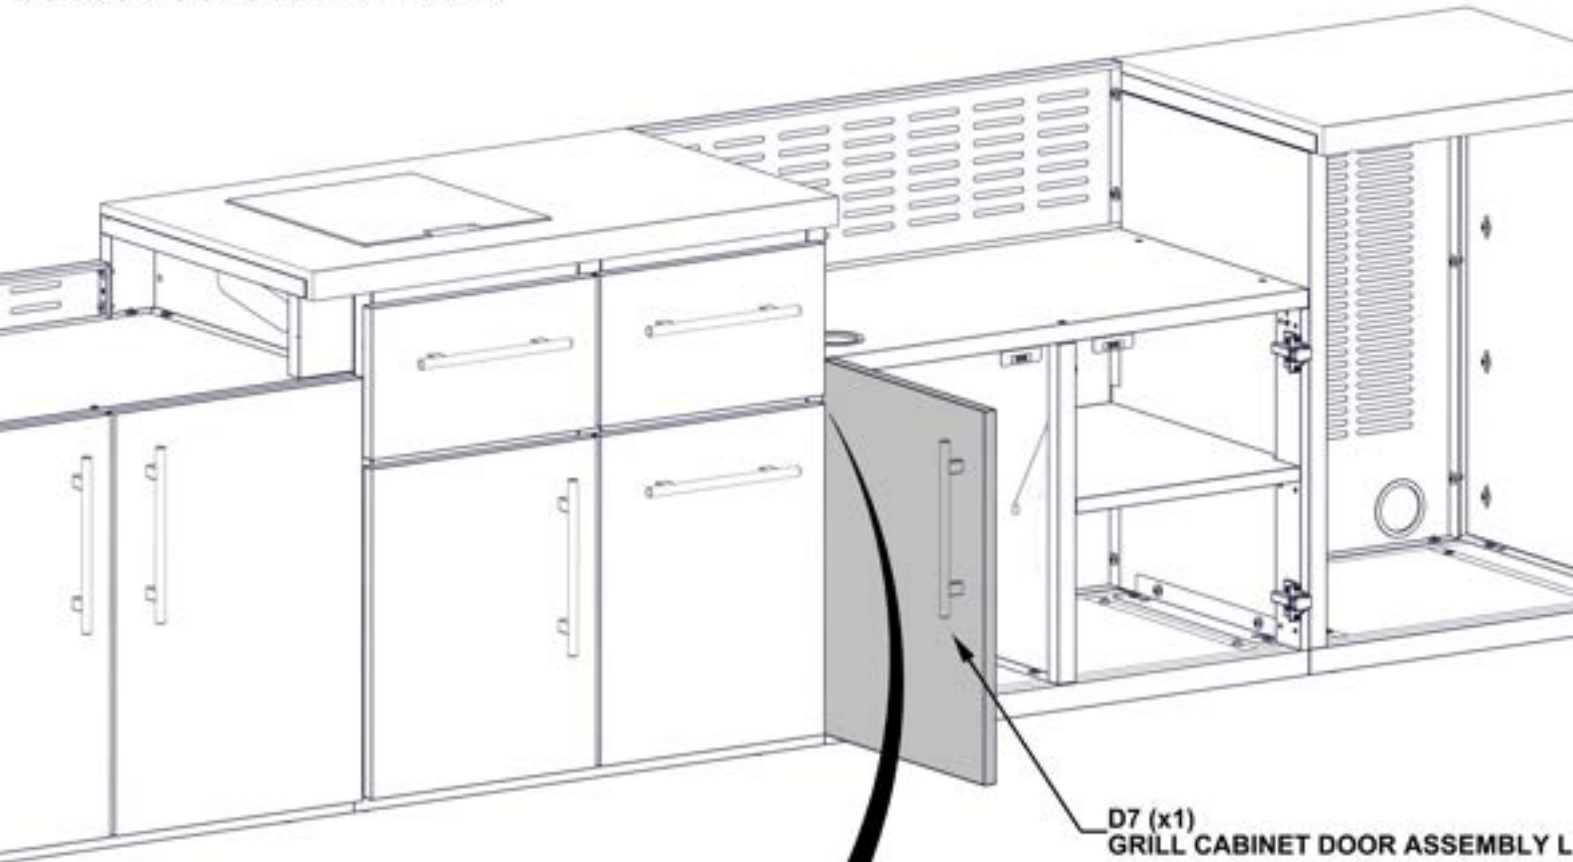

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

DO NOT OVERTIGHTEN HARDWARE

1185 (x8)
SCREW - 1/2"


STEP 106 - CABINET DOOR ATTACHMENT



Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D8 GRILL CABINET DOOR ASSEMBLY R - A4M03590
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

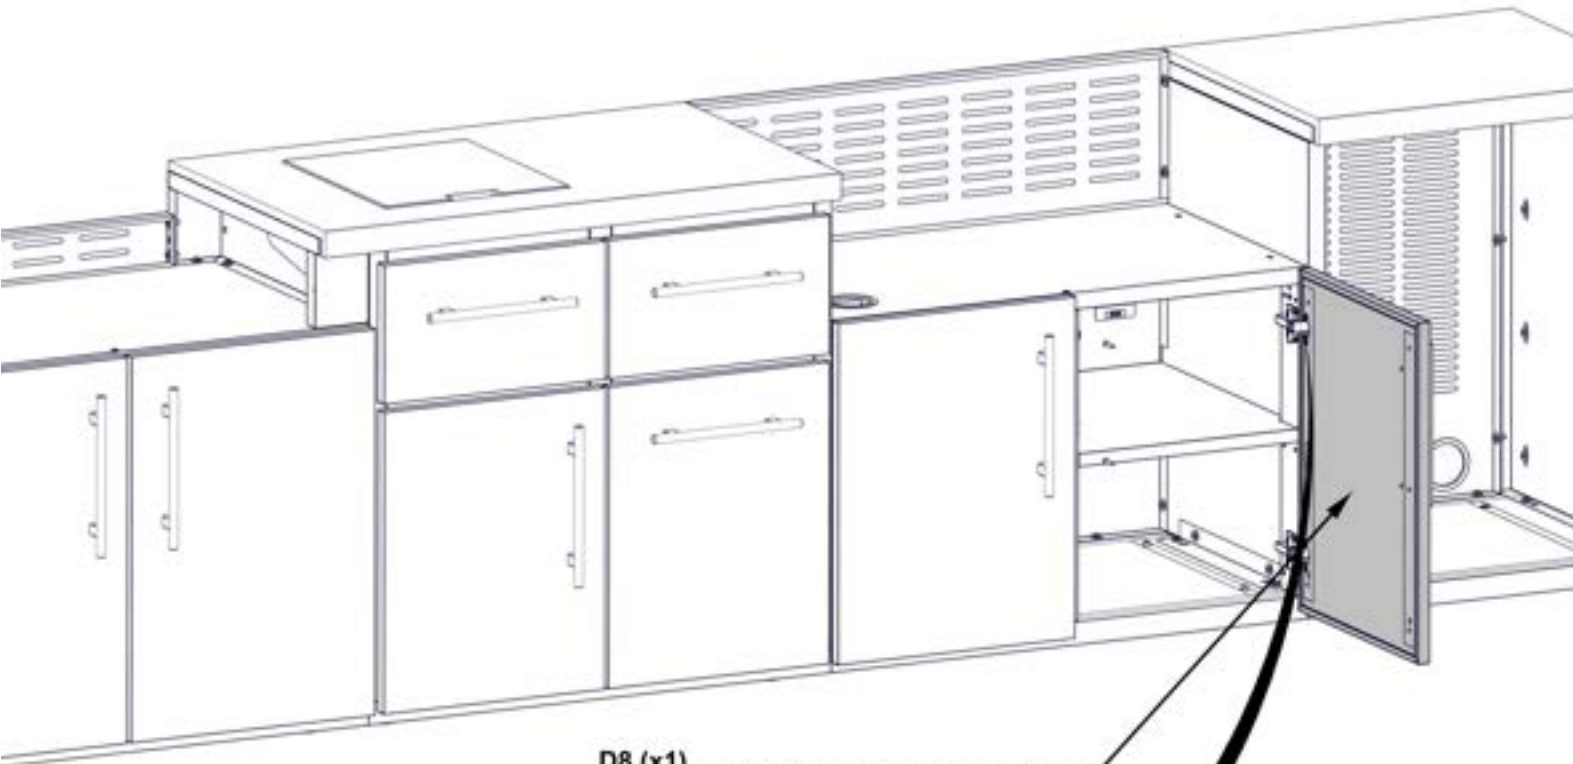


D8 (x1)
GRILL CABINET DOOR ASSEMBLY R


ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

DO NOT OVERTIGHTEN HARDWARE

1185 (x8)
SCREW - 1/2"

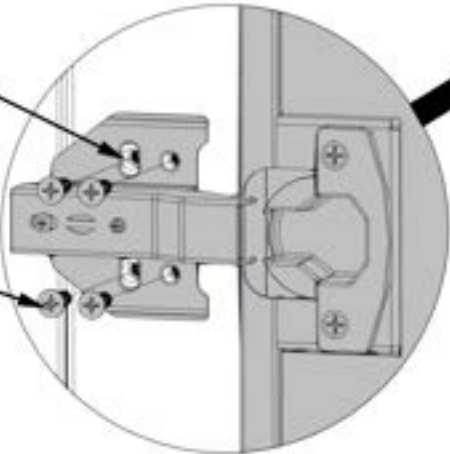


STEP 107 - BAR CABINET ASSEMBLY

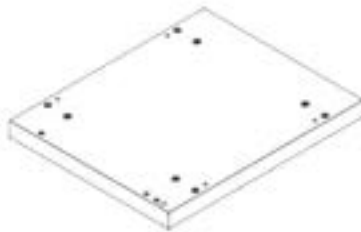

F5 FLOOR PANEL ASSEMBLY - A4M03611
(x1) 23 3/8"x19 1/8"x2 5/8" (66x486x594)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- POSITION FLOOR PANEL AS SHOWN BELOW.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.

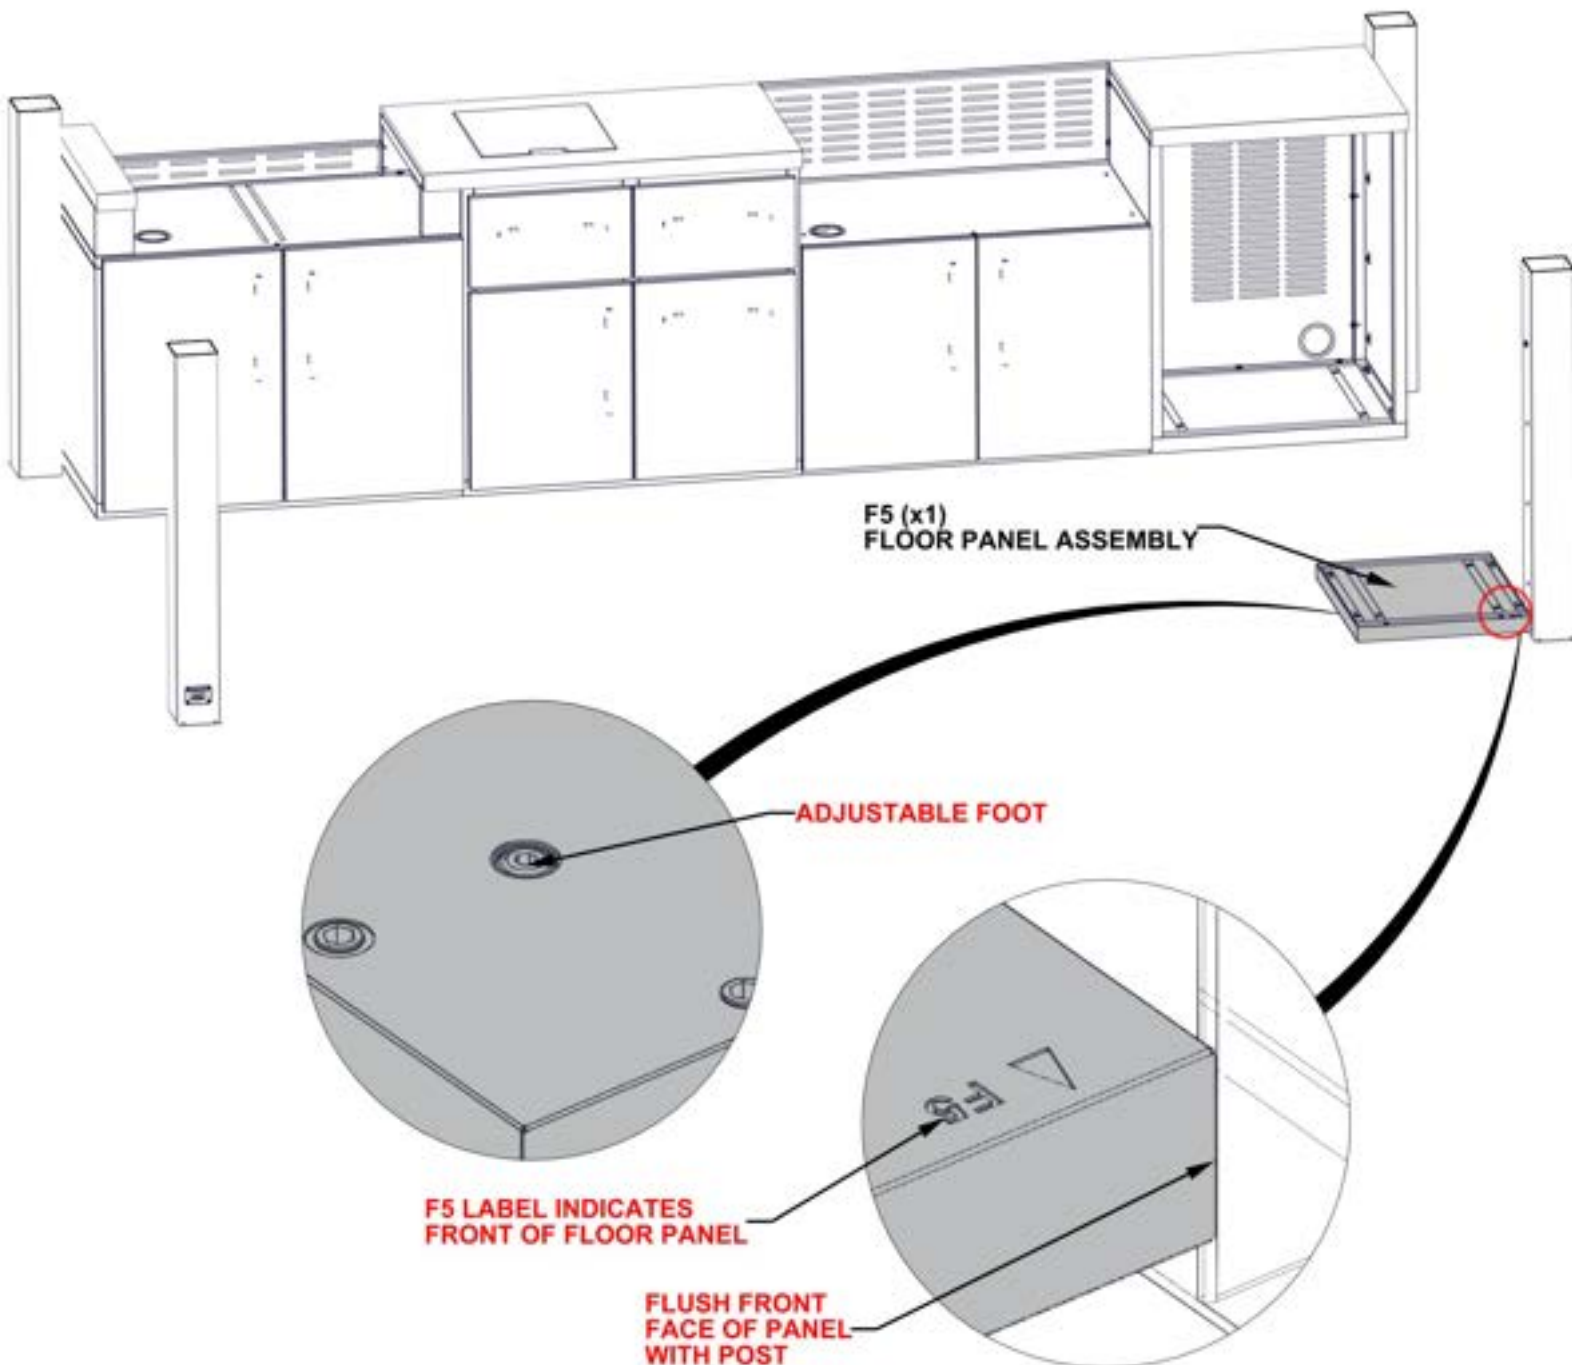

S10 SIDE PANEL ASSEMBLY - A4M03613
(x1) 33 3/8"x23 3/8"x1 15/16" (50x594x848.2)

A close-up view of the S10 sensor unit. A black arrow points to the 'S10' label on the side of the unit. Another black arrow points to a screw on the front face of the unit. A red arrow points to the 'S10' label. A red arrow points to the screw on the front face of the unit.

**SLOTS IN SIDE PANEL
WILL ALIGN WITH
THREADED INSERTS
IN FRONT POST**

1202 (x2)
-TORX PAN HEAD
1/4-20x3/4 ASSY

EN ONLY

N HEAD ASSY


S10 (x1) SIDE PANEL ASSEMBLY

FLUSH FRONT FACE OF SIDE PANEL WITH FLOOR PANEL

STEP 108B - BAR CABINET ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

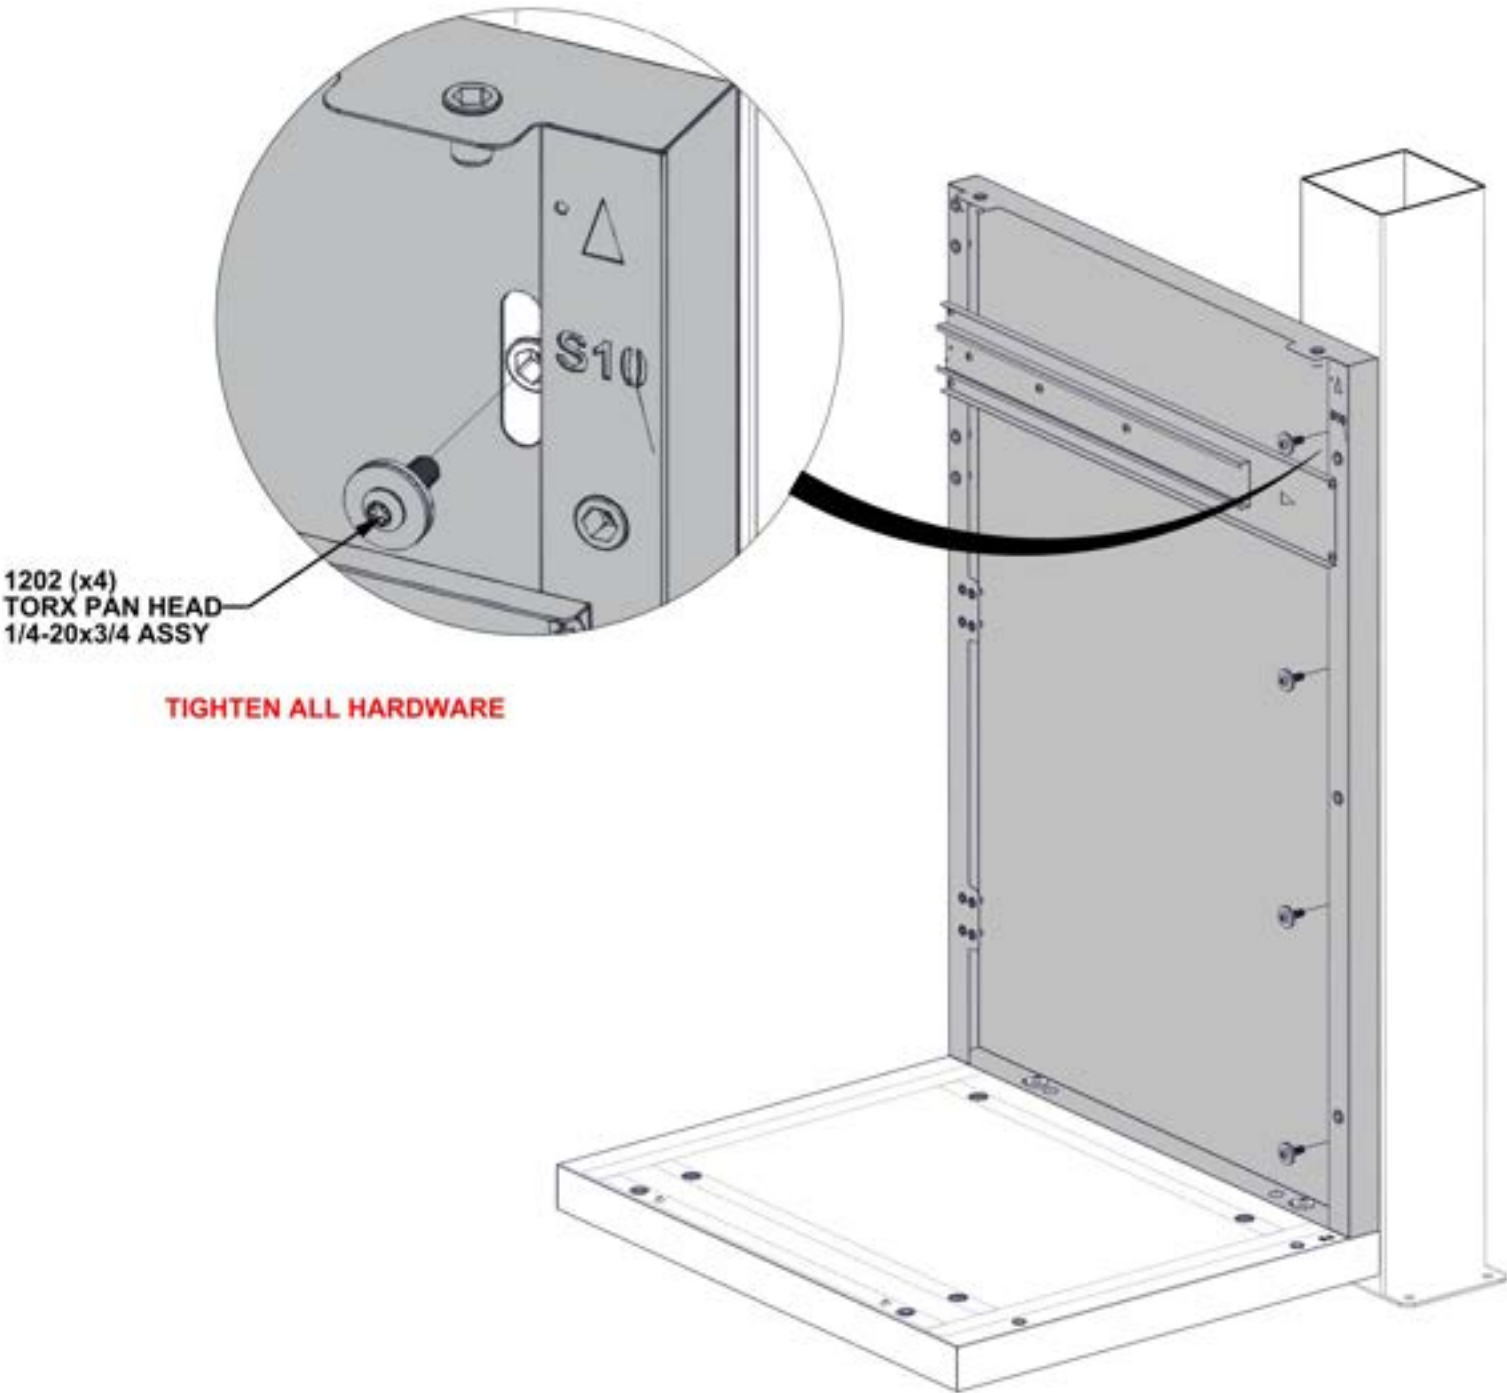


STEP 109 - BAR CABINET ASSEMBLY



Qty	PartNo	Description
5	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

G5 BACK PANEL ASSEMBLY - A4M03624
(x1) 33 3/8"x16 5/16"x1 3/4" (45x414x847.2)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

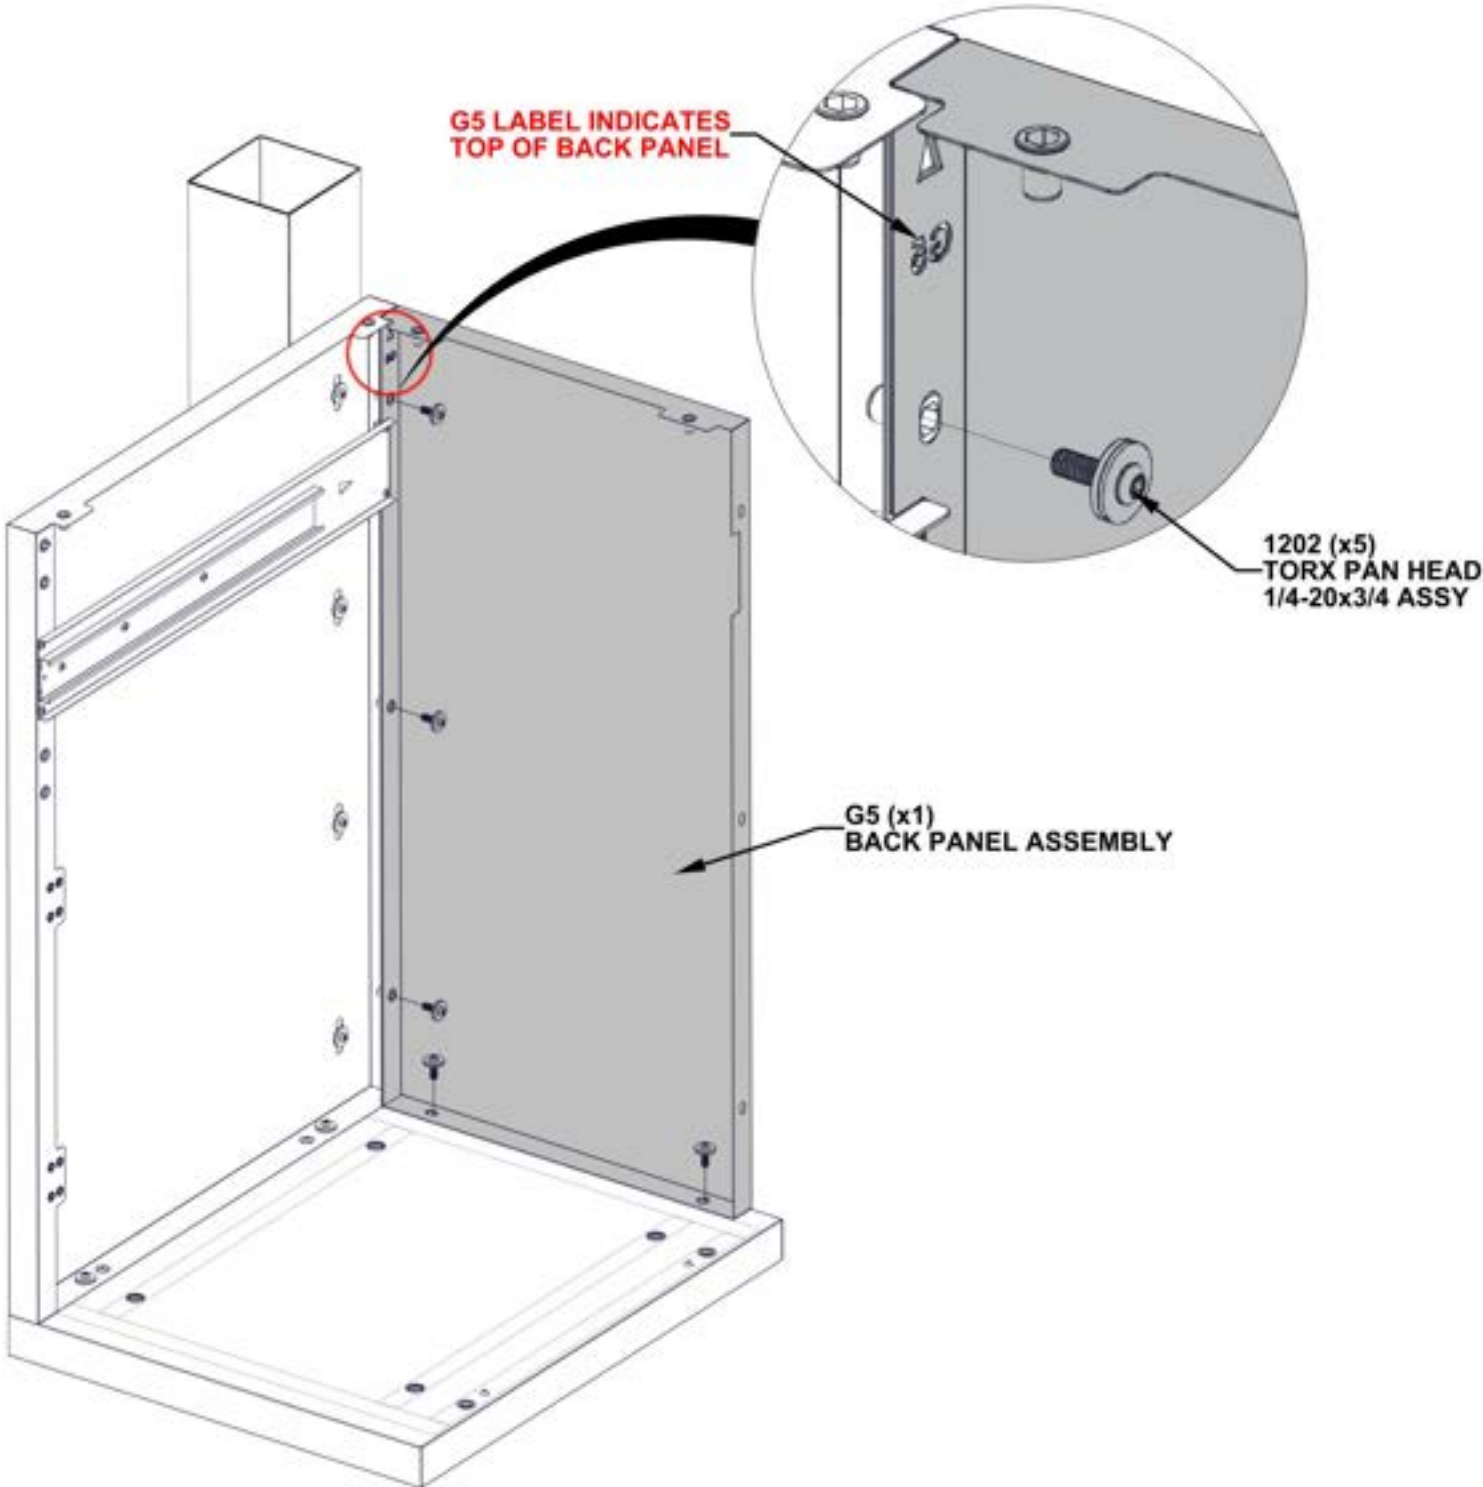


STEP 110 - BAR CABINET ASSEMBLY



Qty	PartNo	Description
5	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S11 SIDE PANEL ASSEMBLY - A4M03614
(x1) 33 3/8"x23 3/8"x1 15/16" (49.2x59.4x848.2)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

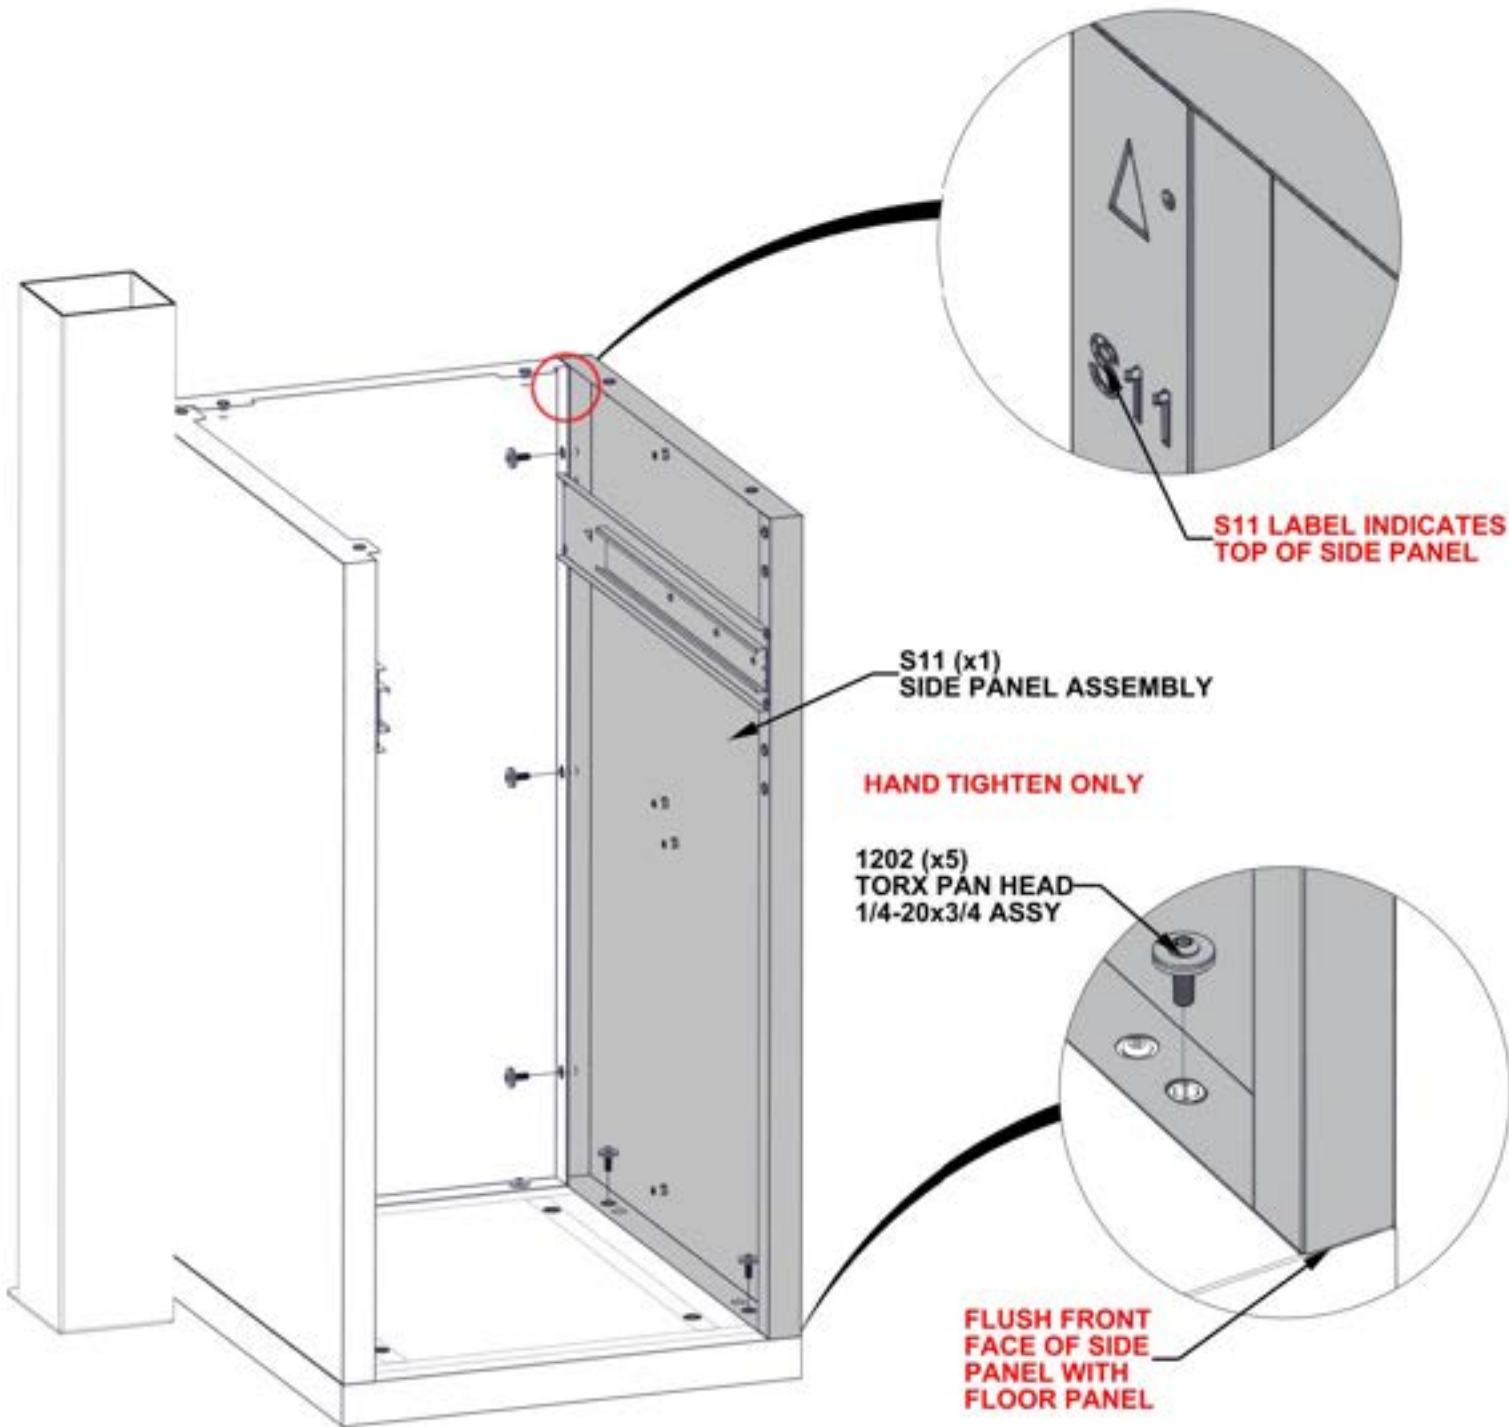


STEP 111 - BAR CABINET ASSEMBLY



H7 HORIZONTAL CHANNEL ASSEMBLY - A4M03623
(x2) 16 5/16"x2 15/16"x1" (25x75x414)

Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ONLY BAR CABINET IS SHOWN FOR DETAIL.
- HARDWARE ATTACHES ON INSIDE OF CABINET

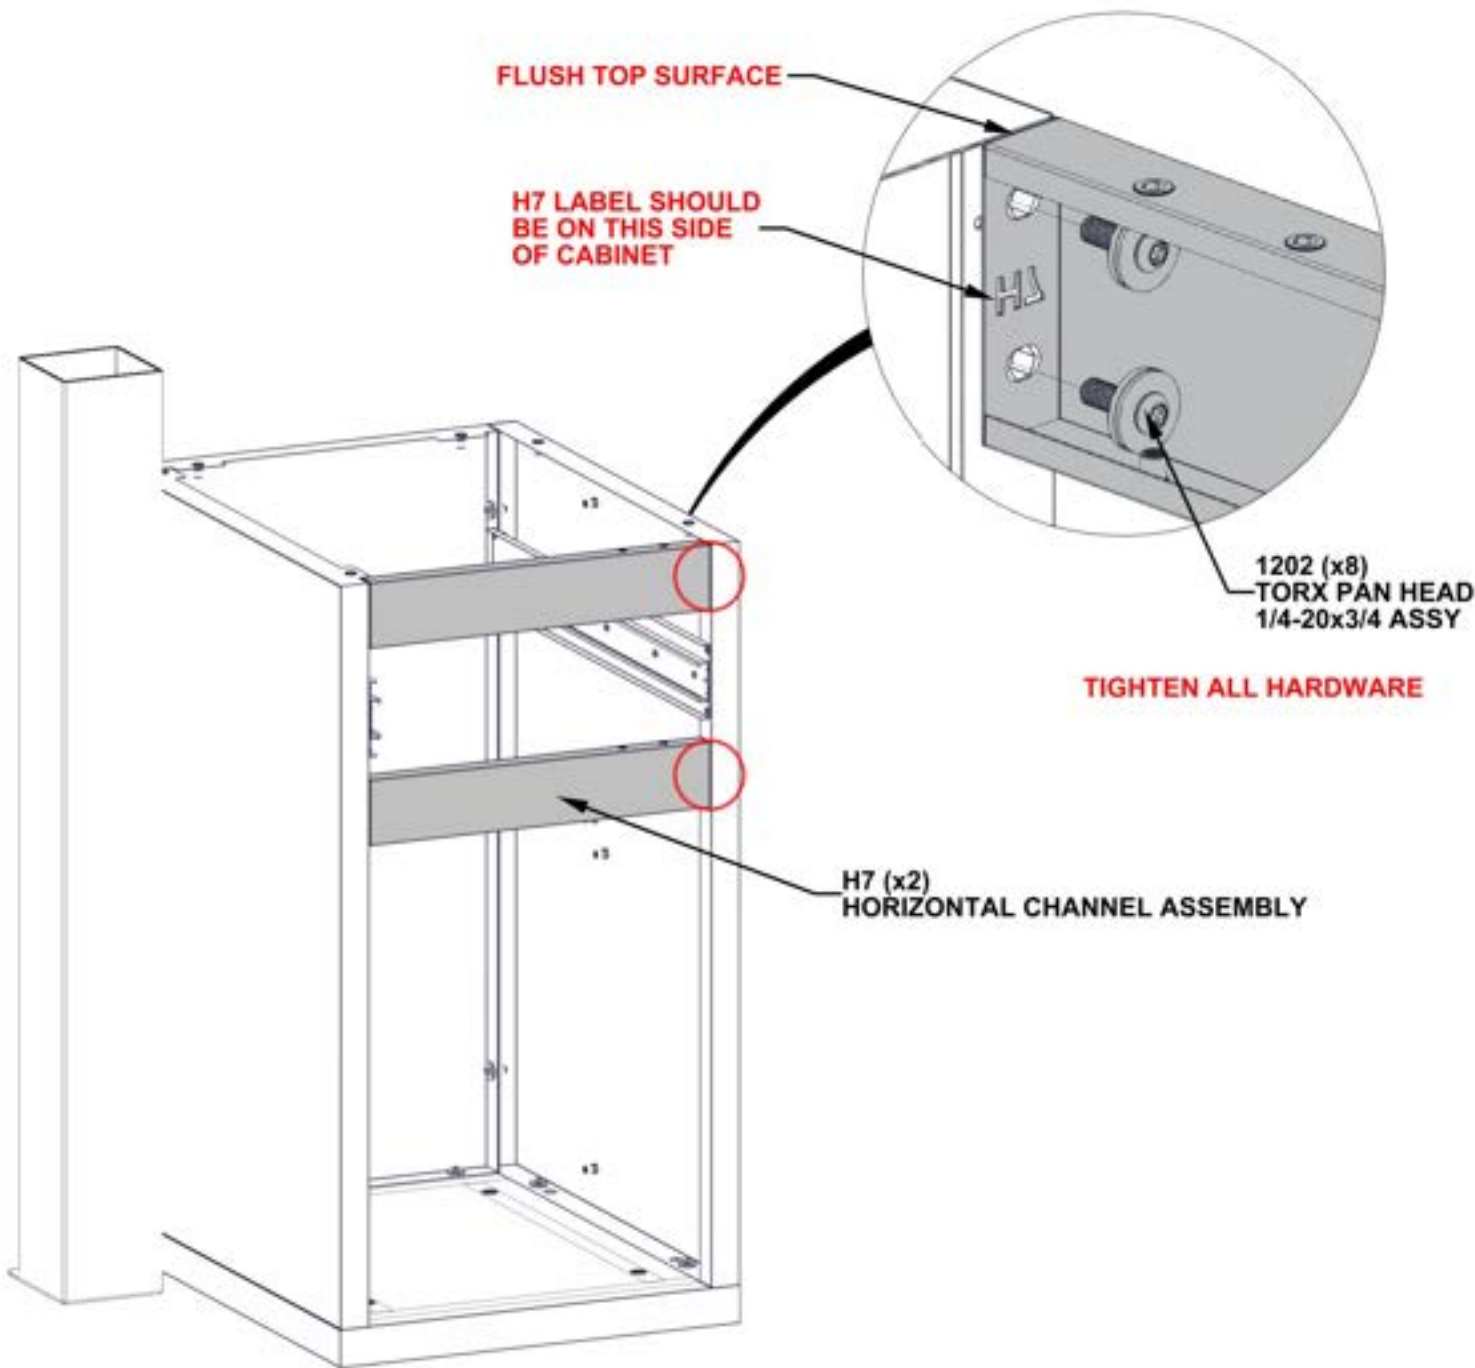


STEP 112 - BAR CABINET ASSEMBLY




A2 MAGNET BRACKET - A4M03026
(x1) 1"x1 1/4"x3 1/8" (25x31x80)

Qty	PartNo	Description
2	H101289	PAN HEAD SCREW 8-32x1/2" SS

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

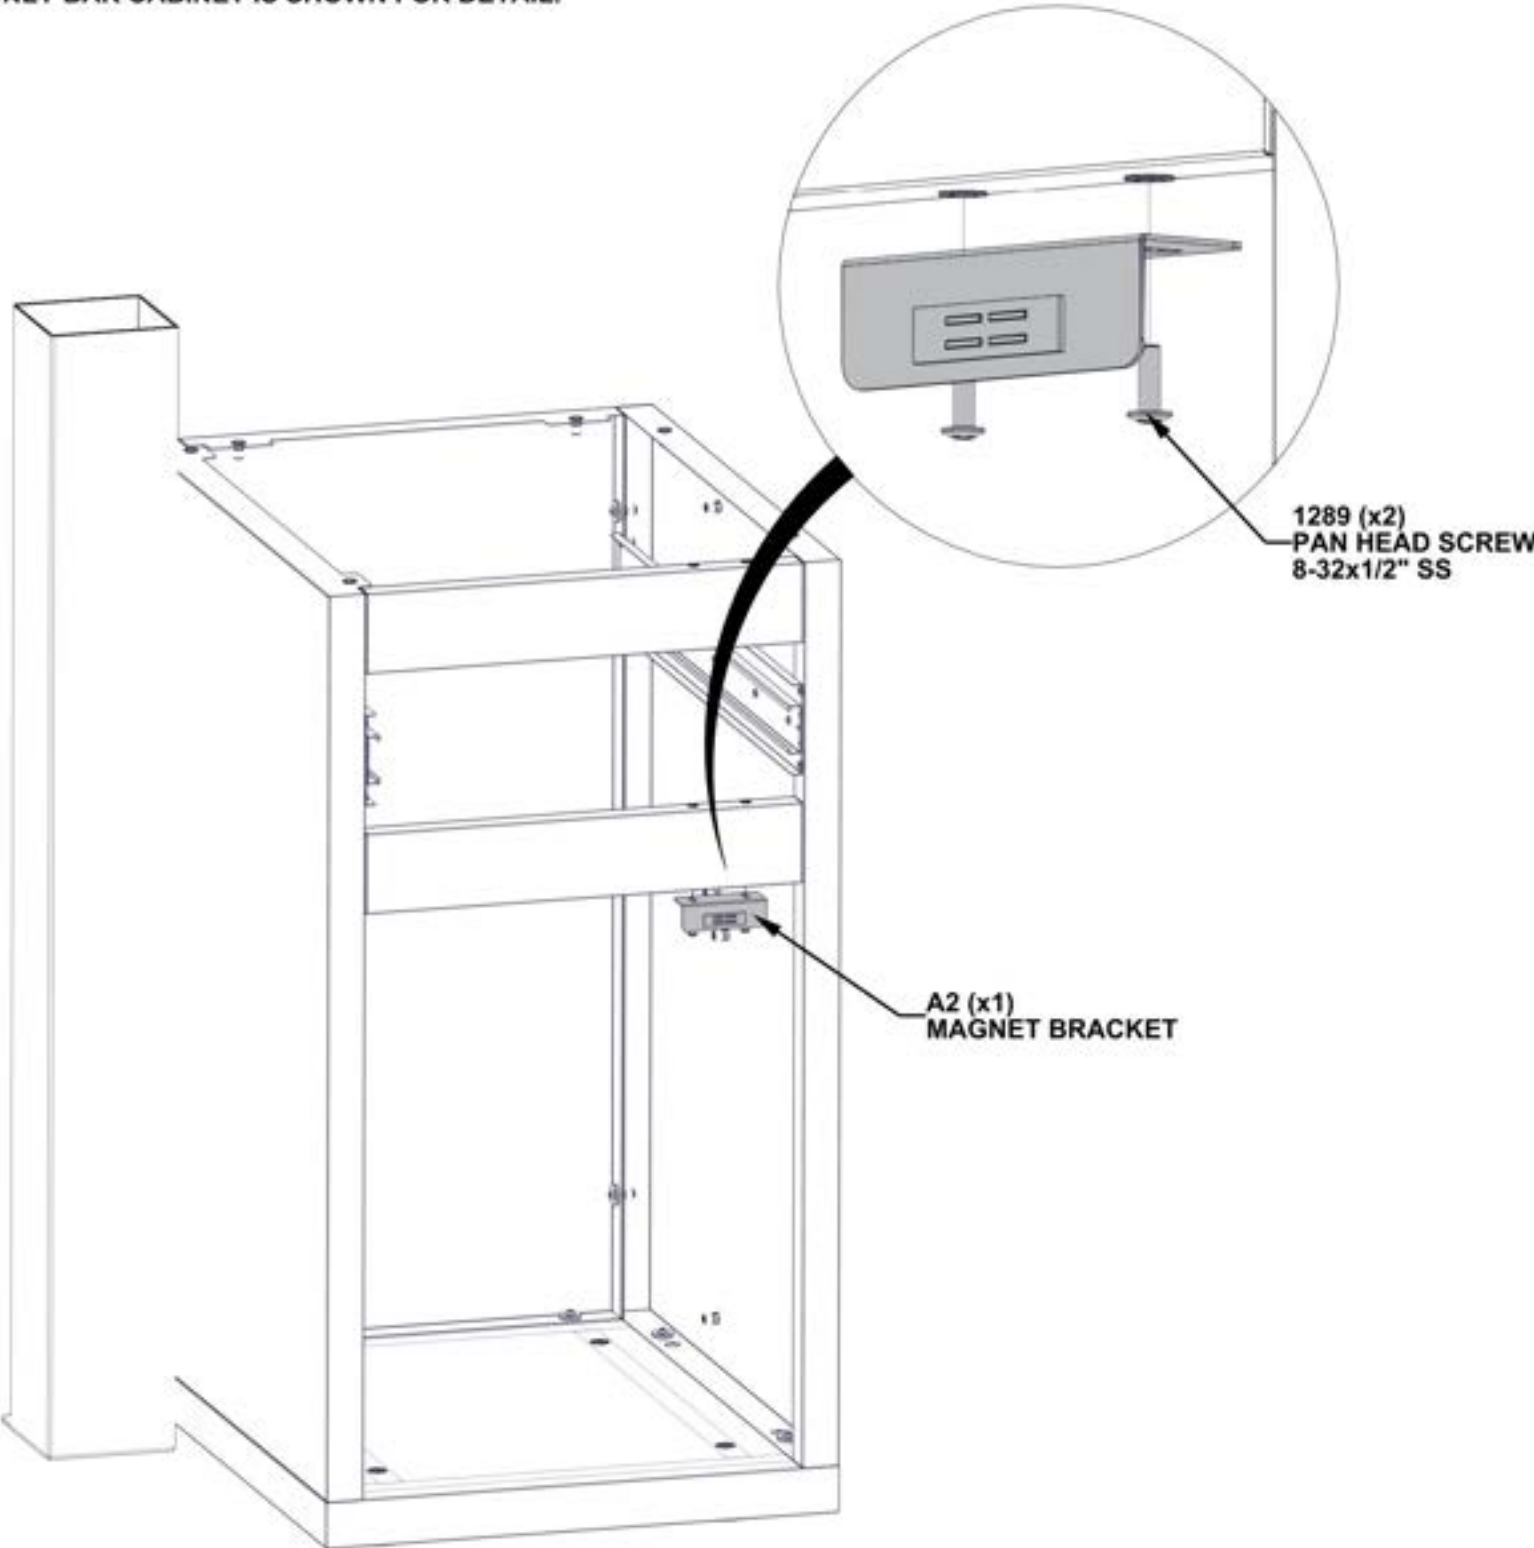


STEP 113 - BAR CABINET ASSEMBLY

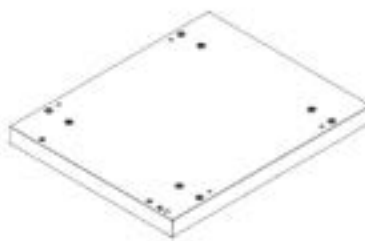

F5 FLOOR PANEL ASSEMBLY - A4M03611
(x1) 23 3/8"x19 1/8"x2 5/8" (66x486x594)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- POSITION FLOOR PANEL AS SHOWN BELOW.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.

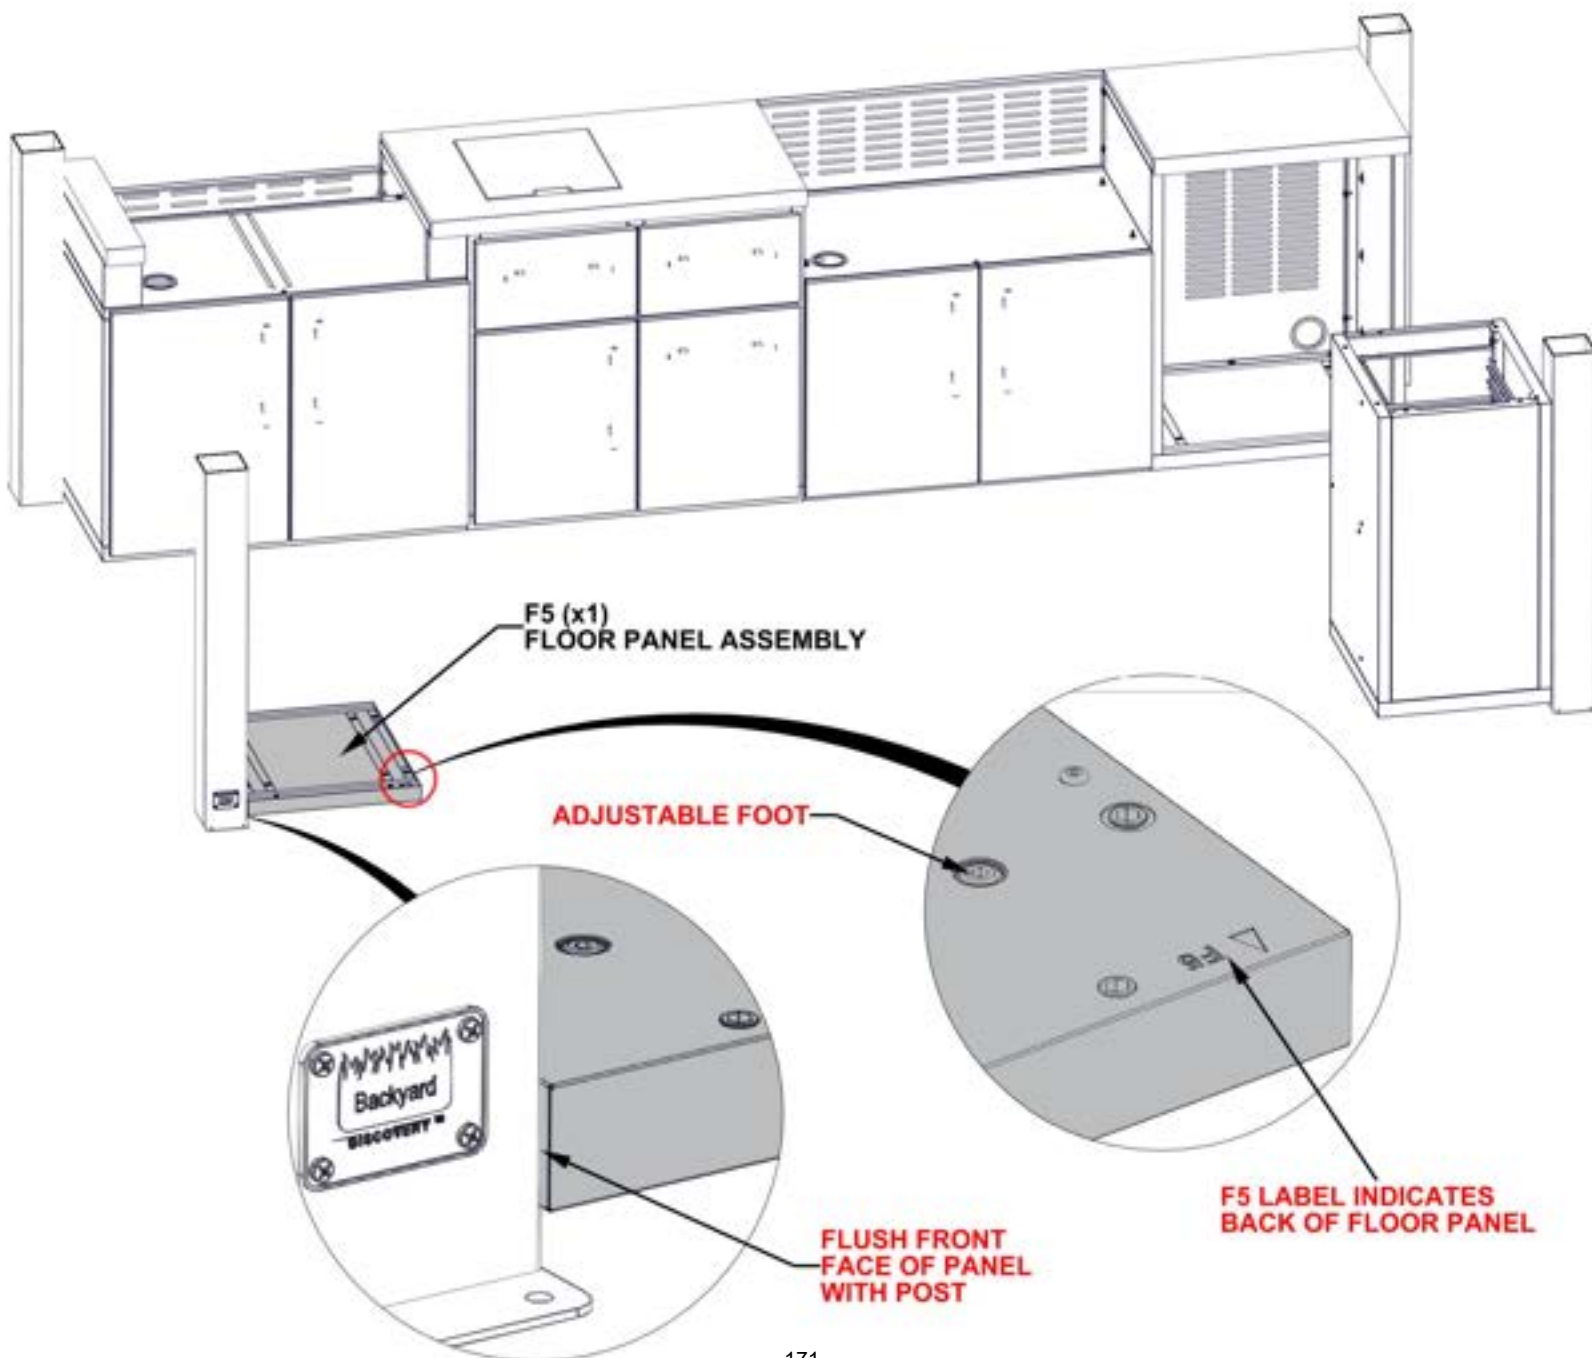


STEP 114A - BAR CABINET ASSEMBLY



S9 SIDE PANEL ASSEMBLY - A4M03638
(x1) 33 3/8"x23 3/8"x1 15/16" (50x594x848.2)

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY


- ONLY BAR CABINET IS SHOWN FOR DETAIL.

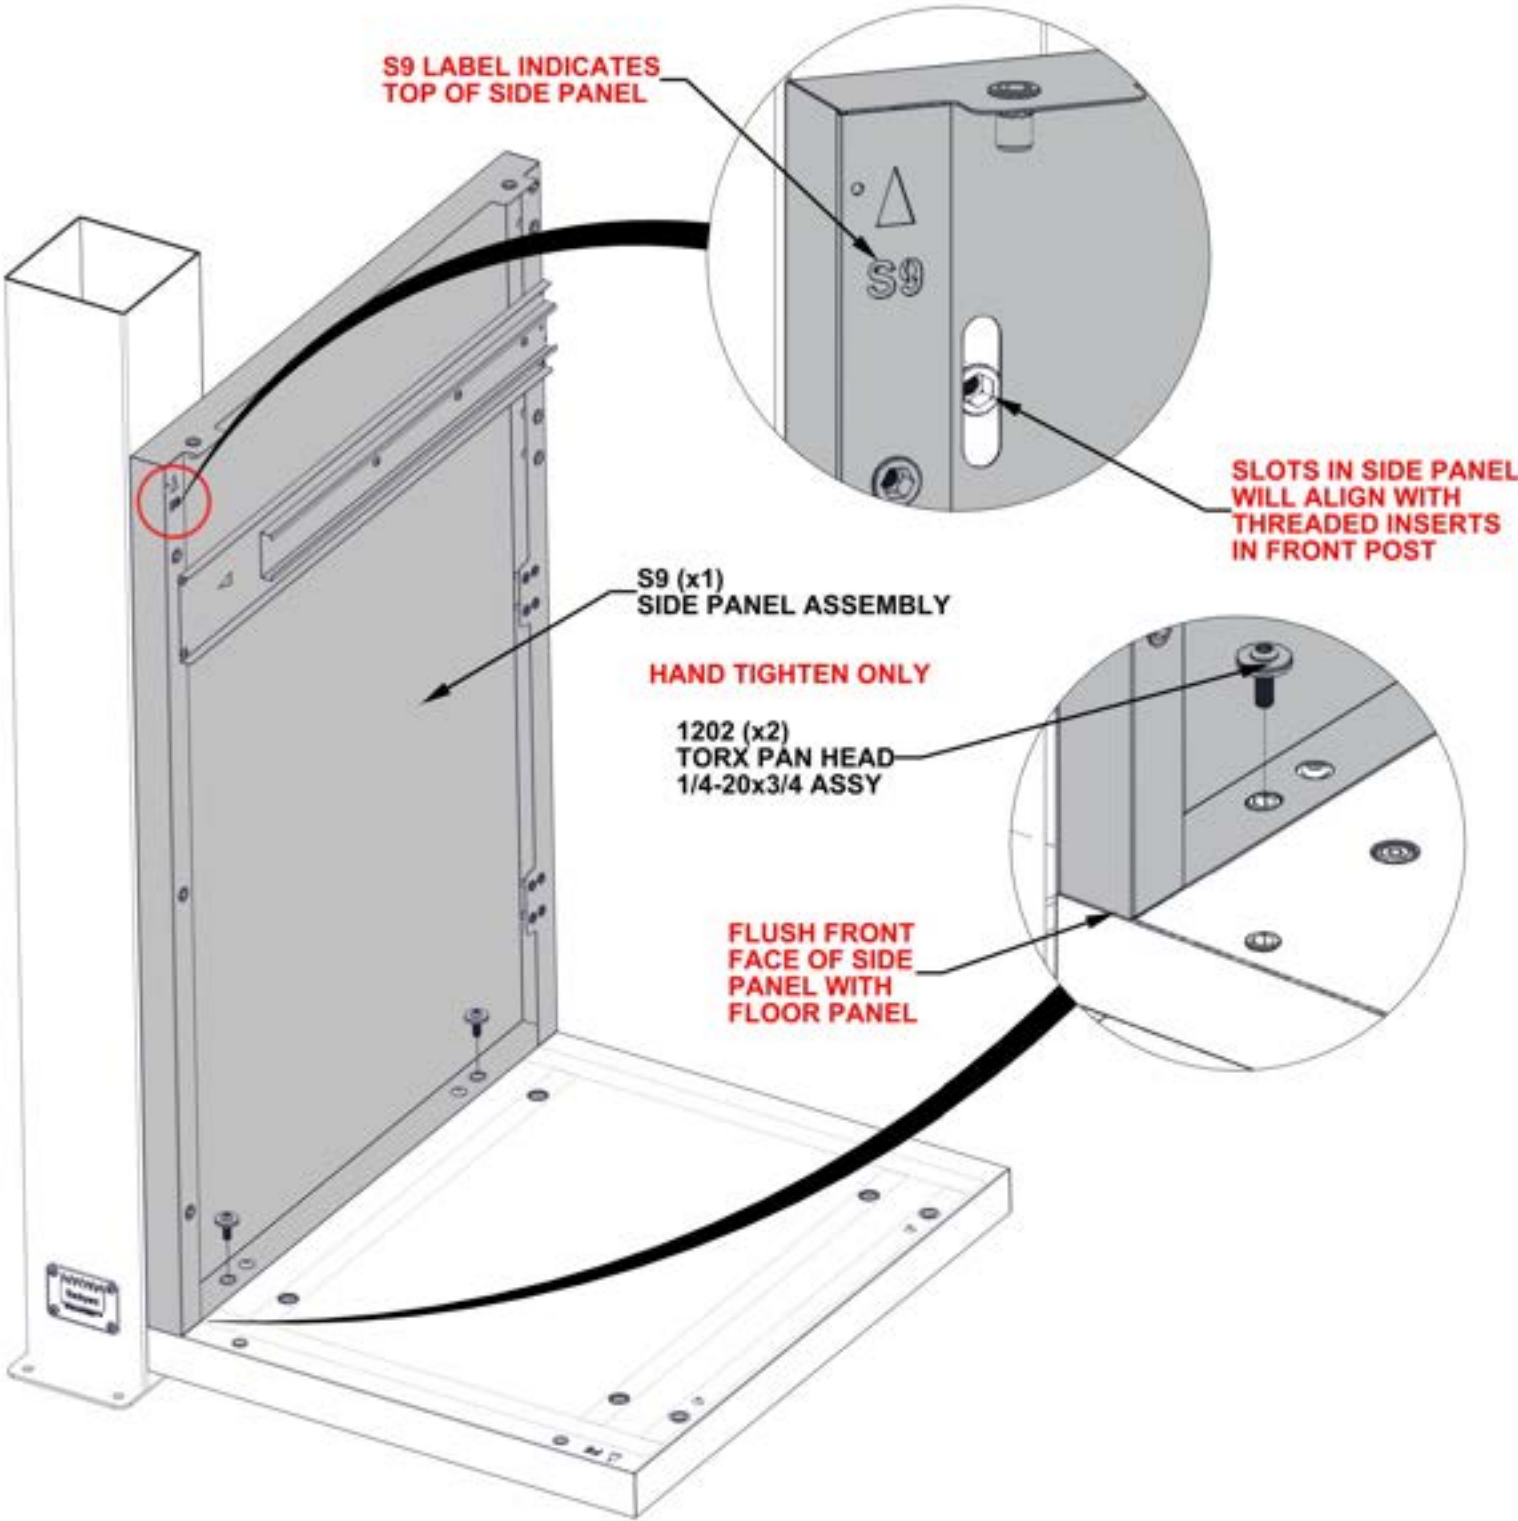

STEP 114B - BAR CABINET ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

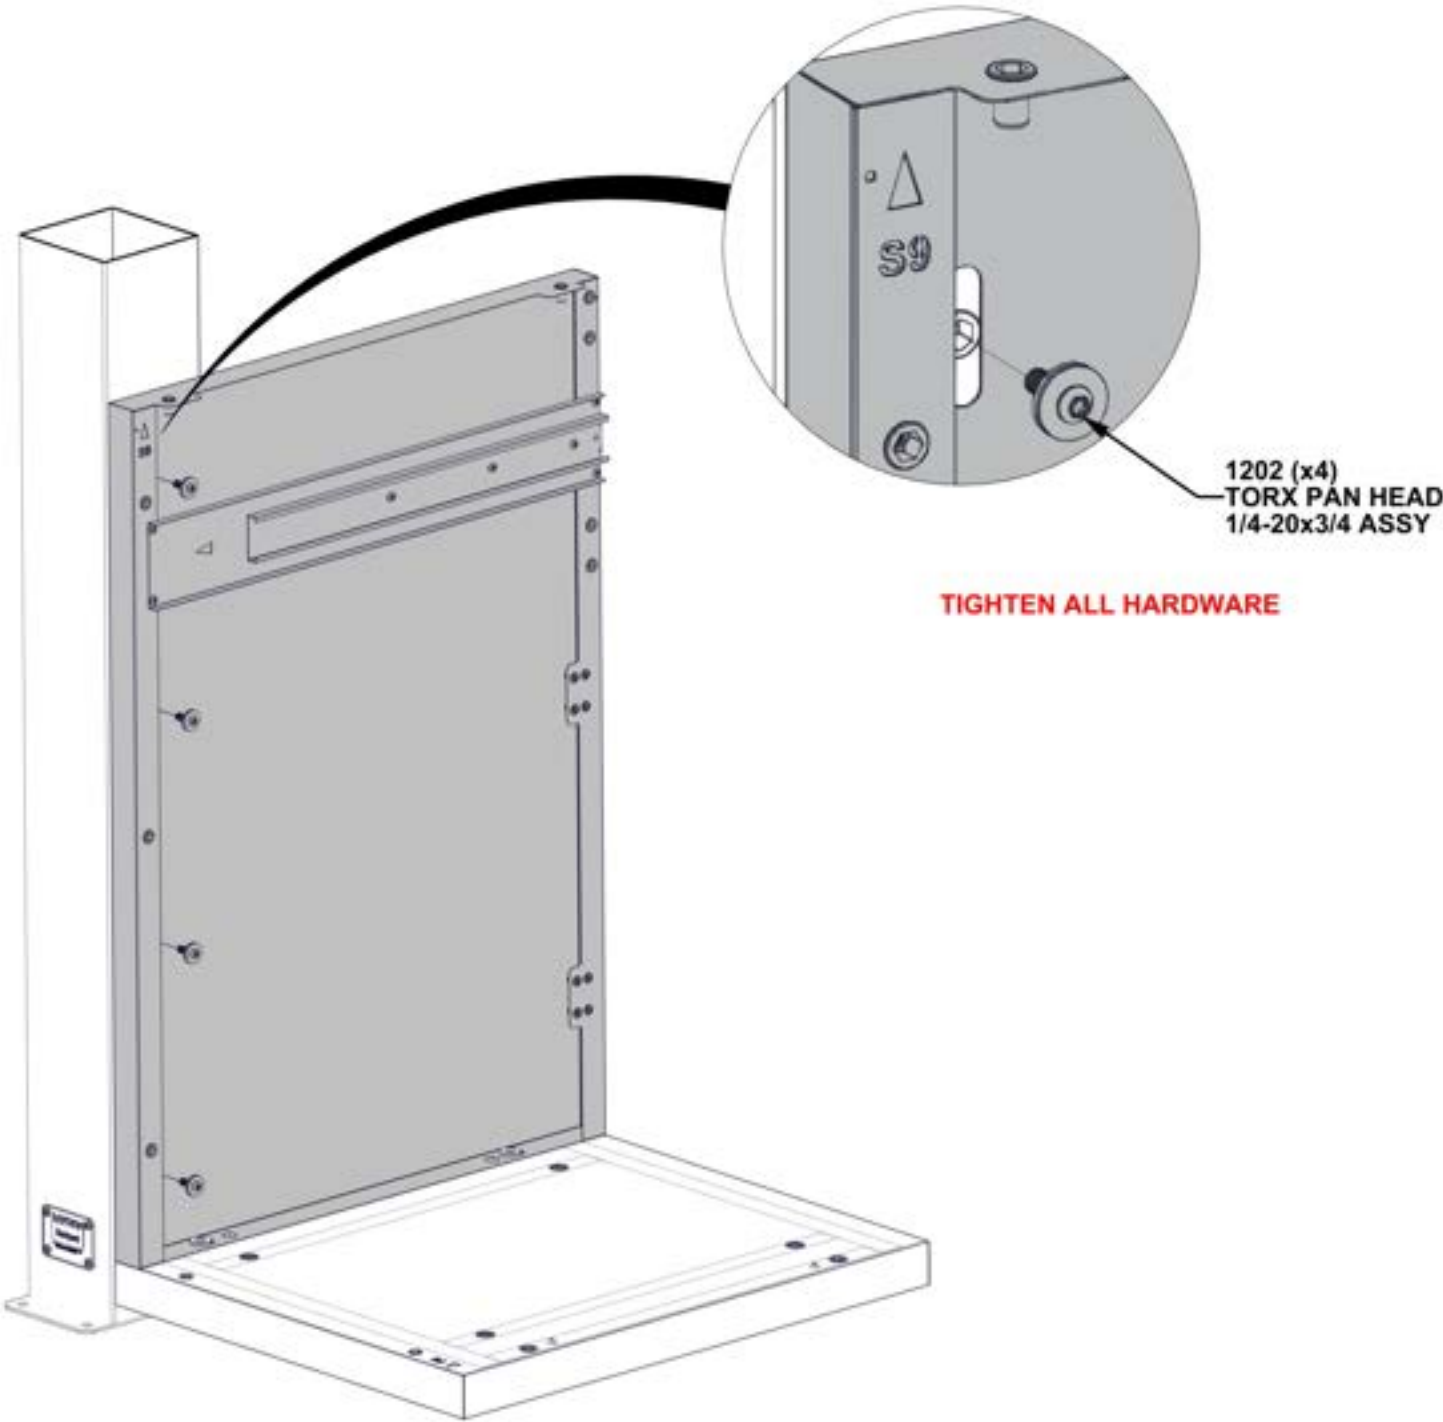


STEP 115 - BAR CABINET ASSEMBLY



Qty	PartNo	Description
5	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

G5 BACK PANEL ASSEMBLY - A4M03624
(x1) 33 3/8"x16 5/16"x1 3/4" (45x414x847.2)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

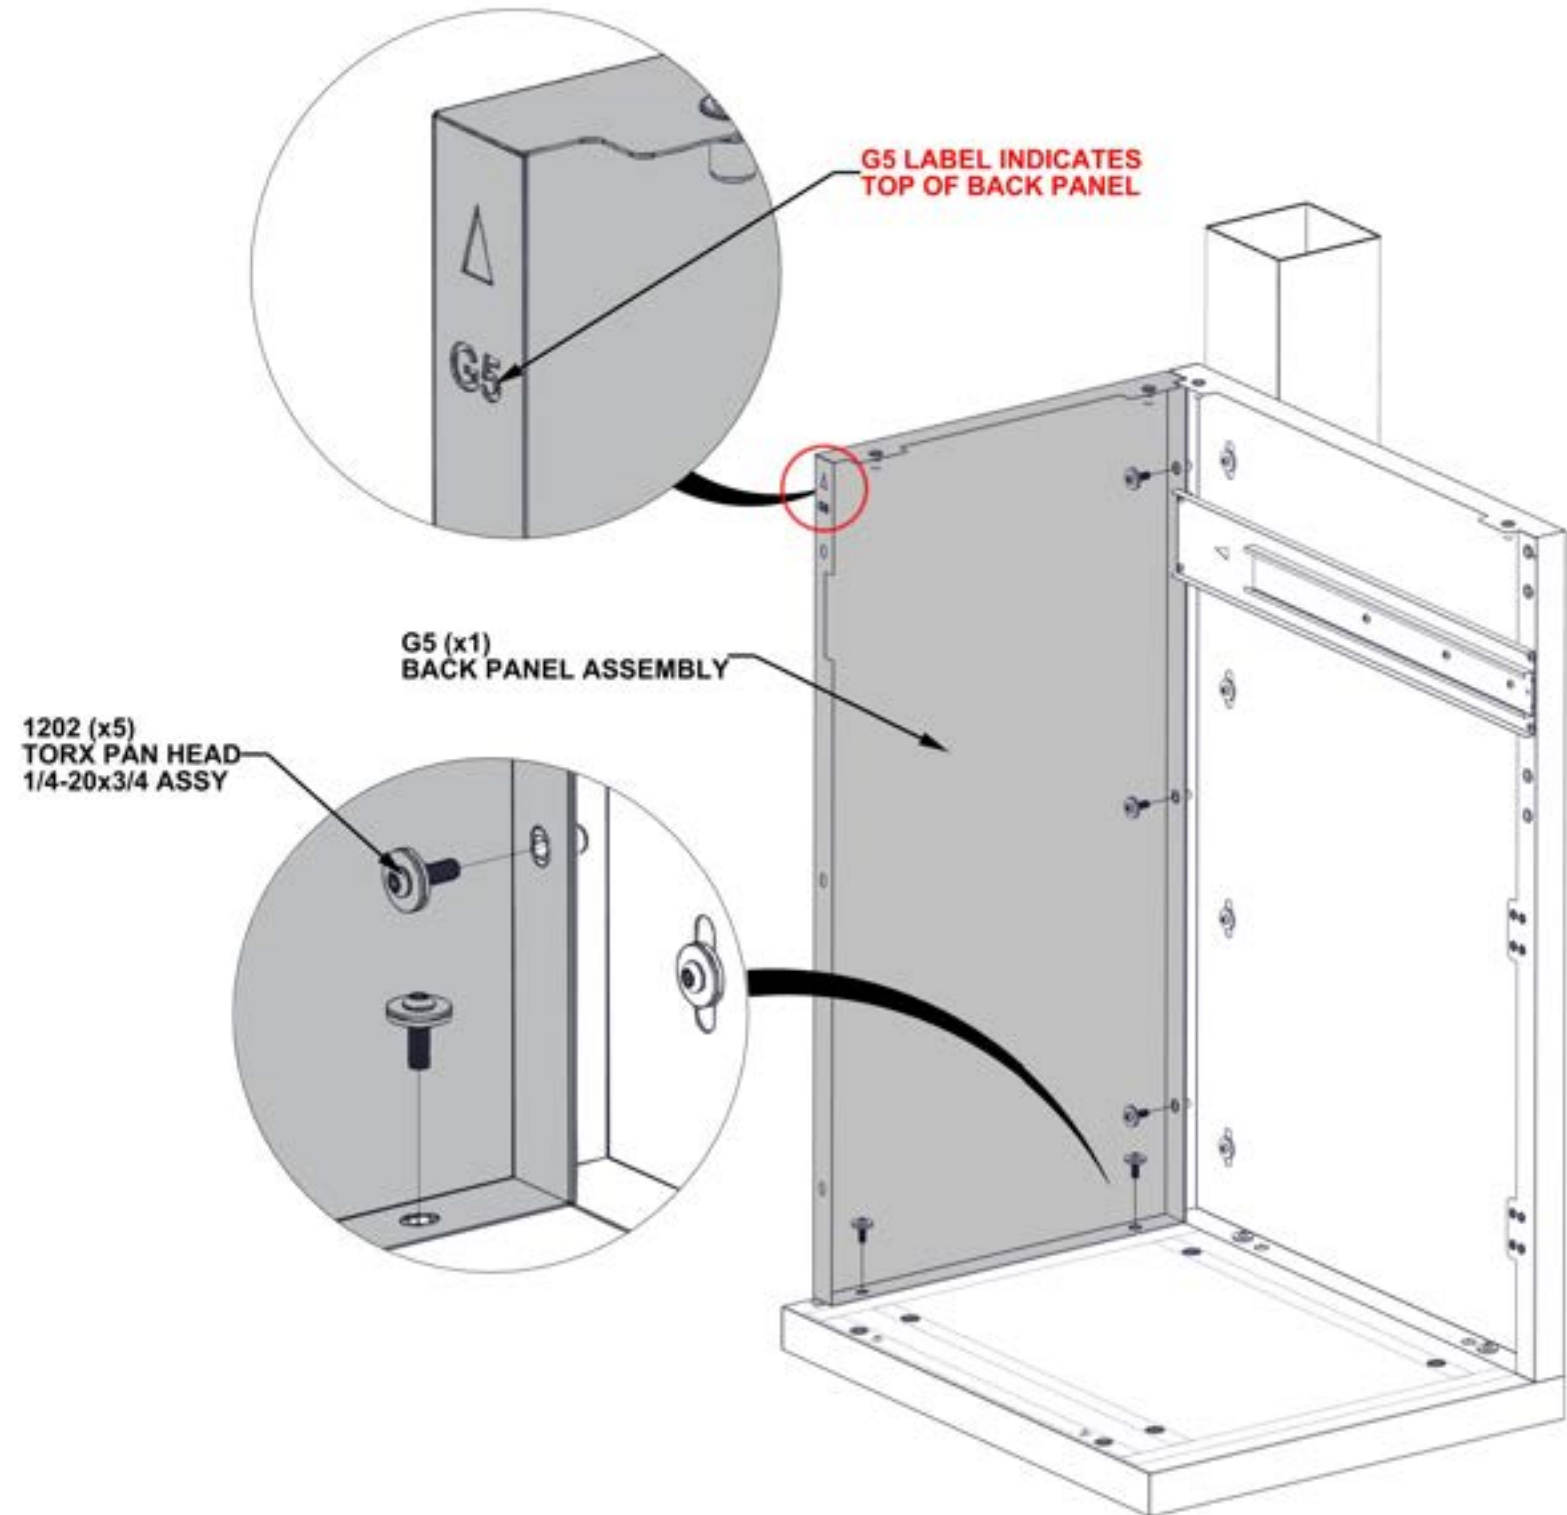


STEP 116 - BAR CABINET ASSEMBLY



Qty	PartNo	Description
5	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S12 SIDE PANEL ASSEMBLY - A4M03637
(x1) 33 3/8"x23 3/8"x1 15/16" (49.2x594x848.2)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

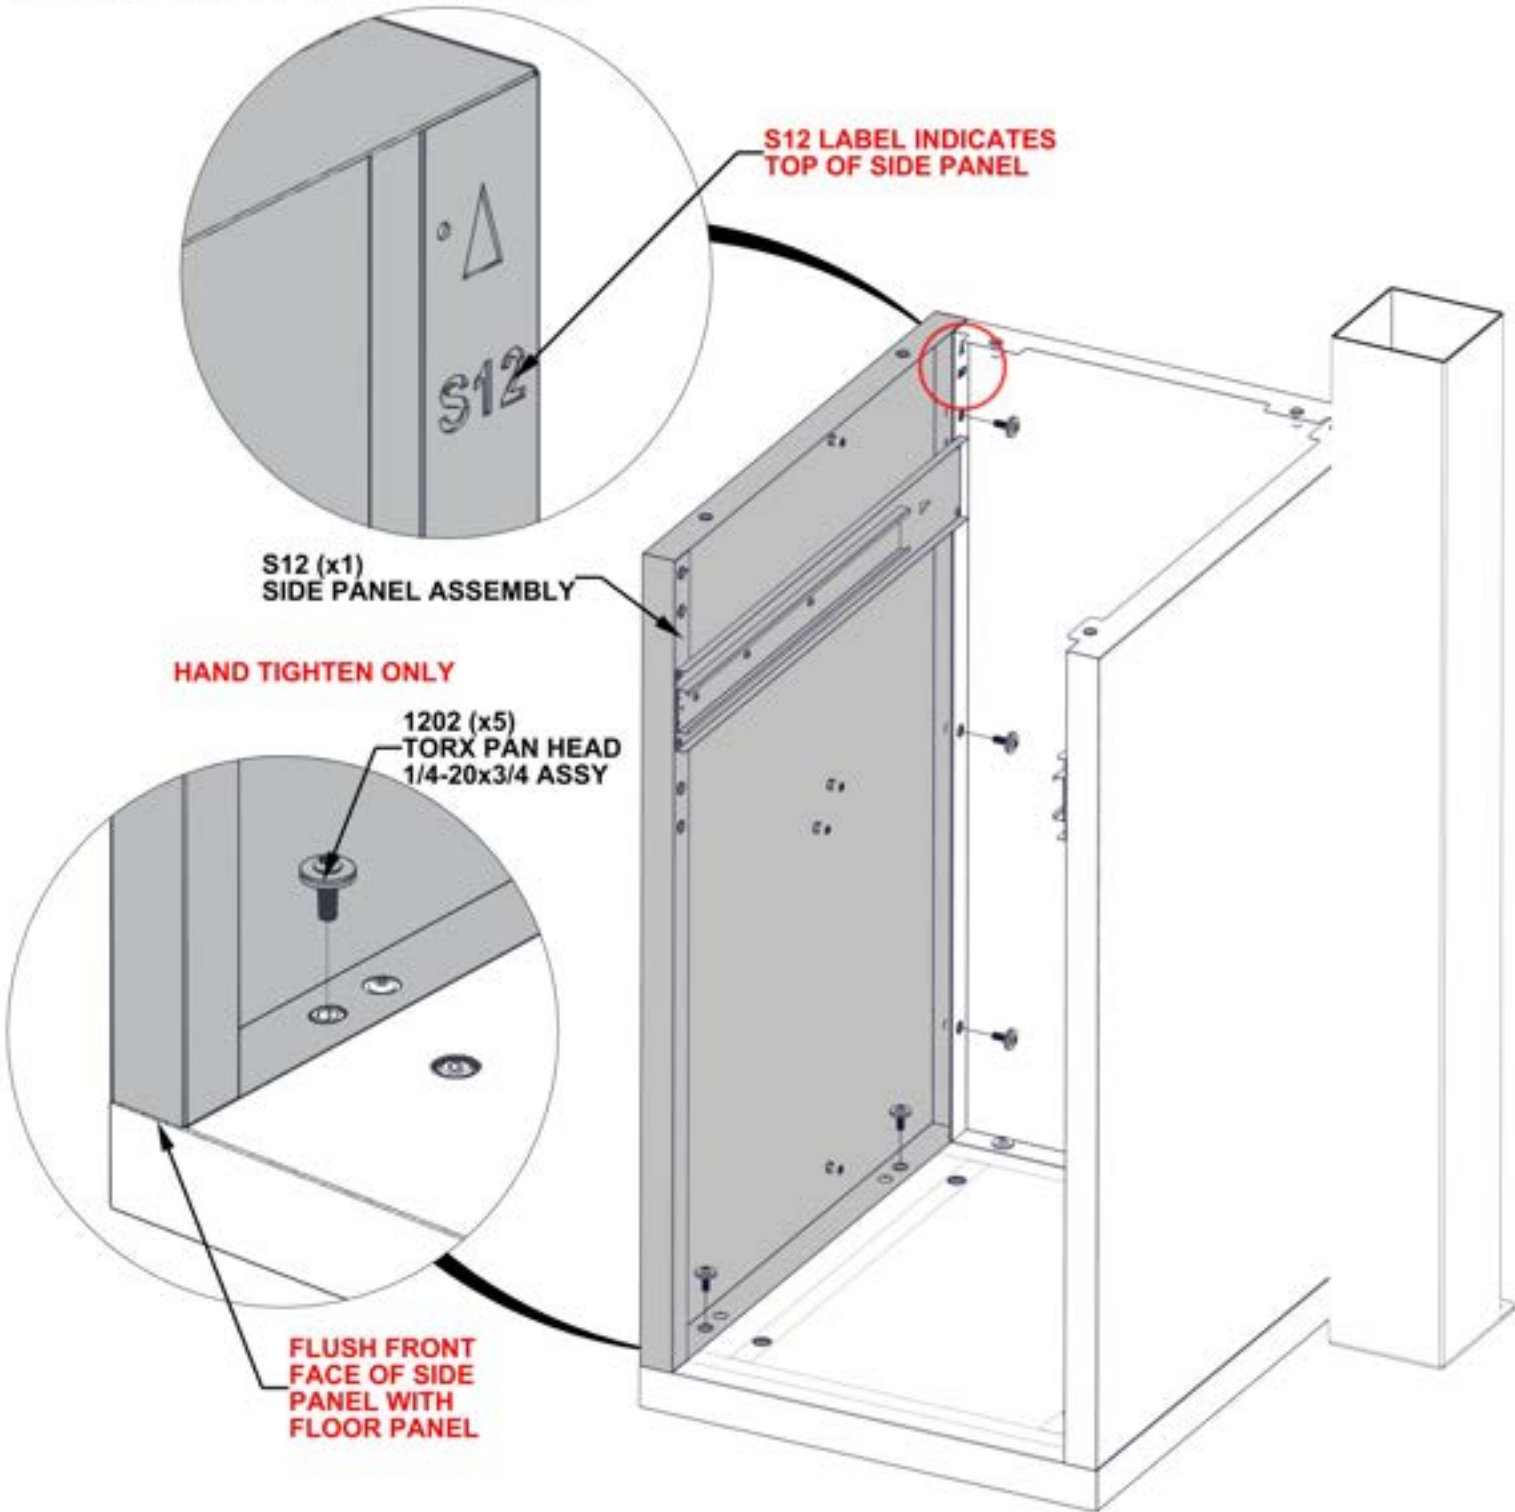


STEP 117 - BAR CABINET ASSEMBLY



H7 HORIZONTAL CHANNEL ASSEMBLY - A4M03623
(x2) 16 5/16"x2 15/16"x1" (25x75x414)

Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY


- ONLY BAR CABINET IS SHOWN FOR DETAIL.
- HARDWARE ATTACHES ON INSIDE OF CABINET

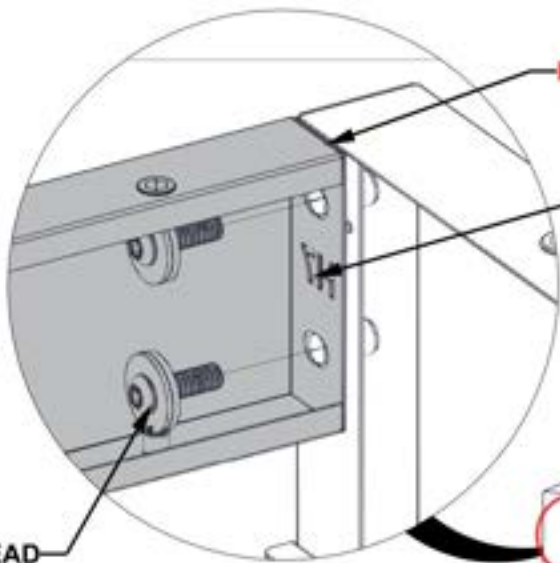

1202 (x8)
TORX PAN HEAD
1/4-20x3/4 ASSY

TIGHTEN ALL HARDWARE

H7 (x2)
HORIZONTAL CHANNEL ASSEMBLY

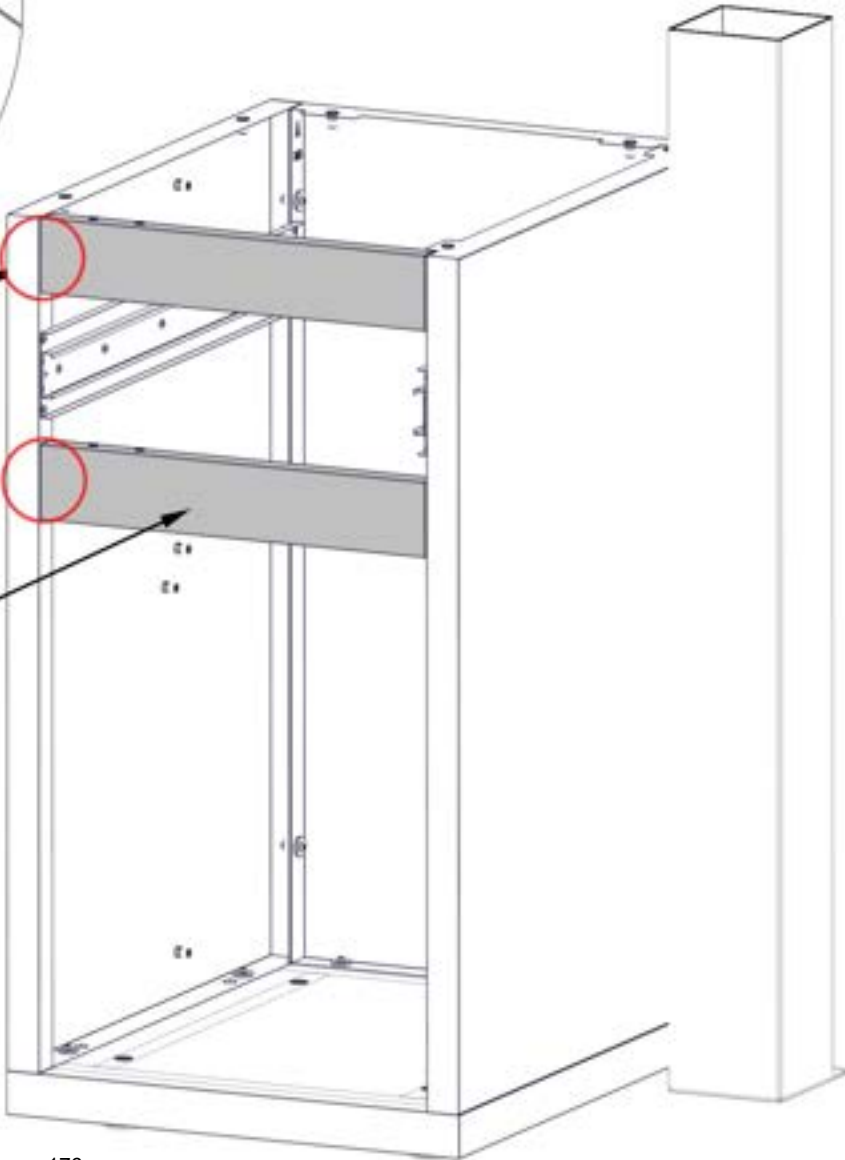


STEP 118 - BAR CABINET ASSEMBLY



A2 MAGNET BRACKET - A4M03026
(x1) 1"x1 1/4"x3 1/8" (25x31x80)

Qty	PartNo	Description
2	H101289	PAN HEAD SCREW 8-32x1/2" SS

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

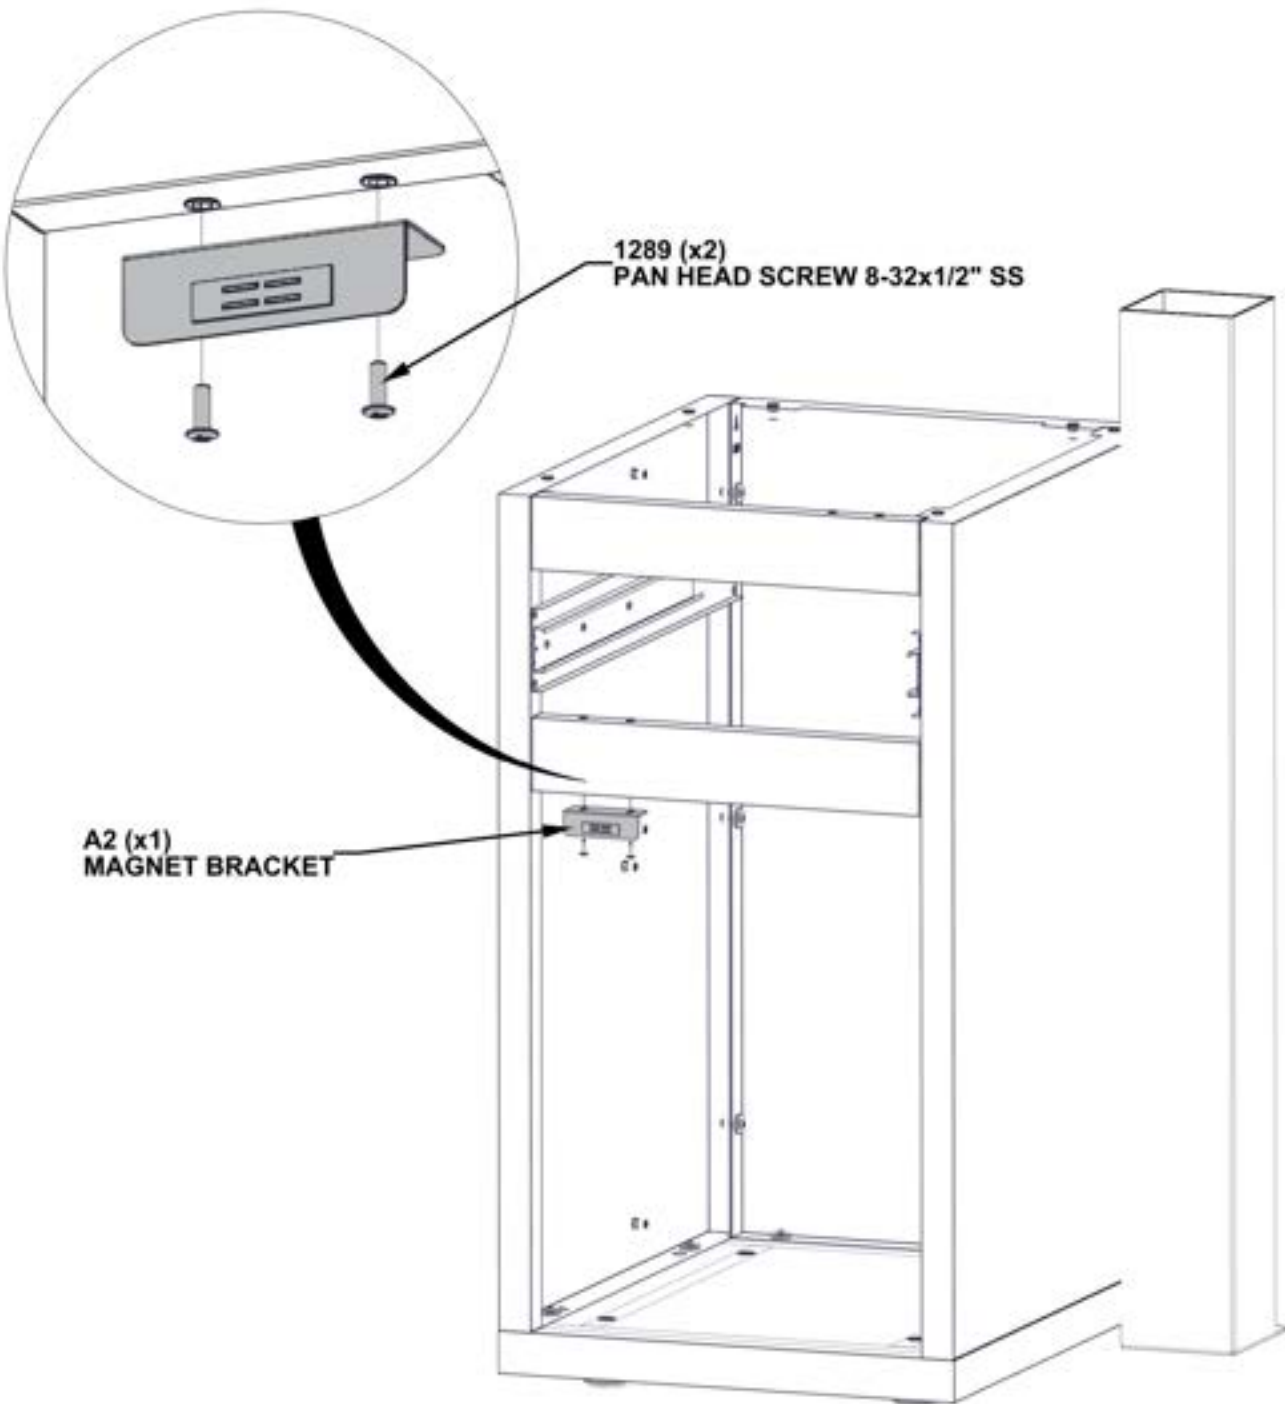

STEP 119 - BAR CABINET ASSEMBLY

Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




H6 TUBE FRAME SUPPORT - A4M03627
(x1) 35 15/16"x15 9/16"x1 15/16" (50x394.5x912.5)



G6 BACK PANEL - A4M03631
(x1) 34"x27 3/4"x1" (25x705x864)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.
- EACH TUBE FRAME SUPPORT HAS FACTORY INSTALLED ADJUSTABLE FEET.
- ADJUST EACH FOOT UNTIL FRAME IS LEVEL.
- **MAKE SURE THE TUBE FRAME IS ORIENTED CORRECTLY BASED ON THE TWO THREADED INSERTS ON BACKSIDE OF TUBE.**

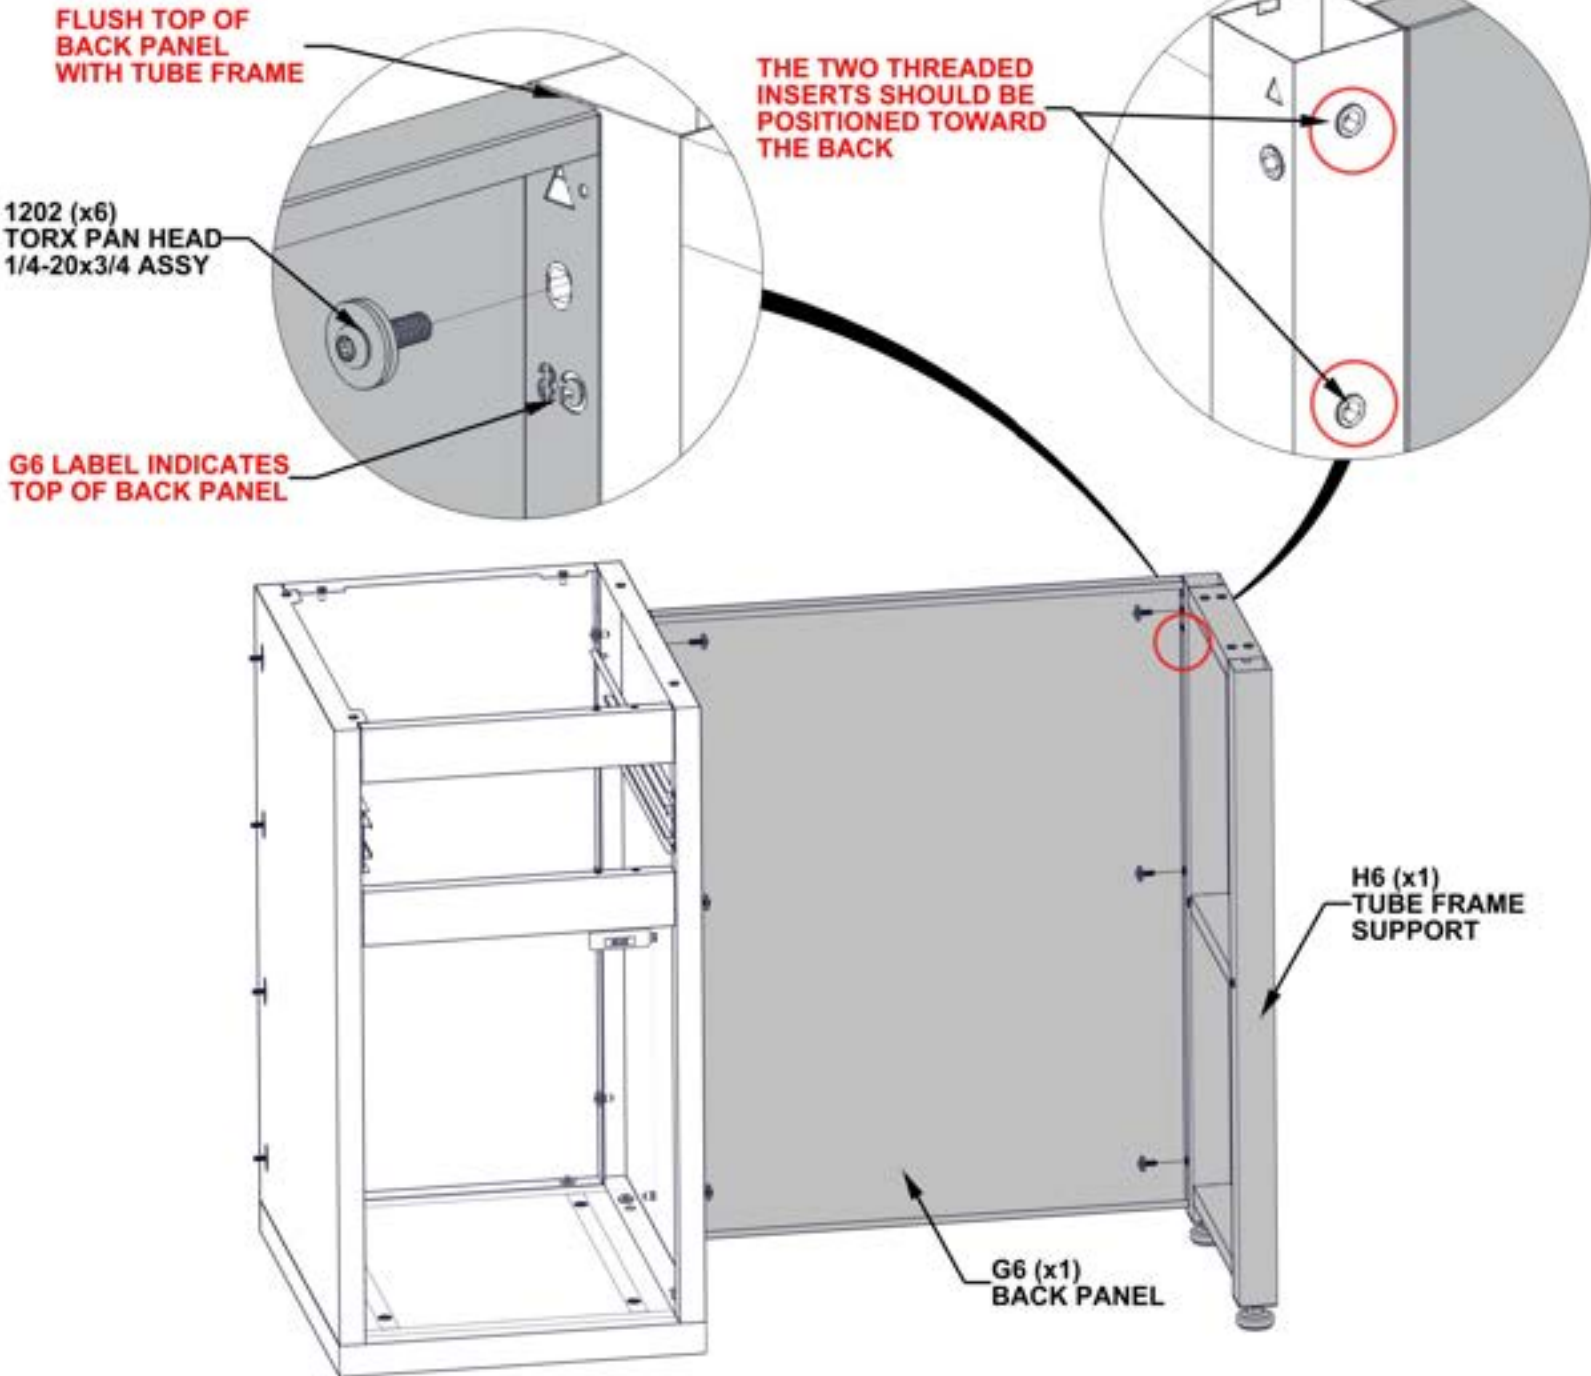

STEP 120 - BAR CABINET ASSEMBLY

Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




H6 TUBE FRAME SUPPORT - A4M03627
(x1) 35 15/16"x15 9/16"x1 15/16" (50x394.5x912.5)



G6 BACK PANEL - A4M03631
(x1) 34"x27 3/4"x1" (25x705x864)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.
- EACH TUBE FRAME SUPPORT HAS FACTORY INSTALLED ADJUSTABLE FEET.
- ADJUST EACH FOOT UNTIL FRAME IS LEVEL.
- MAKE SURE THE TUBE FRAME IS ORIENTED CORRECTLY BASED ON THE TWO THREADED INSERTS ON BACKSIDE OF TUBE.

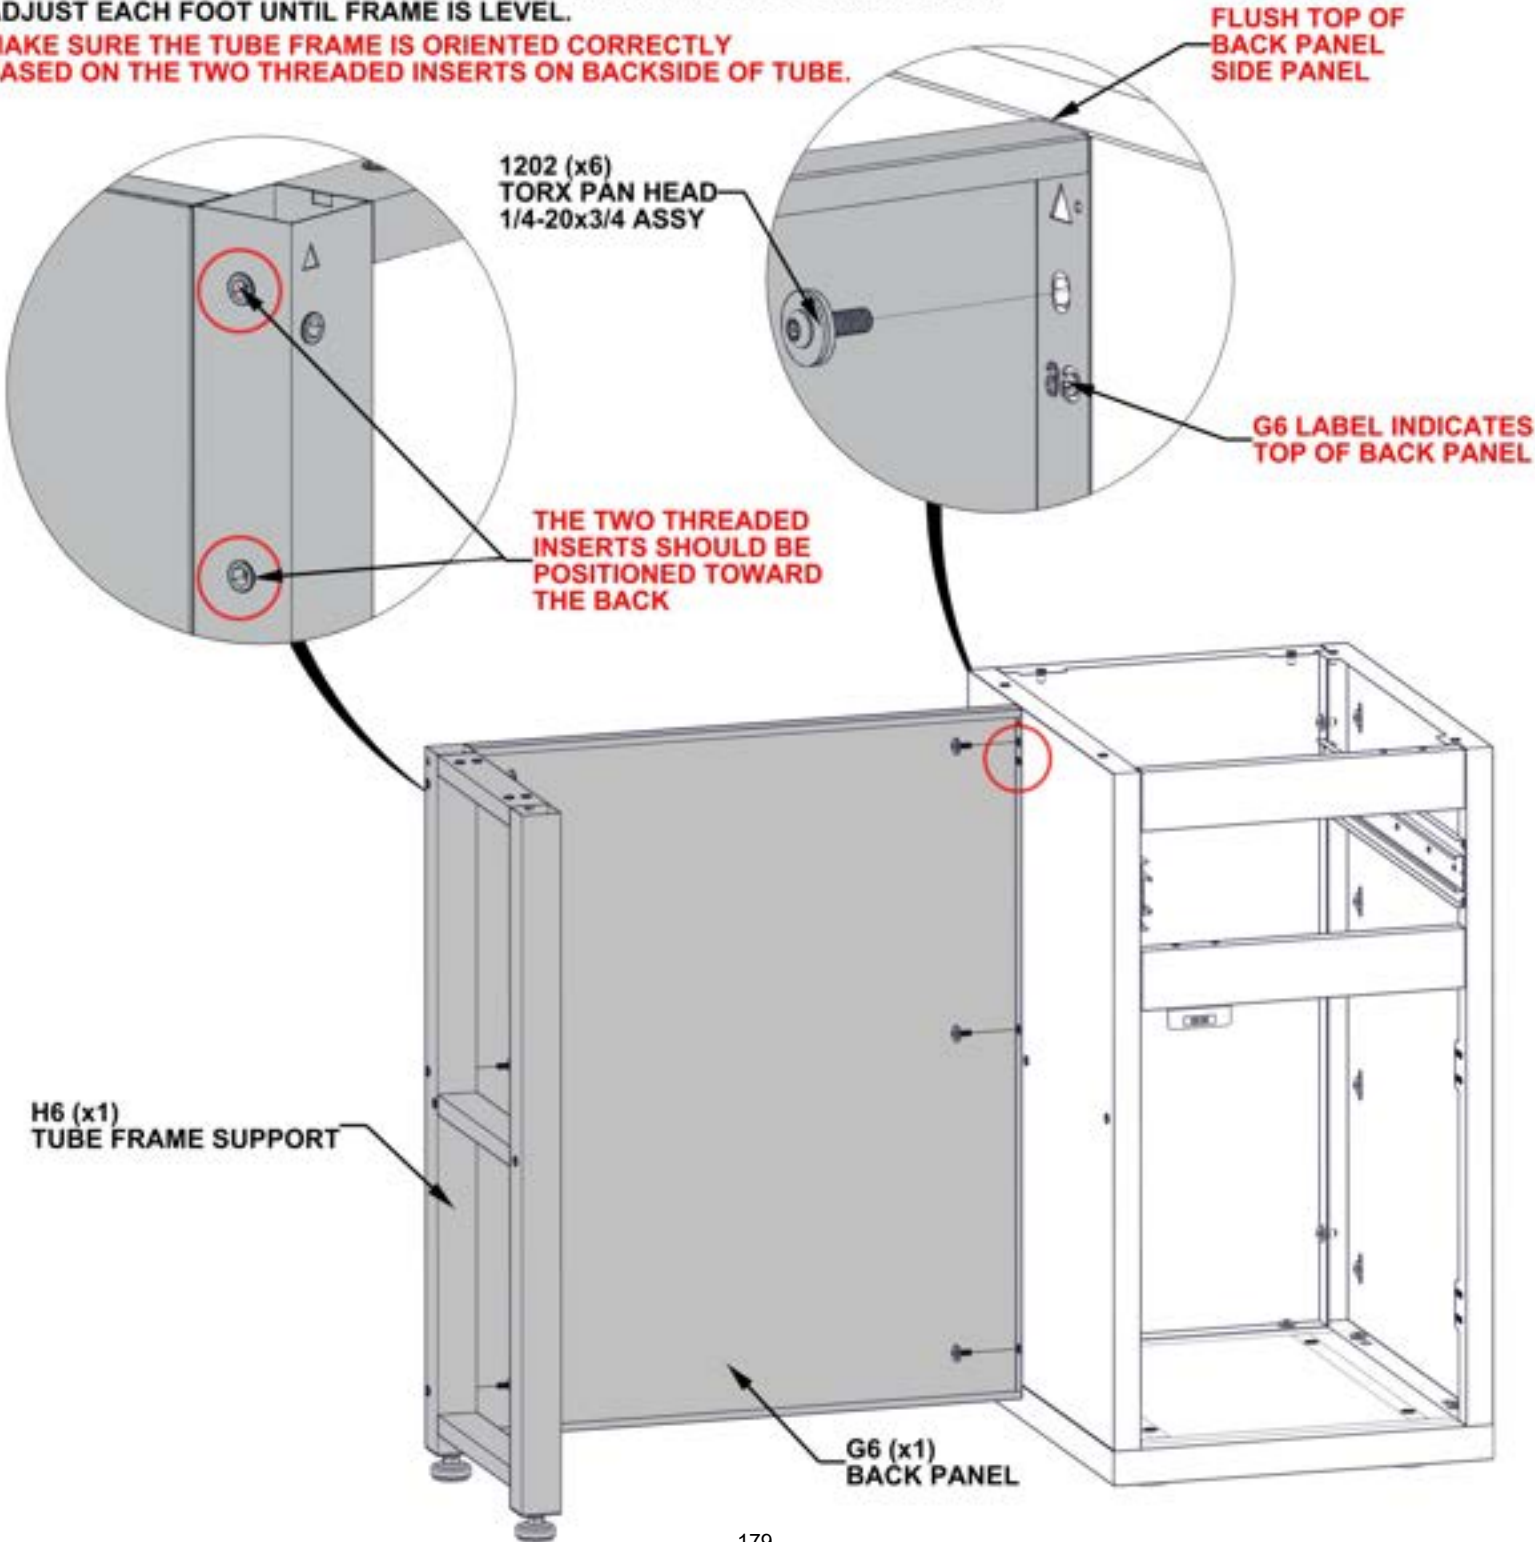


STEP 121 - BAR CABINET ASSEMBLY



G7 BACK PANEL - A4M03629
(x1) 45 7/8"x34"x1" (25x864x1166)

Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

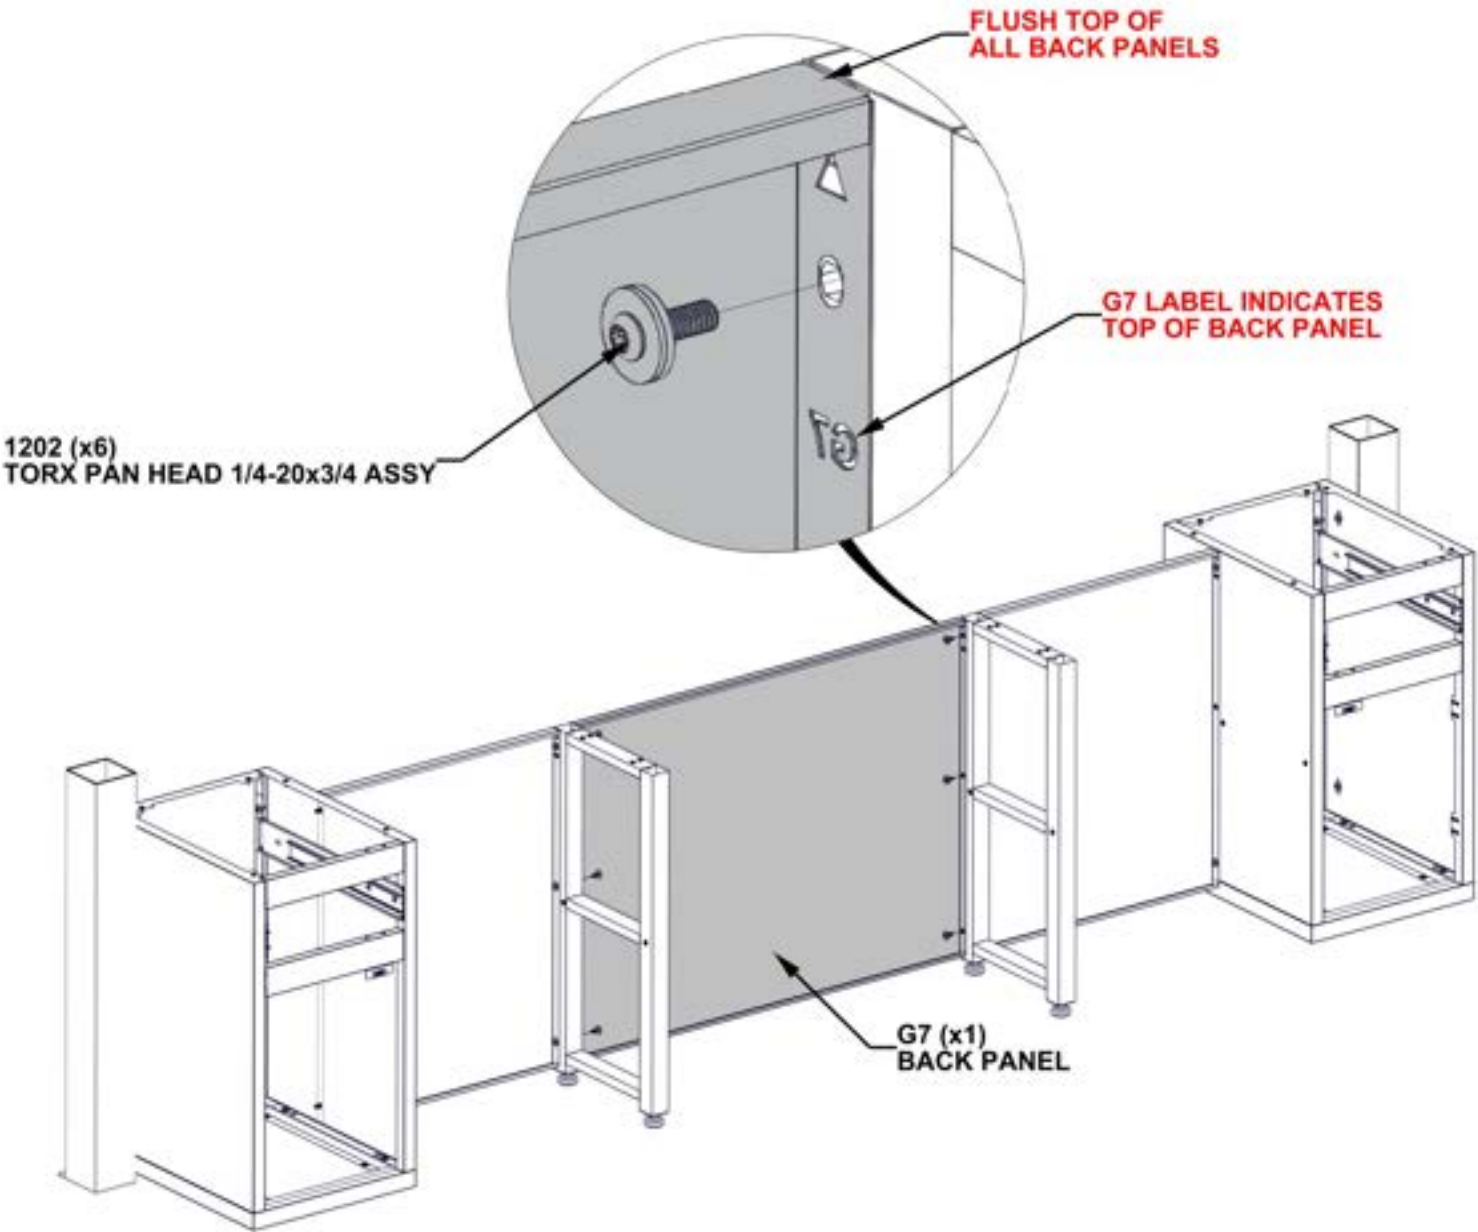


STEP 122 - BAR CABINET ASSEMBLY

Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



L4 SHELF ASSEMBLY - A4M03644
(x2) 27 3/4"x15 7/16"1" (25x392.2x705)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

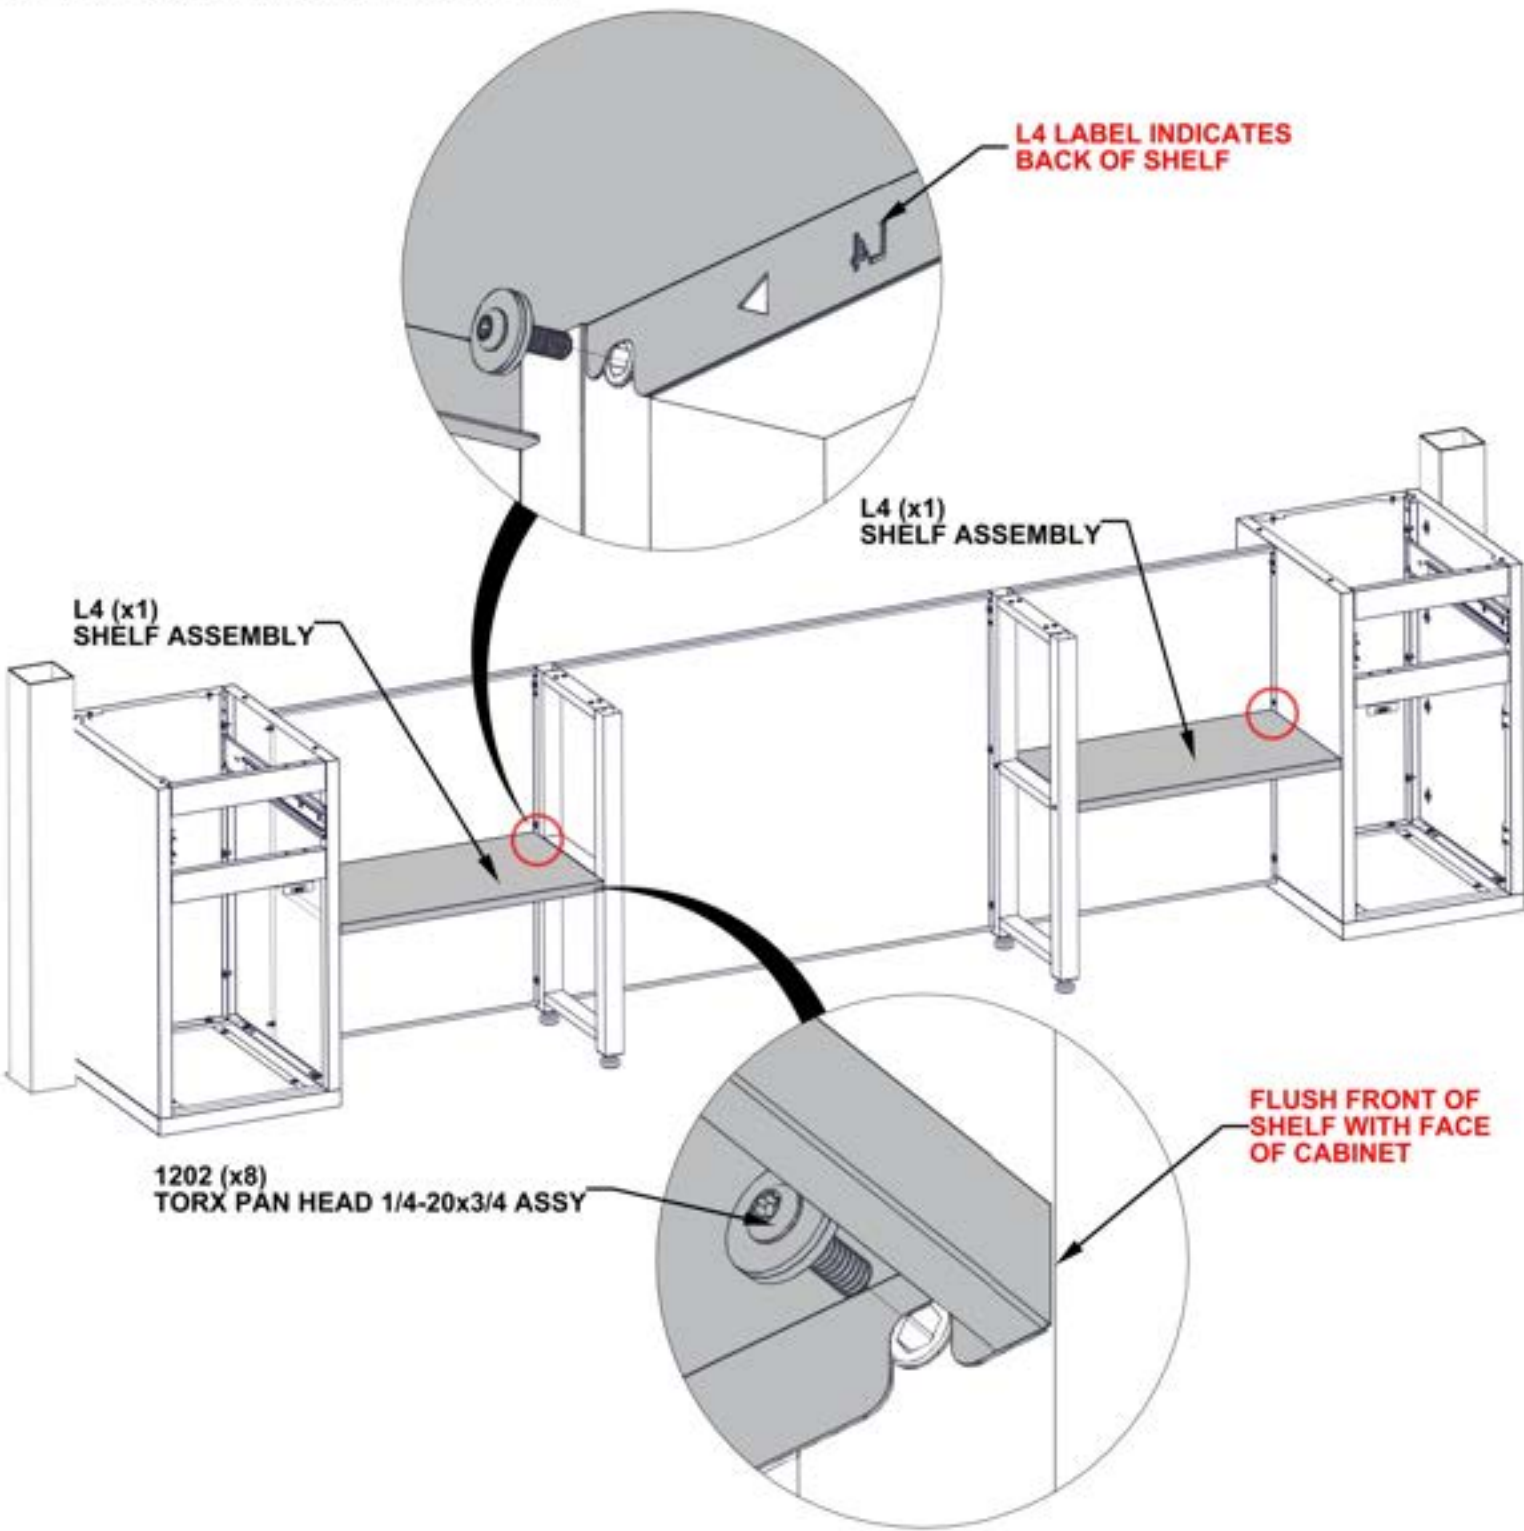


STEP 123 - BAR CABINET ASSEMBLY



L3 SHELF ASSEMBLY M - A4M03645
(x1) 45 7/8"x15 7/16"x1" (25x392.2x1166)

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

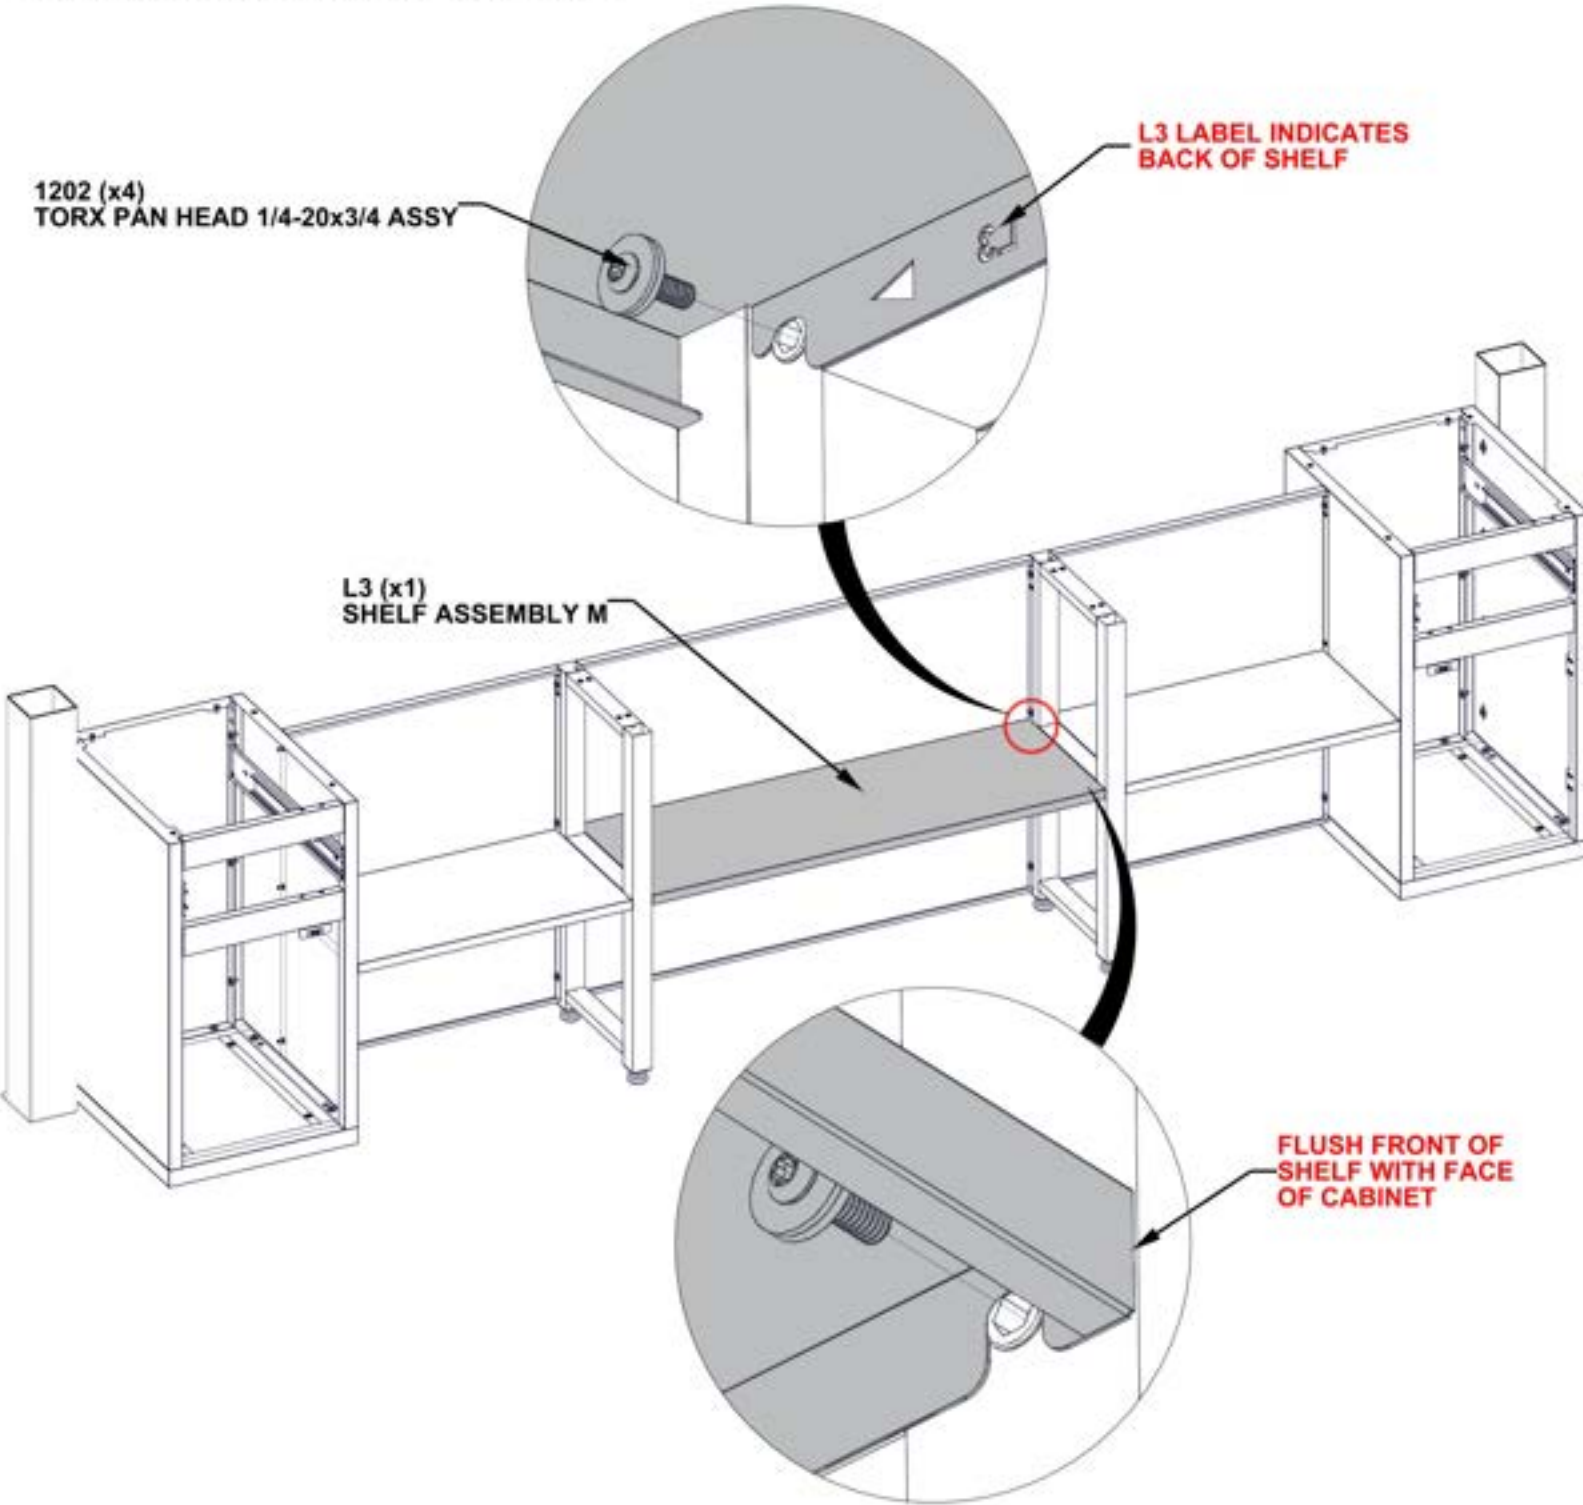


STEP 124 - BAR CABINET ASSEMBLY




Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

A1 TABLE BRACKET ASSEMBLY - A4M03634
(x2) 6 15/16"x6 15/16"x1 15/16" (50x176x176)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

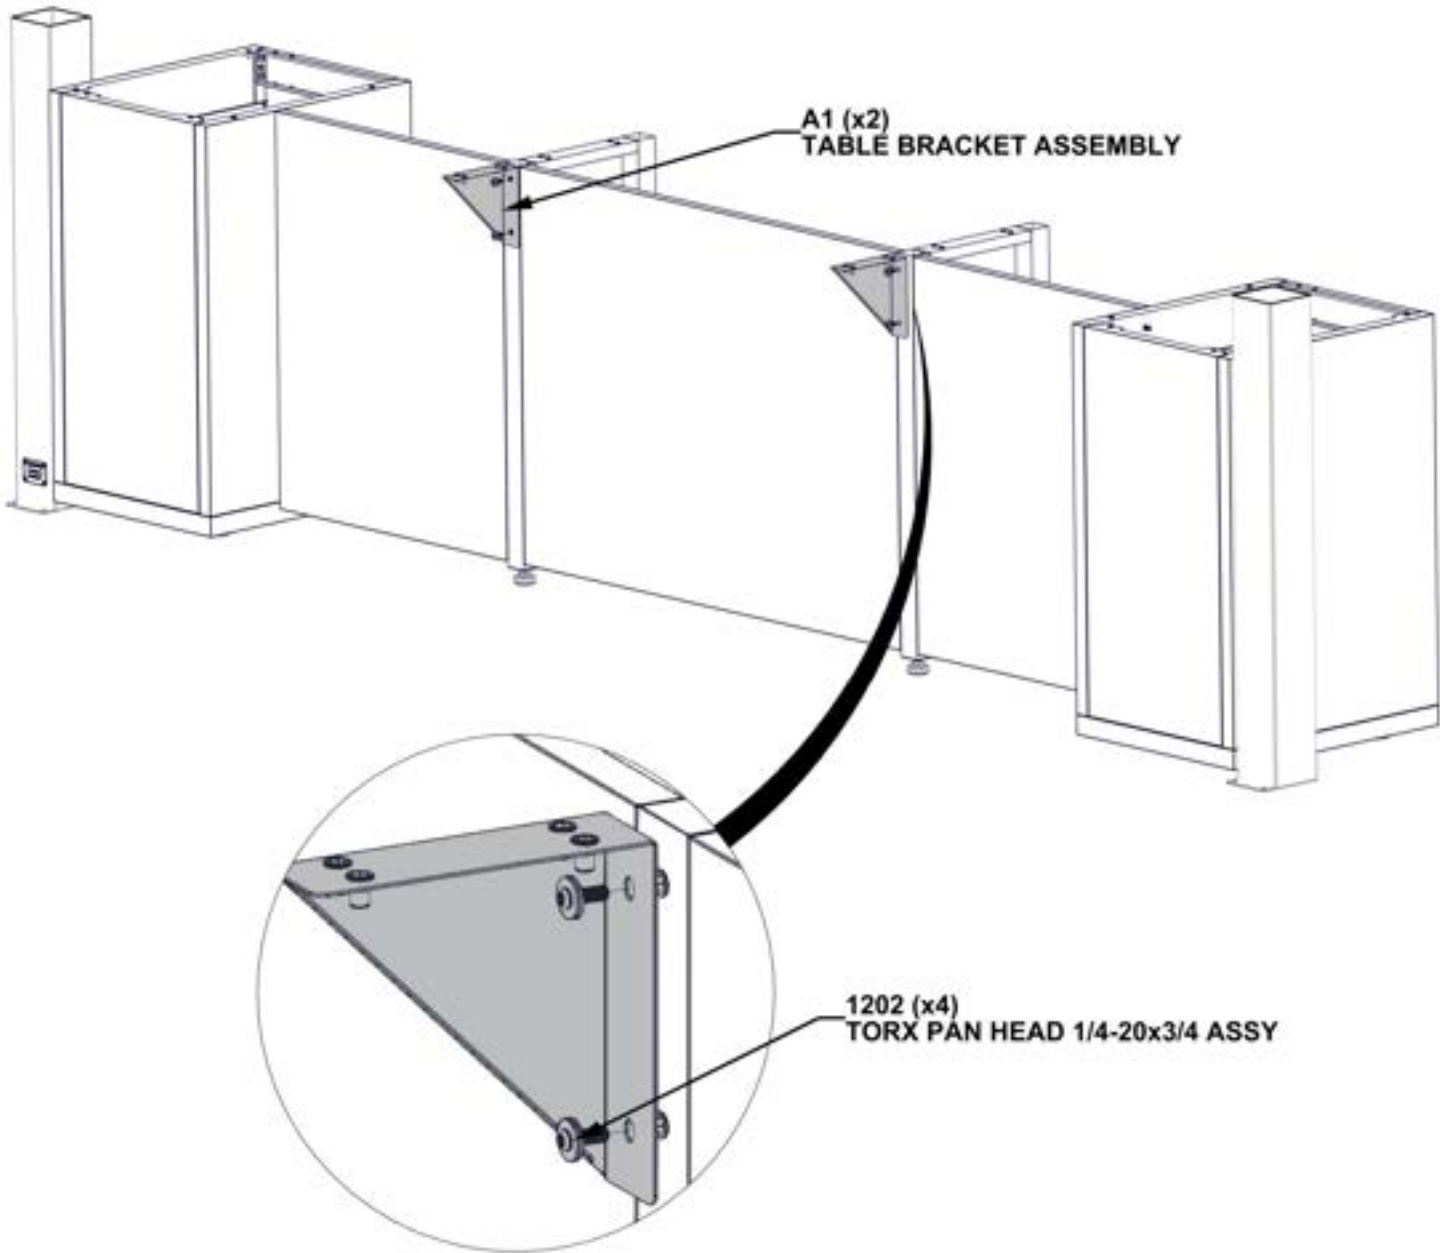


STEP 125 - BAR CABINET ASSEMBLY

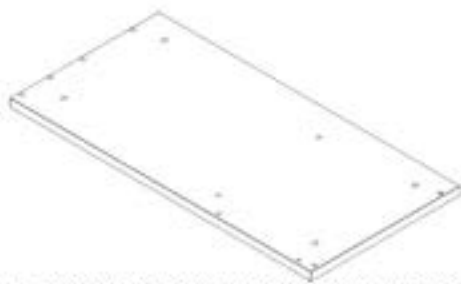

T6 TABLETOP PANEL ASSEMBLY - A4M03615
(x1) 47 3/16"x23 3/8"x1 1/4" (32x593x1199)

Qty	PartNo	Description
10	H101103	TORX SOCKET SCREW 1/4-20

- ONLY BAR CABINET IS SHOWN FOR DETAIL.
- SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.

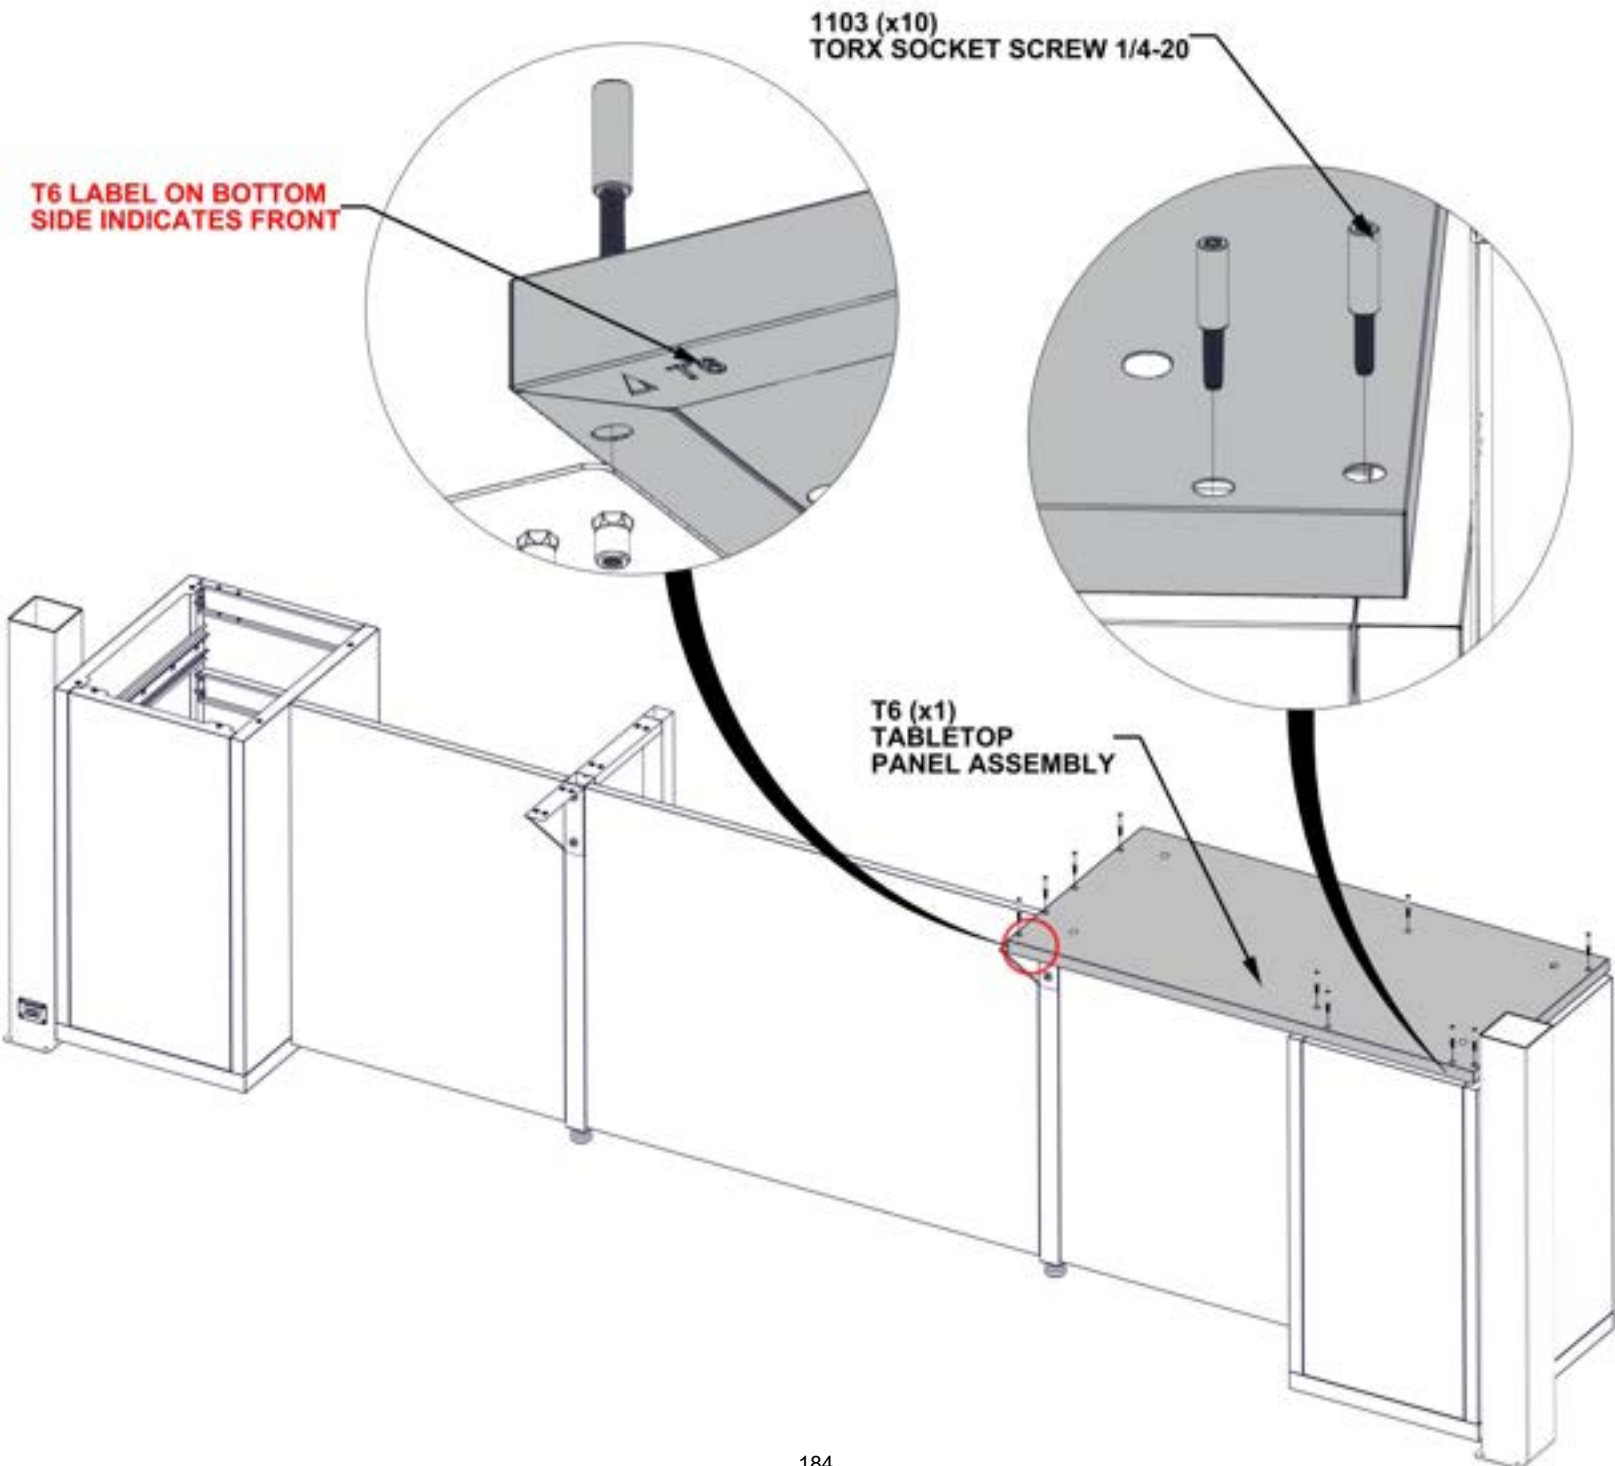


STEP 126 - BAR CABINET ASSEMBLY



T8 TABLETOP PANEL - A4M03625
(x1) 47 7/8"x23 3/8"x1 1/4" (32x593x1216)

Qty	PartNo	Description
8	H101103	TORX SOCKET SCREW 1/4-20

- ONLY BAR CABINET IS SHOWN FOR DETAIL.
- SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.

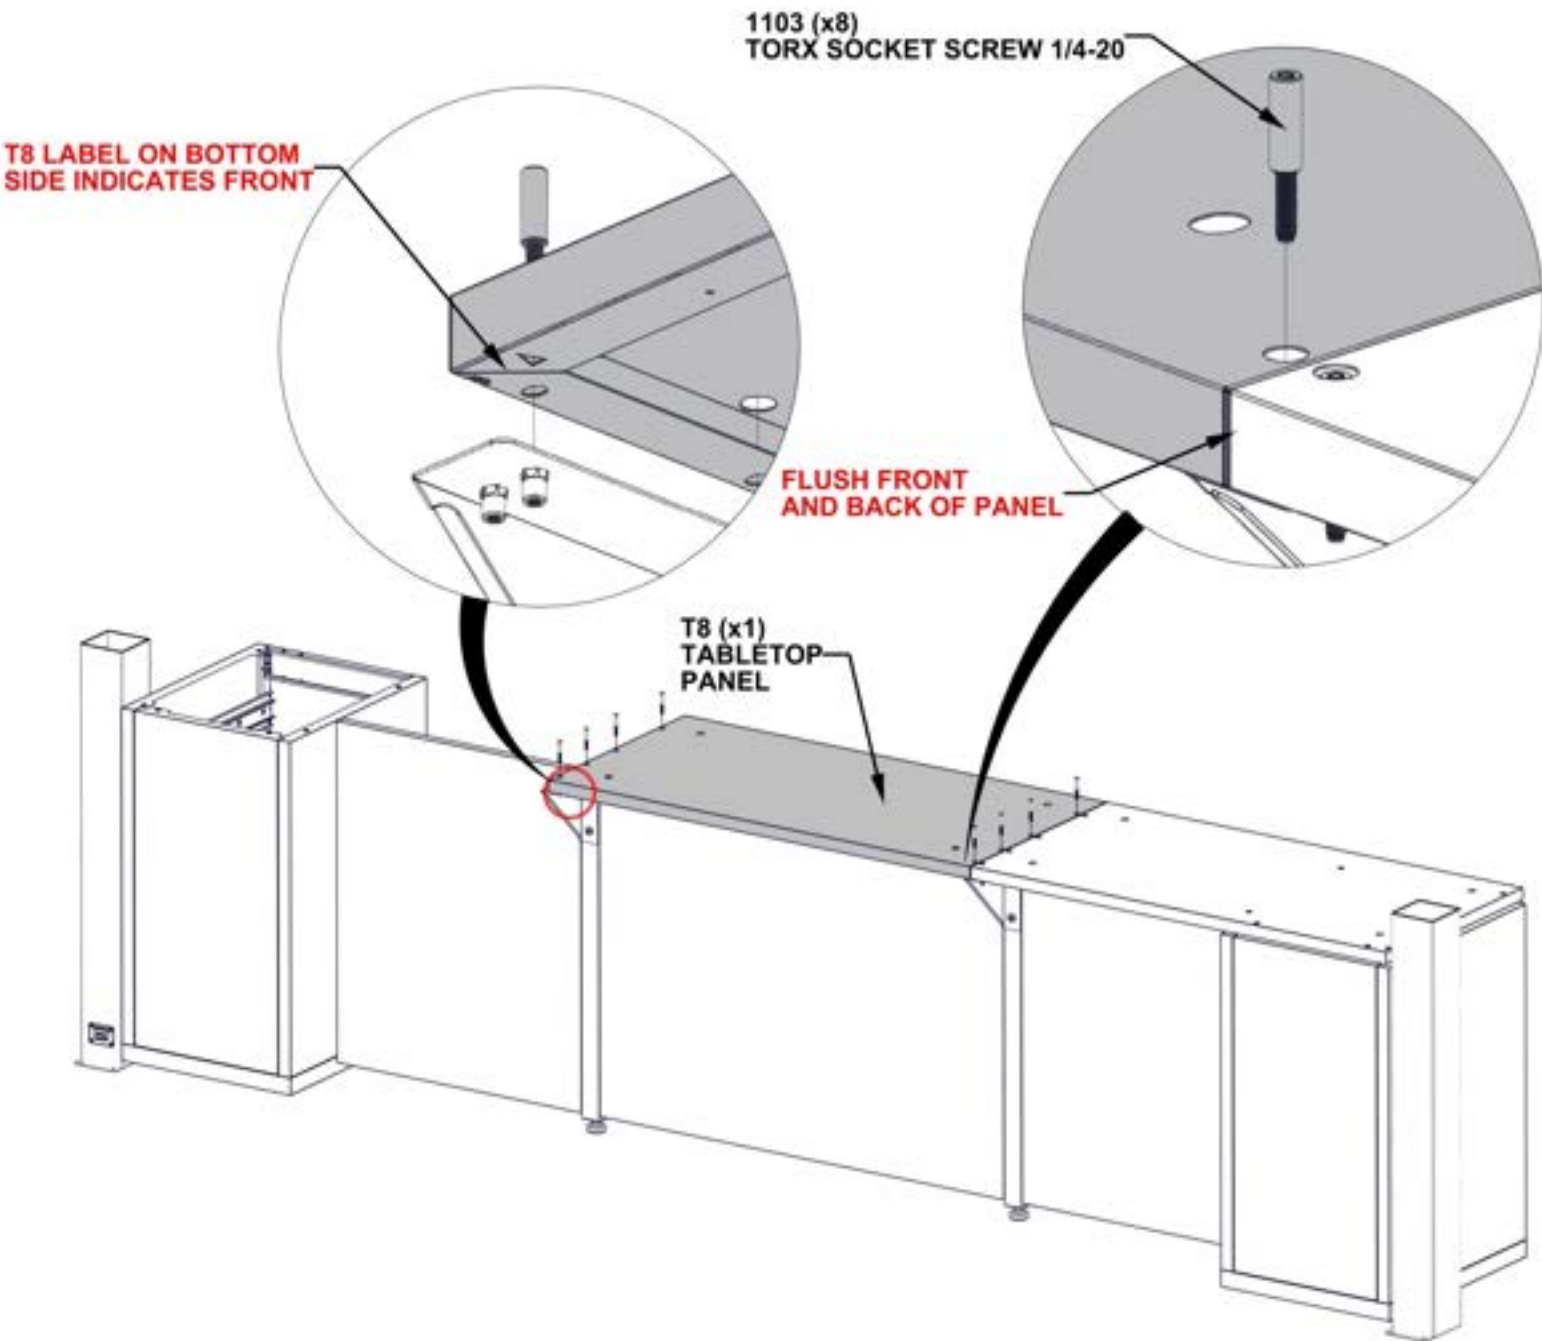


STEP 127 - BAR CABINET ASSEMBLY



T9 TABLETOP PANEL ASSEMBLY - A4M03639
(x1) 47 3/16"x23 3/8"x1 1/4" 1 1/4" (32x593x1199)

Qty	PartNo	Description
10	H101103	TORX SOCKET SCREW 1/4-20

- ONLY BAR CABINET IS SHOWN FOR DETAIL.
- SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.

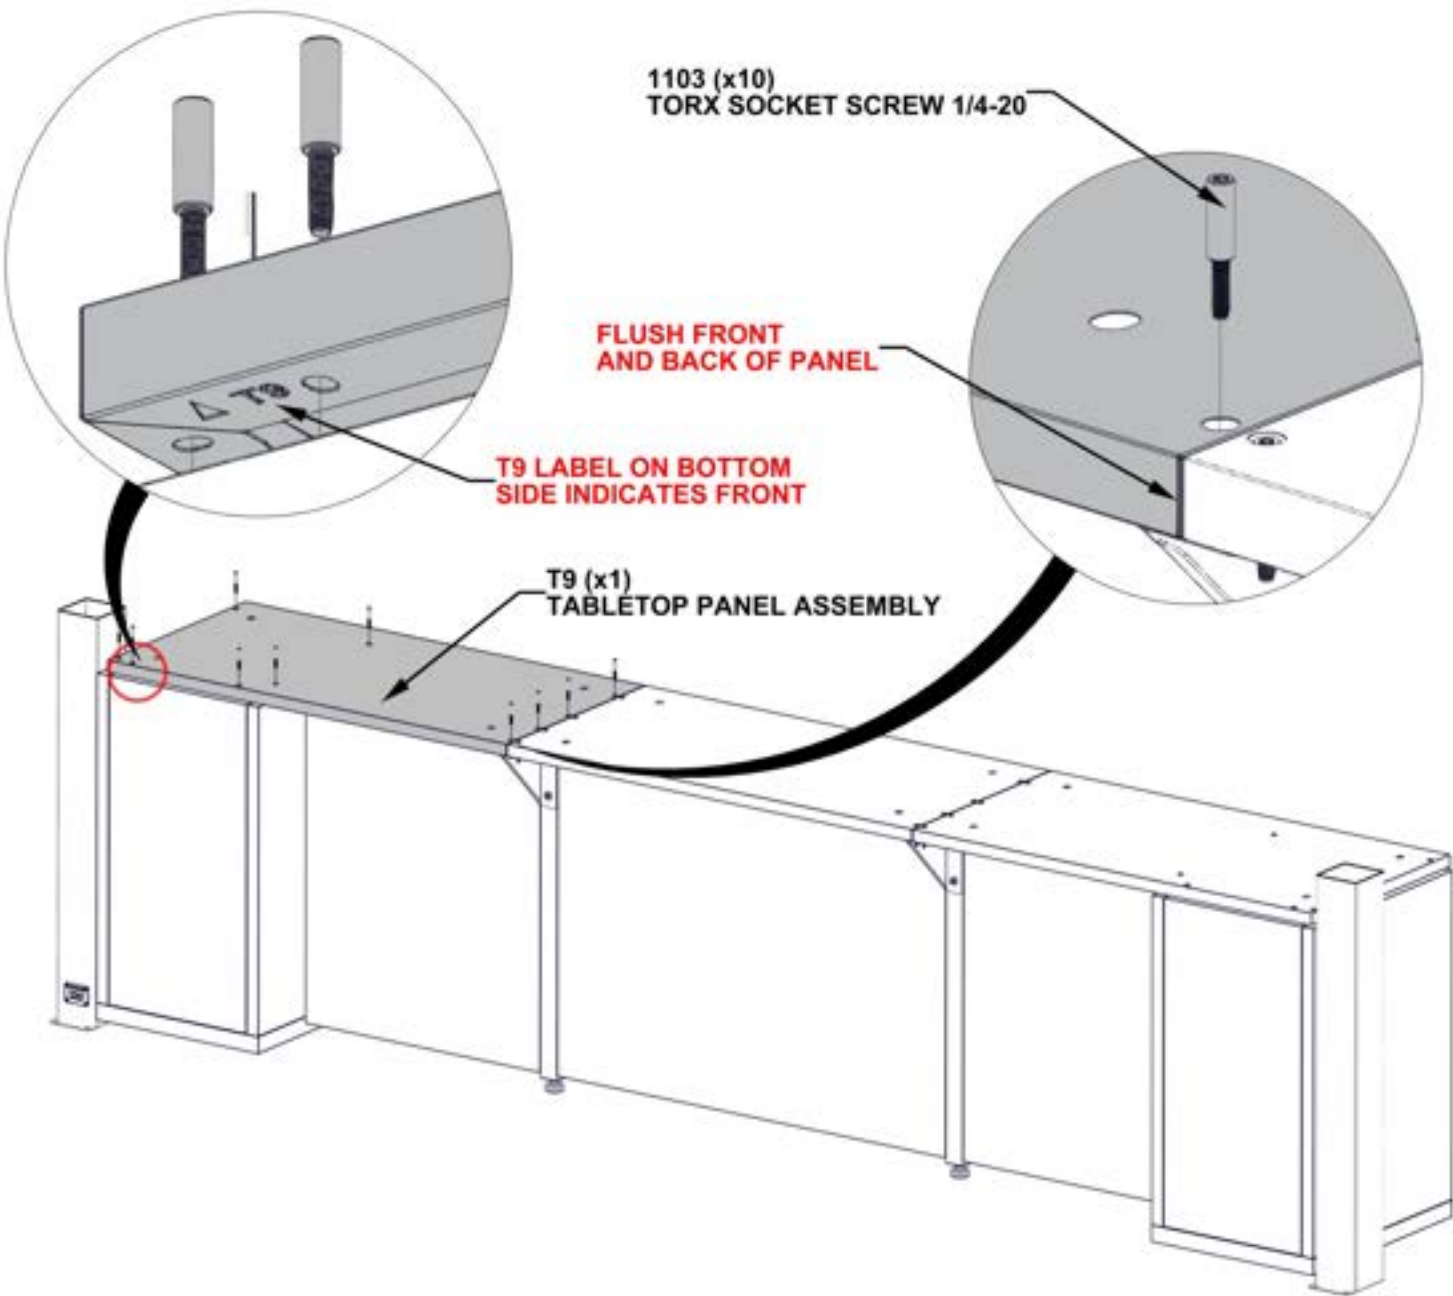


STEP 128A - BAR CABINET MARBLE INSTALLATION



M4 BAR TABLE MARBLE - A4M03616
(x1) 47 15/16"x24 15/16"x1 15/16" (50x634x1218)


- ONLY BAR CABINETS ARE SHOWN FOR DETAIL.
- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET MARBLE COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL MARBLE IS TIGHT AGAINST POST AND SIDES ARE FLUSH WITH PANEL.
- **WHEN SETTING MARBLE IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH MARBLE.**

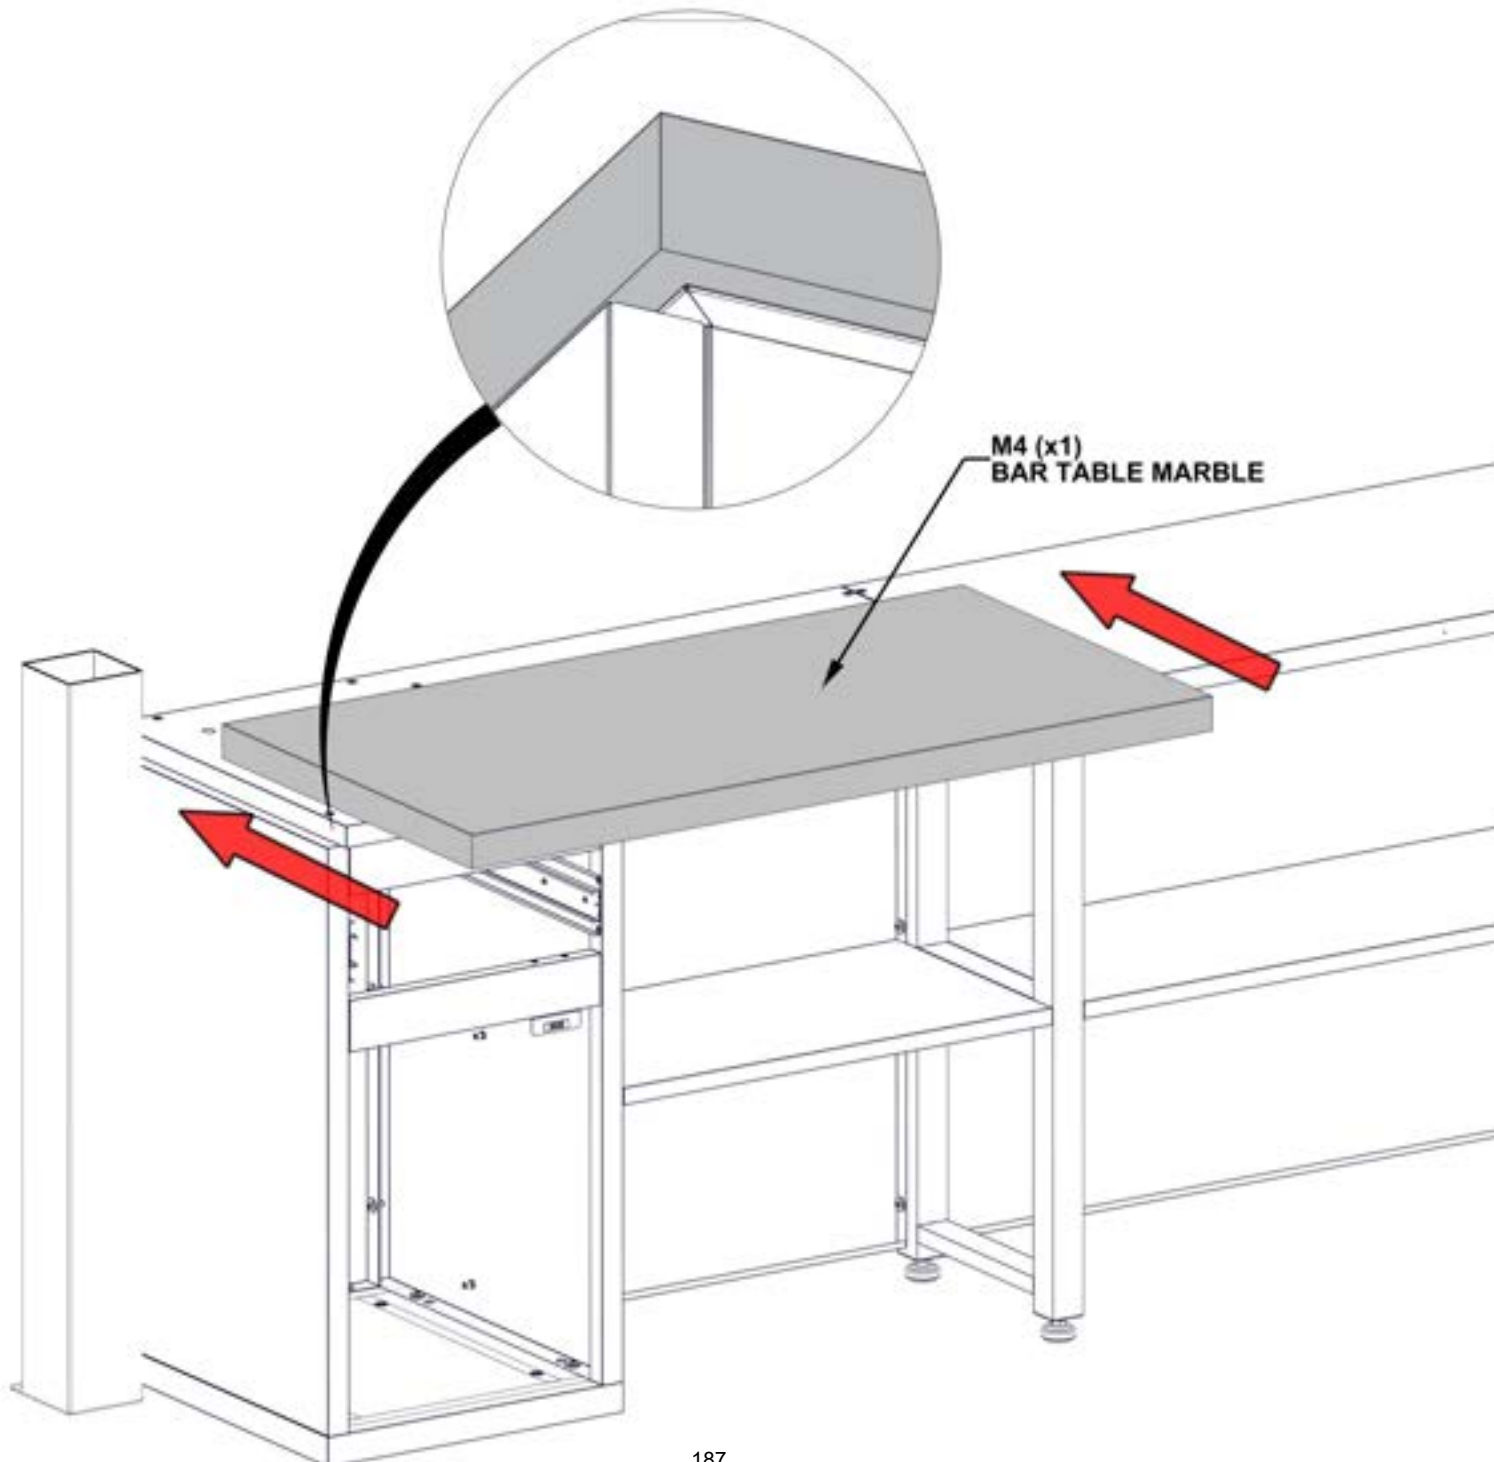

STEP 128B - BAR CABINET MARBLE INSTALLATION

Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"
4	H101053	STEEL WASHER 6x20
4	H101054	SEALANT WASHER

- ONLY BAR CABINETS ARE SHOWN FOR DETAIL.
- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.
- ONCE MARBLE IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.
- DO NOT USE MARBLE SURFACE AS A WORK BENCH.

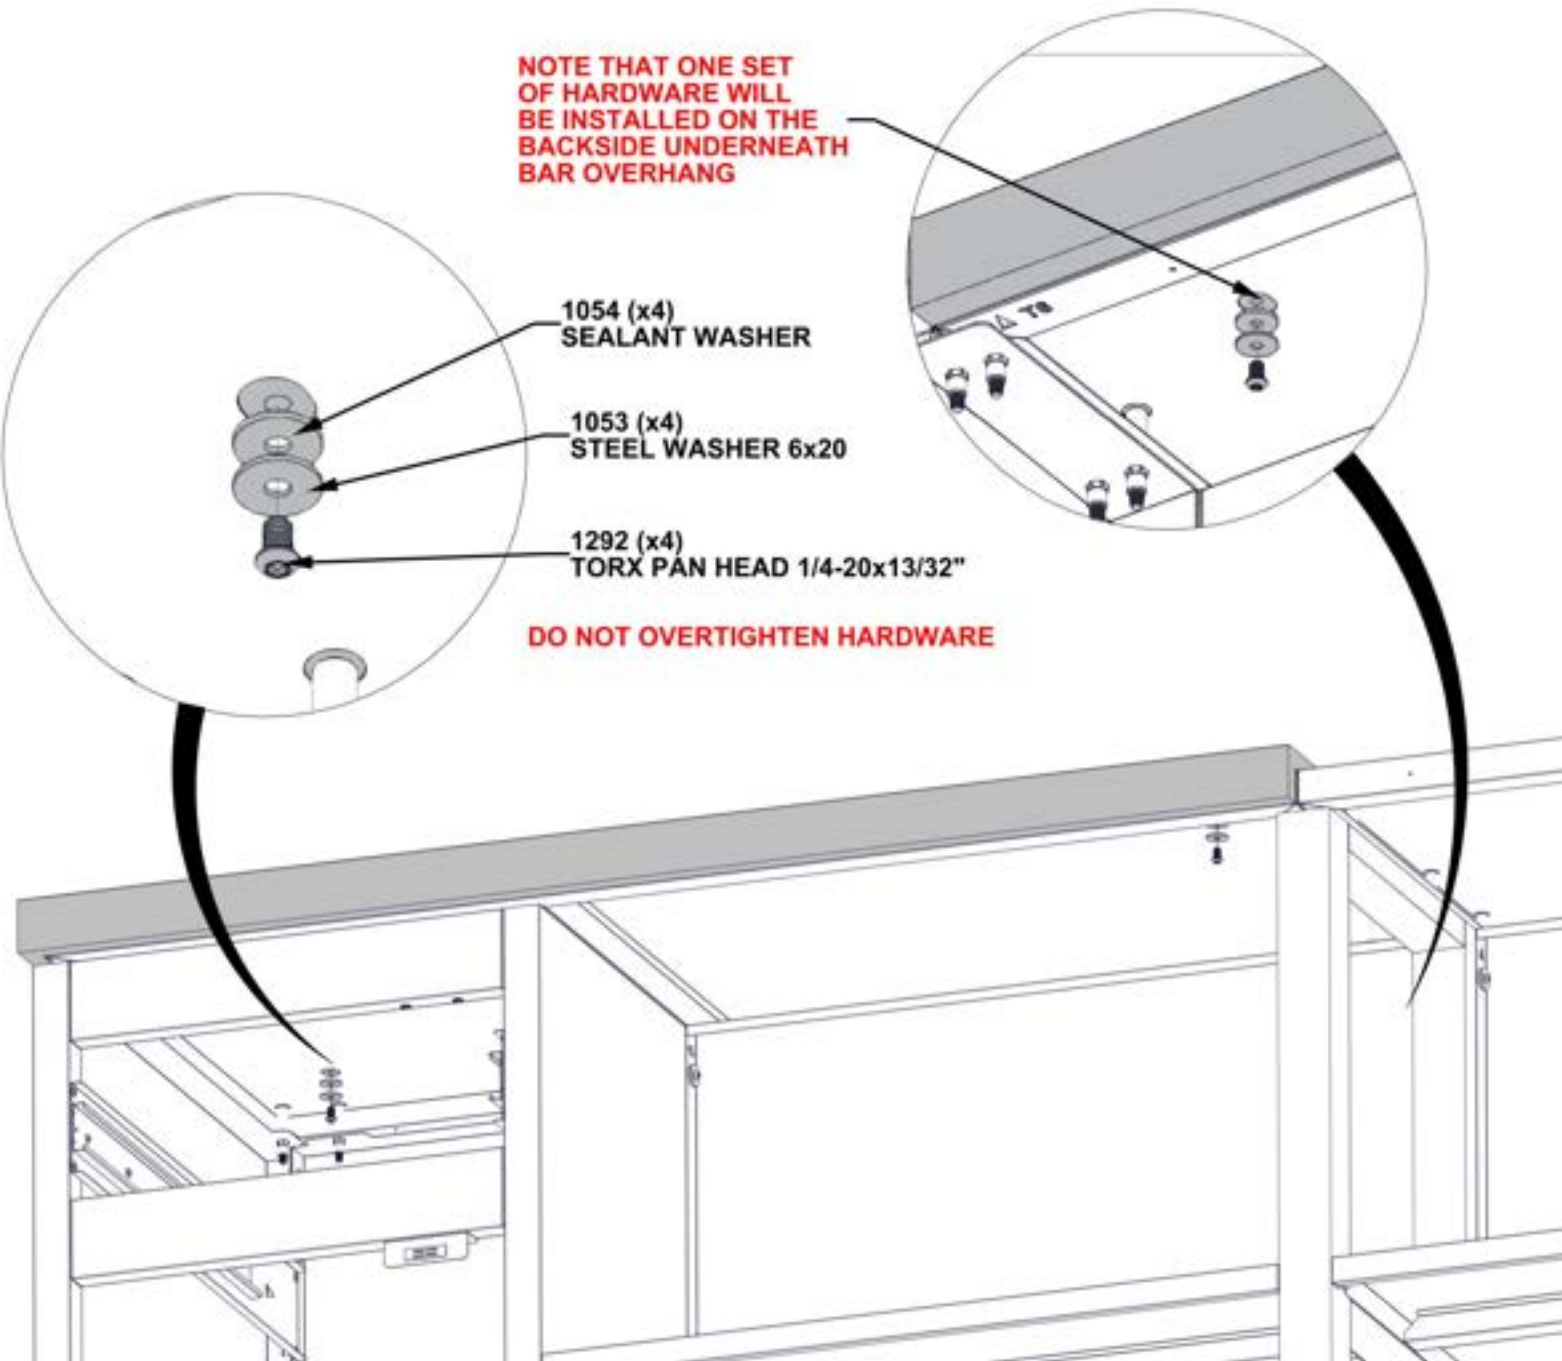


STEP 129A - BAR CABINET MARBLE INSTALLATION



M6 BAR TABLE MARBLE - A4M03633
(x1) 47 7/8"x24 7/8"x1 15/16" (49x632x1216)


- ONLY BAR CABINETS ARE SHOWN FOR DETAIL.
- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET MARBLE COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL MARBLE PIECES ARE TIGHT AGAINST ONE ANOTHER.
- **WHEN SETTING MARBLE IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH MARBLE.**

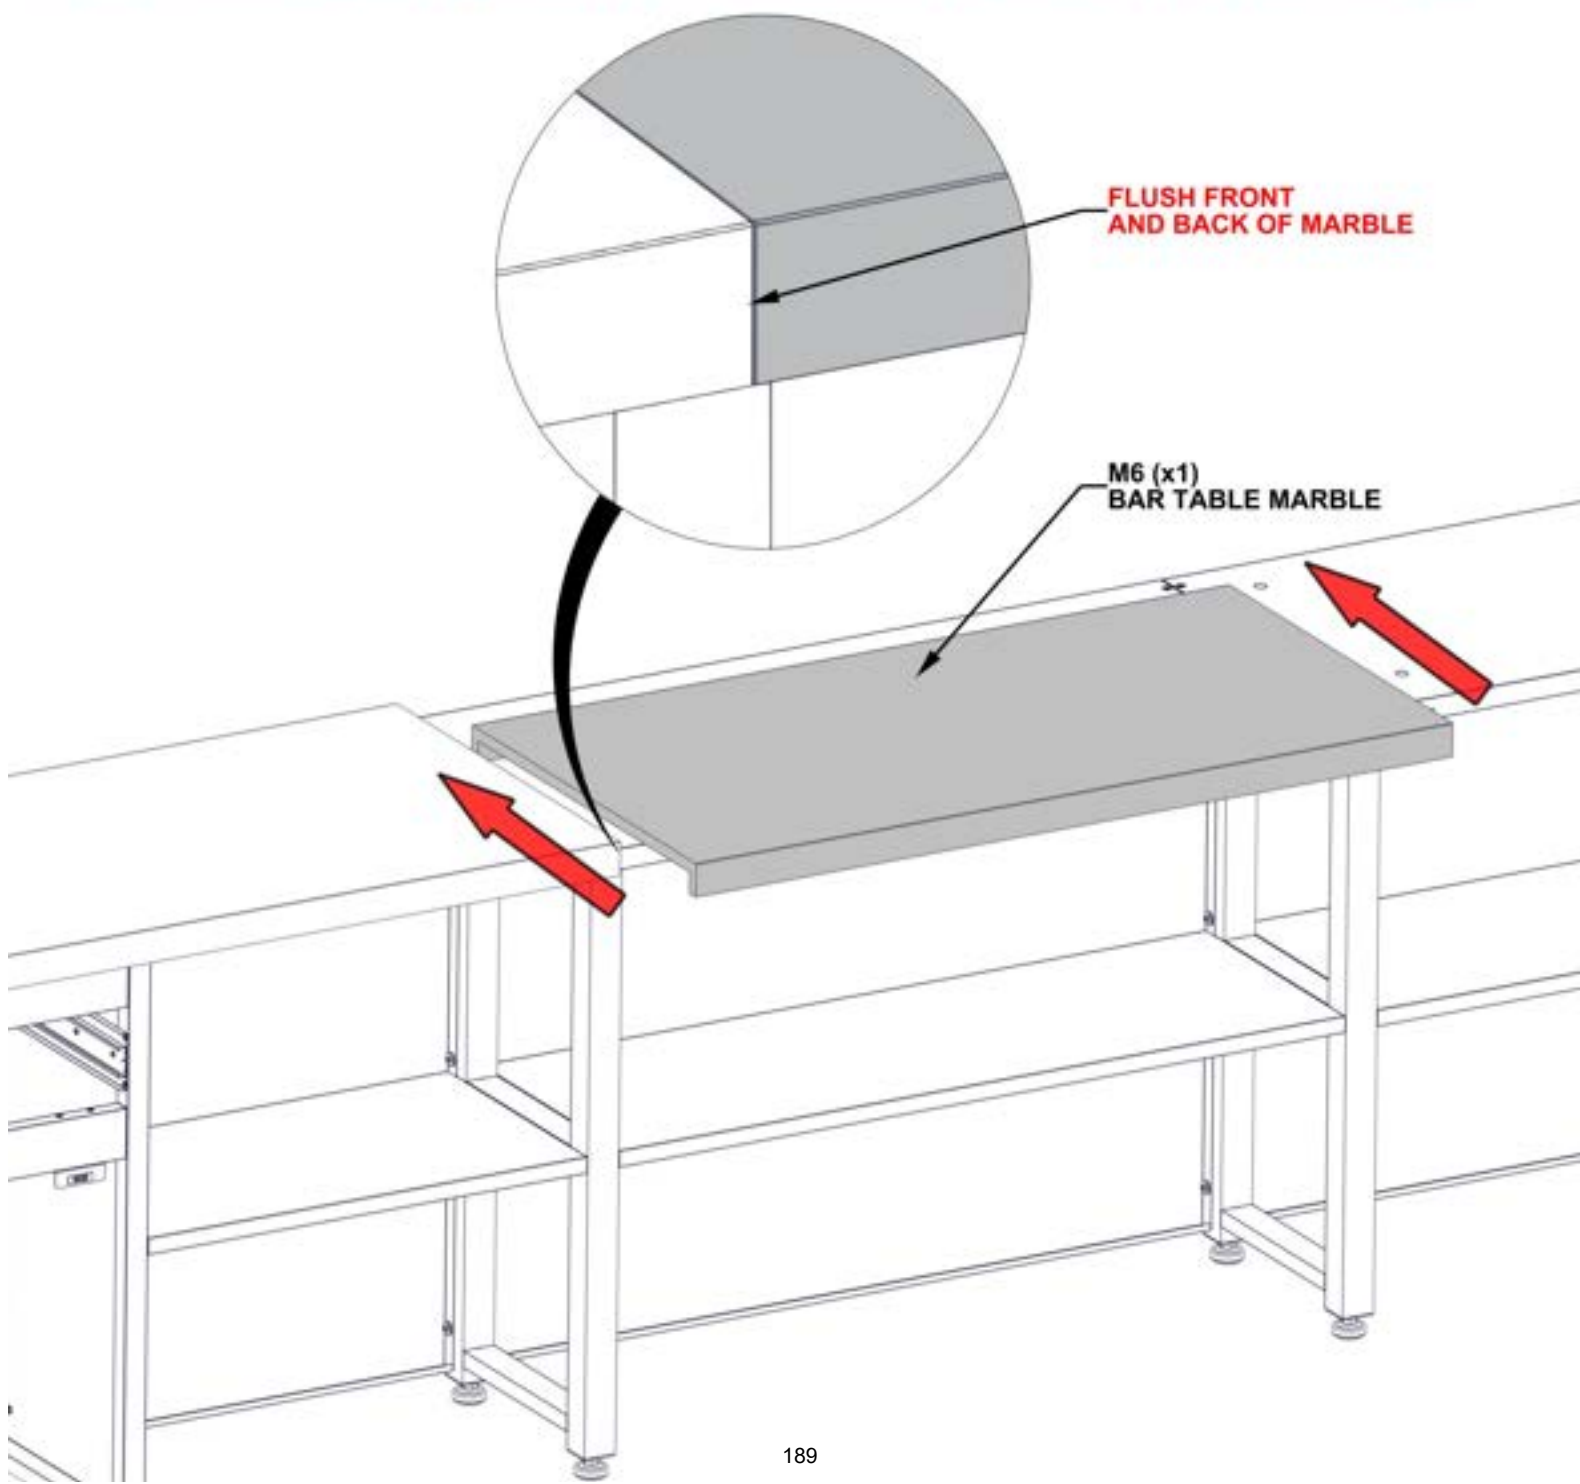

STEP 129B - BAR CABINET MARBLE INSTALLATION

Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"
4	H101053	STEEL WASHER 6x20
4	H101054	SEALANT WASHER

- ONLY BAR CABINETS ARE SHOWN FOR DETAIL.
- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.
- ONCE MARBLE IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.
- DO NOT USE MARBLE SURFACE AS A WORK BENCH.

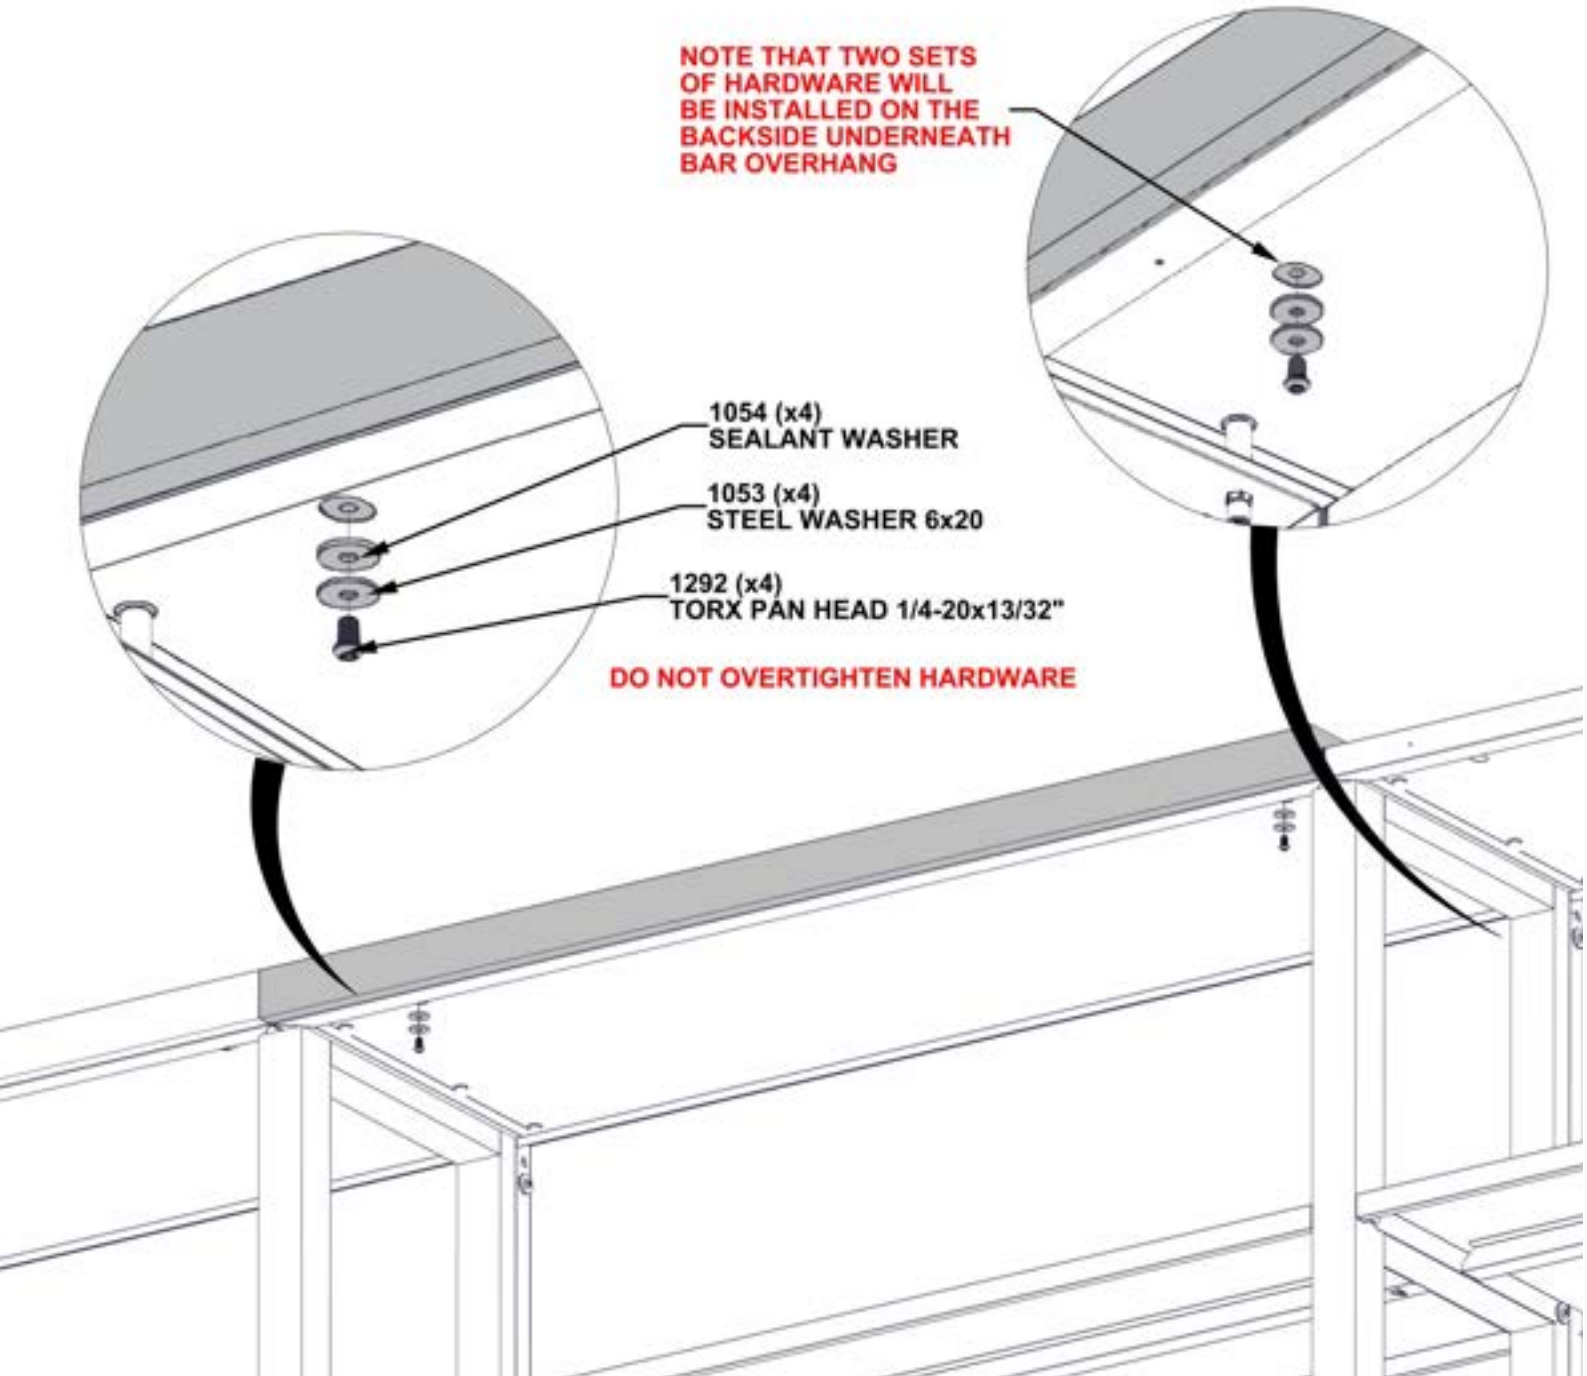


STEP 130A - BAR CABINET MARBLE INSTALLATION



M4 BAR TABLE MARBLE - A4M03616
(x1) 47 15/16"x24 15/16"x1 15/16" (50x634x1218)


- ONLY BAR CABINETS ARE SHOWN FOR DETAIL.
- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET MARBLE COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL MARBLE PIECES ARE TIGHT AGAINST ONE ANOTHER AND AGAINST POST.
- **WHEN SETTING MARBLE IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH MARBLE.**

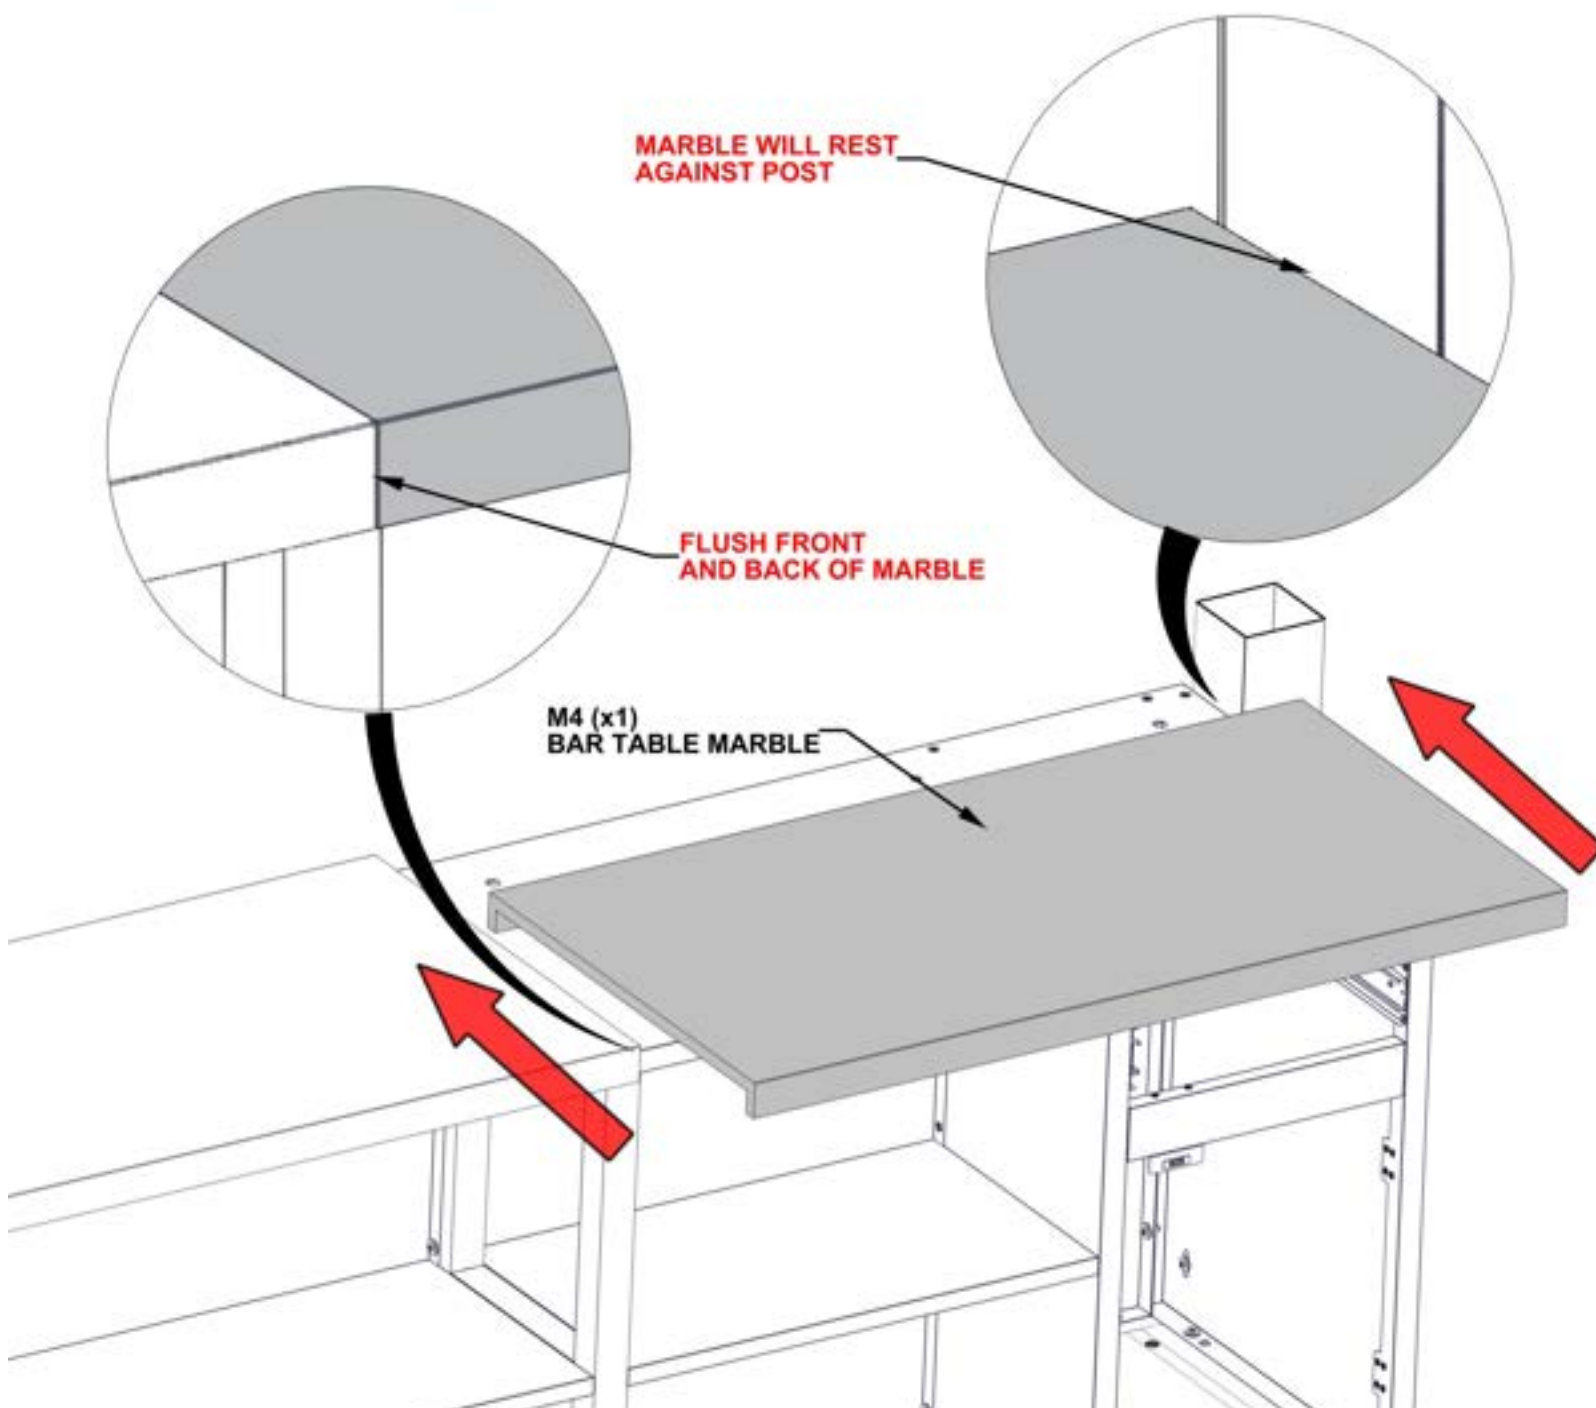

STEP 130B - BAR CABINET MARBLE INSTALLATION

Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"
4	H101053	STEEL WASHER 6x20
4	H101054	SEALANT WASHER

- ONLY BAR CABINETS ARE SHOWN FOR DETAIL.
- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.
- ONCE MARBLE IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.
- DO NOT USE MARBLE SURFACE AS A WORK BENCH.

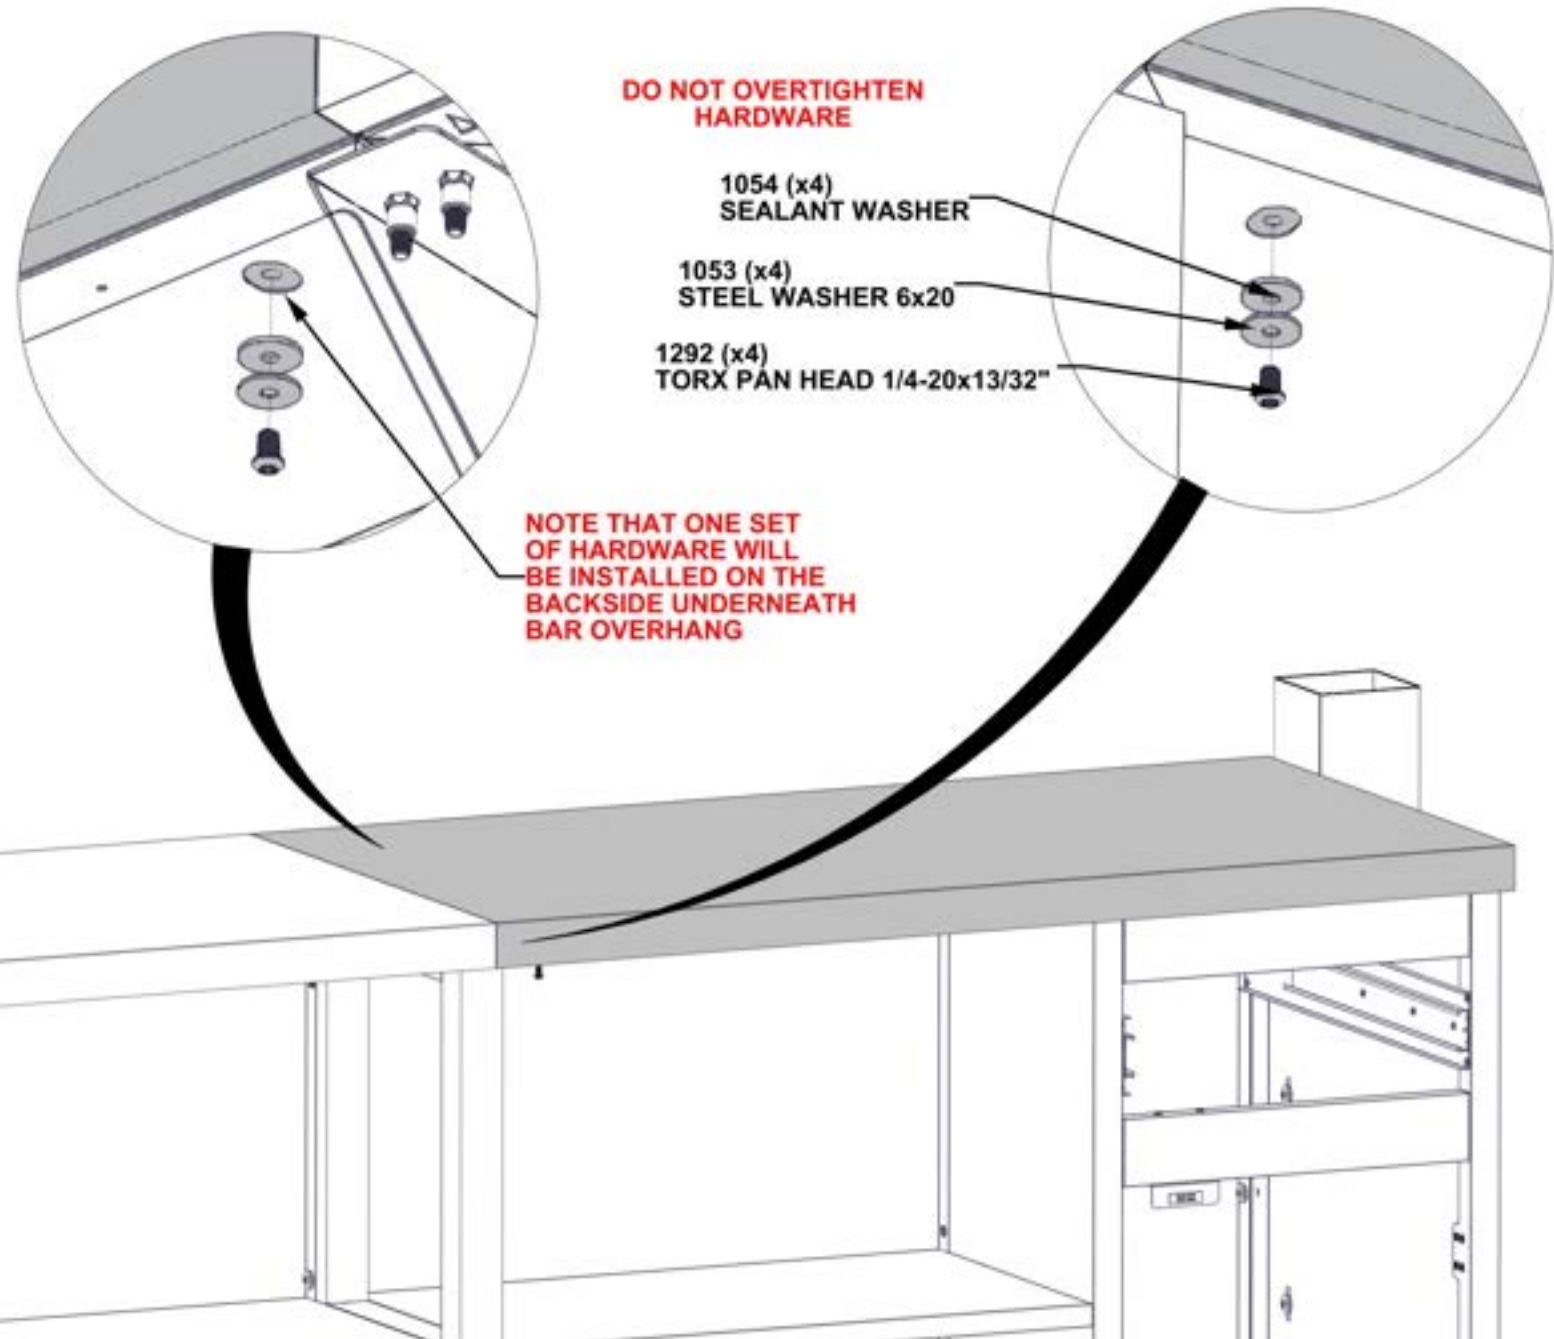


STEP 131A - BAR DRAWER ASSEMBLY

Qty	PartNo	Description
18	H101289	PAN HEAD SCREW 8-32x1/2" SS




D12 DRAWER BODY ASSEMBLY - A4M03621
(x2) 22 1/4"x15 13/16"x4 15/16" (126x402x565)

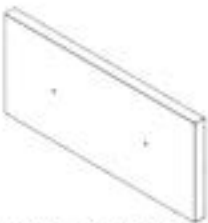

D11 DRAWER PANEL ASSEMBLY - A4M03619
(x2) 17 13/16"x8 1/16"x15/16" (24x205x452)

- REPEAT THIS STEP TWICE

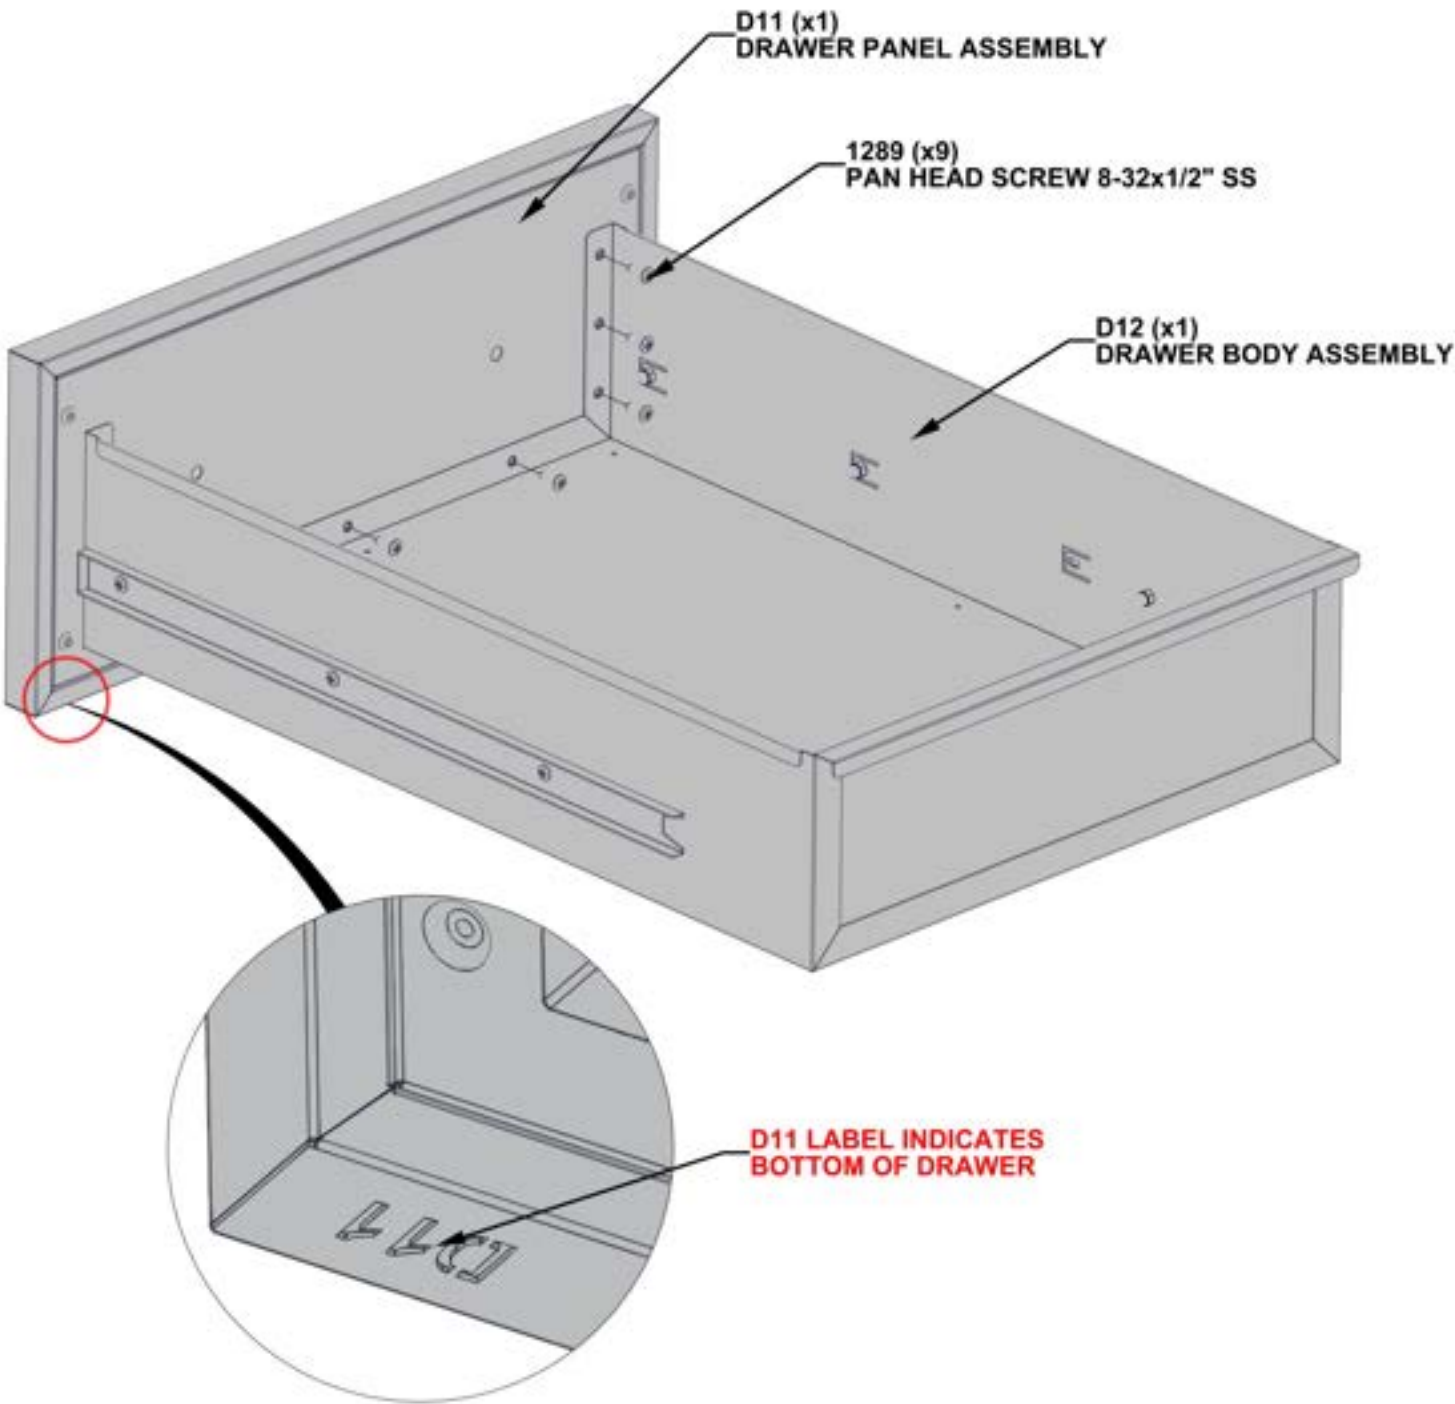


STEP 131B - BAR DRAWER ASSEMBLY



Qty	PartNo	Description
4	H101307	SHOULDER BOLT 8-32x30mm SS

H2 STAINLESS STEEL HANDLE - A4M03024
(x2) 5/8"x1 9/16"x11 13/16" (16x40x300)

- REPEAT THIS STEP TWICE

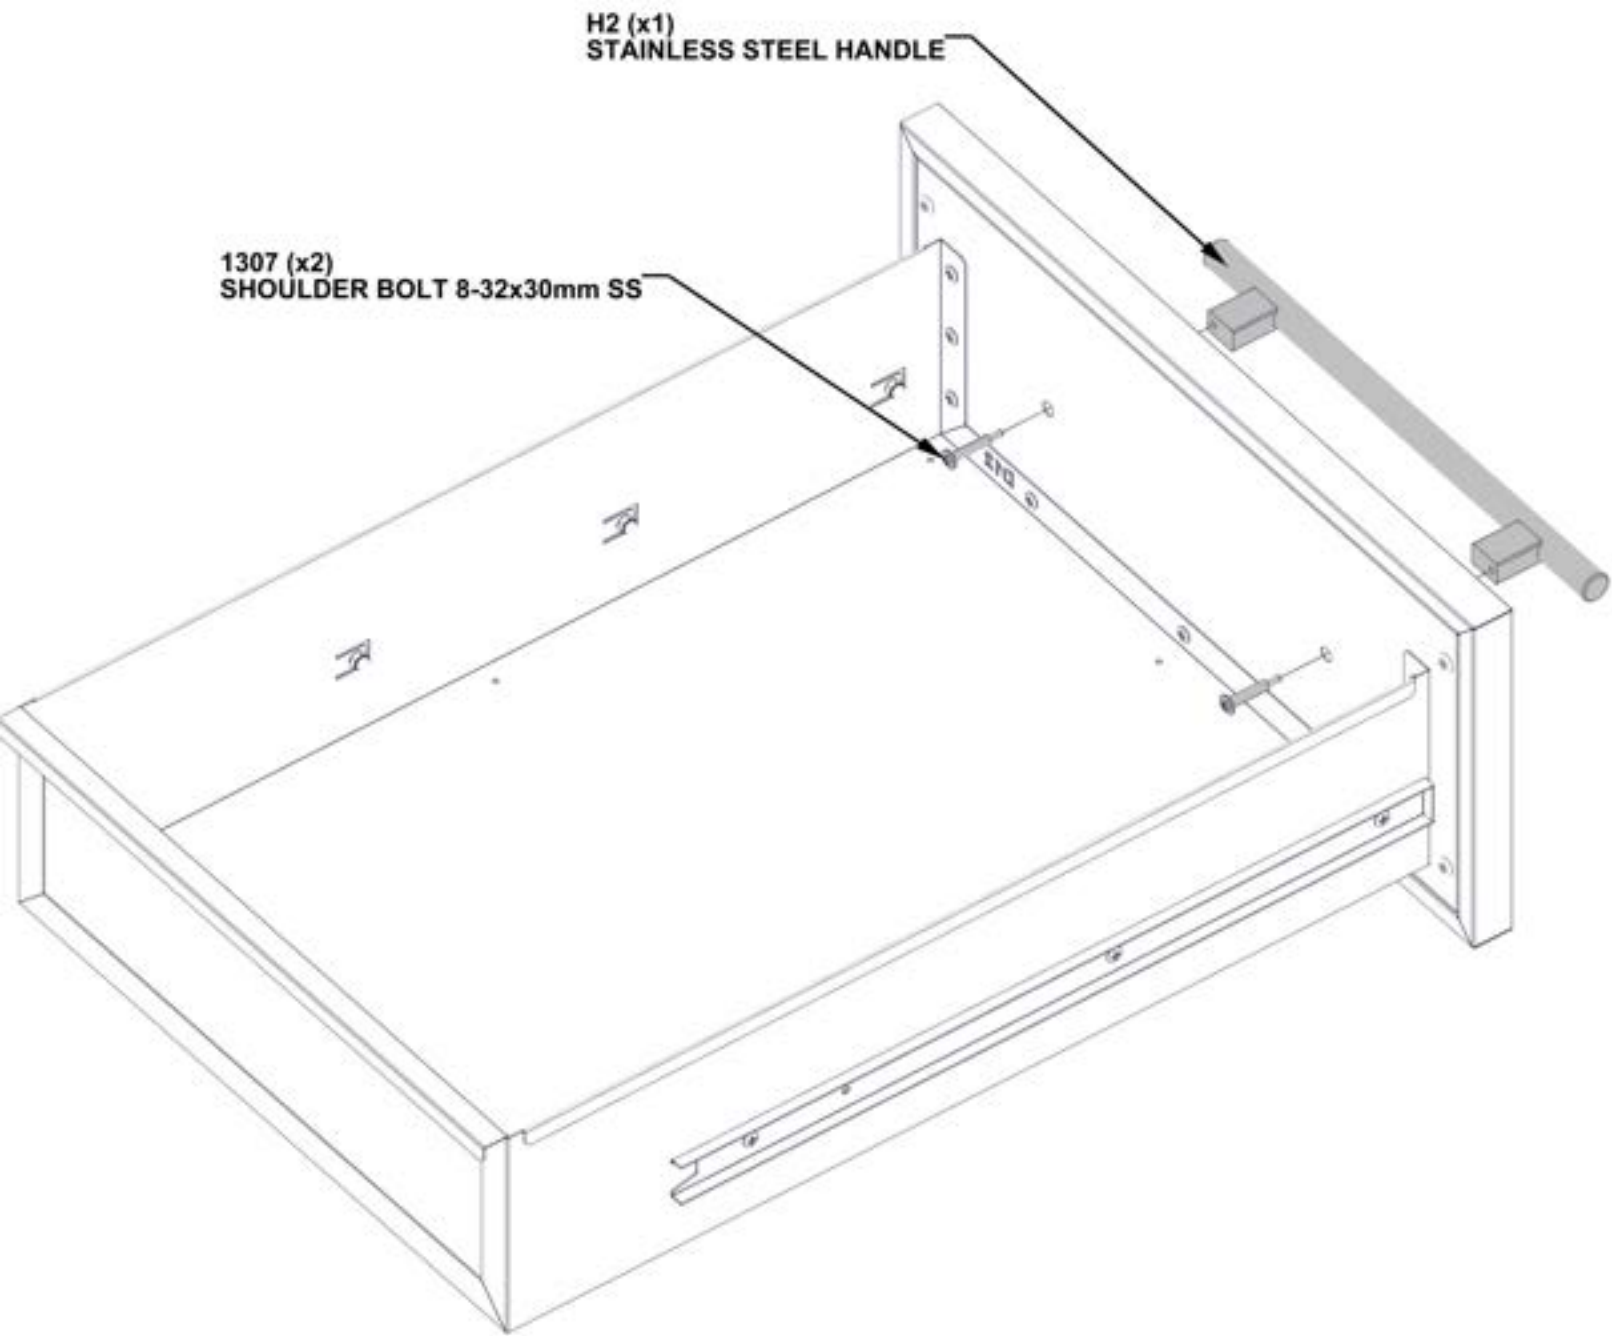


STEP 132 - BAR CABINET ASSEMBLY



DRAWER ASSEMBLY
FROM STEP 131

- ONLY BAR CABINET IS SHOWN FOR DETAIL.
- ATTACH DRAWER ASSEMBLY BY ALIGNING BOTH ENDS OF FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.
- PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.

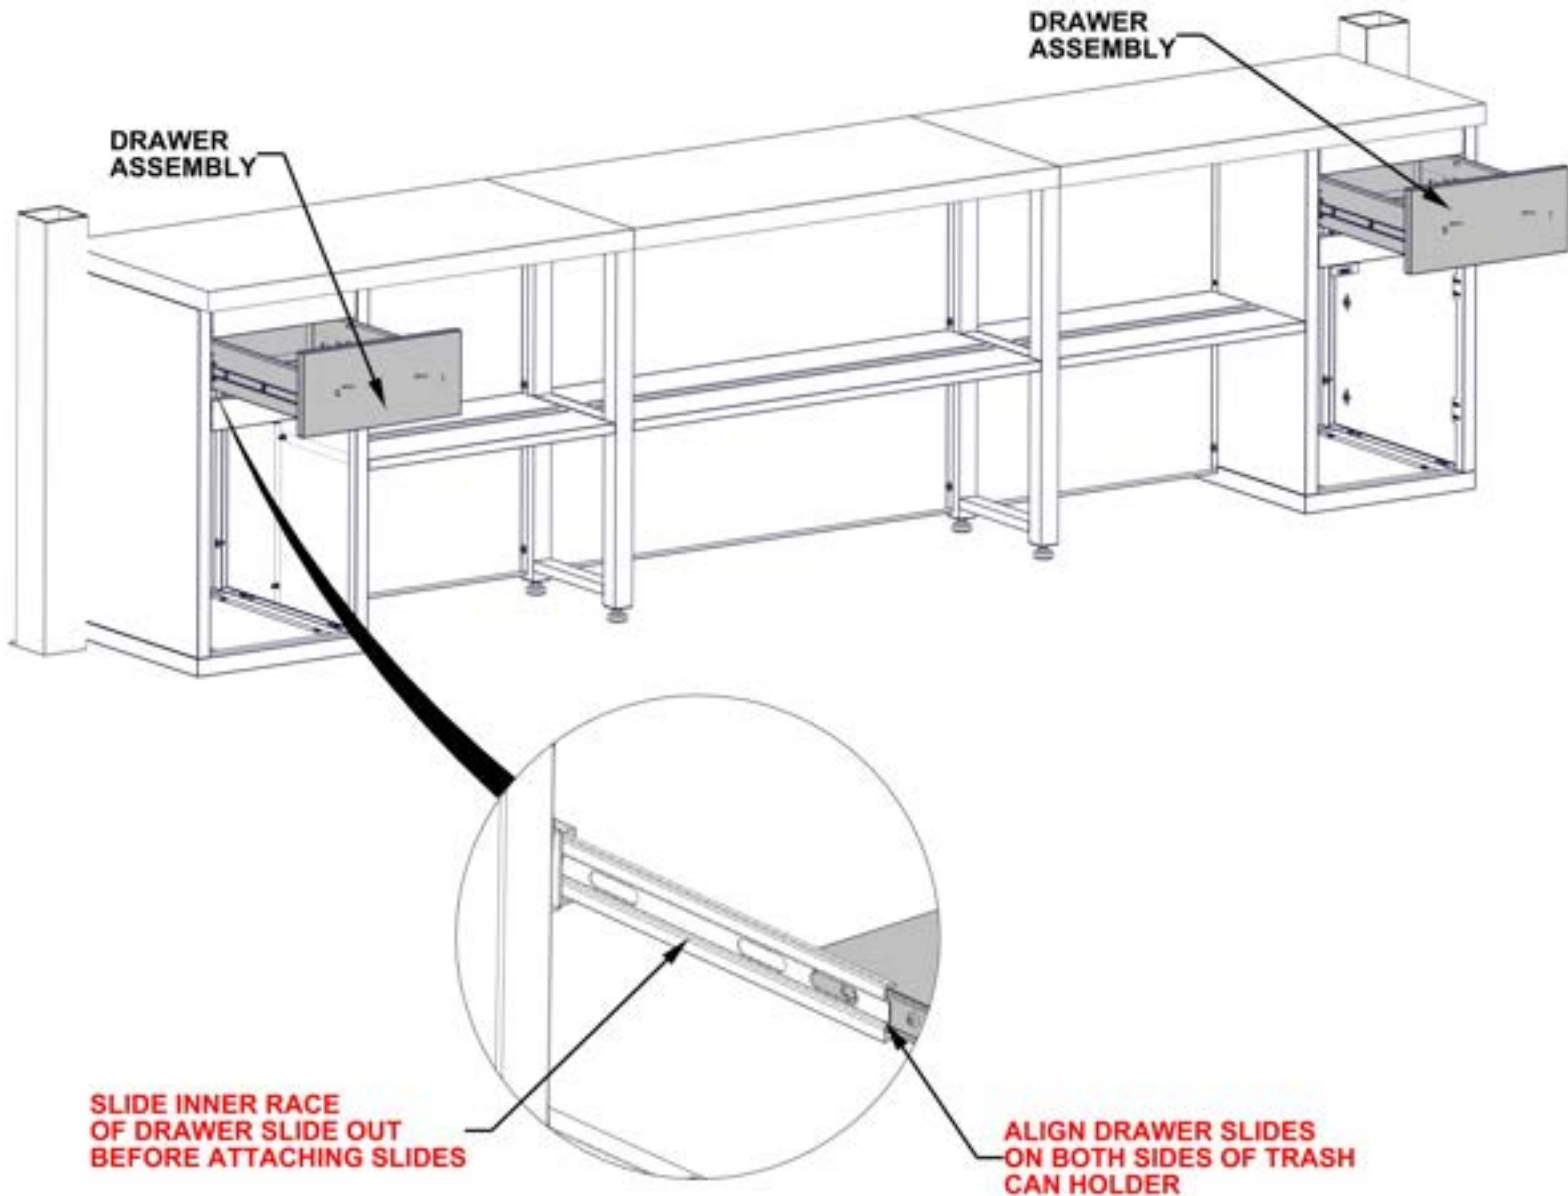

STEP 133A - DOOR ASSEMBLY



D10 DOOR PANEL ASSEMBLY - A4M03617
(x1) 24 3/4"x17 13/16"x15/16" (24x452x628)

Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW




D13 DOOR PANEL ASSEMBLY - A4M03643
(x1) 24 3/4"x17 13/16"x15/16" (24x452x628)



A4M03025 FULL OVERLAY HINGE
(x4)

- INSTALL CABINET HINGES TO THE REMAINING TWO DOORS.

DO NOT OVERTIGHTEN HARDWARE

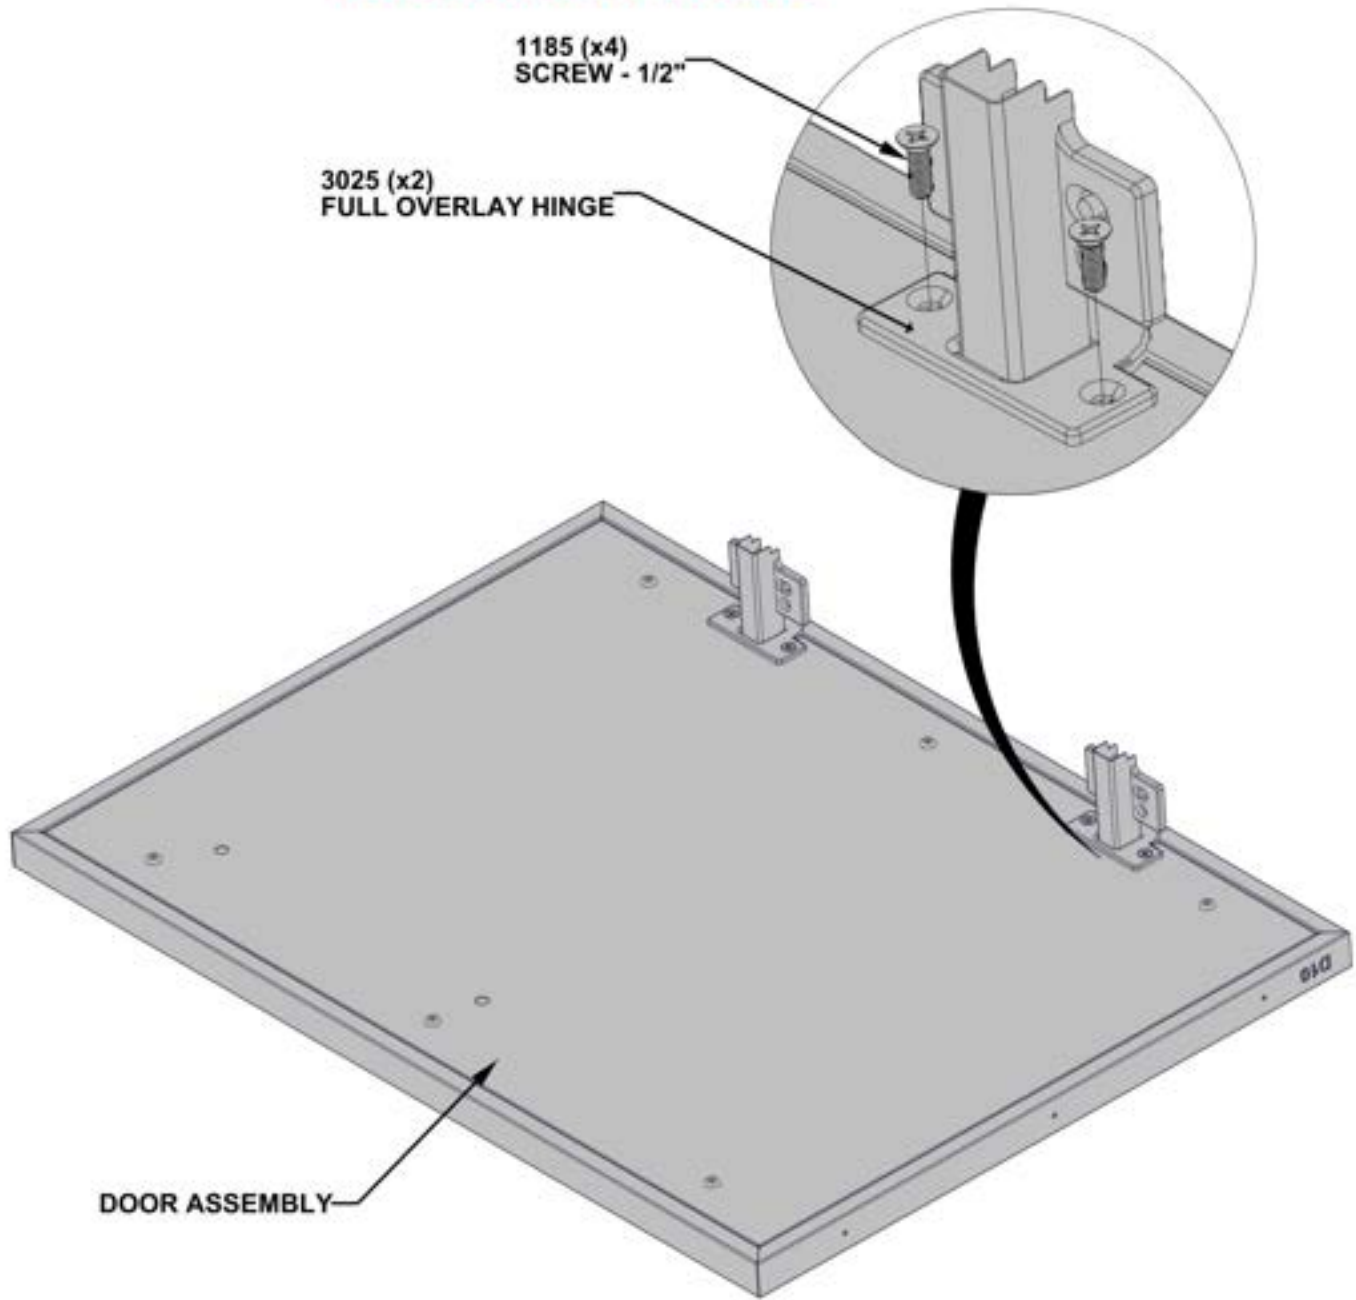


STEP 133B - DOOR ASSEMBLY

Qty	PartNo	Description
4	H101307	SHOULDER BOLT 8-32x30mm SS



H2 STAINLESS STEEL HANDLE - A4M03024
(x2) 5/8"x1 9/16"x11 13/16" (16x40x300)

- INSTALL CABINET HANDLES ON THE TWO DOORS FROM PREVIOUS STEP.

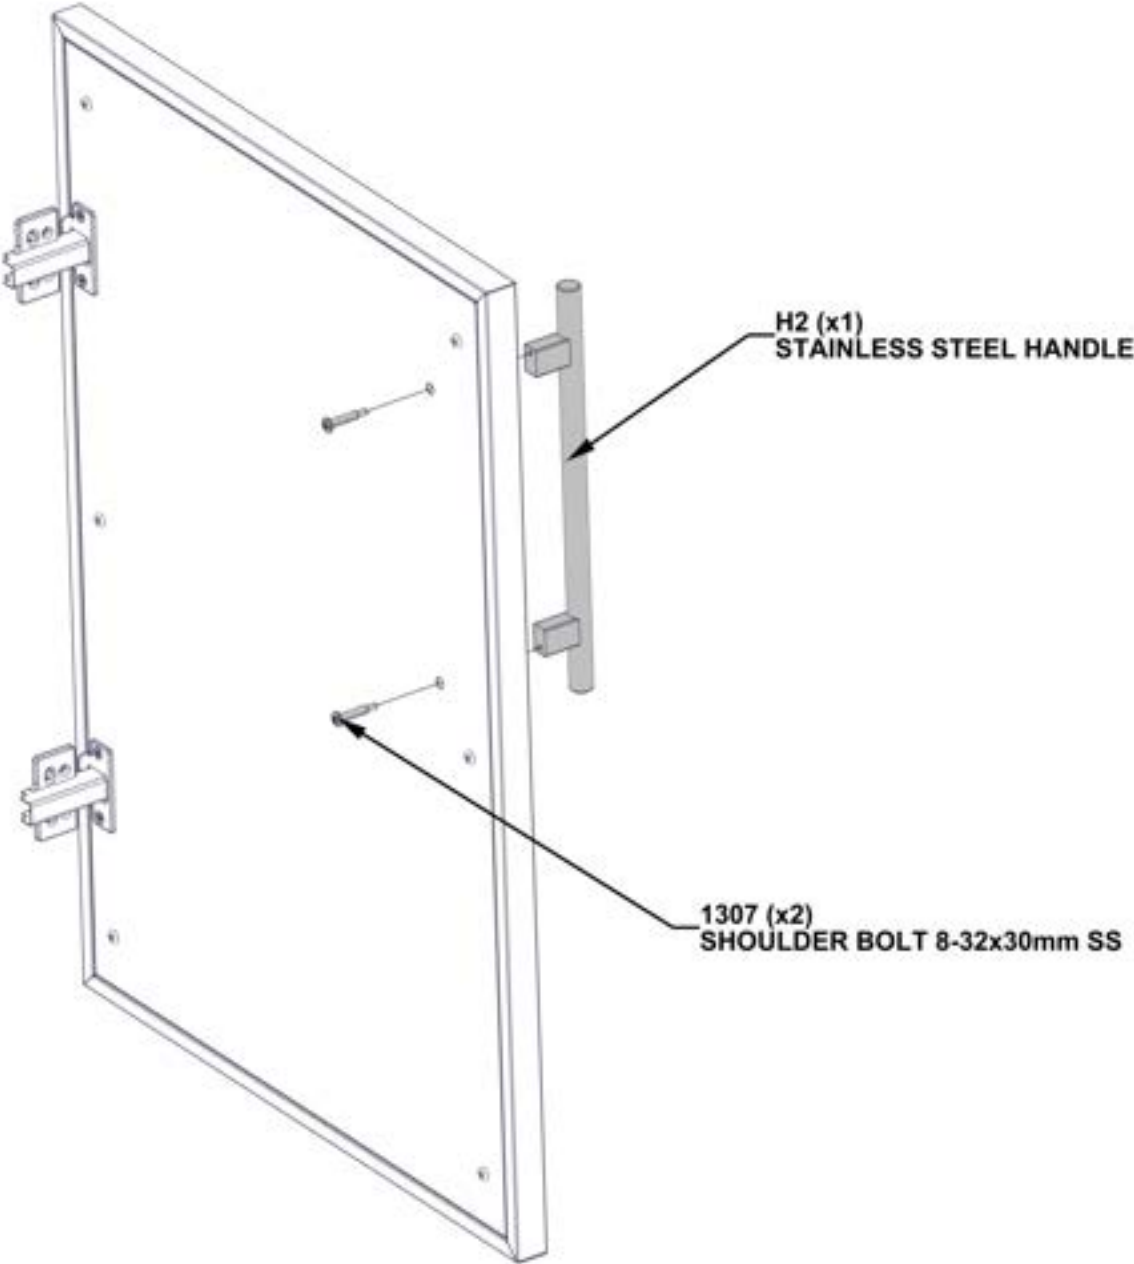


STEP 134 - CABINET DOOR ATTACHMENT



Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D10 DOOR PANEL ASSEMBLY - A4M03617
(x1) 24 3/4"x17 13/16"x15/16" (24x452x628)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

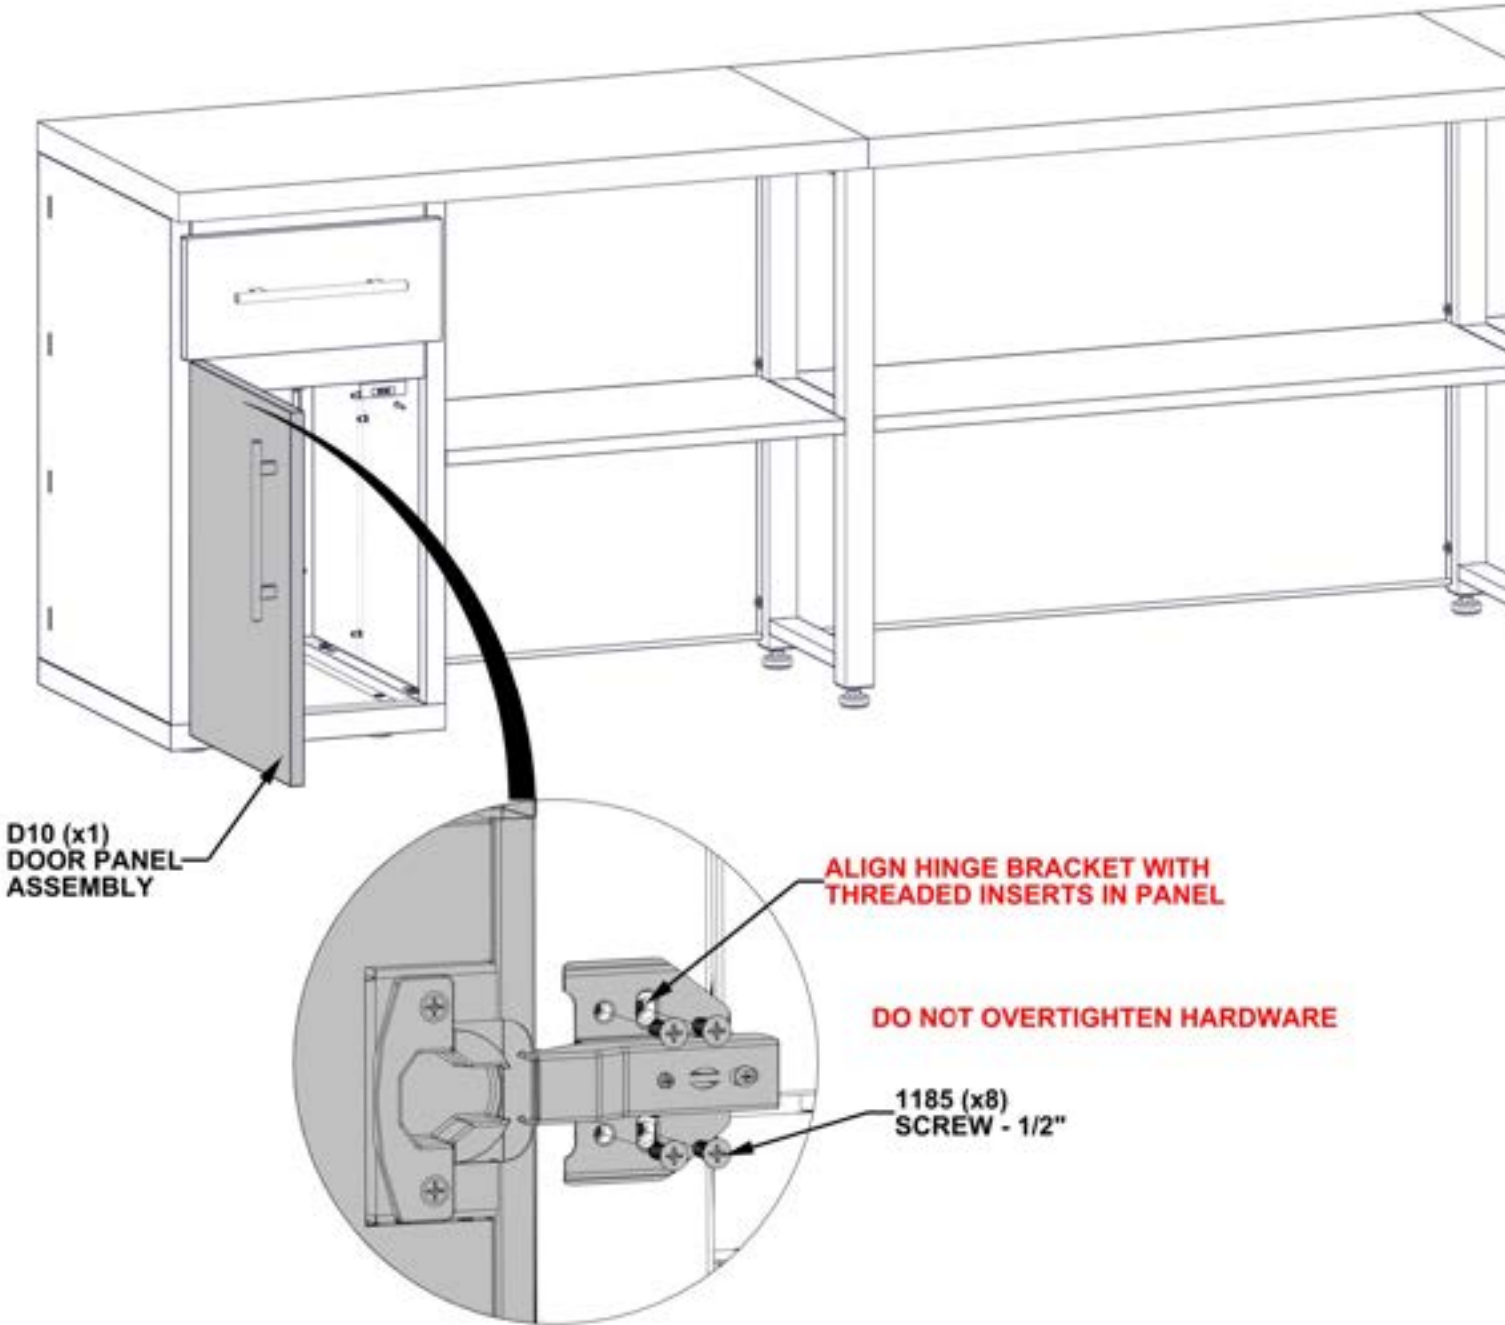


STEP 135 - CABINET DOOR ATTACHMENT



Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D13 DOOR PANEL ASSEMBLY - A4M03643
(x1) 24 3/4"x17 13/16"x15/16" (24x452x628)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

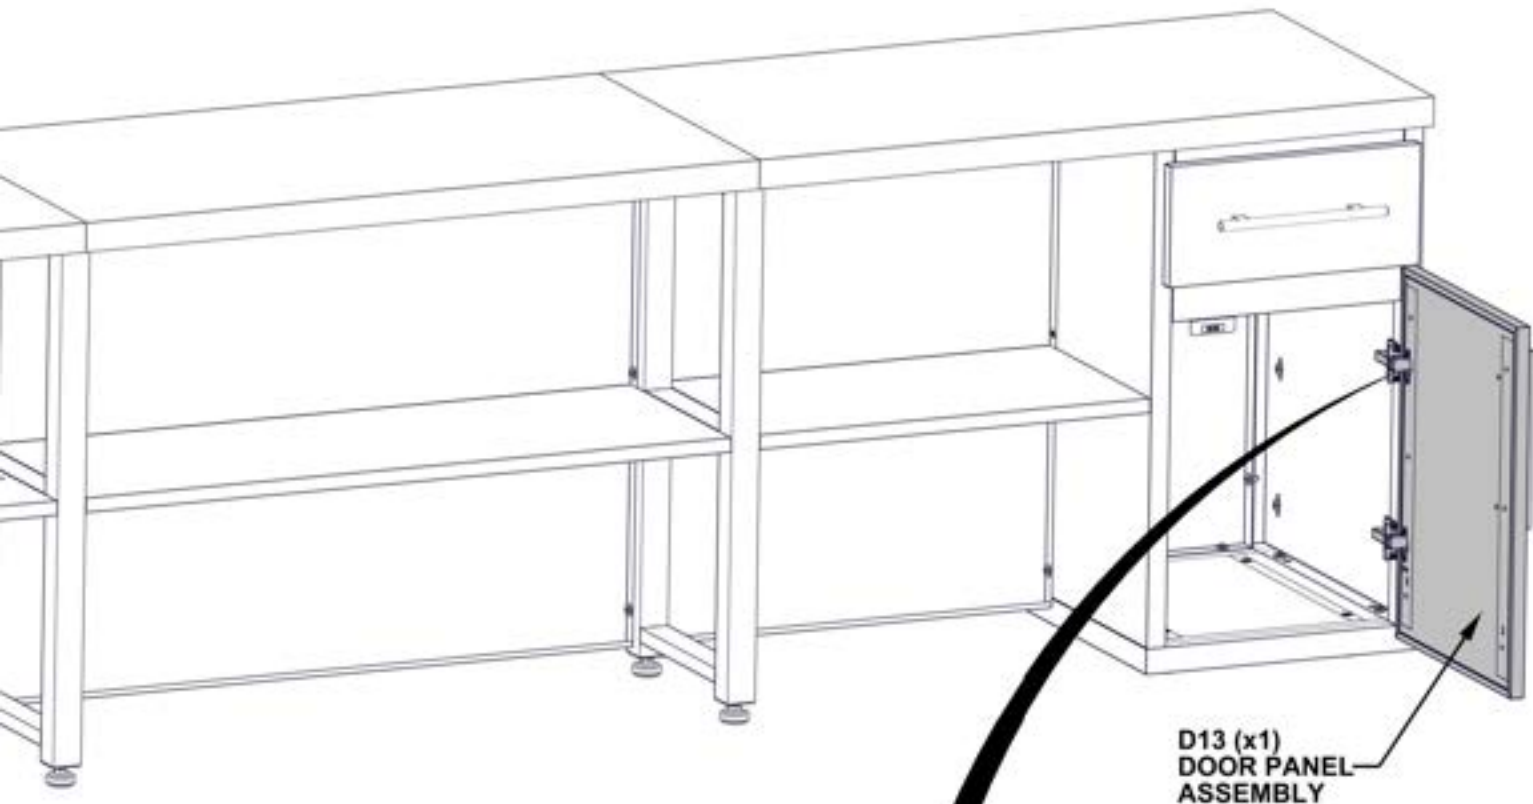


D13 (x1)
DOOR PANEL
ASSEMBLY

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

DO NOT OVERTIGHTEN HARDWARE


1185 (x8)
SCREW - 1/2"

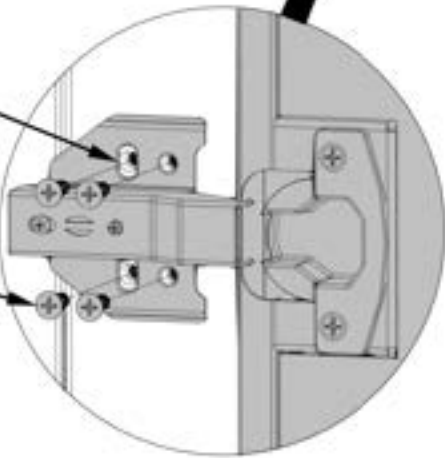

STEP 136 - CABINET DOOR ADJUSTMENT (AS NEEDED)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ADJUST HINGES (AS NEEDED) SO THAT THE GAP AROUND ALL DOORS IS THE SAME AND THERE IS NO INTERFERENCE BETWEEN DOORS AND CABINETS.
- ADJUST MAGNET CATCH BRACKETS AS NEEDED.

**LOOSEN SCREWS TO ADJUST
MAGNET BRACKET, UNTIL IT
COMES IN CONTACT WITH
DOOR IN THE SHUT POSITION**

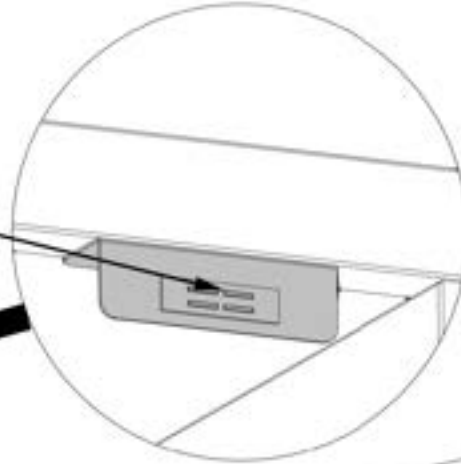


**SCREW #1:
SCREW CLOCKWISE TO BRING EDGE OF DOOR AWAY FROM
CABINET. SCREW COUNTER CLOCKWISE TO BRING EDGE OF DOOR
CLOSER TO CABINET**

**SCREW #2:
LOOSEN THESE SCREWS TO SLIDE DOOR TOWARD CABINET OR
AWAY FROM CABINET**




STEP 137 - KITCHEN ACCESSORY

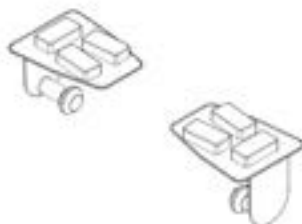

A4M02290 MAGNETIC PAPER TOWEL HOLDER
(x1)



- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- MAGNETIC PAPER TOWEL HOLDER CAN BE ATTACHED TO ANY METAL SURFACE ON KITCHEN.
- WE RECOMMEND ATTACHING TO THE INSIDE OF GRILL CABINET DOORS OR UNDERNEATH BAR.
- **MAKE SURE TO KEEP PAPER TOWEL HOLDER AT A SAFE DISTANCE FROM GRILLING SURFACE.**

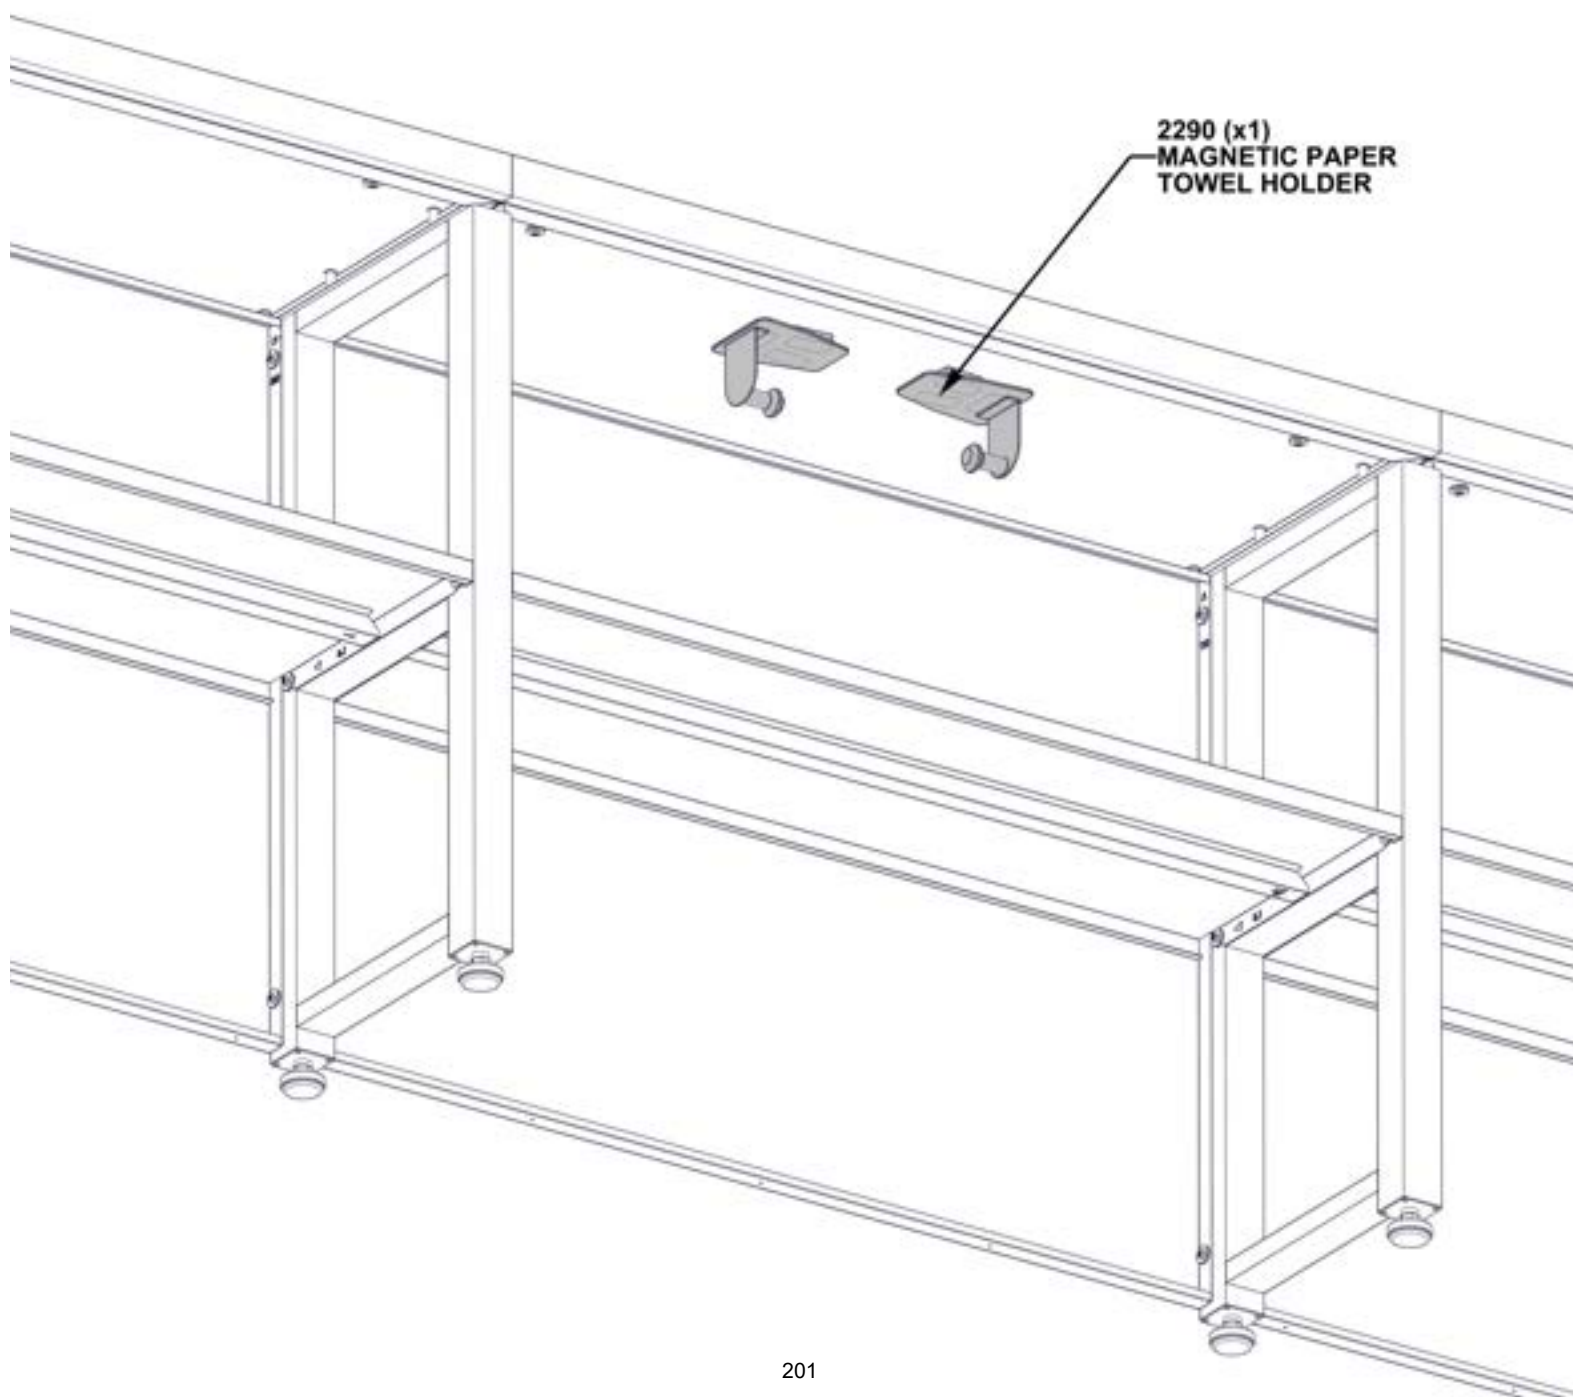

STEP 138 - KITCHEN ANCHORING

Qty	PartNo	Description
8	H100630	WASHER FLAT 8x19 BLK
8	H100120	CONCRETE ANCHOR 1/4"x2"

- MANUFACTURER RECOMMENDS INSTALLATION ON CONCRETE SURFACE OR CONCRETE POST PADS AS SHOWN BELOW.
- FOR INSTALLATION ON WOOD DECK, YOU MUST ENSURE THERE IS AMPLE STRUCTURAL SUPPORT UNDER THE DECK. HARDWARE NOT INCLUDED FOR DECK ATTACHMENT.

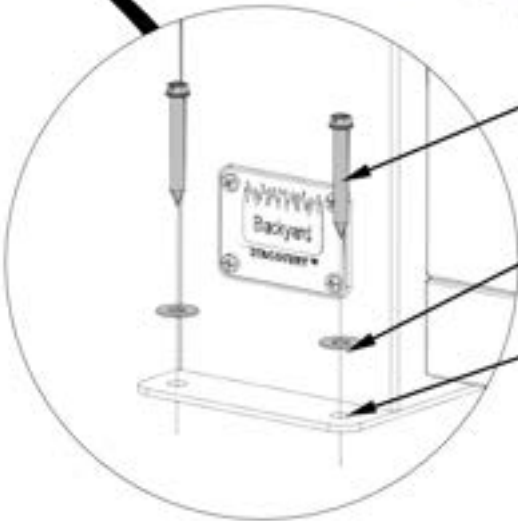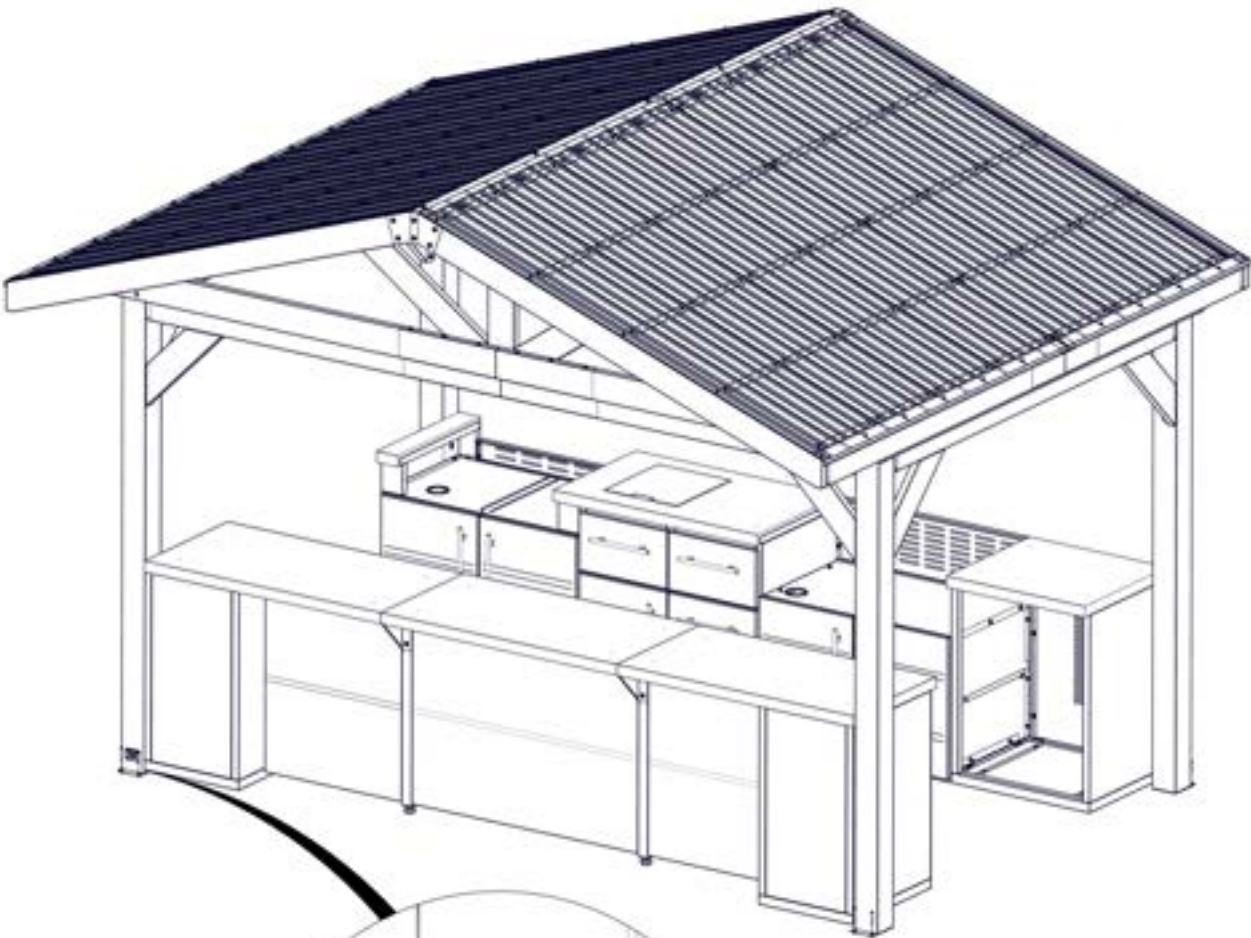

120 (x8)
CONCRETE SCREW - 2"

630 (x8)
WASHER - 8x19


PRE-DRILL HOLES FOR
CONCRETE ANCHORS USING
A 3/16" (5mm) CONCRETE DRILL BIT

OUTDOOR KITCHEN GRILL KIT



9240025 OUTDOOR KITCHEN GRILL KIT
(x1)

- FOR INSTALLATION AND DETAILED INFORMATION OF OUTDOOR KITCHEN GRILL KIT, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN GRILL KIT.
- FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

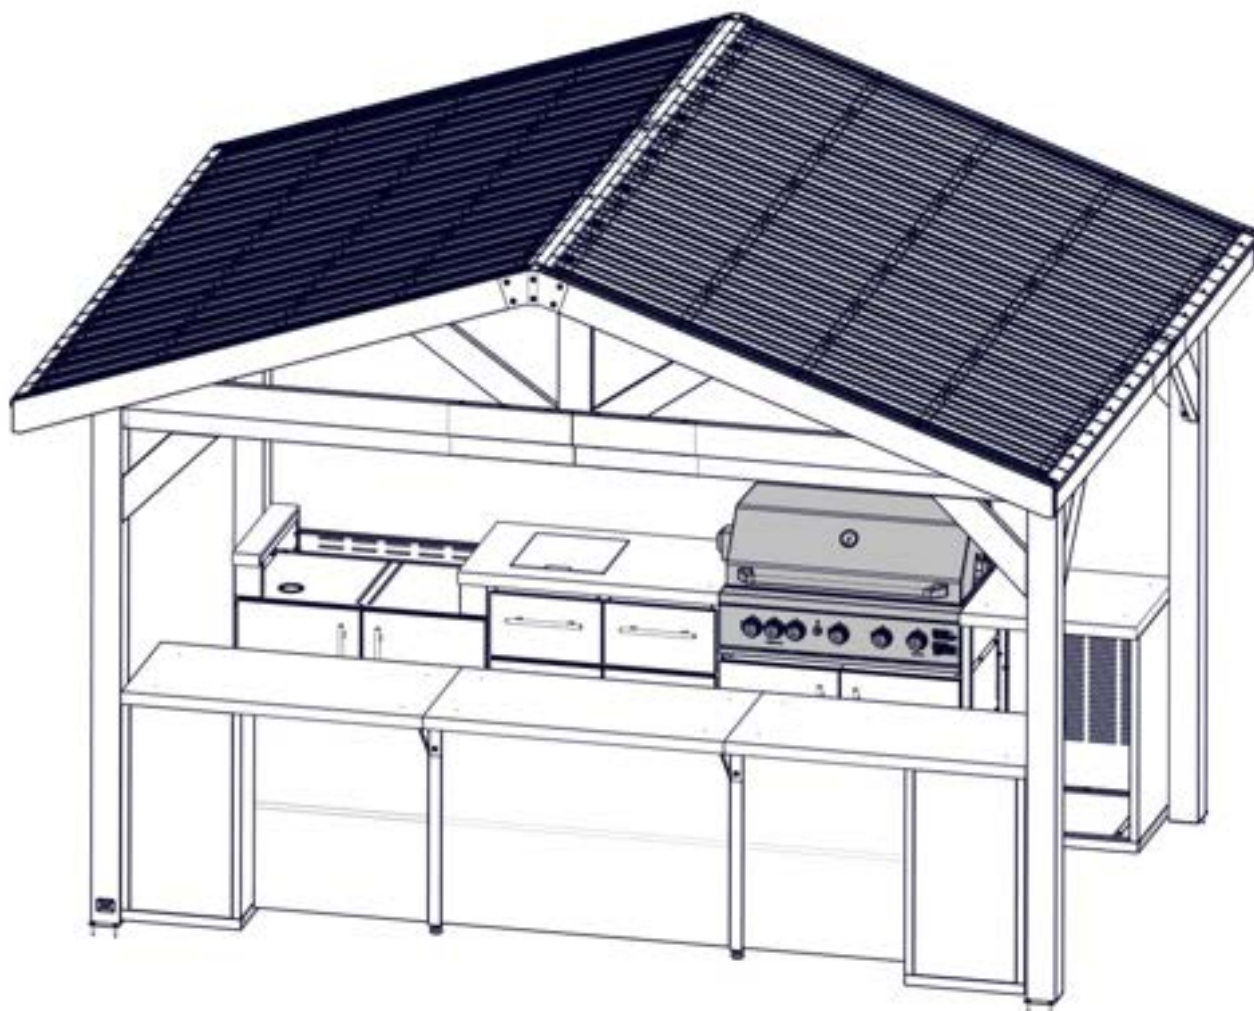


**NATURAL GAS CONVERSION KIT AVAILABLE BY CONTACTING BACKYARD DISCOVERY AT
www.backyarddiscovery.com 1-800-856-4445**

OUTDOOR KITCHEN PIZZA OVEN



9240018 OUTDOOR KITCHEN PIZZA OVEN
(x1)

- FOR INSTALLATION AND DETAILED INFORMATION OF OUTDOOR KITCHEN PIZZA OVEN, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN PIZZA OVEN.
- FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

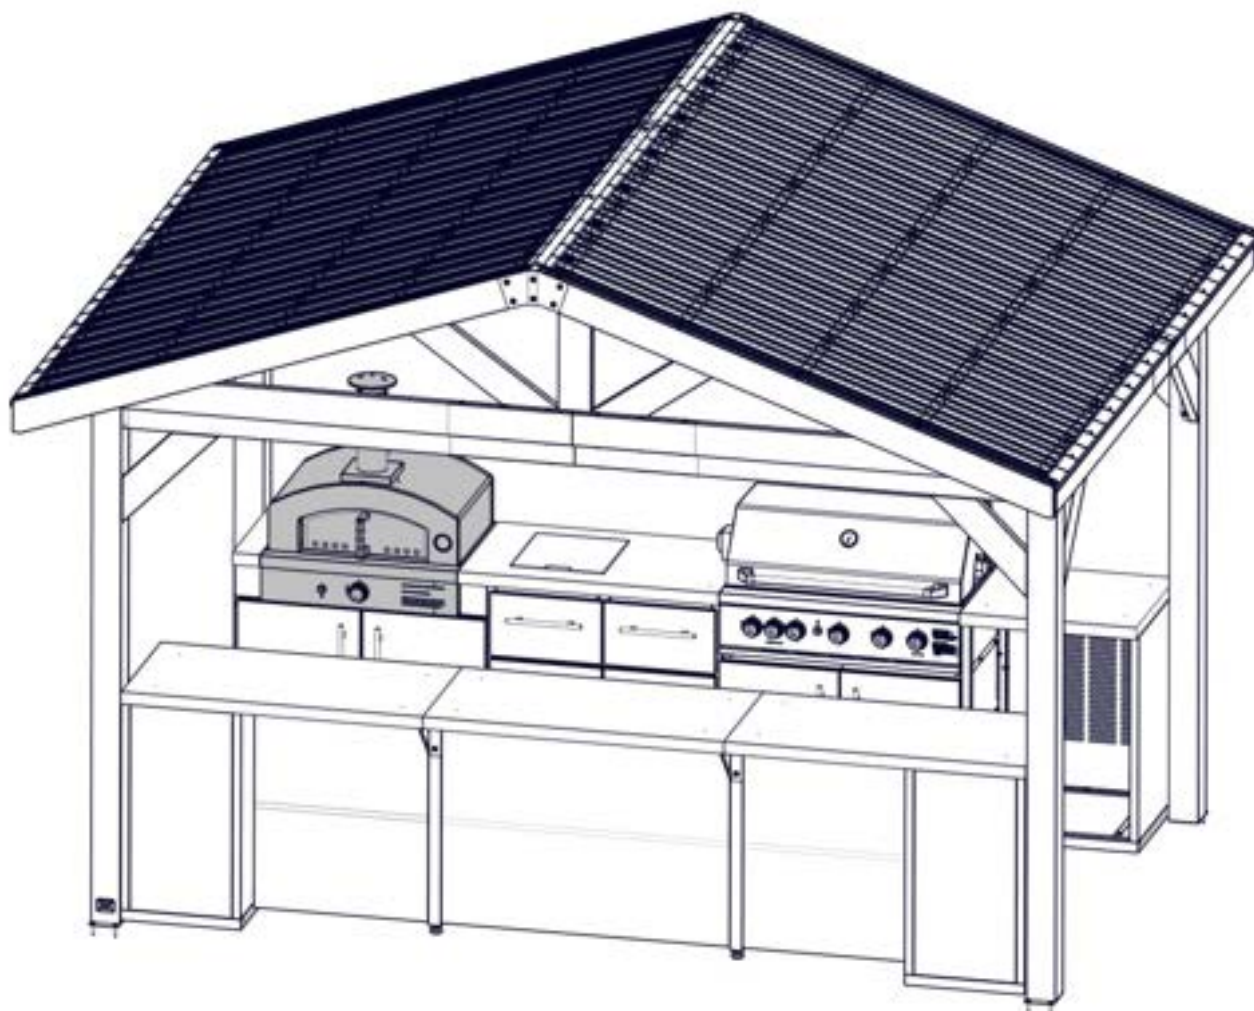


**NATURAL GAS CONVERSION KIT AVAILABLE BY CONTACTING BACKYARD DISCOVERY AT
www.backyarddiscovery.com 1-800-856-4445**

OUTDOOR KITCHEN FRIDGE



9240162 OUTDOOR KITCHEN FRIDGE - RIGHT OPEN
(x1)



-
- FOR INSTALLATION OF OUTDOOR KITCHEN FRIDGE, REFER TO PAGES IN THIS INSTRUCTION MANUAL.
 - FOR DETAILED INFORMATION OF OUTDOOR KITCHEN FRIDGE, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN FRIDGE.
 - FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

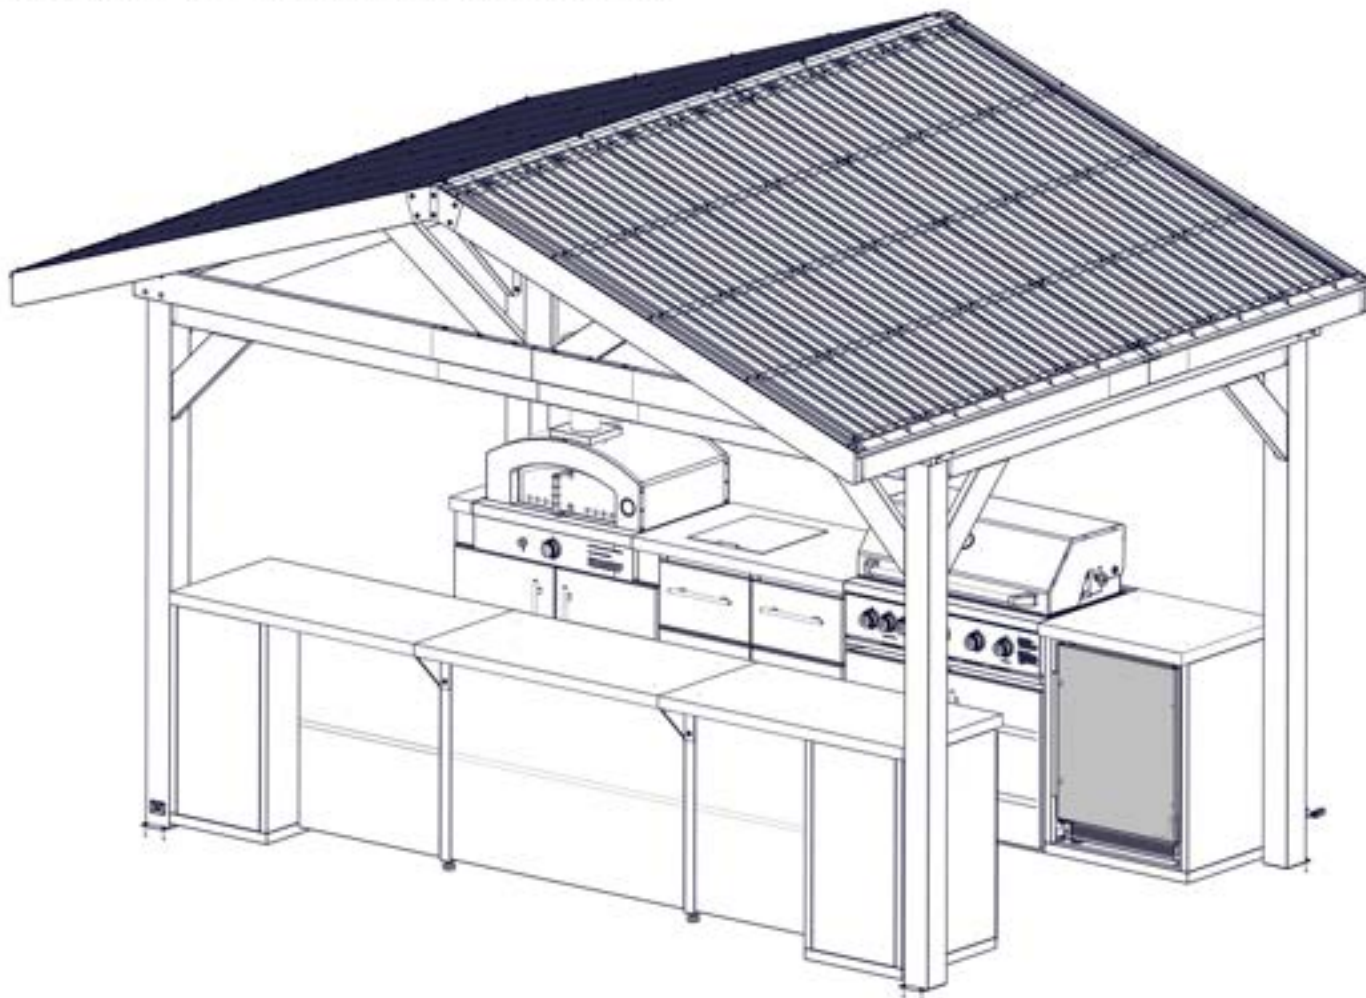

OUTDOOR KITCHEN FRIDGE



- CAREFULLY SLIDE FRIDGE INTO CABINET OPENING MAKING SURE THAT THE ELECTRICAL CORD IS ROUTED THROUGH THE HOLES IN THE BACK PANEL OF THE CABINET.


- IF FRIDGE IS NOT IN UPRIGHT POSITION, PLEASE LET SIT FOR 24 HRS BEFORE PLUGGING INTO RECEPTACLE.
- FRIDGE CANNOT BE CONNECTED TO ELECTRICAL ENCLOSURE ATTACHED TO OUTDOOR STRUCTURE.

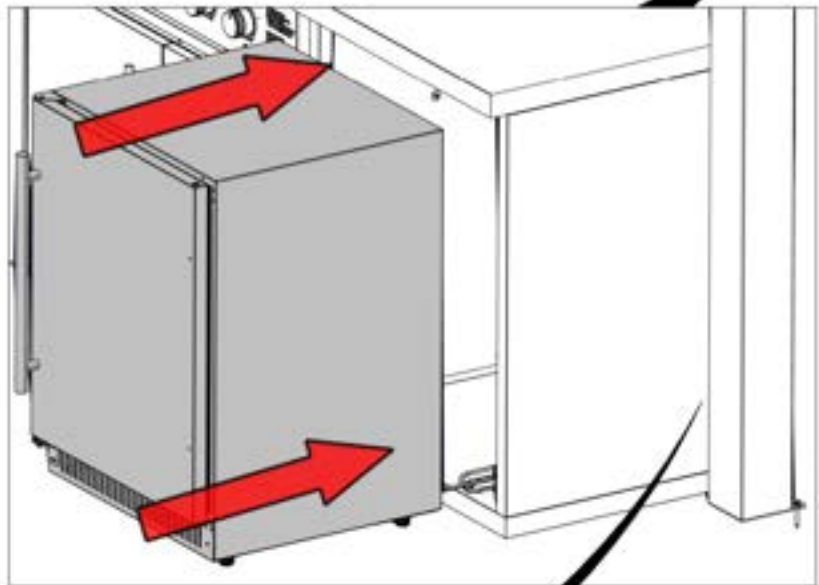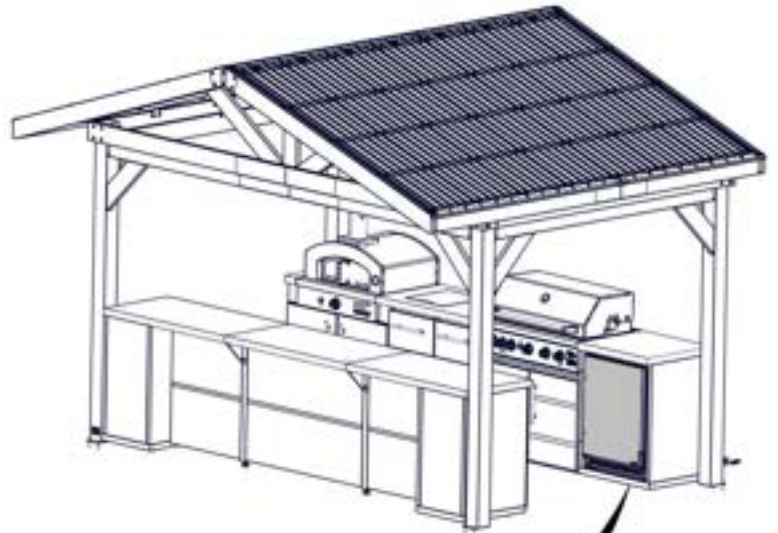

OUTDOOR KITCHEN FRIDGE

- ALIGN FEET ON FRIDGE UNIT SO THAT IT IS LEVEL AND DOES NOT TILT.
- TURN FEET CLOCKWISE TO EXTEND THEM AND COUNTERCLOCKWISE TO SHORTEN. REPEAT THIS FOR ALL FOUR FRIDGE FEET AS NEEDED TO LEVEL.

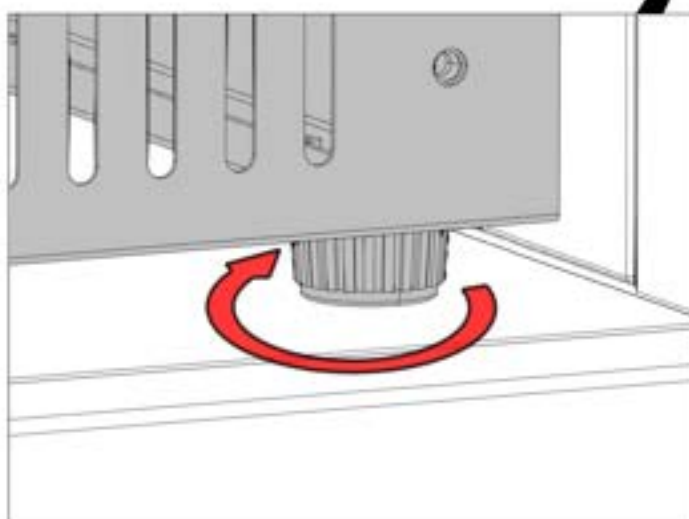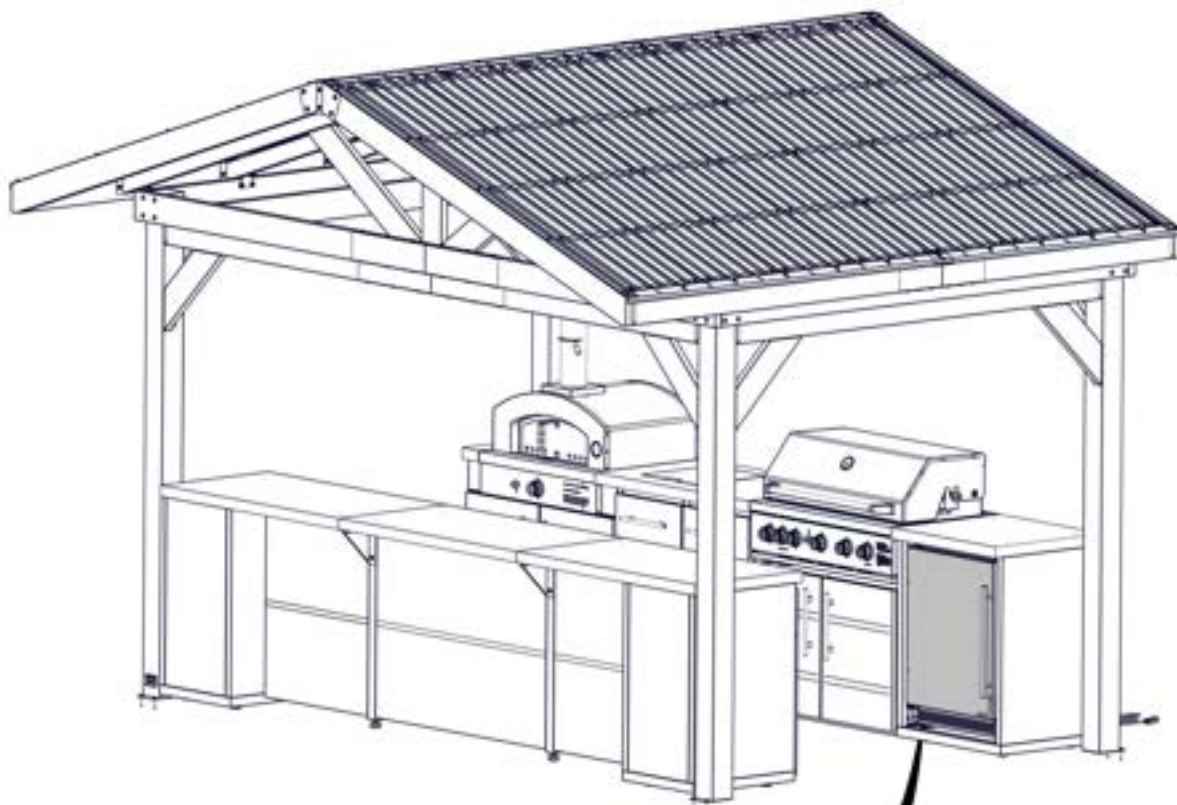

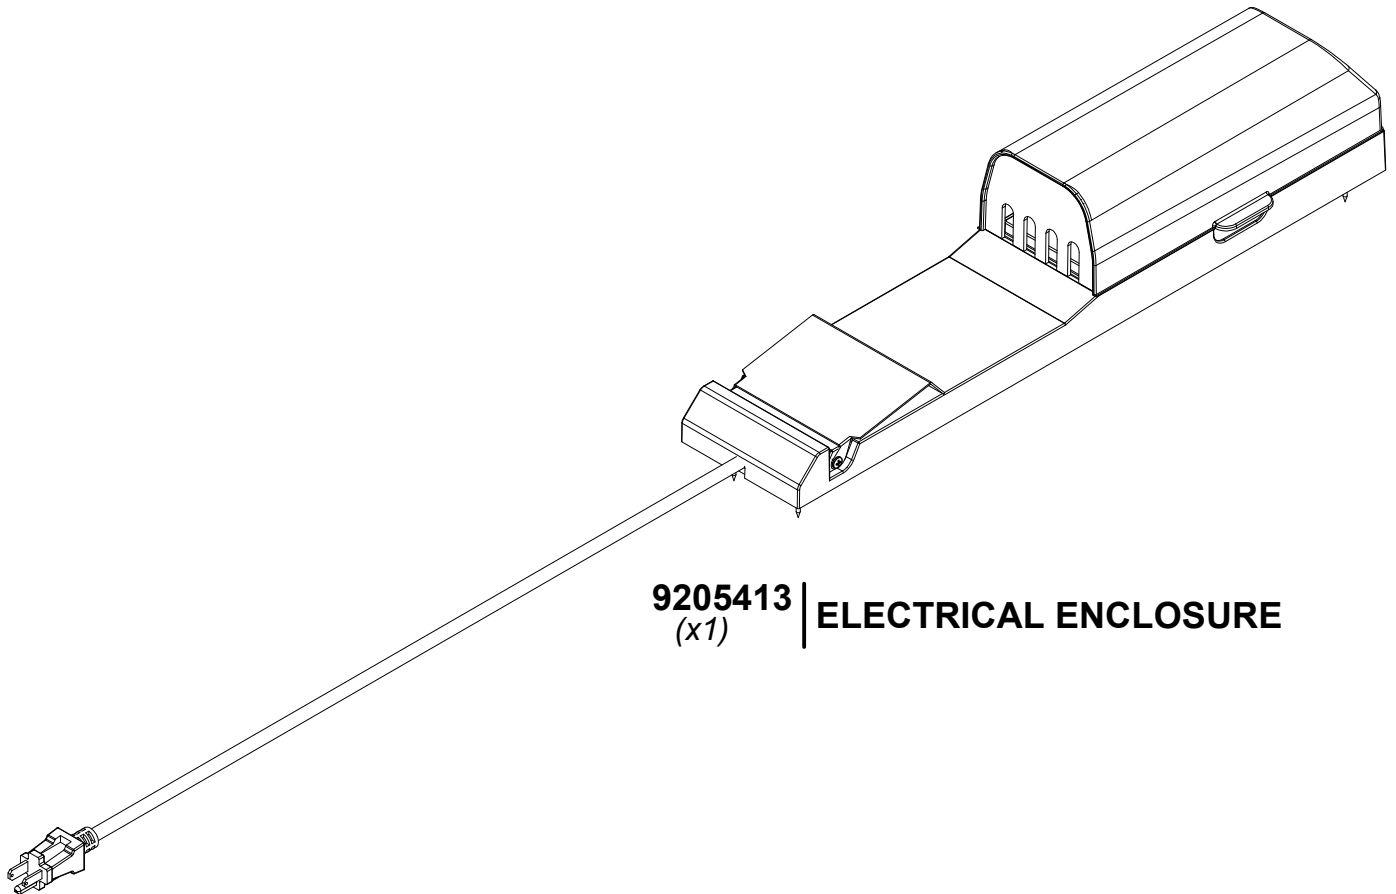

9205413
(x1) | **ELECTRICAL ENCLOSURE**

FOR POWERPORT INSTALLATION REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE POWERPORT KIT. INSTALL ON ANY EXTERIOR POST THAT IS DESIRED. FOLLOW DIRECTIONS FOR PROPER INSTALLATION.

IT IS RECOMMENDED TO INSTALL POWERPORT ON BACK POST NEXT TO FRIDGE CABINET.

DO NOT INSTALL POWERPORT ON POST NEXT TO PIZZA OVEN, AS THIS IS TOO CLOSE TO HIGH HEAT.