







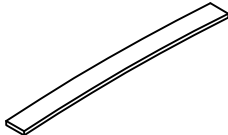












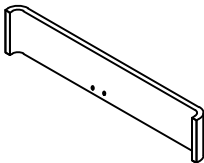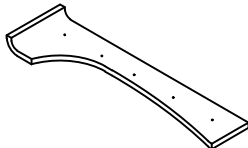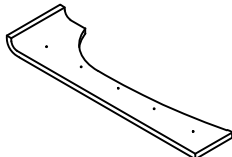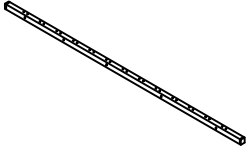
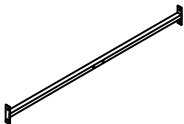


# ASSEMBLY INSTRUCTION


## QUEEN BED

<b>A</b> Headboard  1pc	<b>B</b> Footboard  1pc	<b>C</b> Left Side Panel  1pc	<b>D</b> Right Side Panel  1pc
<b>E</b> Leg  4pcs	<b>F</b> Side Rail  2pcs	<b>G</b> Headboard Rail  1pc	<b>H</b> Middle Rail  1pc
<b>I</b> Slat  26pcs	<b>J</b> Support Leg  3pcs	<b>K</b> Hook Sheet  2pcs	<b>L</b> Side Buckle  26pcs
<b>M</b> Middle Buckle  13pcs	<b>N</b> Iron Sheet  2pcs	<b>O</b> Bolt M8x50mm  18pcs	<b>P</b> Bolt M8x20mm  30pcs
<b>Q</b> Bolt M8x65mm  4pcs	<b>R</b> Hex Nut M8x15mm  4pcs	<b>S</b> Spanner  1pc	<b>T</b> Lock Washer M8  52pcs
<b>U</b> Flat Washer M8x19x1.0mm  52pcs	<b>V</b> Allen Key M5  1pc		




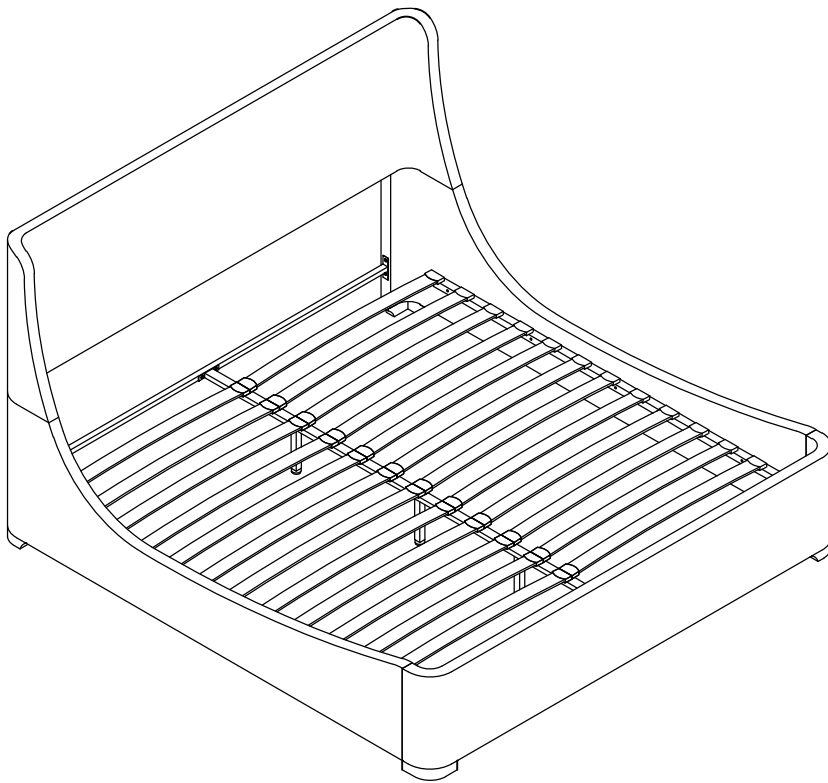First page lists all the contents included in the box.  
Please take the time to identify the hardware as  
well as the individual components to this product.  
As you unpack and prepare for assembly, place the  
contents on a carpeted or padded area to protect  
them from damage.


- 1** First, attach Side Rail (F) to Left Side Panel (C) & Right Side Panel (D) using Bolt (O), Lock Washer (T) and Flat Washer (U) by Allen Key (V).  
Second, attach Leg (E) to Left Side Panel (C) & Right Side Panel (D) using Bolt (O), Lock Washer (T) and Flat Washer (U) by Allen Key (V).  
Third, attach Hook Sheet (K) to Left Side Panel (C) & Right Side Panel (D) using Bolt (P), Lock Washer (T) and Flat Washer (U) by Allen Key (V).

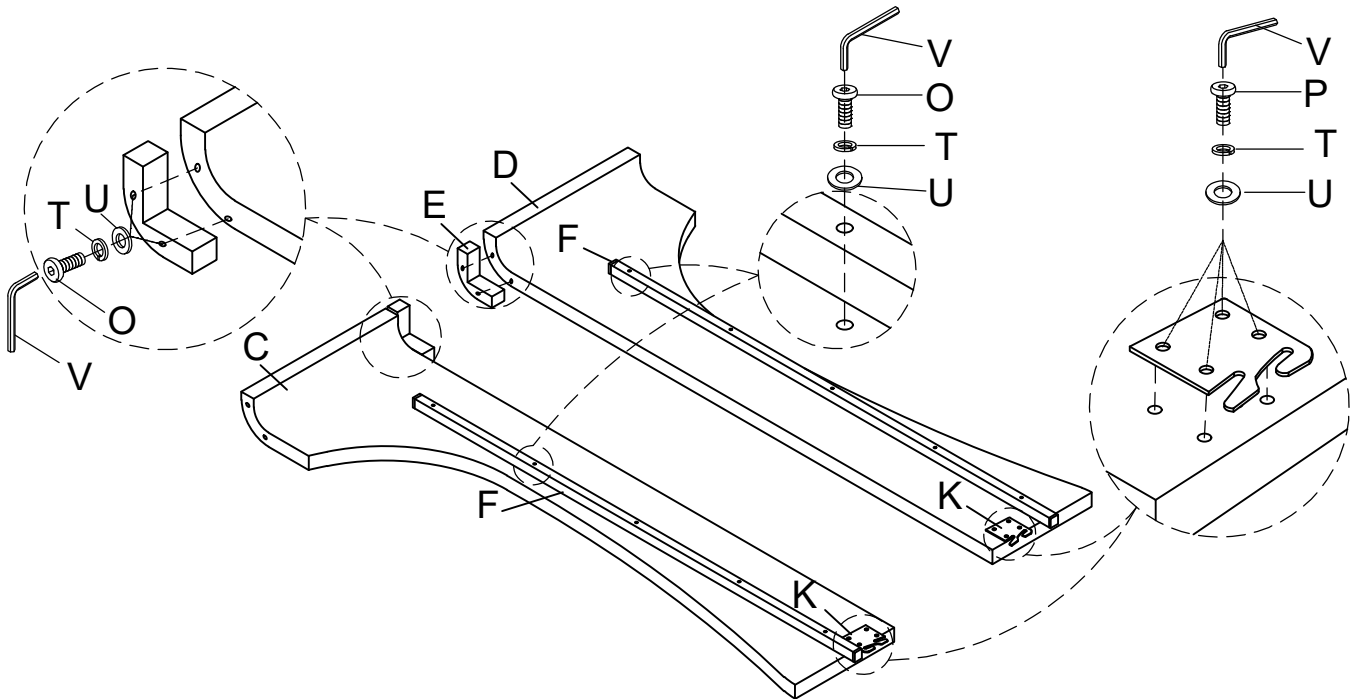


- 2** First, attach Leg (E) to Footboard (B) using Bolt (O), Lock Washer (T) and Flat Washer (U) by Allen Key (V).  
Second, assemble Bolt (P), Lock Washer (T) and Flat Washer (U) to Footboard (B) by Allen Key (V), DO NOT tighten fully, just in half way.

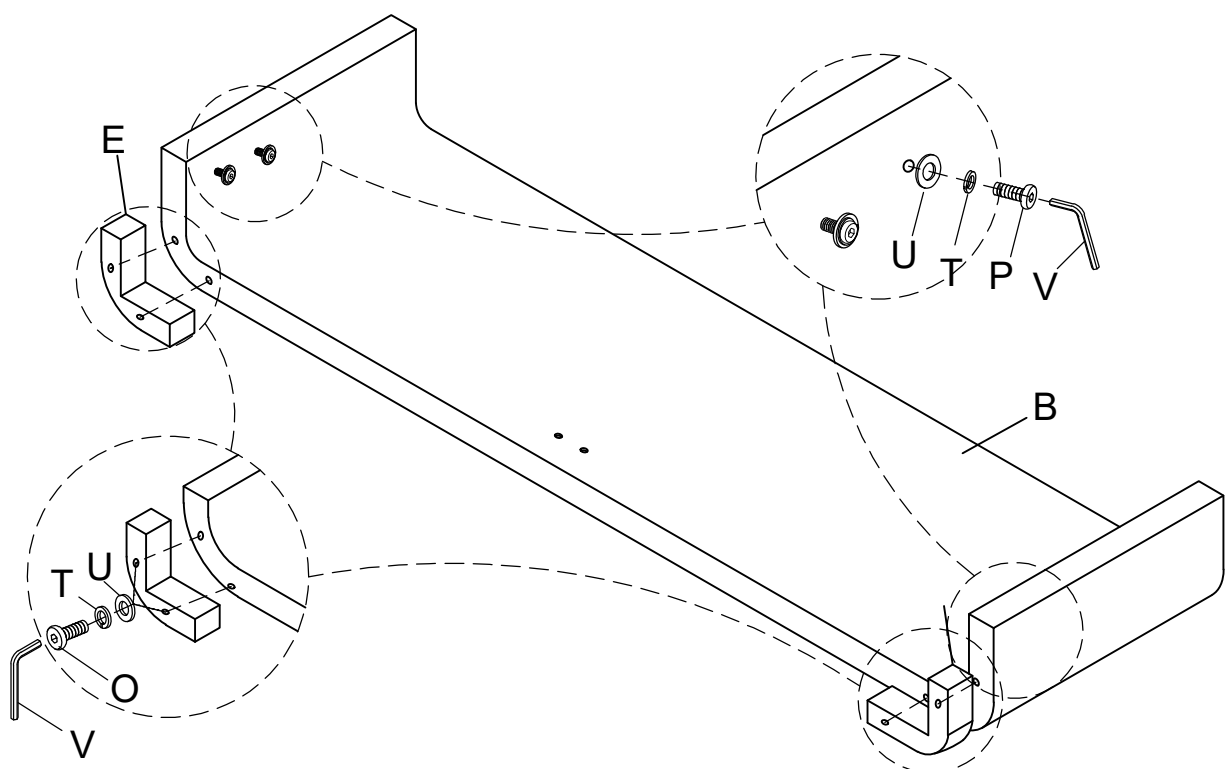


- 3** First, hook Hook Sheet (K) of Left Side Panel Panel (C) & Right Side Panel (D) to the Bolt (P) of Footboard (B), then tighten the Bolt (P) by Allen Key (V).  
Second, connect Footboard (B) with Left Side Panel (C) & Right Side Panel (D), using Iron Sheet (N) and Bolt (P), Lock Washer (T) & Flat Washer (U) by Allen Key (V).

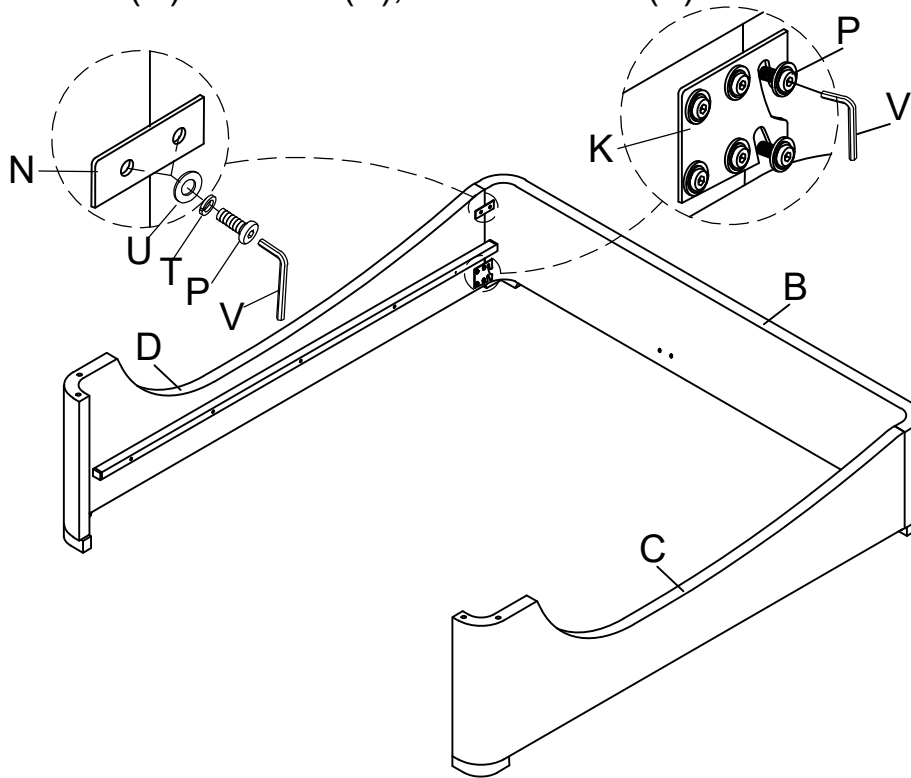


- 4** Attach Headboard Rail (G) to Left Side Panel (C) & Right Side Panel (D) using Bolt (P), Lock Washer (T) and Flat Washer (U) by Allen Key (V). Then, rotate Bolt (Q) to Headboard (A), put Headboard (A) to Left Side Panel (C) & Right Side Panel (D) through the Bolt (Q). Next, open the fabric of Left Side Panel (C) & Right Side Panel (D) to lock the Bolt (Q) with Hex Nut (R), Lock Washer (T) and Flat Washer (U) by Spanner (S).

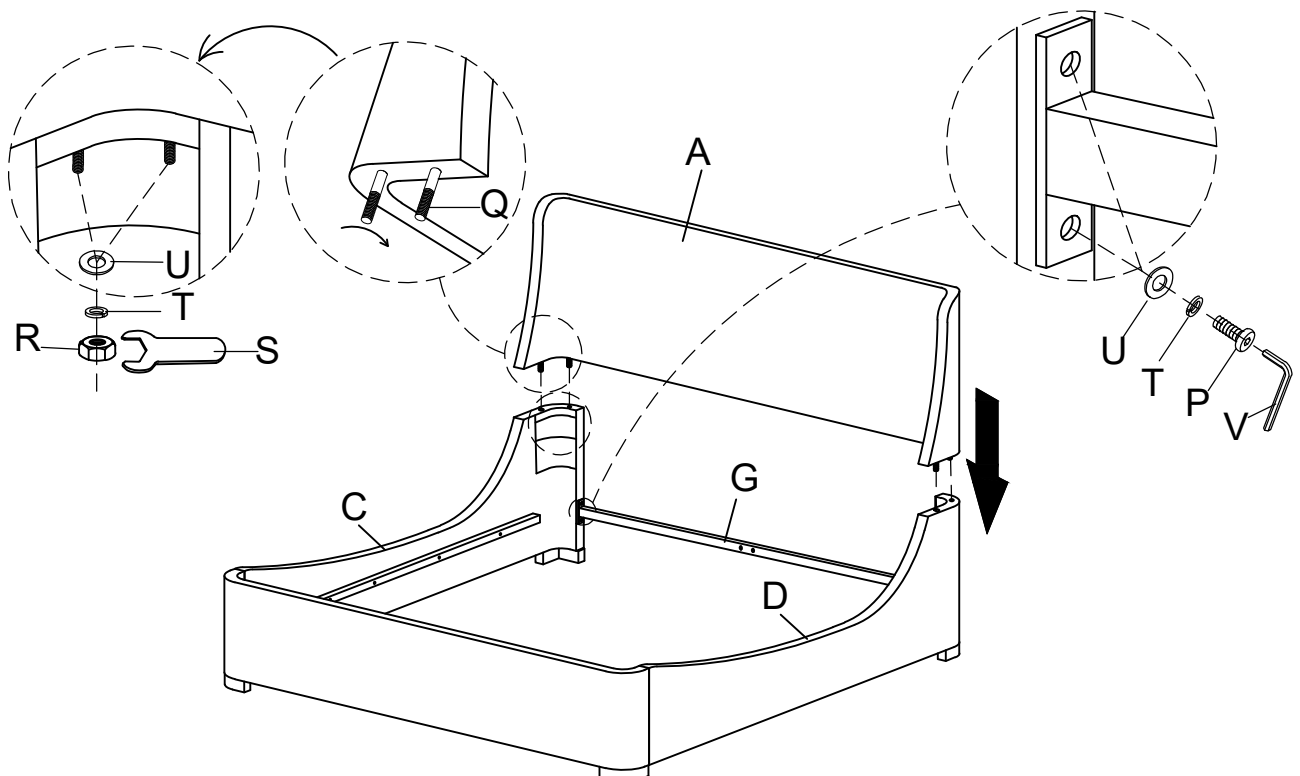


- 5** Attach Support Leg (J) to Middle Rail (H) using Bolt (P), Lock Washer (T) and Flat Washer (U) by Allen Key (V).

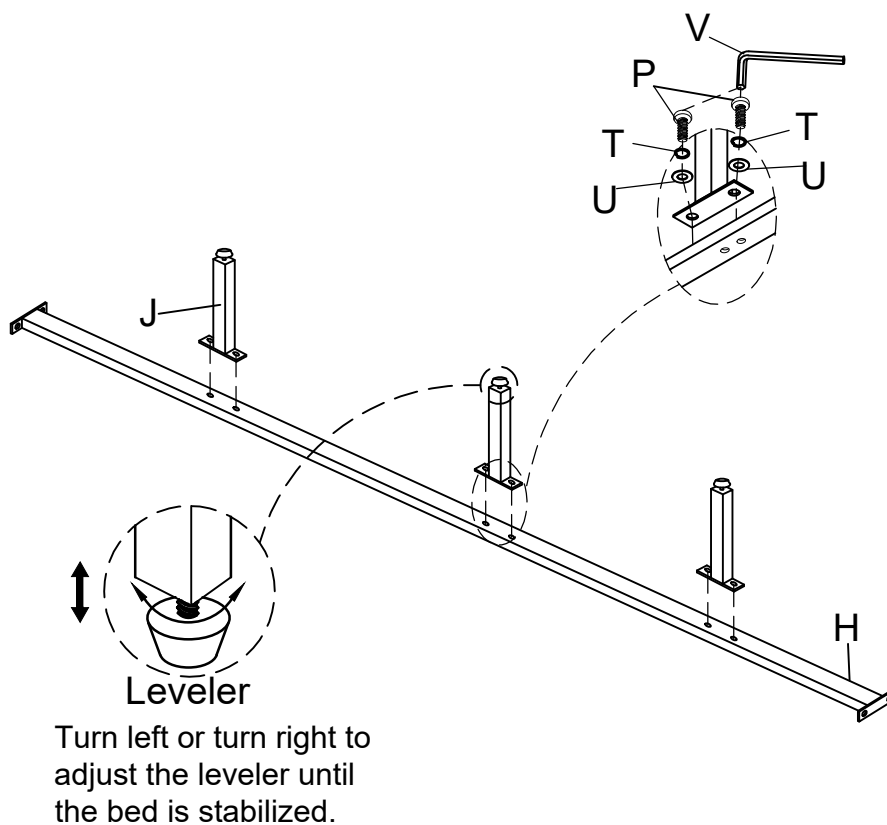

- 6** Attach Middle Rail (H) to Headboard Rail (G) & Footboard (B) using Bolt (P), Lock Washer (T) and Flat Washer (U) by Allen Key (V).

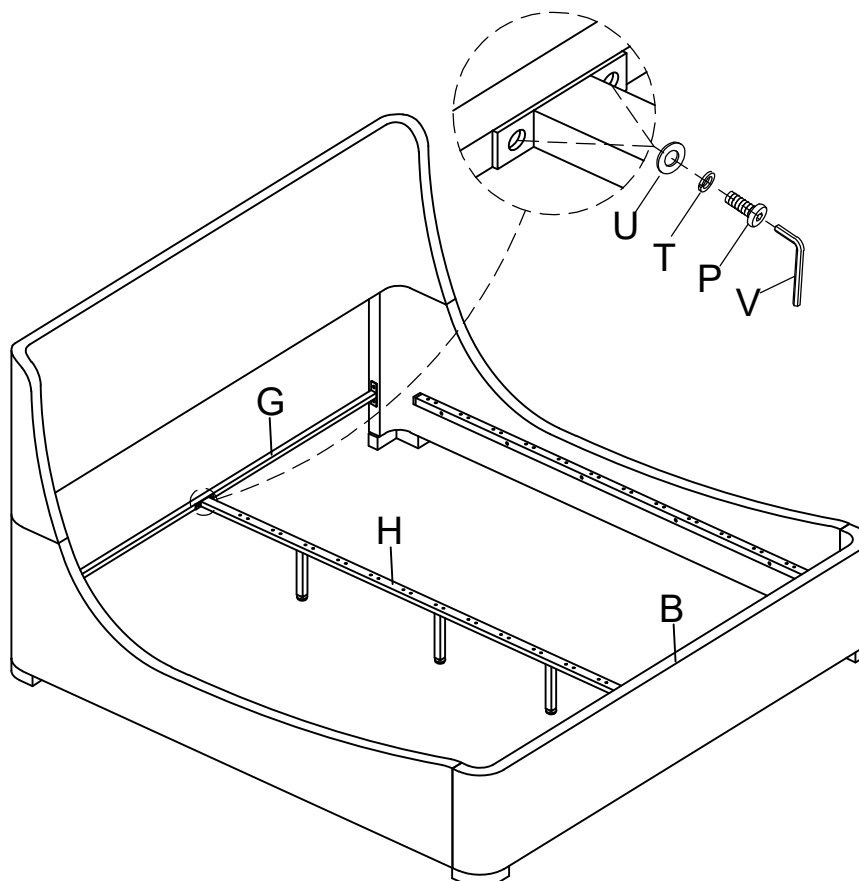

- 7** First, connect 2pcs of Slat (I) together by Middle Buckle (M). Next, lock the assembled Slat (I) with Buckle (M) to Middle Rail (H). At last, insert two ends of Slat (I) to Buckle (L) and then push Side Buckle (L) into Side Rail (F) as below shown. Repeat the assemble steps to finish the rest slats assembling.

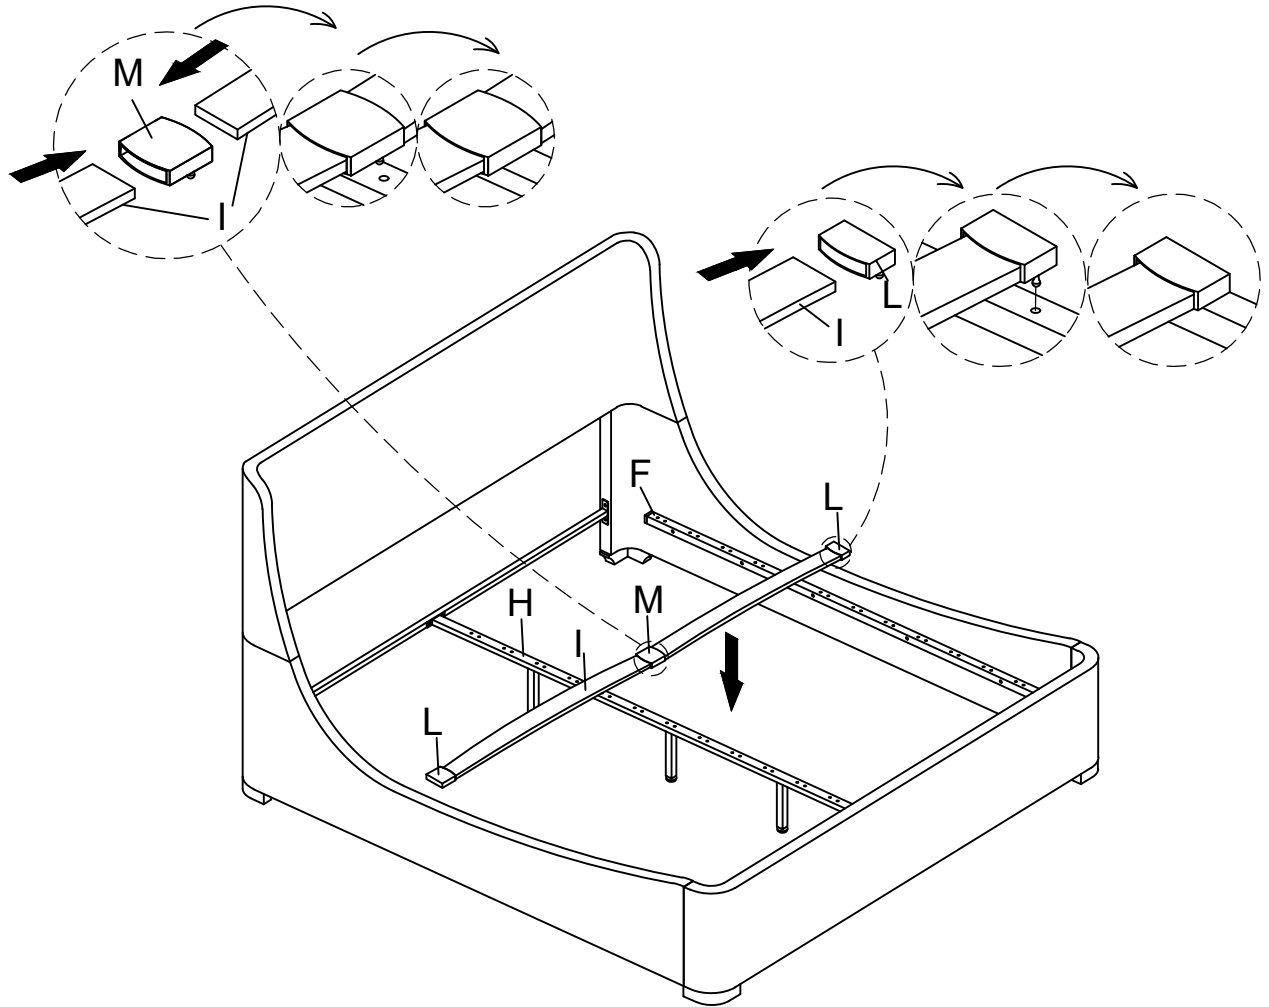

### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.