
ITEM: SW-AZ006WH

ANZZI WALL SURROUND

INSTALLATION & OPERATION MANUAL

V1.2

09/20/2026

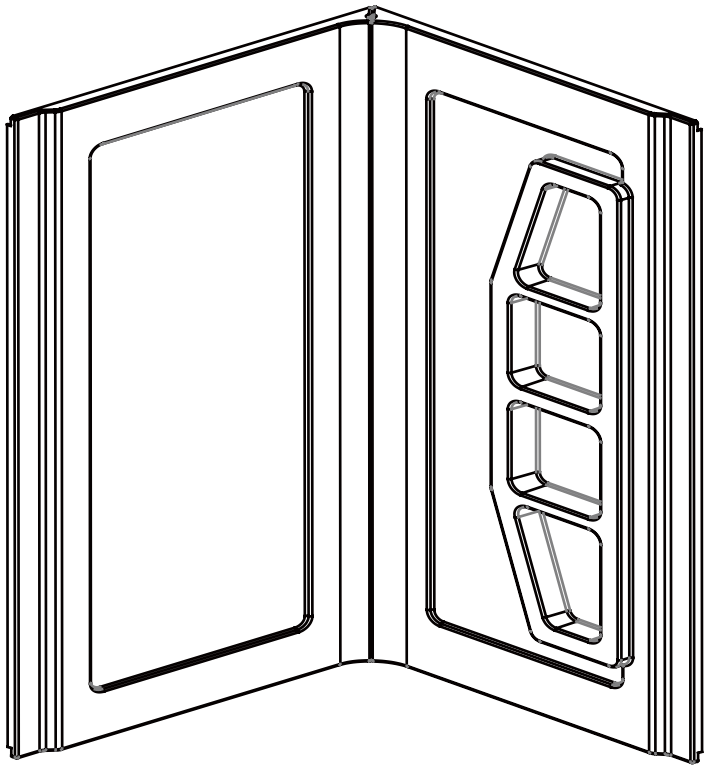

DON'T WAIT! REGISTER NOW!

Register your product within 90 days to ensure it is recognized as a purchase and covered under warranty.

Register online at https://anzzi.com/pages/register or scan the QR code on PG. 2.

PRODUCT REGISTRATION*


IMPORTANT: Warranty will not be recognized unless product is registered.

Register online at https://anzzi.com/pages/register or Scan the QR code below.
Registering your product maximizes your warranty benefits and ensures prompt service and support.

1 USE YOUR PHONE CAMERA TO SCAN THE QR CODE

2 FILL IN A QUICK REGISTRATION FORM

3 CLICK SUBMIT AND ENJOY PEACE OF MIND

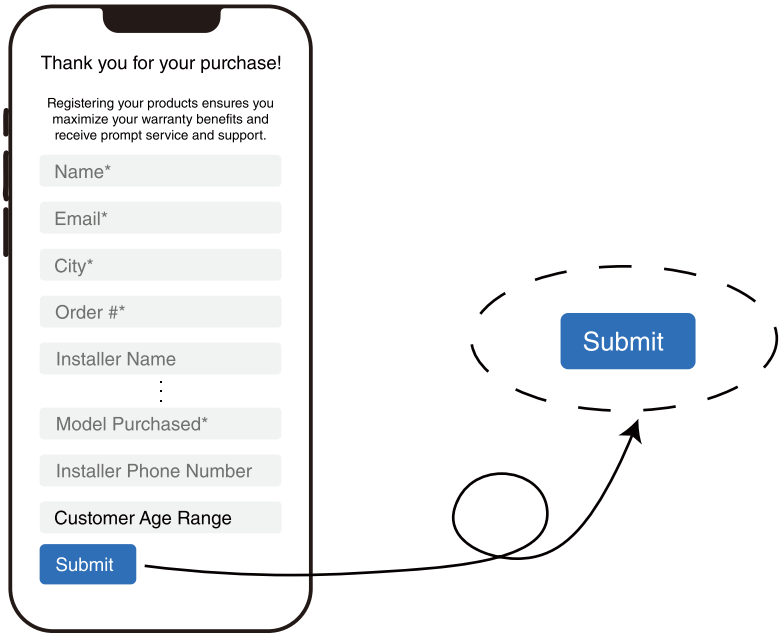


Need help? For technical support call **305-363-4679** or visit us at **www.ANZZI.com**

SPECIFICATION


QUARTER ROUND SHOWER BASE

Model	Dimensions	W (in)	C (in)
SB-AZ005WN	36″x36″	36″	12.2″
SB-AZ005WO	36″x36″	36″	12.2″

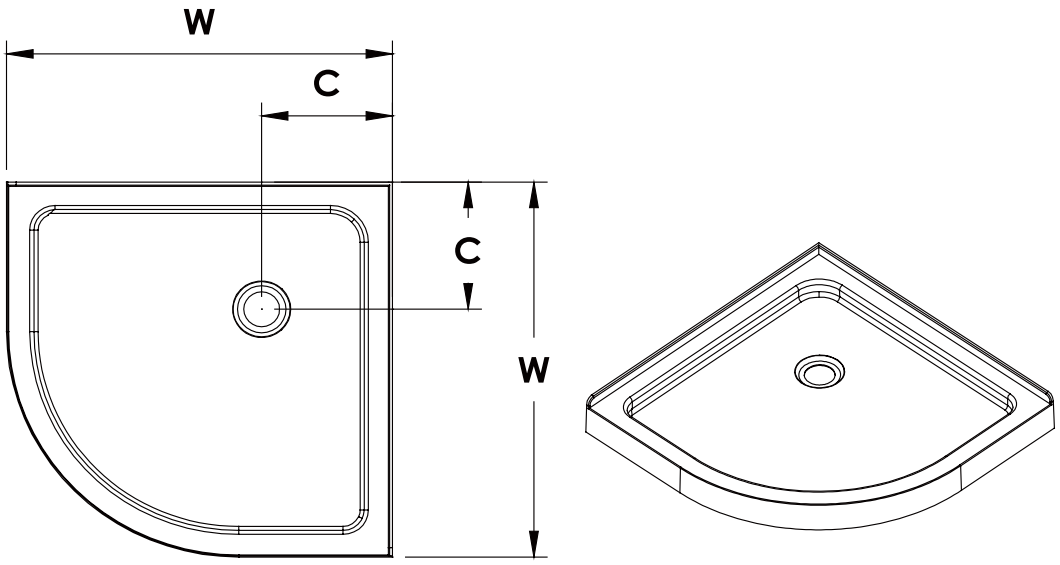

WALL PANELS

Model	Dimensions	D (in)	W (in)	H (in)
SW-AZ006WH	36″ x 36″ x 74″	36″	36″	74″

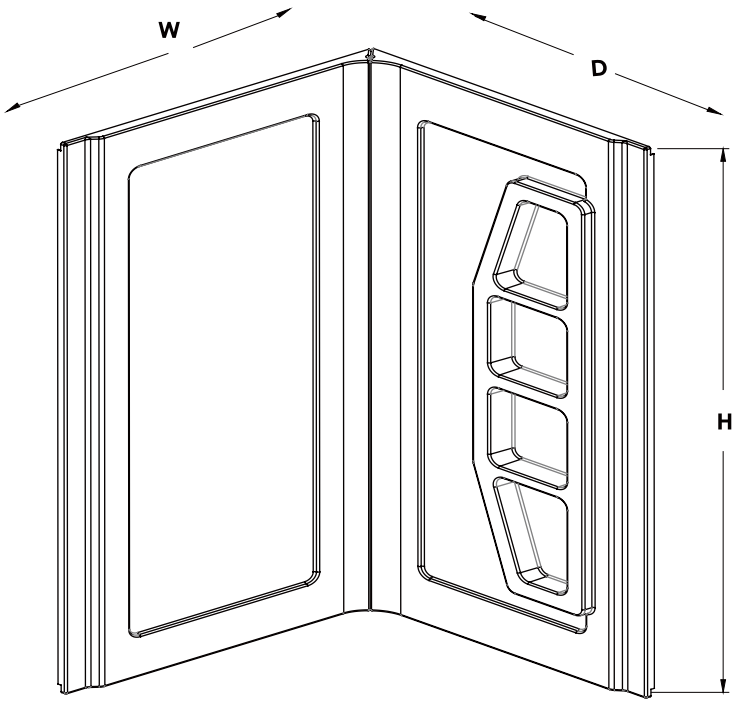



SPECIFICATION

SQUARE SHOWER BASE

Center Drain Configuration


Model	Dimensions	W (in)	C (in)
SB-AZ009WC	36″x36″	36″	18″
SB-AZ009WD	36″x36″	36″	12″
SB-AZ009WH	36″x36″	36″	18″

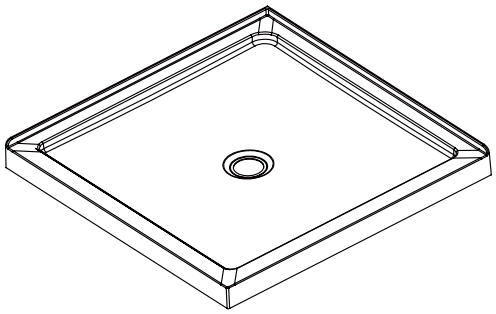

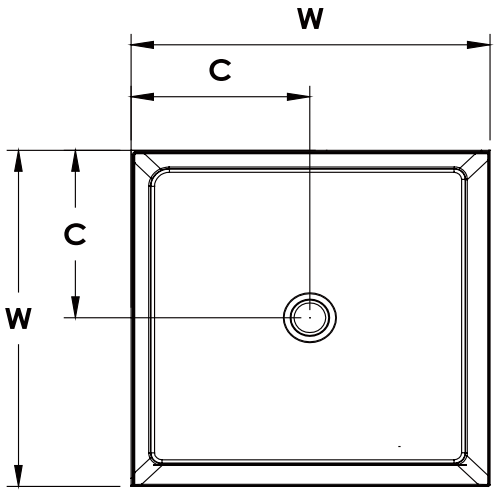

WALL PANELS

Model	Dimensions	D (in)	W (in)	H (in)
SW-AZ006WH	36″ x 36″ x 74″	36″	36″	74″

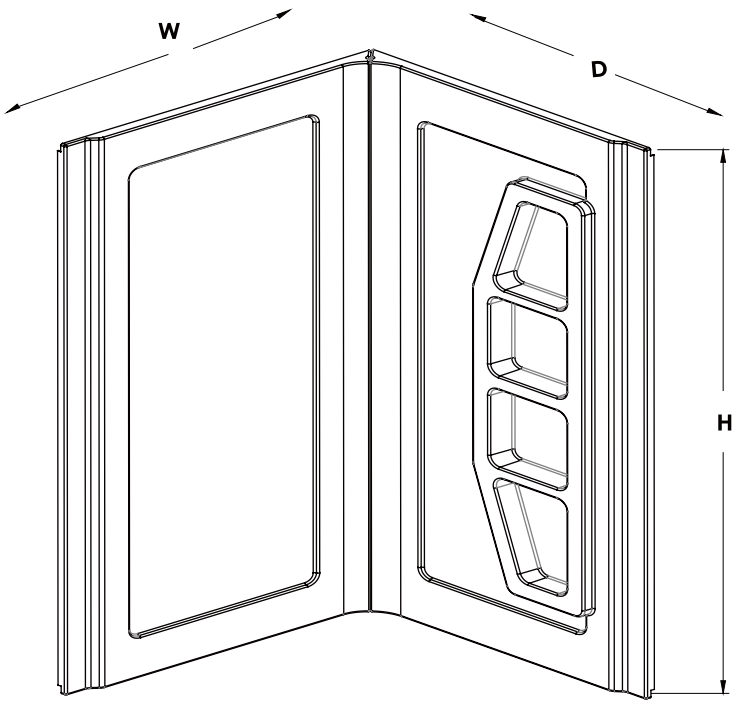

INSTALLATION

01

The floor, drywall and/or studs must be at right angles. Create a 5" by 5" hole in the floor to allow the drain to come through. The 2" pvc pipe should extend up and out of the hole. Make sure the pipe and hole align with the product's drain location.
Refer to the spec drawings to make sure.
See Fig. 1

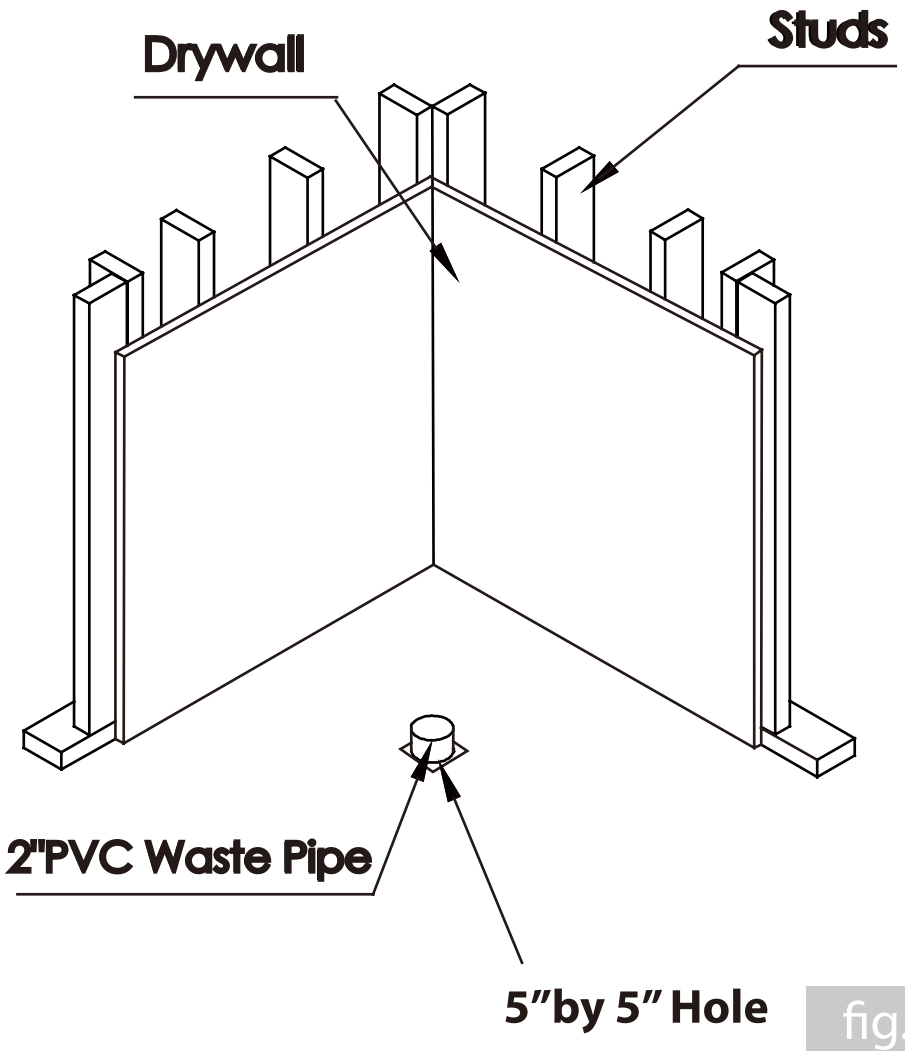


fig. 1

INSTALLATION

02

Install the shower drain. NOTE: The shower drain is NOT INLCUDED with this package.
See Fig. 2

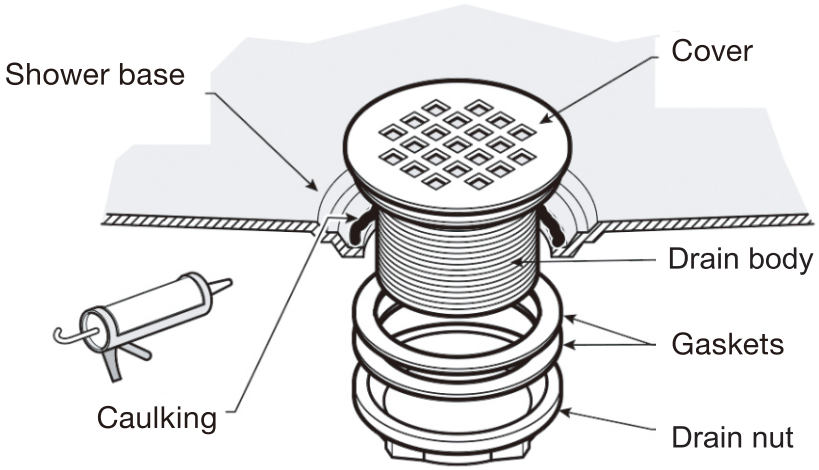


fig. 2

03

Position the shower base over so the waste drain and the drainage pipe are aligned. The shower base should butt up against the drywall.
Lower the base over the drain and set against the studs.
See Fig. 3

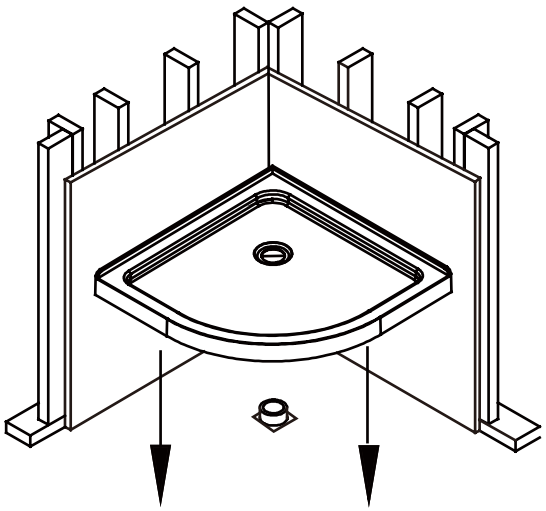


fig. 3

INSTALLATION

04

Install the two wall panels and seal strip them together. Secure the two walls with the wing nut kit. Wall to wall have holes, use Wing Nut Kit to install. Finally, add silicone where the two walls meet.
See Fig. 4 and Fig. 5

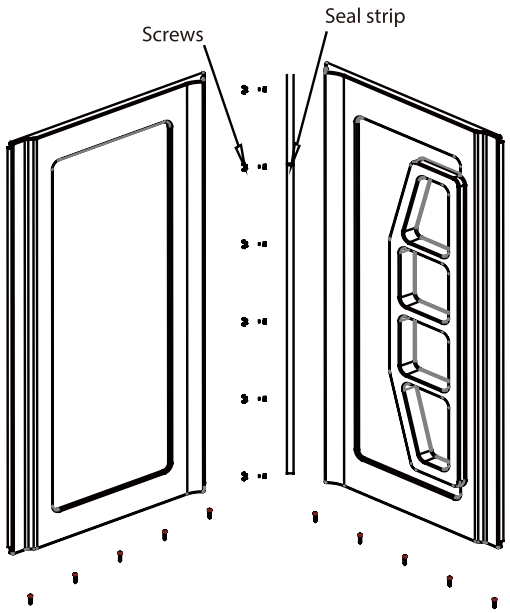


fig. 4

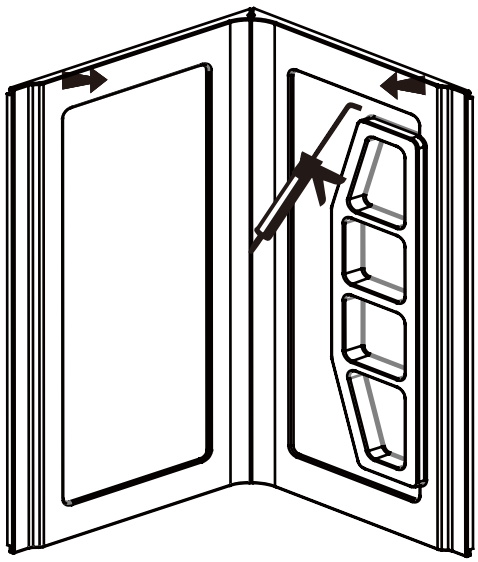


fig. 5



Screw
ST4 x 15 mm
Qty: 20



Wing Nut Kit
Qty: 8

05

Place the wall panels on the base ,drill holes through the bottom of the wall into the base with a DIM 1/8”(3mm) drill bit and secure with screw. Drill holes after walls are installed on the tray. Drill holes on walls and tray side.
See Fig. 6

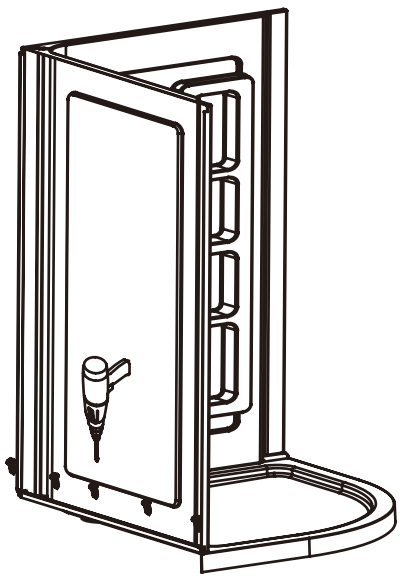


fig. 6

INSTALLATION

06

Mix your bedding material (i.e. mortar or cement-sand). It is NOT RECOMMENDED to use concrete or plaster. Apply enough bedding to support the complete bottom of the base. This will make sure the base will not shift positions as well as provide additional stability.
See Fig. 7

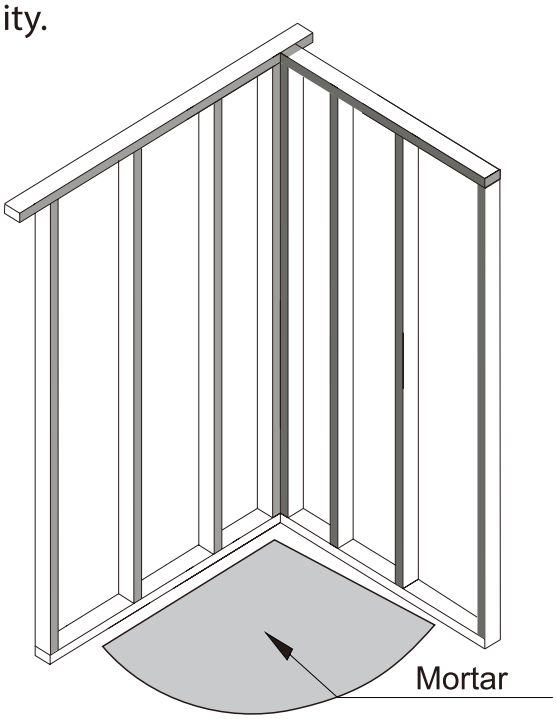


fig. 7

07

Place the wall panels and the base against the drywall, position the shower base over so the waste drain and the drainage pipe are aligned, and use a leveler to make sure the shower base is level.
See Fig. 8

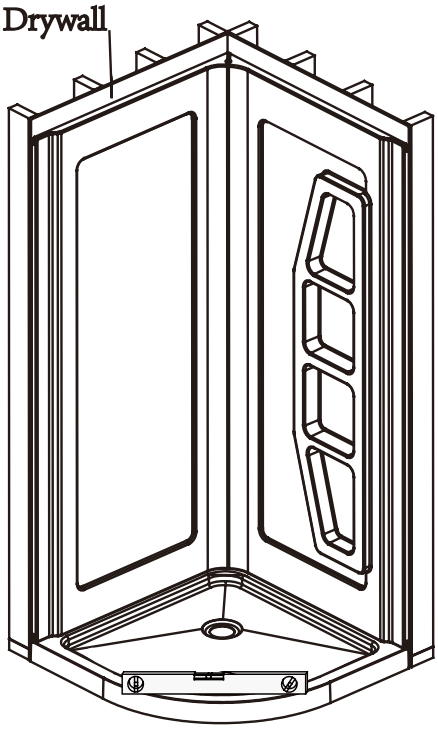


fig. 8

INSTALLATION

08

Refer to the drawing below to ensure your installation matches the illustrated layers.
See Fig. 9

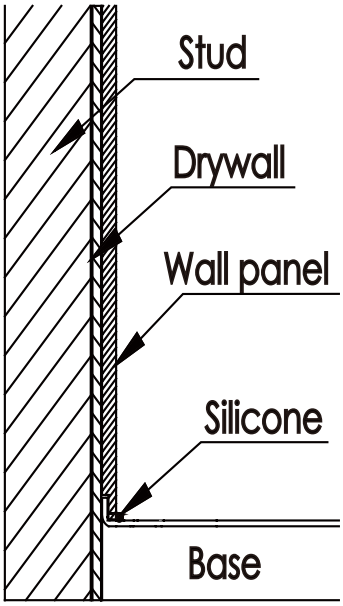


fig. 9

09

Finally, use silicone to fill any remaining gaps between the wall panels and shower base.
See Fig. 10


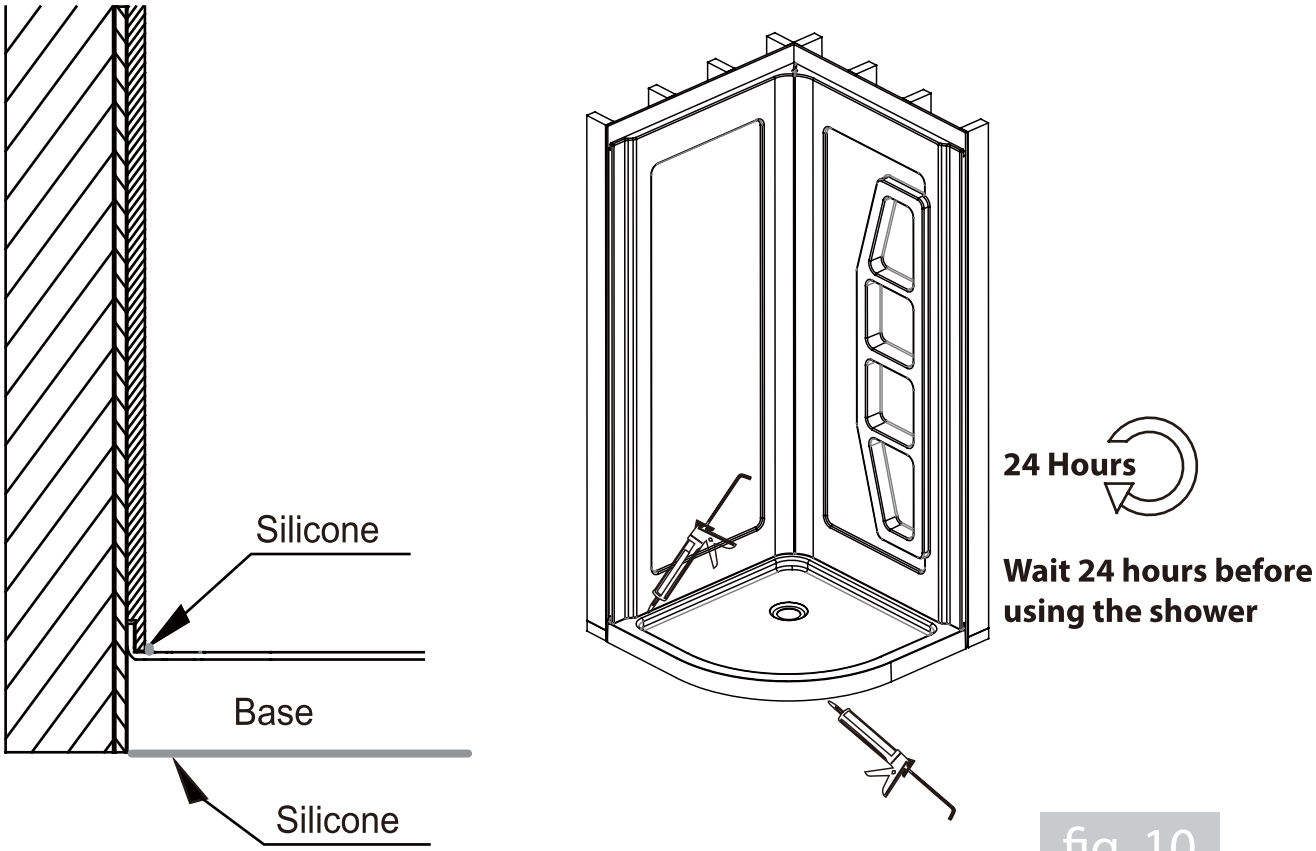


fig. 10

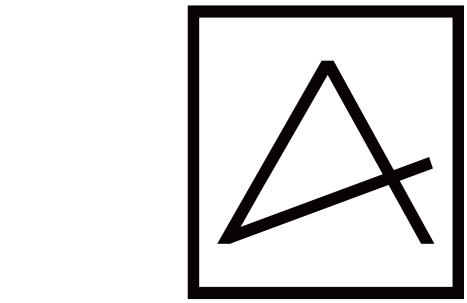

ANZZI®