


1	ALLEN BOLT M6 x 50 MM	04 PCS	2	FLAT WASHER M6/19	04 PCS	3	HANDLE U128	02 PCS	4	PHILLIPS HEAD BOLT (M4 x 30 MM)	04 PCS	5	ALLEN KEY N4	01 PC
														





00:20








Not provided



STEP 1:

FASTEN THE LEGS (B), SUPPORT LEG (C) TO THE
SIDEBOARD (A), WITH BOLTS (1) AND WASHERS (2).

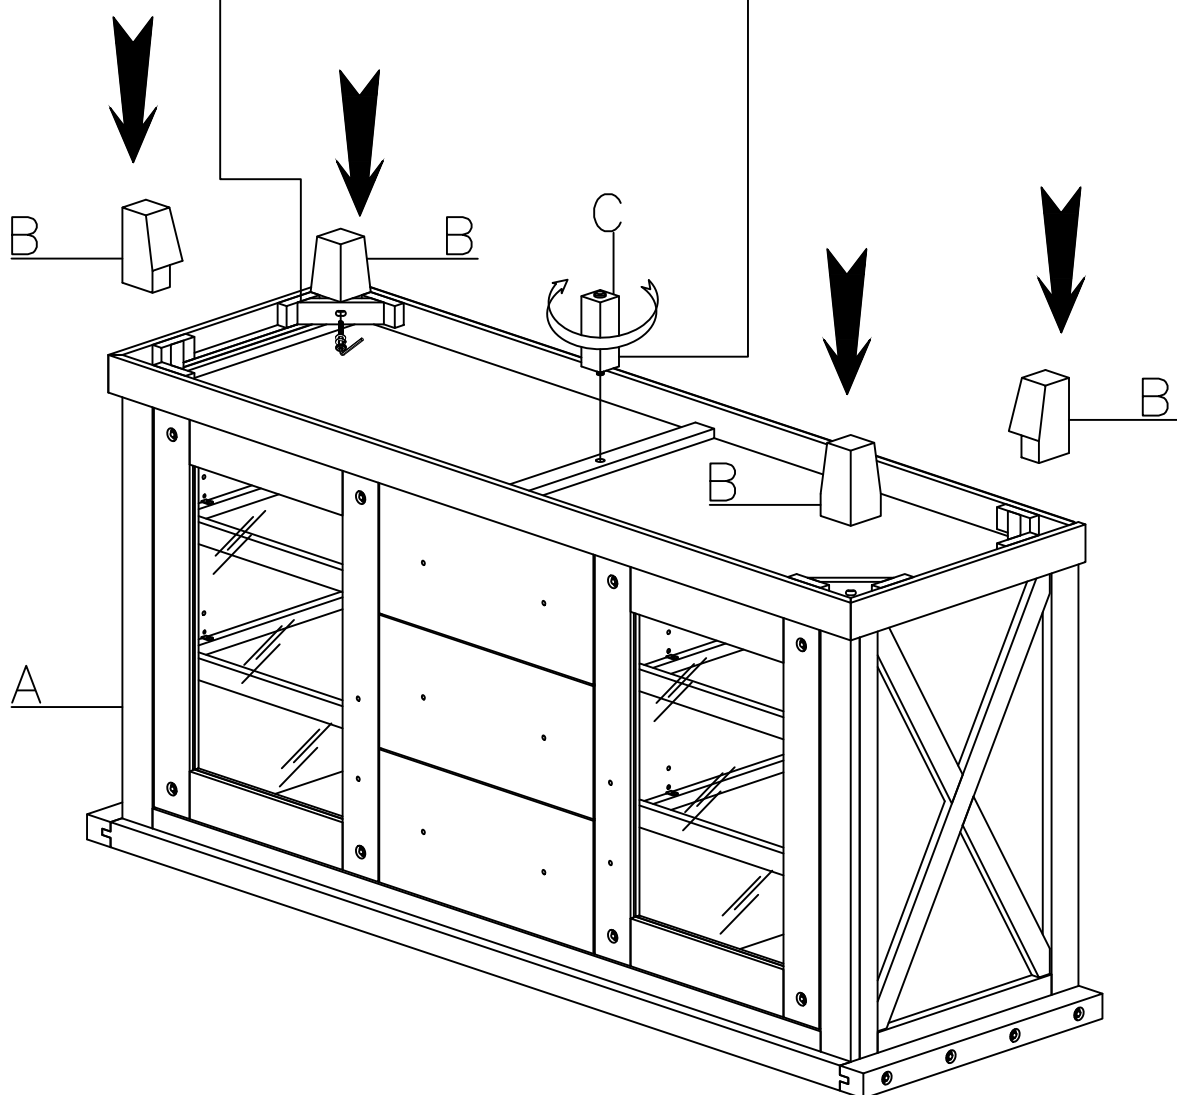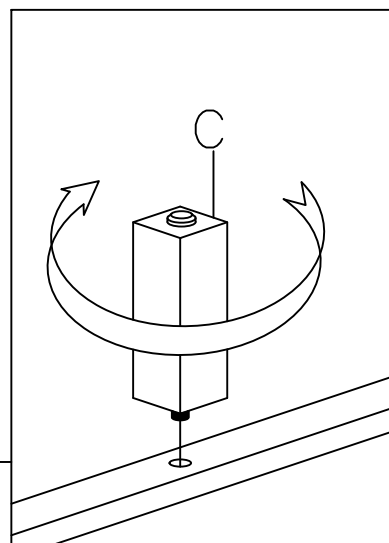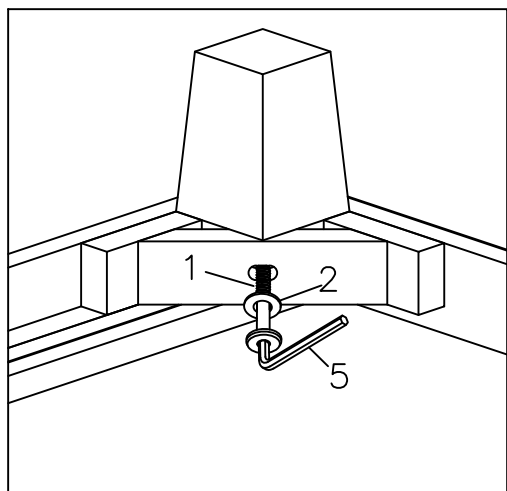



STEP 2:

OPEN THE DRAWERS AND RELOCATE THE HANDLES FROM THE INSIDE TO OUTSIDE.

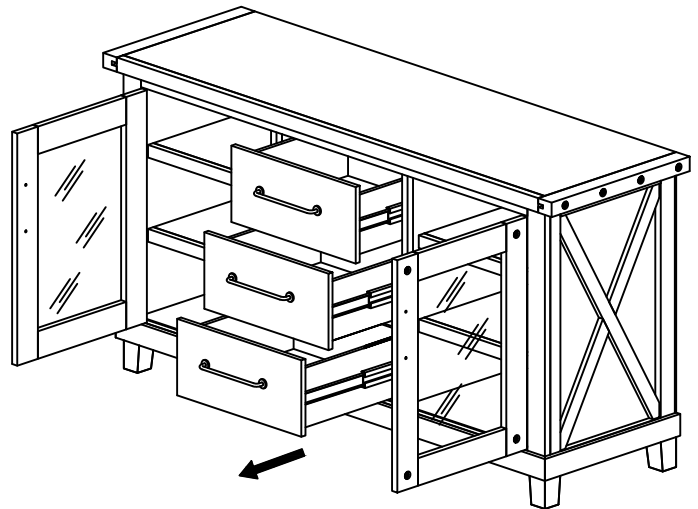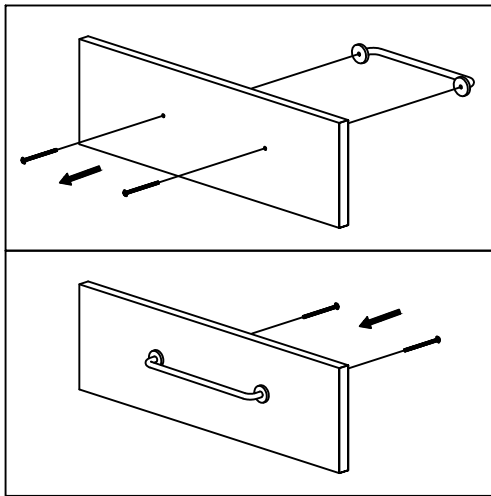

STEP 3:

ASSEMBLE HANDLE.

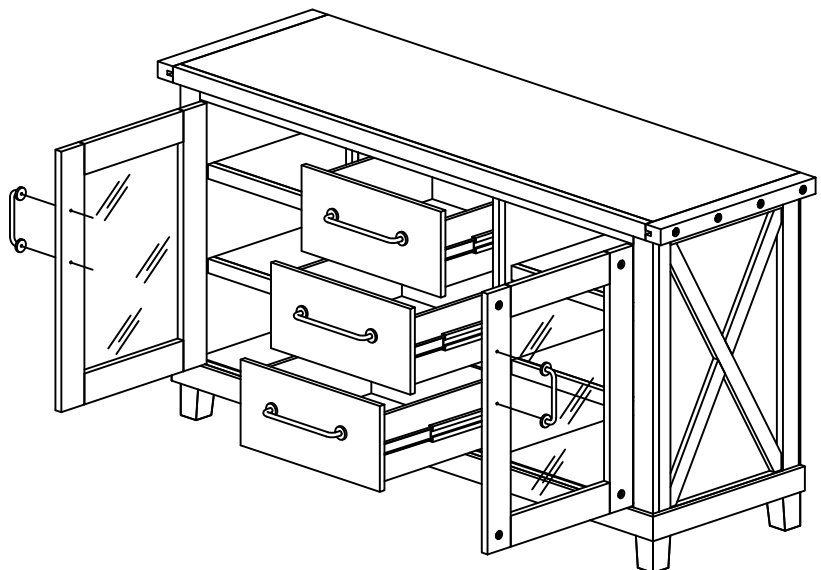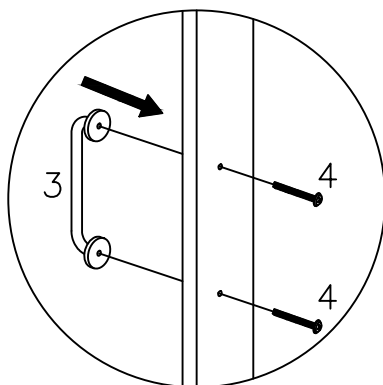

STEP 4:

ASSEMBLY COMPLETE.

