






ITEM: ID-AZBD06
ID-AZBD07
ID-AZBD08
ID-AZBD09
ANZZI BARN DOOR
INSTALLATION & OPERATION MANUAL
V1.2
09/27/2026

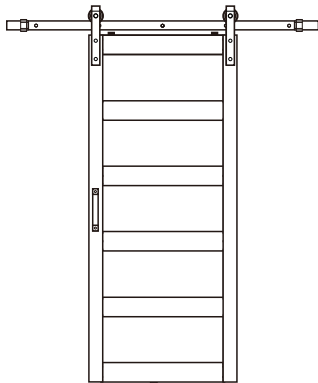


ID-AZBD06

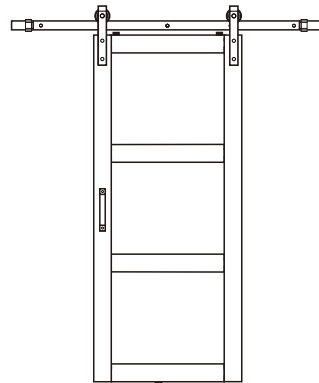

ID-AZBD07

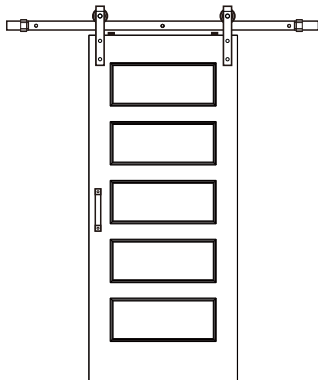

ID-AZBD08

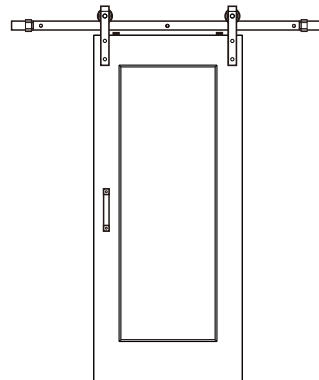

ID-AZBD09

DON'T WAIT! REGISTER NOW!

Register your product within 90 days to ensure your purchase is recognized and eligible for warranty coverage.

Register online at <https://anzzi.com/pages/register> or scan the QR code on PG. 2.



PRODUCT REGISTRATION*

IMPORTANT: Warranty will not be recognized unless product is registered.

Register online at <https://anzzi.com/pages/register> or Scan the QR code below.

Registering your product maximizes your warranty benefits and ensures prompt service and support.

1

USE YOUR PHONE CAMERA
TO SCAN THE QR CODE



2

FILL IN A QUICK
REGISTRATION FORM

Thank you for your purchase!

Registering your products ensures you maximize your warranty benefits and receive prompt service and support.

Name*

Email*

City*

Order #*

Installer Name

...

Model Purchased*


Installer Phone Number

Customer Age Range

Submit

3

CLICK SUBMIT AND
ENJOY PEACE OF MIND

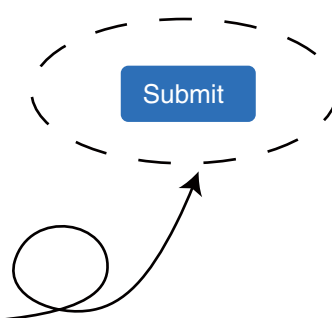

Need help? For technical support call **305-363-4679** or visit us at www.ANZZI.com

INSTALLATION GUIDE

BEFORE YOU BEGIN


- Please check the product for damage and missing parts immediately upon delivery. Damage reported later will not be covered by our warranty. Please handle the product with care. Avoid any impact to the sides and edges of the door.
- Consult your local building codes before installation.
- Read instructions fully before starting the installation of your barn door. Not following the installation instructions can cause the unit to work in an unsafe manner and cause injury.
- The barn door kit has been designed to work as a total system. Any modification to the door or the hardware will void the warranty and may cause the unit to work improperly.




WARNING

- Due to the weight of the barn door, installation requires two people. Always wear appropriate personal protection equipment when using tools and follow manufacturer's operating instructions.
- When installing directly into a non-concrete wall, do not attempt to install the track solely to the drywall or any wall surface as this may not support the weight of the track and mounted door.
- The track must be installed onto a piece of solid wood blocking using mounting screws (included in some complete kits).
- Ensure the solid wood blocking is secured into the structural surface.
- Use a stud finder where necessary to locate studs and secure safely.
- Typical solid wood blocking should be a 1"x4" solid wood board the length of the track.
- There are glass parts for ID-AZBD06 or ID-AZBD07. Please be careful when moving the door.


TOOLS REQUIRED

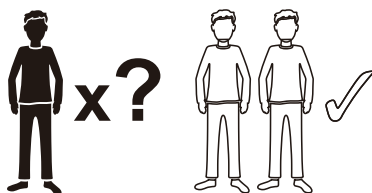


- The help of a second person may be required due to product's weight.

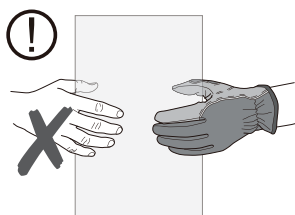

- Use cut-resistant, non-slip gloves to reduce the risk of personal injury and to hold the glass firmly.




Tape Measure

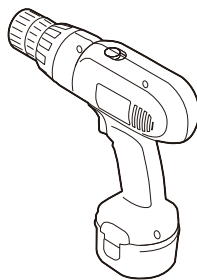


Drill




5/16"
(8mm)
Drill Bit




3/8"
(10mm)
Drill Bit

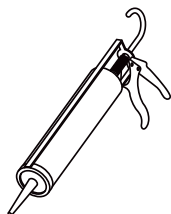


100%
Silicone
Sealant



Pencil

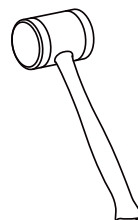

Rubber
Mallet

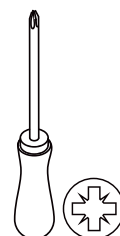

Phillips
Screwdriver




Level



Safety
Glasses



Stud Finder

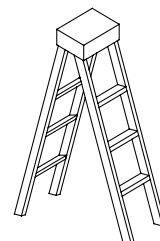

Ladder



13mm
Wrench



16mm
Wrench




17mm
Wrench



This product is heavy and may require two people to install.




PARTS DOOR KIT

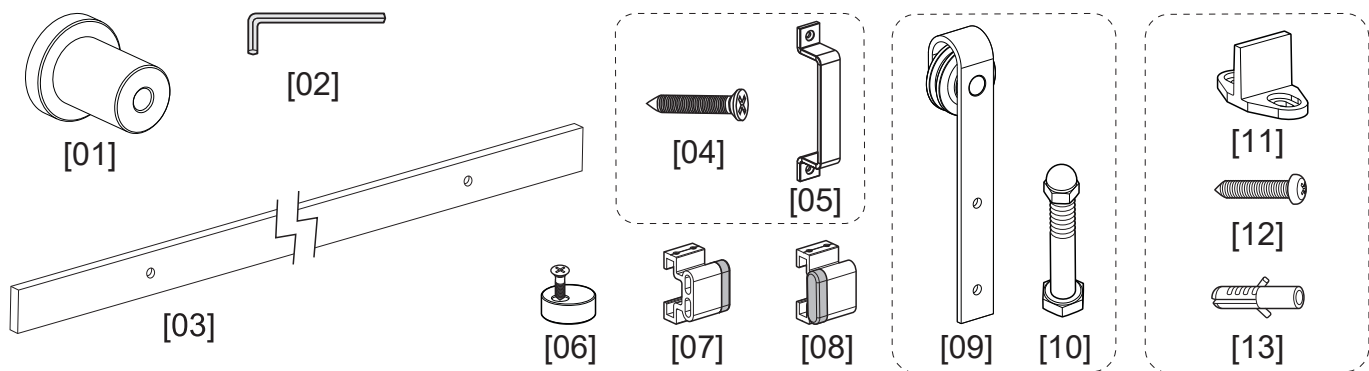

Part	Description	Qty.	Part	Description	Qty.
[01]	Spacers	5	[09]	Top Mount Roller	2
[02]	Allen Wrench	1	[10]	Bolt assembly	4
[03]	Track	1	[11]	Door Guide	1
[04]	Screw	2	[12]	#8 Screw	2
[05]	Handle	1	[13]	5/16" Anchor	2
[06]	Anti-jump Block	2	[14]	Gasket	5
[07]	Left Stopper	1	[15]	5/16" X 3.5" Bolt	5
[08]	Right Stopper	1	[16]	3/8" Anchor	5

PRODUCT SIZE CHART ID-AZBD09

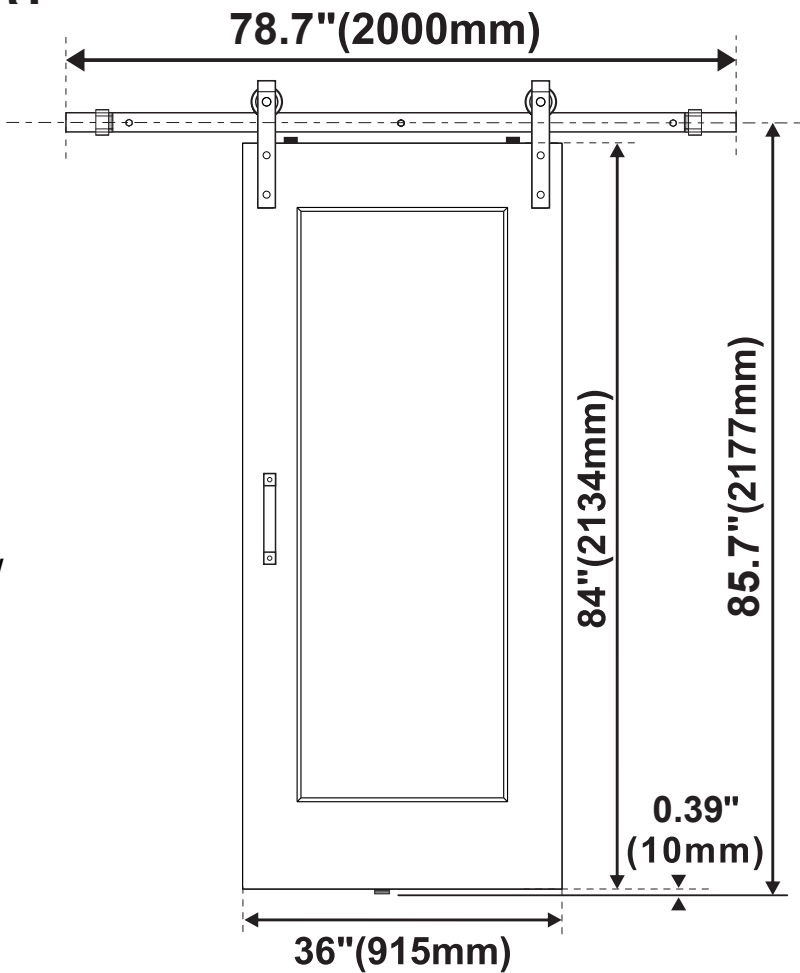

Note:
ID-AZBD06 / ID-AZBD07 /
ID-AZBD08 are same
dimension as ID-AZBD09.



ATTENTION

- To avoid personal injury or property damage, identify components and read all instructions before installing.

INSTALLATION INSTRUCTION

Step 1

1. This step requires a second person. Measure the center of **Track [03]** from the floor as figure shows. Measure one end of **Track [03]** from the edge of opening as figure shows. (Fig 1)
2. Hold the **Track [03]** on the wall and adjust to level position. Make sure the distance between the **Track [03]** and the floor.
3. Mark the screw holes of the **Track [03]** onto the wall. Then remove it.

Note: Make sure there is a wood frame behind the location of **Track [03]**.

Step 2

Drill the holes at the screw locations in 2" deep using a 3/8" drill bit.

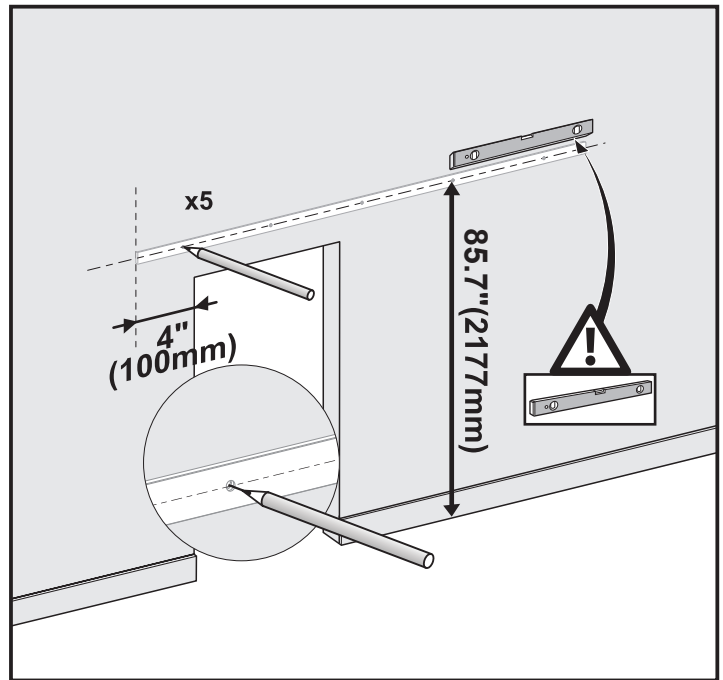


Fig 1

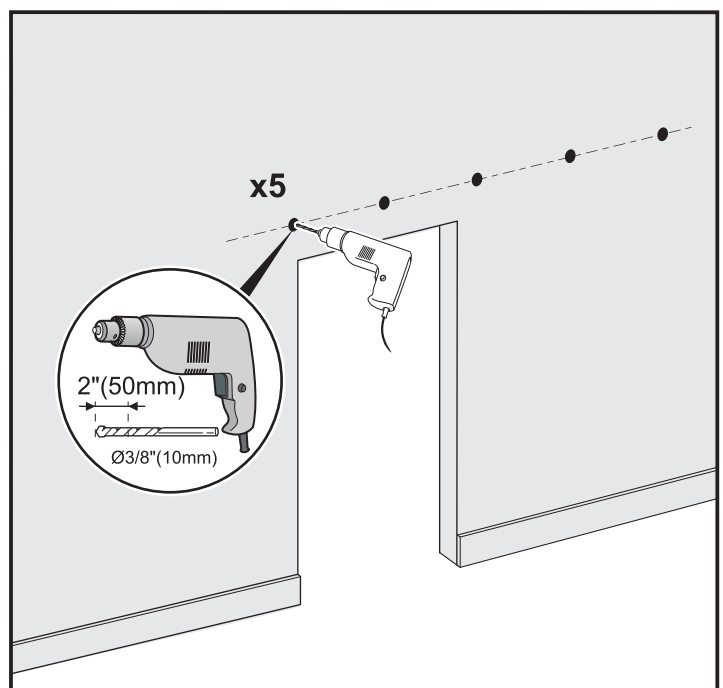


Fig 2

Step 3

1. Install **3/8" Anchors [16]** into the holes.
2. Place the **Spacers [01]** between the wall and the **Track [03]**. Secure the **Track [03]** with **Gaskets [14]** and **5/16" X 3.5" Bolts [15]**.
Tighten the bolts with 13mm Wrench.

Caution: Do not over tighten the bolts to avoid scratching the **Track [03]**.

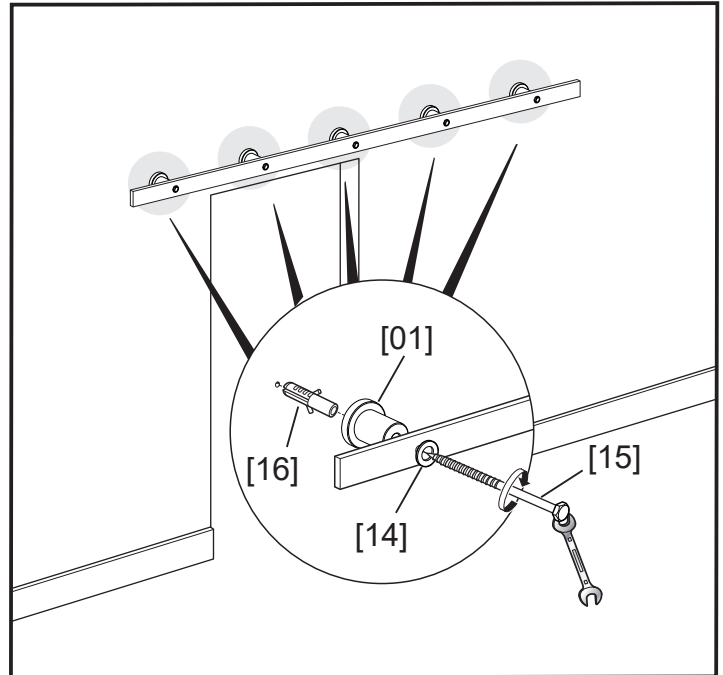


Fig 3

Step 4

1. Install **Top Mount Rollers [09]** to one side of the door and secure it with **Bolt assembly [10]** using 16mm & 17mm Wrenches as figure shows. (Fig 4)
2. Make sure there are washers between the bolts and door, nuts and **Top Mount Rollers [09]**.

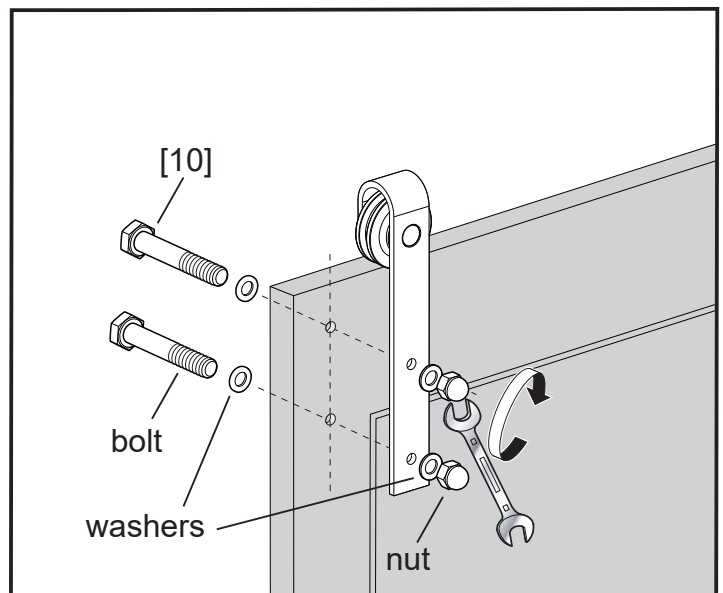


Fig 4

Step 5

Install **Anti-jump Blocks [06]** and secure them with screws as figure 5 shows. **Do not over tighten.**

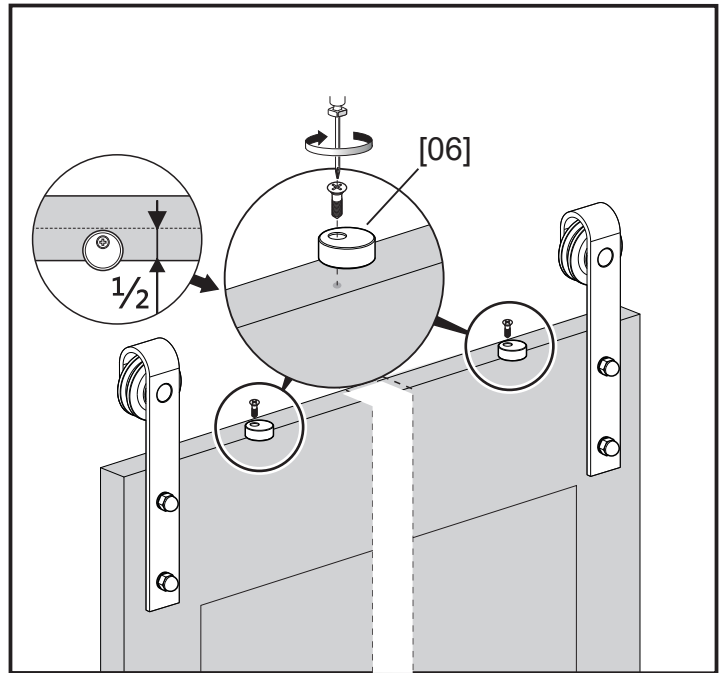


Fig 5

Step 6

1. Place assembled door with rollers onto track and rotate the **Anti-jump Blocks [06]** as figure shows.
2. Slide door back and forth to test how well the door covers the opening. (Fig 6)

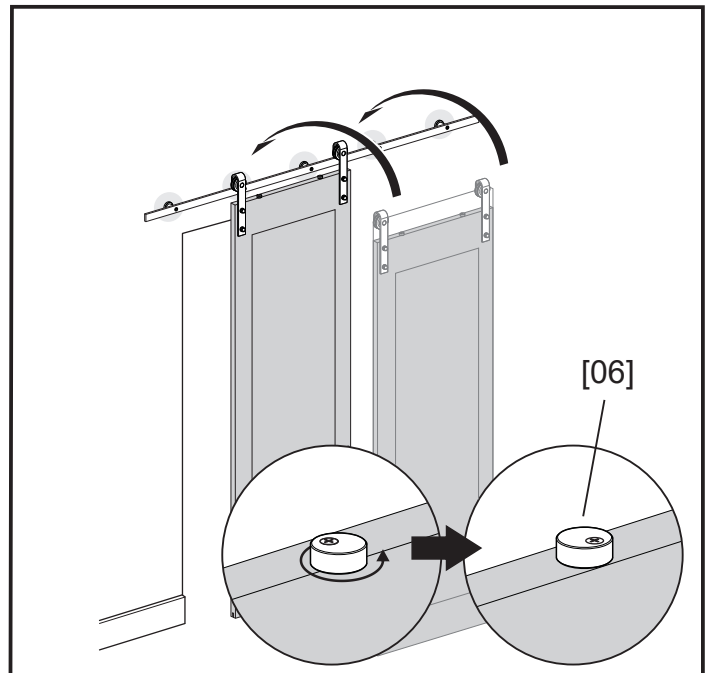


Fig 6

Step 7

1. Hold the door in straight position.
2. Position the **Door Guide [11]** inside the groove in the bottom of the door. Slide the door side to side to ensure the guide is properly placed.
3. Mark the screw holes of guide.
4. Drill the holes at the screw locations in 1.6" deep using a 5/16" drill bit.
5. Slide the door to one side and install the **5/16" Anchor [13]**.
6. Secure the **Door Guide [11]** with **#8 Screw [12]**.

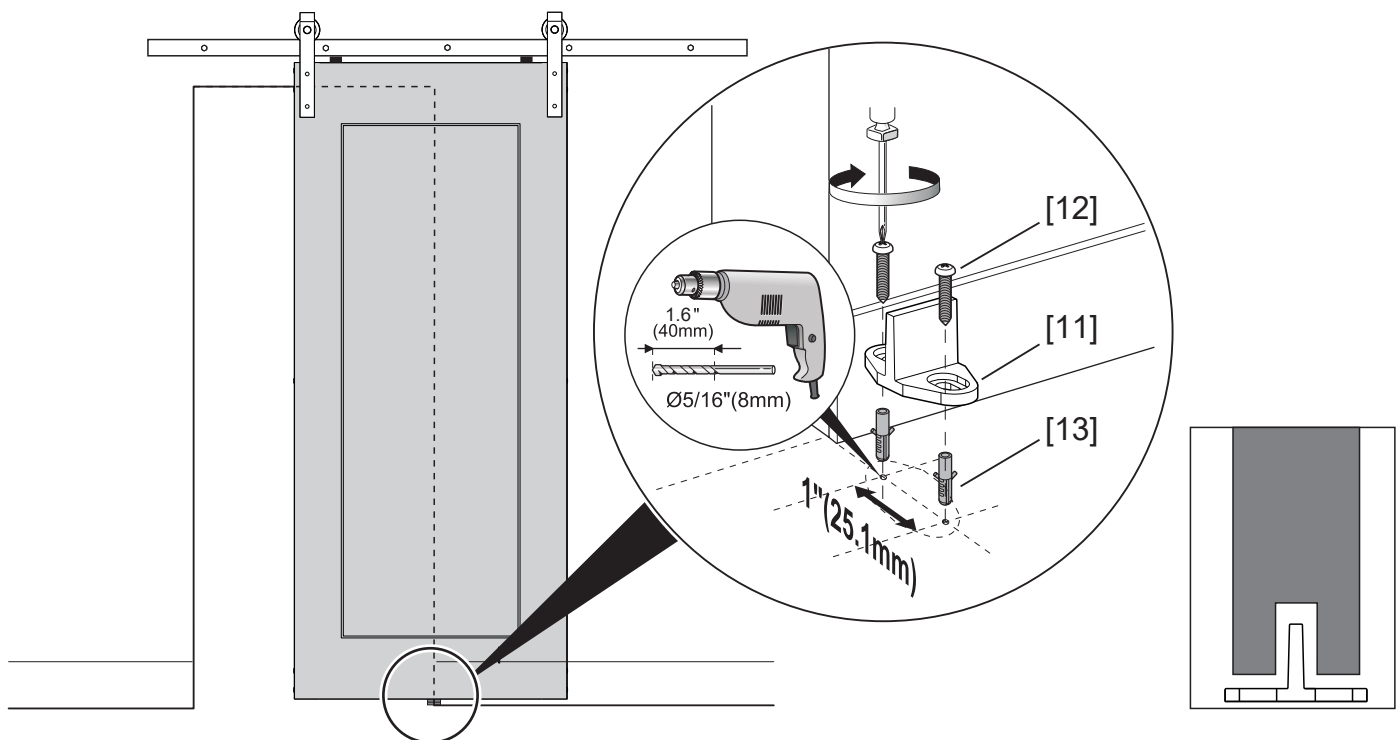


Fig 7

Step 8

1. Slide **Left Stopper [07]** on to the left and **Right Stopper [08]** on to the right ends of **Track [03]**.
2. Adjust the stoppers and secure with set screws using the allen wrench that is included with stoppers.

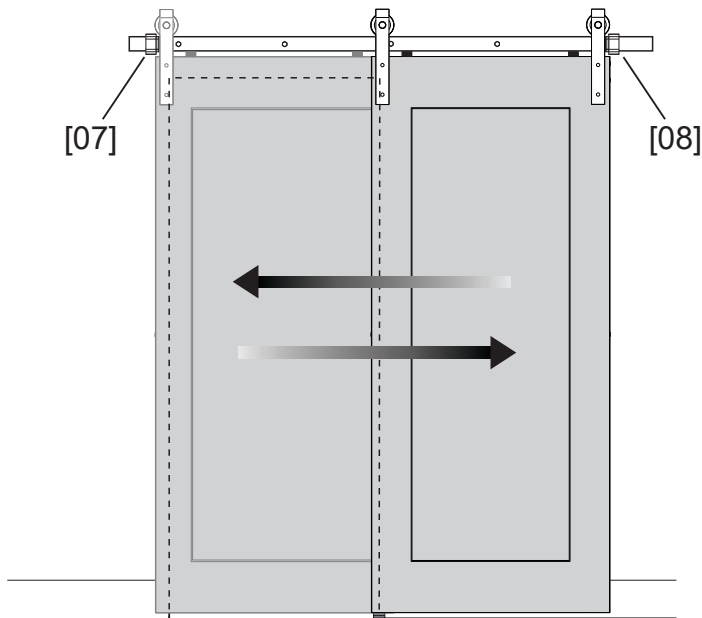
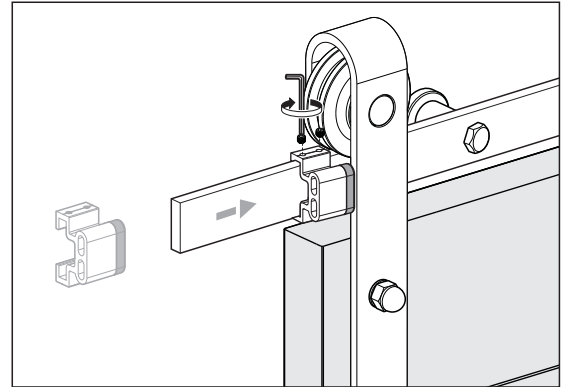


Fig 8

Step 9

Place the **Handle [05]** in the intended position on the door and secure it with **Screws [04]**.

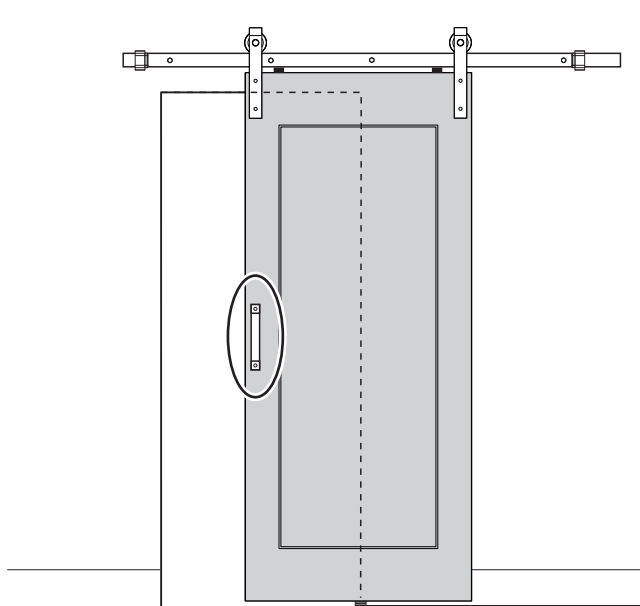
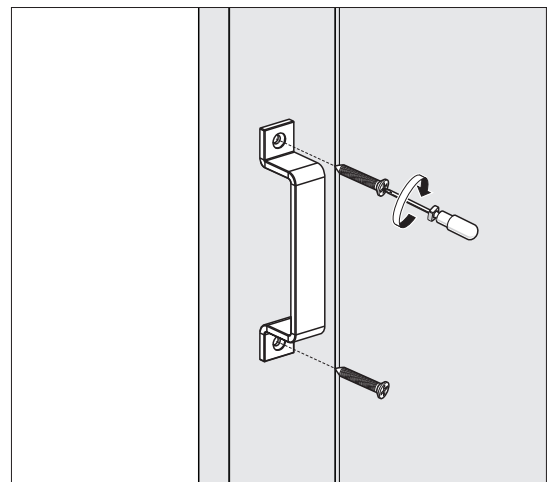


Fig 9

Care & Maintenance

For daily maintenance, use a wet cloth and a soft liquid cleaner.

Never use abrasive cleaners containing acetone, chlorine or strong bleach, scrapers, metallic brushes, nor other objects or products which can scratch or tarnish surfaces.

Check the bolts every 3 months and re-tighten them if necessary.

