


Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.

IMPORTANT

These bed parts can be cumbersome and heavy to some people, therefore the assistance of two or more people is recommended in order to prevent personal injury and ensure the bed parts are not damaged during the assembly Process.

PART LIST

- A HEADBOARD
- B SIDE RAILS
- C FOOTBOARD
- D SET OF BED SLATS
- E SUPPORT SLAT

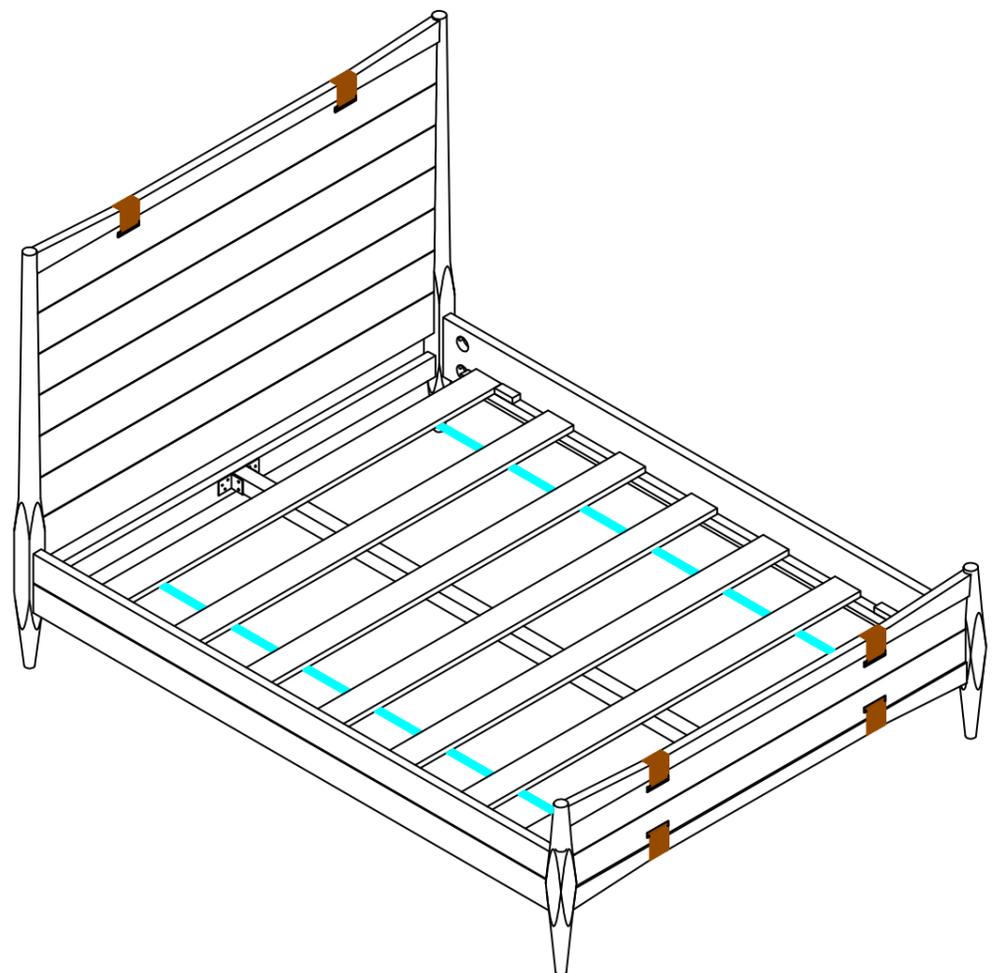

TOOLS AND HARDWARE LIST

| NO. | | DESCRIPTION | QTY. |
|-----|---|---------------|-------|
| 1 |  | THREADED ROD | 8 PCS |
| 2 |  | CURVED WASHER | 8 PCS |
| 3 |  | LOCK WASHER | 8 PCS |
| 4 |  | HEX NUT | 8 PCS |
| 5 |  | WRENCH | 1 PC |

FIGURE 01

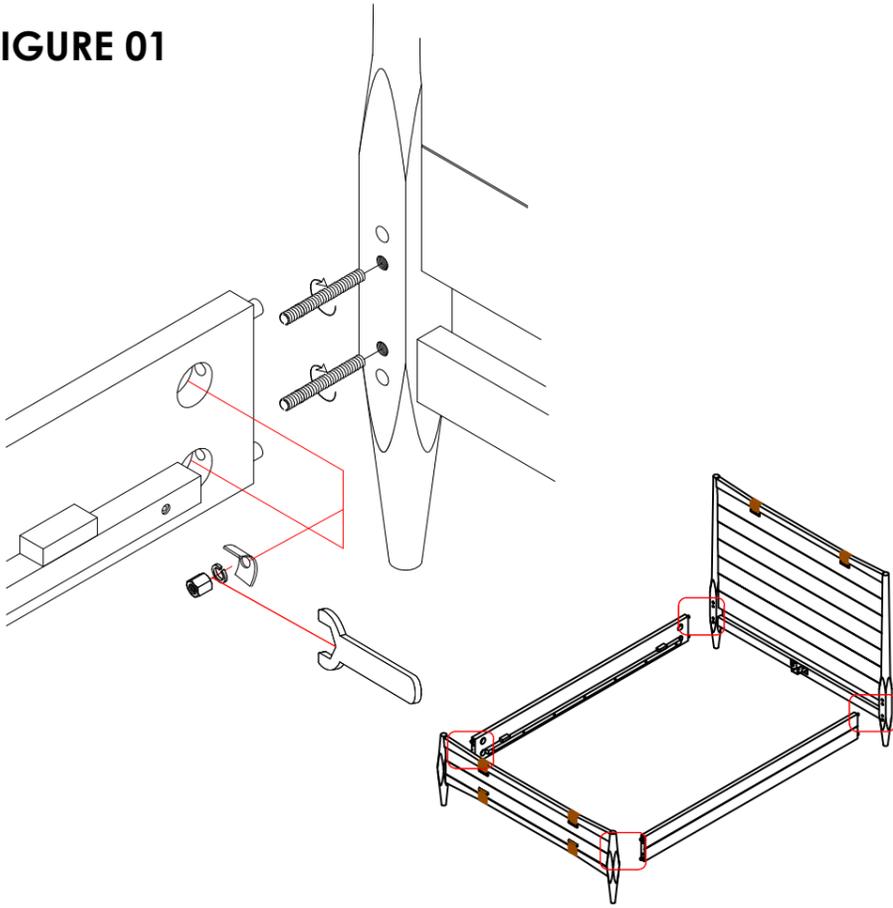


FIGURE 02


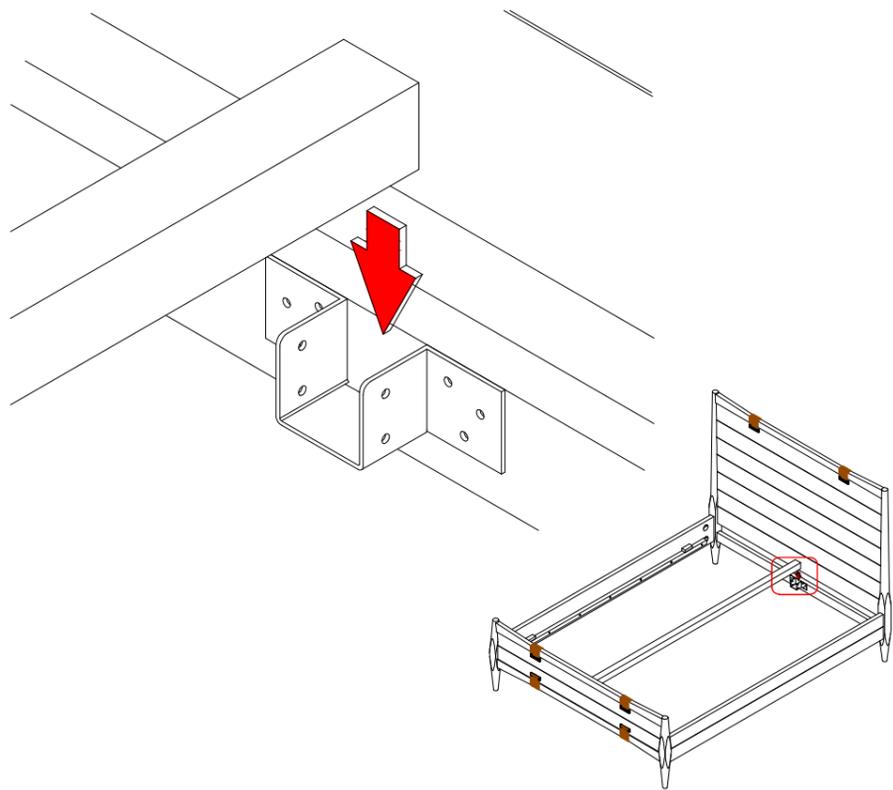


FIGURE 03

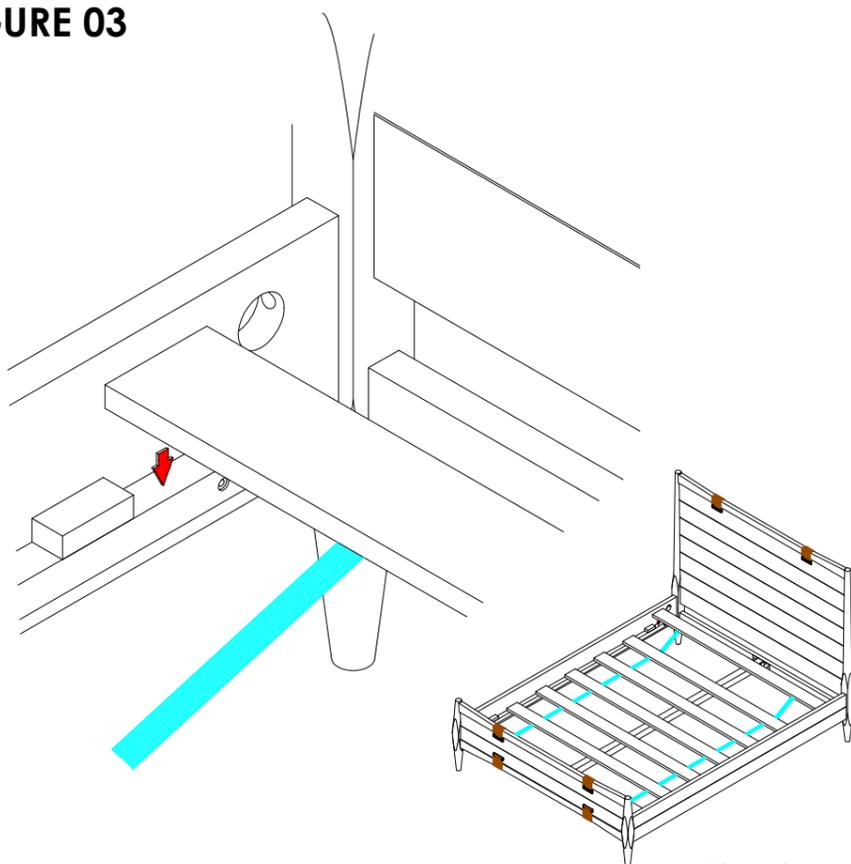

ASSEMBLY INSTRUCTIONS:

STEP #1:

Place the Headboard (A) upright in the position you wish the bed to be in when fully assembled. The Headboard bed fast hardware should be facing the inside, toward the mattress. Secure the Threaded Rods (1) to the fixed nuts in the Headboard (A) by simply turning manually. Raise the Side Rail (B) up and place the rods (1) to align with the bore holes on the end of the Side Rails (B). Put the Side Rails (B) up against the Headboard (A) so the Threaded Rods go through the bore holes. Insert Curved Washers (2) and Lock Washers (3), place Hex Nuts (4) on Threaded Rods (1) and tighten Hex Nuts (4) with Wrench (5), as illustrated in **FIGURE 01**.

STEP #2:

Repeat the above procedure with the other Side Rail (B) to attach it to the Headboard (A), and then repeat to connect Side Rails (B) to the Footboard (C).

STEP #3:

On inside face of both Headboard (A) and Footboard (C) are pre-installed wooden brackets for the Support Slat (E). Set the Support Slat (E) on the wood bracket, as illustrated in **FIGURE 02**.

STEP #4:

On inside face of both Side Rails (B) are cleats and wooden stoppers, designed to hold the Set of Slats. Set the bed slats (D) into the cleats of the Side Rails (B). Please see **FIGURE 03**.