


Step 1:
Attach fence to center of base at location screws are installed.



Step 2:
Attach handle to the cutting blade with the supplied screws, washers, and nuts.

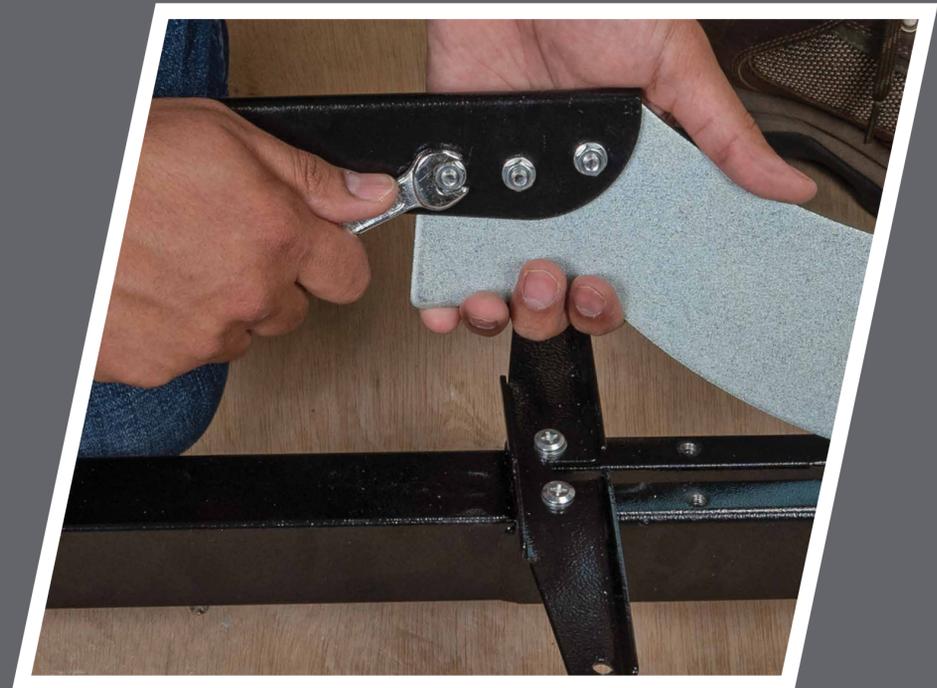

Step 3:
Attach the blade to the cutter base

- Remove the locknut from the base and slide the bolt out just enough to release one of the plastic spacers from the underside of the base.
- Align the blade hole with the bolt and hole in the base.
- Replace the spacer and bolt, tighten locknut.



Step 4:
Place the 4 round self-stick felt pads on the bottom of the base.

Tools needed for assembly (not included):
11/16" and 3/8" wrench and Philips Screwdriver