


**INSTALLATION INSTRUCTIONS FOR 12/120/130 TYPE COLLECTION BOX
(SEMI-RECESSED OR SURFACE MOUNTED)**

INSTALLATION NOTES FOR 12SR/120SR/130SR

1. CUT AN OPENING IN THE WALL, AT A DESIRED LOCATION, IN ACCORDANCE WITH THE ROUGH OPENING DIMENSIONS AS SHOWN.
2. SLIDE COLLAR ONTO UNIT FROM THE REAR AND MOVE ALL THE WAY TO THE FRAME. (SEE ILLUSTRATION)
2. INSERT COLLECTION BOX WITH COLLAR INTO OPENING
3. DRILL (2) HOLES THROUGH THE SIDES OF THE BOX INTO THE FRAME OPENING FOR #8 SCREWS
4. IF REQUIRED, REMOVE COLLECTION BOX FROM OPENING AND INSTALL ANCHORS INTO MOUNTING HOLES.
5. MOUNT COLLECTION BOX INTO OPENING USING (4) #8 SCREWS. (P/N 51298)

INSTALLATION NOTES FOR 12SM/120SM/130SM

1. PLACE COLLECTION BOX AGAINST THE WALL AT DESIRED LOCATION
2. OPEN COLLECTION BOX DOOR. USING THE PRE-DRILLED HOLES IN THE REAR PANEL OF THE BOX AS A TEMPLATE, MARK (4) MOUNTING HOLE LOCATIONS ON THE WALL.
3. DRILL (4) PILOT HOLES FOR #8 SCREW AT THE MARKS ON THE WALL.
4. IF REQUIRED, REMOVE COLLECTION BOX FROM THE WALL AND INSTALL ANCHORS INTO MOUNTING HOLES.
5. MOUNT COLLECTION BOX ONTO WALL USING (4) #8 SCREWS. (P/N 51298)

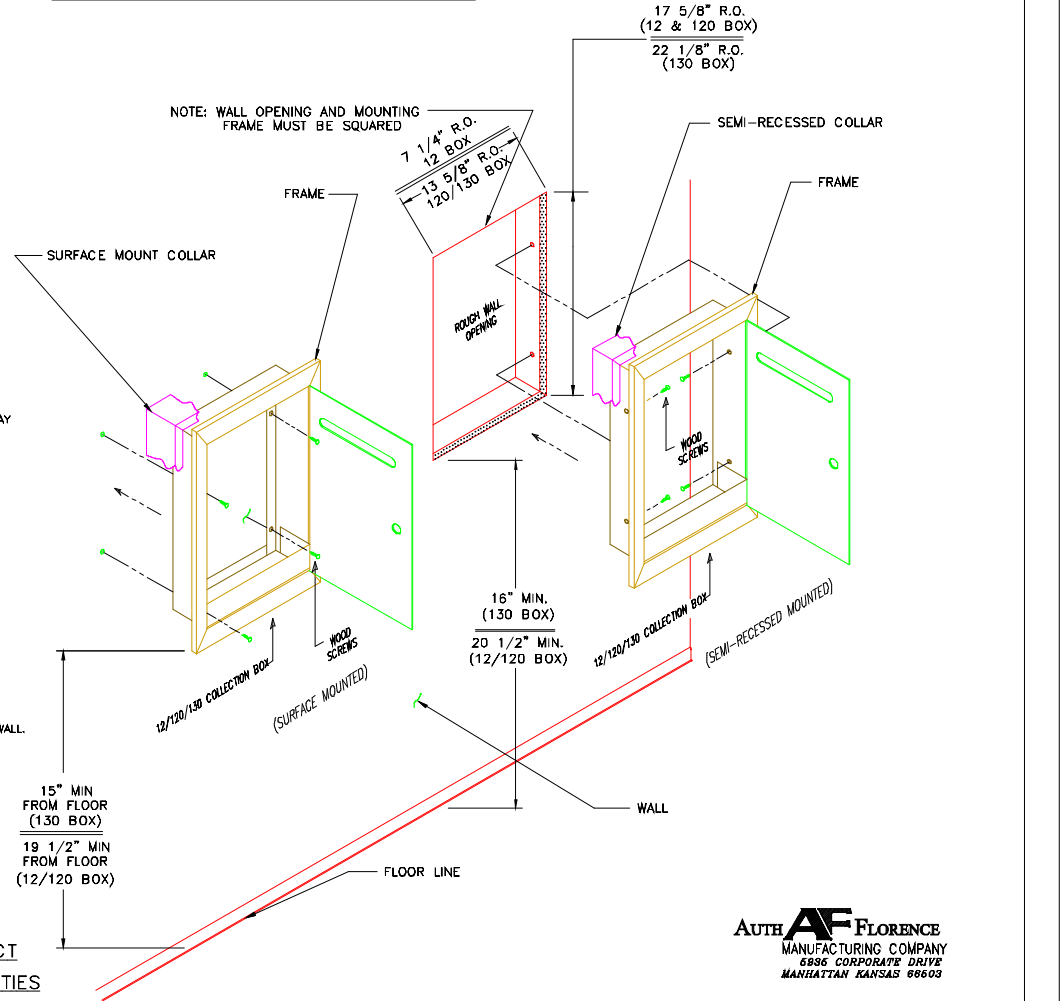

**USE OF COLLECTION BOXES ARE SUBJECT
TO APPROVAL OF LOCAL POSTAL AUTHORITIES**

AUTH AF FLORENCE
MANUFACTURING COMPANY
6886 CORPORATE DRIVE
MANHATTAN KANSAS 66603