

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have loosened inside the carton during shipment and place on a non-abrasive surface.

IMPORTANT

These parts can be cumbersome and heavy to some people, therefore, the assistance of two or more people are recommended in order to prevent personal injury and ensure the furniture is not damaged during the assembly Process.

CARE INSTRUCTIONS

1. Dust often using a clean, soft, dry and lint-free cloth.
2. Blot spills immediately and wipe with a clean, damp, cloth.
3. We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.

IMPORTANT SAFETY INSTRUCTIONS

1. Please read all instructions carefully before assembling.
2. Keep instructions for future use.
3. Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.

PART LIST

- A. [1] BODY
- B. [2] LARGE SHELF GLASS
- C. [1] MEDIUM SHELF GLASS
- D. [2] SMALL SHELF GLASS


INSTRUCTIONS

1. Preset the body (A) on your desired location.
2. Secure place the Bumpon plastic (1) on the rail of the body and then place the shelf glass (B) on it. See sketch as shown below. **IMPORTANT:** For the top and bottom frame, using 14 pcs bumpon plastic for each frame, middle frame will be 10 pcs and side frame is 8 pcs.

Note: The first, install a Glass shelf (B) on the bottom frame , then install both glass shelf (D) on the side frame, next that installed a glass shelf (C) on the middle frame and finally installed another glass (B) on the top frame .

HARDWARE LIST

NO	DESCRIPTION	QTY
1	 BUMPON PLASTIC	54

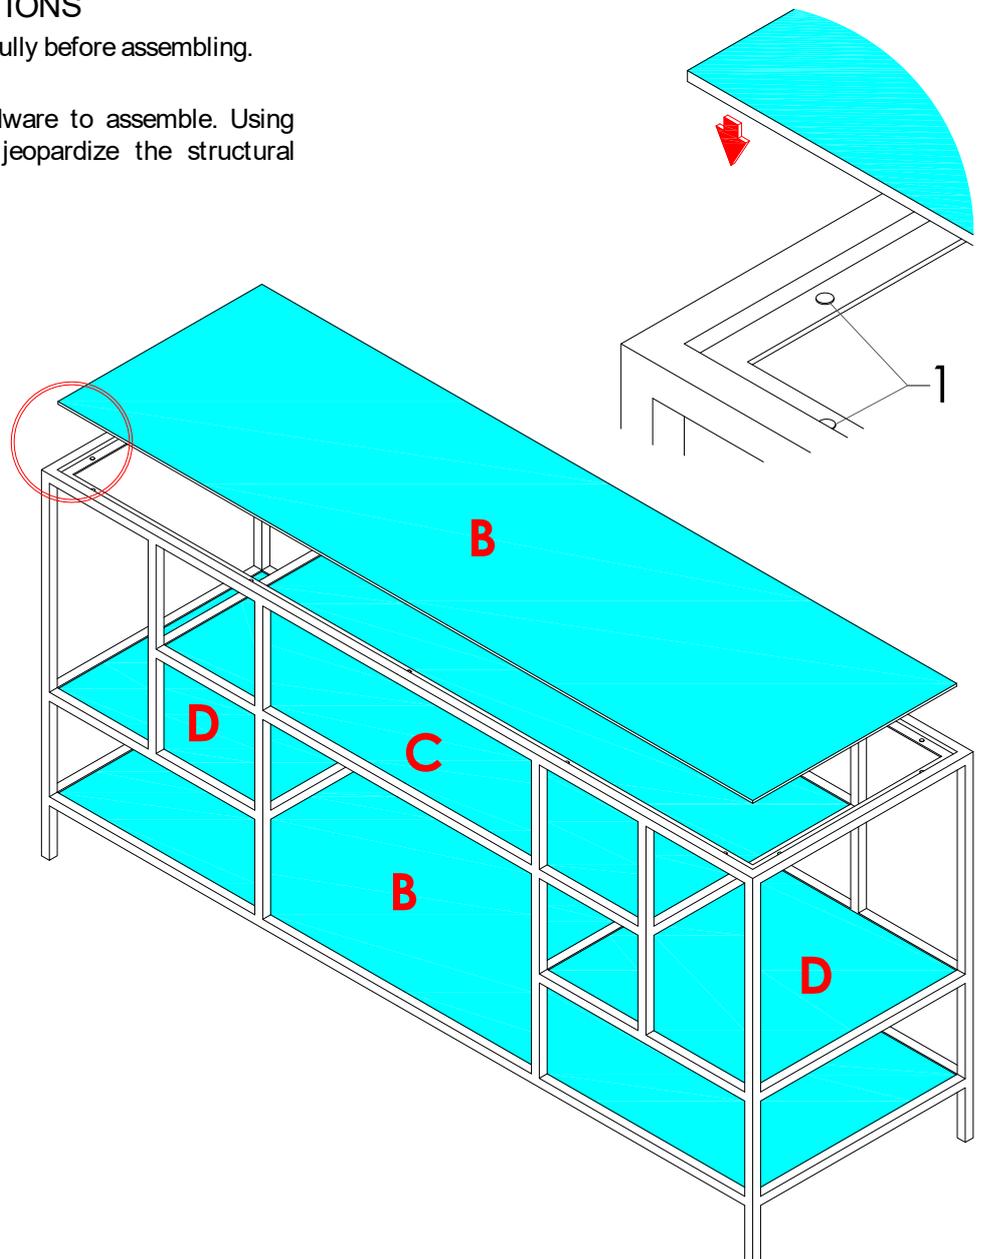

FURNITURE TIPPING RESTRAINT INSTRUCTIONS

Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended. When properly installed, this restraint could provide protection against the unexpected tipping of furniture due to small tremors, bumps or climbing. We recommend mounting this restraint to a wall stud.

WARNING: This product is only a deterrent. It is not a substitute for proper adult supervision.

HARDWARE LIST

NO	DESCRIPTION	QTY
2	 PLASTIC BRACKET	2
3	 RESTRAINT STRAP	2
4	 PHILLIPS SCREWS (M4 x 30)	4
5	 PLASTIC ANCHOR	4

INSTALLATION INSTRUCTION

1. Mark locations of the plastic brackets on the wall approximately 6" below the top-back corner of the furniture.
2. Drill a shorter hole into the wall stud. If wall stud is not available, drill a hole into the wall and insert plastic anchor. Gently tap the anchor until the flange is flush with the wall.
3. Attach the plastic brackets by inserting screw through the bracket and into the wall. Place the furniture so that the back posts are in line with the brackets on the wall.
4. Lace one end of the nylon restraint strap go through the bracket and the back post. Bring both ends together and slide the beaded end until it snaps/ locks into the keyhole slot.
5. To double lock; return the beaded end back through the keyholes as shown.
6. Check to make sure the straps are securely laced and locked to the brackets.

