

SONDER

LIVING

CHESTER BAR CABINET

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have loosened inside the carton during shipment and place on a non-abrasive surface.

IMPORTANT

These parts can be cumbersome and heavy to some people, therefore, the assistance of two or more people are recommended in order to prevent personal injury and ensure the furniture is not damaged during the assembly Process.

PART LIST

A. [1] TOP

B. [4] LEGS

INSTRUCTIONS

1. Gently, lay the back of the of on a soft flat surface.
2. Align and attach the leg (B) into the bottom of the top by insert Allen bolts (1) together with lock washers (2) and flat washers (3) into each fixed nuts through the holes on top of the leg, then tighten them by using Allen wrench (4). DO NOT OVER TIGHTEN. See FIGURE 01.
3. Repeat for all other legs.
4. For purpose packing, the adapter connected with electric wire but not yet fixed to product. Please attached the adapter to the bottom of product by using all screws (5) provided. See FIGURE 02.
5. After assembly, turn the Cabinet upright on your desired location.

HARDWARE LIST

NO	DESCRIPTION	QTY
1	 ALLEN BOLT	24
2	 LOCK WASHER	24
3	 FLAT WASHER	24
4	 ALLEN WRENCH	2
5	 SCREWS FOR ADAPTER M4X15MM	2
6	 PLASTIC BRACKET	4
7	 RESTRAINT STRAP	2
8	 PHILLIPS SCREWS (M4 x 30)	4
9	 PHILLIPS SCREWS (M4 x 20)	4
10	 PLASTIC ANCHOR	4




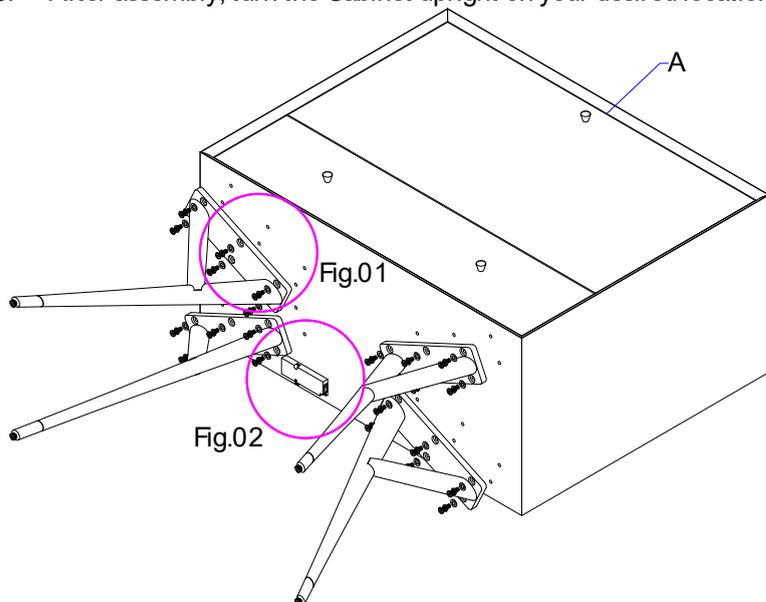


FIGURE 01

FIGURE 02

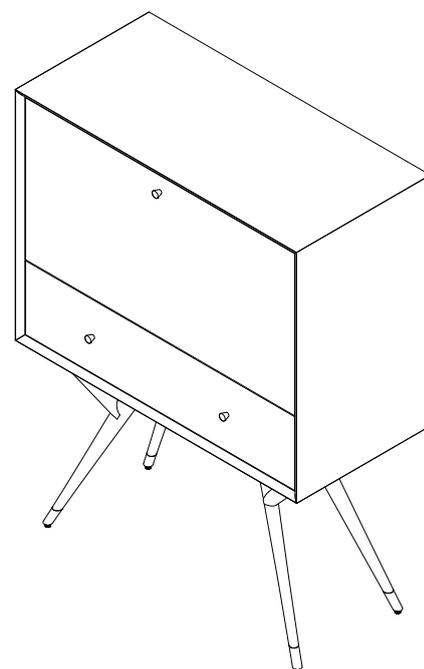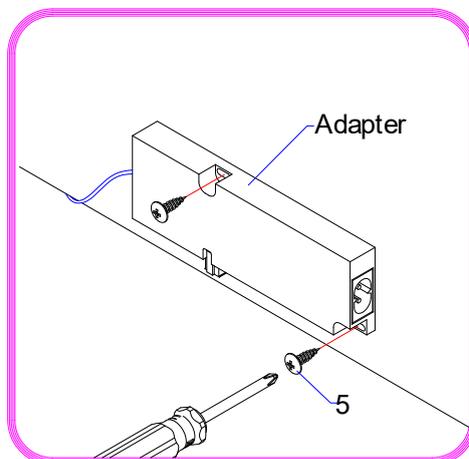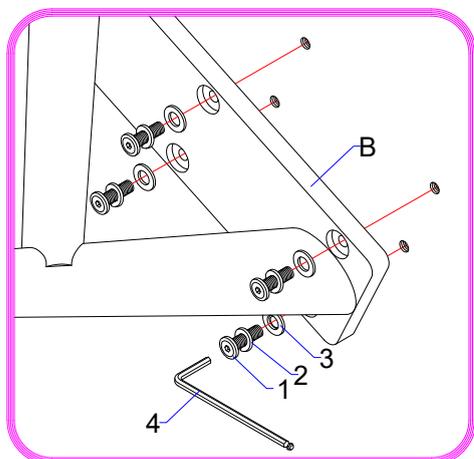

REPLACEMENT INSTRUCTIONS FOR ELECTRIC WIRE

On the furniture, we fixed a adapter together with a electric wire. Now, please determine power outlet in the your house. We have 4 option:


- If your power outlet with 2 jack holes is round for CE standard, use electric wire (11) provided. (Refer to instruction as below)
- If your power outlet with 2 jack holes is flat for China standard, use electric wire (12) provided. (Refer to instruction as below)
- If your power outlet with 3 jack holes for CE standard, use electric wire (13) provided. (Refer to instruction as below)
- If your power outlet with 2 jack holes is flat for UL, CE standard, use electric wire (14) provided. (Refer to instruction as below)

INSTALLATION INSTRUCTION

Install correctly electric wire so accordingly with your power outlet . Refer to FIGURE02.

HARDWARE LIST

NO	DESCRIPTION	QTY
11	 PLUG WITH 2 ROUND PINS (CE CERTIFICATED)	1
12	 PLUG WITH 2 FLAT PINS (CCC CERTIFICATED)	1
13	 PLUG WITH 3 PINS (CE CERTIFICATED)	1
14	 PLUG WITH 2 FLAT PINS (UL,CE CERTIFICATED)	1

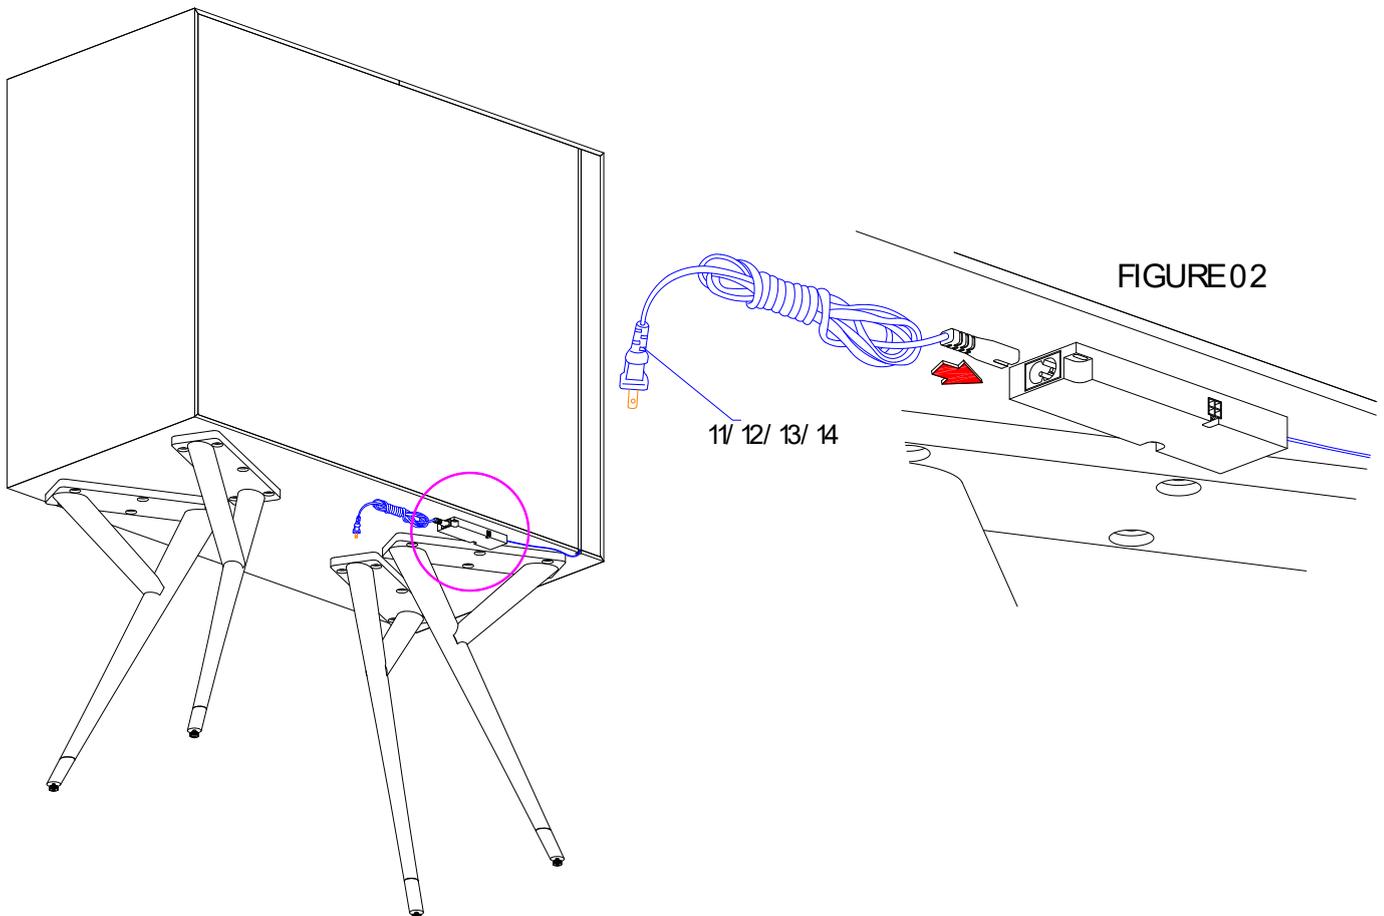

ASSEMBLY INSTRUCTIONS BY WALL TYPE:

- DRYWALL WITH STUDS: Use screws to affix to studs, and use hollow wall anchors and screws to affix to drywall. See FIGURE A.
- DRYWALL WITHOUT STUDS: Use toggle bolt and screws to affix to drywall. See FIGURE B.

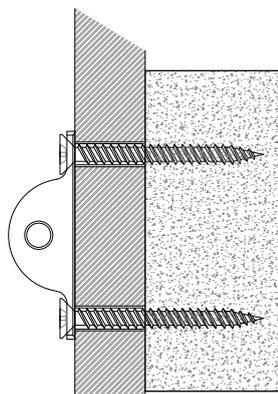


FIGURE A
DRYWALL W/STUDS

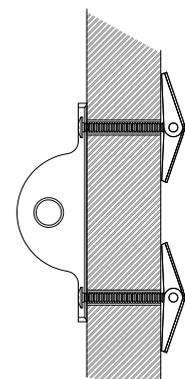


FIGURE B
DRYWALL W/O STUDS


FURNITURE ANTI-TIP RESTRAINT INSTRUCTIONS

Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended. When properly installed, this restraint could provide protection against the unexpected tipping of furniture due to small tremors, bumps or climbing. We recommend mounting this restraint to a wall stud.

WARNING: This product is only a deterrent. It is not a substitute for proper adult supervision.

INSTALLATION INSTRUCTION

1. Attach two of the Plastic Brackets near the top back edge of the furniture piece by inserting the shorter screws.
2. Determine the final position of the furniture piece. Mark locations on the wall approximately 2" below the brackets mounted to the back of the furniture.
3. Drill a shorter hole into the wall stud. If wall stud is not available, drill a hole into the wall and insert Plastic Anchor. Gently tap the Anchor until the flange is flush with the wall.
4. Attach the second set of brackets by inserting the longer screw through the bracket and into the wall.
5. Carefully move the chest backward within 1.5" to 2" from the wall.
6. Place the furniture so that the brackets on the back edge are in line with the brackets in the wall.
7. Lace one end of the nylon restraint strap down through each bracket. Bring both ends together and slide the beaded end until it snap locks into the keyhole slot.
8. To double lock; return the beaded end back through the keyholes as shown.
9. Check to make sure the straps are securely laced and locked to the brackets.

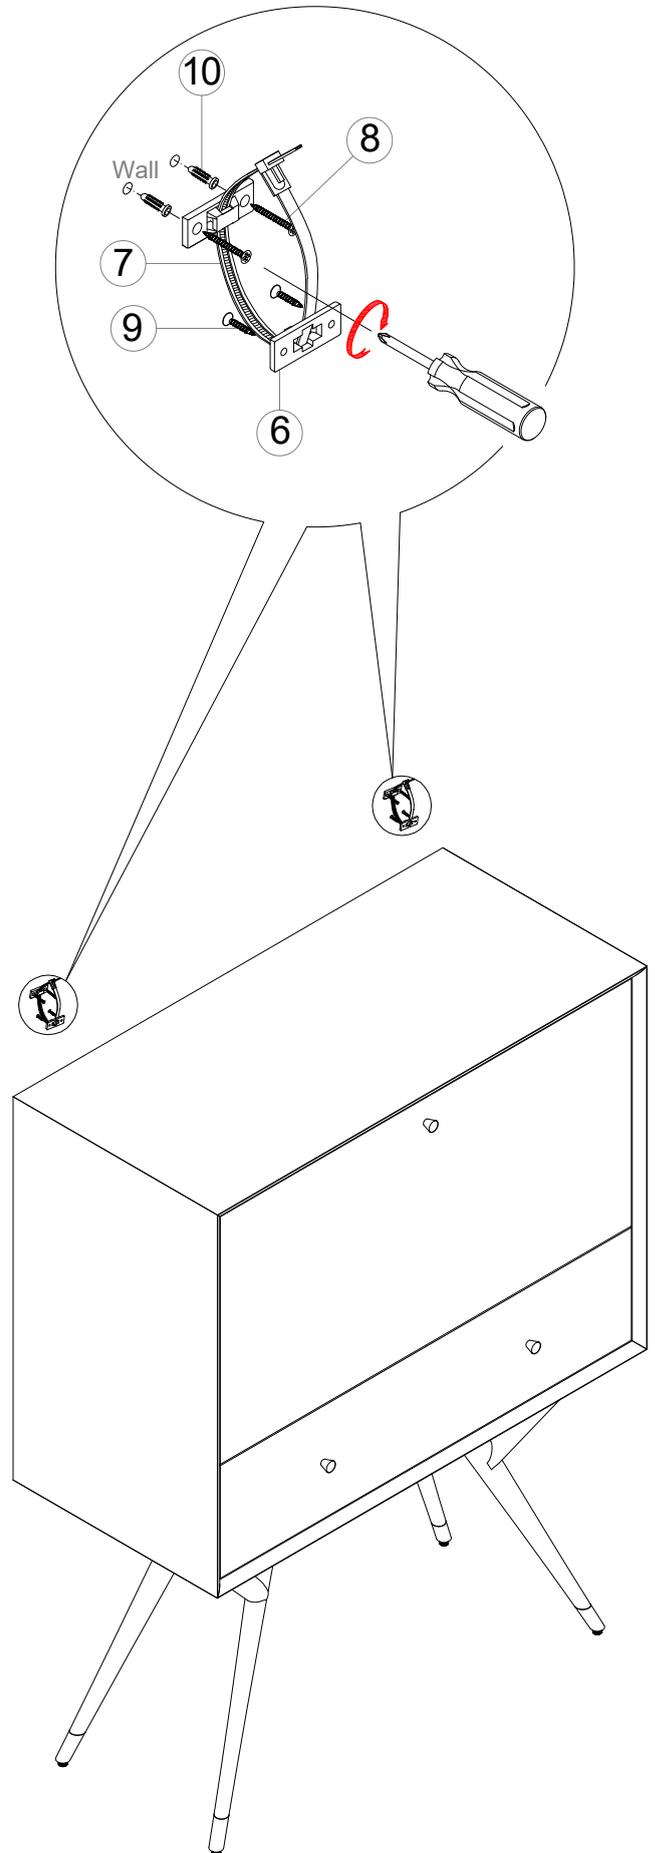

CARE INSTRUCTIONS

1. Dust often using a clean, soft, dry and lint-free cloth.
2. Blot spills immediately and wipe with a clean, damp, cloth.
3. We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.

IMPORTANT SAFETY INSTRUCTIONS

1. Please read all instructions carefully before assembling.
2. Keep instructions for future use.
3. Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.