


James

BY SONANCE

U-BRACKET
BRK-U6QUE
INSTALLATION MANUAL

ON WALL AND SPL SPEAKER ACCESSORY

BRK-U6QUE

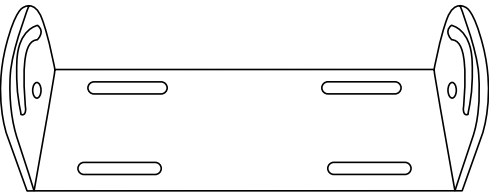

U-Bracket Isometric View

TABLE OF CONTENTS

- 2 Box Contents
- 2 Z-U Adapter Assembly
- 2 Z-U Adapter Installation
- 3 BRK-U6QUE Installation

BOX CONTENTS



- (1) U-Bracket
- (2) Z-U Adapter
- (4) Pinch Tabs
- (8) 8-32x3/8" Phil Flat Screw
- (4) 1/4-20x1/2" Button Head Screw
- (8) Nylon Washer

ASSEMBLY INSTRUCTIONS

Z-U ADAPTER ASSEMBLY

Attaching the Pinch Tab to the Z-U Adapter.

- 1. Position the raised side of the Pinch Tab under the Z-U Adapter. With the base of the Pinch Tab facing the edge of the Z-U Adapter (see Figures 1 and 2).

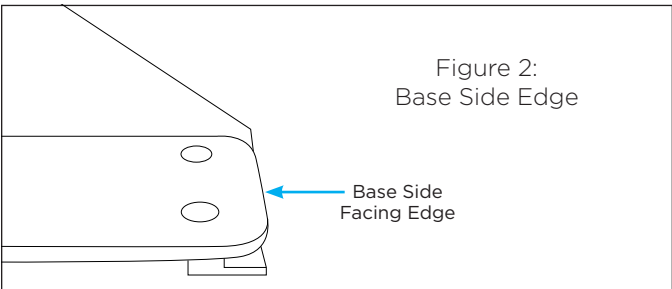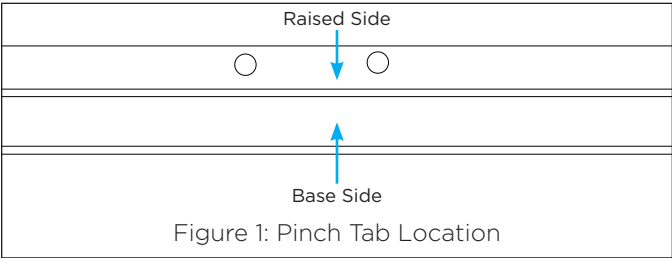

- 2. Use two 8-32x3/8" Phil Flat Screws to secure the Pinch Tab to the Z-U Adapter. Do not fully tighten the screws; tighten only enough to hold the Pinch Tab in place (see Figure 3).

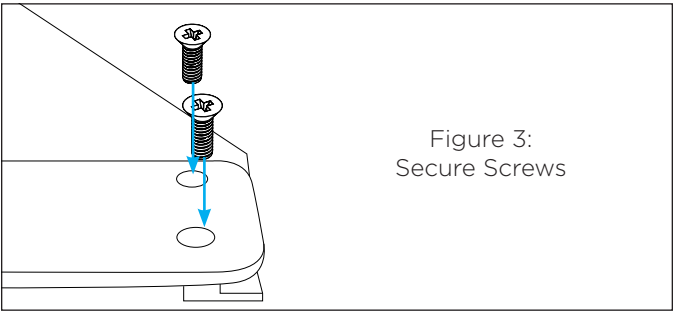


Figure 3:
Secure Screws


- 3. Repeat the above steps with the last Z-U Adapter.

Note: Use an appropriate tool to tighten the 8-32x3/8" Phil Flat Screws (tool not included).


Z-U ADAPTER INSTALLATION

Assembling the Z-U Adapter Assembly to the U-Bracket.


- 1. Locate center pass through hole and curved slot on U-Bracket (see Figure 4).

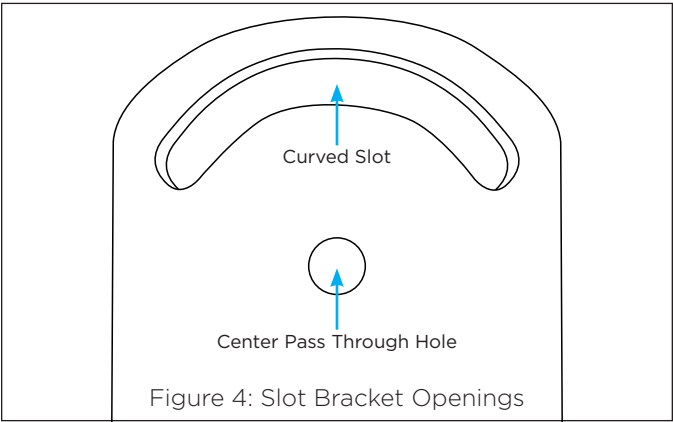


- 2. Install one Nylon Washer on each of the 1/4-20x1/2" Button Head Screws.
- 3. From the outside of the U-Bracket, insert one screw and washer through the center pass through hole, then insert a second screw and washer through the curved slot (see Figure 5).

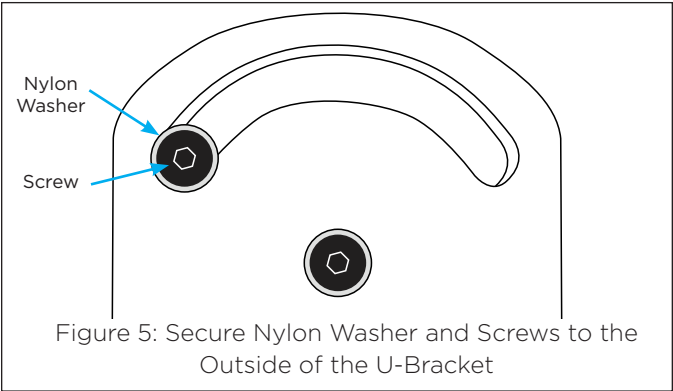

- 4. Add another washer per screw from the inside of the U-Bracket (see Figure 6).


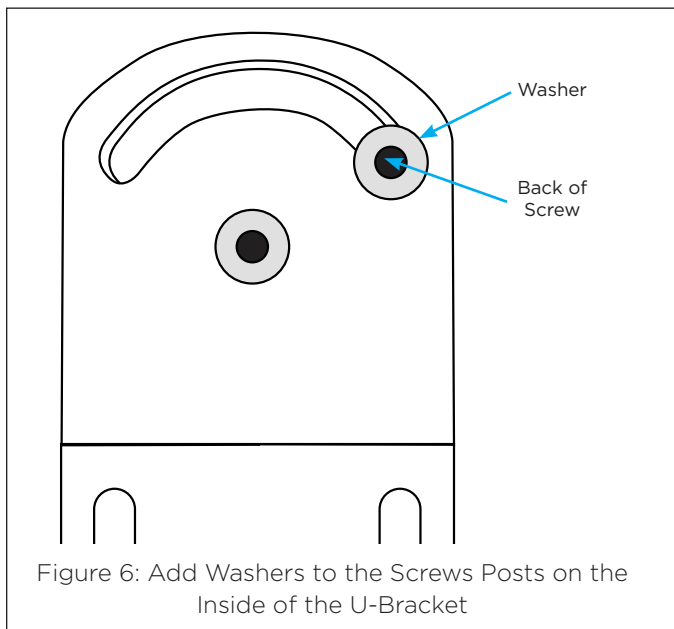


5. Align the threaded holes on the Z-U Adapter Assembly with the installed screws, with the bend on the Z-U Adapter facing outside the U-Bracket. Slightly tighten the screws into the Z-U Adapter Assembly (see Figure 6).

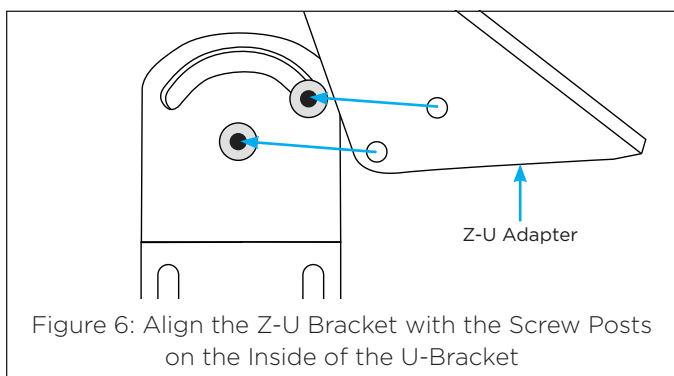

6. Repeat step two with the other side of the U-Bracket. Assure Pinch Tabs are on the same side (see Figure 8).



Note: Use an appropriate tool to tighten the 1/4-20x1/2" Button Head Screws (tool not included).

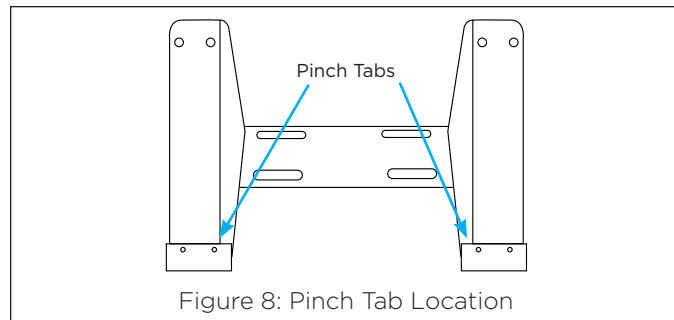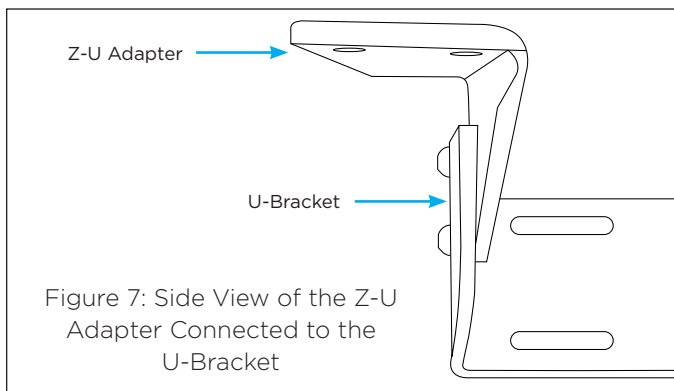


BRK-U6QUE INSTALLATION

Installing the U-Bracket Assembly to the product.


1. Place base side of the Pinch Tab that are attached to U-Bracket Assembly in between the bottom slot of the product (see Figures 9 and 10).

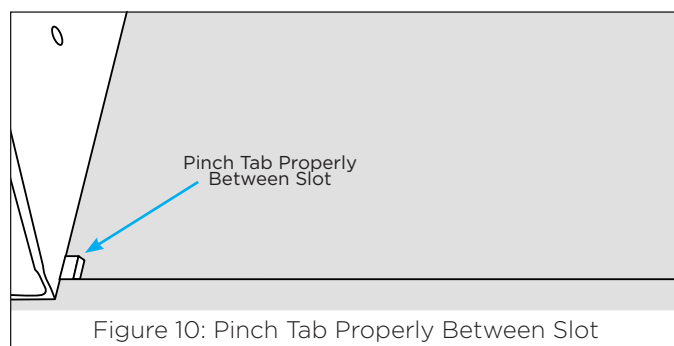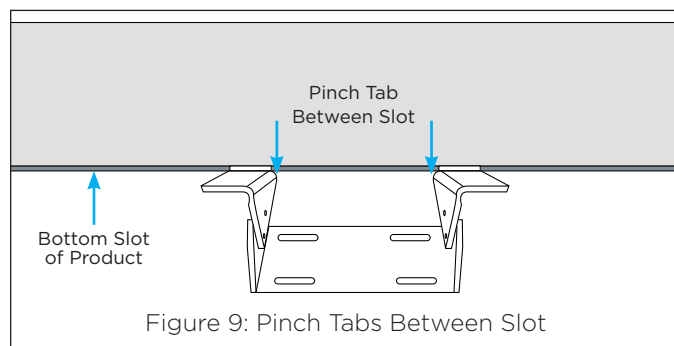

2. At the end without a Pinch Tab, place one Pinch Tab with the base side of the Pinch Tab in between the slot of the product.
3. Slide the Pinch Tab underneath the Z-U Adapter Assembly with the raised side of the Pinch Tab underneath the Z-U Adapter Assembly.
4. Align the Pinch Tab threads with the Z-U Adapter Assembly pass through holes (see Figure 11).

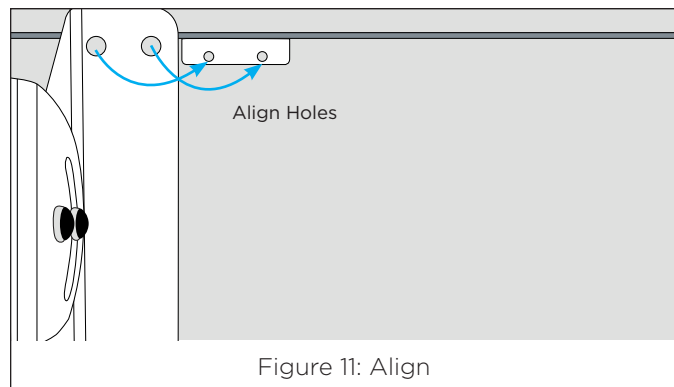

5. Thread two Phil Flat Screws into the Pinch Tab once aligned (see Figure 12).

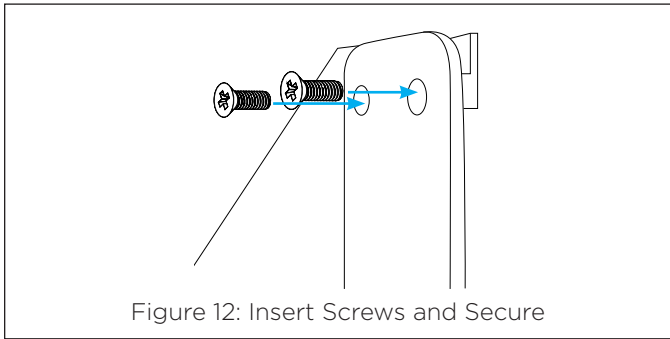

6. Repeat step three with the other Z-U Adapter.
7. Once the Pinch Tabs are installed correctly, fully tighten the Pinch Tab screws.