

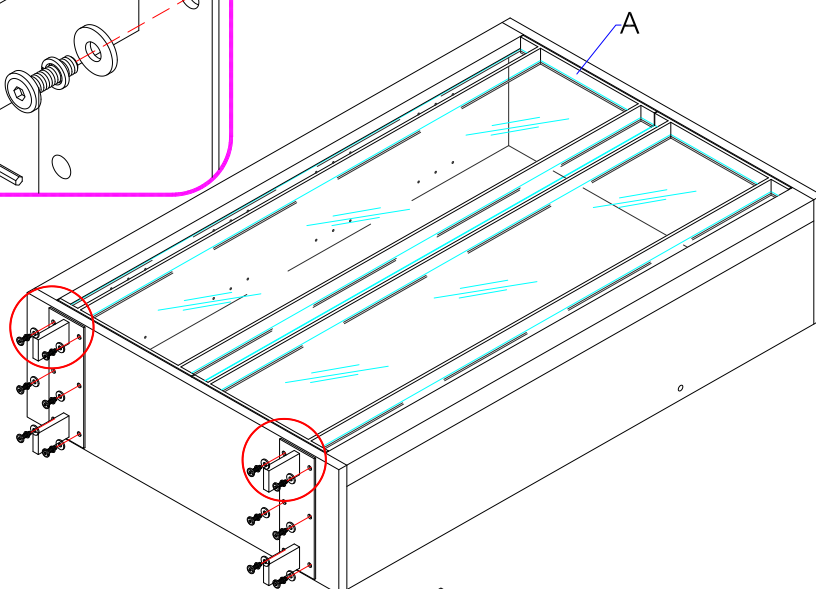
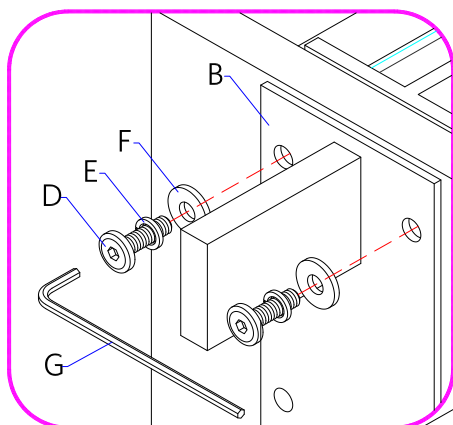
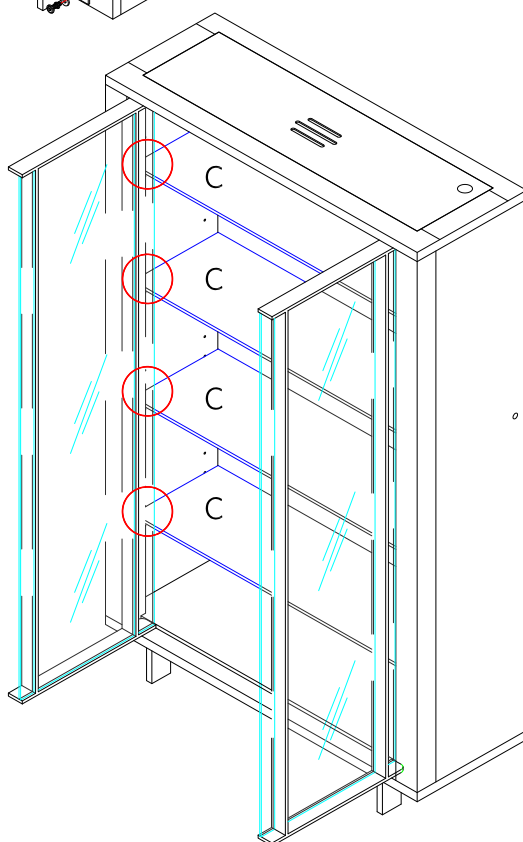


1

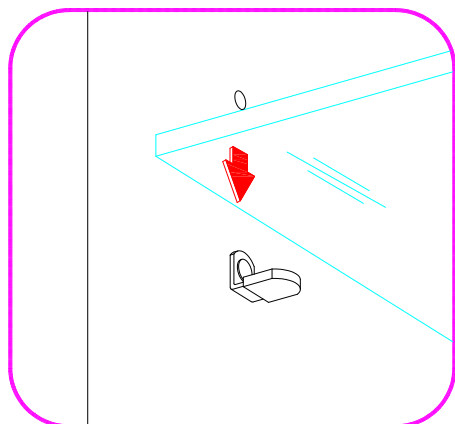

2

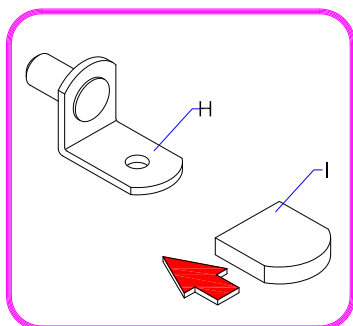

A		1
B		2
C		4
D	 M8x30mm	12
E		12
F		12
G		1
H		16
I		16

REPLACEMENT INSTRUCTIONS FOR ELECTRIC WIRE

On the furniture, we fixed a adapter together with a electric wire. Now, please determine power outlet in the your house. We have 3 option:

- If your power outlet with 2 jack holes is round, use electric wire installed available on the furniture.
- If your power outlet with 2 jack holes is flat, use electric wire (part J) provided. (Refer to instruction as below)
- If your power outlet with 3 jack holes, use electric wire (part K) provided. (Refer to instruction as below)
- If your power outlet follow China standard, use electric wire (part L) provided. (Refer to instruction as below)

INSTALLATION INSTRUCTION

1. Lossenning all screw installed on the top panel and then remove it as in FIGURE A.
2. Please check the inside of the top, you will see a adapter installed. Next step is you must be remove the electric wire from the adapter and then change it by a electric wire provided so suitable for your outlet. Refer to FIGURE B & C.
3. After changed, return the top panel.




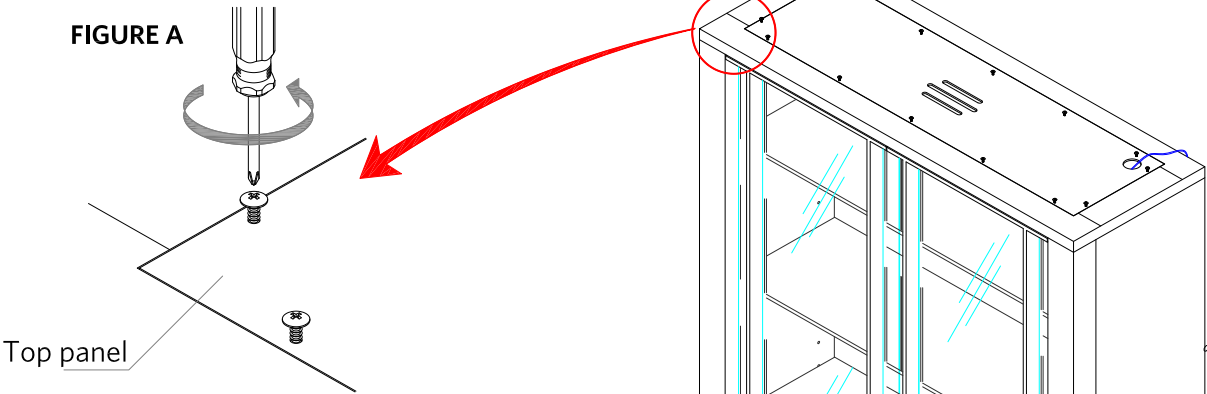
J		1
PLUG WITH 2 FLAT PINS		
K		1
PLUG WITH 3 PINS		
L		1
PLUG FOR CHINA STANDARD (CCC CERTIFICATE)		

FIGURE A



Top panel



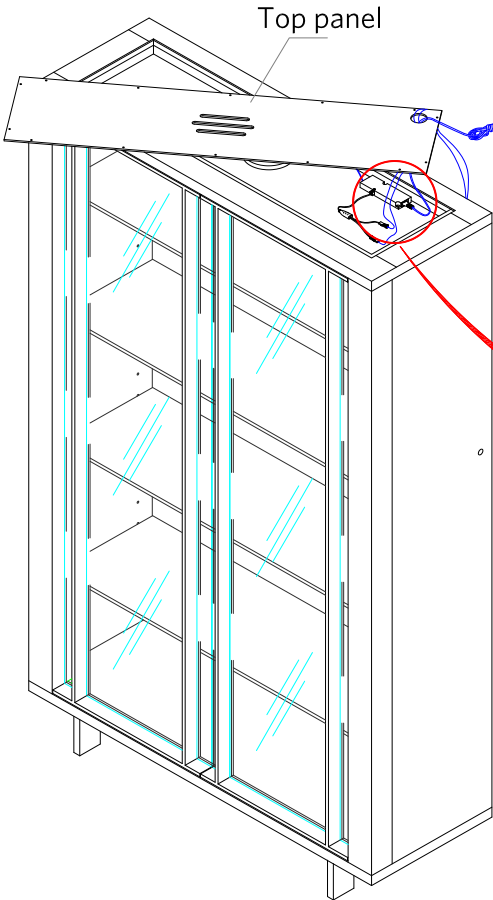


FIGURE B

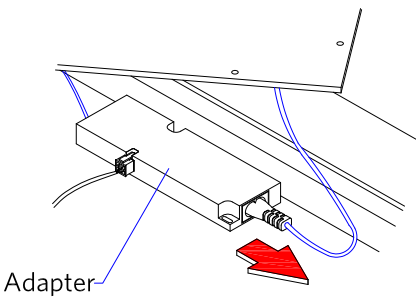

Adapter

FIGURE C

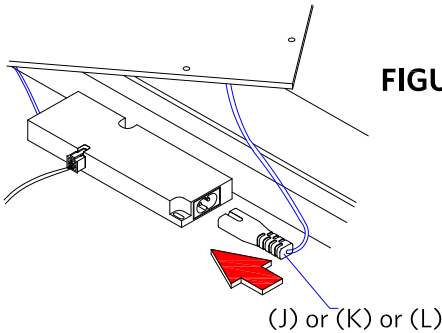

(J) or (K) or (L)

ASSEMBLY INSTRUCTIONS BY WALL TYPE :

- DRYWALL WITH STUDS: Use screws to affix to studs, and use hollow wall anchors and screws to affix to drywall. See FIGURE 1.
- DRYWALL WITHOUT STUDS: Use toggle bolt and screws to affix to drywall. See FIGURE 2.

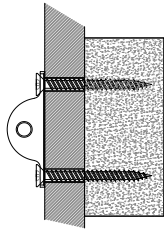


FIGURE 1
DRYWALL W/STUDS

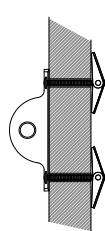


FIGURE 2
DRYWALL W/O STUDS

FURNITURE TIPPING RESTRAINT INSTRUCTIONS

Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended. When properly installed, this restraint could provide protection against the unexpected tipping of furniture due to small tremors, bumps or climbing. We recommend mounting this restraint to a wall stud.

WARNING: This product is only a deterrent. It is not a substitute for proper adult supervision.


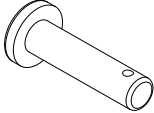
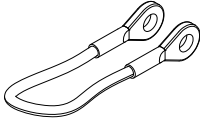

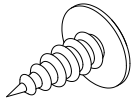
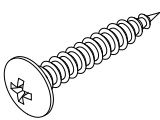
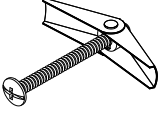
ANTI-TIP-KIT INSTALLATION INSTRUCTION

⚠WARNING: Always mount metal brackets to solid wood of furniture. Do not attach to plywood of back panels. **WE RECOMMEND ATTACHING TO STUDS.**

1. Attach mounting brackets (E) near the middle-top back edge of the furniture piece by inserting the shorter screws (I).
2. Determine the final position of the furniture piece. Mark locations on the wall approximately 2" below the brackets mounted to the back of the furniture.
3. Attach the second brackets (E) to stud wall by inserting the longer screw (J) (See Figure 1) or toggle bolt (K) with drywall (See Figure 2).
4. Place the furniture so that the brackets on the back edge are in line with the brackets in the wall.
5. Insert the clevis pin (F) through holes on brackets and hole on steel aircraft cable (G). Use hair pin (H) to go through small hole on clevis pin (F) to lock it.
6. Repeat above step to attach the end of aircraft cable (G) to the bracket on the wall.
7. Check to make sure the steel aircraft cable is securely laced and locked to the brackets.

CARE INSTRUCTIONS

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.

M		2
N		2
O		1
P		2
Q		2
R		2
S		2

