


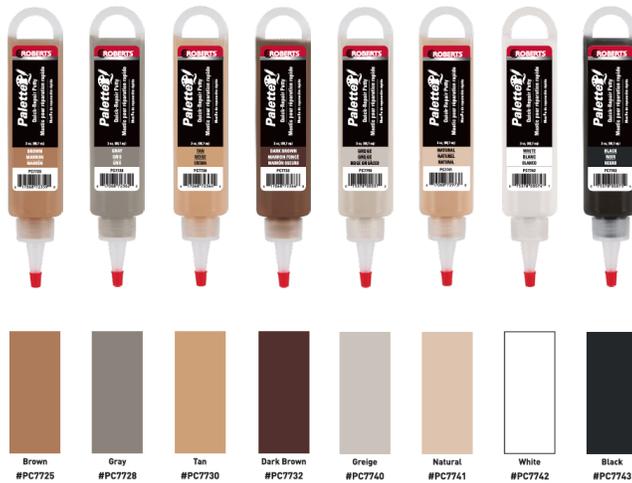

USE & CARE INSTRUCTIONS

INSTRUCTIONS FOR USE

- Surface area should be clean and free of debris.
- Identify the color that best matches your repair. Knead the tube thoroughly for at least 20 seconds before use.
- Cut tip to desired bead size and apply the filler evenly.
- Use a putty knife to distribute into gaps, nicks and scratches. Wipe off excess with a damp rag.
- Do not allow excess filler to dry onto surrounding flooring.
- Allow to dry for at least 1 hour.



INSTRUCTIONS FOR CARE

Clean Up: Damp cloth while putty is still fresh.