


PROPANE FIRE PIT WITH HEATER ATTACHMENT USER GUIDE

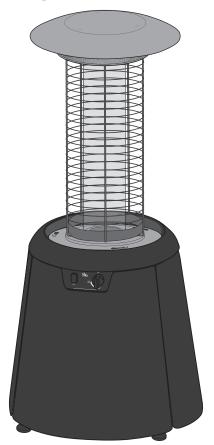

WARNING

INSTALLER: Leave this manual with the appliance. CONSUMER: Retain this manual for future reference.

WARNING

FOR OUTDOOR USE ONLY.

Installation and service must be performed by a qualified installer, sevice agency or gas supplier.

WARNING

FOR YOUR SAFETY:

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injurty or loss of life. WHAT TO DO IF YOU SMELL GAS:

- · Do NOT try lighting any appliance.
- Do NOT touch any electrical switch; do NOT use any phone in your building.
- · Immediately call your gas supplier from a neighbor's phone.
- · Follow the gas supplier's instructions.
- · If you cannot reach your gas supplier, call the fire department.

Do NOT use for cooking.

⚠ WARNING

FOR YOUR SAFETY:

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death.

Read the installation, operation and maintenance instructions thoroughly before installing or servicing this equipment.

DANGER

Do NOT leave this appliance unattended while it is in operation.

DANGER

If you smell gas:

- 1. Shut off gas to appliance.
- 2. Extinguish any open flame.
- 3. If odor continues, keep away from the appliance and immediately call your gas supplier or fire department.

Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.

WARNING

FOR YOUR SAFETY:

- 1. Do not store or use gasoline, or other flammable vapors and liquids, in the vicinity of this or any other appliance.
- 2. A propane cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

DANGER

CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide which has no odor.



Using it in an enclosed space can kill you. Never use this appliance in an enclosed space such as a camper, tent, car or home.

TABLE OF CONTENTS

Warnings
Parts List 8
Assembly Instructions10
Checking for Leaks13
Burner Lighting14
Extinguishing Your Fire16
Before & After Use16
Care & Maintenance17
Limited Warranty19

The use and installation of this product must conform to local codes. In absence of local codes, use the latest edition of the National Fuel Gas Code, ANSI Z223.1/NFPA 54; Natural Gas and Propane Installation Code, CSA B149.1; or Propane Storage and Handling Code, CSA B149.2, as applicable.

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

If you are assembling this unit for someone else, give this manual to them to read and save for future reference.

WARNING

This product can expose you to chemicals, including carbon monoxide, soot, Diisononyl Phthalate (DINP), lead and lead components which are known to the State of California to cause cancer, birth defects, and other reproductive harm. **Wash your hands after handling this product. For more information go to www.P65Warnings.ca.gov.**

▲ DANGER: Failure to follow the dangers, warnings and cautions in this manual may result in serious bodily injury or death, or in a fire or an explosion causing damage to property.

WARNINGS:

- Do NOT use this propane fire heater without reading the entire owner's manual.
- This appliance is for outdoor use only, and should NOT be used in a building, garage or any other enclosed area.
- Minimum clearance from all sides of the unit to combustible constructions: 48" (121.9 cm), minimum clearance from the top: 40" (101.6cm).
- For residential use only. This propane fire heater is NOT for commercial use.
- Do NOT use this propane fire heater for indoor heating. TOXIC carbon monoxide fumes can accumulate and cause asphyxiation.
- This propane fire heater is safety certified for use in the United States only. Do NOT modify or use in any other location. Modification of propane fire heater will result in a safety hazard and will void your warranty.
- Apartment dwellers: Check with management to learn the requirements and fire codes for using a liquid propane (LP) gas propane fire heater in your apartment complex. If allowed, use outside on the ground floor with a 48' (121.9 cm) clearance from any structure and clearance from the top at 40" (101.6cm). Do NOT use on or under balconies.
- This propane fire heater, from the factory, is for use with LP gas only. The conversion to or attempted use of natural gas in this propane fire heater is dangerous, may cause bodily harm and will void your warranty.

LP GAS CHARACTERISTICS:

- a. LP gas is flammable and hazardous if handled improperly. Become aware of the characteristics before using any LP gas product.
- b. LP gas is explosive under pressure, heavier than air, and settles/pools in low areas.
- c. LP gas in its natural state has no odor. For your safety, an odorant is added that smells like rotten cabbage.
- d. Contact with LP gas can cause freeze burns to skin.
- ▲ LP gas tank needed to operate. Only tanks marked "propane" may be used.
- a. The LP gas cylinder must be constructed and marked in accordance with the U.S. Department of Transportation (D.O.T.) Specifications for LP-Gas Cylinders, or the Standard for Cylinders, Spheres and Tubes for the Transportation of Dangerous Goods and Commission, CAN/CSA-B339 as applicable.
- b. LP gas tank must be arranged for vapor withdrawal.
- c. The LP gas tank must have a listed overfilling prevention device (OPD) and a QCC1 or Type1 (GCA810) LP gas tank connection.
- d. The LP gas tank must have a tank collar to protect the tank valve.
- e. Never use an LP gas tank with a damaged body, valve, collar or footing.
- f. Dented or rusted LP gas tanks may be hazardous and should be checked by your LP gas supplier prior to use.
- g. The LP gas tank should not be dropped or handled roughly.
- 4 TIKI Brand | Propane Fire Pit Patio Heater Attachment User Guide

- h. Tanks must be stored outdoors, out of the reach of children and must not be stored in a building, garage or any other enclosed area. Your LP gas tank must never be stored where temperatures can reach over 125°F
- i. Do NOT insert any tool or foreign object into the valve outlet or safety relief valve. You may damage the valve and cause a leak. Leaking propane may result in explosion, fire, severe personal injury or death.
- j. Never keep an LP gas tank in a hot car or trunk. Heat will cause the gas pressure to increase, which may open the relief valve and allow gas to escape.
- k. Place dust cap on cylinder valve outlet whenever the cylinder is not in use. Only install the type of dust cap on the cylinder valve outlet that is provided with the cylinder valve. Other types of caps or plugs may result in leakage of propane.
- I. Do NOT store a spare LP gas tank under or near this appliance.
- m. Never fill the cylinder beyond 80% full.

 n. A fire causing serious injury or damage to property may occur if the above is not followed exactly.
- Your propane fire heater has been checked at all factory connections for leaks. Recheck all connections as described in the "Operating Instructions" section, as shipping can loosen connections.
- Check for leaks even if your unit was assembled for you by someone else.
- Do NOT operate if a gas leak is present. Gas leaks may cause a fire or explosion.

- You must follow all instructions in the "Checking for Leaks" section before operating. To prevent a fire or explosion when testing for a leak:
- a. Always perform a leak test before lighting this propane fire heater and each time the tank is connected for use.
- b. No smoking. Do NOT use or permit sources of ignition in the area while conducting a leak test
- c. Conduct the leak test outdoors in a wellventilated area.
- d. Do NOT use matches, lighters or a flame to check for leaks.
- e. The use of alcohol, prescription or nonprescription drugs may impair the consumer's ability to properly assemble or safely operate the appliance.
- f. Strong odors, colds, sinus congestion, etc. may prevent the detection of propane. Use caution when testing for leaks.
- g. Do NOT use this propane fire heater until all leaks are corrected. If you are unable to stop a leak, disconnect the LP gas supply. Call a gas appliance serviceman or your local LP gas supplier.
- Do NOT store or use gasoline or other flammable liquids or vapors within 25 feet (7.62 m) of this appliance.
- Do NOT use in an explosive atmosphere.
 Keep propane fire heater area clear and free from combustible materials, gasoline and other flammable vapors and liquids.
- This propane fire heater is NOT to be operated by children.
- This propane fire heater is NOT to be used in or on boats or recreational vehicles.
- Do NOT connect to a remote gas supply.

- Never attempt to attach this propane fire heater to the self-contained LP gas system of a camper trailer, motor home or house.
- Always use in accordance with all applicable local, state and national codes. Contact your local fire department for details on outdoor burning.
- When using this propane fire heater, exercise the same precautions you would with any open fire.
- Do NOT burn solid fuels such as: wood, charcoal, briquettes, lump charcoal, manufactured logs, driftwood, trash, leaves, paper, cardboard, plywood, painted/stained/ pressure treated wood in this propane fire heater.
- It is essential to keep the propane fire heater's valve compartment, burners, and circulating air passages clean. Inspect propane fire heater before each use.
- Do NOT use this propane fire heater until it is COMPLETELY assembled, and all parts are securely fastened and tightened.
- Do NOT use this propane fire heater near automobiles, trucks, vans or recreational vehicles.
- Do NOT use this propane fire heater under any overhang or near any unprotected combustible constructions. Avoid using near or under overhanging trees and shrubs.
- Always use this propane fire heater on a hard, level, non-combustible surface such as concrete, rock or stone. An asphalt or blacktop surface may not be acceptable for this purpose.
- Do NOT use this propane fire heater for cooking.

- Do NOT wear flammable or loose clothing when operating this propane fire heater.
- Do NOT use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part or control system and any gas control which has been under water.
- Do NOT use in windy conditions.
- Never lean over this propane fire heater when lighting or when in use.
- Do NOT use this propane fire heater unless burner is securely in place.
- Keep all electrical cords away from this propane fire heater during use.
- Certain areas of this propane fire heater when in use will become too hot to touch. To avoid burns, do NOT touch hot surfaces until the unit has completely cooled, unless you are wearing protective gear.
- Do NOT leave a lit propane fire heater unattended, especially around children and pets.
- Children and adults should be alerted to the hazards of high surface temperatures and should stay away to avoid burns or clothing ignition.
- Young children should be carefully supervised when they are in the area of the appliance.
- Do NOT hang or place clothing or other flammable material on or near this appliance.
- Any guard or other protective device removed for servicing the appliance must be replaced prior to operating the appliance.
- If applicable, protective weather cover must be removed when burner is in operation.
- Do NOT attempt to move propane fire heater when in use. Allow appliance to cool before moving or storing.

- This propane fire heater should be thoroughly cleaned and inspected on a regular basis. Clean and inspect the hose before each use of the appliance. If there is evidence of abrasion, wear, cuts, or leaks, the hose must be replaced prior to the appliance being operated.
- This propane fire heater should be inspected at least annually by a qualified service person.
 Depending on amount of use, more frequent cleaning may be required. Do NOT operate until all worn or damaged parts have been repaired or replaced. Burner MUST be replaced prior to using this propane fire heater if component is damaged.
- Use only the regulator and hose assembly provided. Use only replacement parts specified by Lamplight Farms and TIKI® Brand.
- Use only Lamplight Farms and TIKI® Brandauthorized parts. The use of any part that is not factory-authorized can be dangerous and will void your warranty.
- Use only Lamplight Farms and TIKI® Brandauthorized lava rock/basin fill. The use of any basin fill or lava rock that is not factory authorized can be dangerous and will void your warranty.
- Do NOT operate this appliance without reading "Operating Instructions" in this manual.
- Storage of this propane fire heater indoors is permissible only if the tank is disconnected, removed from the appliance and properly stored outdoors.
- Do NOT attempt to disconnect the gas regulator from the tank or any gas fitting while the appliance is in use.

- If the propane fire heater is not in use, the gas must be turned off at the supply tank.
- **CAUTION:** The gas pressure regulator provided with this appliance must be used. This regulator is set for an outlet pressure of 11" W.C.
- Do NOT sit or stand on any part of this appliance.
- Do NOT throw anything into the fire when the unit is in operation.
- Lava rock/basin fill are very hot. Keep children or pets at a safe distance from this appliance.
 Lava rocks/basin fill will retain heat long after propane fire heater has been extinguished. Do NOT handle fill until completely cooled.
- · When heated, lava rock/basin fill may pop.
- The opening of the tank collar should face toward the access door for easy access.
- Do NOT store any combustible materials in the base enclosure.
- Use protective gloves when assembling this product.
- Do NOT force parts together as this can result in personal injury or damage to the product.
- Death, serious injury or damage to property may occur if the above instructions are not followed.
- · Surface may become hot when in the sun.
- Certain materials or items, when stored under the heater, will be subjected to radiant heat and could be seriously damaged.
- **CAUTION:** Hot while in operation. Do not touch. Keep children, clothing, furniture, gasoline and other liquids having flammable vapors away.

PARTS LIST

Compare all parts with the Package Contents and Hardware Included lists. If any part appears missing or damaged, DO NOT assemble or use this product. DO NOT RETURN TO PLACE OF PURCHASE. For assistance, contact Customer Service at 1-888-473-1088.

Please have your owner's manual and model number available for reference.


Note: The model number is printed on the rating label which can be found on the inside of the door panel.

Note: The glass used in the Heater Attachment is made with a special quartz material that is resistant to high temperatures and its unique processing may result in minor aesthetic imperfections that do not impact product functionality or durability.

Part	Description Quant	ity
6005669 6005666	Adapter Assembly & Guard Weldment (Guard Assembly preassembled)	1
6005513	Glass Tube	1
6005518	Base Weldment Deflector	1
6005519	Deflector Panel	1
7004205	Hardware Pack	1
	(Following included in Hardware Pack)	
Α	Hex Key	1
В	M6x12 Stainless Socket Head Flange Screw	3
С	M6 Wing Nut	5


Note: Items not shown to actual scale or size

▲ WARNING: CHOKING HAZARD – Small parts. Not for children under 3 years.

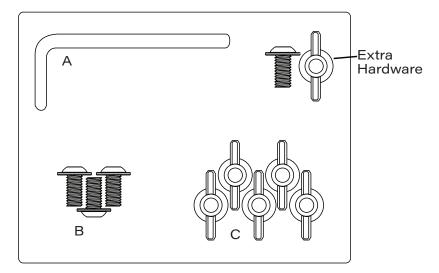

PARTS LIST

Note: Items not shown to actual scale or size

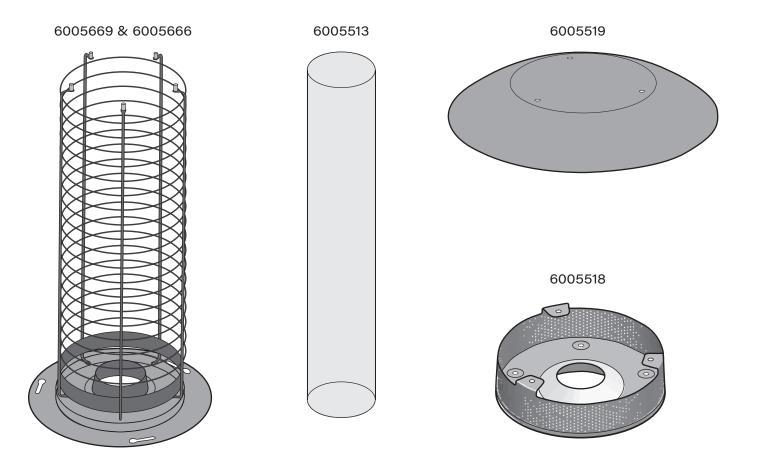

ASSEMBLY INSTRUCTIONS

WARNING

FAILURE TO POSITION THE PARTS IN ACCORDANCE WITH THESE DIAGRAMS OR FAILURE TO USE ONLY PARTS SPECIFICALLY APPROVED WITH THIS APPLIANCE MAY RESULT IN PROPERTY DAMAGE OR PERSONAL INJURY.

Assembly Tips:

- · Choose an area where you will assemble the product. To protect components, choose a smooth surface that is free of cracks or openings.
- · Spread out all parts.
- · Loosely tighten all hardware connections first. Fully tighten hardware in the steps instructed as adjustment may be necessary prior to fully tightening. Be careful not to over-tighten. Over-tightening hardware could damage or strip threads.
- · For best results, complete each step in the order as shown in this manual.


CAUTION

To avoid scratches or other damage to the unit, choose a smooth surface for assembling the unit.

- · The Patio Heater Attachment should only be used with the TIKI® Brand Propane Fire Pit only.
- · Refer to User Guide for the Propane Fire Pit for additional instructions.


STEP 1

Carefully assemble glass tube (6005513) into guard assembly, ensuring glass tube fully seats on lower base plate.

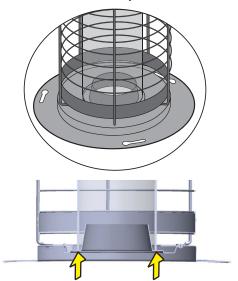

STEP 2


Install base deflector (6005518) by fitting the studs on the guard assembly through the five openings. Apply the (5) nuts (Item C). Make sure each nut is snug but do not over tighten. Ensure restriction plate is not touching the end of the glass tube.

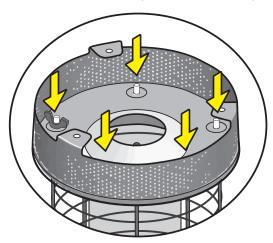

ASSEMBLY INSTRUCTIONS

STEP 3

Install deflector panel and attach with (3) screws (6005266). Fully tighten with provided hex key.

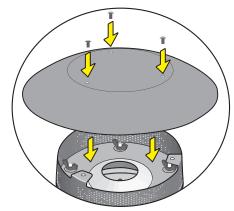

CAUTION


Before installing or removing patio attachment, make sure fire heater is off and LP gas tank valve is closed.

CAUTION

Lava rock must be removed to successfully attach the patio attachment. Only handle lava rock if it has fully cooled. Take care to not allow lava rock to touch the glass.


STEP 4

Attach to the TIKI® Brand Propane Fire Pit (sold separately) by aligning the 3 keyhole slots with the thumb screw assemblies in the TIKI® Brand Propane Fire Pit.

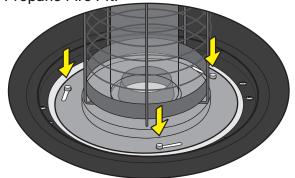

STEP 5

Loosen thumbscrews as necessary and rotate attachment until thumbscrews fully engage with slots as shown.

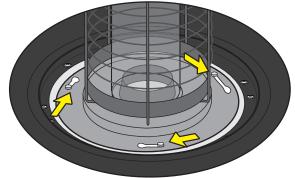

CAUTION

Heater should be enjoyed with lava rock fill in place. Running the heater attachment without lava rock may expose hot surfaces.

STEP 6

Tighten all 3 thumbscrews finger tight. Place lava rock back into the basin between the guard and basin edge, taking care to not allow rock to fall inside of the guard weldment.



CHECKING FOR LEAKS

WARNING

Before using this propane fire heater, make sure you have read, understand and are following all information provided in the Warnings section of this manual. Failure to follow those instructions can cause death, serious injury or property damage.

WARNING

The burner must be replaced prior to operating the unit if it is evident the burner is damaged. The replacement burner shall be specified by the manufacturer.

STEP 1


Make sure LP supply hose assembly is securely fastened to the gas valve and the tank.

STEP 2

Visually check the connection between the burner/venturi tube and orifice.

STEP 3

Make sure the burner/venturi tube fits over the orifice. Please refer to diagrams for proper installation. If the burner/venturi tube does not rest flush to the orifice as shown, please contact 1-888-473-1088 for assistance.

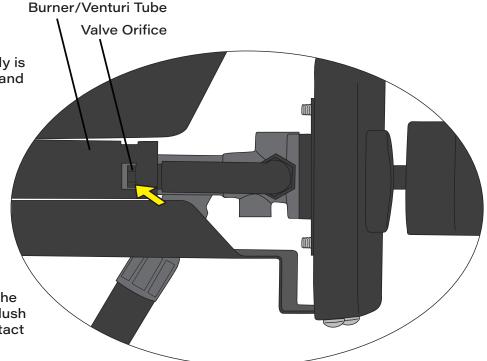

WARNING

Failure to inspect these connections or follow these instructions could cause a fire or an explosion which can cause death, serious bodily injury or damage to property.

12 TIKI Brand | Propane Fire Pit Patio Heater Attachment User Guide

CHECKING FOR LEAKS

STEP 4

Tank/Gas Line Connection: Make 2 – 3 oz. leak detection solution by mixing one part liquid dishwashing soap with three parts water.

STEP 6

Connect LP gas tank per 'Installing LP Gas Tank' section. (See pages 16-18)

STEP 7


Turn LP gas tank valve to "OPEN."


STEP 8

Spoon or spray several drops of solution, at all "X" locations (see diagram) If any bubbles appear, turn LP gas tank valve to 'CLOSED,' reconnect supply hose and re-test. If bubbles continue to appear after several attempts, turn LP gas tank valve to 'CLOSED' and disconnect LP gas tank, per 'Disconnecting LP Gas Tank" (see page 18) Contact 1-888-473-1088 for assistance. If no bubbles appear after one minute, turn LP gas tank valve to 'CLOSED,' wipe away solution and continue.

STEP 5

Make sure control knob is in the 'OFF' position.

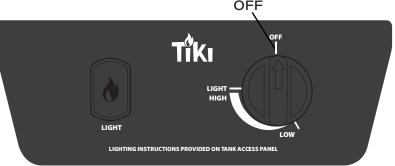

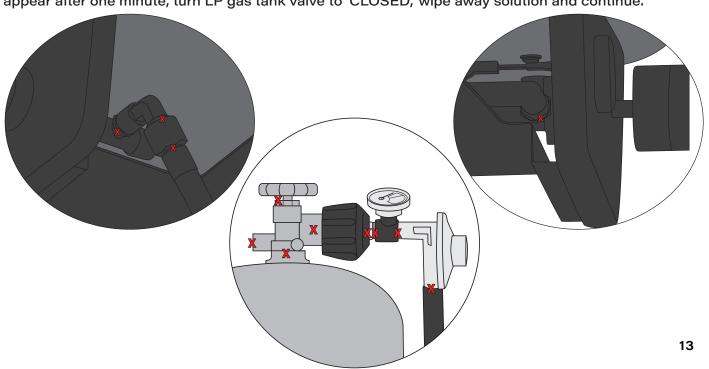

BURNER LIGHTING

DANGER

Failure to follow all instructions may result in serious bodily injury or death, or in a fire or explosion causing damage to property.

CAUTION

Keep outdoor gas appliance area free and clear from combustible materials, gasoline and other flammable vapors and liquids.

WARNING

NEVER light the burner with either the metal basin cover or the soft weather cover installed on the propane fire heater.

CAUTION

Do NOT obstruct the flow of combustion and ventilation air.

CAUTION

Check and clean burner/venturi tubes for insects and insect nests. A clogged tube can lead to a fire.

This appliance shall be used only in a well-ventilated space and shall not be used in a building, garage, or any other enclosed area. An appliance may be installed with shelter no more inclusive than the following:

1) With walls on all sides, but with no overhead cover. 2) Within a partial enclosure, which includes an overhead cover and no more than two side walls. These side walls may be parallel, as in a breezeway, or at right angles to each other. 3) Within a partial enclosure which includes an overhead cover and three side walls, as long as 30% or more of the horizontal periphery of the enclosure is permanently open.

STEP 1


Make sure all packaging and protective films have been removed from the appliance.

STEP 3

The control knob must be in the 'OFF' position.

STEP 5

Connect LP gas tank per 'Installing LP Gas Tank' section. (see separate Propane Fire Pit User Guide, pages 16-18) Then turn LP gas tank valve to 'OPEN.'

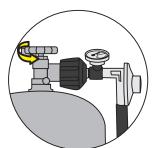

STFP 2


Check for obstructions of airflow to the burners. Spiders, insects, and webs can clog the burner/venturi tube. A clogged burner tube can lead to a fire.

STEP 4

STOP! Before lighting, verify spark location. Spark must be arcing between the Electrode Tip and Thermocouple Tip. If spark is not arcing between the Electrode Tip and Thermocouple Tip or is arcing between the Electrode Tip and any other surface, call TIKI Customer Service at 1-888-473-1088.

STEP 6

Press the 'LIGHT' button to supply a spark to the burner. You will hear a clicking sound as the spark is produced. At the same time, push in and turn control knob counterclockwise to the 'LIGHT' position, holding the knob in to allow gas flow.

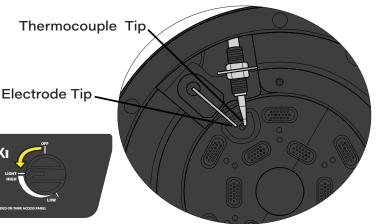

14 TIKI Brand | Propane Fire Pit Patio Heater Attachment User Guide


BURNER LIGHTING

STEP 7

After the fire heater lights, continue to hold the control knob in for 10 seconds. This heats the thermocouple, a safety device that stops the gas flow if a fire heater is not lit. Holding in the control knob during ignition warms the thermocouple and allows gas flow to continue.


STEP 8

After 10 seconds, release and turn control knob counterclockwise to adjust flame to desired height.

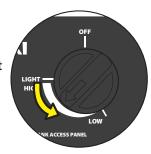

STEP 9

After three attempts, if ignition does not occur, turn the burner control knob to 'OFF.' Wait 5 minutes, fan appliance to disperse gas, and repeat lighting procedure.

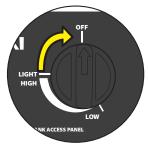



STEP 10

If igniter does not light burner: Wearing heatresistant gloves, use the manual lighting wand (Item K) to position a lit long match or use a lit long butane lighter instead and place it near the burner housing through the provided opening. Push and turn control knob to 'LIGHT". Remove match/lighter once burner is lit.




After lighting, observe the flame. Make sure all burner ports are lit and flame height on 'HIGH' reaches at least 3/4 of the way up the glass tube.

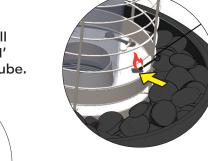

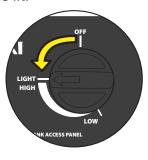



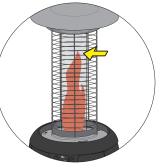

CAUTION

Heater should be enjoyed with lava rock fill in place. Running the heater attachment without lava rock may expose hot surfaces.

CAUTION

If ignition does not occur in 5 seconds, turn control knob to 'OFF,' wait a minimum of 5 minutes, fan appliance, and repeat lighting procedure.

EXTINGUISHING YOUR FIRE

DANGER


Failure to follow all instructions may result in serious bodily injury or death, or in a fire or explosion causing damage to property.

STEP 1

Turn LP gas tank valve to 'CLOSED.'

STEP 2

Turn control knob to the 'OFF' position. Note: A 'poof' sound is normal as the last of the LP gas is burned.

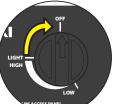

STEP 3

Disconnecting LP Gas Tank:

Make sure control knob is in the 'OFF' position. Before disconnecting, make sure the LP gas tank valve is 'CLOSED.' Disconnect regulator/supply line hose assembly from LP gas tank by turning knob counterclockwise until it is free. Place the protective cap cover on the LP tank and store the tank outdoors in a well-ventilated area out of direct sunlight.



Before Each Use:

- Keep propane fire heater area clear and free from any combustible materials, gasoline and other flammable vapors and liquids. Do NOT obstruct the flow of the combustion of LP gas and/or the ventilation air.
- Keep the ventilation openings of the LP gas tank area free and clear from debris. Visually check the burner flames to make sure your appliance is working properly. Check all gas connections for leaks.
- Check components for any signs of damage or rust. Check for obstructions of airflow to the burner. Spiders, insects and webs can clog the burner/venturi tube. A clogged burner/venturi tube can lead to a fire. If damage to any component is detected, do NOT operate until repairs are completed.

After Each Use:

■ Turn LP gas tank valve to 'CLOSED.' ■ Turn control knob to the 'OFF' position. ■ Note: A 'poof' sound is normal as the last of the LP gas is burned. ■ Disconnect LP gas tank per 'Disconnecting LP Gas Tank' section. (See Step 3 above)

Before Storing:

- Clean all surfaces If storing the propane fire heater indoors, cover the appliance and store in a cool dry location away from children and pets. If storing the appliance outdoors, cover fire heater with a weather cover for protection from the elements. Store appliance upright in an area sheltered from direct contact with inclement weather such as rain, sleet, hail, snow, dust, debris and high winds.
- Place the protective cap on the LP tank outlet and store the tank outdoors in a well-ventilated area out of direct sunlight.
- 16 TIKI Brand | Propane Fire Pit Patio Heater Attachment User Guide

CARE & MAINTENANCE

CAUTION

All cleaning and maintenance should be done when propane fire heater is cool and with the fuel tank safely disconnected.

Do NOT clean any components of this appliance in a self-cleaning oven. The extreme heat will damage the finish.

Do NOT enlarge valve orifices or burner ports when cleaning the valves or burners.

Note:

- · This appliance should be thoroughly cleaned and inspected on a regular basis.
- · Abrasive cleaners will damage this product.
- · NEVER use oven cleaner to clean any part of this appliance.
- · More frequent cleaning may be required as necessary. It is imperative that control compartment, burners and circulating air passageways of the heater be kept clean.
- · Have the propane fire heater inspected annually. Any repairs should be made by a qualified service person.
- · Inspect appliance before each use.
- · Spiders and insects can create a dangerous condition that may damage the heater or make it unsafe. Keep burner area clean of all spiders, webs and insects. Clean burner holes by using heavy-duty pipe cleaner. Compressed air may help clear away smaller particles.
- · Check propane fire heater immediately if any of the following conditions exist:
 - · You smell gas in conjunction with extreme yellow tipping of burner flames.
 - · Appliance does not reach proper temperature.
 - · Note: At temperatures less than 40F, heat output will be reduced.
 - · Appliance's glow is excessively uneven.
 - · Burner makes a popping noise during use.
- · Note: A 'poof' sound is normal when turning the appliance off as the last of the LP gas is burned.
- · Do NOT clean appliance with combustible or corrosive cleaners. Use warm, soapy water.
- · Do NOT paint any part of the gas train in the appliance.
- · After a period of storage and/or non-use, check for leaks, burner obstructions, and inspect for any abrasion, wear or cuts to the hose.
- · Check inside the tank compartment and underside of the valve area occasionally for any obstructions such as spiderwebs, animal nests, etc.

CARE & MAINTENANCE

Cleaning Surfaces:

- · Wipe surfaces clean with mild dishwashing detergent or baking soda mixed with water.
- · For stubborn stains, use a citrus-based cleaner and a nylon scrubbing brush.
- · Rinse clean with water.
- · Allow to air dry.
- · Note: While cleaning your unit, be sure to keep the area around the burner dry at all times.

CAUTION

Do NOT submerge the control valve assembly. If the gas control is submerged in water, do NOT use it. The valve must be replaced.

WARNING

All cleaning should be done when the appliance is cool and with the fuel tank disconnected per instructions found in "Disconnecting LP Gas Tank." (see separate Propane Fire Pit User Guide, page 18)

Cleaning Burner:

- · Remove lava rock
- · Remove all dirt/dust from the burner, igniter, and venturi area with a small brush or compressed air.
- · Visually inspect the burner for any rust or damage. If damage is found, replace necessary components with new pieces from the manufacturer.
- · Clean any clogged burner ports with a stiff wire.
- · Carefully replace the lava rock.

Maintenance:

- · To enjoy years of performance from your propane fire heater, make sure to perform the following maintenance activities on a regular basis:
- · Keep exterior surfaces clean
- · Perform routine maintenance
- · Air flow must be unobstructed. Keep controls, burner, and circulating air passageways clean. Signs of potential blockage include:
 - · Gas odor with extreme yellow tipping of burner flames
 - $\cdot \ \, \text{Outdoor appliance does not reach normal operating temperature.}$
- · Note: In a salt-air environment, corrosion occurs more quickly than in environments with less salty air. Frequently check for corroded areas and repair them before operating appliance.

18 TIKI Brand | Propane Fire Pit Patio Heater Attachment User Guide

LIMITED WARRANTY

Visit TIKIBrand.com/customer-service/our-guarantee or contact us at 1-888-473-1088 for more information and replacement parts.

For information on patents go to TIKIBrand.com/patents



This product and combustion products emitted when this product is burning can expose you to chemicals including carbon monoxide which is known to the State of California to cause birth defects or other reproductive harm, and lead which is known to the State of California to cause Cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

Note:

- · The pressure regulator and hose assembly supplied with the appliance must be used.
- · Replacement pressure regulators and hose assemblies must be those specified by the aplliance manufacturer.

Specifications:

- · Certifications: CSA/ANSI Z83.26-2020 CSA 2.37-2020
- · Normal Hourly Input Rating: 40,000 BTU/hr. (11.7 kW)
- · Fuel: Liquid Propane Gas
- · Tank Size: Nominal 20 lb.
- · Manifold Pressure: 11 in W.C.
- · Safety Features: 100% Burner shut-off / Thermocouple / Tip Angle Switch
- · Manufacturer: Lamplight Farms Incorporated
- · Made In: China

Questions, problems, missing part? Call 1-888-473-1088.

TIKIBrand.com

Retain this manual for future use.



TIKIBRAND.COM

4002289 REV3

©2024 Lamplight Farms Incorporated