


# zecliner®

FLEXSTEEL

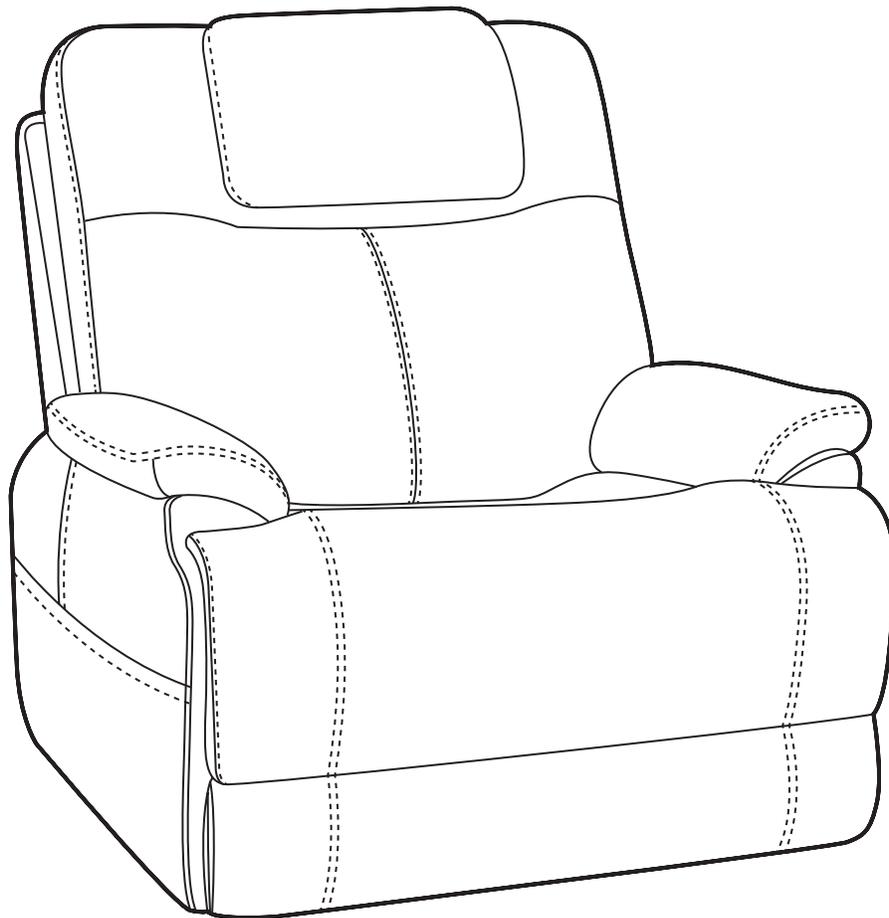

## **SETUP AND OPERATION GUIDE**

POWER SLEEP RECLINER  
& LIFT RECLINER

# TABLE OF CONTENTS

Important Safety Instructions .....	1
Parts .....	2
Assembly Instructions .....	3-5
Troubleshooting .....	6

**Note:** When placing the furniture on non-carpeted flooring, it is recommended to use some type of floor protection such as an area rug or furniture pads under the chair glides. Area rugs and padding are not included with purchase.

**Note:** This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

**WARNING:** To avoid serious personal injury:

Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.

Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Assembled only by responsible adults and children should not be involved in the assembly process.

# IMPORTANT SAFETY INSTRUCTIONS

***READ ALL INSTRUCTIONS BEFORE USING.***


**WARNING:** To reduce the risk of burns, fire, electric shock, or injury to persons:

1. **DANGER:** To reduce the risk of electric shock-Always unplug this furnishing from the electrical outlet before cleaning.
2. Unplug from outlet before putting on or taking off parts.
3. Close supervision is necessary when used by or near children, or disabled people.
4. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
5. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
6. Keep the cord away from heated surfaces.
7. Never drop or insert any object into any opening.
8. Do not use outdoors. This furnishing is for household indoor use only.
9. To disconnect, turn all controls to the off position, the remove plug from outlet.
10. **WARNING:** Risk of injury - Keep children away from extended foot support.
- 11 **WARNING:** Risk of injury to persons - do not use this furnishing to support video equipment such as televisions or computer monitors.
12. When not in use, it is recommended that the wand be stored securely in the pocket on the outside of the arm.


***SAVE THESE INSTRUCTIONS.***

# PARTS LIST

The following components should be included in your box.

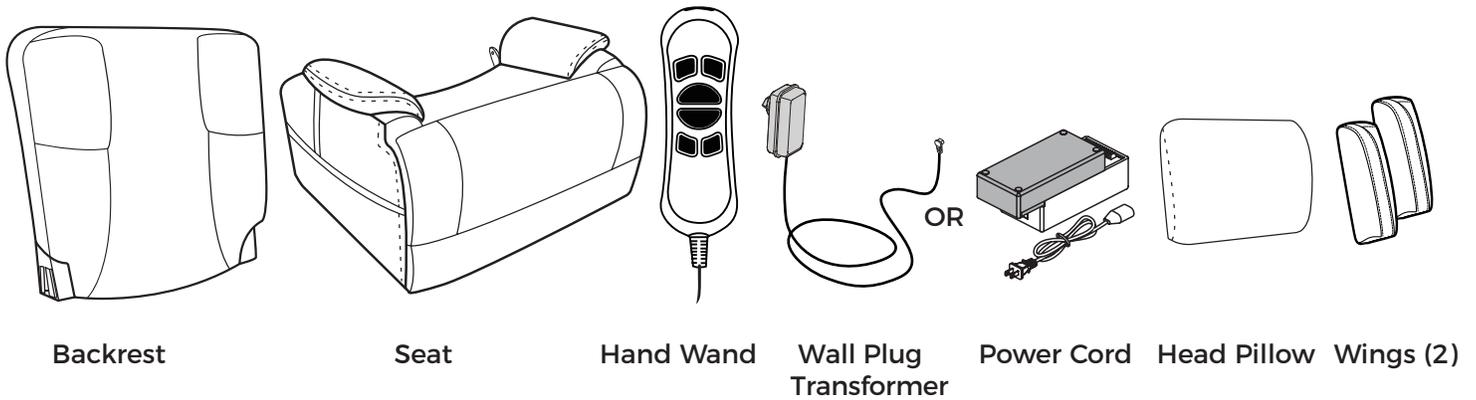


Before you flip over the Zecliner, check the left and right side zipper pockets under each arm for your parts.

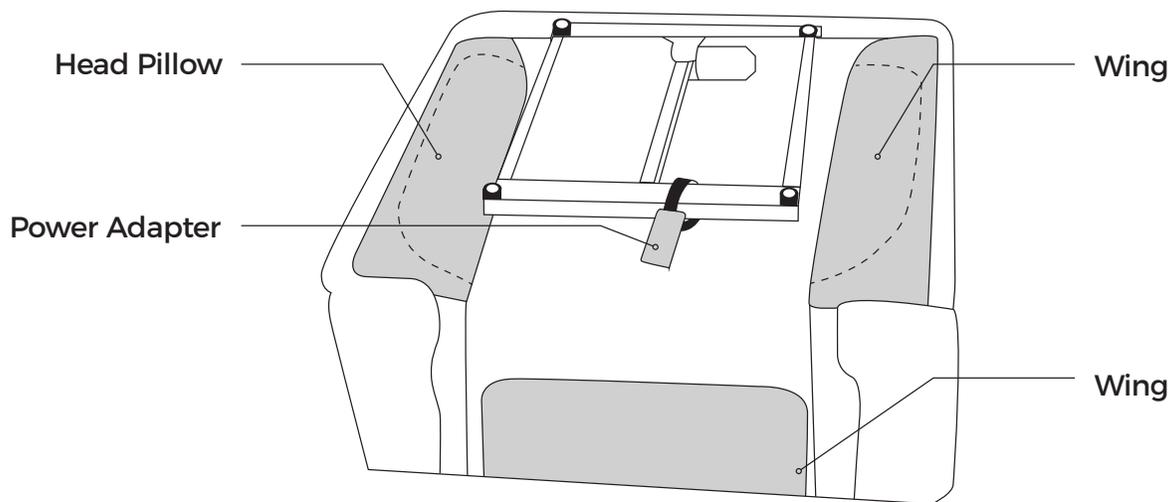


# ASSEMBLY INSTRUCTIONS

**CAUTION: PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE STARTING ASSEMBLY PROCESS. IT IS RECOMMENDED TO USE TWO PEOPLE WHEN ASSEMBLING AND REMOVING THE INSIDE BACKREST TO AND FROM THE BASE OF THE FURNITURE.**

1. Under the left arm, inside the zipper pocket, remove the box that contains the head pillow.
2. Under the right arm, inside the zipper pocket, remove one of the wings.
3. Remove the other wing from under the Zecliner.
4. Detach the power adapter from the base rail.
5. Once you have all four parts taken out and placed to the side, zip up the zipper pockets.
6. Pull the white protective fabric bag away from the base of the recliner. Grab the bottom base rails and flip the Zecliner over so that the base is on the floor. (Figure A.)

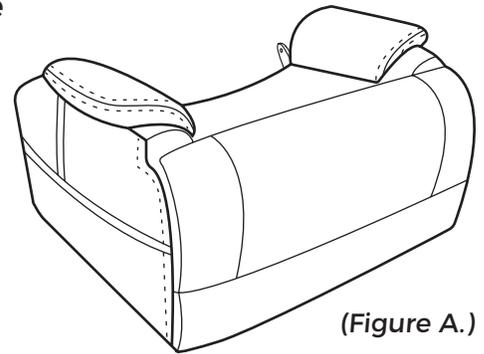


(Figure A.)

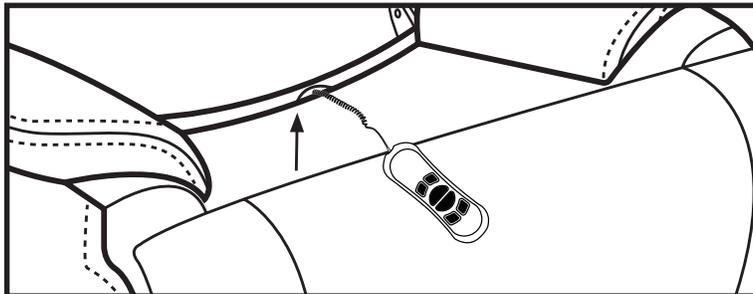

Before you put the backrest on, feed the wand's cord through the hole located in the fabric flap where the seat will meet the backrest. This will make it easier to connect the wand later on.

7. Remove white protective fabric bag and cardboard from the backrest of the Zecliner.
8. Align the brackets on the sides of the backrest with the posts on the seat base.
9. Once lined up, you can push the backrest into place. When you hear a click on both sides, you will know that the backrest is secured into place. (Figure B.)

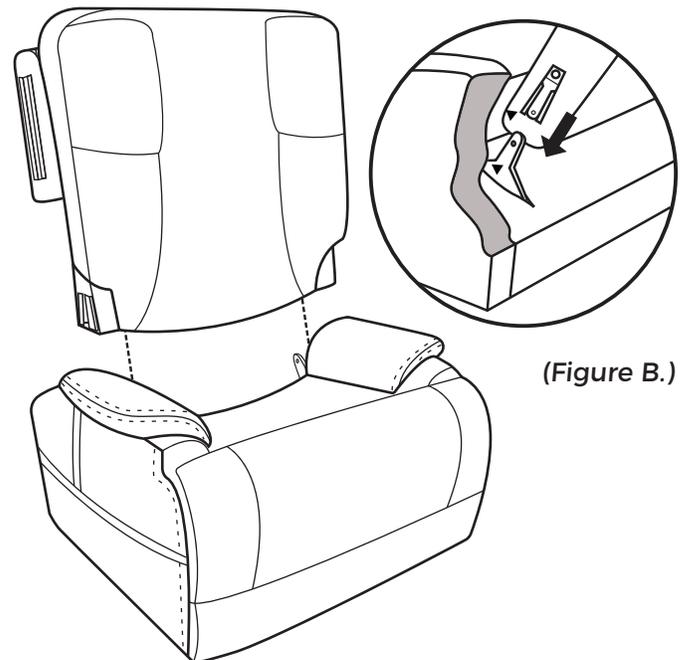


(Figure B.)

# ASSEMBLY INSTRUCTIONS

10. Once the backrest is secured, you can start connecting your cords. To connect the cords, you will connect them with the same color of plugs.

11. The black cords are for the wand, yellow is for the power headrest and grey for the power lumbar. Make sure to snap the black plastic flap in-place to secure your connection. (Figure C.)


**Note: Take care to match the correct colors of connectors. Failing to do so can cause damage to the control box.**

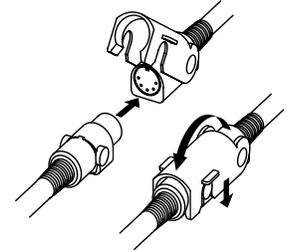

(Figure C.)

12. On the lower right-hand side facing the back of your Zecliner, is the connection for the power adapter. Same with the other connections, make sure to snap the black plastic flap in-place to secure your connection.

**Note that if you did not purchase a lift model, skip to step 13:** On the base rail of the Zecliner, unravel the twist-tie and connect your power adapter to the cord. Same with the other connections, make sure to snap the black plastic flap in-place to secure your connection. DO NOT cut the cable ties.

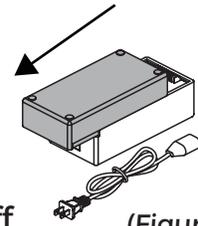

(Figure D.)

Attached to the power adapter is the emergency battery pack. Slide the emergency battery pack off of the power adapter. (Figure D.) Slide the top off by following the arrow and add four 9V batteries. Attach the top and attach back to power adapter.


13. The power adapter can now be plugged into an outlet, powering up your Zecliner.

14. Secure the back fabric flap smoothly to the sides and bottom of the back panel.

15. Unpackage your wings and locate the numbers on their brackets. These numbers coincide with the numbers on the brackets located on the sides of the recliner backrest.

16. Once identified, slide the wing onto the metal bracket.


(Figure E.)

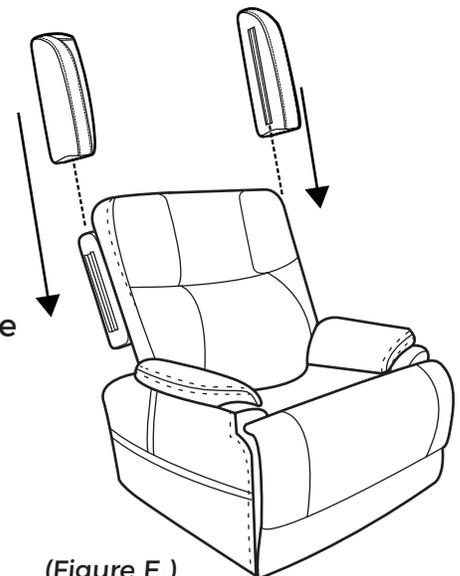


(Figure E.)

# ASSEMBLY INSTRUCTIONS

17. Once both wings are attached, Use the wand (down arrow) to recline your Zecliner back.
18. Locate the zippers in the flaps of the back of the seat and the bottom of the backrest. Zip the two together and bring your Zecliner back to its sitting position. (Figure F.)
19. Unpackage the box with the head pillow. If using a sharp object to cut the tape, be sure to cut with extreme caution and avoid puncturing the box. Once unboxed, fluff the pillow.
20. Before attaching the head pillow, use the hand wand to bring the headrest forward and locate the zipper attachment. (Figure G.)
21. Zip the head pillow into place and flip over the backrest. Then, use the hand wand to bring the headrest back to its original position.
22. Your Zecliner is now assembled.

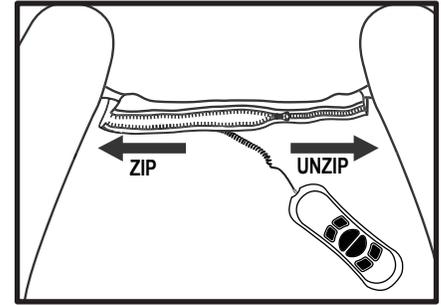

(Figure F.)

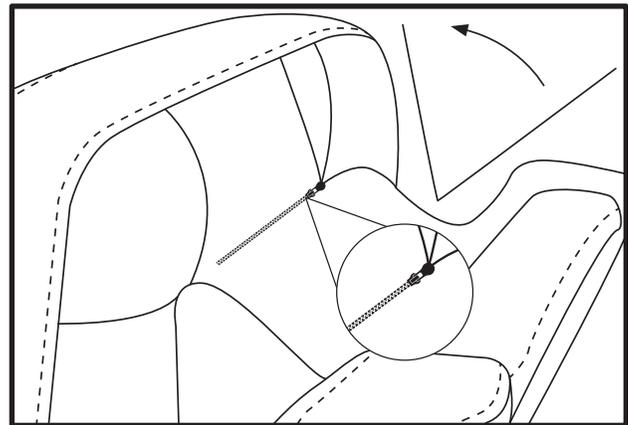

(Figure G.)

Sit back, relax and recline.



To avoid ripping the fabric when removing the tags, carefully cut the tags off with a pair of scissors.

## Need More Help?

RECLINER  
ASSEMBLY VIDEO

SCAN ME



LIFT RECLINER  
ASSEMBLY VIDEO

SCAN ME



# TROUBLESHOOTING

PROBLEM	POSSIBLE FACTORS	SOLUTIONS
Chair doesn't recline	Transformer may not be connected well	<ul style="list-style-type: none"> <li>• Check that the power supply has been correctly connected to transformer and socket</li> <li>• Confirm the wire from chair to transformer is firmly connected</li> </ul>
29V Battery Pack requires frequent recharging	The enhanced power features of this product require use of 120V receptacle power.	<ul style="list-style-type: none"> <li>• Plug power adapter into a 120V receptacle. Discontinue use of the 29V battery pack</li> </ul>
Zecliner power not working	Power outlet on wall not functioning	<ul style="list-style-type: none"> <li>• Check power from your wall outlet</li> <li>• Plug in a different device to make sure outlet has power</li> </ul>
Headrest or lumbar doesn't work*	Headrest or lumbar motor wires may not be properly connected inside back flap of chair	<ul style="list-style-type: none"> <li>• Check that the headrest (yellow) and lumbar (grey) motor wires have been correctly connected</li> </ul> <p><i>Connecting the wires to their correct color is extremely important</i></p>
Headrest and lumbar doesn't work*	Headrest and lumbar motor plug have been cross connected	<ul style="list-style-type: none"> <li>• Check that the headrest (yellow) and lumbar (grey) motor wires have been correctly connected</li> </ul> <p><i>Connecting the wires to their correct color is extremely important</i></p>
The remote doesn't work	Remote may not be properly connected	<ul style="list-style-type: none"> <li>• Check that the remote cord has been correctly connected to the plug</li> </ul>
APP doesn't work**	Out of the Bluetooth range or smart phone Bluetooth is not enabled	<ul style="list-style-type: none"> <li>• Ensure smart phone Bluetooth connection is enabled. Be in close proximity to the chair, the elective wireless range is <math>\leq 32.8</math> Feet</li> </ul>
APP doesn't work**	The version of APP is not the latest	<ul style="list-style-type: none"> <li>• Update the APP and reconnect to the chair</li> </ul>

\*When checking connections, unplug the Zecliner from the wall first. After, check the connections and making sure they are connected to the correct connector and tightly secured. Then, plug the Zecliner back into the wall to test your connections.

\*\* on select models

# zecliner<sup>®</sup>

## FLEXSTEEL<sup>®</sup>

### Customer Service

If you have any questions regarding the use and function of this unit, or find that your unit needs serviced, please contact your retailer.

For assembly questions, call us at 563-556-7730, then select Option 1 for Customer Care.

### Stay up to date on Zecliner



**Note:** This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.