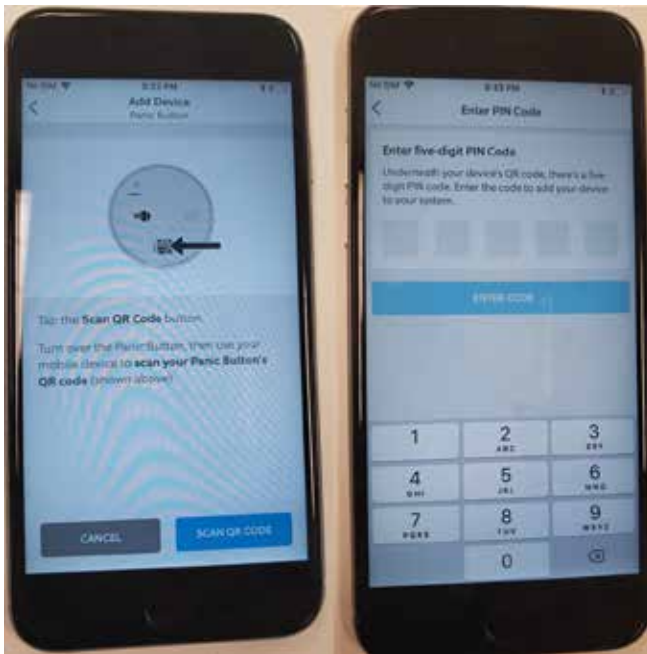# ring

Panic Button Z-Wave Technical Manual

Ring Panic Button

Instructions to locate Z-Wave DSK/QR code

Follow Device inclusion instructions provided in Ring Alarm mobile applications to locate QR code and enter PIN Code

Factory Reset Instructions

Press and hold the Setup button for 10 seconds. When the LED ring stops blinking, Panic Button has reset.

> A factory reset disconnects the Panic Button from your Ring Alarm. To begin using the Panic Button again, repeat the setup process in the Ring app.

> Use this procedure only in the event that the network primary controller is missing or otherwise inoperable."

Association CC:

This sensor has one Association groups of 1 node. Group 1 is the lifeline group who will receive unsolicited messages relating to Panic Button notifications, case tampering notifications, and low-battery notifications.

Sensor Condition	Command Class & Value	Configurable?
Communication Test	Notification Report, Type: System (0x09) Event: (0x05) Wake Up Notification	Yes, via Notification Set of Notification Type 0x09
Sensor Case Removed	Notification Report, Type: Home Security (0x07) Event: Tampering Product Covering Removed (0x03) Wake Up Notification	Yes, via Notification Set of Notification Type 0x07, and status of x00: This type of notification turned off 0xFF: This type of notification turned on
Sensor Case Fastened	Notification Report, Type: Home Security (0x07) Event: Previous Events Cleared (0x00)	Yes, via Notification Set of Notification Type 0x07, and status of 0x00: This type of notification turned off 0xFF: This type of notification turned on
Battery Level	A level of 0x64 indicates that battery is new. A level of 0x63 indicates the battery is normal/OK but not new. A level of 0x00 indicates that the battery should be changed "soon." A battery level of 0xFF indicates that the battery is dead and the sensor is no longer operational.	No
Panic	Command Class Notification Event Type: Call Police 0x01	Yes, via Notification Set of Notification Type 0x0A, and status of 0x00: This type of notification turned off 0xFF: This type