KidKraft
MADE FOR MAKE BELIEVE™

F29410

OUTDOOR ODYSSEY PLAYSET

BILT®

Easy step-by-step 3D interactive instructions for this product can be found in BILT®. Download today.

Download on the App Store

GET IT ON Google Play

MISSING SOMETHING? CALL US OR GO ONLINE


MAXIMUM VERTICAL FALL HEIGHT - 9'10" (3m).

CAPACITY - 16 Users Maximum, Ages 3 to 10; Weight Limit 110 lbs. (50 kg) per child.

RESIDENTAL HOME USE ONLY. Not intended for public areas such as multi-unit residences, schools, churches, nurseries, day cares or parks.

Option 1 - Attached Swing Beam Configuration



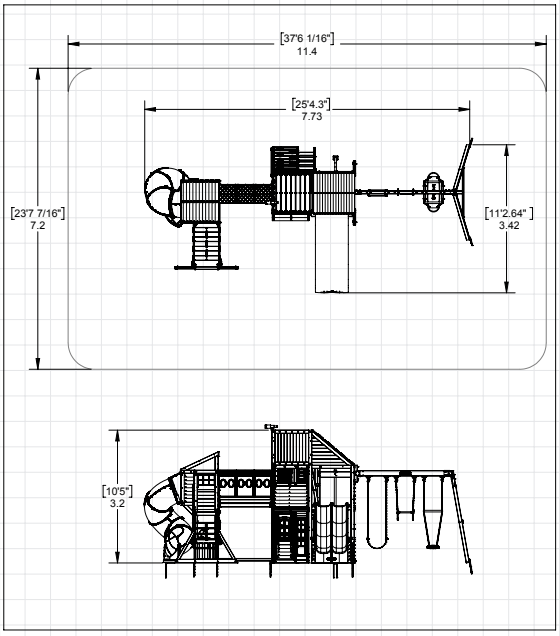

OBSTACLE FREE SAFETY ZONE - 37'-6 1/16" x 23'-7 7/16" x 16'-4 7/8" (11.4 m x 7.2 m x 5 m) area requires Protective Surfacing. See page 5.

INSTALLATION AND OPERATING INSTRUCTIONS

FOR 24/7 ONLINE PARTS REPLACEMENT

parts.kidkraft.com

KidKraft, Inc.
4630 Olin Road
Dallas, Texas 75244
USA

customerservice@kidkraft.com

1.800.933.0771
972.385.0100

parts.kidkraft.eu

KidKraft Netherlands BV
Olympisch Stadion 8
1076 DE Amsterdam
The Netherlands

europecustomerservice@kidkraft.com

+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

9409410 Rev 05/10/2022

TWO-PERSON ASSEMBLY

ASSEMBLY TIME 15 - 20 HOURS

WARNING. ONLY FOR OUTDOOR DOMESTIC USE

⚠WARNING

To reduce the risk of serious injury or death, please read and follow these instructions. Keep and refer to instructions as needed and pass along to any future owners of this item.


Option 2 - Separate Swing Beam Configuration






OBSTACLE FREE SAFETY ZONE - 28'-6 5/8" x 23'-5 1/4" x 16'-4 7/8" (8.7 m x 7.1 m x 5 m) area requires Protective Surfacing. See page 5.

OBSTACLE FREE SAFETY ZONE - 22'-2 15/16" x 19'-5 11/16" x 13'-1 7/16" (6.8 m x 5.9 m x 4 m) area requires Protective Surfacing. See page 5.

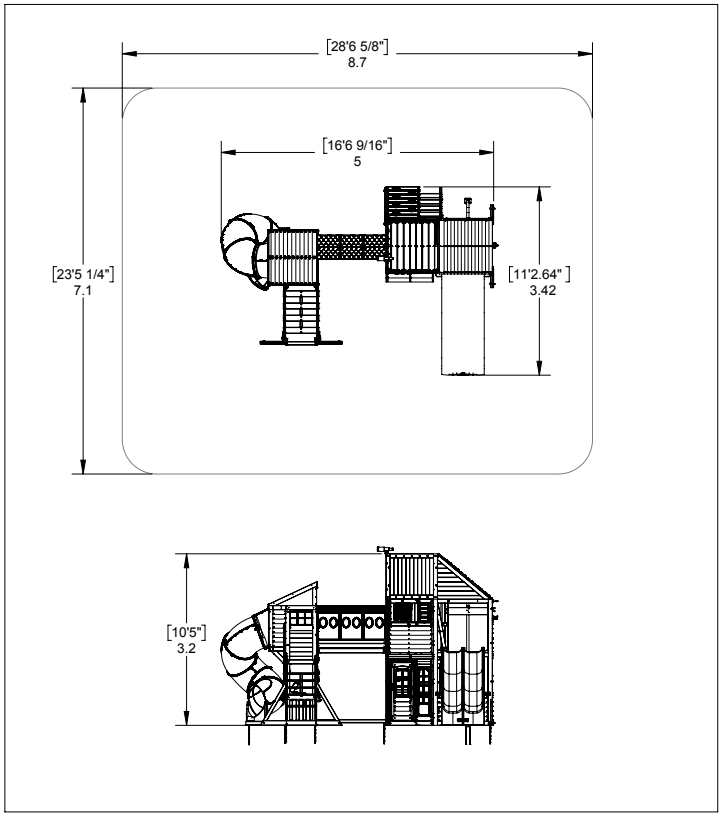

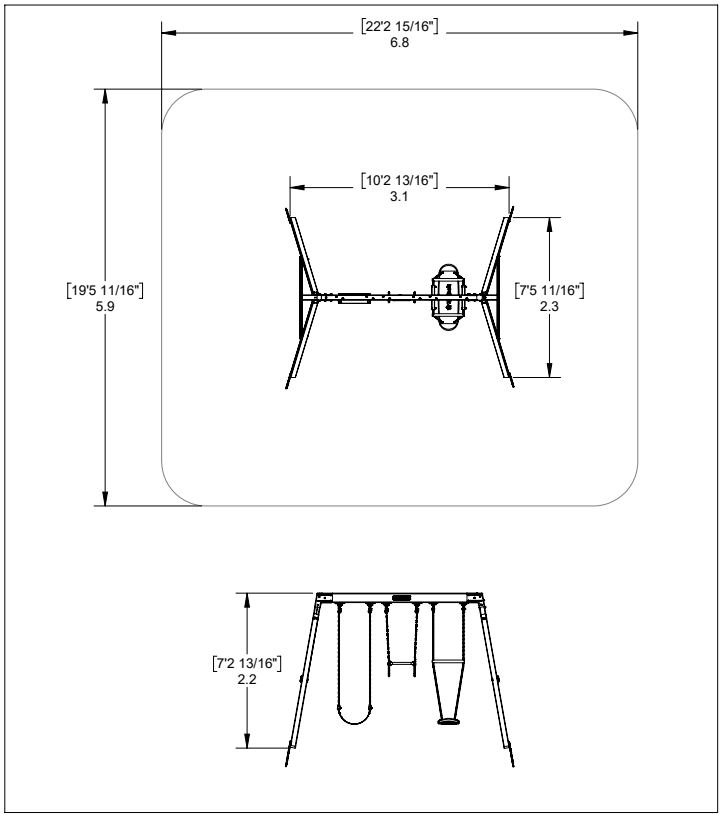

Congratulations on purchasing a KidKraft product!


Our items are made of high-quality, durable Cunninghamia Lanceolata wood from the cypress family.

Lumber from these trees are known for their light weight and excellent strength. The porosity of this wood allows the moisture to absorb and evaporate in the fibers, resisting rot and bugs.

Engineered for great play, our products also go through extensive testing for safety.

Plus, our team has developed a series of proprietary methods for a simpler, more organized assembly. Less build time and more play time is our motto!

However, during assembly if you have any questions or concerns, please reach out. Our Customer Service can help with missing parts, instructions or maintenance.

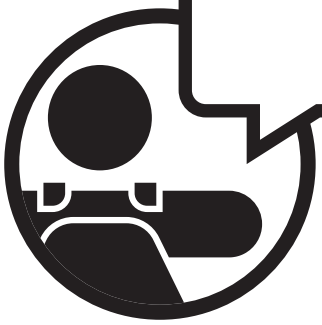

Warnings and Safe Play Instructions

CONTINUOUS ADULT SUPERVISION REQUIRED. Most serious injuries and deaths on playground equipment have occurred while children were unsupervised! Our products are designed to meet mandatory and voluntary safety standards. Complying with all warnings and recommendations in these instructions will reduce the risk of serious or fatal injury to children using this play system. Go over the warnings and safe play instructions regularly with your children and make certain that they understand and follow them. Remember on-site adult supervision is required for children of all ages.

WARNING

SERIOUS HEAD INJURY HAZARD
Installation over concrete, asphalt, dirt, grass, carpet and other hard surface creates a risk of serious injury or death from falls to the ground. Install and maintain shock absorbing material under and around play-set as recommended on page 3 of these instructions.

COLLISION HAZARD
Place play-set on level ground at least 2m from any obstruction such as a garage or house, fences, poles, trees, sidewalks, walls, landscape timbers, rocks, pavement, planters, garden borders, overhanging branches, laundry lines, and electrical wires. (See OBSTACLE FREE SAFETY ZONE on cover)

CHOKING HAZARD/SHARP EDGES & POINTS
Adult assembly required. This product contains small parts and parts with sharp edges and points. Keep parts away from children until fully assembled.

WARNING LABEL
Owners shall be responsible for maintaining the legibility of the warning labels.

STRANGULATION HAZARD
- NEVER allow children to play with ropes, clotheslines, pet leashes, cables, chains or cord-like items when using this play-set or to attach these items to play-set.
- NEVER allow children to wear loose fitting clothing, ponchos, hoods, scarves, capes, necklaces, items with draw-strings, cords or ties when using this play-set.
- NEVER allow children to wear bike or sport helmets when using this play-set.

Failure to prohibit these items, even helmets with chin straps, increases the risk of serious injury and death to children from entanglement and strangulation.

TIP OVER HAZARD
Choose a level location for the equipment. This can reduce the likelihood of the play set tipping over and loose-fill surfacing materials washing away during heavy rains.

DO NOT allow children to play on the play-set until the assembly is complete and the unit is properly anchored.

Never add extra length to chain or rope. The chains or ropes provided are the maximum length designed for the swinging element(s).

WARNING – Safe Play Instructions

- ✓ Observe capacity limitations of your play-set. See front cover.
- ✓ Dress children with well fitting and full foot enclosing footwear.
- ✓ Teach children to sit with their full weight in the center of the swing seat to prevent erratic swing motion or falling off.
- ✓ Check for splintered, broken or cracked wood; missing, loose, or sharp edged hardware. Replace, tighten and or sand smooth as required prior to playing.
- ✓ Verify that suspended climbing ropes, rope ladders, chain or cable are secured at both ends and cannot be looped back on itself as to create an entanglement hazard.
- ✓ On sunny and or hot days, check the slide and other plastic rides to assure that they are not very hot as to cause burns. Cool hot slide and rides with water and wipe dry prior to using.
- ✓ Orientate slide such that it gets the least amount of exposure to the sun.
- ✗ Do not allow children to wear open toe or heel footwear like sandals, flip–flops or clogs.
- ✗ Do not allow children to walk, in front, between, behind or close to moving rides.
- ✗ Do not let children twist swing chains or ropes or loop them over the top support bar. This may reduce the strength of the chain or rope and cause premature failure.
- ✗ Do not let children get off rides while they are in motion.
- ✗ Do not permit climbing on equipment when it is wet.
- ✗ Do not permit rough play or use of equipment in a manner for which it was not intended. Standing on or jumping from the roof, elevated platforms, swings, climbers, ladders or slide can be dangerous.
- ✗ Do not allow children to swing empty rides or seats.
- ✗ Do not allow children to go down slide head first or run up slide.

⚠Protective Surfacing - Reducing Risk of Serious Head Injury From Falls

One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM F1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

Loose-Fill Materials

- Maintain a minimum depth of 9 inches (23 cm) of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet (2.45 m) high; and 9 inches (23 cm) of sand or pea gravel for equipment up to 5 feet (1.5 m) high. NOTE: An initial fill level of 12 inches (31 cm) will compress to about a 9-inch (23 cm) depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically raked and refilled to maintain at least a 9-inch (23 cm) depth.
- Use a minimum of 6 inches (16 cm) of protective surfacing for play equipment less than 4 feet (1.22 m) in height. If maintained properly, this should be adequate. (At depths less than 6 inches (16 cm), the protective material is too easily displaced or compacted.)

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are not adequate protective surfacing. Ground level equipment -- such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface -- does not need any protective surfacing.

- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.
- Periodically rake, check and maintain the depth of the loose-fill surfacing material. Marking the correct depth on the play equipment support posts will help you to see when the material has settled and needs to be raked and or replenished. Be sure to rake and evenly redistribute the surfacing in heavily used areas.
- Do not install loose fill surfacing over hard surfaces such as concrete or asphalt.

Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles


You may be interested in using surfacing other than loose-fill materials - like rubber tiles or poured-in-place surfaces.


- Installations of these surfaces generally require a professional and are not "do-it yourself" projects.
- Review surface specifications before purchasing this type of surfacing. Ask the installer/manufacturer for a report showing that the product has been tested to the following safety standard: ASTM F1292 *Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment*. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height - vertical distance between a designated play surface (*elevated surface for standing, sitting, or climbing*) and the protective surfacing below - of your play equipment.
- Check the protective surfacing frequently for wear.

Placement

Proper placement and maintenance of protective surfacing is essential. Refer to diagram on front cover. Be sure to;

- Extend surfacing at least 6 feet (1.8 m) from the equipment in all directions.
- For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.
- For tire swings, extend surfacing in a circle whose radius is equal to the height of the suspending chain or rope, plus 6 feet (1.8 m) in all directions.

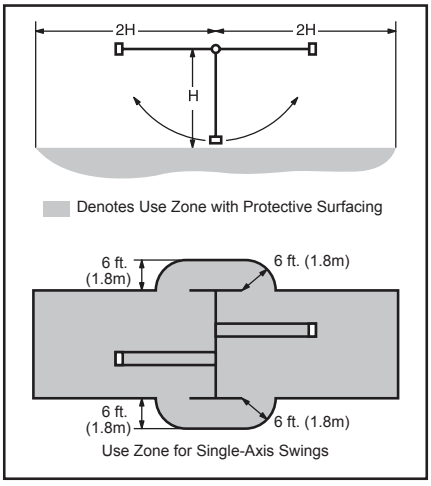

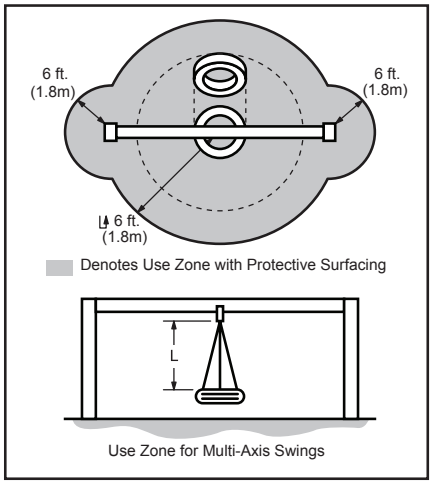


From the CPSC Outdoor Home Playground Safety Handbook. At http://www.playgroundregs.com/resources/CPSC%20324.pdf

Instructions for Proper Maintenance


Your KidKraft Play System is designed and constructed of quality materials with your child's safety in mind. As with all outdoor products used by children, it will weather and wear. To maximize the enjoyment, safety and life of your Play Set, it is important that you, the owner, properly maintain it.

Check the following at the beginning of the play season:

HARDWARE:

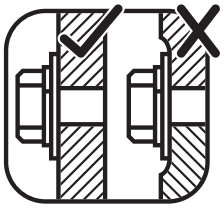

- ✓ Check metal parts for rust. If found, sand and repaint using a non-lead paint complying with 16 CFR 1303.
- ✓ Inspect and tighten all hardware. On wood assemblies DO NOT OVER-TIGHTEN as to cause crushing and splintering of wood.
- ✓ Check for sharp edges or protruding screw threads, add washers if required.

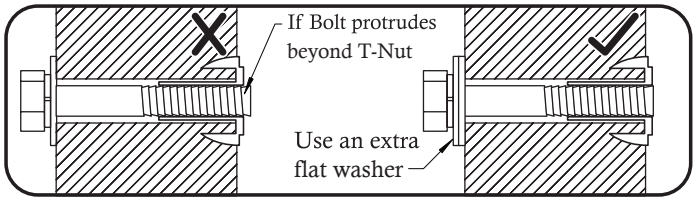

SHOCK ABSORBING SURFACING:

- ✓ Check for foreign objects. Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 3)

GROUND STAKES (ANCHORS):

- ✓ Check for looseness, damage or deterioration. Should firmly anchor unit to ground during use. Re-secure and or replace, if necessary.

SWING HANGERS:

- ✓ Check that bolts are secure and tight. Quick clips should be completely closed and threaded clips screwed tight.
- ✓ If squeaking occurs lubricate bushings with oil or WD-40®.

SWINGS, ROPES AND RIDES:

- ✓ Reinstall if removed during cold season. Check all moving parts including swing seats, ropes, chains and attachments for wear, rust and other deterioration. Replace as needed.
- ✓ Check that ropes are tight, secure at both ends and cannot loop back as to create an entrapment.

WOOD PARTS:

- ✓ Check all wood members for deterioration, structural damage and splintering. Sand down splinters and replace deteriorated wood members. As with all wood, some checking and small cracks in grain is normal.
- ✓ Applying a water repellent or stain (water-based) on a yearly basis is important maintenance to maintain maximum life and performance of the product.

Check twice a month during play season:

HARDWARE:

- ✓ Inspect for tightness. Must be firmly against, but not crushing the wood. DO NOT OVER-TIGHTEN. This will cause splintering of wood.
- ✓ Check for sharp edges or protruding screw threads. Add washers if required.

SHOCK ABSORBING SURFACING:

- ✓ Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 3)

Check once a month during play season:

SWING HANGERS:

- ✓ Check that they are secure and orientated correctly. Hook should rotate freely and perpendicular to support beam.
- ✓ If squeaking occurs lubricate bushings with oil or WD-40®.

SWINGS AND RIDES:

- ✓ Check swing seats, all ropes, chains and attachments for fraying, wear, excessive corrosion or damage. Replace if structurally damaged or deteriorated.

Check at the end of the play season:

SWINGS AND RIDES:

- ✓ To prolong their life, remove swings and store inside when outside temperature is below 32°F/0°C. Below freezing, plastic parts may become more brittle.

SHOCK ABSORBING SURFACING:

- ✓ Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 3)

If you dispose of your play set: Please disassemble and dispose of your unit so that it does not create any unreasonable hazards at the time it is discarded. Be sure to follow your local waste ordinances.

About Our Wood

KidKraft Premium Play Systems uses only premium playset lumber, ensuring the safest product for your children's use. Although we take great care in selecting the best quality lumber available, wood is still a product of nature and susceptible to weathering which can change the appearance of your set.

What causes weathering? Does it affect the strength of my Play System?

One of the main reasons for weathering is the effects of water (moisture); the moisture content of the wood at the surface is different than the interior of the wood. As the climate changes, moisture moves in or out of the wood, causing tension which can result in checking and or warping. You can expect the following due to weathering. These changes will not affect the strength of the product:

1. **Checking** is surface cracks in the wood along the grain. A post 4" x 4" (101mm x 101mm) will experience more checking than a board 1" x 4" (25mm x 101mm) because the surface and interior moisture content will vary more widely than in

thinner wood.

2. **Warping** results from any distortion (twisting, cupping) from the original plane of the board and often happens from rapid wetting and drying of the wood.

3. **Fading** happens as a natural change in the wood color as it is exposed to sun-light and will turn a grey over time.

How can I reduce the amount of weathering to my Play System?

At the factory we have coated the wood with a water repellent or stain. This coating decreases the amount of water absorption during rain or snow thus decreasing the tension in the wood. Sunlight will break down the coating, so we recommend applying a water repellent or stain on a yearly basis (see your local stain and paint supplier for a recommended product).

Most weathering is just the normal result of nature and will not affect safe play and enjoyment for your child. However if you are concerned that a part has experienced a severe weathering problem please call our consumer relations department for further assistance.

Complete and mail registration card to receive important product notifications and assure prompt warranty service.

KidKraft Limited Warranty

MISSING OR DAMAGED PARTS:
KidKraft will replace any parts within 90 days from date of purchase found to be missing from or damaged in the original packaging. See Fig.1

Fig. 1	Product Age (All Parts)	Consumer Pays
	0-90 Days from date of purchase	$0 for Part + Free Shipping

DEFECTS IN MATERIAL AND WORKMANSHIP:
KidKraft warrants that this product is free from defects in materials and workmanship for a period of one (1) year from the original date of purchase (dated sales receipt and/or product registration is required). This one (1) year warranty covers all parts including wood, hardware, and all accessories (Such as swings, rides, and slides). See Fig. 2

Fig. 2	Product Age (All Parts)	Consumer Pays
	91 Days to 1 Year	$0 for Part + Free Shipping

WOOD ROT, DECAY, AND INSECT DAMAGE:
All wood carries a five (5) year warranty against rot, decay, and insect damage (dated sales receipt and/or product registration is required). Refer to the schedule below for charges associated with replacement of wood parts under this **Limited Warranty.** See Fig. 3

Fig. 3	Product Age (Wood Parts)	Consumer Pays
	0 Days to 1 Year	$0 for Part + Free Shipping
	After 1 Year to 5 Year	$0 for Part + Shipping & Handling
	Over 5 Years	100% for Part (if available) + Shipping & Handling

This warranty applies to the original owner and registrant and is non-transferable. Regular maintenance is required to ensure the integrity of this product. Failure by the owner to maintain the product according to the maintenance requirements may void this warranty.

This Limited Warranty does NOT cover:

- Any inspection cost
- Labor and/or costs for replacement of any defective item(s), including but not limited to, professional installer costs
- Incidental or consequential damages, including but not limited to, as a result of set relocation, move and/or reinstall
- Cosmetic defects which do not affect performance or integrity of a part or the entire product
- Vandalism, improper use or installation, or acts of nature, including but not limited to, high winds, fire, and flood
- Minor twisting, warping, checking, or any natural occurring properties of wood that do not affect performance or integrity.
- Any KidKraft product purchased, including but not limited to, a non-approved retailer, auction houses, second-hand, and as-is clearance items.

KidKraft products have been designed for safety and quality. Modifications made to the original product may damage the structural integrity of the unit leading to failure and possible injury. KidKraft cannot assume any responsibility for the modified products. Furthermore, modifications void all warranties.


This product is warranted for **RESIDENTIAL USE ONLY.** Under no circumstance should a KidKraft product be used in public settings such as schools, churches, playgrounds, parks, home and professional day cares and the like. Such use may lead to product failure and potential injury. Public use will void this warranty. KidKraft disclaims all other representations and warranties of any kind, express or implied.

Keys to Assembly Success

Tools Required

• Tape Measure • Carpenters Level • Carpenters Square • Claw Hammer • Standard or Cordless Drill • Rubber Mallet	• #1 Phillips, #2 Robertson and Screwdriver • Ratchet with extension 1/2" (13mm) & 9/16"(14 mm) sockets	• Open End Wrench 1/2" (13mm) & 9/16"(14 mm) • Adjustable Wrench • 1/8"(3mm) & 3/16"(5mm) Drill Bits	• 3/16"(5mm) Hex Key • 8' (2.4m) Step Ladder • Safety Glasses • Adult Helpers • Pencil

Part Identification Key
On each page, you will find the parts and quantities required to complete the assembly step illustrated on that page. Here is a sample.

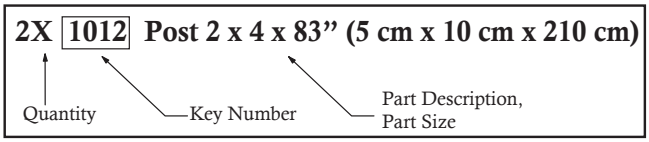

Symbols
Throughout these instructions symbols are provided as important reminders for proper and safe assembly.

This identifies information that requires special attention. Improper assembly could lead to an unsafe or dangerous condition.

Use Help Use Help

Where this is shown, 2 or 3 people are required to safely complete the step. To avoid injury or damage to the assembly make sure to get help!

Measure Distance

Use a measuring tape to assure proper location.

Square Assembly

Check that assembly is square before tightening bolts.

Check that set or assembly is properly level before proceeding.

Use Level

Pre-drill 1/8"(3mm) & 3/16"(5mm) Bit

1/8 3mm 3/16 5mm


Pre-drill a pilot hole before fastening screw or lag to prevent splitting of wood.

Tighten Bolts

This indicates time to tighten bolts, but not too tight! Do not crush the wood. This may create splinters and cause structural damage.

CAUTION – Protrusion Hazard


Once the assembly is tightened, watch for exposed threads. If a thread protrudes from the T-Nut, remove the bolt and add washers to eliminate this condition. Extra washers have been provided for this purpose.

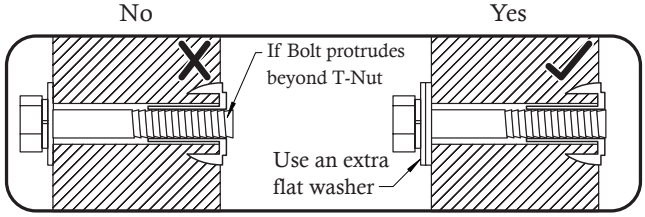


Proper Hardware Assembly
Lag screws require drilling pilot holes to avoid splitting wood. Only a flat washer is required. For ease of installation liquid soap can be used on all lag-type screws.

For bolts, tap T-Nut into hole with hammer. Insert the hex bolt through lock washer first then flat washer then hole. Because the assemblies need to be squared do not completely tighten until instructed. Pay close attention to diameter of the bolts. 5/16" (8mm) is slightly larger than 1/4" (6.4mm).


Note: Wafer head bolts with blue lock tight or a bolt with a Ny-Lok nut do NOT require a lock washer.

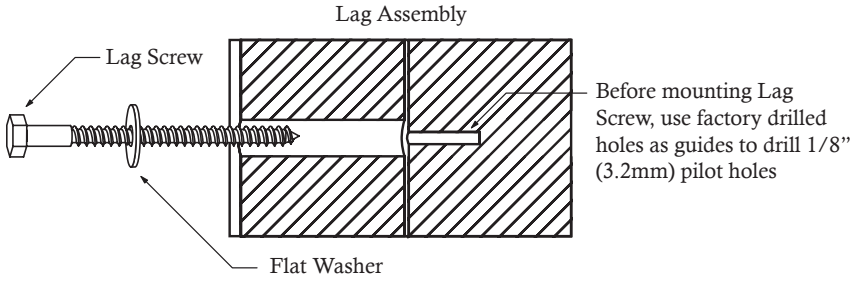

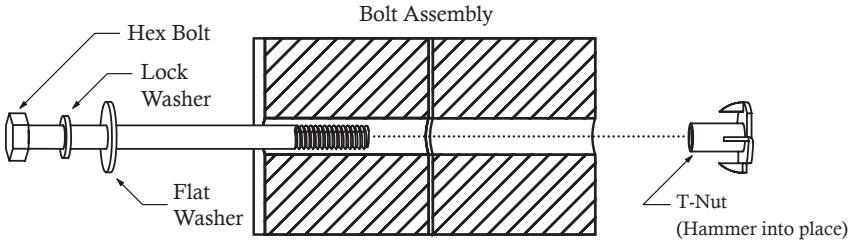


Part Identification (Reduced Size)

2x - 9538 - 38.1 x 38.1 x 1902 mm - 3819538




1 1/2 in x 1 1/2 in x 74 7/8 in

1x - 9058 - 34.9 x 63.5 x 1468.8 mm - 3589058




1 3/8 in x 2 1/2 in x 57 53/64 in

1x - 9054 - 34.9 x 63.5 x 1468.8 mm - 3589054




1 3/8 in x 2 1/2 in x 57 53/64 in

1x - 9055 - 34.9 x 63.5 x 1468.8 mm - 3589055




1 3/8 in x 2 1/2 in x 57 53/64 in

2x - 9553 - 38.1 x 38.1 x 1828.8 mm - 3819553




1 1/2 in x 1 1/2 in x 72 in

1x - 9569 - 34.9 x 63.5 x 1011 mm - 3589569




1 3/8 in x 2 1/2 in x 39 13/16 in

1x - 9570 - 34.9 x 63.5 x 1011 mm - 3589570




1 3/8 in x 2 1/2 in x 39 13/16 in

1x - 2611 - 23.8 x 108 x 1006.5mm - 3582611




15/16 in x 4 1/4 in x 39 5/8 in

2x - 9540 - 15.9 x 82.6 x 904.9 mm - 3589540




5/8 in x 3 1/4 in x 35 5/8 in

22x - 9051 - 15.9 x 114.3 x 904.9 mm - 3589051




5/8 in x 4 1/2 in x 35 5/8 in

1x - 9541 - 23.8 x 57.2 x 838.2mm - 3589541




15/16 in x 2 1/4 in x 32 in

1x - 9542 - 31.8 x 76.2 x 1906 mm - 3819542




1 1/4 in x 3 in x 75 1/16 in

4x - 9555 - 31.8 x 76.2 x 954.3 mm - 3819555



1 1/4 in x 3 in x 37 9/16 in


2x - 9558 - 31.8 x 76.2 x 908 mm - 3819558



1 1/4 in x 3 in x 35 3/4 in


Part Identification (Reduced Size)

15x - 9566 - 15.9 x 76.2 x 838.2 mm - 3819566




5/8 in x 3 in x 33 in

3x - 9571 - 23.8 x 82.6 x 343 mm - 3589571




15/16 in x 3 1/4 in x 13 1/2 in

1x - 10663 - 31.8 x 133.4 x 846.3 mm - 38110663




1 1/4 in x 5 1/4 in x 33 5/16 in

2x - 2606 - 23.8 x 82.6 x 362 mm - 3812606




15/16 in x 3 1/4 in x 14 1/4 in

2x - 2607 - 31.8 x 76.2 x 558.8mm - 3812607



1-1/4 x 3 x 22 in

2x - 9537 - 31.8 x 76.2 x 714.8 mm - 3819537




1 1/4 in x 3 in x 28 1/8 in

1x - 9539 - 31.8 x 31.8 x 1006.5 mm - 3819539



1 1/4 in x 1 1/4 in x 39 5/8 in

1x - 9543 - 15.9 x 82.6 x 1033.5 mm - 3589543




5/8 in x 3 1/4 in x 40 11/16 in

1x - 9544 - 15.9 x 82.6 x 449.3 mm - 3589544



5/8 in x 3 1/4 in x 17 11/16 in

4x - 9545 - 23.8 x 82.6 x 411.2 mm - 3589545



15/16 in x 3 1/4 in x 16 3/16 in

1x - 9546 - 15.9 x 101.6 x 617 mm - 3589546




5/8 in x 4 in x 24 5/16 in

7x - 9547 - 15.9 x 133.4 x 617 mm - 3589547



5/8 in x 5 1/4 in x 24 5/16 in

1x - 9548 - 23.8 x 82.6 x 704.9 mm - 3589548



15/16 in x 3 1/4 in x 27 3/4 in


2x - 9556 - 31.8 x 76.2 x 838.2 mm - 3819556



1 1/4 in x 3 in x 33 in


Part Identification (Reduced Size)

4x - 9557 - 31.8 x 76.2 x 838.2 mm - 3819557




1 1/4 in x 3 in x 33 in

1x - 9572 - 15.9 x 76.2 x 374.6 mm - 3589572



5/8 in x 3 in x 14 3/4 in

1x - 9579 - 15.9 x 50.8 x 557.1 mm - 3589579



5/8 in x 2 in x 21 15/16 in

1x - 2715 - 25.4 x 63.5 x 254 mm - 3812715



1 in x 2 1/2 in x 10 in

4x - 2613 - 50.8 x 76.2 x 2201.9 mm - 3812613




2 in x 3 in x 86 11/16 in

1x - 2615 - 76.2 x 76.2 x 1294.3 mm - 3812615




3 in x 3 in x 50 15/16 in

2x - 2616 - 23.8 x 82.6 x 1181.1 mm - 3812616




15/16 in x 3 1/4 in x 46 1/2 in

1x - 8965 - 31.8 x 76.2 x 514.4 mm - 3818965




1 1/4 in x 3 in x 20 1/4 in

2x - 6040 - 31.8 x 82.6 x 367 mm - 3816040




1 1/4 in x 3 1/4 in x 14 7/16 in

1x - 9352 - 76.2 x 76.2 x 406.4mm - 3819352




3 in x 3 in x 16 in

1x - 10586 - 76.2 x 76.2 x 1294.3 mm - 38110586



3 in x 3 in x 50 15/16 in

1x - 10587 - 76.2 x 133.4 x 2235.2mm - 38110587




3 in x 5 1/4 in x 88 in

1x - 10222 - 31.8 x 76.2 x 965.1 mm - 38110222



1 1/4 in x 3 in x 38 in

1x - 10224 - 31.8 x 76.2 x 1479.6 mm - 38110224



1 1/4 in x 3 in x 58 1/4 in


Part Identification (Reduced Size)

2x - 10225 - 31.8 x 76.2 x 1479.6 mm - 38110225




1 1/4 in x 3 in x 58 1/4 in

1x - 10226 - 31.8 x 76.2 x 457.1 mm - 38110226



1 1/4 in x 3 in x 18 in

1x - 10227 - 31.8 x 50.8 x 300.7 mm - 38110227




1 1/4 in x 2 in x 11 13/16 in

2x - 10228 - 31.8 x 76.2 x 965.1 mm - 38110228




1 1/4 in x 3 in x 38 in

2x - 10229 - 31.8 x 76.2 x 1435.1 mm - 38110229




1 1/4 in x 3 in x 56 1/2 in

1x - 10230 - 31.8 x 76.2 x 901.5 mm - 38110230




1 1/4 in x 3 in x 35 1/2 in

2x - 10231 - 31.8 x 76.2 x 901.5 mm - 38110231




1 1/4 in x 3 in x 35 1/2 in

3x - 10232 - 31.8 x 63.5 x 843.4 mm - 38110232



1 1/4 in x 2 1/2 in x 33 3/16 in

1x - 10233 - 31.8 x 60.3 x 901.5 mm - 38110233



1 1/4 in x 2 3/8 in x 35 1/2 in

2x - 10234 - 38.1 x 38.1 x 959 mm - 38110234



1 1/2 in x 1 1/2 in x 37 3/4 in

2x - 10235 - 15.9 x 76.2 x 479.2 mm - 35810235



5/8 in x 3 in x 18 7/8 in

7x - 10236 - 15.9 x 114.3 x 479.2 mm - 35810236



5/8 in x 4 1/2 in x 18 7/8 in

1x - 10237 - 15.9 x 82.6 x 345.2 mm - 35810237



5/8 in x 3 1/4 in x 13 9/16 in

8x - 10238 - 15.9 x 101.6 x 345.2 mm - 35810238



5/8 in x 4 in x 13 9/16 in


2x - 10239 - 15.9 x 72.6 x 961.1 mm - 38110239



5/8 in x 2 7/8 in x 37 13/16 in


Part Identification (Reduced Size)

4x - 10240 - 31.8 x 76.2 x 381 mm - 38110240




1 1/4 in x 3 in x 15 in

2x - 10241 - 15.9 x 76.2 x 647.7 mm - 38110241




5/8 in x 3 in x 25 1/2 in

3x - 10256 - 23.8 x 85.7 x 963.2 mm - 35810256




15/16 in x 3 3/8 in x 37 15/16 in

2x - 10257 - 38.1 x 38.1 x 257.1 mm - 35810257




1 1/2 in x 1 1/2 in x 10 1/8 in

1x - 10258 - 31.8 x 76.2 x 991.4 mm - 38110258




1 1/4 in x 3 in x 39 1/16 in

1x - 10259 - 31.8 x 76.2 x 991.4 mm - 38110258




1 1/4 in x 3 in x 39 1/16 in

2x - 10262 - 31.8 x 76.2 x 355 mm - 38110262




1 1/4 in x 3 in x 14 in

2x - 10263 - 31.8 x 76.2 x 312 mm - 38110263




1 1/4 in x 3 in x 12 5/6 in

1x - 10271 - 31.8 x 76.2 x 997mm - 38110271




1 1/4 in x 3 in x 29 1/2 in

1x - 10588 - 15.9 x 76.2 x 1028.7 mm - 38110588




5/8 in x 3 in x 40 1/2 in

1x - 10639 - 25.4 x 60.3 x 1213 mm - 38110639




1 in x 2 3/8 in x 47 3/4 in

1x - 10640 - 25.4 x 60.3 x 1213 mm - 38110640



1 in x 2 3/8 in x 47 3/4 in

1x - 10641 - 25.4 x 60.3 x 846.2 mm - 38110641



1 in x 2 3/8 in x 33 5/16 in

1x - 10642 - 15.9 x 65.5 x 904.9 mm - 35810642




5/8 in x 2 9/16 in x 35 5/8 in

1x - 10643 - 31.8 x 76.2 x 971.6 mm - 38110643

1 1/4 in x 3 in x 38 1/4 in


2x - 10644 - 31.8 x 76.2 x 1270 mm - 38110644



1 1/4 in x 3 in x 50 in


Part Identification (Reduced Size)

1x - 10645 - 15.9 x 88.9 x 878 mm - 35810645



5/8 in x 3 1/2 in x 34 9/16 in

1x - 10646 - 31.8 x 76.2 x 965.1 mm- 38110646




1 1/4 in x 3 in x 38 in

1x - 10647 - 31.8 x 76.2 x 1028.7 mm - 38110647




1 1/4 in x 3 in x 40 1/2 in

2x - 10648 - 31.8 x 76.2 x 1107.6 mm - 38110648



1 1/4 in x 3 in x 43 5/8 in

2x - 10649 - 31.8 x 76.2 x 1583.5 mm - 38110649



1 1/4 in x 3 in x 62 5/16 in

2x - 10650 - 31.8 x 63.5 x 832.9 mm - 38110650



1 1/4 in x 2 1/2 in x 32 13/16 in

1x - 10651 - 25.4 x 88.9 x 1752.2 mm - 38110651




1 in x 3 1/2 in x 69 in

3x - 10652 - 63.5 x 31.8 x 575.6 mm - 35810652




2 1/2 in x 1 1/4 in x 22 21/32 in

5x - 10653 - 23.8 x 114.3 x 658.2 mm - 35810653




15/16 in x 4 1/2 in x 25 15/16 in

1x - 10654 - 63.5 x 82.6 x 1263.7 mm - 38110654



2 1/2 in x 3 1/4 in x 49 3/4 in

6x - 10655 - 31.8 x 76.2 x 1346.2 mm - 38110655




1 1/4 in x 3 in x 53 in

11x - 10656 - 15.9 x 114.3 x 428.6 mm - 35810656



5/8 in x 4 1/2 in x 16 7/8 in

1x - 10657 - 15.9 x 76.2 x 428.6 mm - 35810657




5/8 in x 3 in x 16 7/8 in

2x - 10658 - 31.8 x 139.6 x 428.6 mm - 38110658



1 1/4 in x 5 1/2 in x 16 7/8 in


1x - 10659 - 31.8 x 133.4 x 428.6 mm - 38110659



1 1/4 in x 5 1/4 in x 16 7/8 in


Part Identification (Reduced Size)

1x - 10660 - 76.2 x 63.5 x 1314.5 mm - 30210660



3 in x 2 1/2 in x 51 3/4 in

1x - 10661 - 15.9 x 114.3 x 1028.7 mm - 38110661




5/8 in x 4 1/2 in x 40 1/2 in

3x - 9998 - 31.8 x 63.5 x 127 mm - 3589998



1 1/4 in x 2 1/2 in x 5 in


1x - 10664 - 25.4 x 60.3 x 855.3 mm - 38110664




1 in x 2 3/8 in x 33 11/16 in

Part Identification (Reduced Size)


1x - 9404 - Back Panel Assembly - 3 3/4 in x 43 in x 92 in
95.4 x 1092.2 x 2336.8 mm

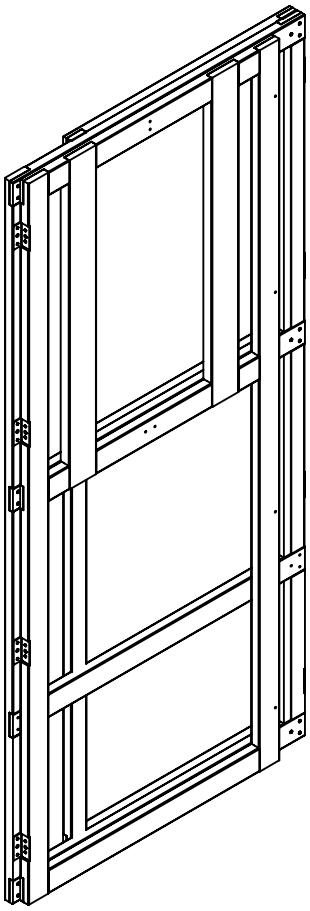

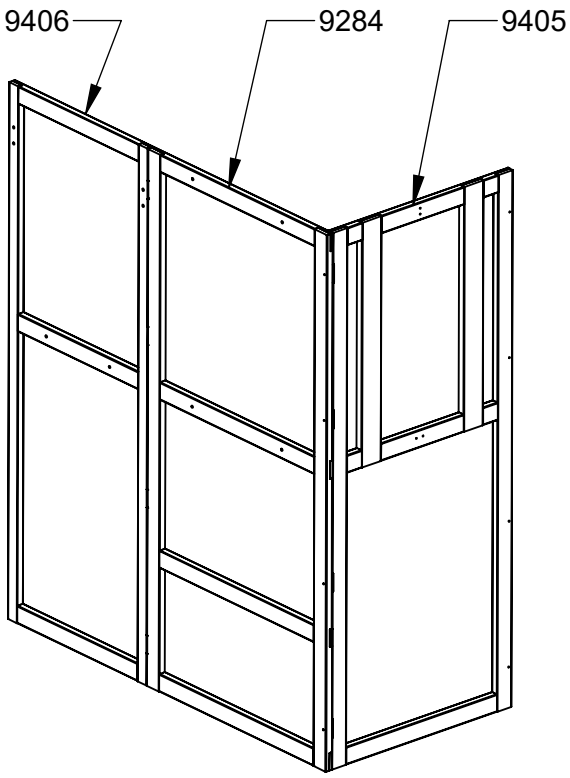


If you need to order parts,
please order below part #

1x - 9284 - Back Wall - 37819284
1x - 9405 - Panel End - 37819405
1x - 9406 - Narrow Back Wall - 37819406
8x - Wall Hinge - 9325984
32x - Truss Head Screw #8 x 18 - 52933505




9325984




52933505

Part Identification (Reduced Size)


1x - 9286 - Front Panel Assembly - 3 3/4 in x 43 in x 92 in
95.4 x 1092.2 x 2336.8 mm

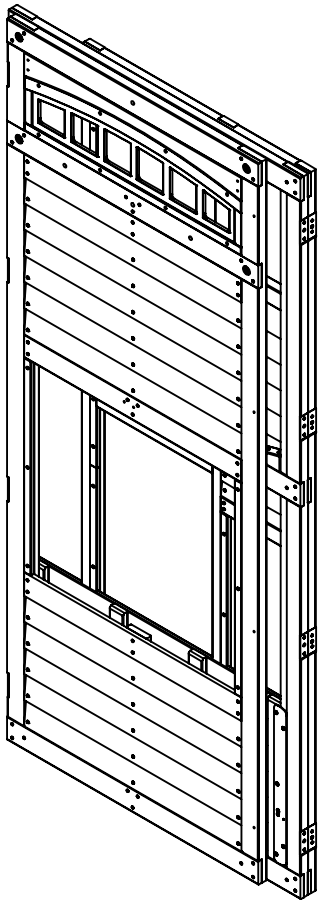

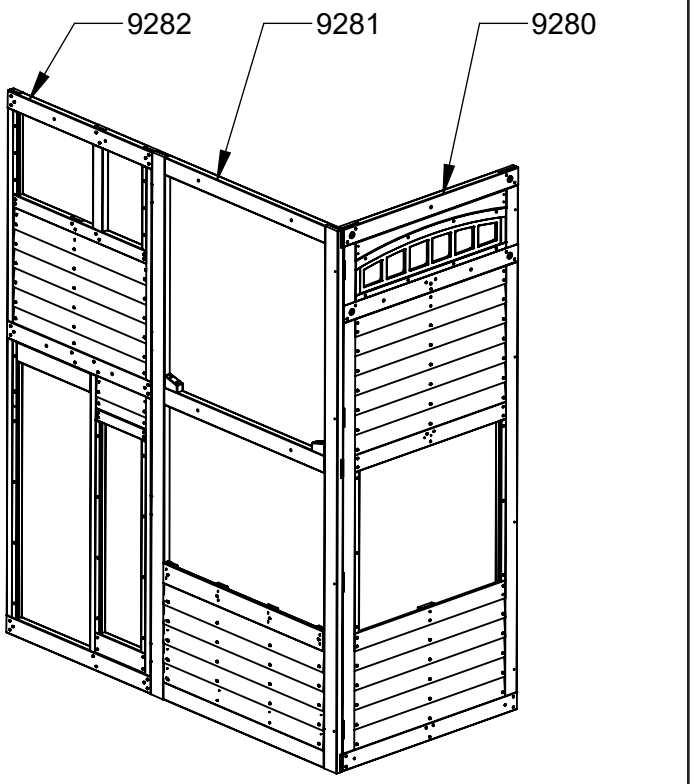

If you need to order parts,
please order below part #

1x - 9280 - SW Wall Panel - 37819280
1x - 9281 - Panel Front Wall - 37819281
1x - 9282 - Door Wall - 37819282
8x - Wall Hinge - 9325984
32x - Truss Head Screw #8 x 18 - 52933505




9325984




52933505

Part Identification (Reduced Size)


1x - 2837 - 1 1/4 in x 15 3/4 in x 42 1/8 in - 37582837
31.8 x 400 x 1070 mm

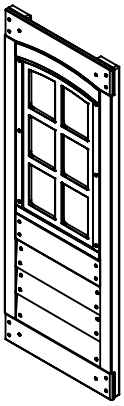


1x - 9407 - 1 1/8 in x 40 1/4 in x 50 9/16 in - 37589407
28.6 x 1022.4 x 1284.3 mm

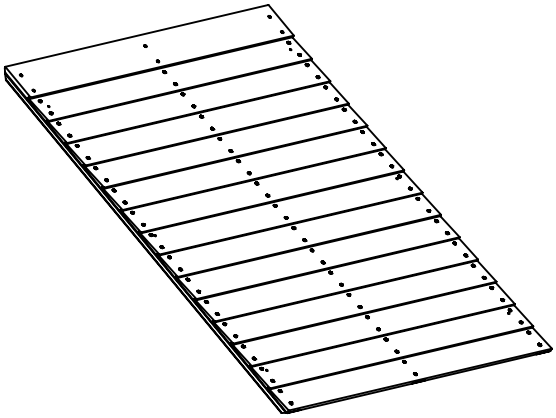


1x - 9408 - 1 in x 39 in x 30 in - 37819408
25.4 x 990.6 x 762 mm

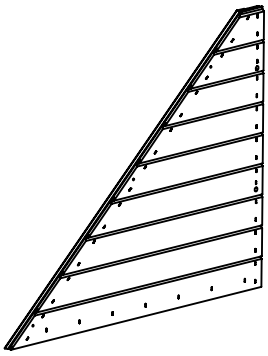

1x - 9409 - 1 in x 39 in x 30 in - 37819409
25.4 x 990.6 x 762 mm

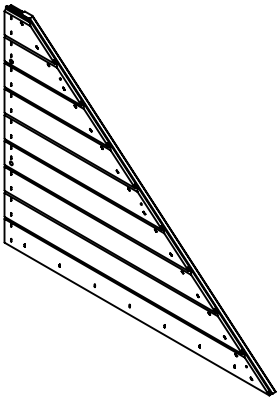


1x - 9410 - 1 in x 6 13/16 in x 34 9/16 in - 37589410
25.4 x 172.4 x 878 mm

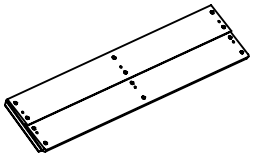


Part Identification (Reduced Size)

1x - 9411 - 1 1/4 in x 22 11/16 in x 87 5/16 in - 37819411
31.8 x 576.3 x 2217.7 mm

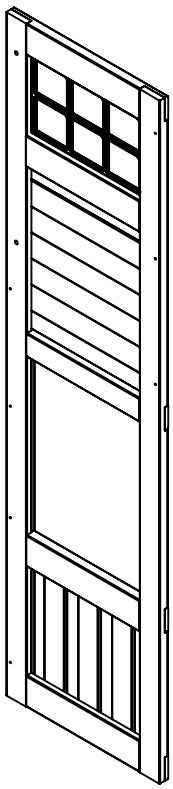


1x - 9412 - 1 1/4 in x 22 11/16 in x 87 5/16 in - 37819412
31.8 x 576.3 x 2217.7 mm

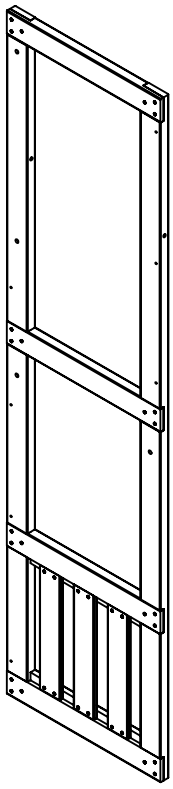


2x - 9374 - 1 1/8 in x 38 9/16 in x 19 3/8 in - 37589374
28.6 x 979.5 x 492.1 mm



1x - 9371 - 1 1/4 in x 15 5/16 in x 33 3/16 in - 37819371
31.8 x 389.6 x 843.4 mm

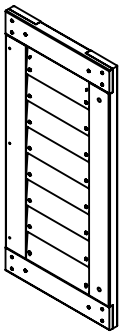


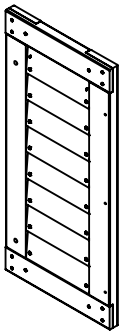


1x - 9370 - 1 1/4 in x 15 5/16 in x 33 3/16 in - 37819370
31.8 x 389.6 x 843.4 mm

Hardware Identification (Actual Size)


14 x (FW0) - 3/16 in - 51103100
4.8mm




8 x (FW6) - #12 - 9299500




73 x (LN1) - 1/4 in - 54303200
6.4mm




46 x [TN1] - 1/4 in - 54503200
6.4mm

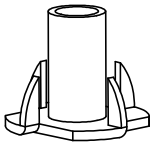


65 x (FW1) - 1/4 in - 51103200
6.4mm

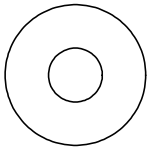


83 x (LW2) - 5/16 in - (51303300)
7.9mm




33 x (LN2) - 5/16 in - 54303300
7.9mm



96 x [TN2] - 5/16 in - 54503300
7.9mm

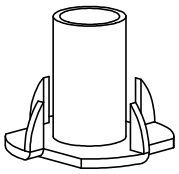


145 x (FW2) - 5/16 in - 51103300
7.9mm

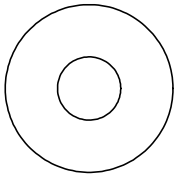


60 x (LW1) - 1/4 in - (51303200)
6.4mm




17 x (LN4) - #12 - 54303600



106 x (S0) - #8 x 7/8 in - 52933505
22.2mm



12 x (S2) - #8 x 1-1/2 in - 52043512
38.1mm




90 x (S3) - #8 x 2-1/2 in - 52043522
63.5mm




46 x (S4) - #8 x 3 in - 52043530
76.2mm




13 x (S6) - #12 x 1 in - 52433610
25.4mm




71 x (S7) - #12 x 2 in - 52433620
50.8mm



48 x (S8) - #12 x 3/4 in - 52433603
19mm




34 x (S10) - #8x 1 in - 52433510
25.4mm




54 x (S11) - #8 x 2 in - 52043520
50.8mm



12 x (S15) - #8 x 1-3/4 in - 52043513
44.5mm




4 x (S18) - #6 x 1 in - 52013910
25.4mm




325 x (S20) - #8 x 1-3/8 in - 52043516
34.9mm




6 x (S24) - #10 x 4 in - 52043940
101.6mm




33 x (S37) - #7 x 5/8 in - 52433009
15.9mm




4 x (S38) - #7 x 1-1/8 in - 52433014
28.6mm



17 x (MB1) - #12 x 1/2 in - 53433602
12.7mm




2 x (S5) - #8 x 1/2 in - 52433502
12.7mm




Hardware Identification (Actual Size)


49 x PB1 - 1/4 x 3/4 in- 53453203
6.4 x 19.1mm




14 x PB3 - 1/4 x 1-3/4 in - 53433213
6.4 x 44.5mm




11 x PB6 - 1/4 x 1 in - 53413210
6.4 x 25.4mm




33 x WB2 - 5/16 x 1-3/8 in - 53613316
7.9 x 34.9mm

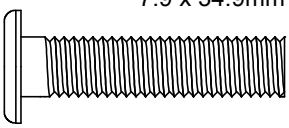


5 x WB7 - 5/16 x 3 in - (53613330)
7.9 x 76.2mm

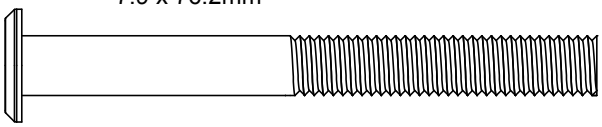


22 x WB8 - 5/16 x 2-3/8 in - 53613326
7.9 x 60.3mm

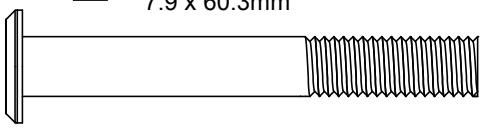


2 x WB9 - 5/16 x 2-1/8 in - 53613324
7.9 x 54mm

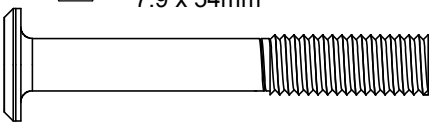


16 x WB10 - 5/16 x 2-5/8 in - 53613329
7.9 x 66.6mm

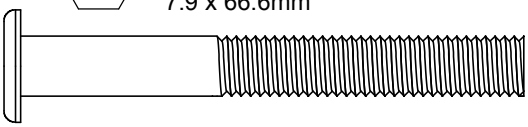


30 x H2 - 1/4 x 2 in - 53703220
6.4 x 50.8mm




1 x H8 - 1/4 x 4-1/4 in - 53703241
6.4 x 108mm




3 x H9 - 1/4 x 1-1/4 in - 53703211
6.4 x 31.8mm




6 x H10 - 1/4 x 2-1/4 in - 53703221
6.4 x 57.2mm




6 x H11 - 1/4 x 2-3/4 in -53703223
6.4 x 69.9mm



16 x WL3 - 1/4 x 1-3/8 in - 52613216
6.4 x 34.9mm

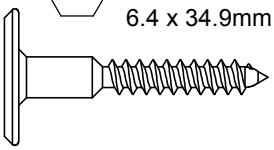


46 x WL5 - 1/4 x 2-1/2 in - 52613222
6.4 x 63.5mm

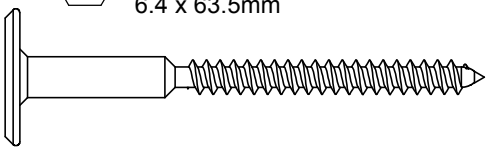


Hardware Identification (Actual Size)


4 x G1 - 5/16 x 1-1/2 in - 53703312
7.9 x 38.1mm

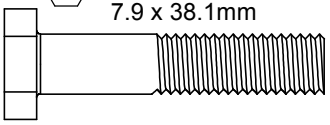


8 x G4 - 5/16 x 4 in - 53703340
7.9 x 101.5mm

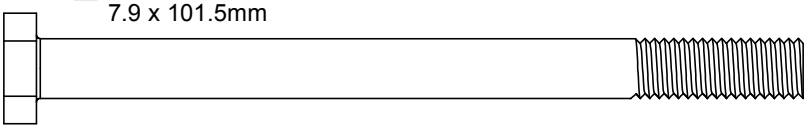


9 x G5 - 5/16 x 4-1/2 in - 53703342
7.9 x 114.3mm

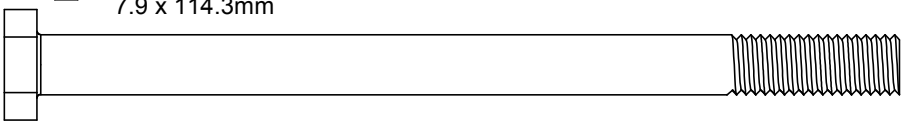


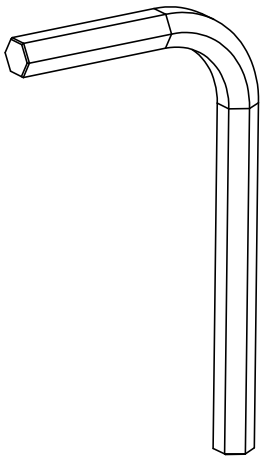

1 x G6 - 5/16 x 4-3/4 in - 53703343
7.9 x 120.7mm

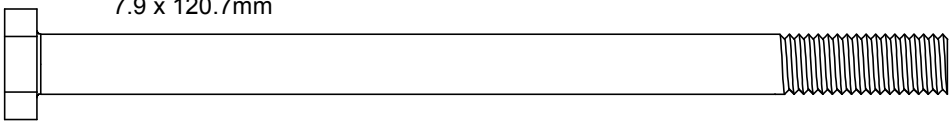

16 x G7 - 5/16 x 5-1/2 in - 53703352
7.9 x 139.7mm

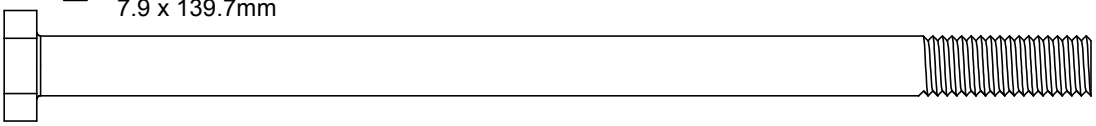


1 x D5 - 3/16 in - 9200022


4 x G9 - 5/16 x 2-1/2 in - 53703322
7.9 x 63.5mm




10 x G21 - 5/16 x 3-3/4 in - 53703333
7.9 x 95.2mm

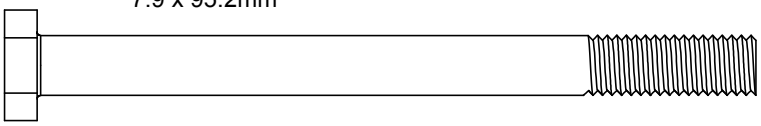


1 x G35 - 5/16 x 3-1/4 in - 53703331
7.9 x 82.6mm

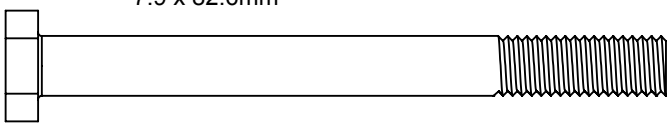

1 x D4 - #2 x 2 - 9200014



Reduced Part Size



1x - D1 (9200015)



1x - 1/8 in x 3 in
(3.2 x 76.2mm)
(9300183)

Part Identification (Reduced Part Size)


1x - 3320353



1x - 9320374




7x - 9330026






2x - 9320082RD
1x - 9320082YL
2x - 9320082BL
2x - 9320082LG




10x - 9509410

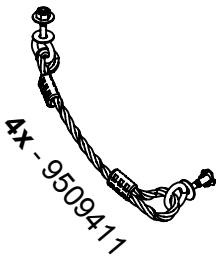

4x - 9509411


13x - 9290318




4x - 9201950




2x - 9200149



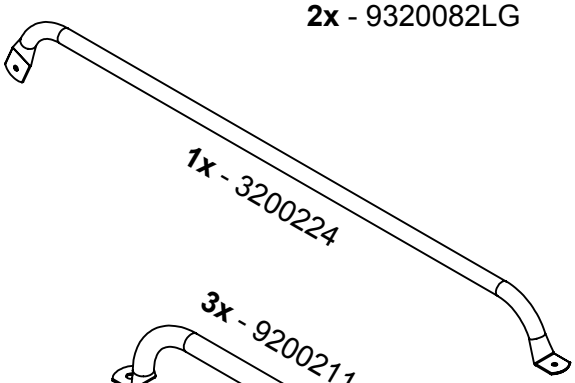

1x - 3200224

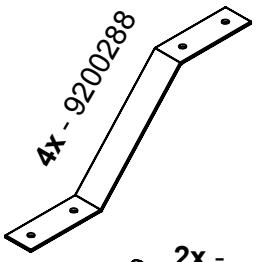



4x - 9200288

4x - 9200025



1x - 9200151



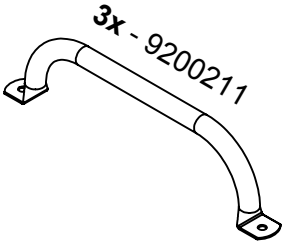

3x - 9200211

2x - 9200660




4x - 9200020




2x - 9200632



1x - 9330524

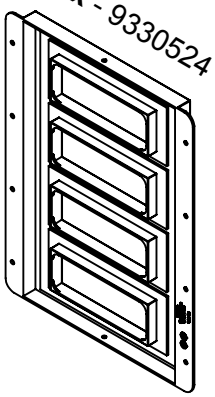


1x - 9320516

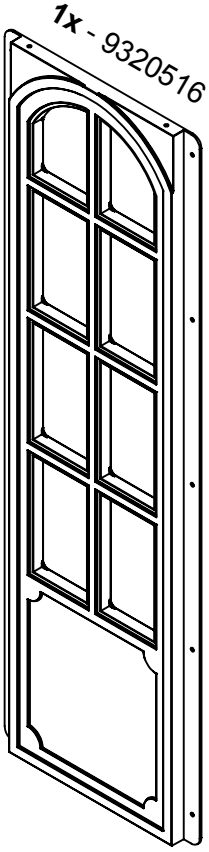


6x - 9201530



2x - 9200202YL

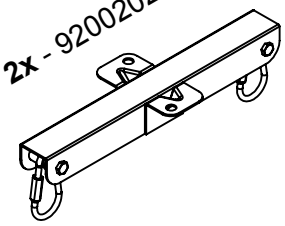


2x - 9200133




16x - 9200633



1x - 9200131




1x - 3320213

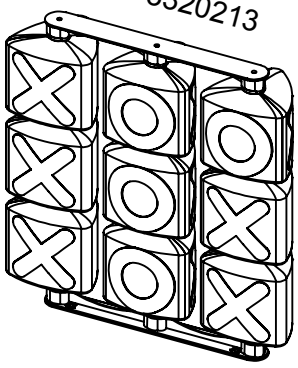


8x - 9200675



2x - 9200144

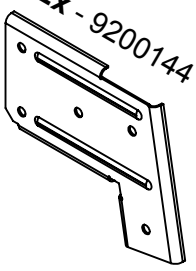


2x - 9200143

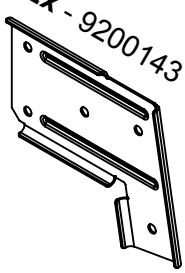


2x - 9206570



Part Identification (Reduced Part Size)

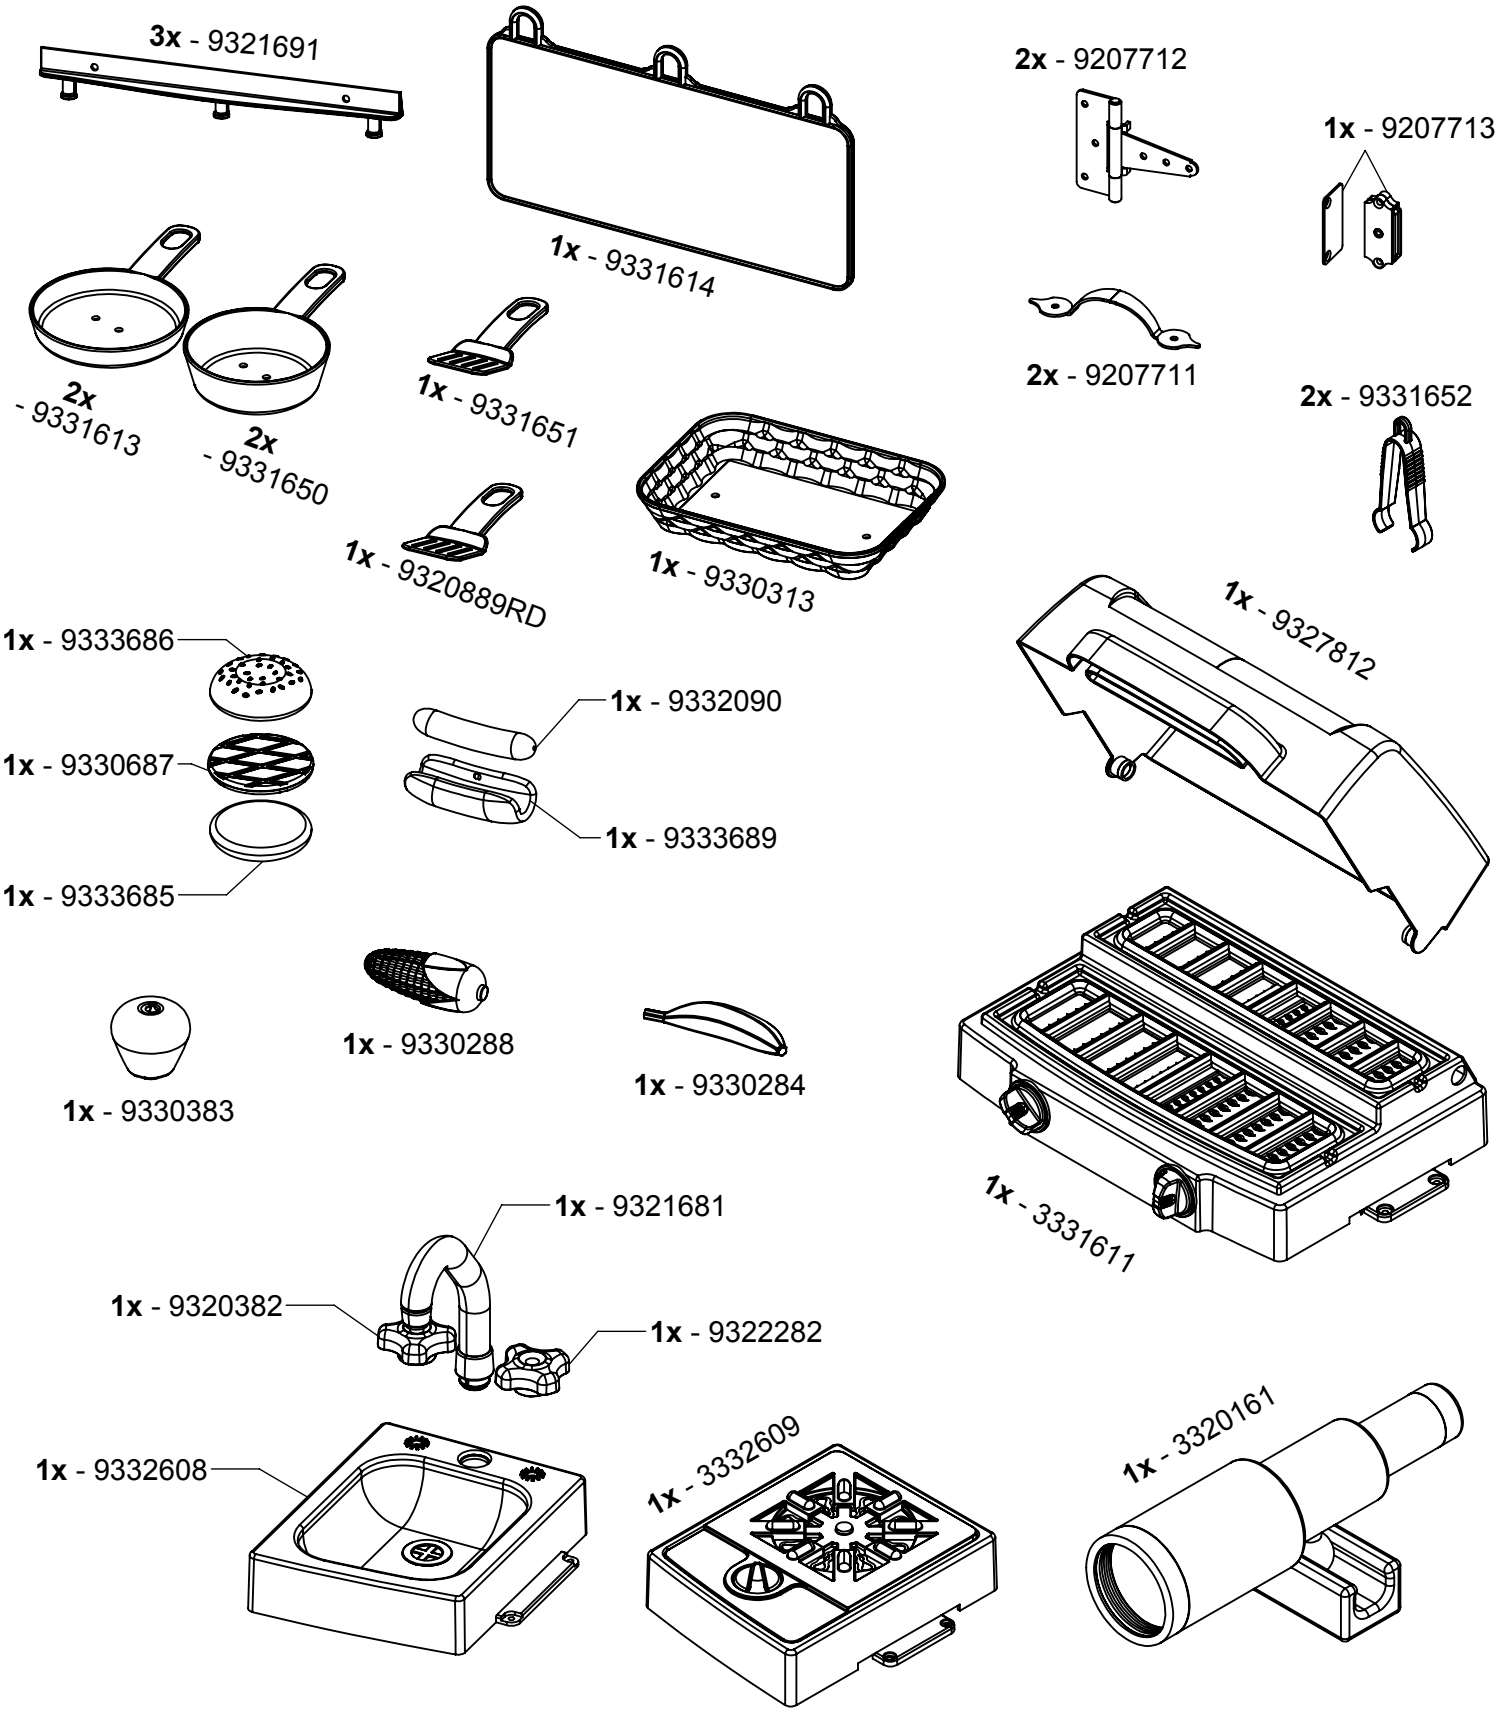

Part Identification (Reduced Part Size)

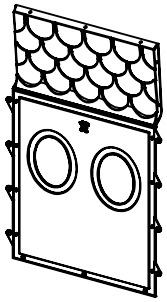



6x - 9330101

2x - 9200172


2x - 9200174

1x - 9320130

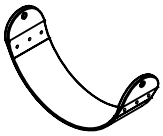

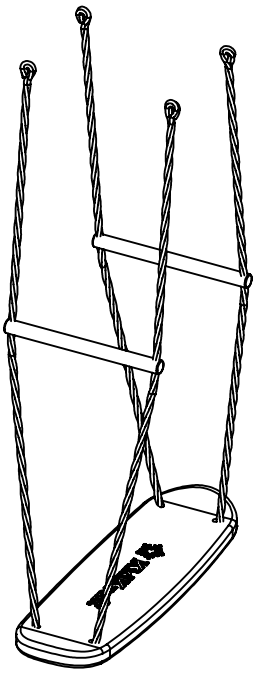


1x - 3330285

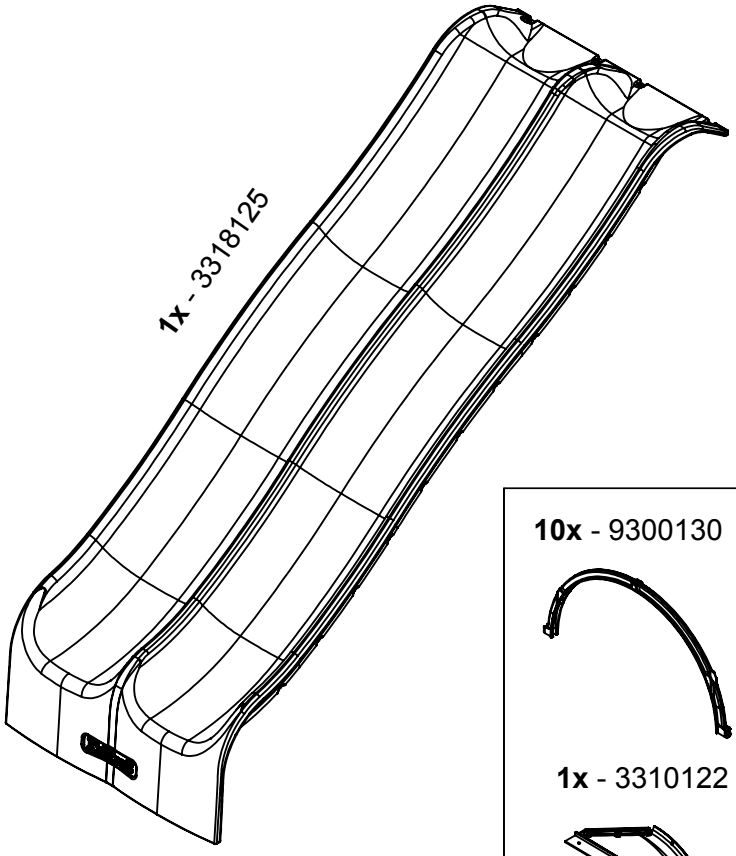

1x - 3318125


1x - 9200286



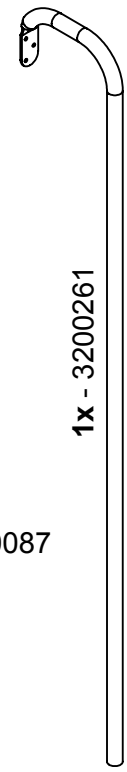


1x - 3200261

2x - 9200087




1x - 9200158




10x - 9300130


1x - 3310122

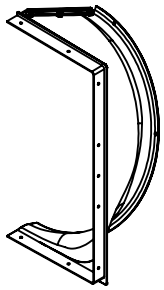


9x - 3310121

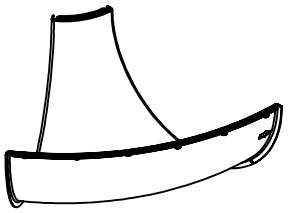


1x - 3310123

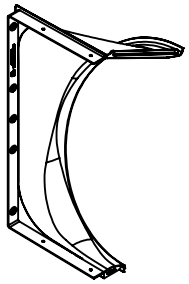

1x - 3310124

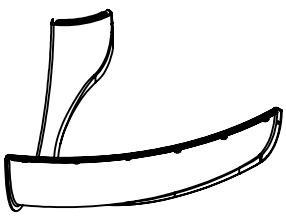

1x - 3310132

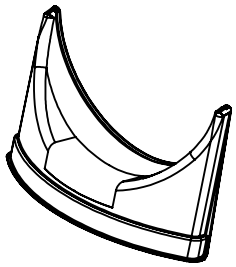


2x - (9200157)



30x - (53453202)





1x - (9200156)


31x - (54902200)



1x - (53452209)




1 Inventory Parts - Read This Before Starting Assembly

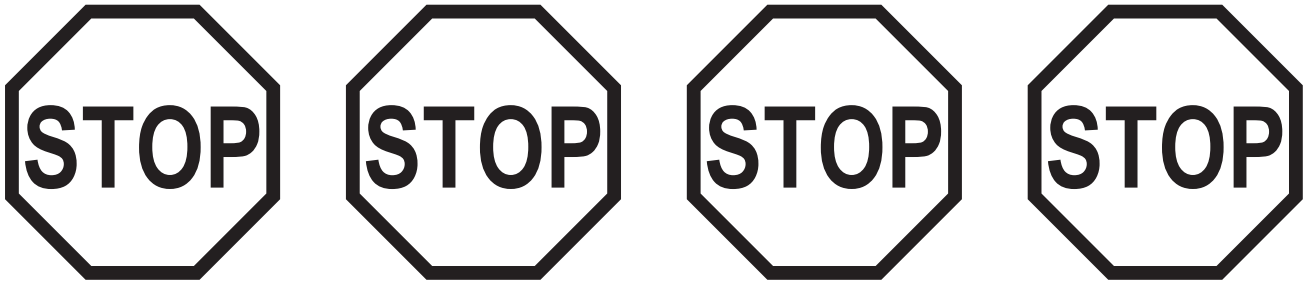

Inventory should be completed before starting installation. KidKraft will not cover costs of any additional installation trip due to missing or damaged pieces.

A. This is the time for you to inventory all your hardware, wood and accessories, referencing the parts identification sheets. This will assist you with your assembly.

• The wood pieces will have the key number stamped on the ends of the boards. Organize the wood pieces by step, as per the key numbering system below.

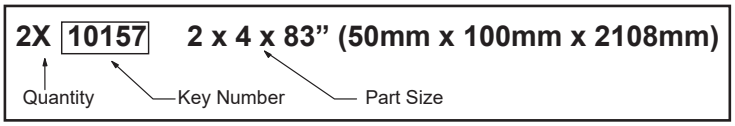

B. Read the assembly manual completely, paying special attention to EN71 and ASTM warnings; notes; and safety/maintenance information on pages 1 - 8.

If there are missing or damaged pieces, please contact the KidKraft Consumer Engagement team before going back to the retailer.

Order Replacement Parts 24/7


You can order replacement parts for this product 24 hours a day / 7 days a week:

Outdoor Swingsets and Playhouse Parts Ordering
https://parts.kidkraft.com/partsorderemail


If you have assembly or product questions, please refer to the front cover for direct contact information for our Consumer Engagement team OR you can also use this QR code with your smartphone for common questions and contact information.

KidKraft Help Center **https://kidkraft.zendesk.com/hc/en-us/**


2



Pre-drill holes using a 1/8 in drill bit.

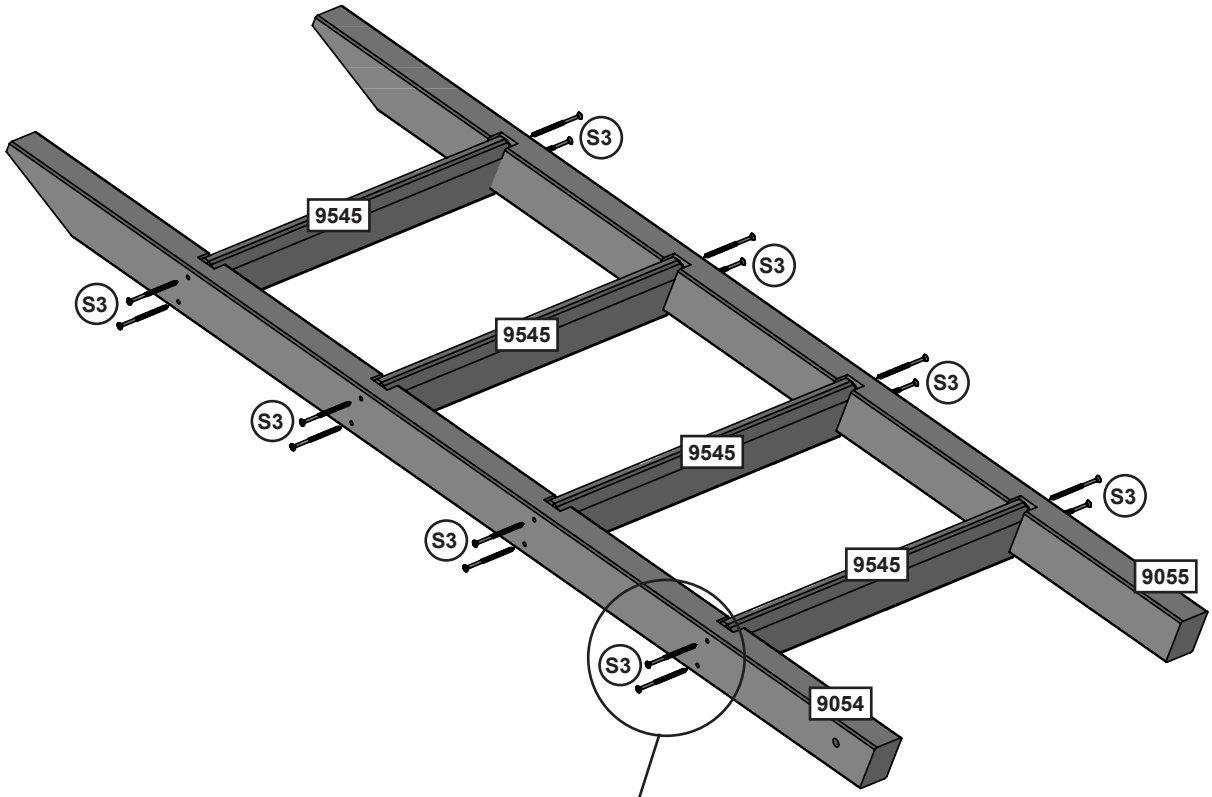

End View

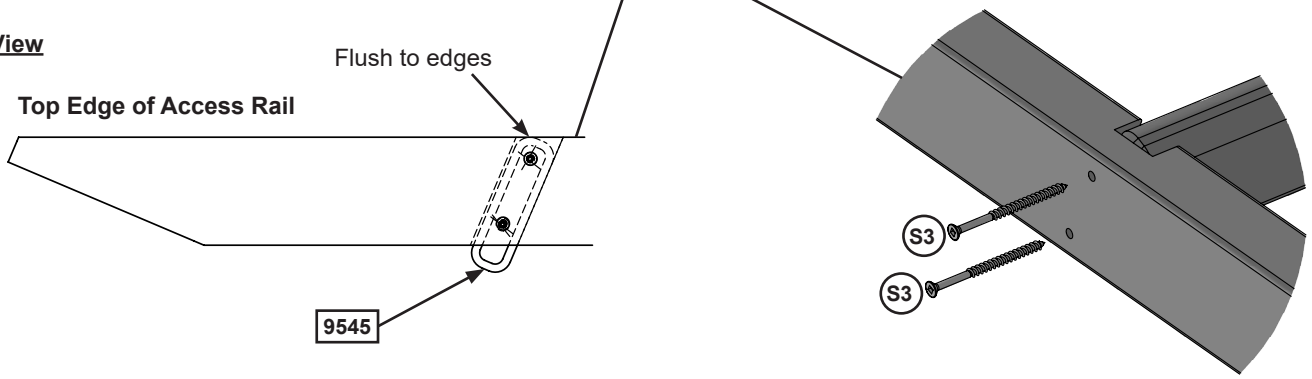


Wood Parts

1 x 9054 34.9 x 63.5 x 1468.8 mm (1 3/8 x 2 1/2 x 57 53/64 in)
1 x 9055 34.9 x 63.5 x 1468.8 mm (1 3/8 x 2 1/2 x 57 53/64 in)
4 x 9545 23.8 x 82.6 x 411.2 mm (15/16 x 3 1/4 x 16 3/16 in)

Hardware

16 x S3 #8 x 63.5mm (#8 x 2-1/2 in)

3

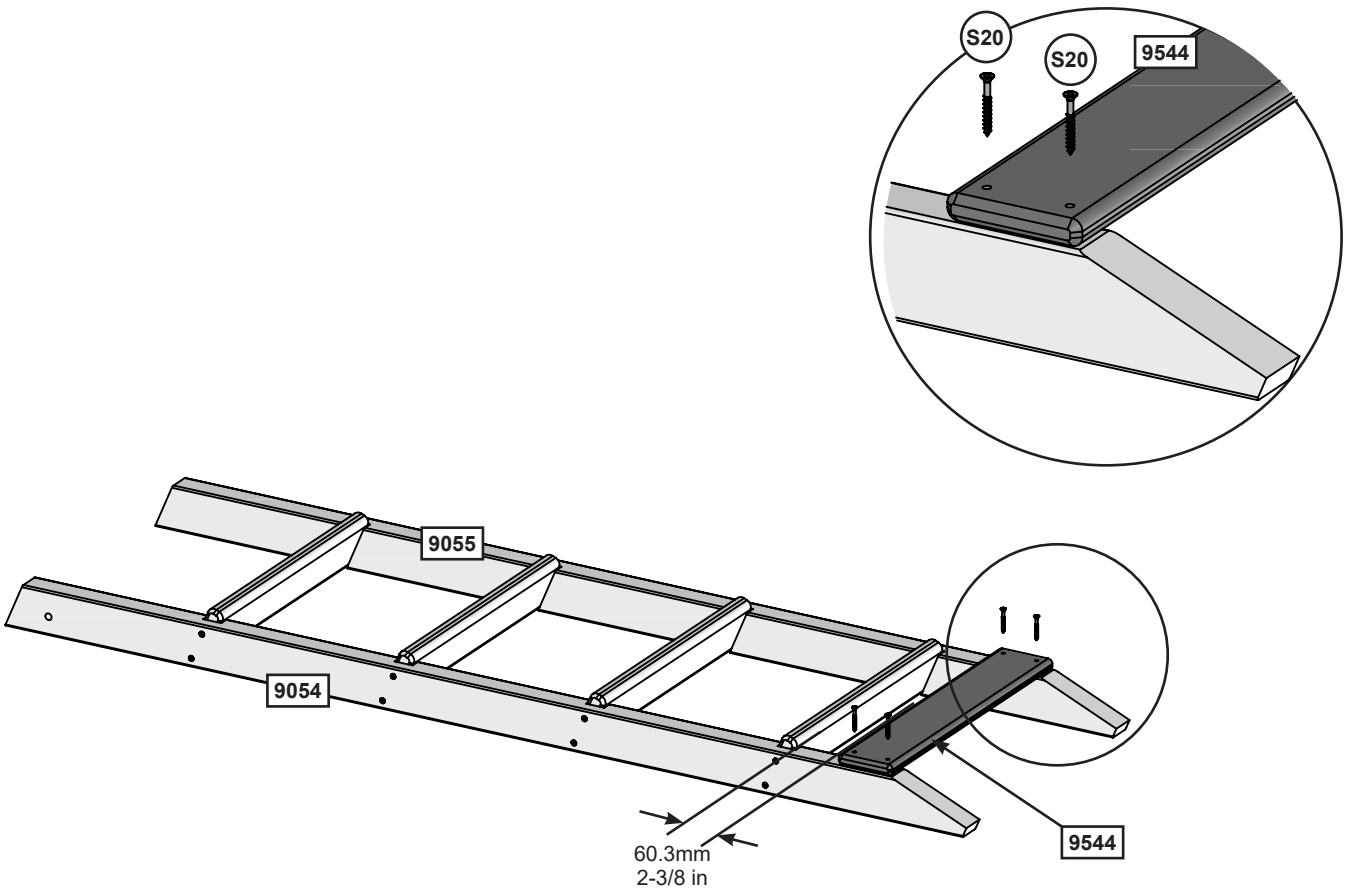

Wood Parts

1 x [9544] 15.9 x 82.6 x 449.3 mm (5/8 x 3 1/4 x 17 11/16 in)


Hardware


4 x (S20) #8 x 34.9mm (#8 x 1-3/8 in)

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

4

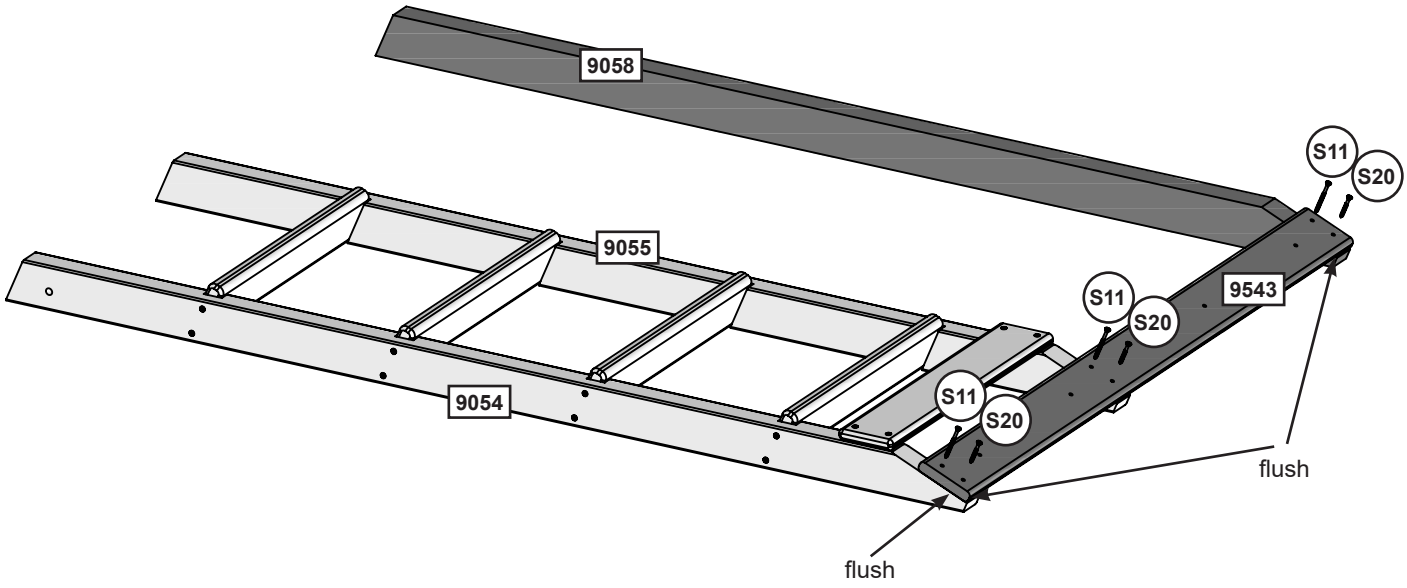

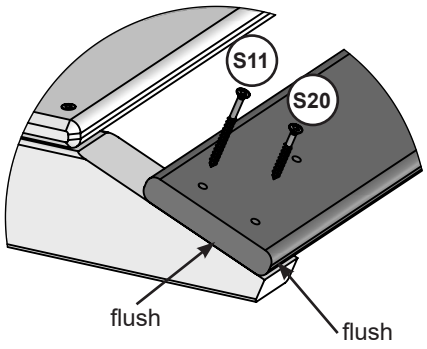

Wood Parts


1 x 9058 34.9 x 63.5 x 1468.8 mm (1 3/8 x 2 1/2 x 57 53/64 in)
1 x 9543 15.9 x 82.6 x 1033.5 mm (5/8 x 3 1/4 x 40 11/16 in)

Hardware

3 x S11 #8 x 50.8mm (#8 x 2 in)
3 x S20 #8 x 34.9mm (#8 x 1-3/8 in)

5

Pre-drill holes using a 1/8 in drill bit.

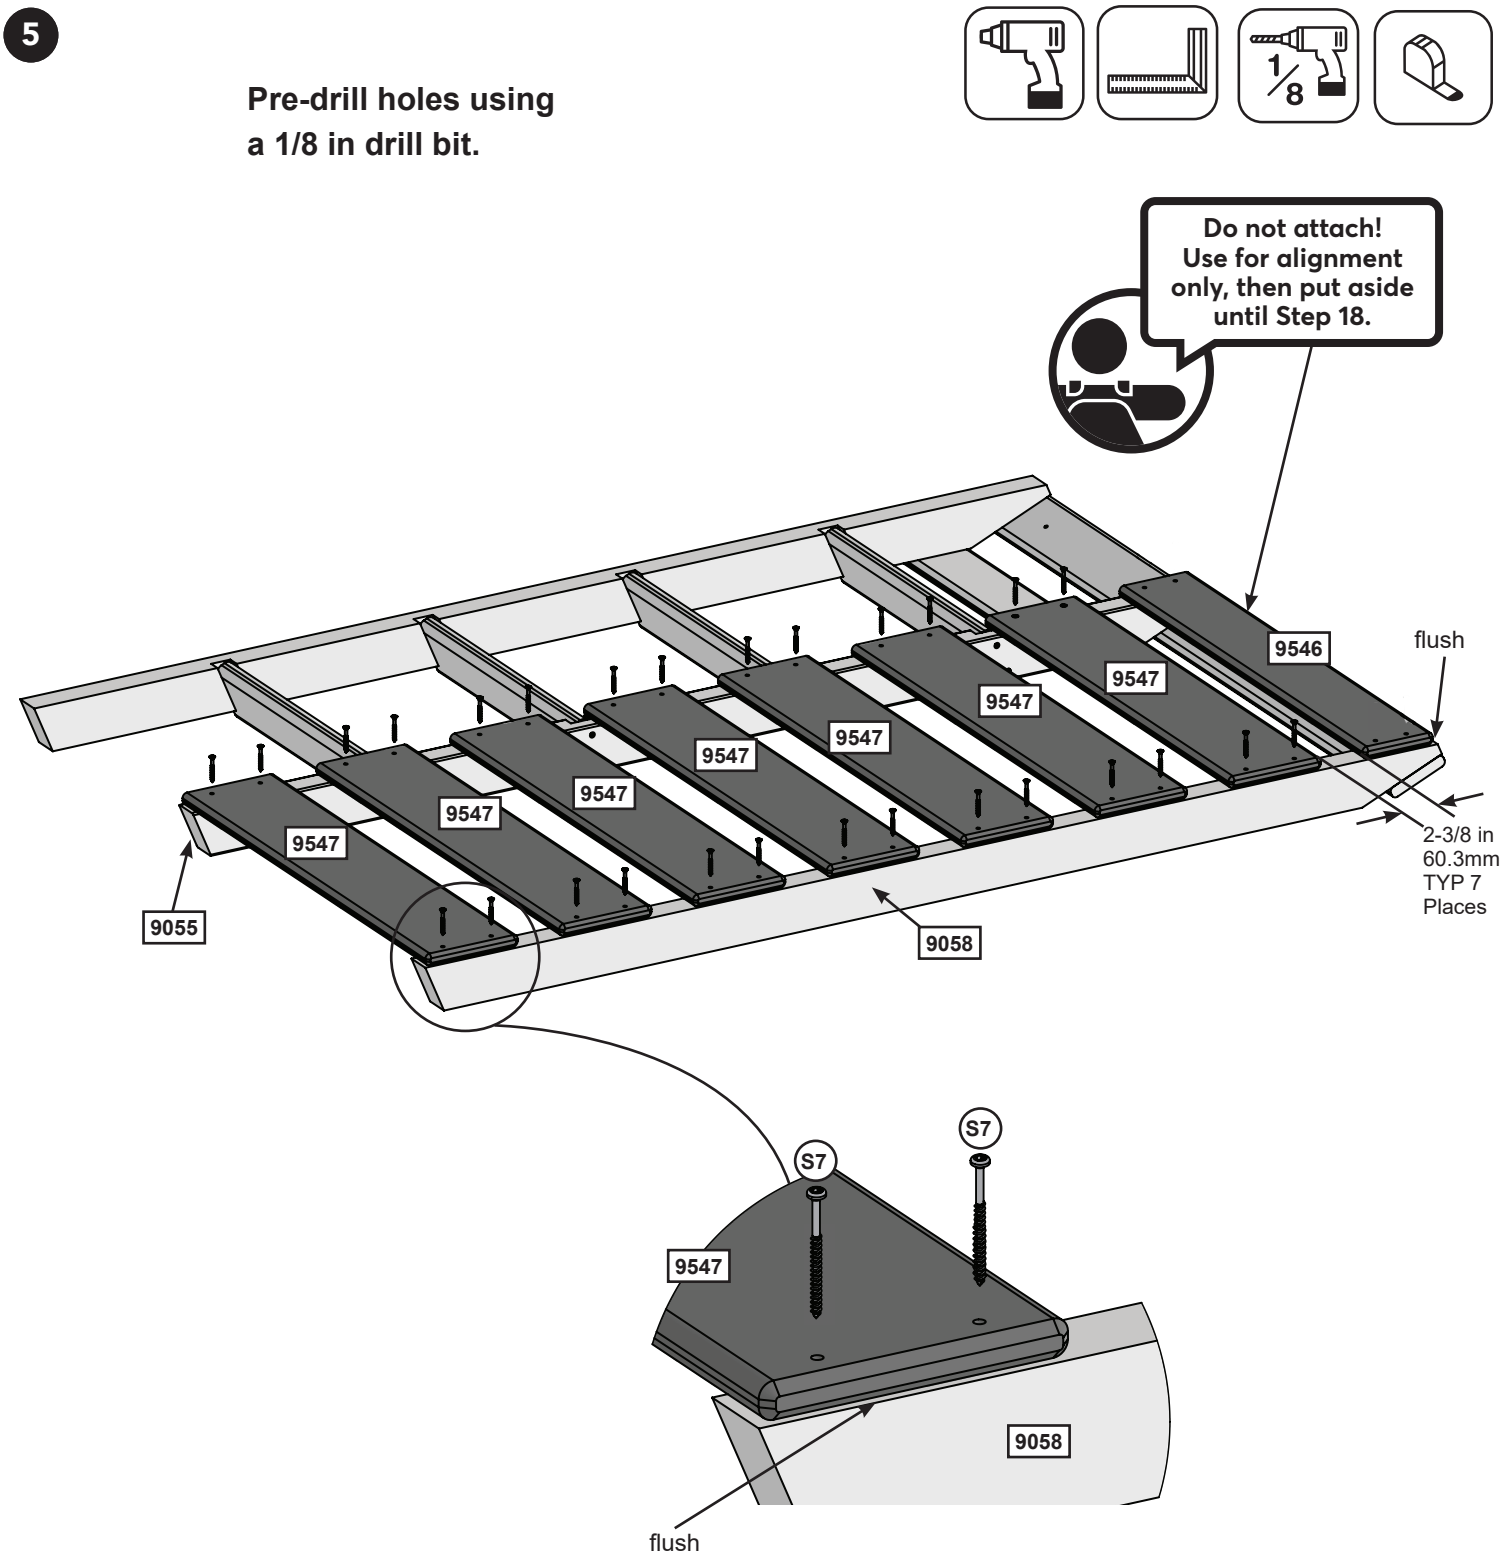

SET THE ROCK WALL LADDER ASSEMBLY ASIDE UNTIL STEP 16.

Wood Parts

7 x [9547] 15.9 x 133.4 x 617 mm (5/8 x 5 1/4 x 24 5/16 in)
1 x [9546] 15.9 x 101.6 x 617 mm (5/8 x 4 x 24 5/16 in)

Hardware


28 x (S7) #12 x 50.8mm (#12 x 2 in)

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

6 Straight Slide Fort

Note: Structure partly removed for clarity.

Pre-drill holes using a 3/16” drill bit.

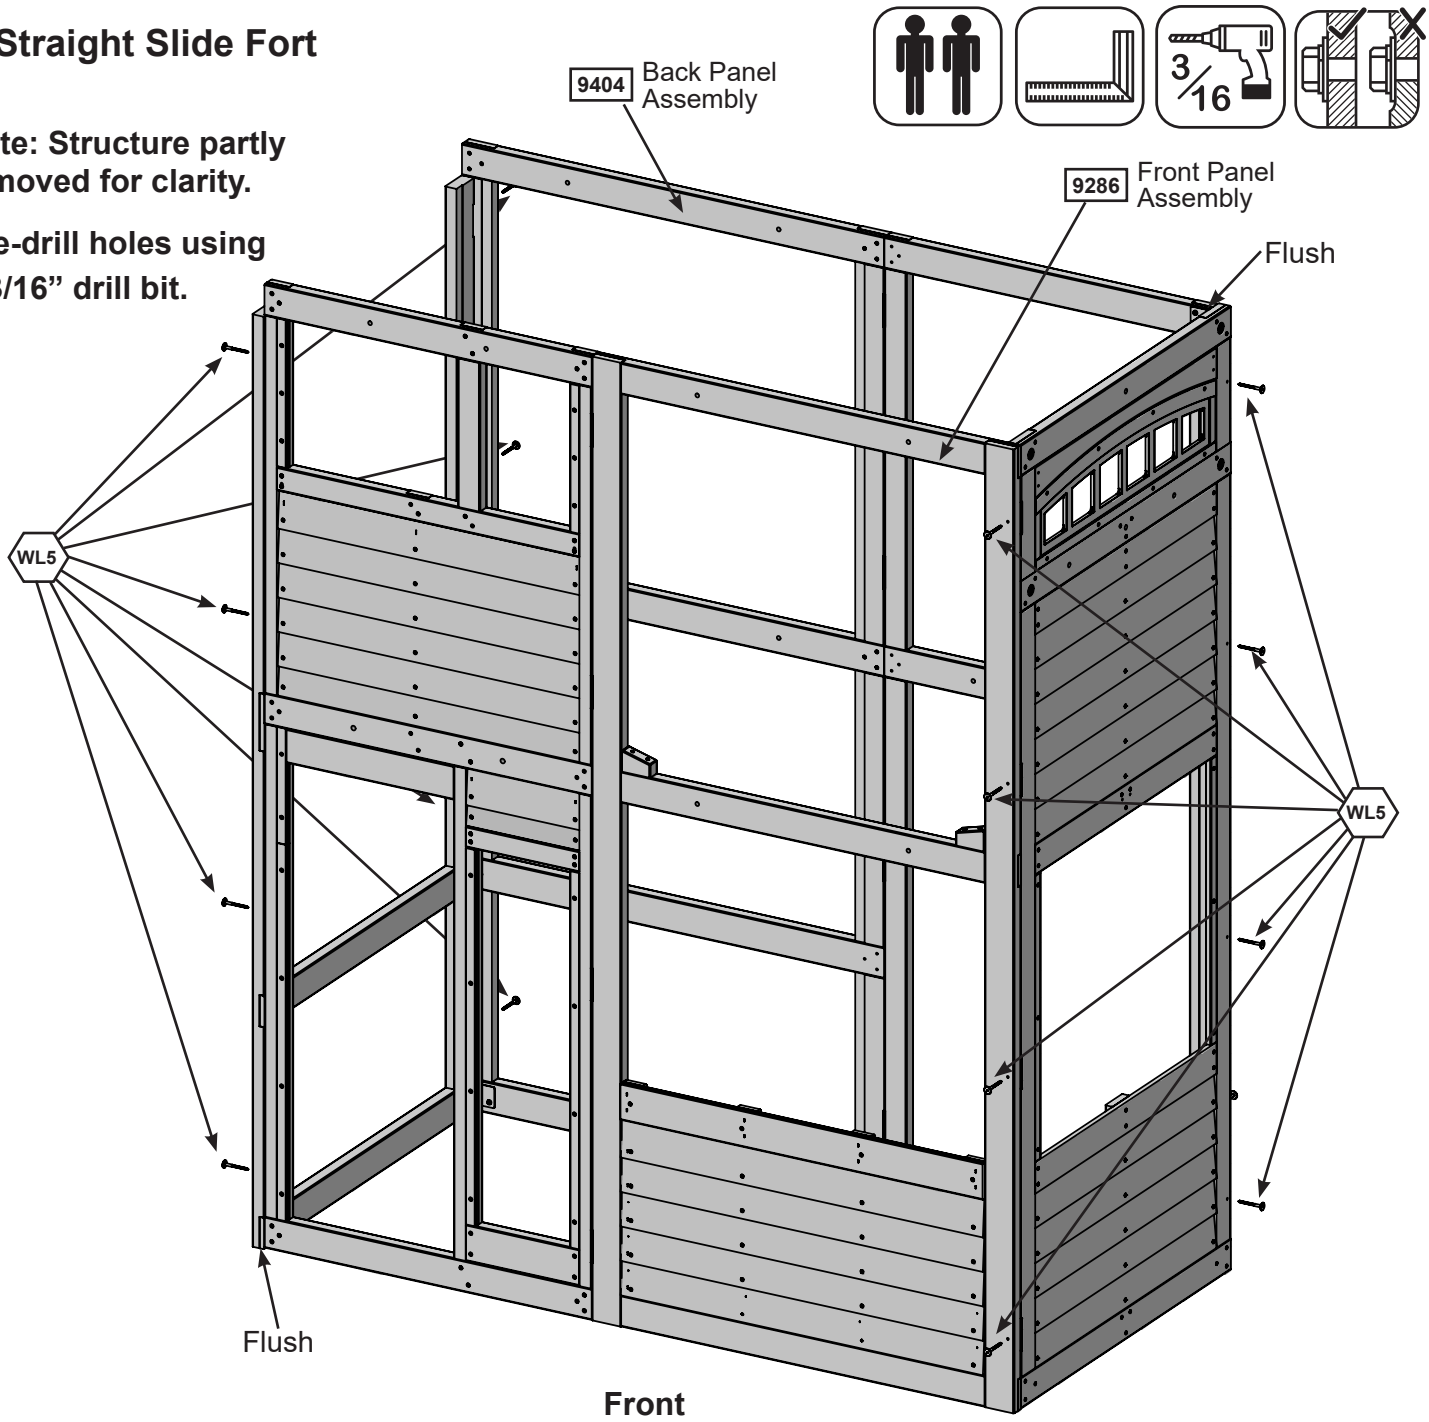

Front

Wood Parts


1 x 9404 95.4 x 1092.2 x 2336.8 mm (3 3/4 x 43 x 92 in)


1 x 9286 95.4 x 1092.2 x 2336.8 mm (3 3/4 x 43 x 92 in)

Hardware

16 x WL5 6.4mm x 63.5 mm (1/4 x 2-1/2 in)

7

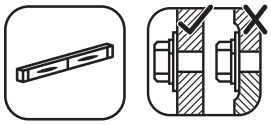

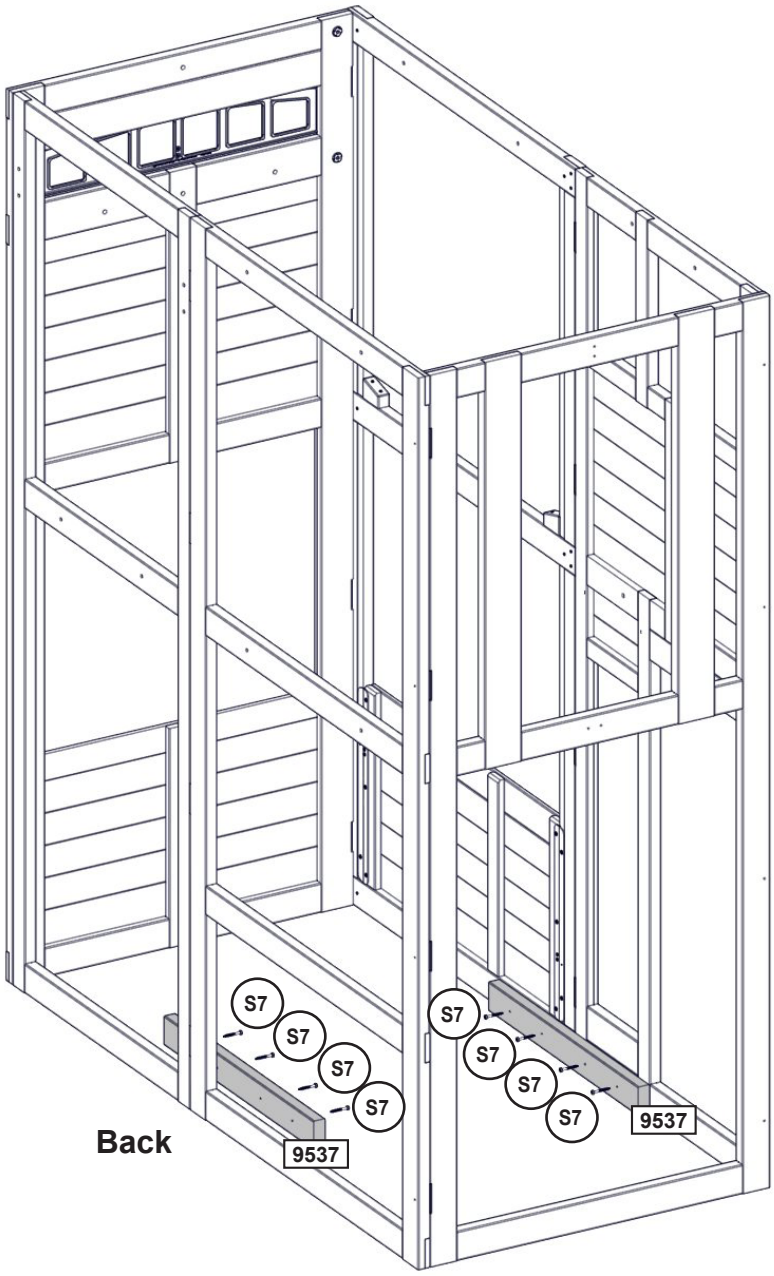

Wood Parts

2 x 9537 31.8 x 76.2 x 714.8 mm (1 1/4 x 3 x 28 1/8 in)


Hardware

8 x S7 #12 x 50.8mm (#12 x 2 in)

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu


8

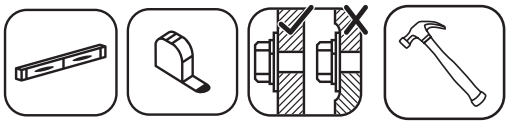


Assemble T-Nuts first with hammer!

Note: Structure partly removed for clarity.

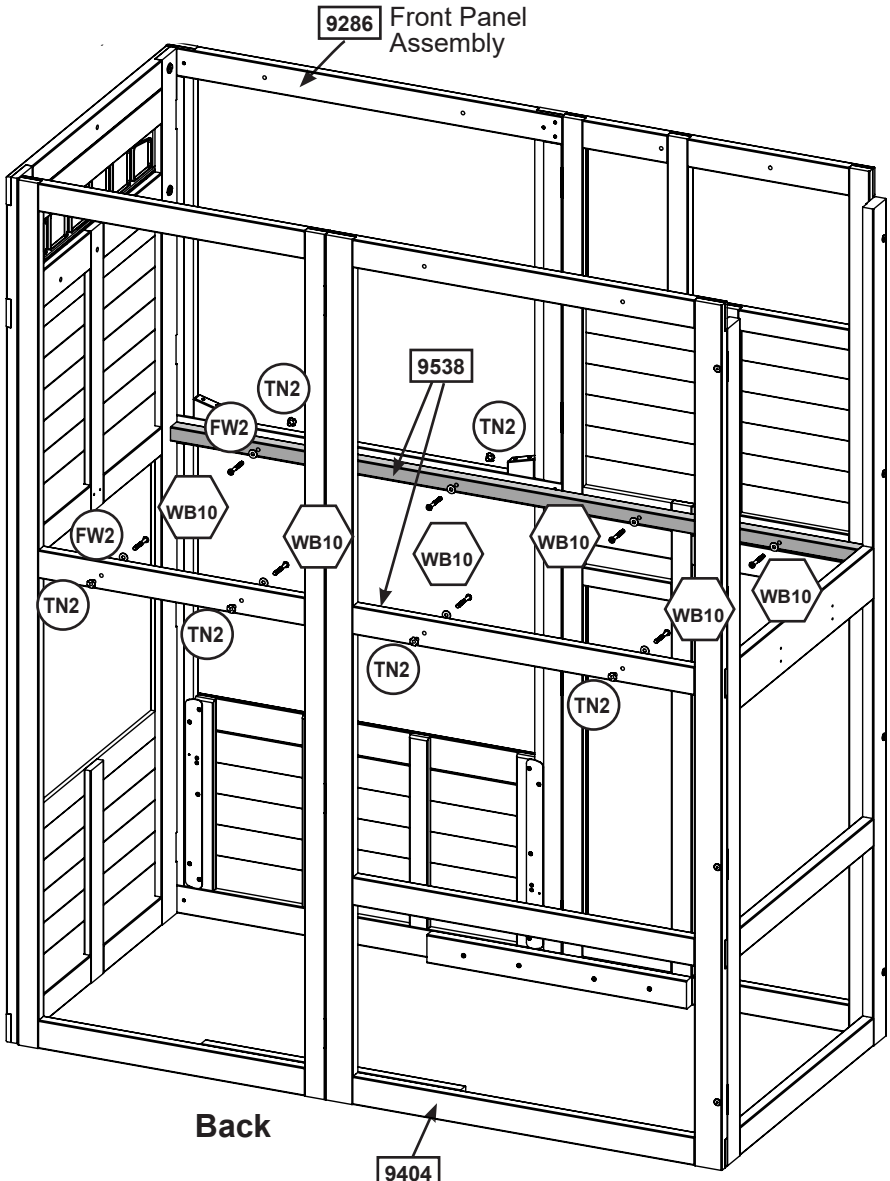

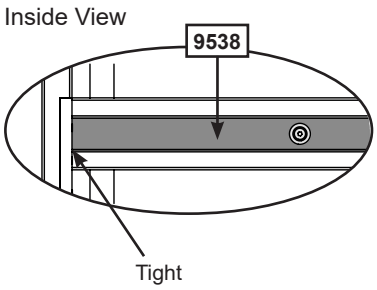

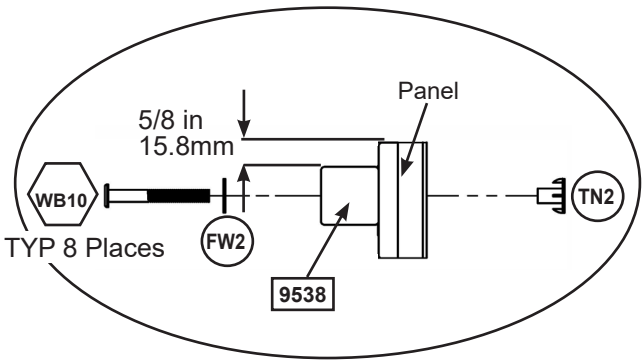

Wood Parts


2 x 9538 38.1 x 38.1 x 1902 mm (1 1/2 x 1 1/2 x 74 7/8 in)


Hardware

8 x WB10 7.9mm x 66.6 mm (5/16 x 2-5/8 in)(FW2, TN2)

9

Note: Structure partly removed for clarity.

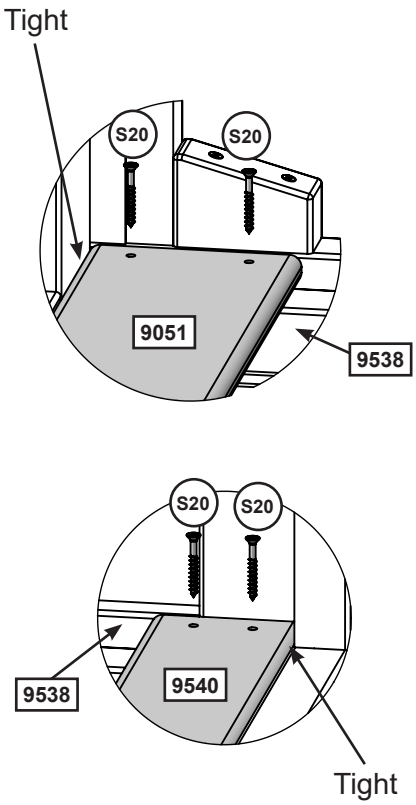

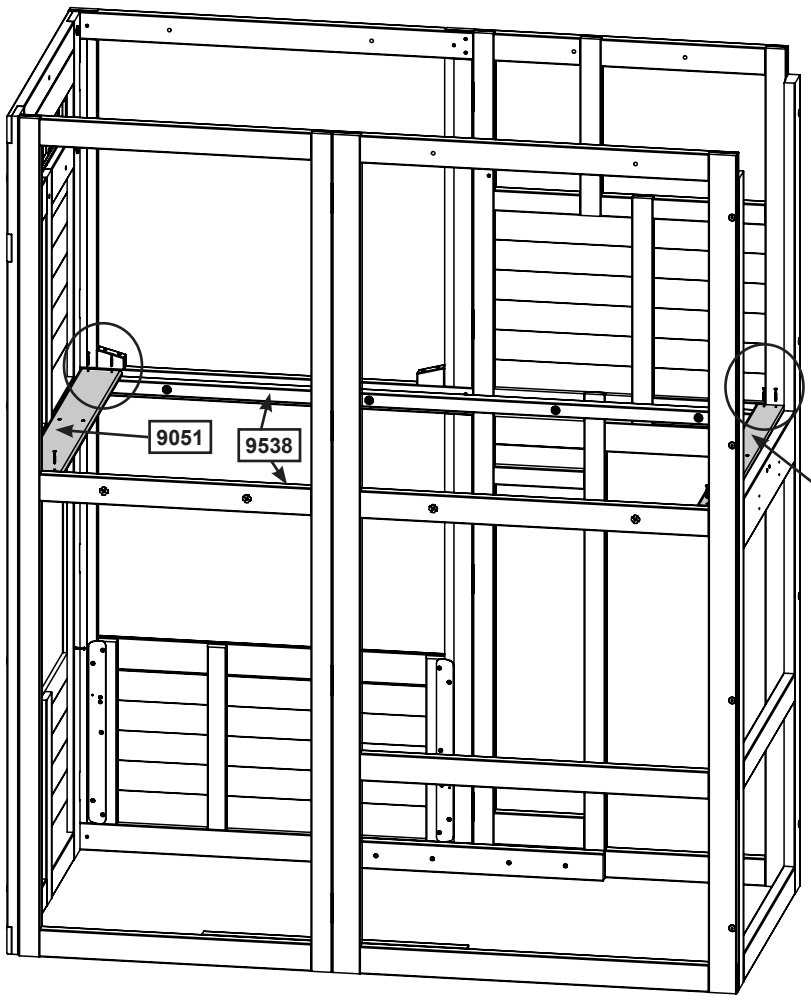

Tunnel Side

Back

Wood Parts

1 x [9540] 15.9 x 82.6 x 904.9 mm (5/8 x 3 1/4 x 35 5/8 in)

1 x [9051] 15.9 x 114.3 x 904.9 mm (5/8 x 4 1/2 x 35 5/8 in)

Hardware


8 x (S20) #8 x 34.9mm (#8 x 1-3/8 in)


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

10

Note: (9542) tight to the bottom of floor board (9051) and (9540).

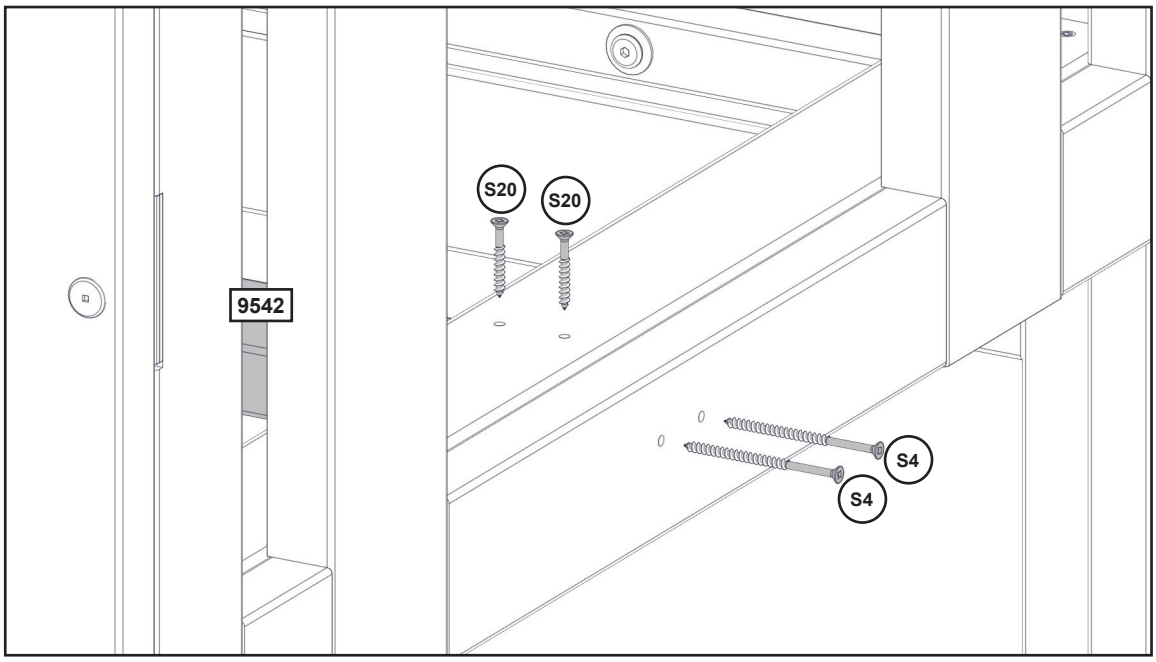

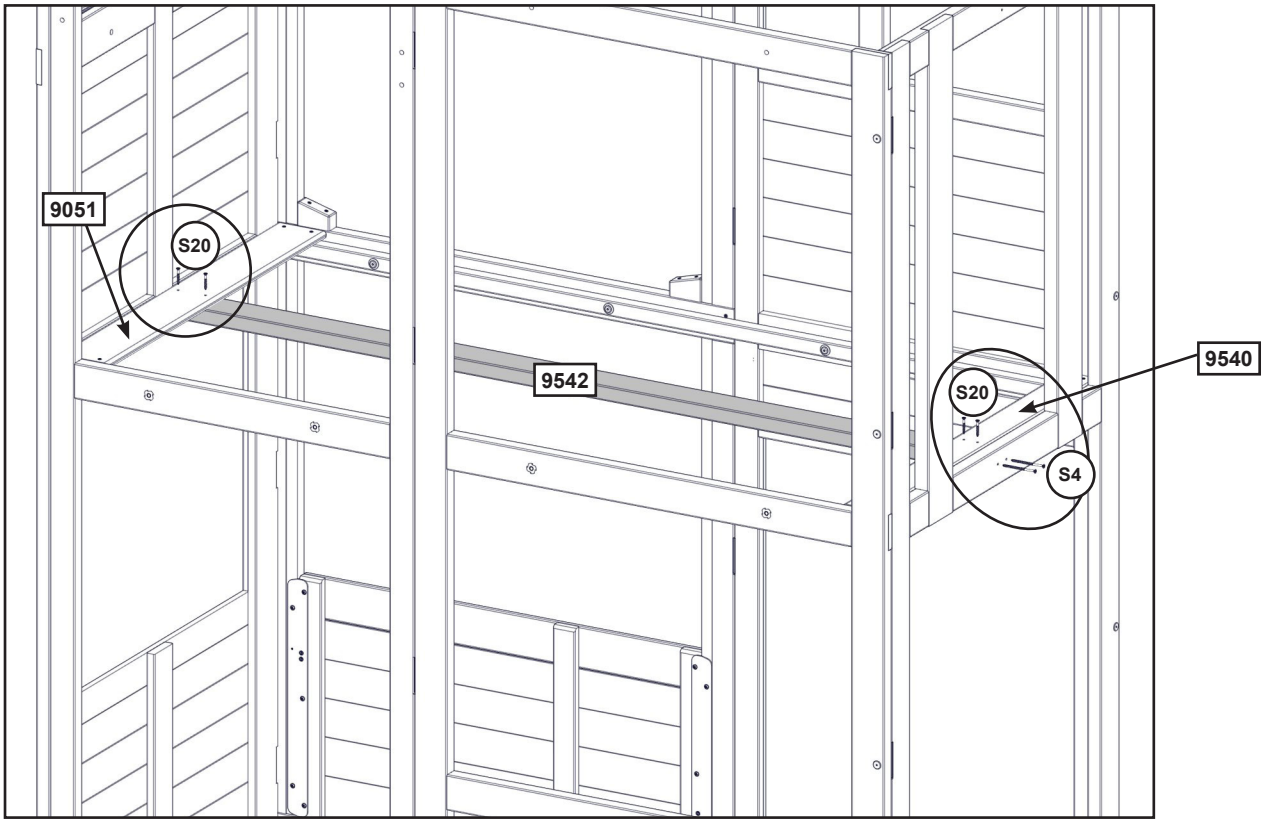

Wood Parts

1 x 9542 31.8 x 76.2 x 1906 mm (1 1/4 x 3 x 75 1/16 in)


Hardware


4 x S4 #8 x 76.2mm (#8 x 3 in)

4 x S20 #8 x 34.9mm (#8 x 1-3/8 in)

11

Note: Structure partly removed for clarity.

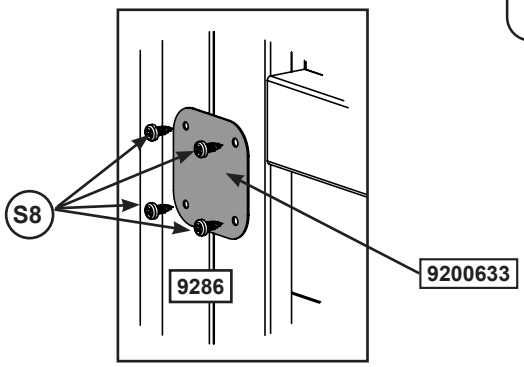

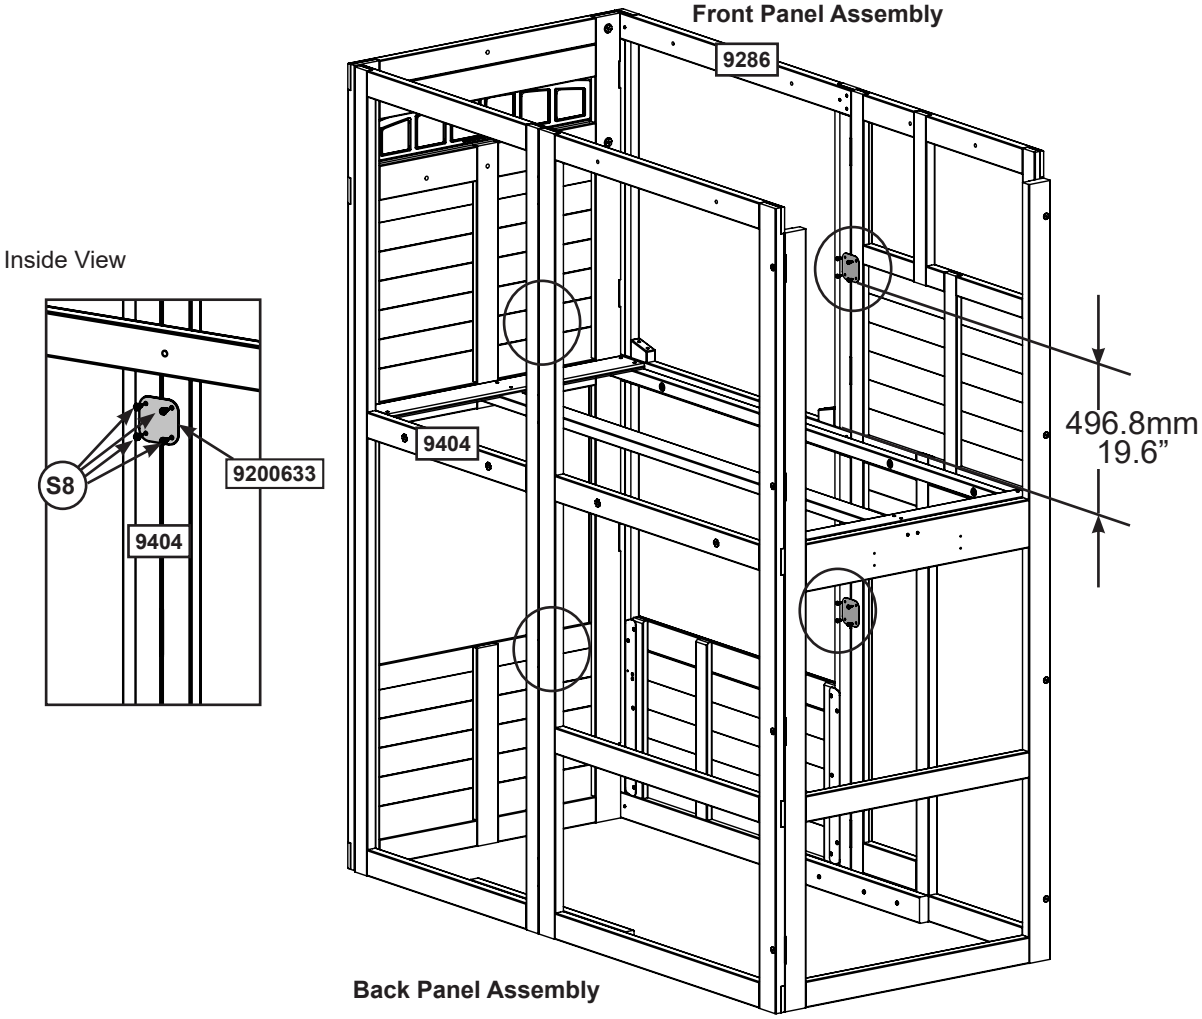

Hardware


16 x (S8) #12 x 19mm (#12 x 3/4 in)

Other Parts


4 x 9200633

12

Note: Structure partly removed for clarity.

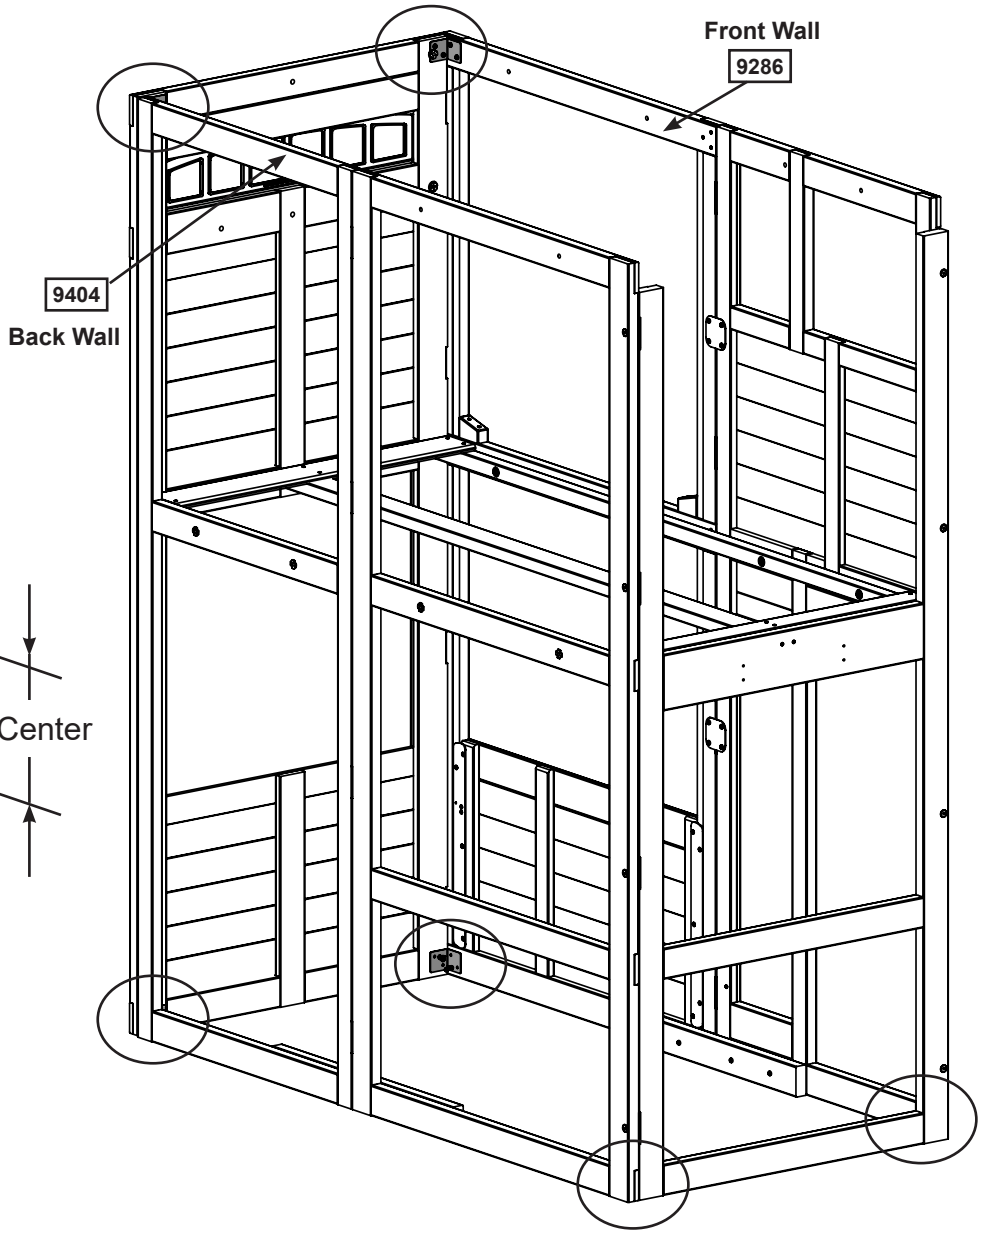

Inside View

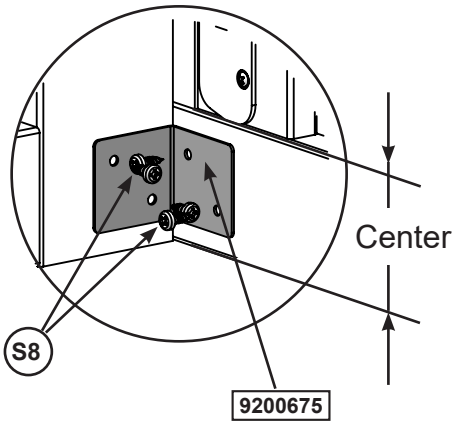

Hardware

24 x (S8) #12 x 19mm (#12 x 3/4 in)


Other Parts


6 x 9200675

13

Note: Structure partly removed for clarity.



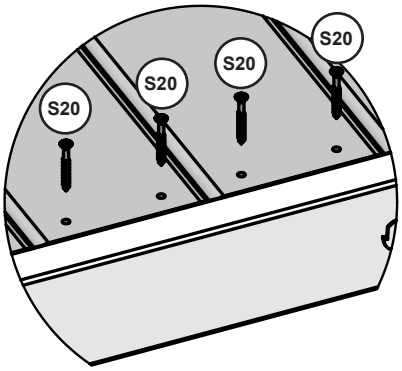

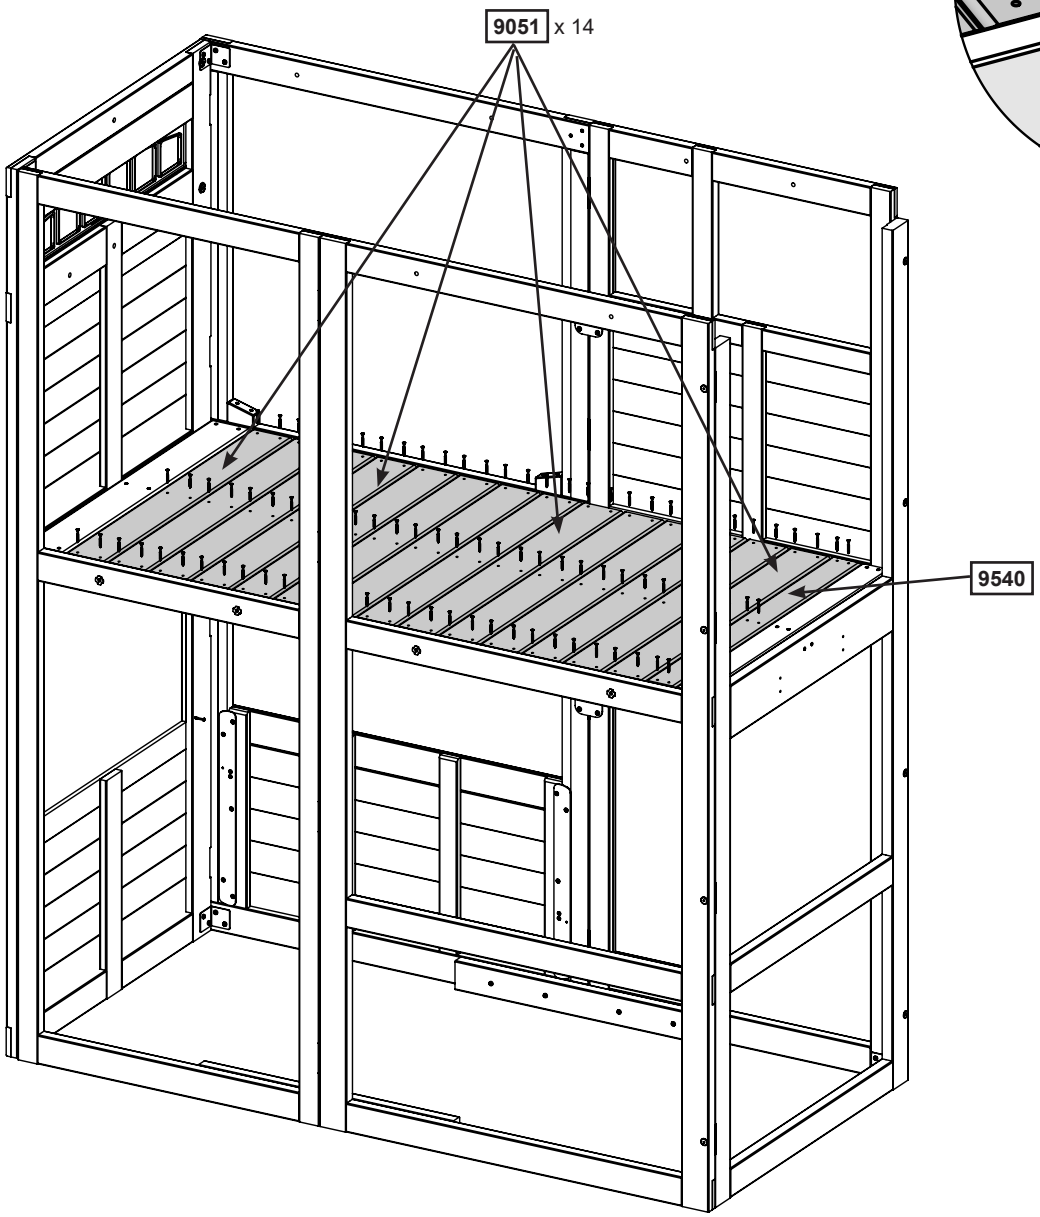

Wood Parts

14 x 9051 15.9 x 114.3 x 904.9 mm (1 x 4 1/2 x 35 5/8 in)


1 x 9540 15.9 x 82.6 x 904.9 mm (1 x 3 1/4 x 35 5/8 in)

Hardware


90 x S20 #8 x 34.9mm (#8 x 1-3/8 in)

14

Note: Structure partly removed for clarity.

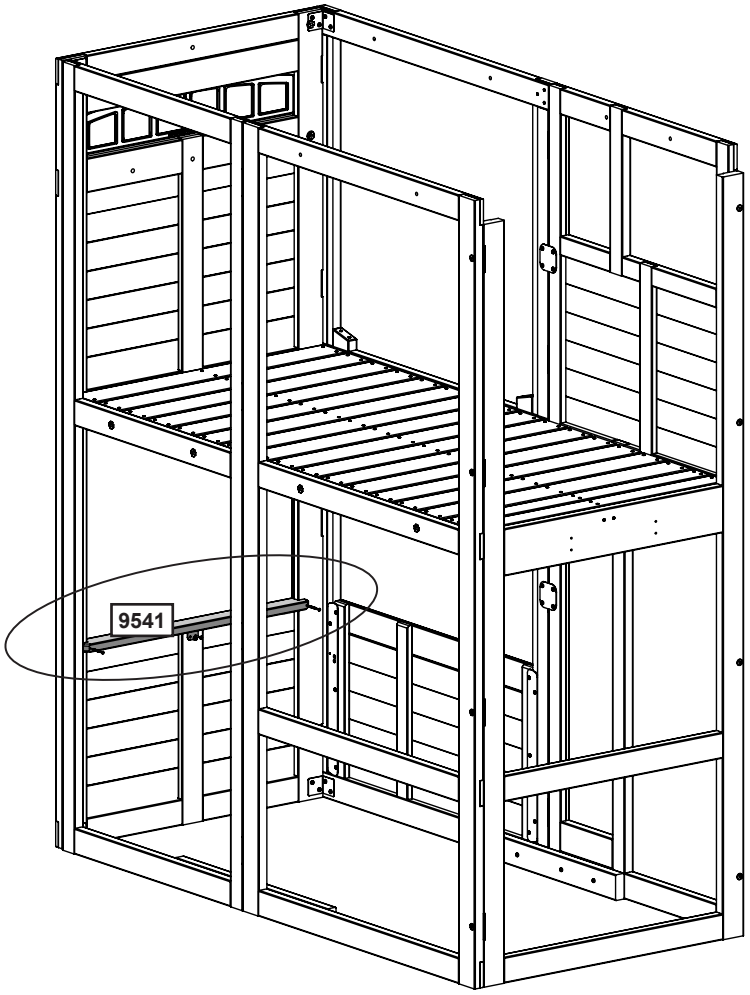

Inside View

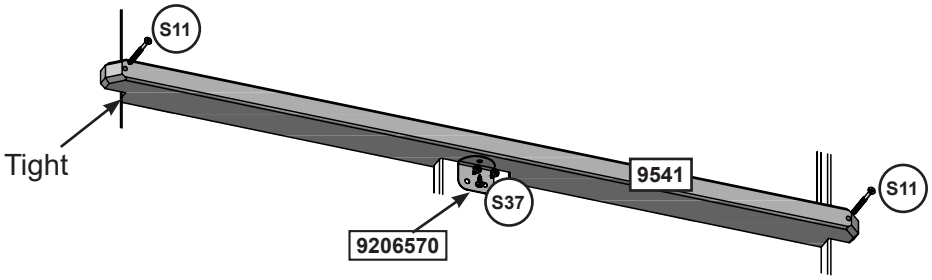

Wood Parts

1 x 9541 23.8 x 57.2 x 813 mm (15/16 x 2 1/4 x 32 in)

Hardware

2 x S11 #8 x 50.8mm (#8 x 2 in)

3 x S37 #7 x 15.9mm (#7 x 5/8 in)

Other Parts


1 x 9206570


15

Assemble T-Nuts first with hammer!

Pre-drill holes using a 3/16” drill bit.

Note: Structure partly removed for clarity.

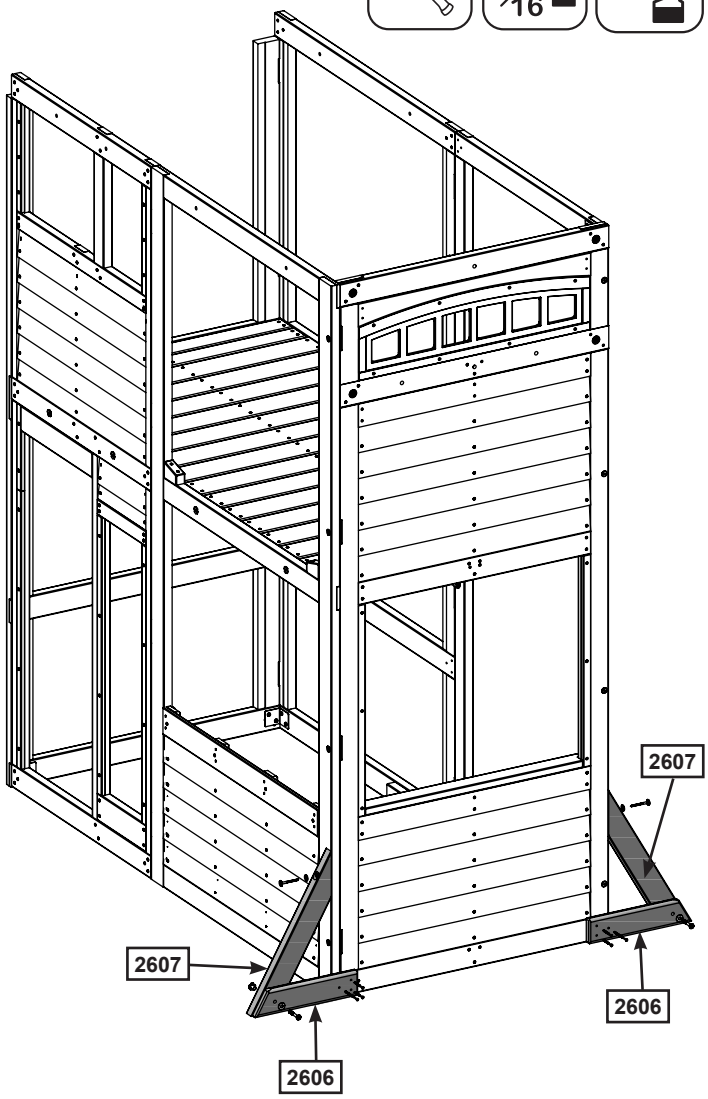

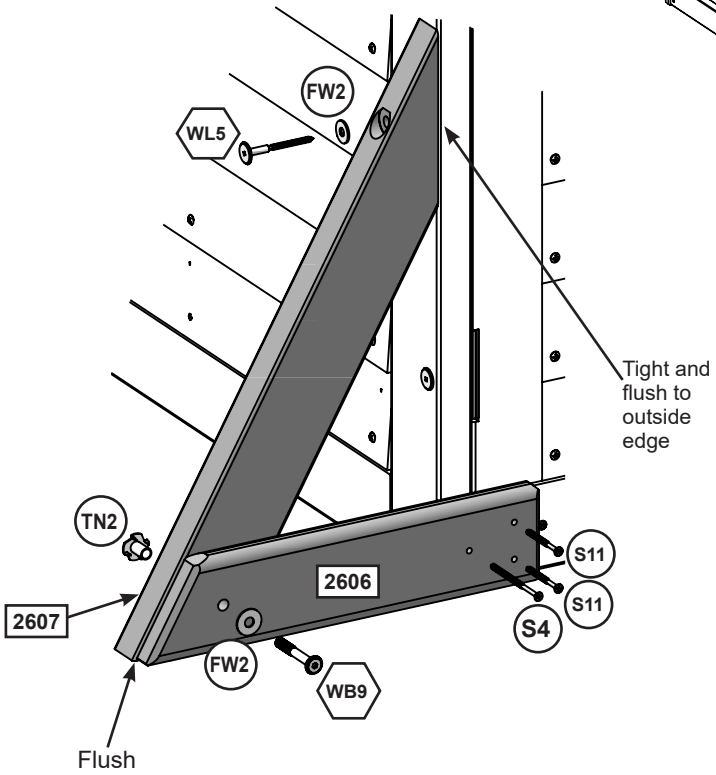

Wood Parts

2 x 2606 23.8 x 82.6 x 362 mm (15/16 x 3 1/4 x 14 1/4 in)

2 x 2607 31.8 x 76.2 x 558.8 mm (1 1/4 x 3 x 22 in)

Hardware

2 x WB9 7.9mm x 54 mm (5/16 x 2-1/8 in)(FW2, TN2)

2 x WL5 6.4mm x 63.5 mm (1/4 x 2-1/2 in)(FW2)


2 x S4 #8 x 76.2mm (#8 x 3 in)

4 x S11 #8 x 50.8mm (#8 x 2 in)

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu


16

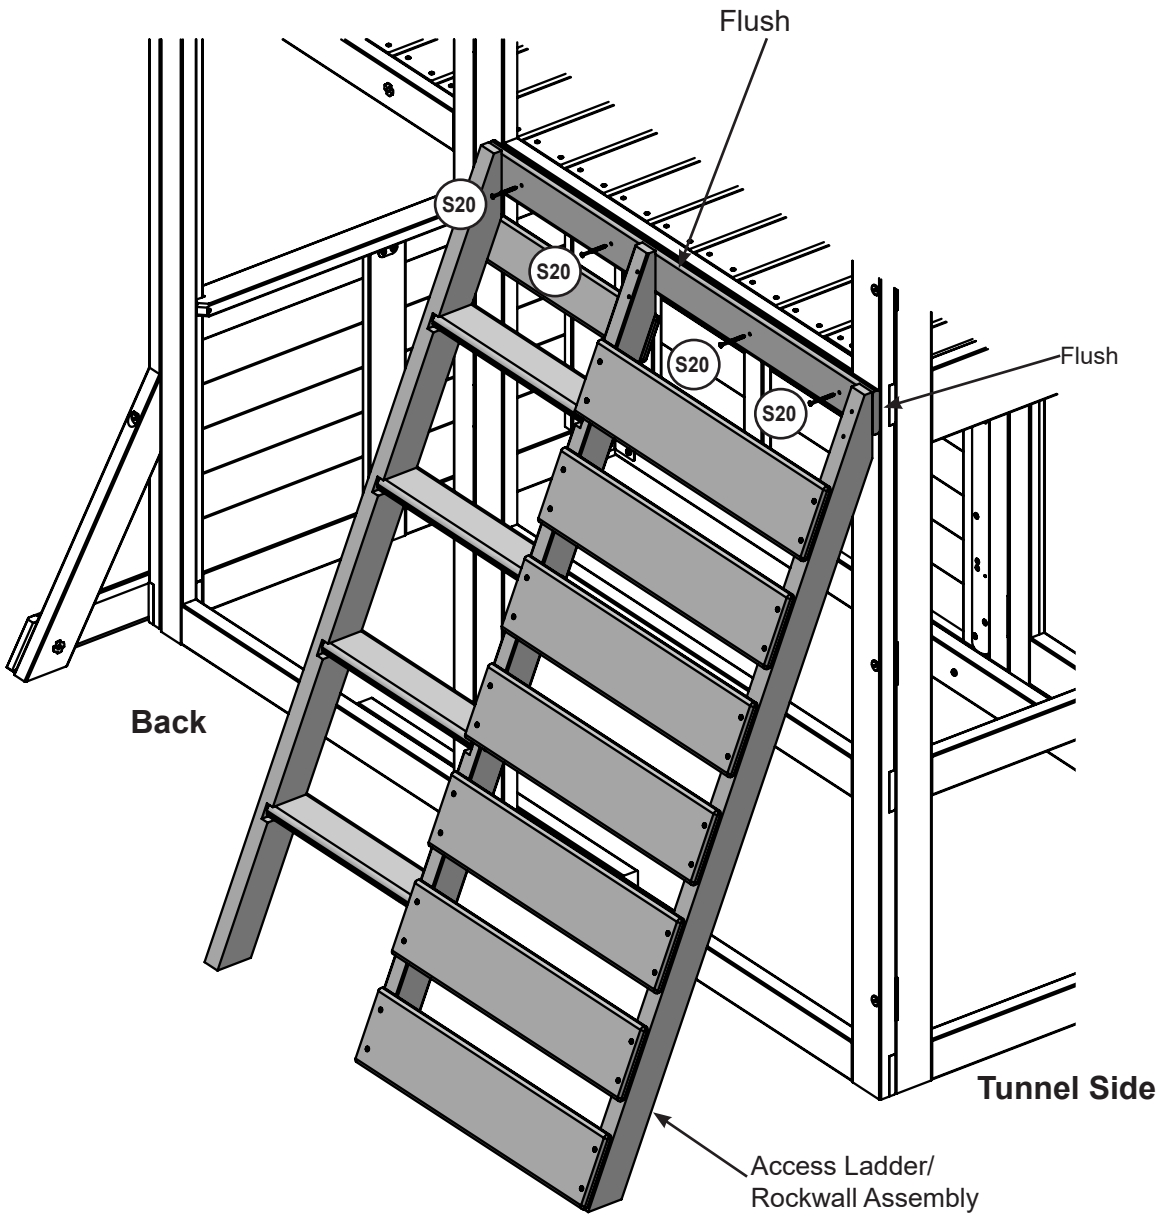


Hardware

4 x (S20) #8 x 34.9mm (#8 x 1-3/8 in)

17

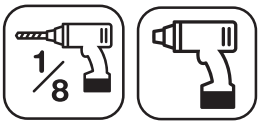

Pre-drill holes using a 1/8” drill bit.

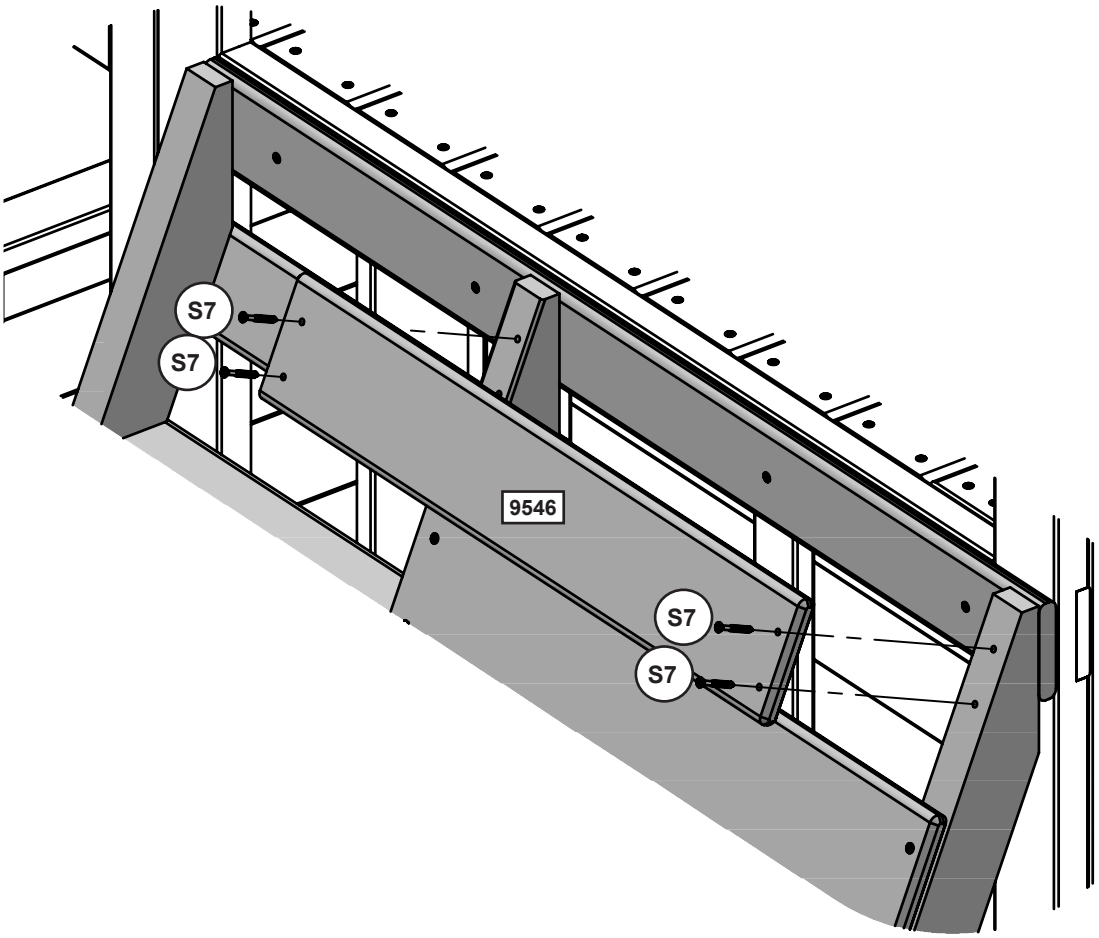


Hardware

4 x (S7) #12 x 50.8mm (#12 x 2 in)


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

18

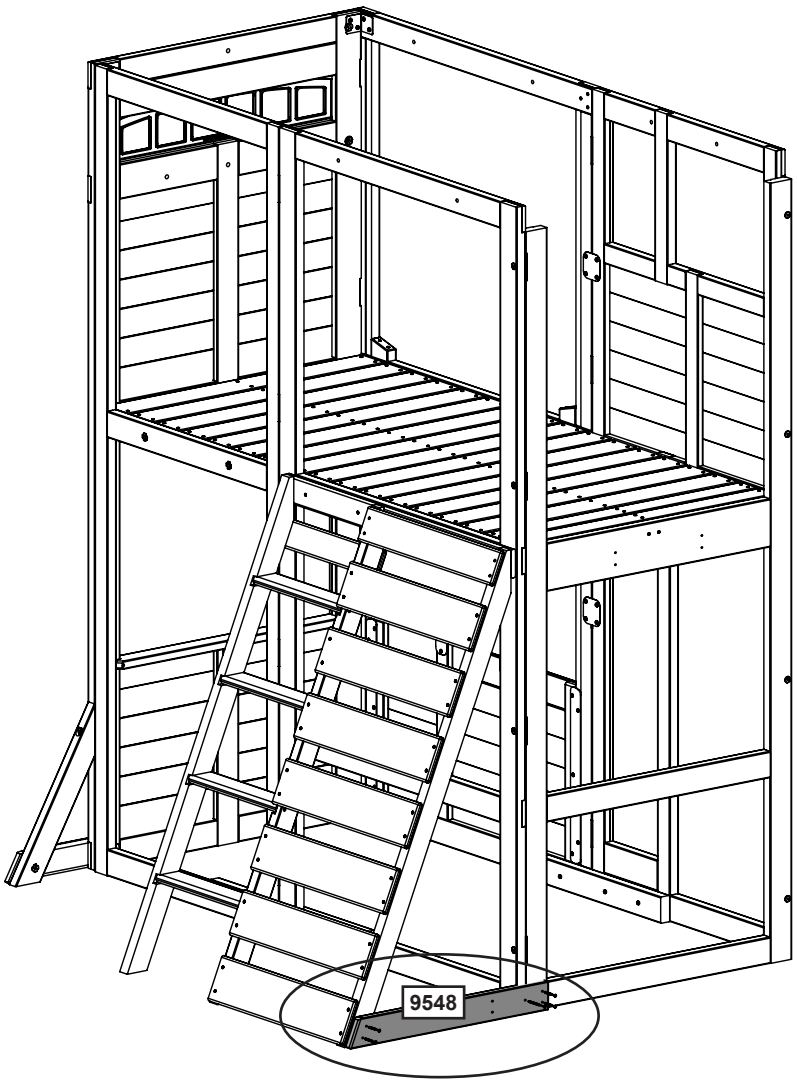

Note: Structure partly removed for clarity.

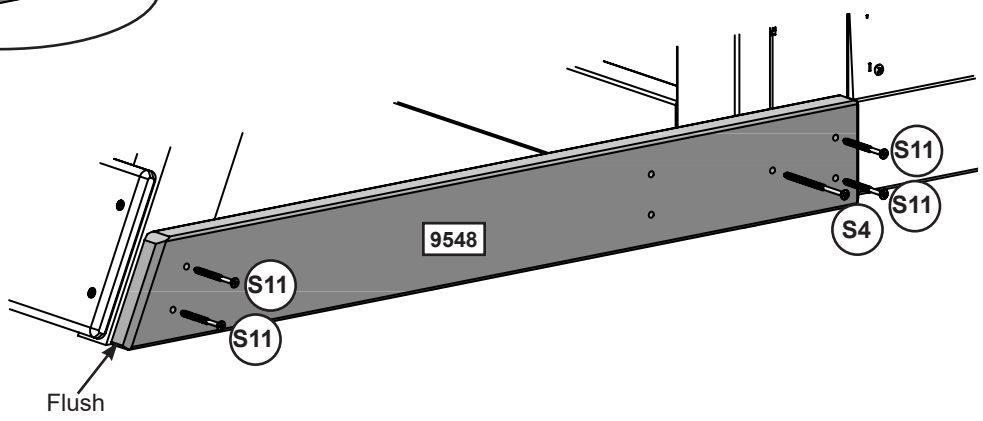

Wood Parts

1 x 9548 23.8 x 82.6 x 704.9 mm (15/16 x 3 1/4 x 27 3/4 in)

Hardware


4 x S11 #8 x 50.8mm (#8 x 2 in)


1 x S4 #8 x 76.2mm (#8 x 3 in)


19

Pre-drill holes using a 3/16 in drill bit.



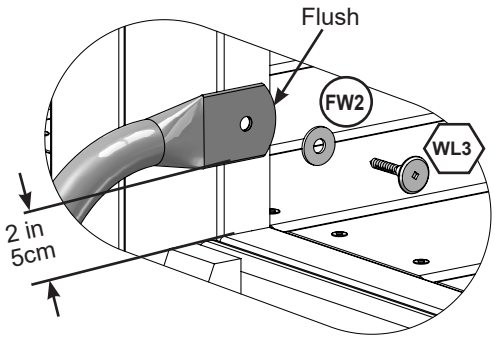

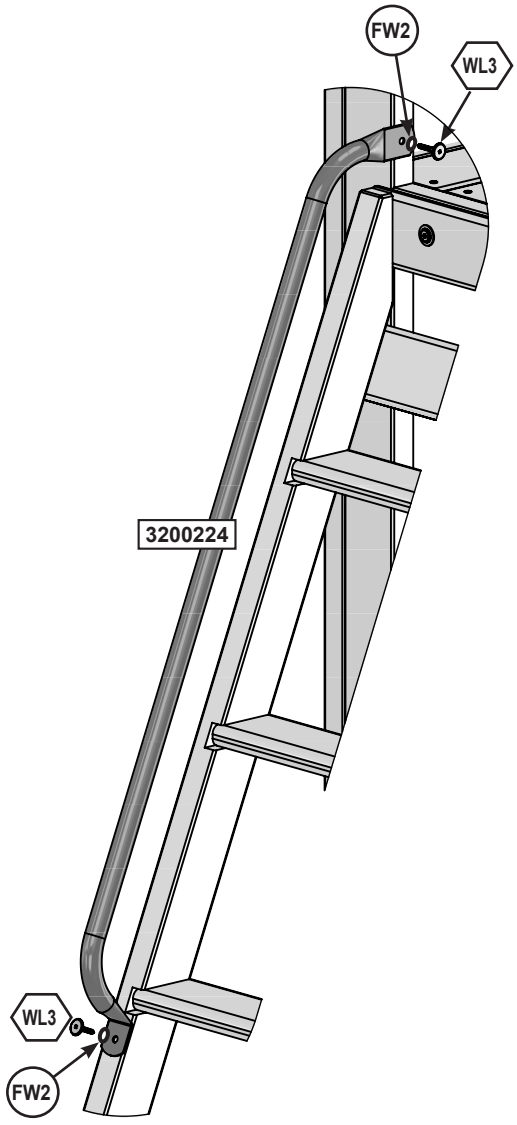

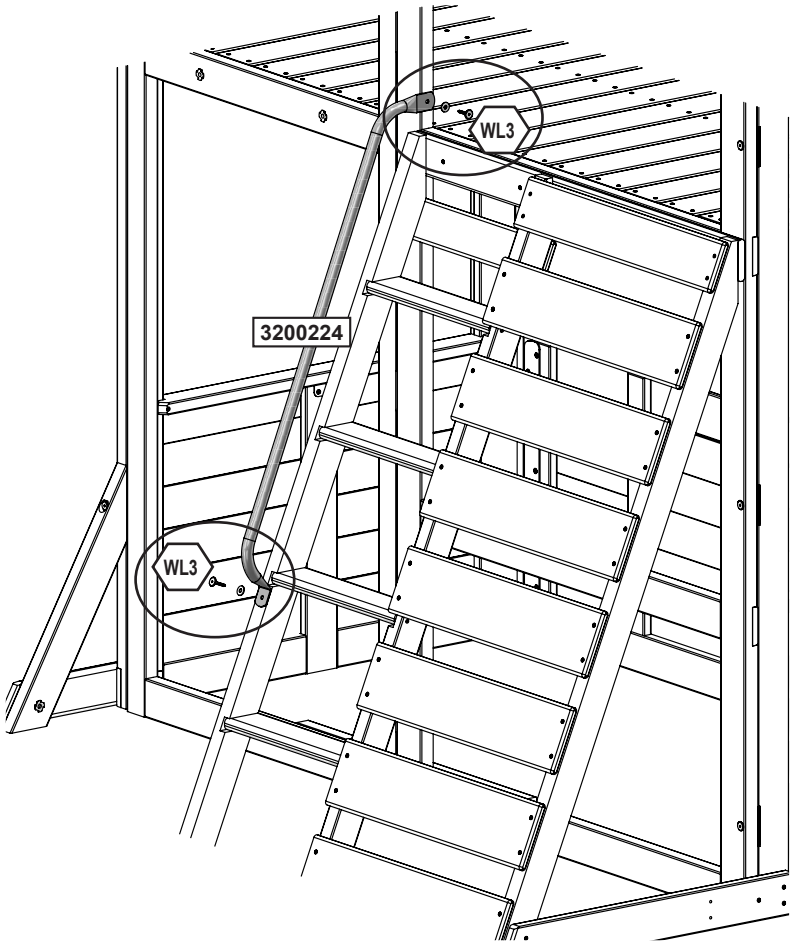

Hardware

2 x WL3 6.4mm x 34.9mm (1/4 x 1-3/8 in)(FW2)

Other Parts

1 x 3200224


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

20



Pre-drill holes using a 3/16 in drill bit.

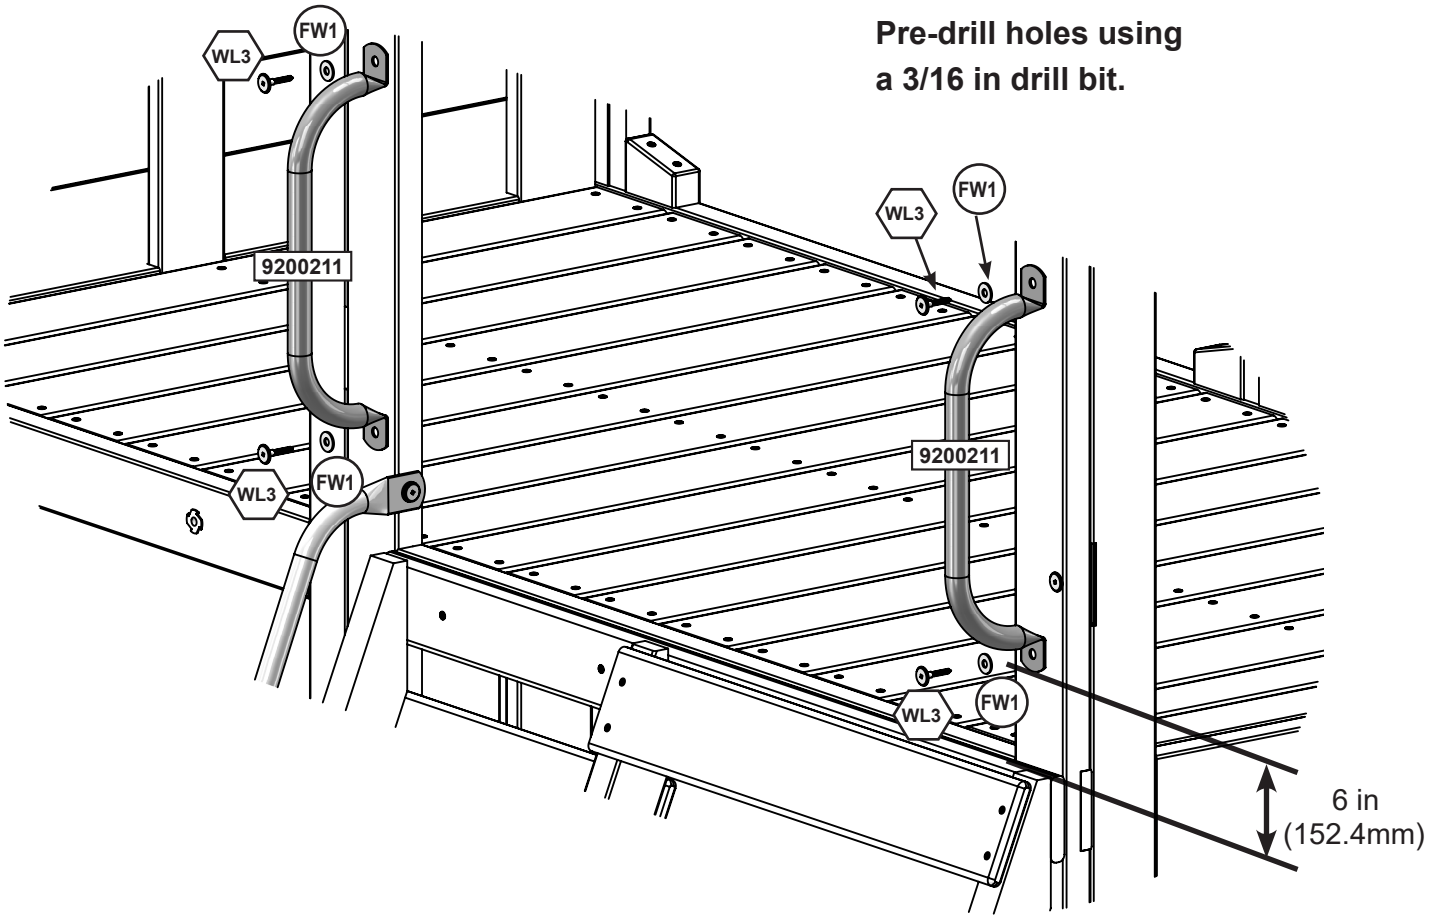


Hardware


4 x WL3 6.4mm x 34.9mm (1/4 x 1-3/8 in)(FW1)

Other Parts

2 x 9200211

21

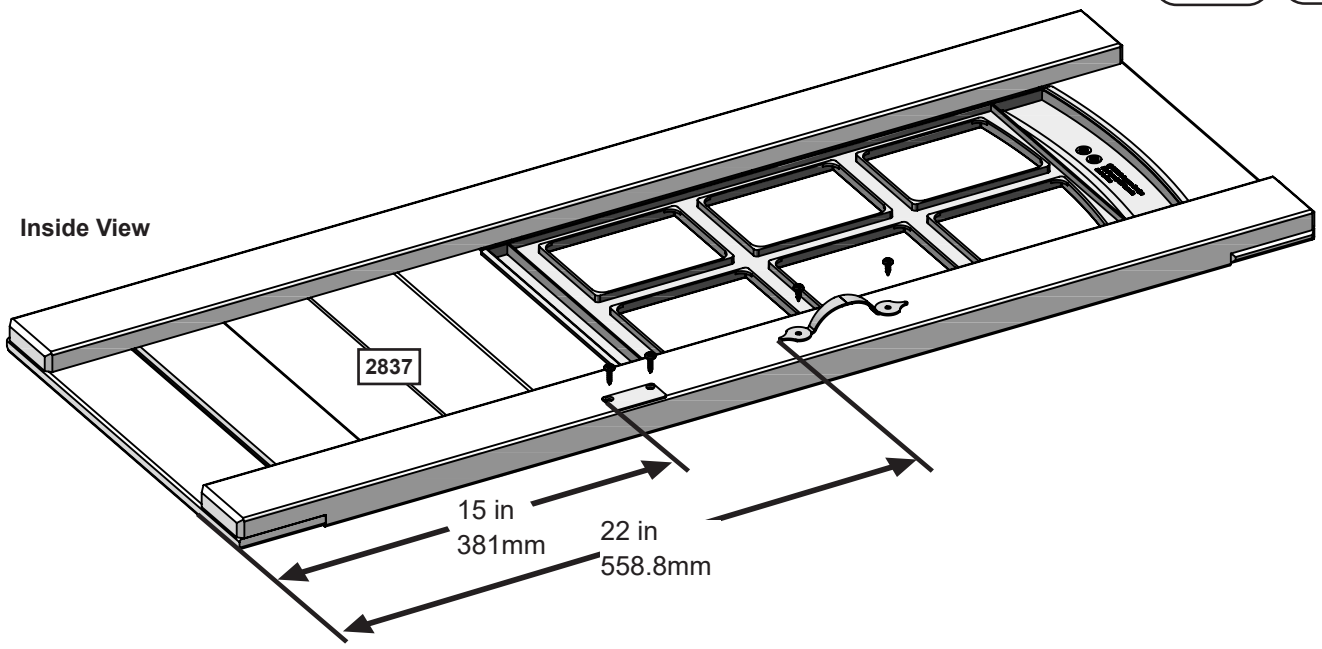

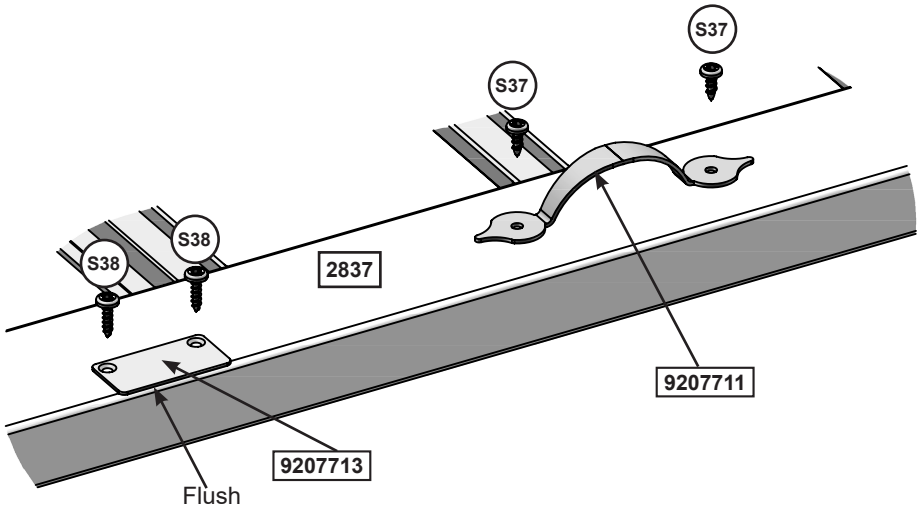



Wood Parts	Hardware	Other Parts
1 x 2837 31.8 x 400 x 1070 mm (1 1/4 x 15 3/4 x 42 1/8 in)	2 x S37 #7 x 15.9mm (#7 x 5/8 in)	1 x 9207711
	2 x S38 #7 x 28.6mm (#7 x 1-1/8 in)	1 x 9207713

22




Outside View

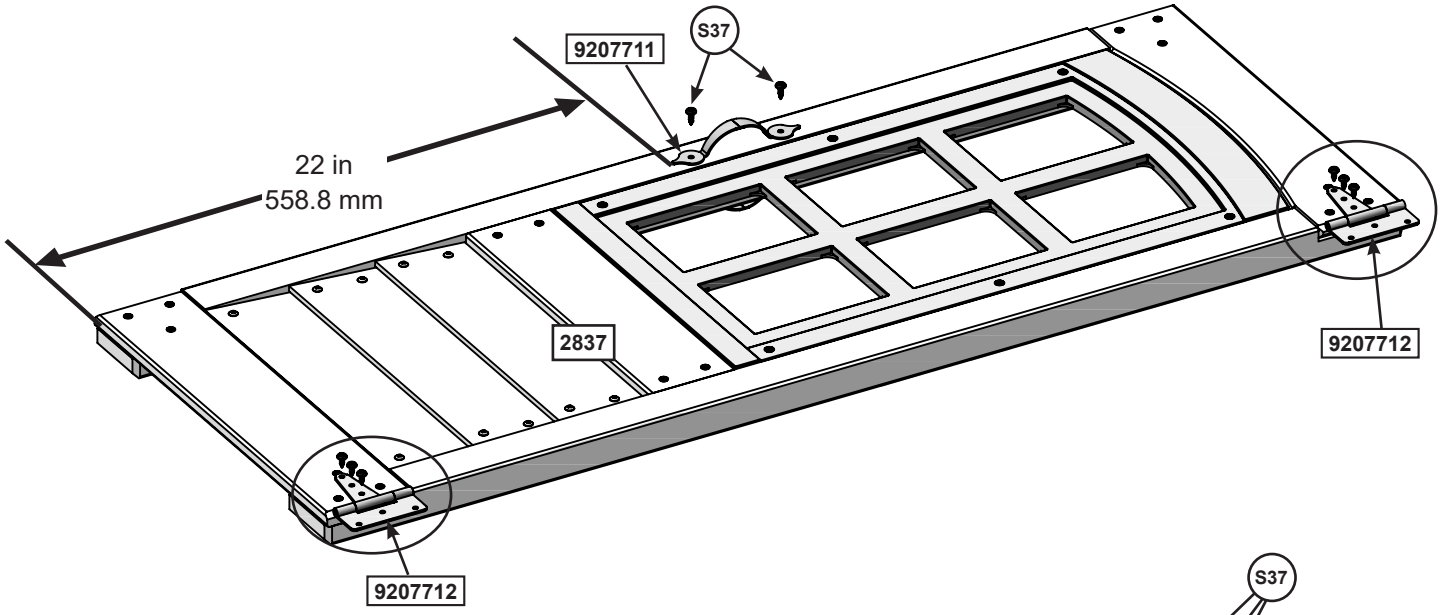

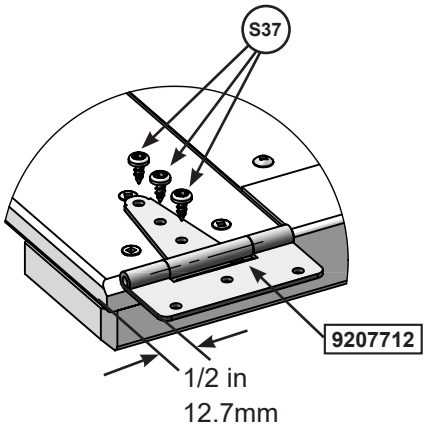

Bottom View

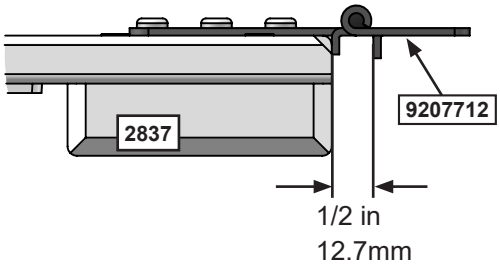

Hardware


8 x (S37) #7 x 15.9mm (#7 x 5/8 in)


Other Parts

2 x 9207712

1 x 9207711

23

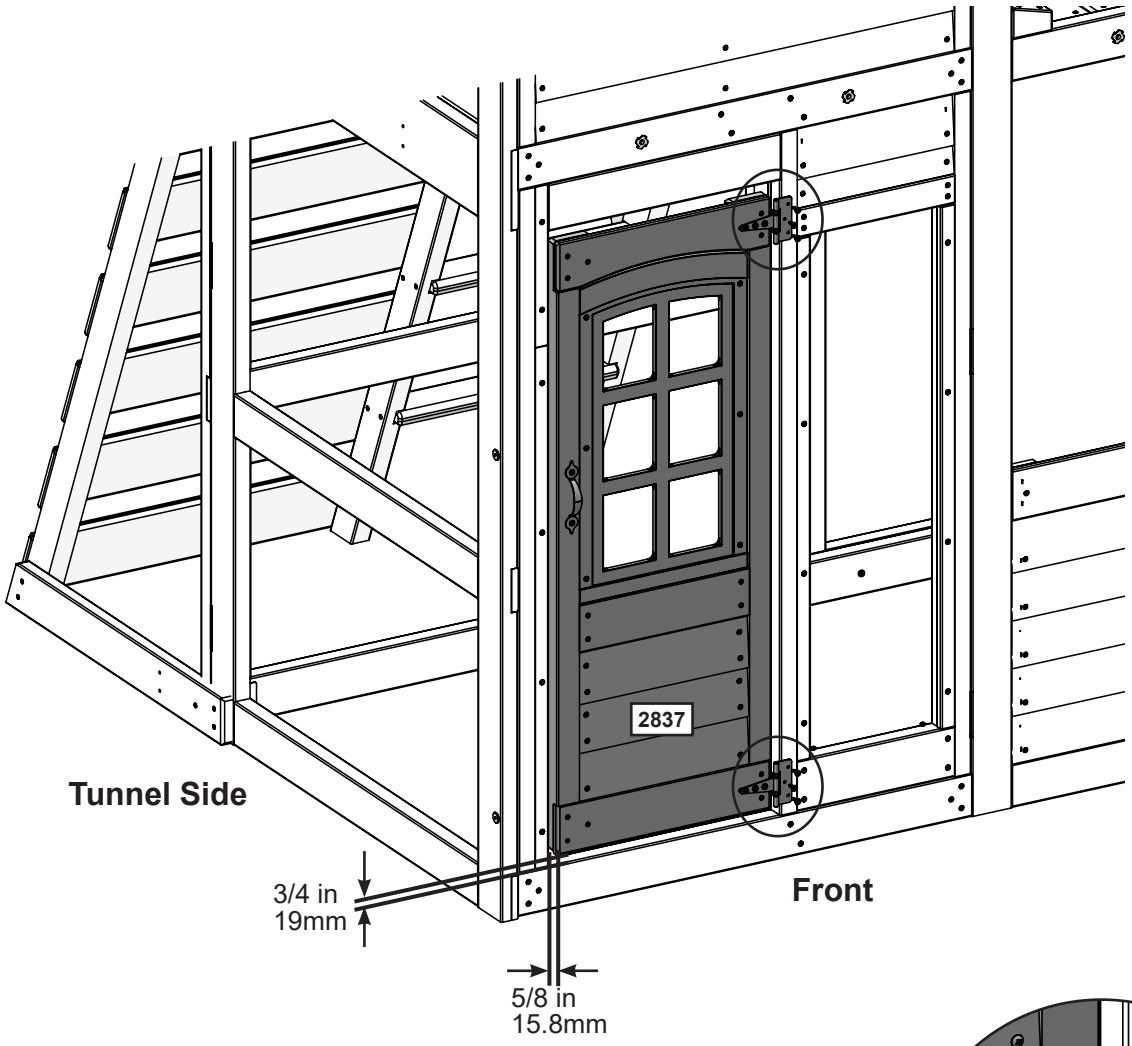

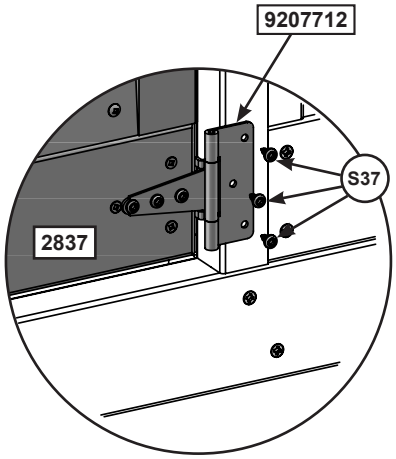


Hardware

6 x (S37) #7 x 15.9mm (#7 x 5/8 in)


24

Important: Use a hand held screw driver and DO NOT over tighten.

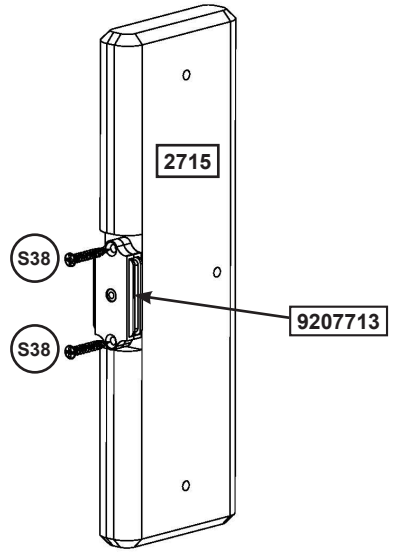


Close door and vertically center magnetic catch to catch plate to assemble.

Side View

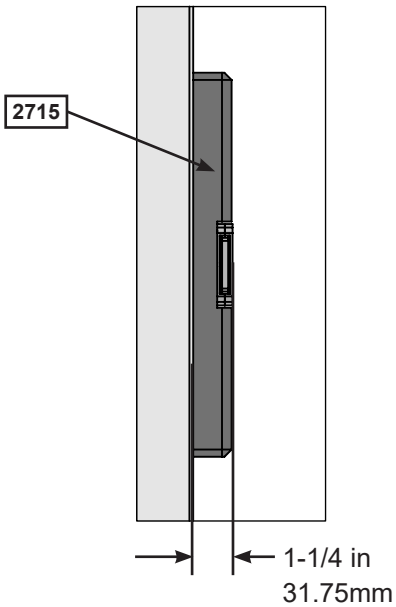

Inside View

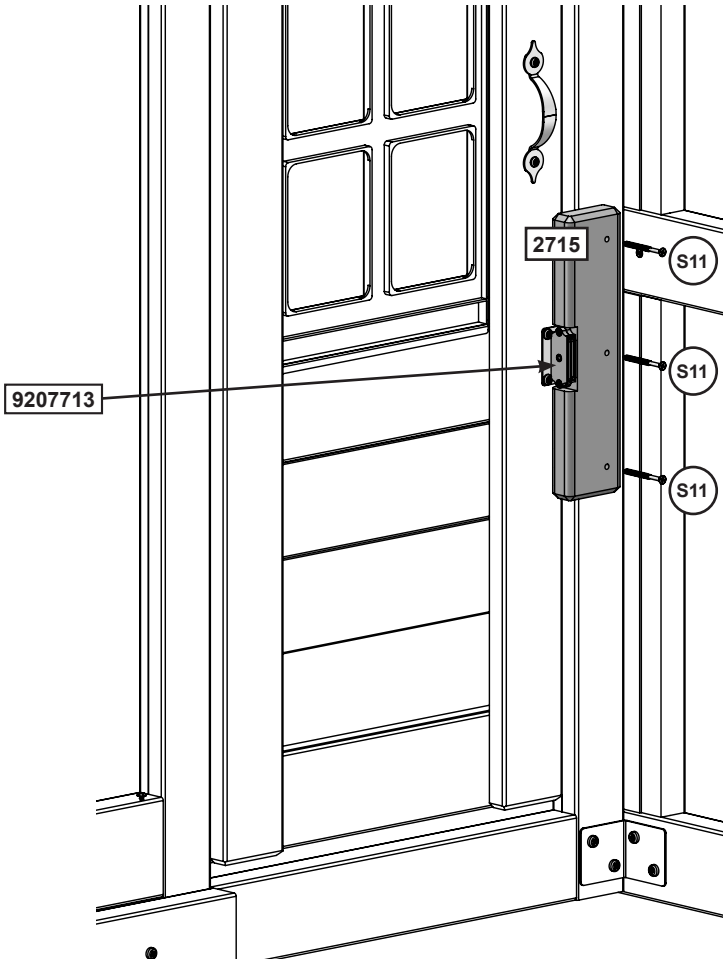

Wood Parts

1 x 2715 25.4 x 63.5 x 254 mm (1 x 2 1/2 x 10 in)

Hardware

2 x S38 #7 x 28.6mm (#7 x 1-1/8 in)


3 x S11 #8 x 50.8mm (#8 x 2 in)


KidKraft® MADE FOR MAKE BELIEVE™


parts.kidkraft.com

customerservice@kidkraft.com
1.800.933.0771
972.385.0100

25

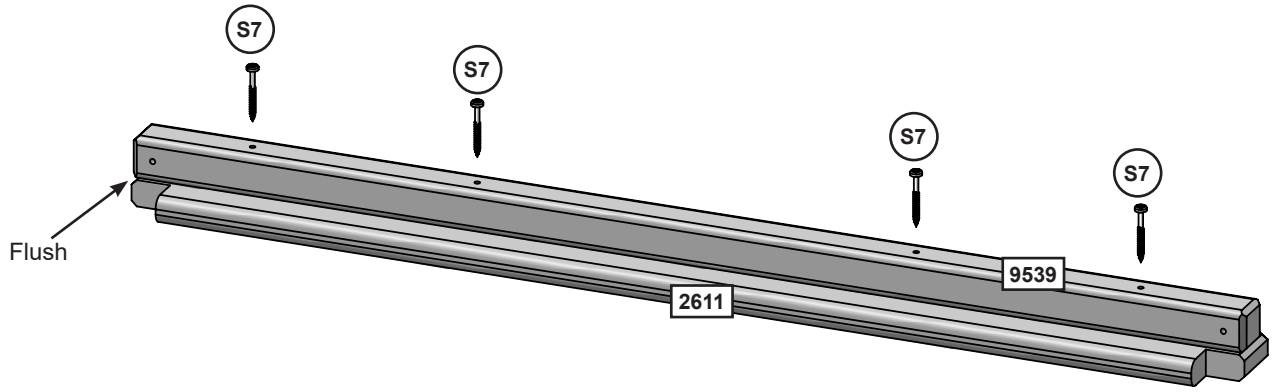

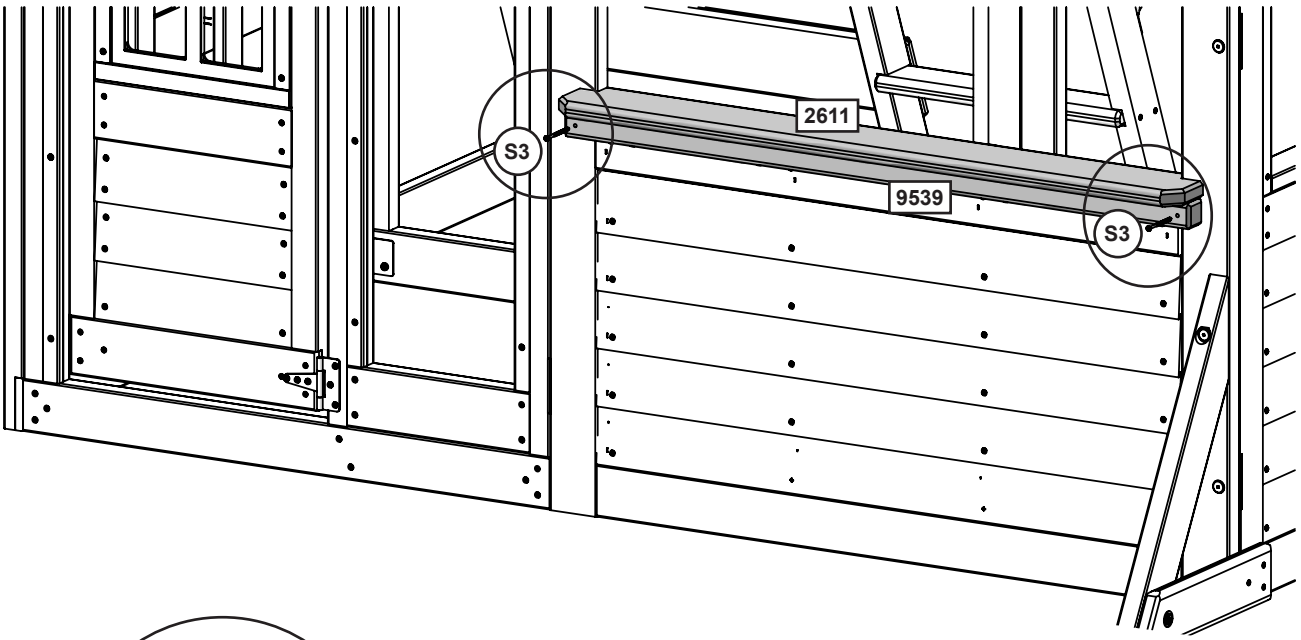

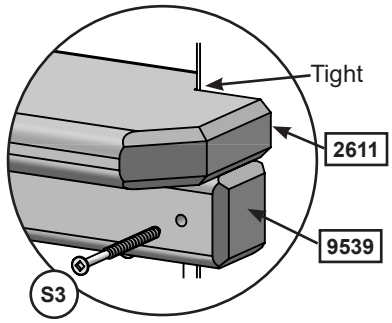

Wood Parts

1 x 2611 23.8 x 108 x 1006.5 mm (15/16 x 4 1/4 x 39 5/8 in)
1 x 9539 31.8 x 31.8 x 1006.5 mm (1 1/4 x 1 1/4 x 39 5/8 in)


Hardware

2 x S3 #8 x 63.5mm (#8 x 2-1/2 in)
4 x S7 #12 x 50.8mm (#12 x 2 in)


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

26

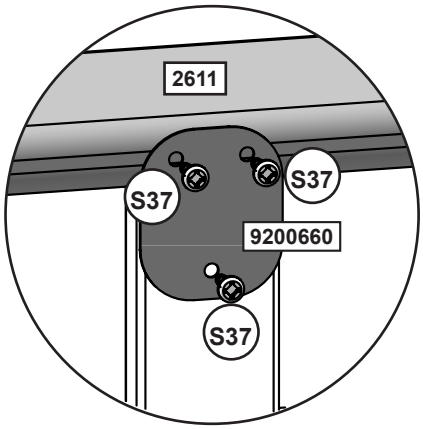

Inside View

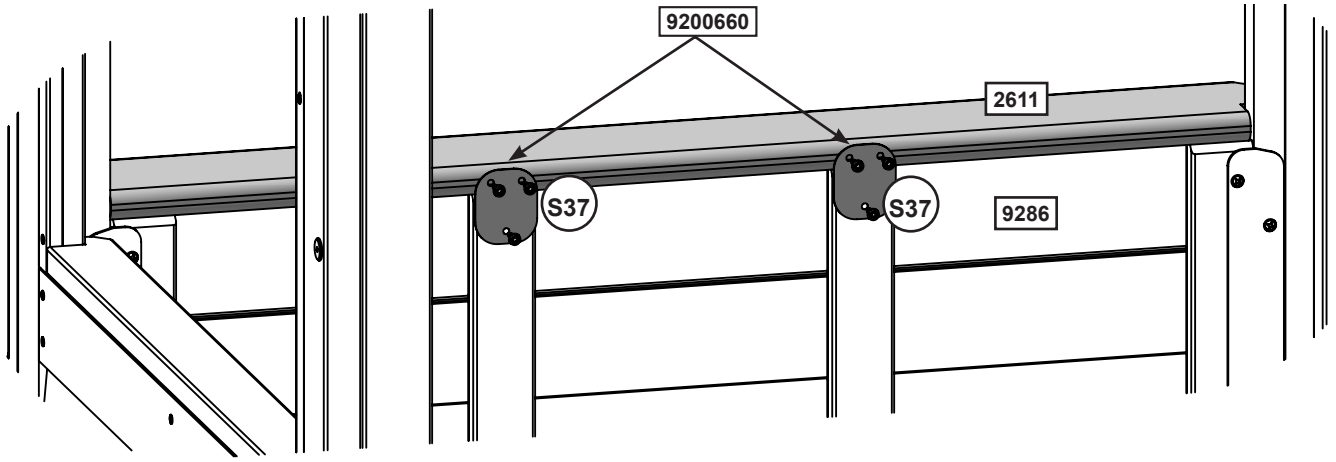

Hardware


6 x (S37) #7 x 15.9mm (#7 x 5/8 in)


Other Parts

2 x 9200660

27

Inside View

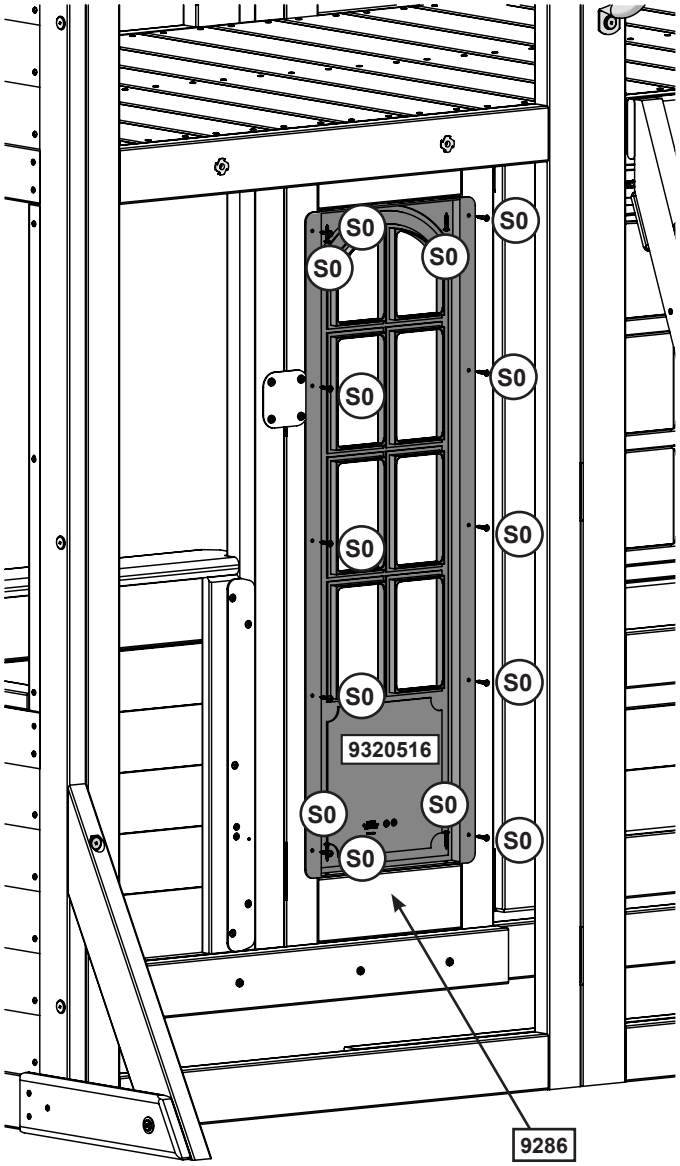

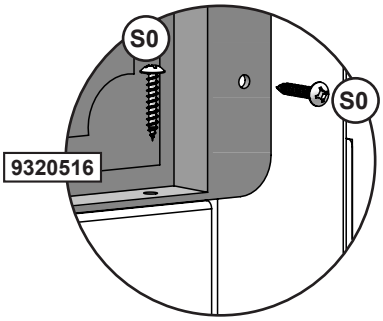

Hardware

14 x (S0) #8 x 22.2mm (#8 x 7/8 in)


Other Parts

1 x 9320516

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

28

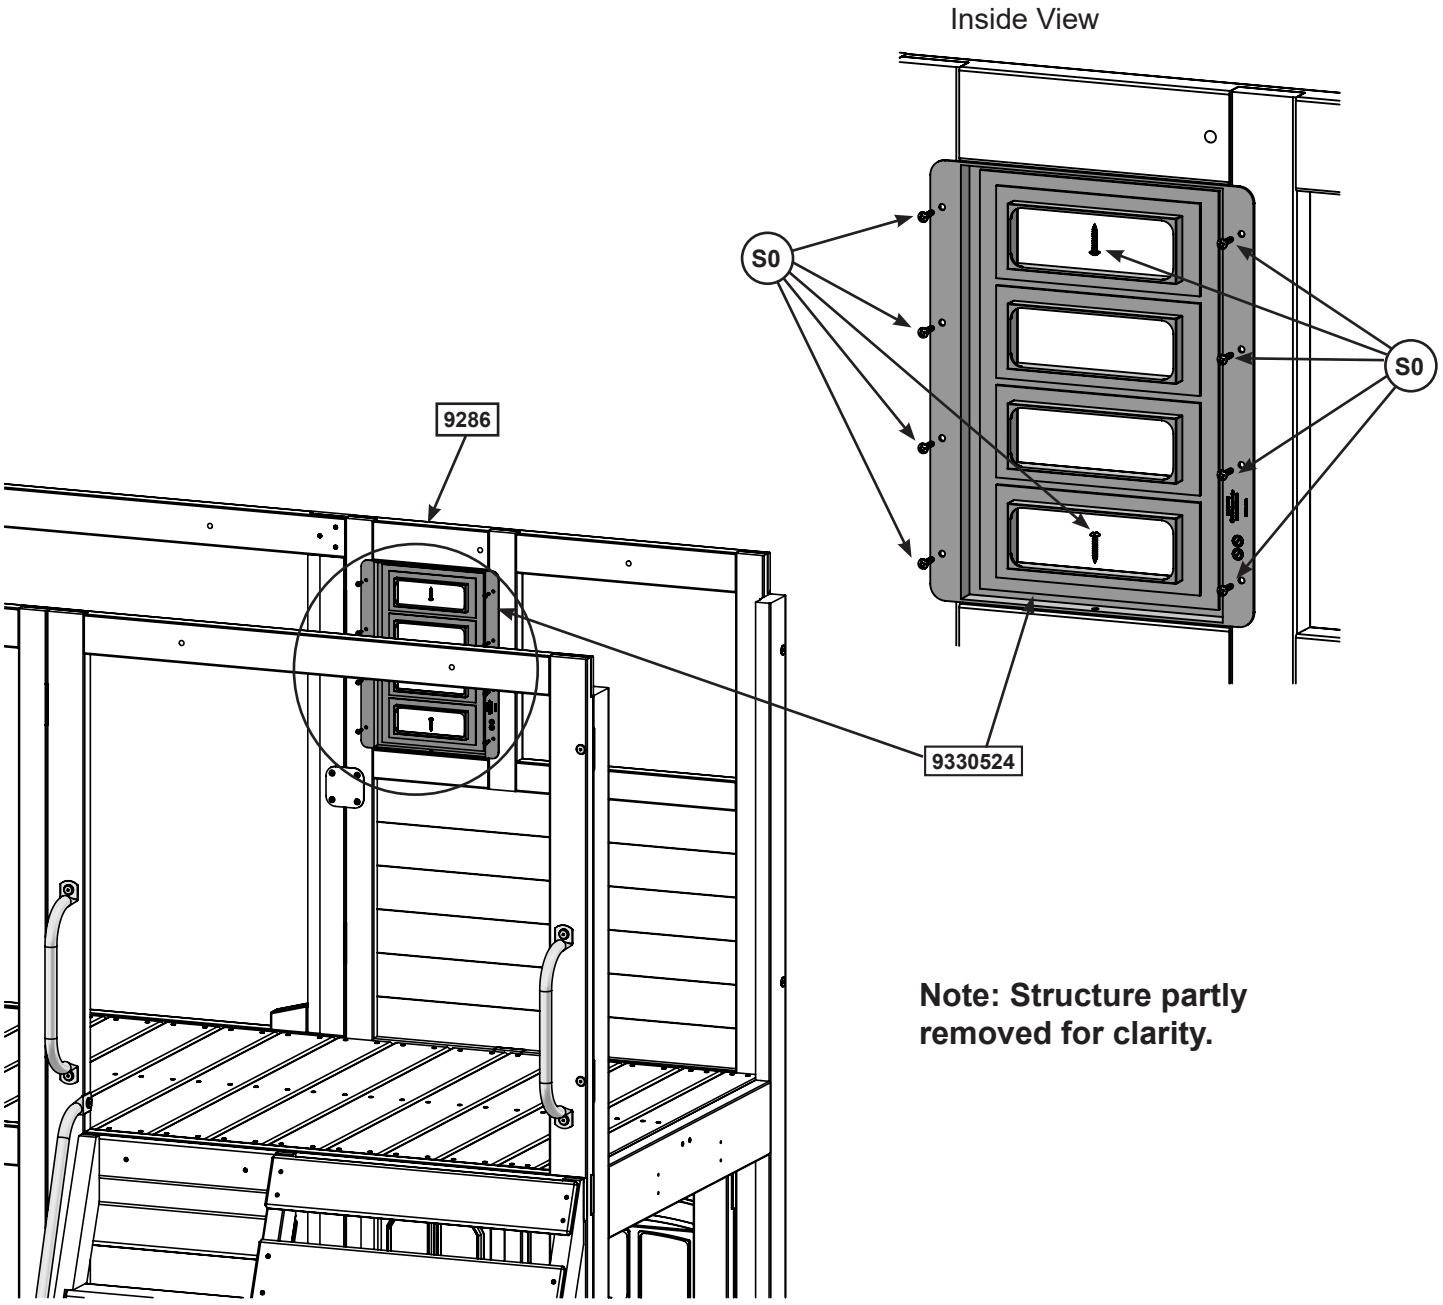

Note: Structure partly removed for clarity.


Hardware

10 x (S0) #8 x 22.2mm (#8 x 7/8 in)


Other Parts

1 x 9330524

29

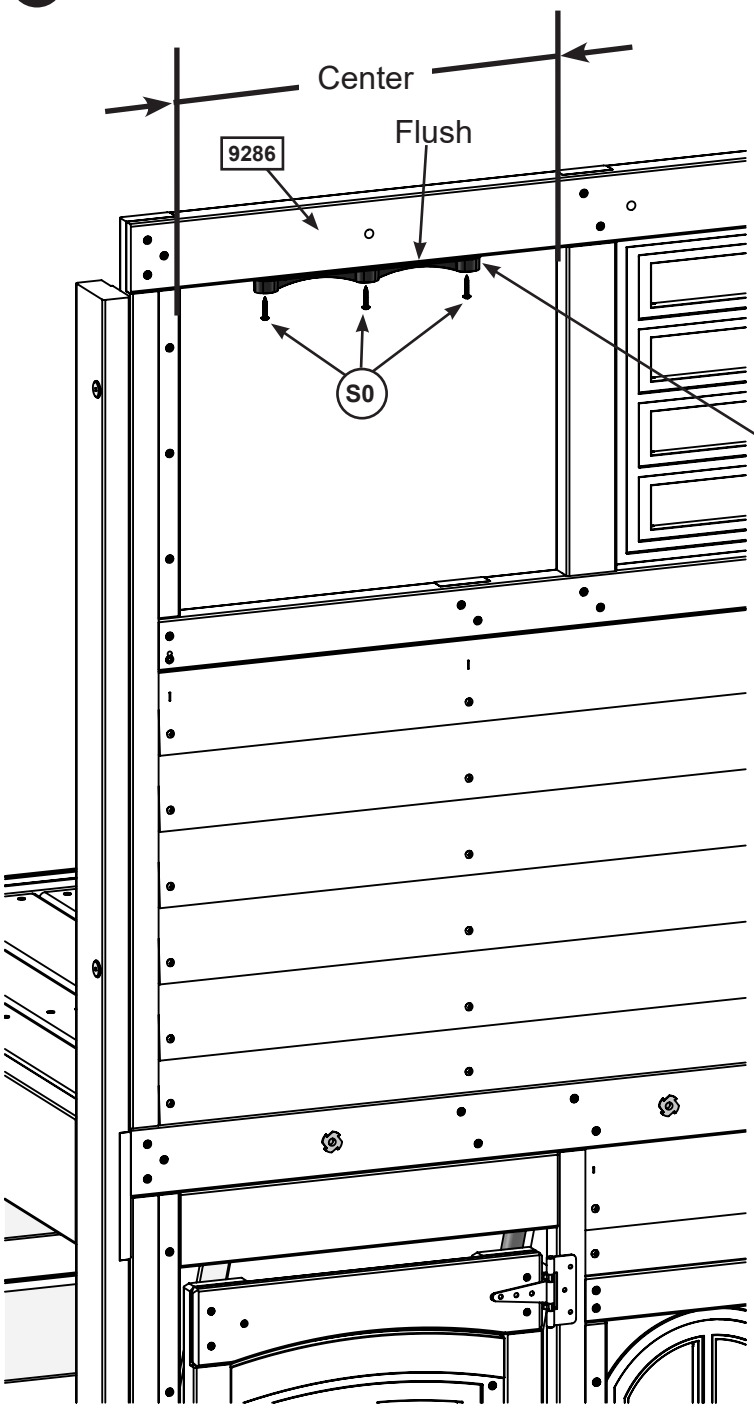

Front

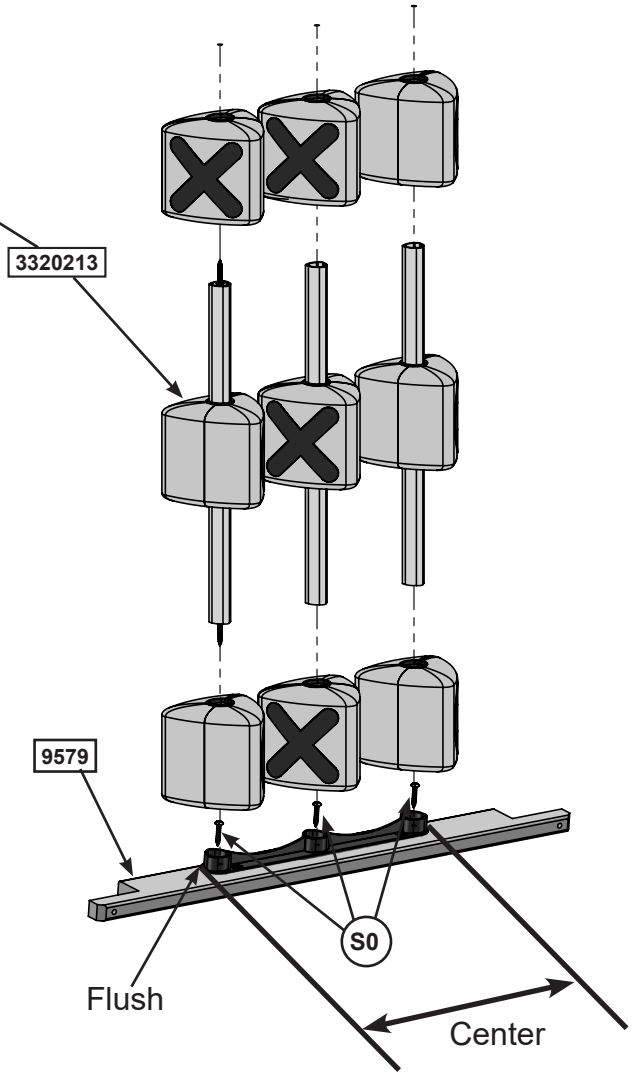



Wood Parts	Hardware	Other Parts
1 x 9579 15.9 x 50.8 x 557.1 mm (5/8 x 2 x 21 15/16 in)	6 x S0 #8 x 22.2mm (#8 x 7/8 in)	1 x 3320213


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

30

Front Panel
Assembly

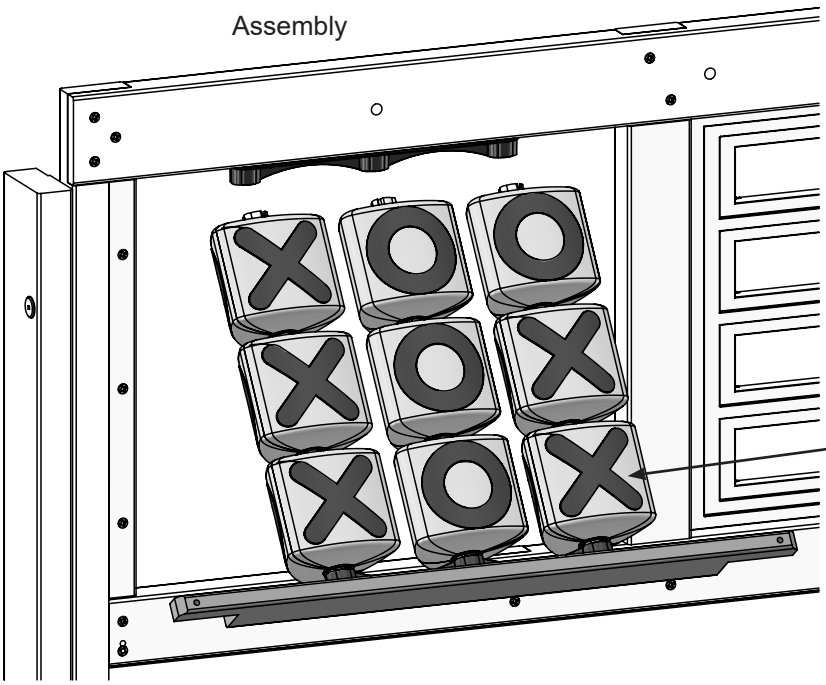

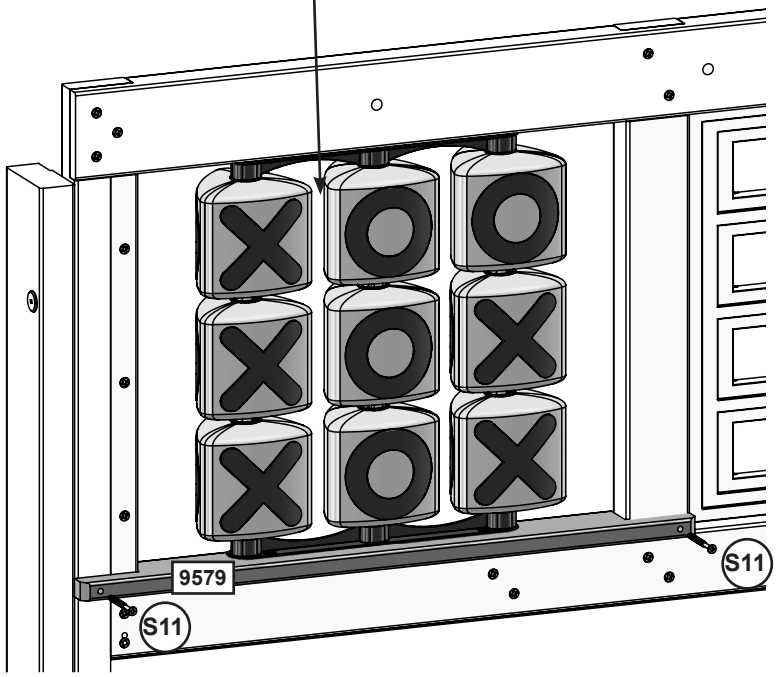

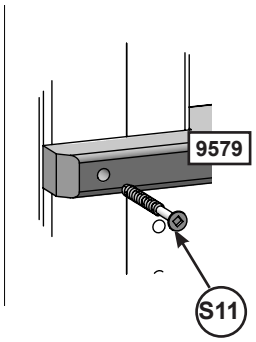

Hardware


2 x (S11) #8 x 50.8mm (#8 x 2 in)


31


MOVE FORT TO FINAL LOCATION PRIOR TO STAKING
FINAL LOCATION MUST BE LEVEL GROUND

Warning! To prevent tipping and avoid potential injury, stakes must be driven 13 in(330mm) into ground. Digging or driving stakes can be dangerous if you do not check first for under-ground wiring, cables or gas lines.

SEE PLAN VIEW FOR SAFETY CLEARANCE

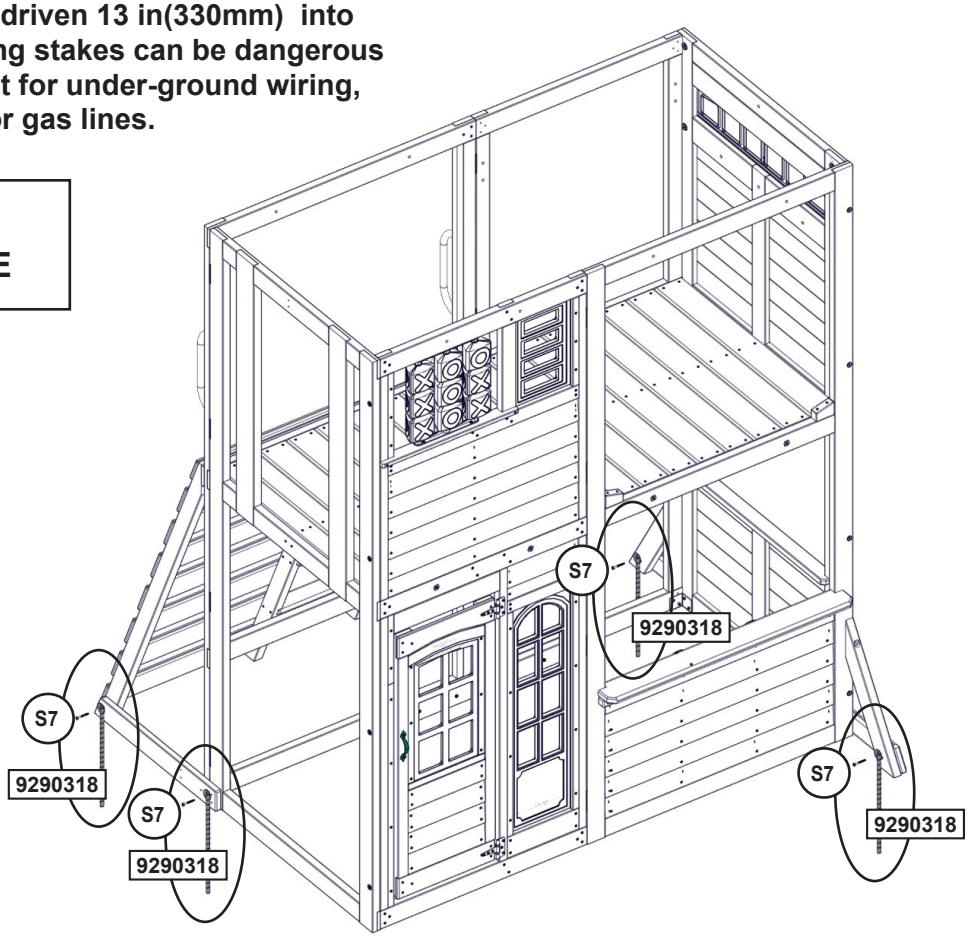

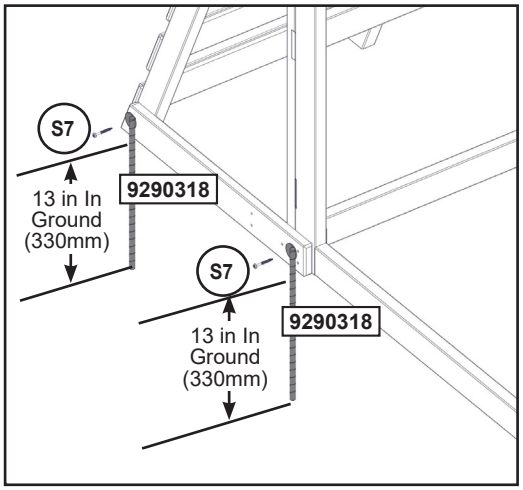

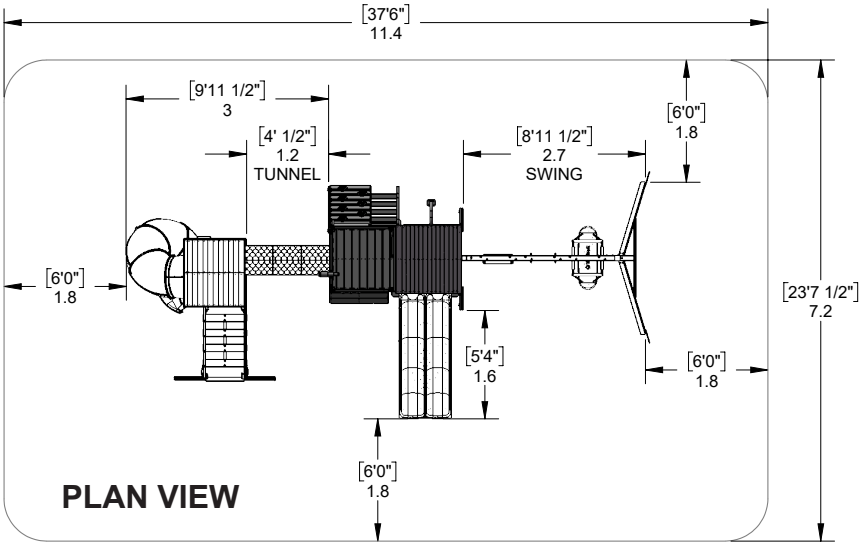

Hardware

4 x (S7) #12 x 50.8mm (#12 x 2 in)


Other Parts

4 x 9290318

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

32

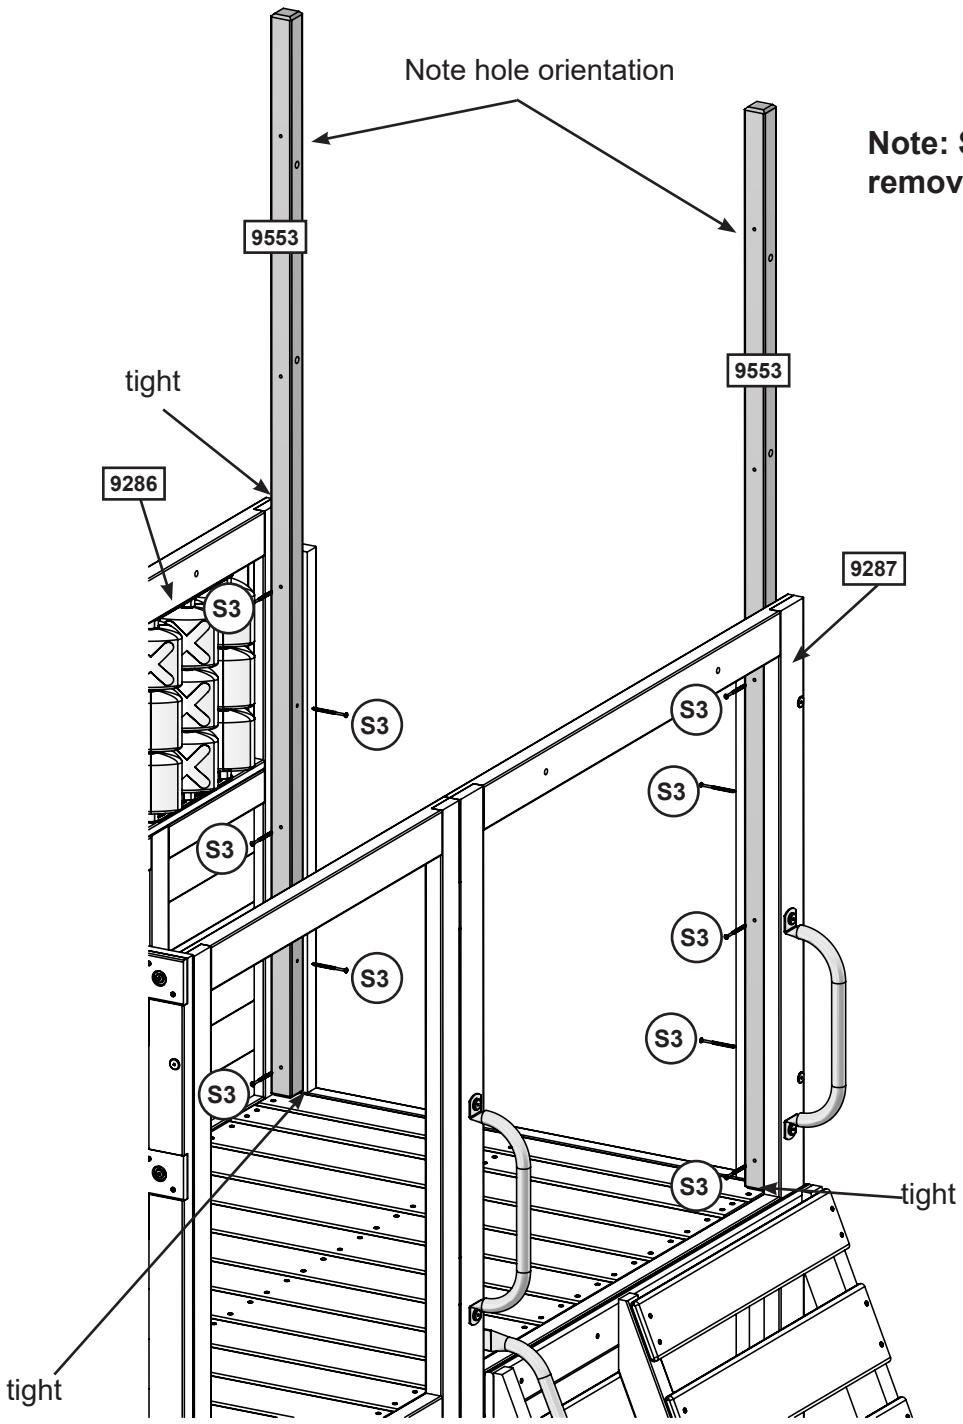

Note: Structure partly removed for clarity.


Wood Parts


2 x 9553 38.1 x 38.1 x 1828.8 mm (1 1/2 x 1 1/2 x 72 in)

Hardware

10 x S3 #8 x 63.5mm (#8 x 2-1/2 in)

33

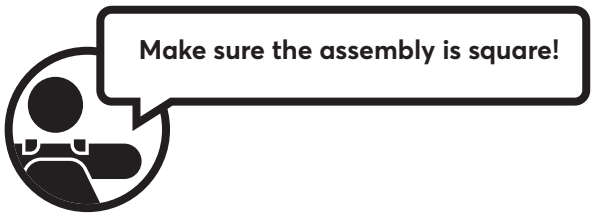

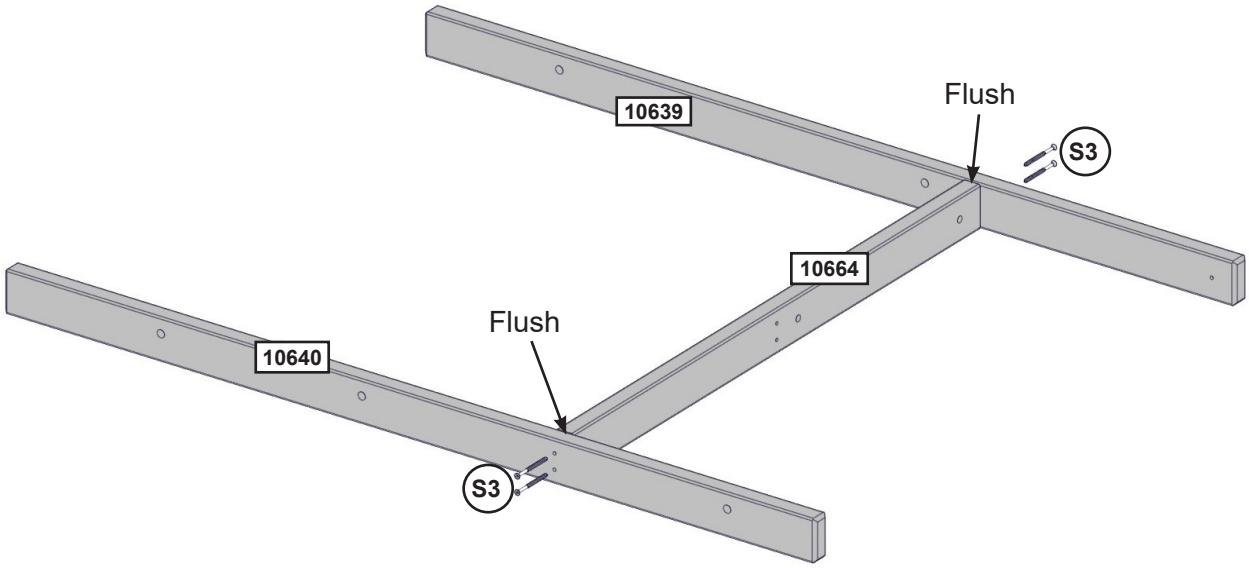

Wood Parts


1 x 10639 25.4 x 60.3 x 1213 mm (1 x 2 3/8 x 47 3/4 in)
1 x 10640 25.4 x 60.3 x 1213 mm (1 x 2 3/8 x 47 3/4 in)
1 x 10664 25.4 x 60.3 x 855.3 mm (1 x 2 3/8 x 33 11/16 in)

Hardware

4 x S3 #8 x 63.5mm (#8 x 2-1/2 in)

34

Assemble T-Nuts first with hammer!

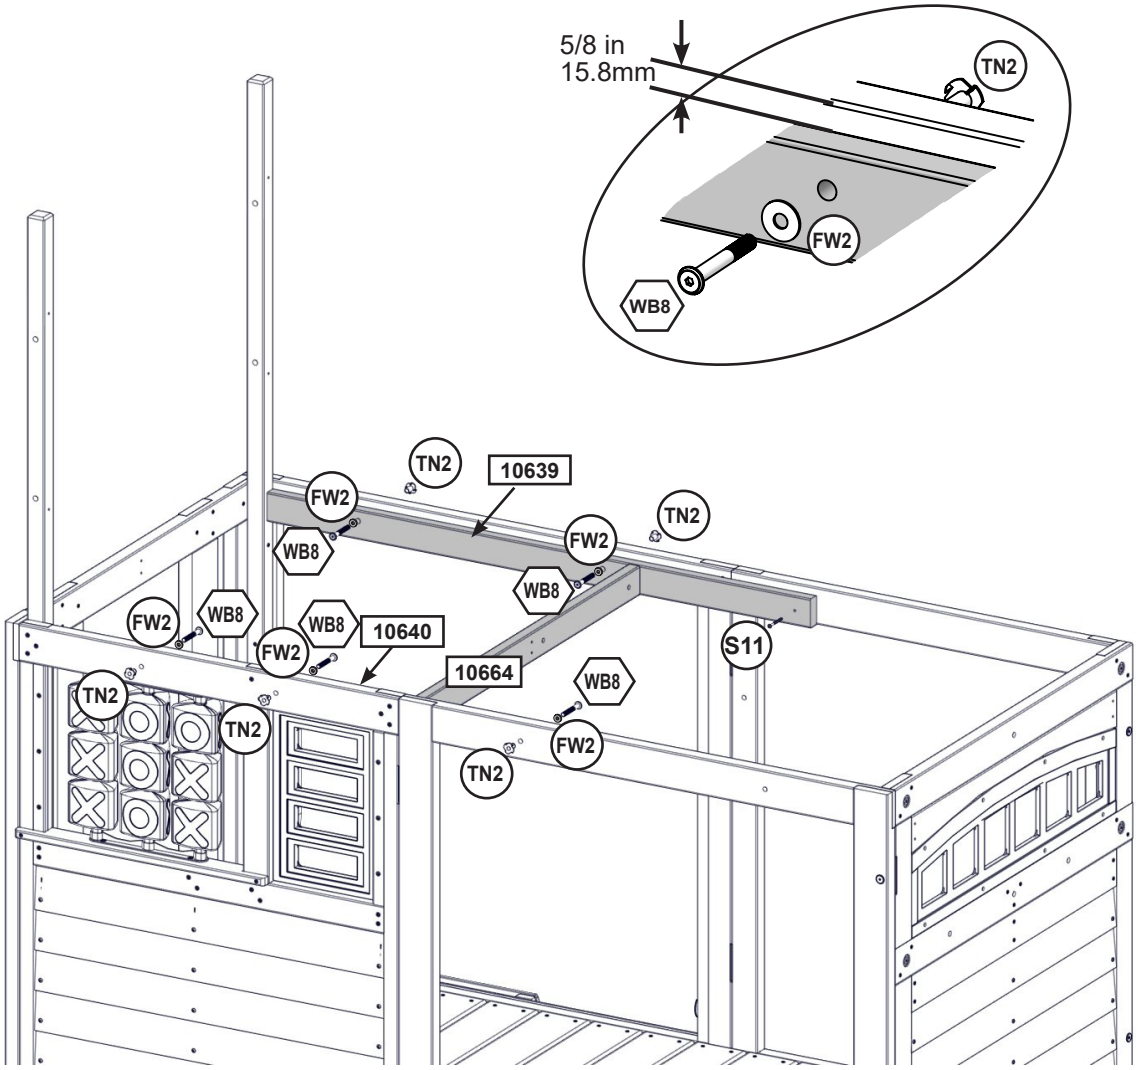


Hardware

1 x (S11) #8 x 50.8mm (#8 x 2 in)

5 x (WB8) 7.9mm x 60.3 mm (5/16 x 2-3/8 in)(FW2, TN2)

35

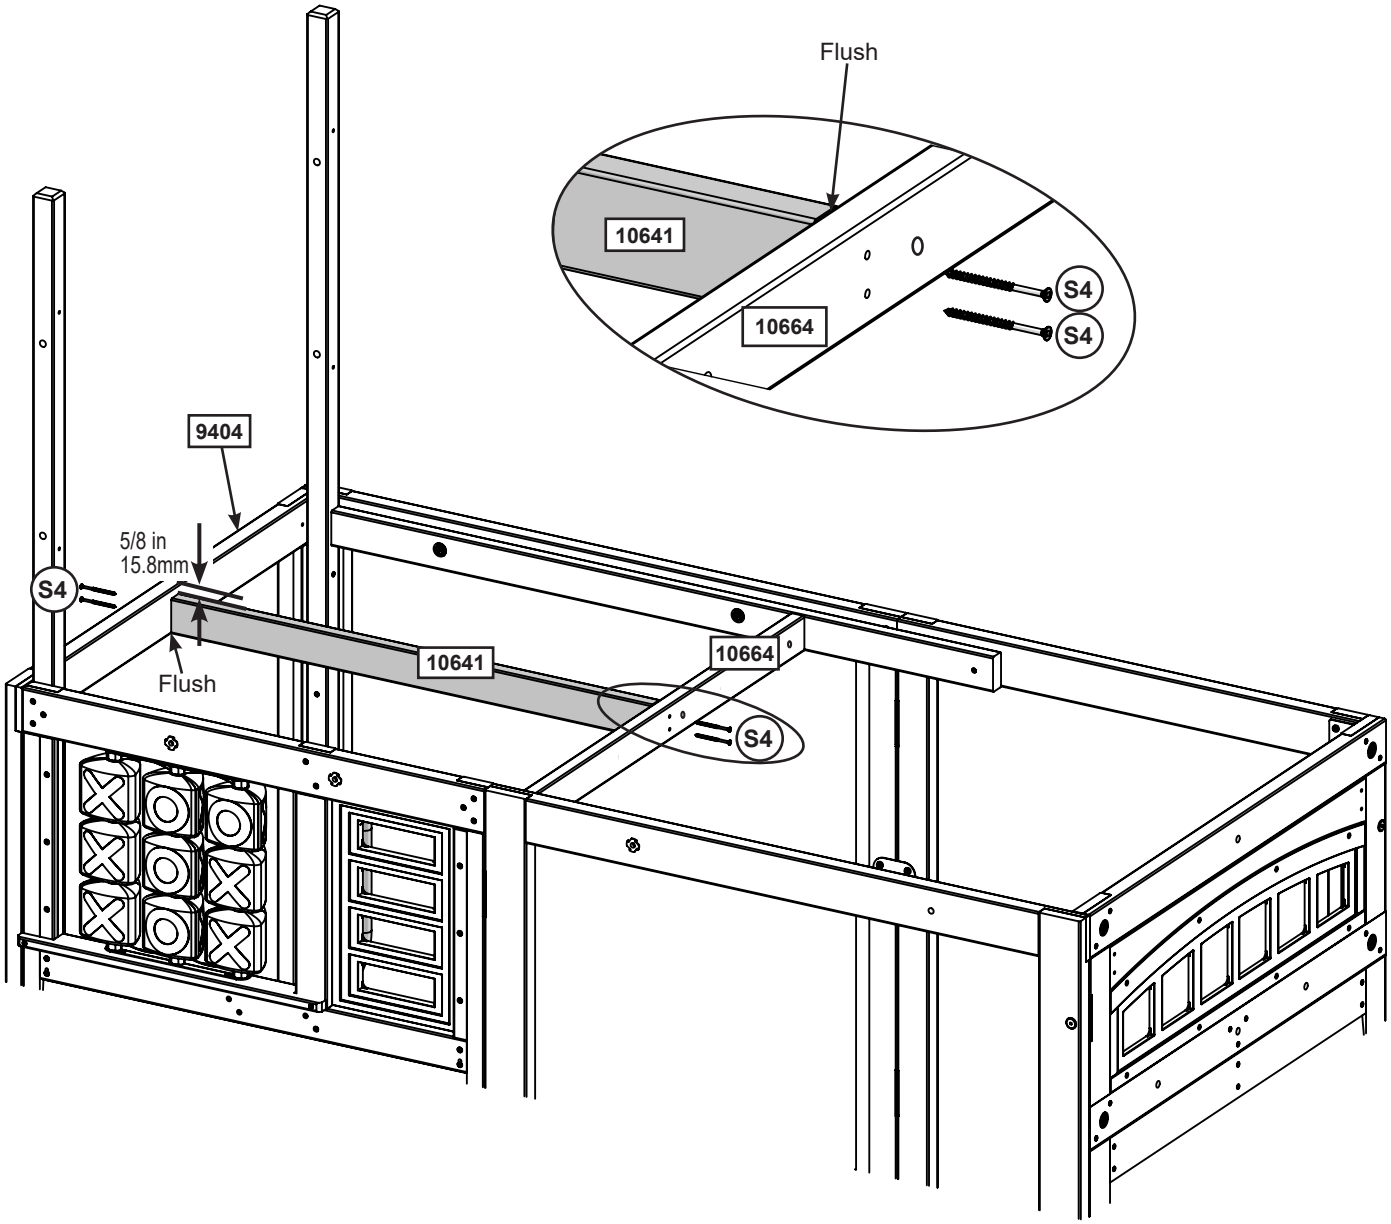

Wood Parts

1 x 10641 25.4 x 60.3 x 846.2 mm (1 x 2 3/8 x 33 5/16 in)


Hardware


4 x S4 #8 x 76.2mm (#8 x 3 in)

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

36

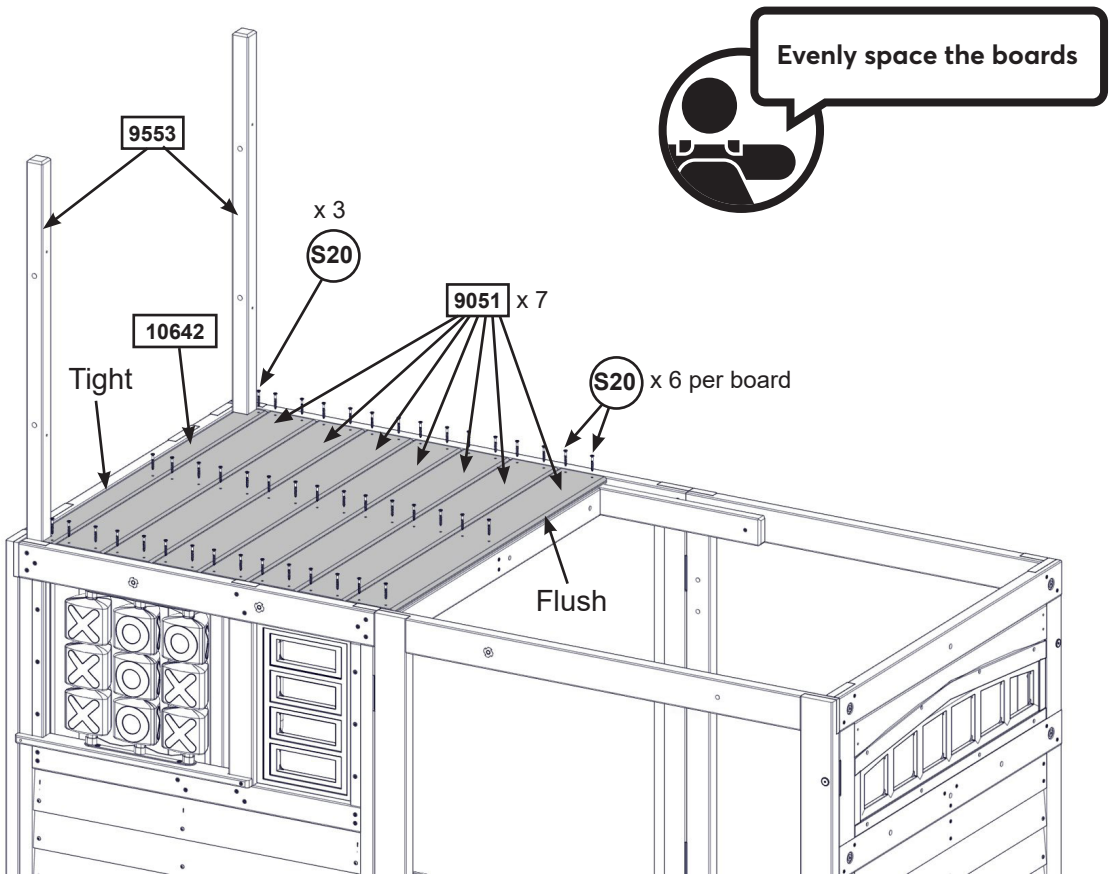

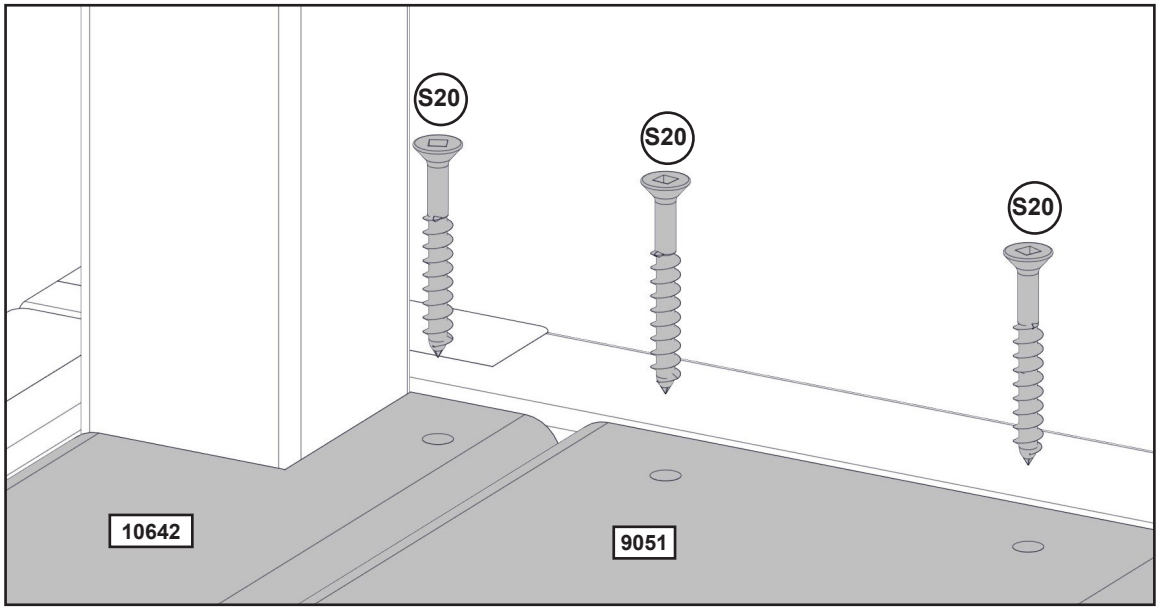

Wood Parts

1 x 10642 15.9 x 65.5 x 904.9 mm (5/8 x 2 9/16 x 35 5/8 in)


7 x 9051 15.9 x 114.3 x 904.9 mm (1 x 4 1/2 x 35 5/8 in)

Hardware

45 x S20 #8 x 34.9mm (#8 x 1-3/8 in)

37

Assemble T-Nuts first with hammer!

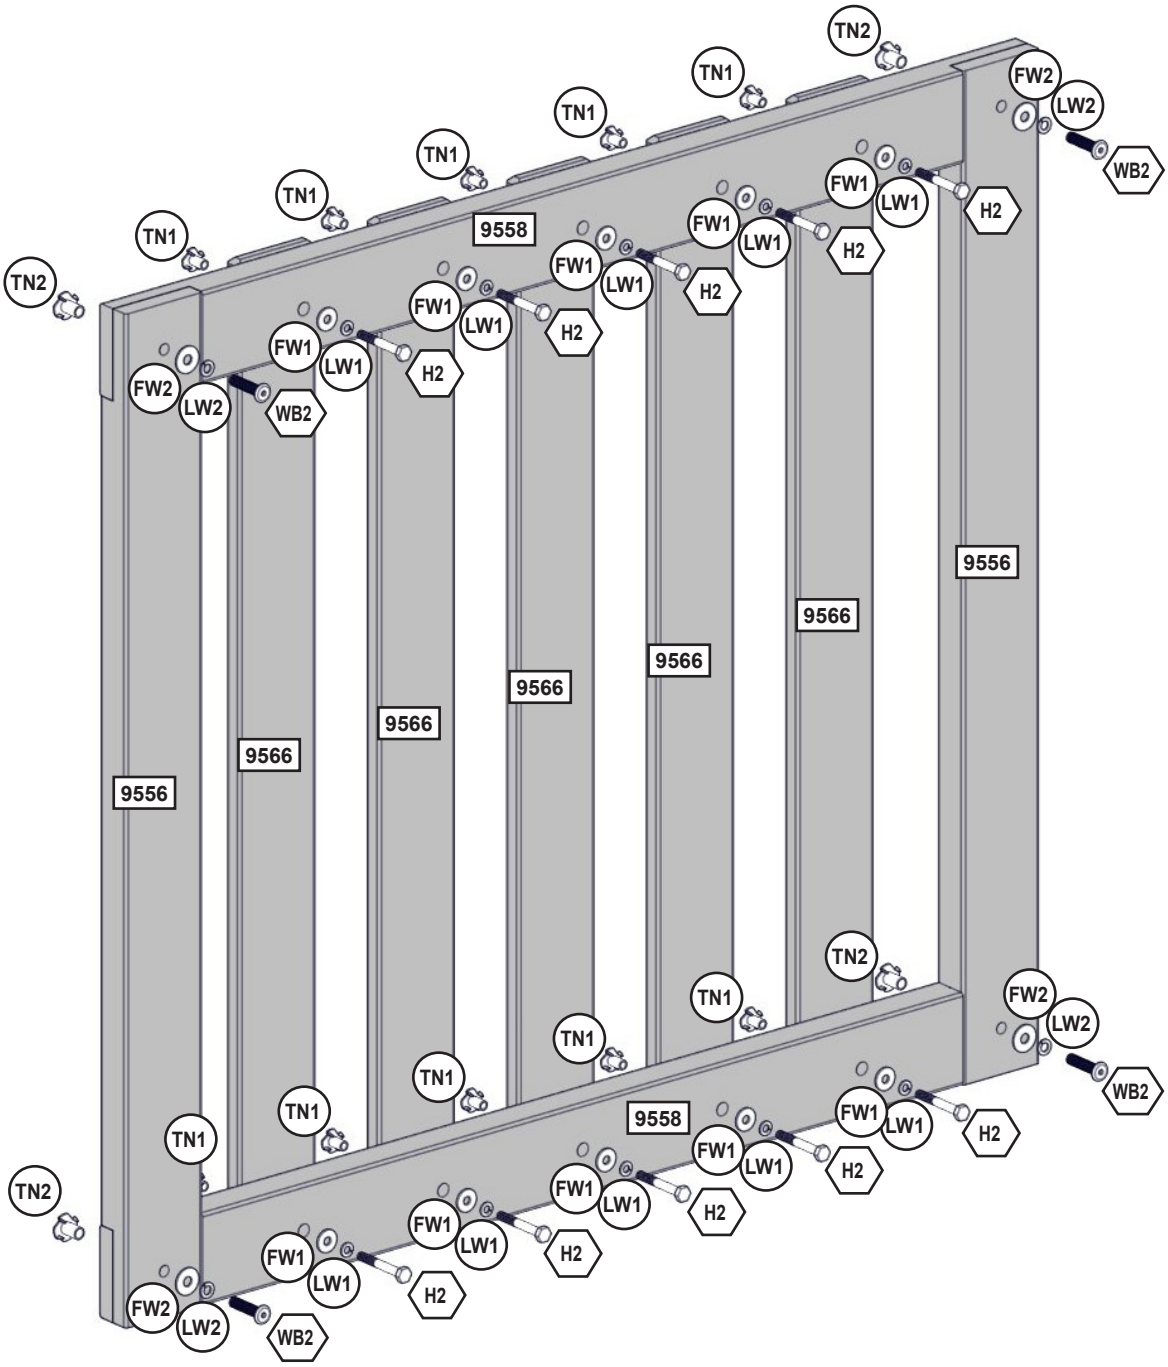

Wood Parts

2 x 9556 31.8 x 76.2 x 838.2 mm (1 1/4 x 3 x 33 in)
2 x 9558 31.8 x 76.2 x 908 mm (1 1/4 x 3 x 35 3/4 in)
5 x 9566 15.9 x 76.2 x 838.2 mm (5/8 X 3 X 32 5/8 in)

Hardware

4 x WB2 7.9mm x 34.9 mm (5/16 x 1-3/8 in)(FW2, LW2, TN2)
10 x H2 6.4mm x 50.8mm (1/4 x 2 in)(FW1, LW1, TN1)


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

38

Assemble T-Nuts first with hammer!



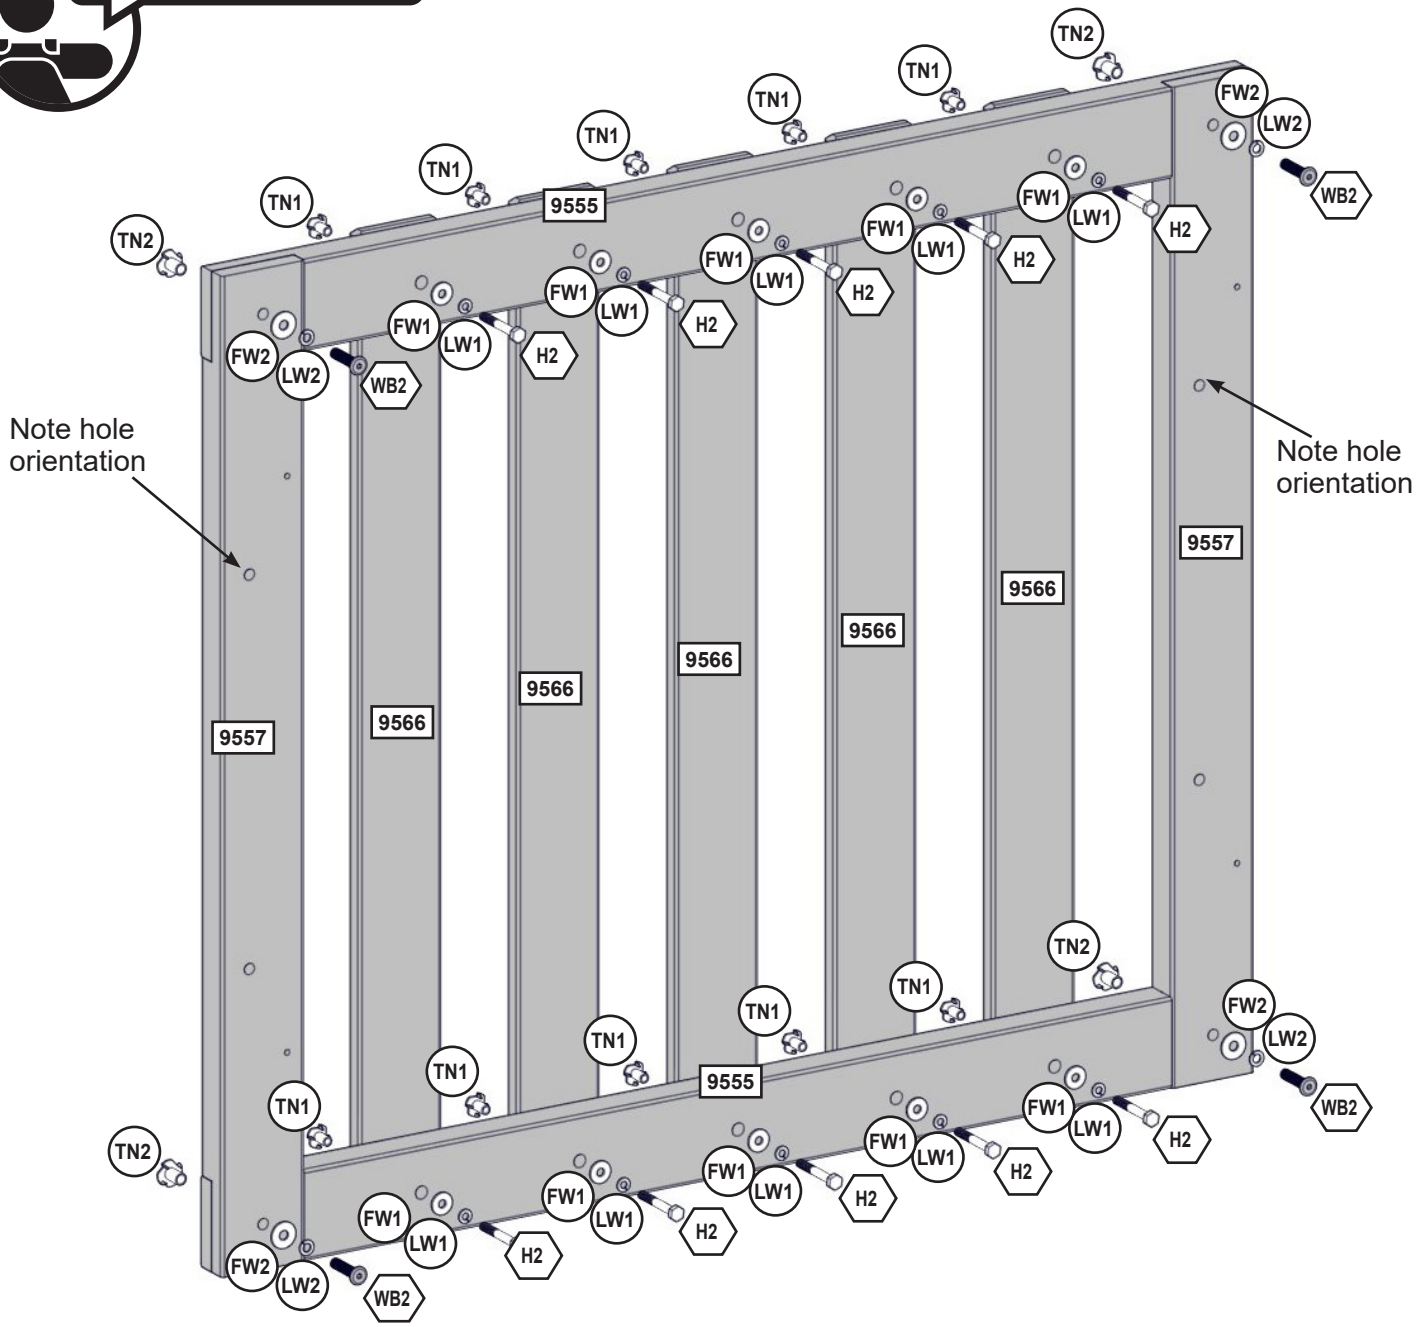

Wood Parts


2 x 9555 31.8 x 76.2 x 954.3 mm (1 1/4 x 3 x 37 9/16 in)
5 x 9566 15.9 x 76.2 x 838.2 mm (5/8 x 3 x 32 5/8 in)
2 x 9557 31.8 x 76.2 x 838.2 mm (1 1/4 x 3 x 33 in)

Hardware

4 x WB2 7.9mm x 34.9 mm (5/16 x 1-3/8 in)(FW2, LW2, TN2)
10 x H2 6.4mm x 50.8mm (1/4 x 2 in)(FW1, LW1, TN1)

39

Assemble T-Nuts first with hammer!

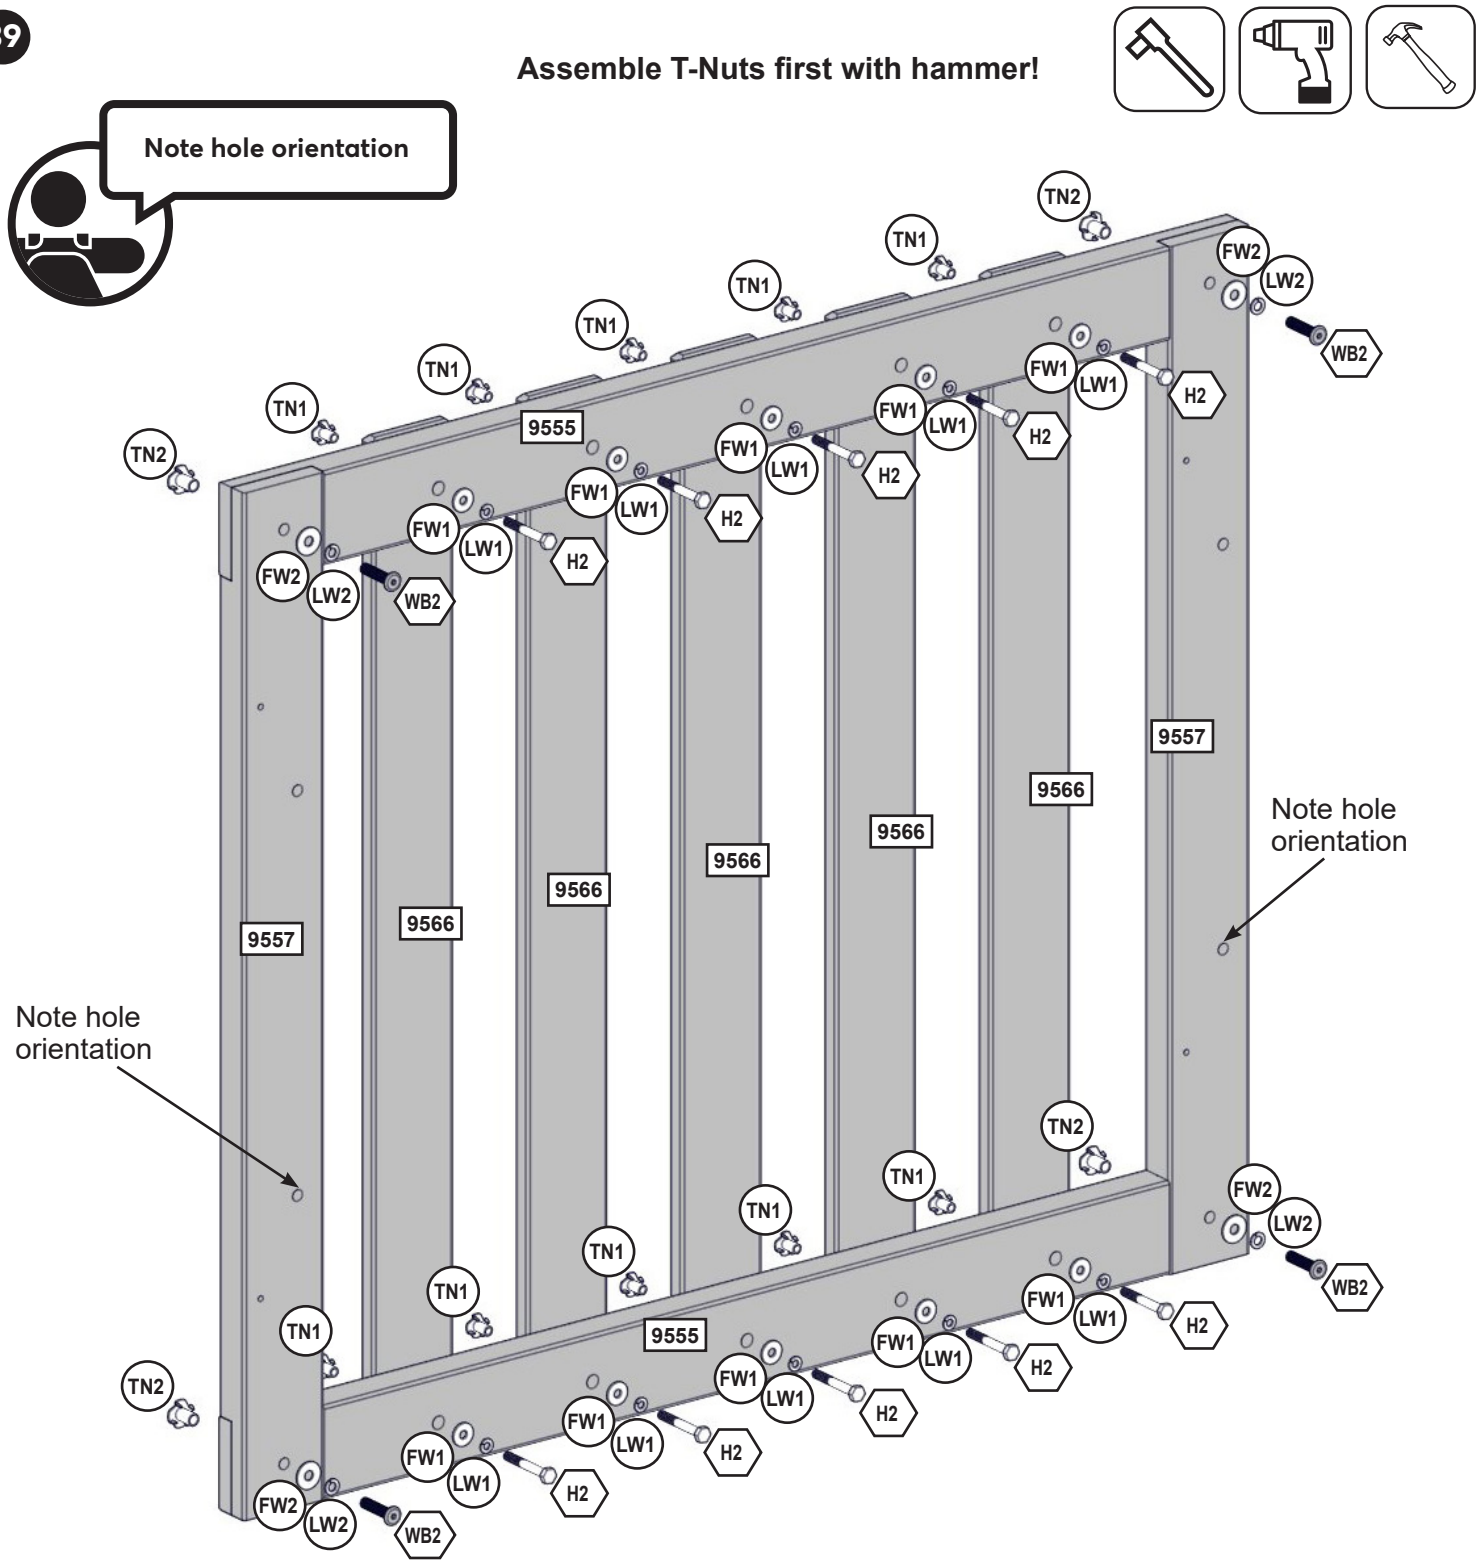

Wood Parts

2 x 9555 31.8 x 76.2 x 954.3 mm (1 1/4 x 3 x 37 9/16 in)
5 x 9566 15.9 x 76.2 x 838.2 mm (5/8 X 3 X 32 5/8 in)
2 x 9557 31.8 x 76.2 x 838.2 mm (1 1/4 x 3 x 33 in)

Hardware


4 x WB2 7.9mm x 34.9 mm (5/16 x 1-3/8 in)(FW2, LW2, TN2)
10 x H2 6.4mm x 50.8mm (1/4 x 2 in)(FW1, LW1, TN1)

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

40


Pre-drill holes using a 3/16 in drill bit.

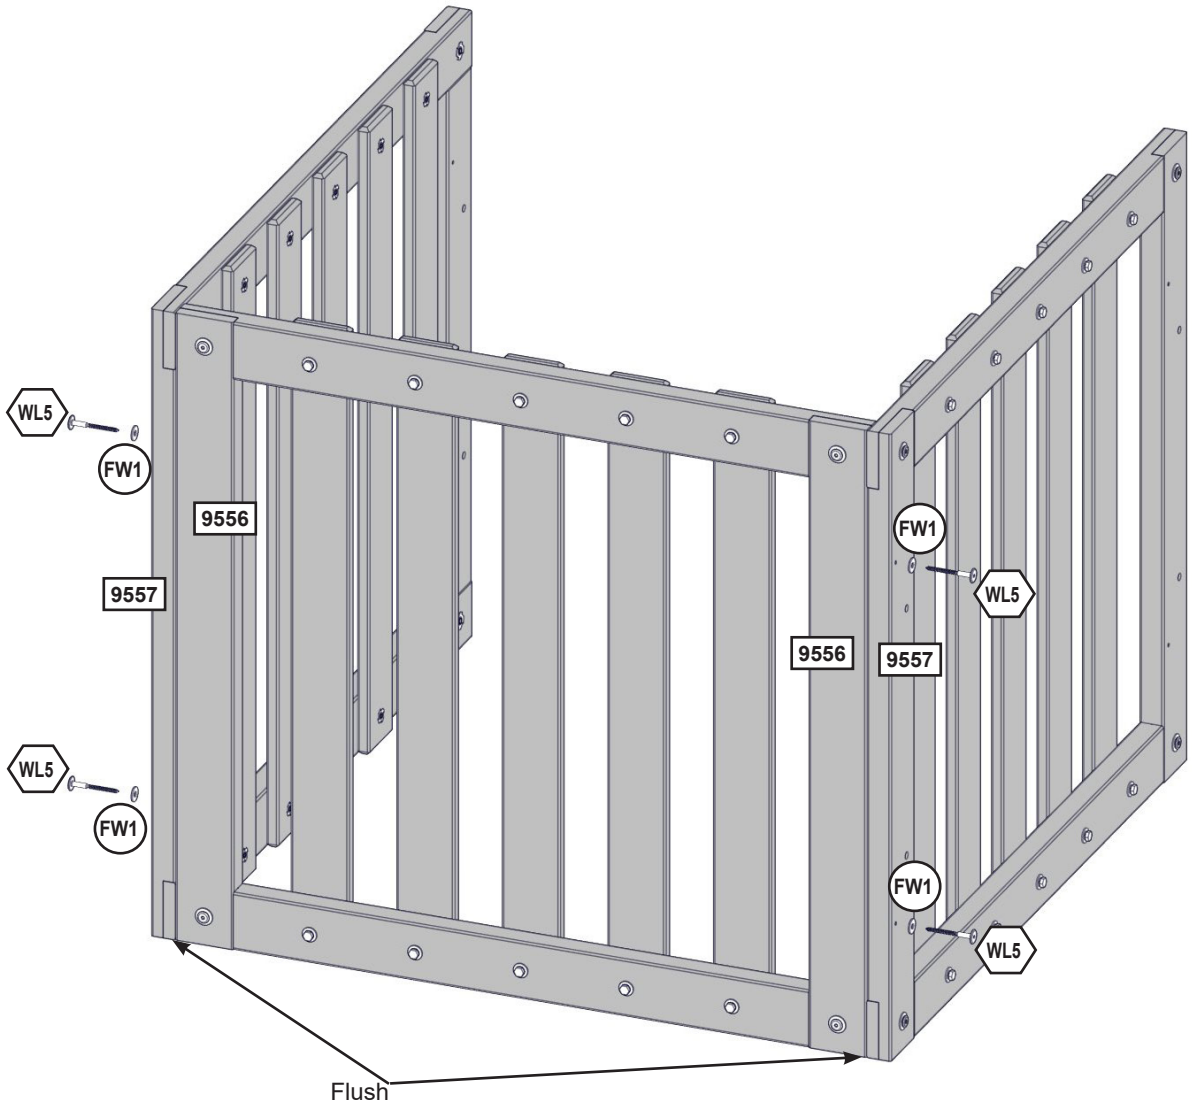


Hardware

4 x WL5 6.4mm x 63.5 mm (1/4 x 2-1/2 in)(FW1)

41 **Assemble T-Nuts first with hammer!**

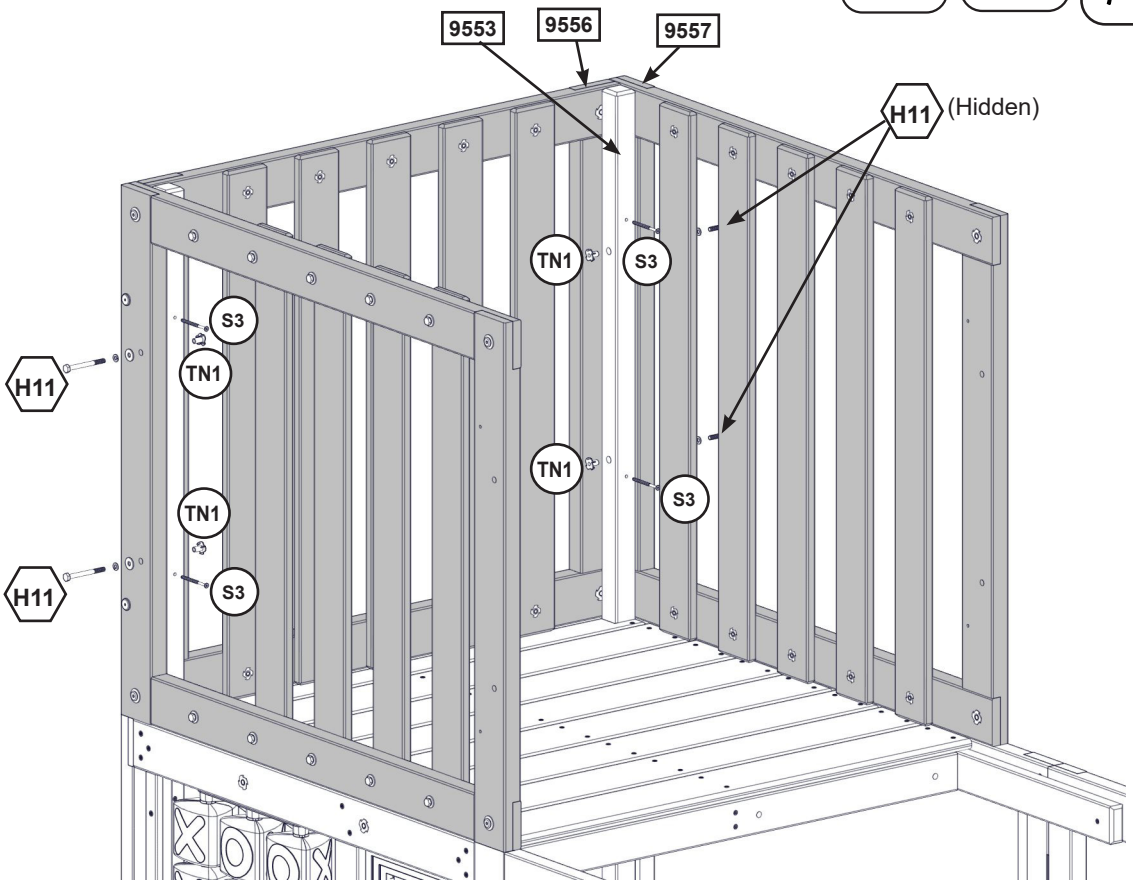

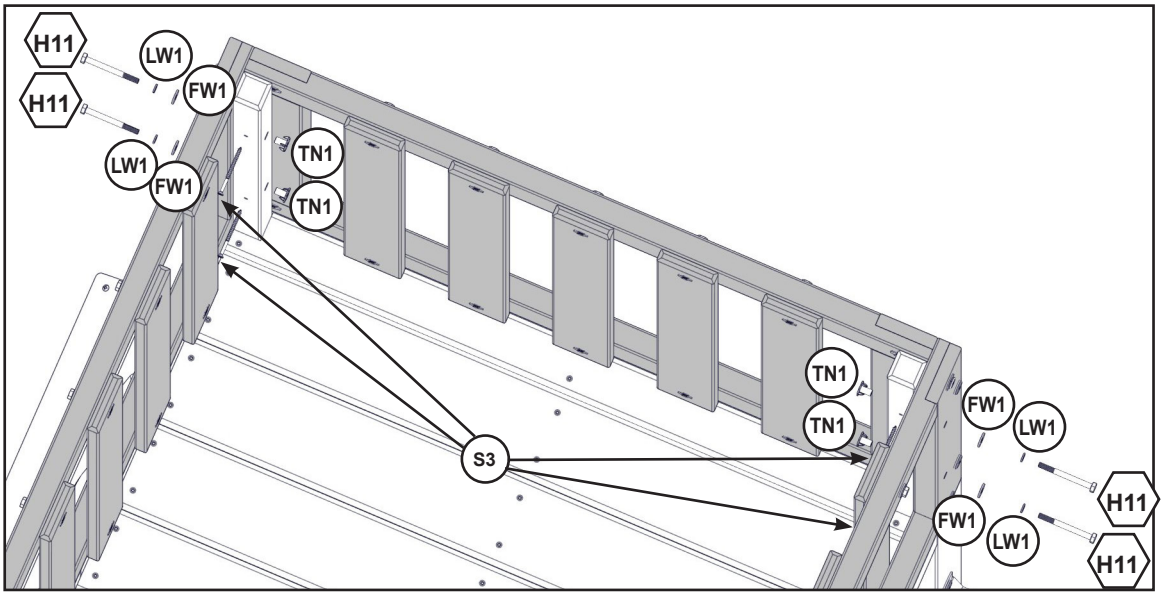

Hardware

4 x S3 **#8 x 63.5mm (#8 x 2-1/2 in)**


4 x H11 **6.4mm x 69.9mm (1/4 x 2-3/4 in)(FW1, LW1, TN1)**


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

42

Pre-drill holes using a 1/8” drill bit.

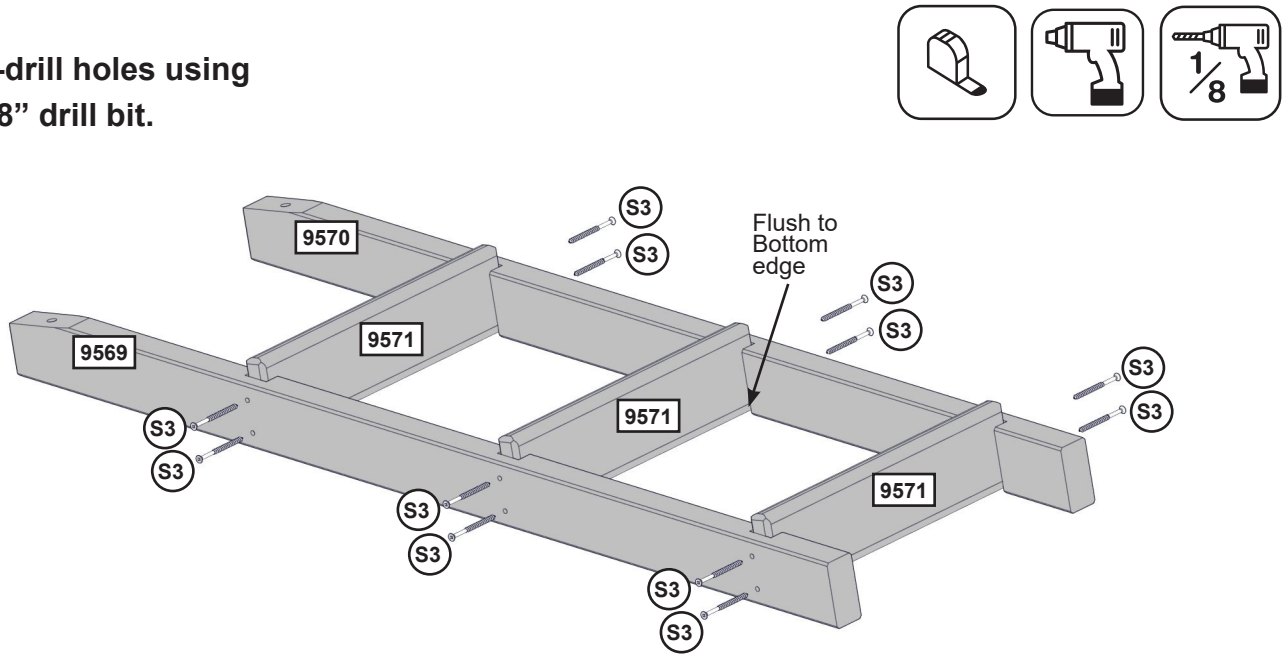

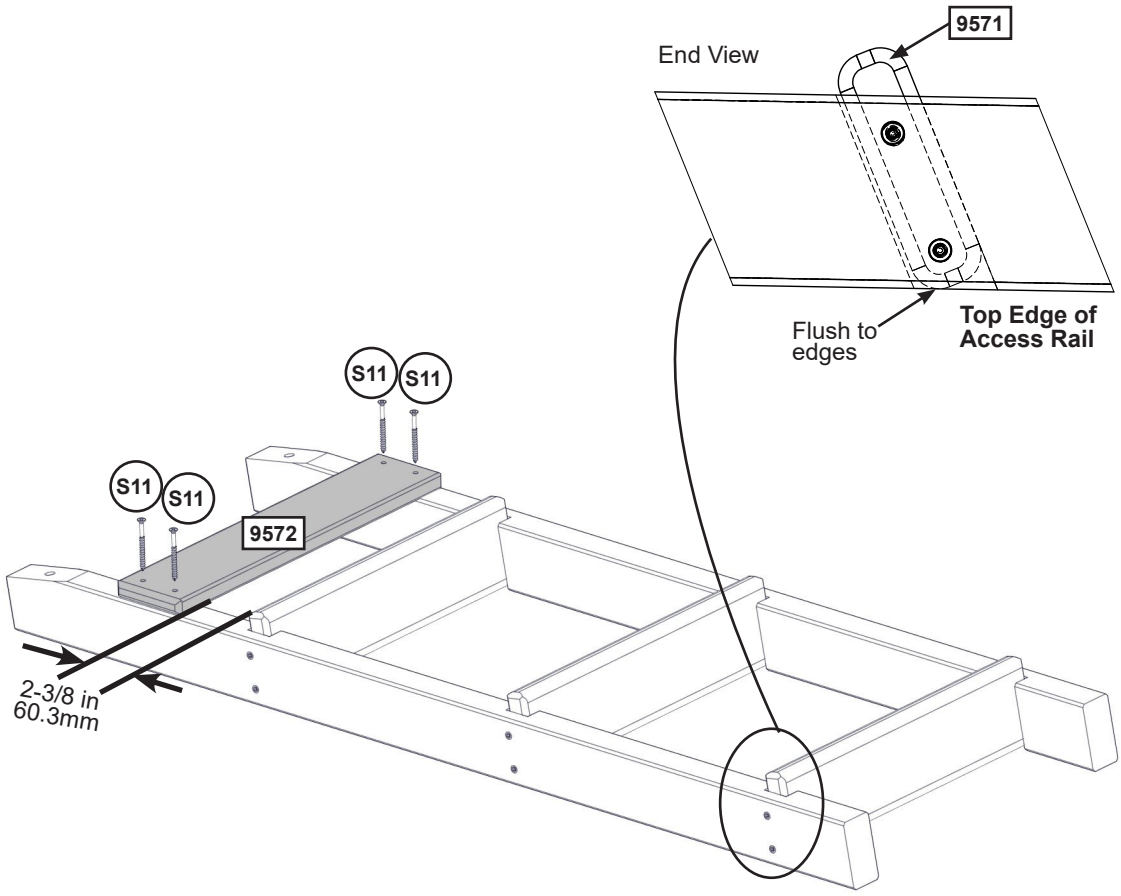

Wood Parts


- 1 x 9569 34.9 x 63.5 x 1011 mm (1 3/8 x 2 1/2 x 39 13/16 in)
- 1 x 9570 34.9 x 63.5 x 1011 mm (1 3/8 x 2 1/2 x 39 13/16 in)
- 3 x 9571 23.8 x 82.6 x 343 mm (15/16 x 3 1/4 x 12 in)
- 1 x 9572 15.9 x 76.2 x 374.6 mm (5/8 x 3 x 14 3/4 in)


Hardware

- 12 x S3 #8 x 63.5mm (#8 x 2-1/2 in)
- 4 x S11 #8 x 50.8mm (#8 x 2 in)

43

Assemble T-Nuts first with hammer!

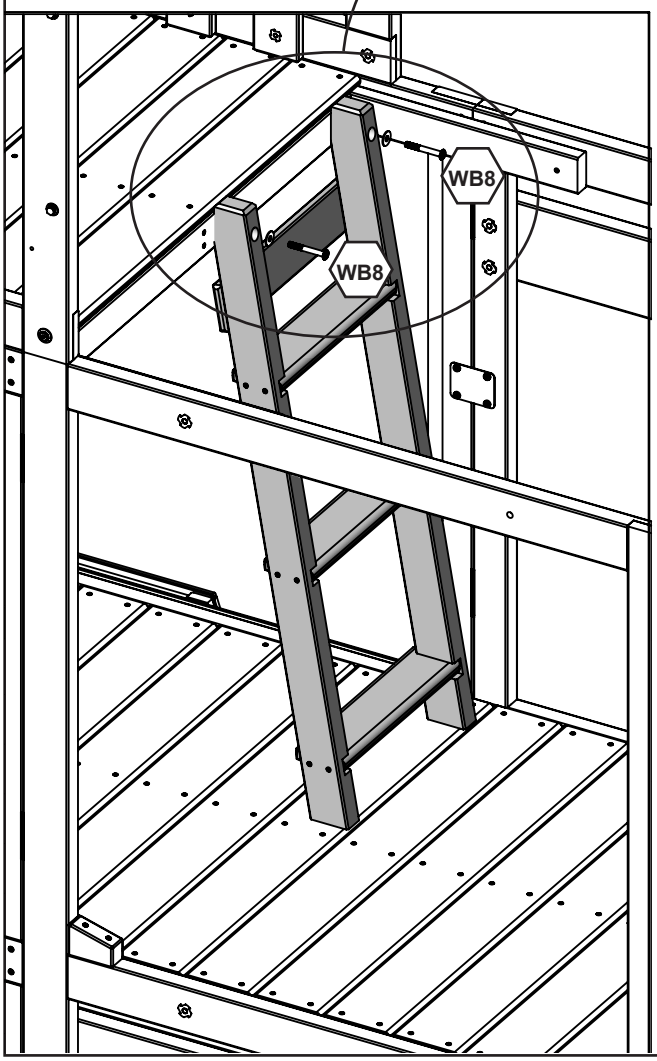

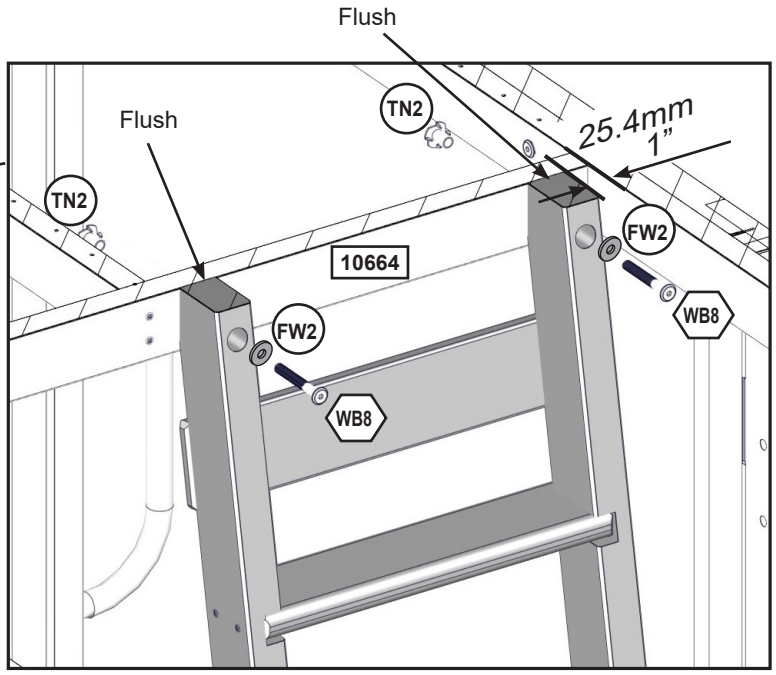


Hardware

2 x WB8 7.9mm x 60.3 mm (5/16 x 2-3/8 in)(FW2, TN2)

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

44

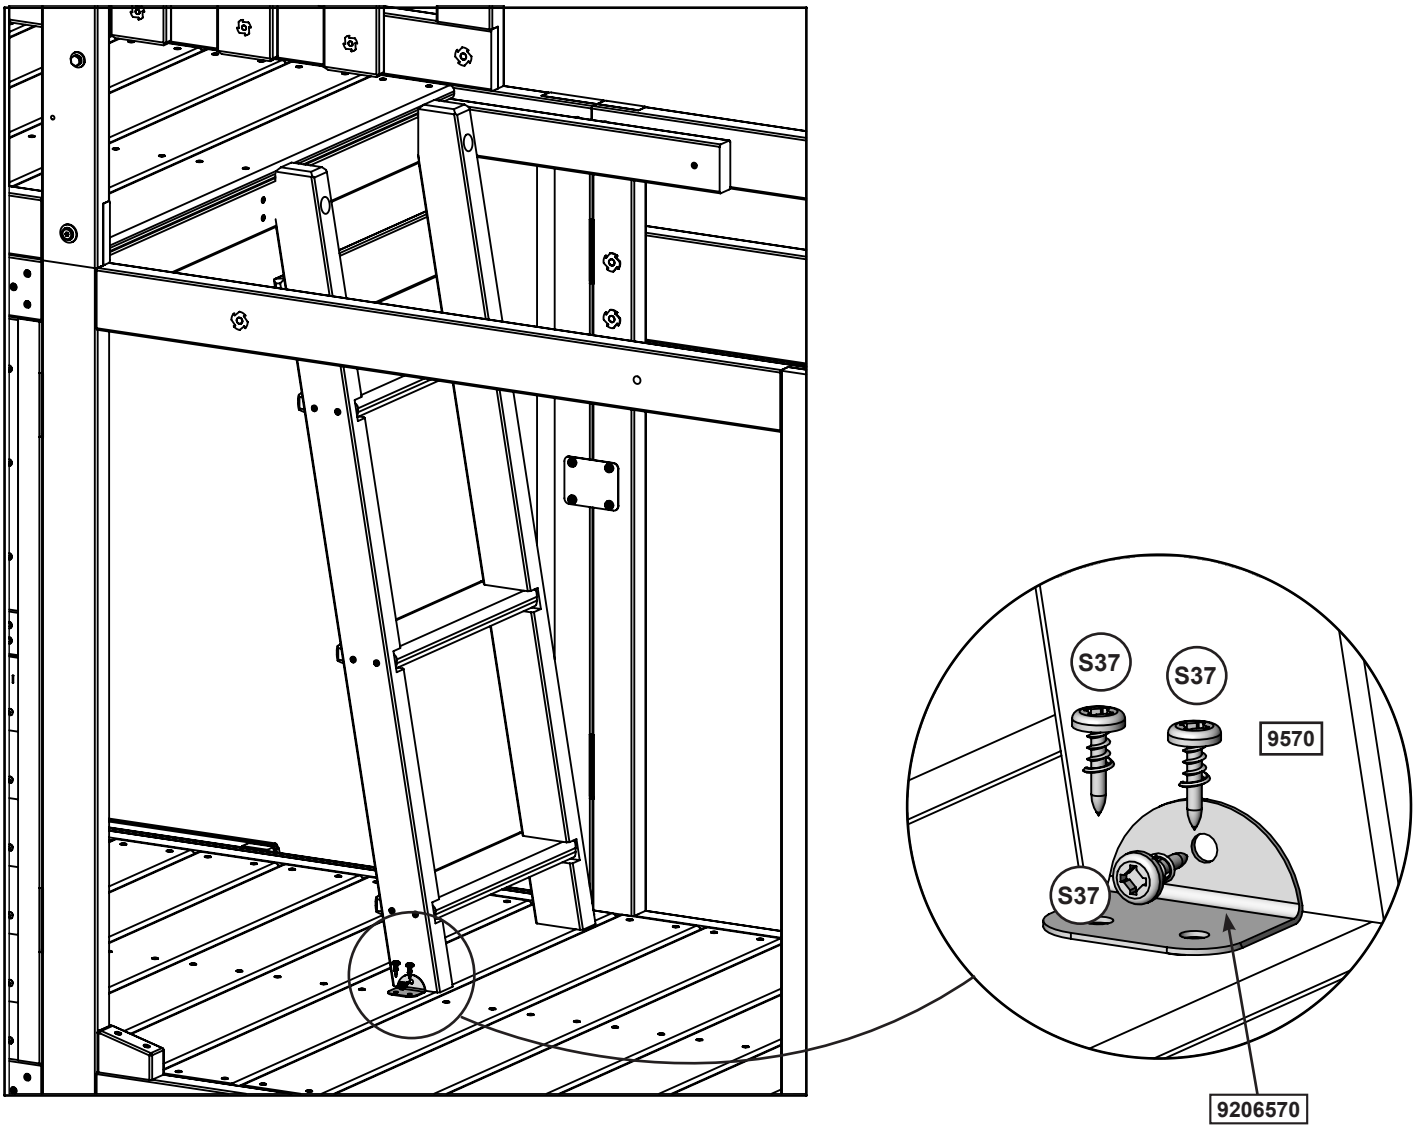


Hardware


3 x (S37) #7 x 15.9mm (#7 x 5/8 in)

Other Parts

1 x 9206570

45

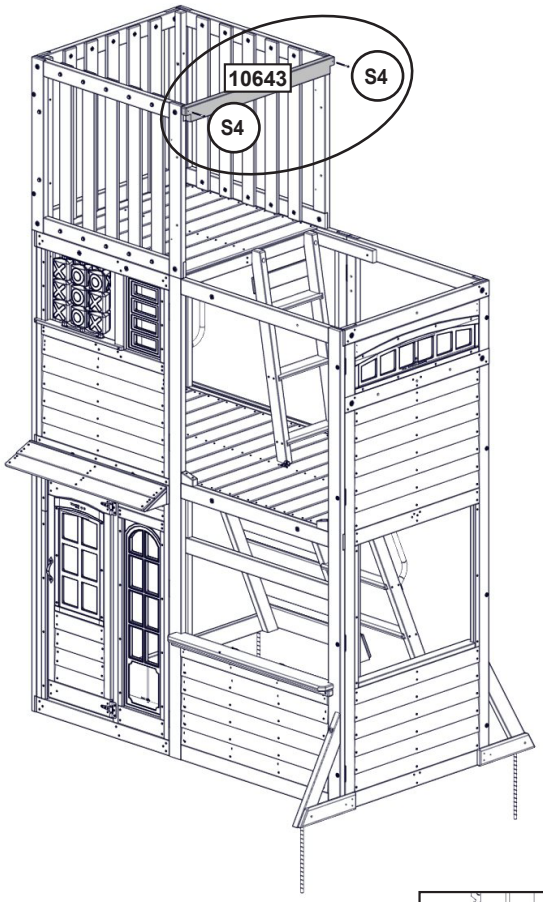

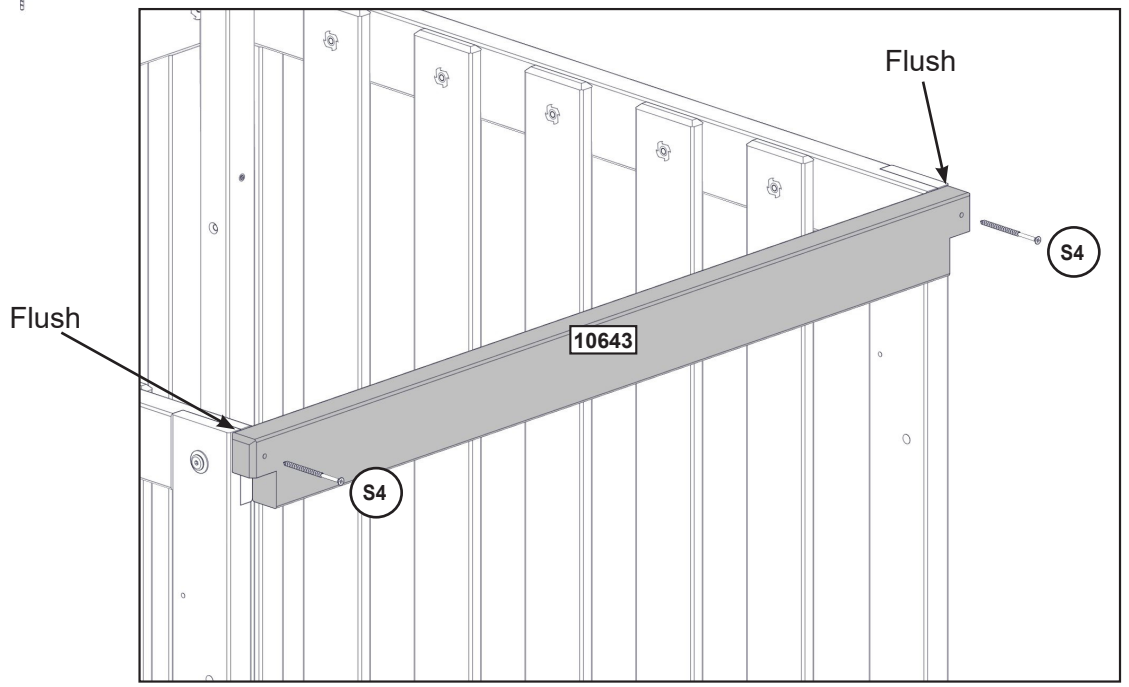

Wood Parts

1 x 10643 31.8 x 76.2 x 971.6 mm (1 1/4 x 3 x 38 1/4 in)


Hardware


2 x S4 #8 x 76.2mm (#8 x 3 in)


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

46

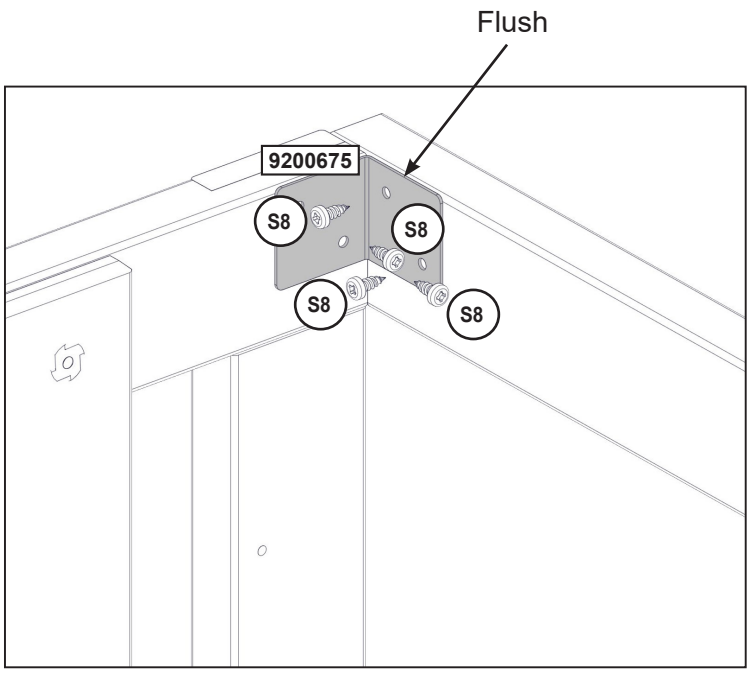

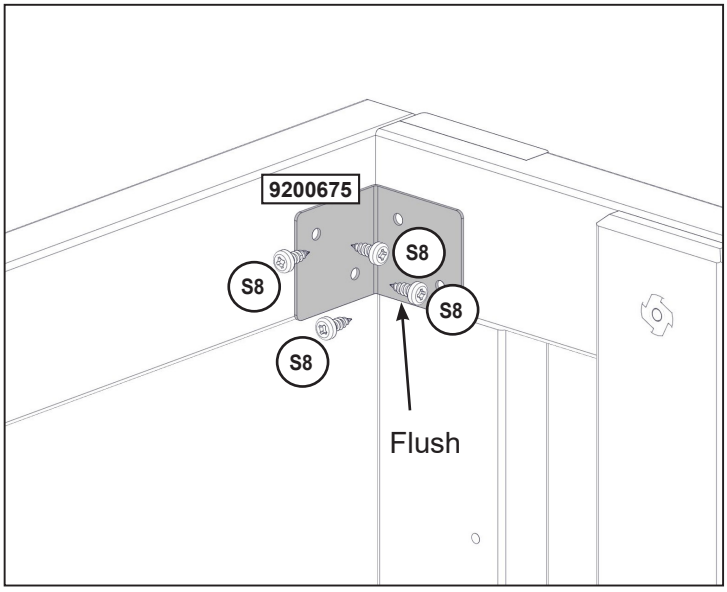

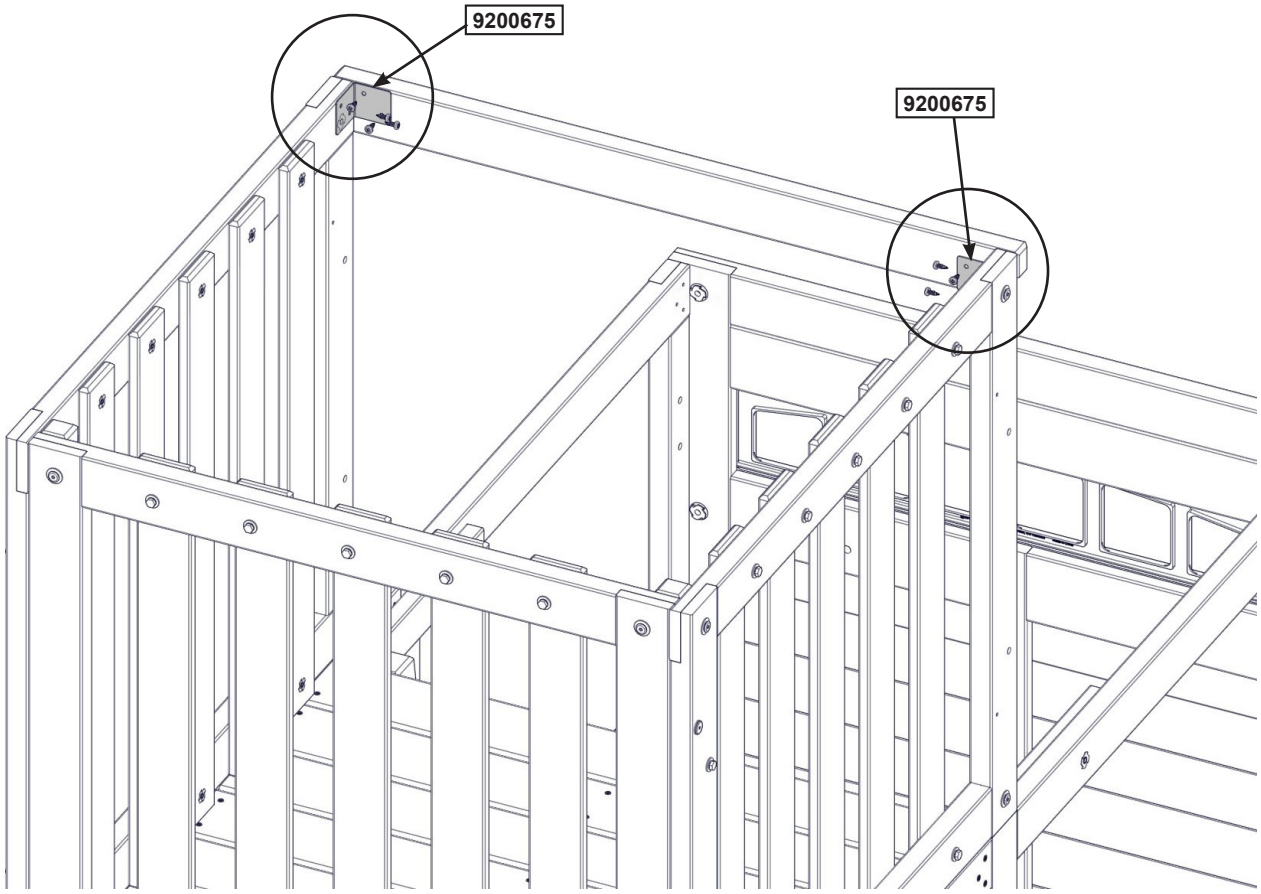


Hardware


8 x (S8) #12 x 19mm (#12 x 3/4 in)

Other Parts

2 x 9200675

47

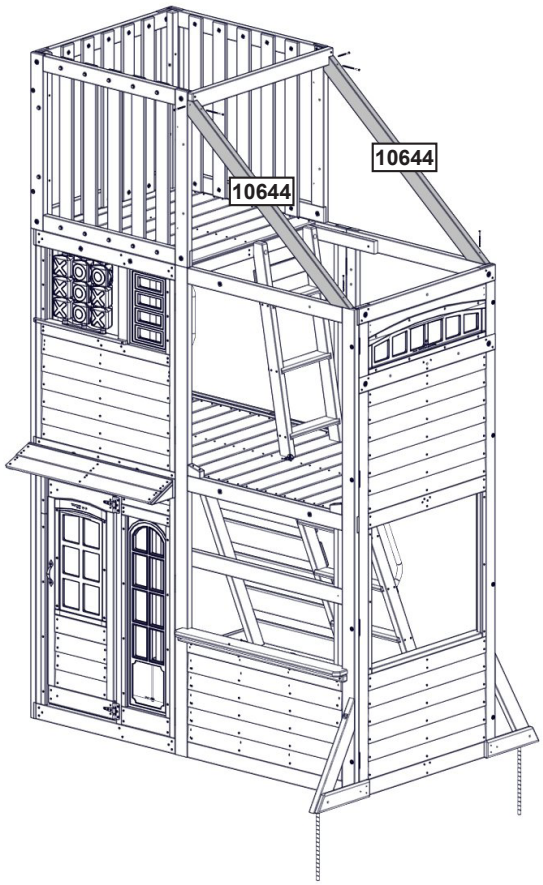

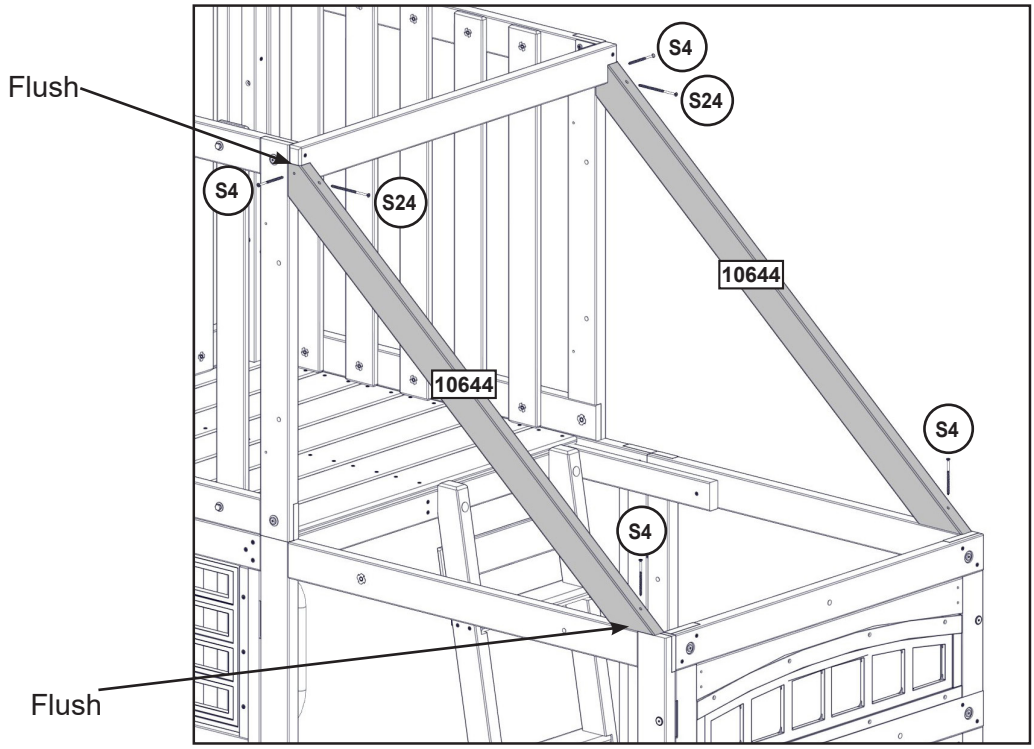

Wood Parts

2 x 10644 31.8 x 76.2 x 1270 mm (1 1/4 x 3 x 50 in)

Hardware


4 x S4 #8 x 76.2mm (#8 x 3 in)

2 x S24 #10 x 101.6mm (#10 x 4 in)


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu


48

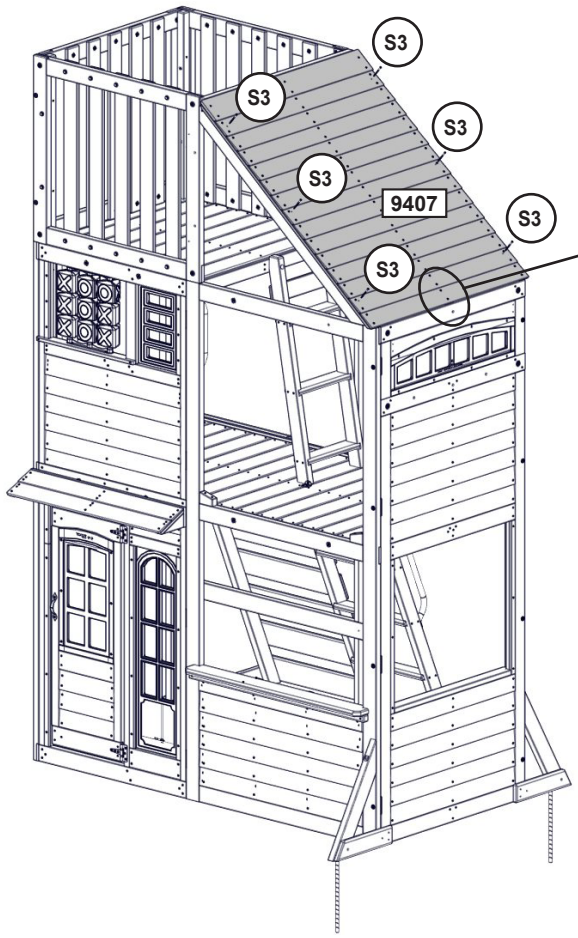



Inside View

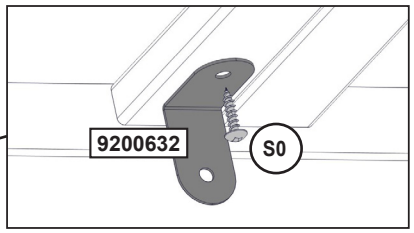

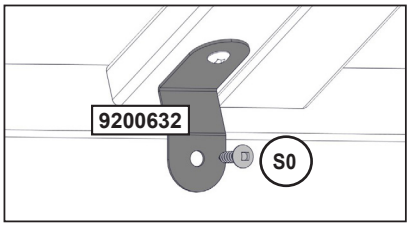

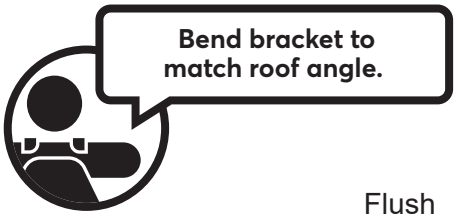

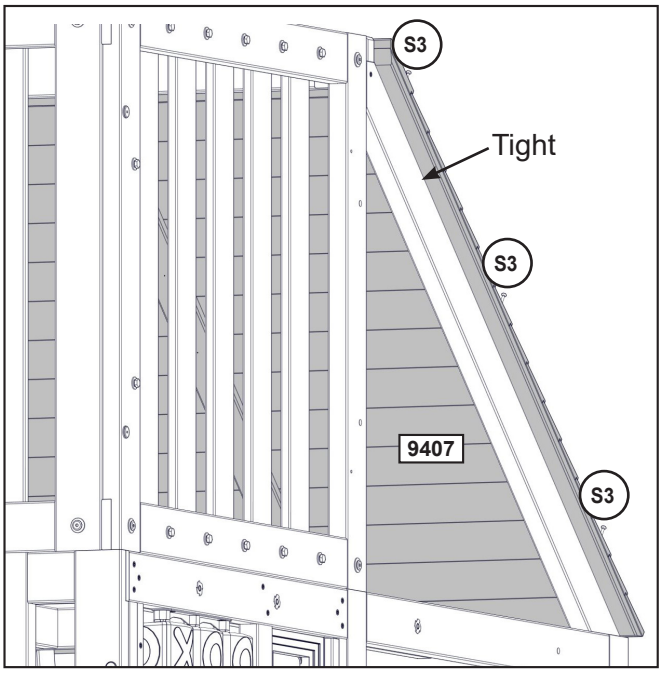

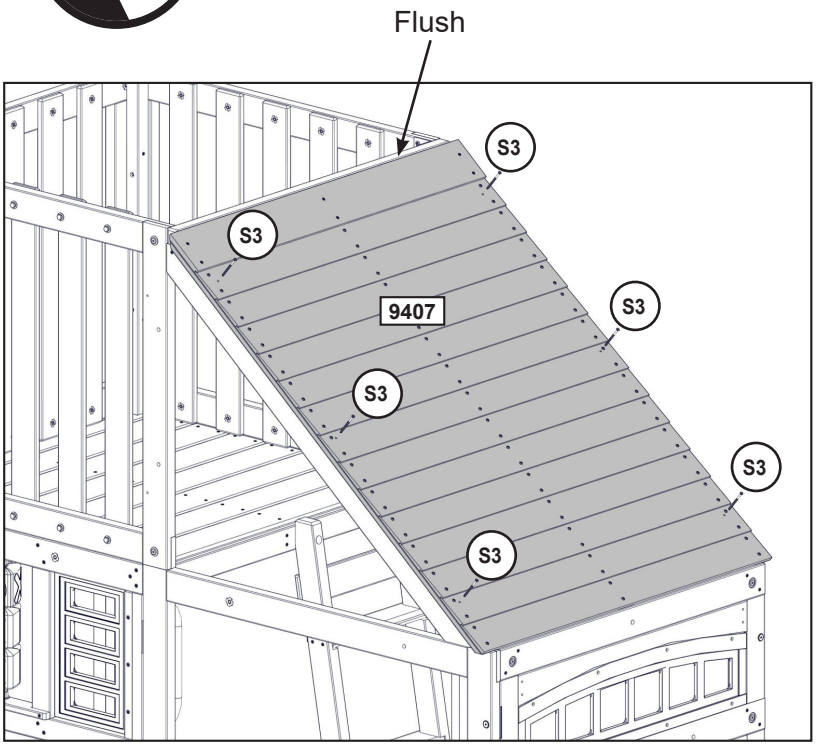

Wood Parts

1 x 9407 28.6 x 1284.3 x 1022.4 mm (1 1/8 x 50 9/16 x 40 1/4 in)

Hardware


6 x S3 #8 x 63.5mm (#8 x 2-1/2 in)


2 x S0 #8 x 22.2mm (#8 x 7/8 in)

Other Parts

1 x 9200632


49

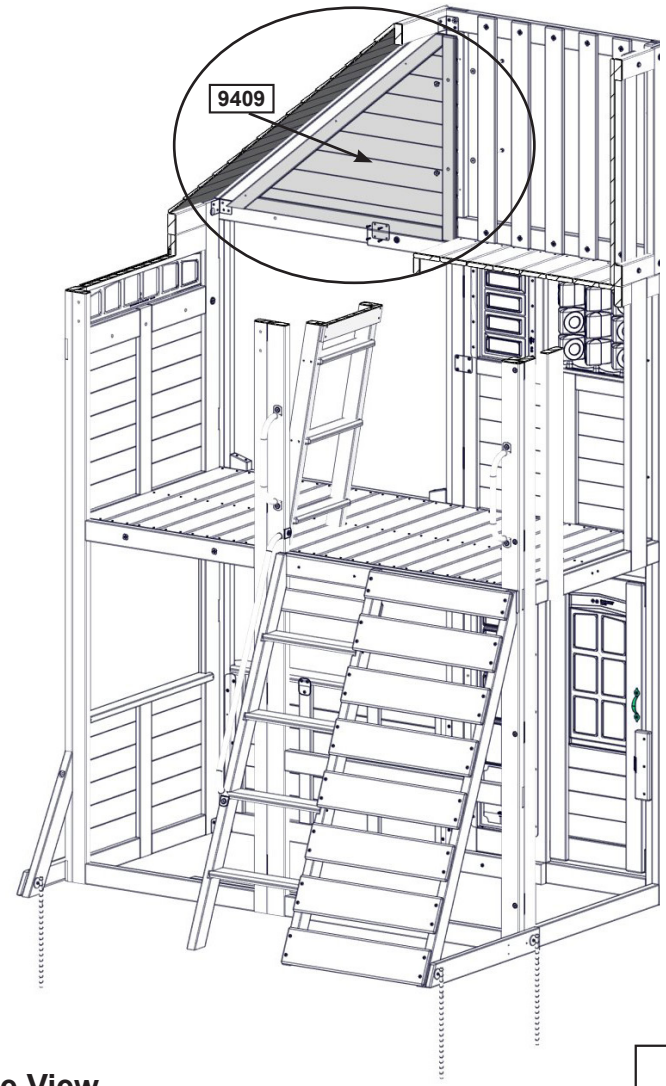

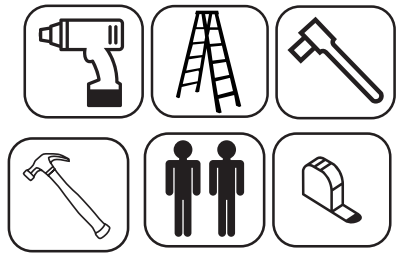


Assemble T-Nuts first with hammer!

Outside View

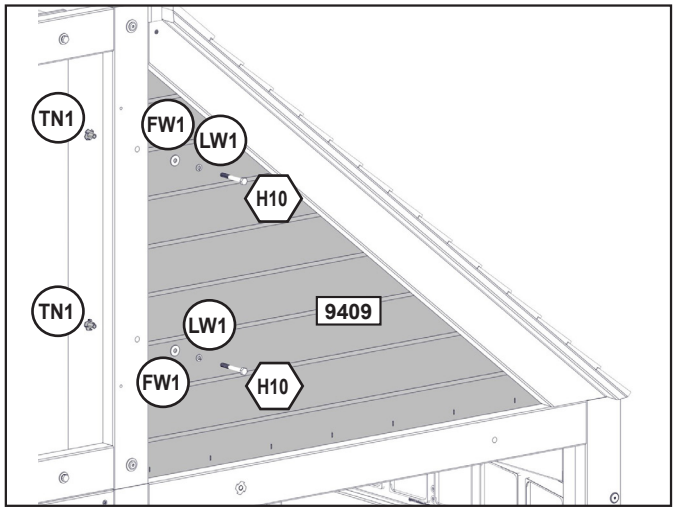

Inside View

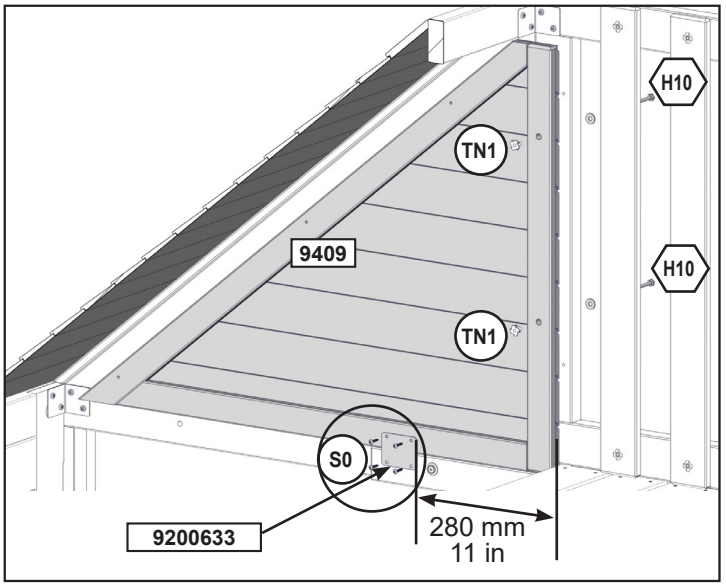

Wood Parts

1 x 9409 25.4 x 762 x 990.6 mm (1 X 30 X 39 in)

Hardware

4 x S0 #8 x 63.5mm (#8 x 2-1/2 in)

2 x H10 6.4mm x 57.2mm (1/4 x 2-1/4 in)(FW1, LW1, TN1)

Other Parts

1 x 9200633


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

50

Note: Structure partly removed for clarity.

Inside View

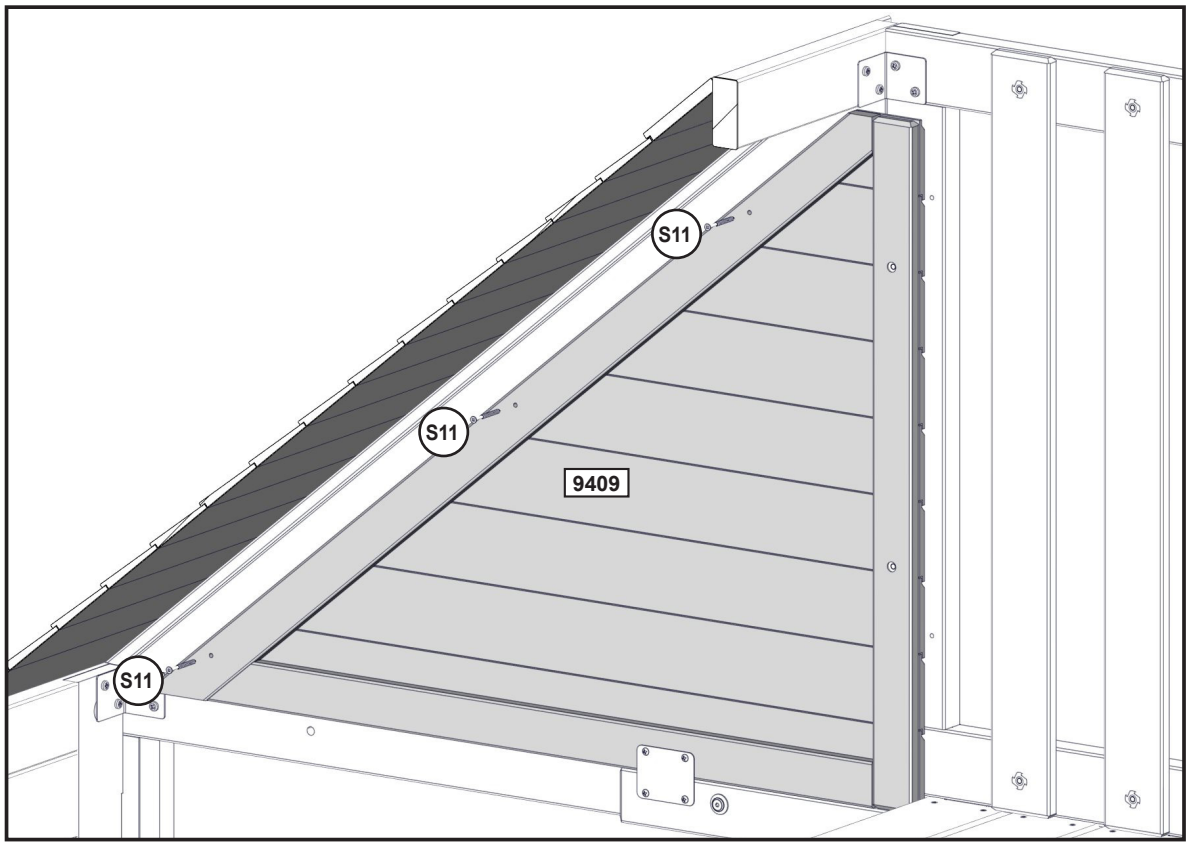


Hardware

3 x (S11) #8 x 50.8mm (#8 x 2 in)


51




Assemble T-Nuts first with hammer!

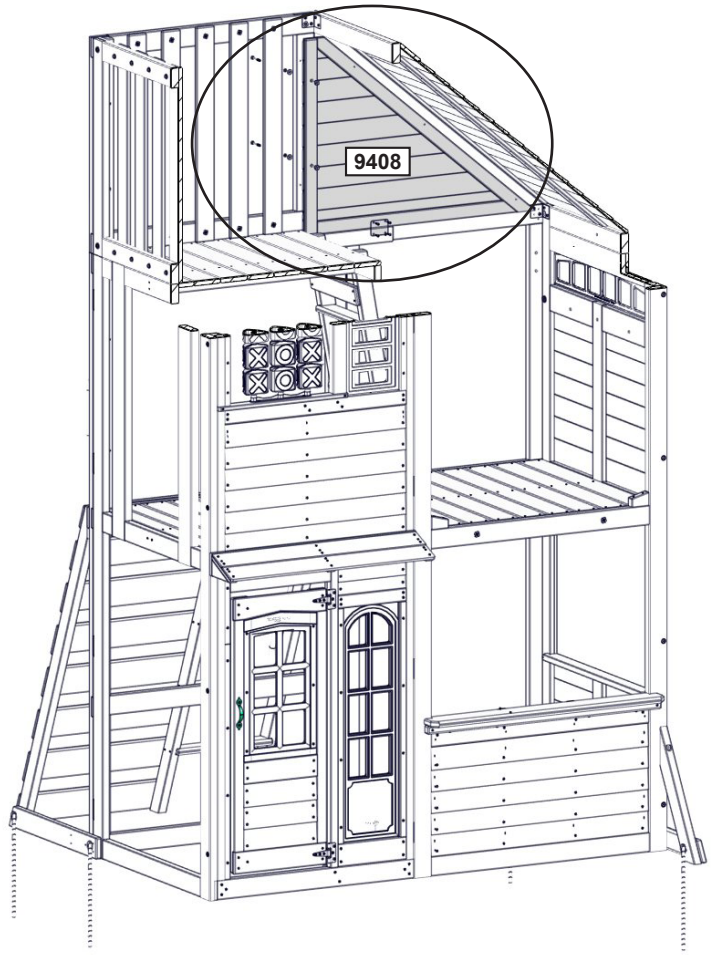

Outside View

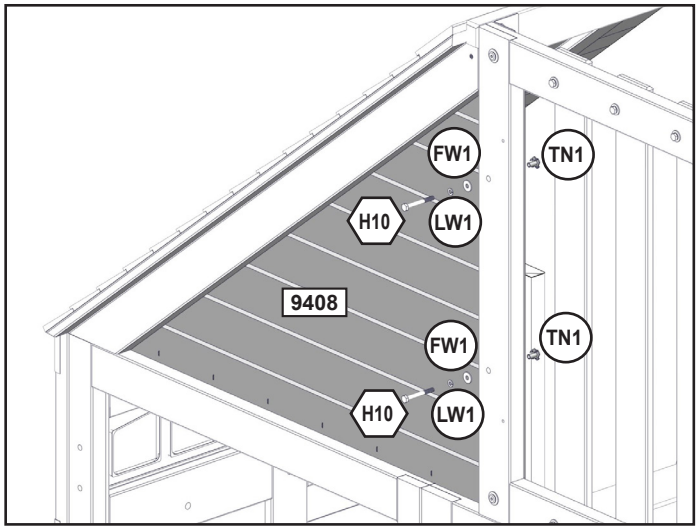

Inside View

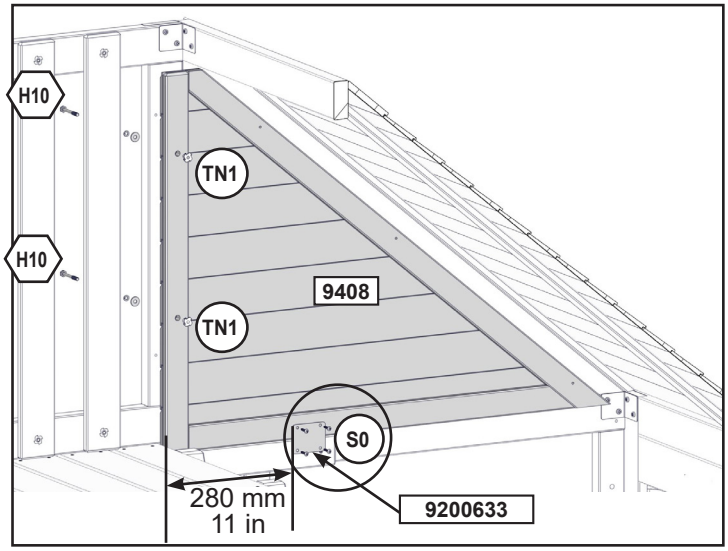

Wood Parts

1 x 9408 25.4 x 762 x 990.6 mm (1 X 30 X 39 in)

Hardware

4 x S0 #8 x 63.5mm (#8 x 2-1/2 in)

2 x H10 6.4mm x 57.2mm (1/4 x 2-1/4 in)(FW1, LW1, TN1)

Other Parts


1 x 9200633

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

52

Inside View

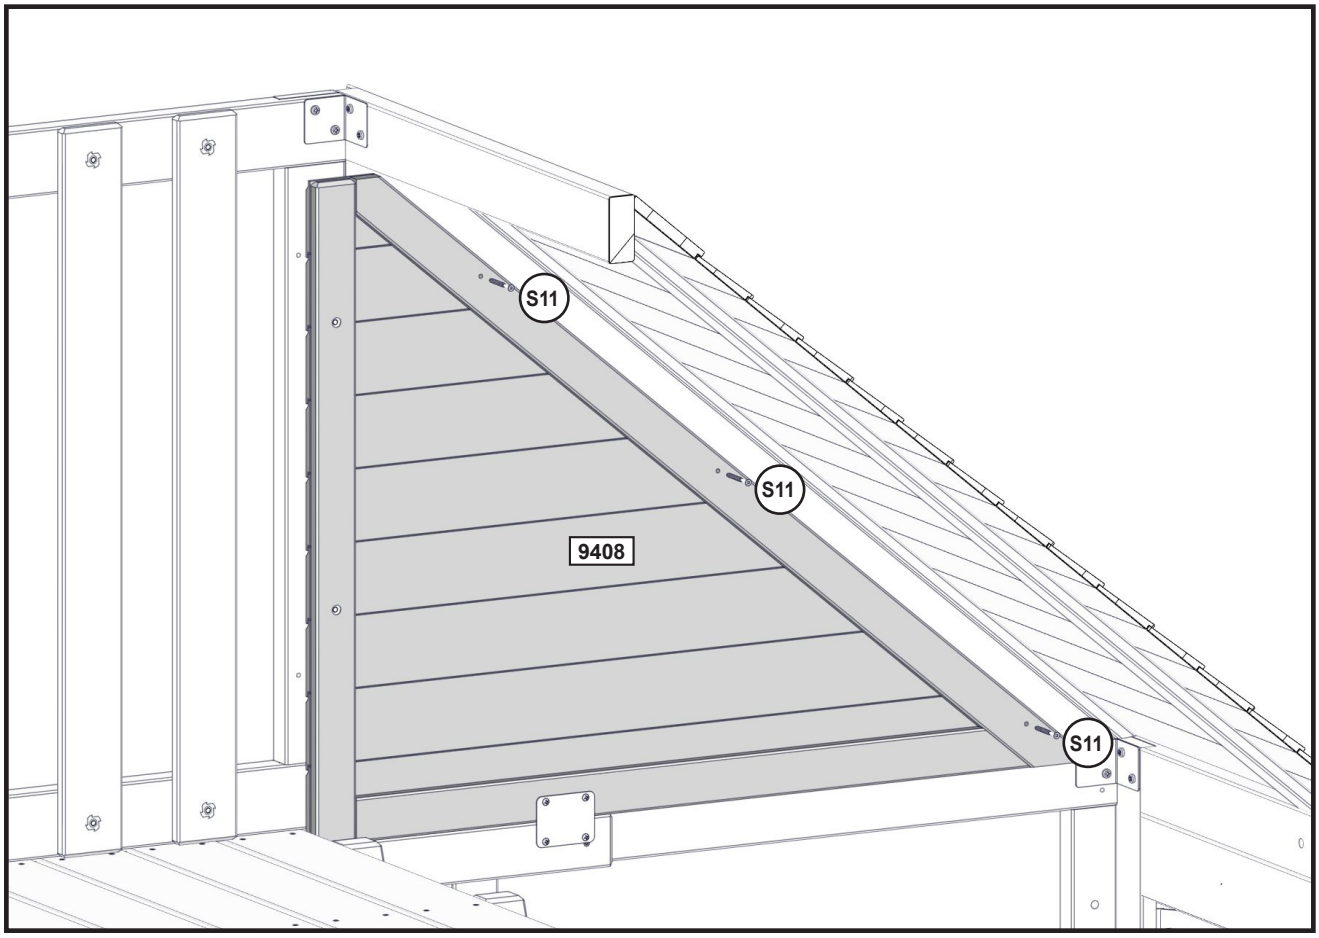


Hardware


3 x (S11) #8 x 50.8mm (#8 x 2 in)

53



Pre-drill holes using a 3/16 in drill bit.

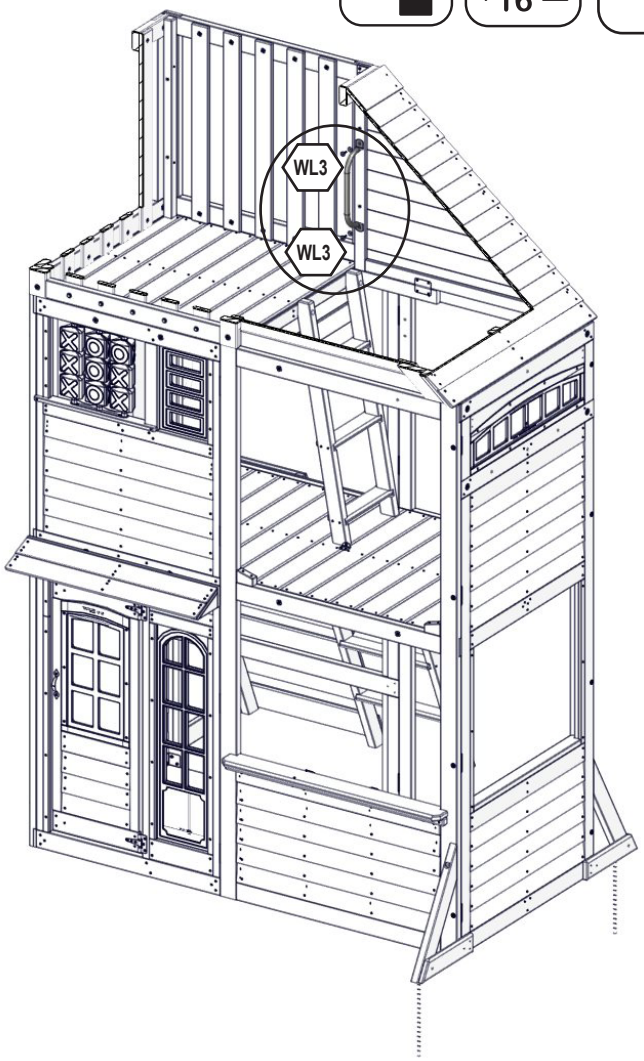

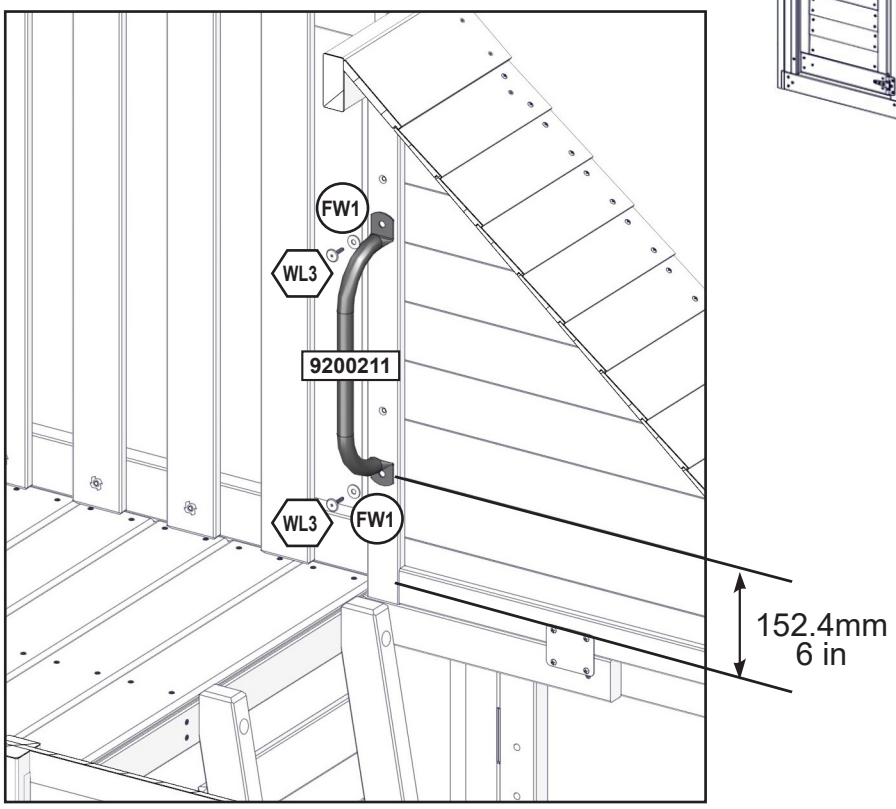

Hardware

2 x WL3 6.4mm x 34.9mm (1/4 x 1-3/8 in)

2 x FW1


Other Parts


1 x 9200211

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

54

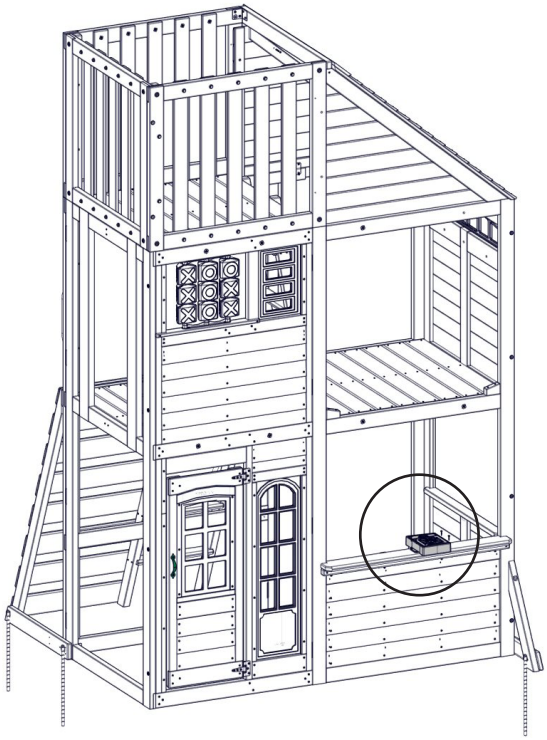

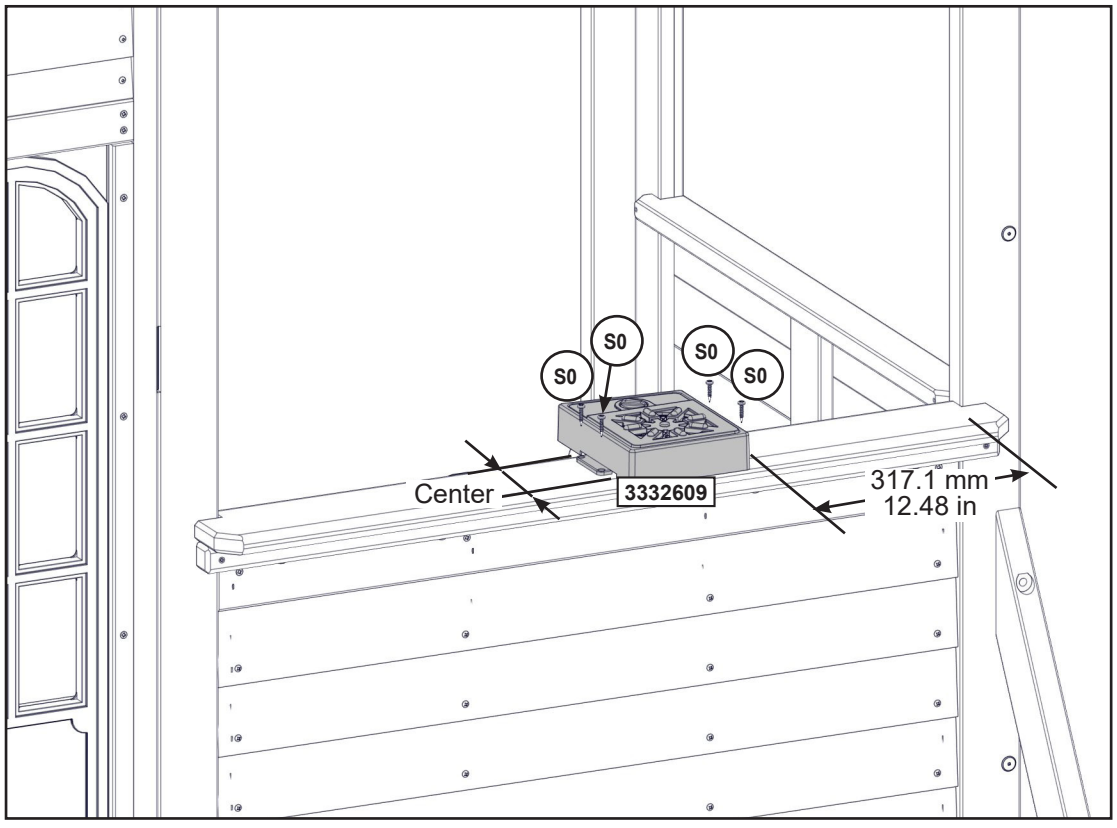


Hardware


4 x (S0) #8 x 22.2mm (#8 x 7/8 in)


Other Parts

1 x 3332609

55

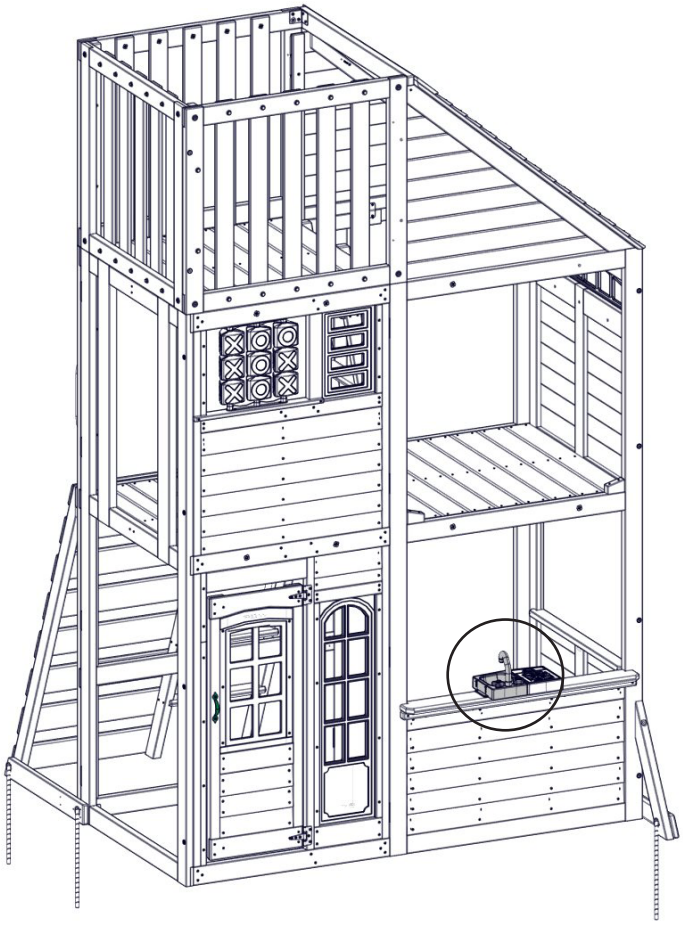

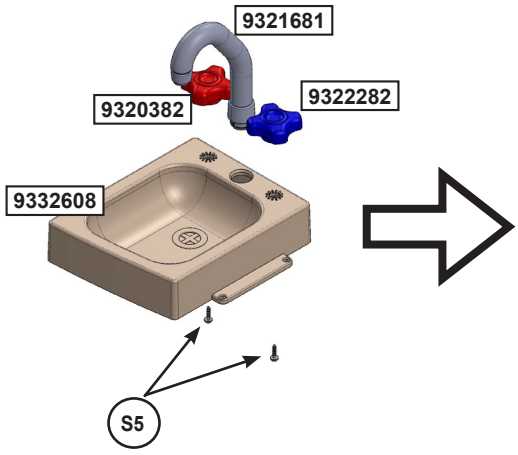

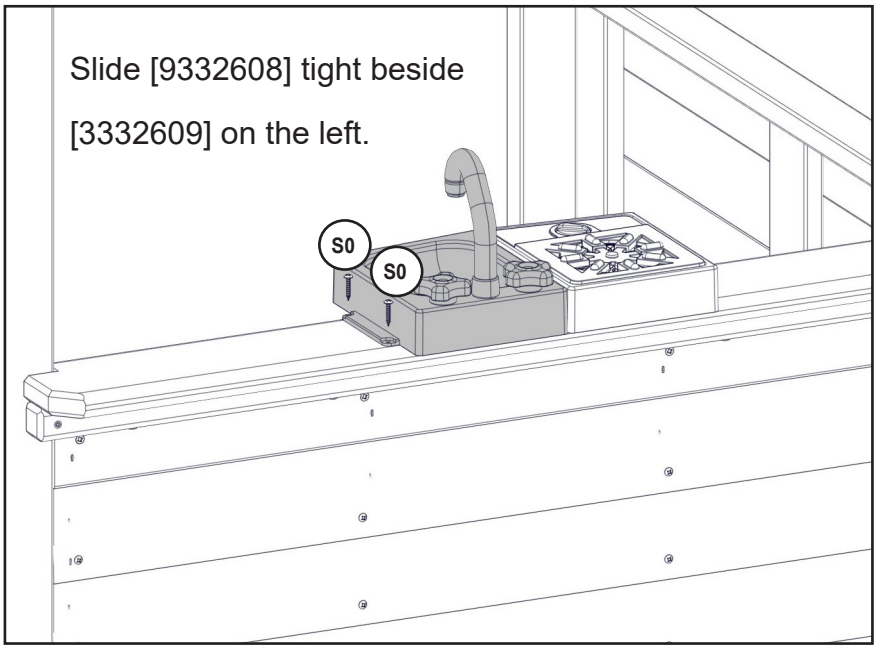

Hardware

2 x S0 #8 x 22.2mm (#8 x 7/8 in)

2 x S5 #8 x 12.7mm(#8 x 1/2 in)

Other Parts

1 x 9321681

1 x 9322282

1 x 9332608


1 x 9320382

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu


56

Inside View

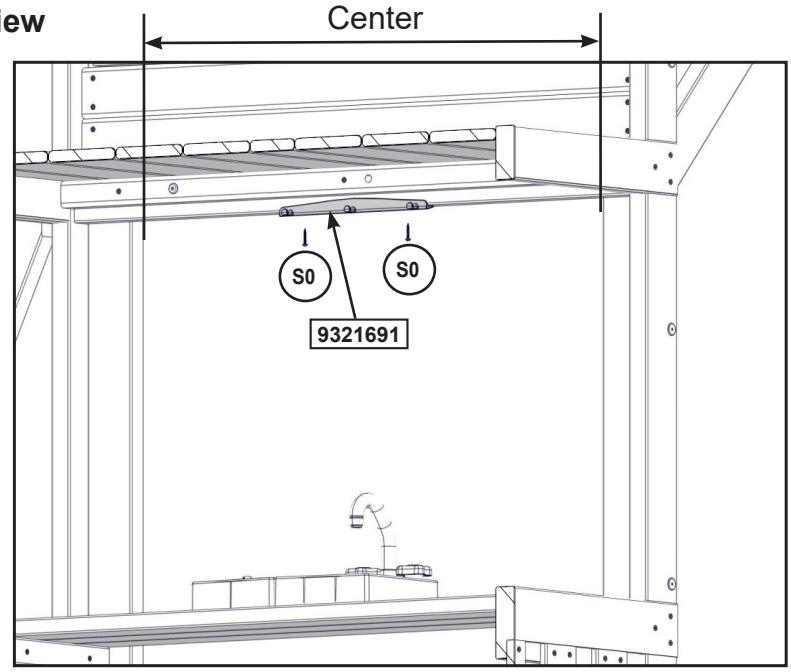

Inside View

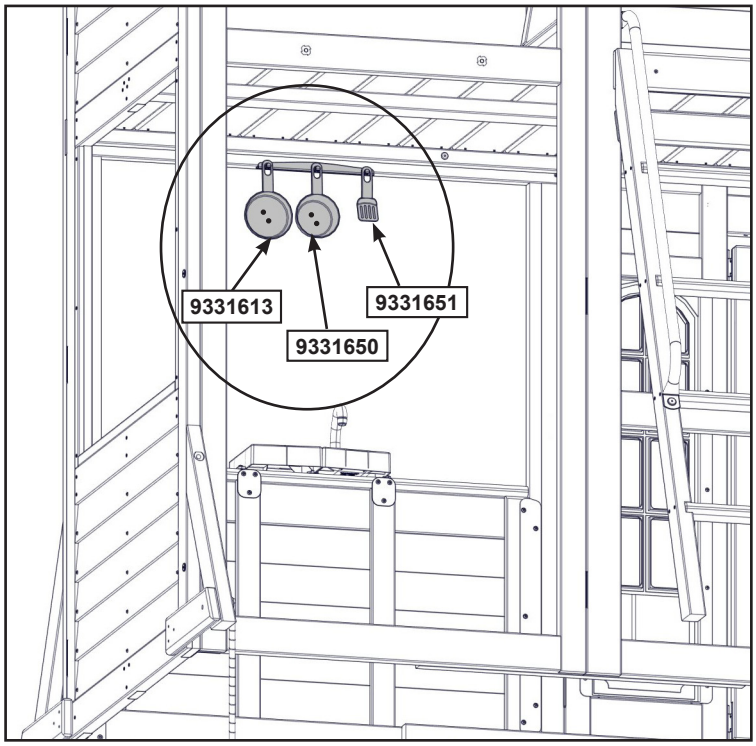

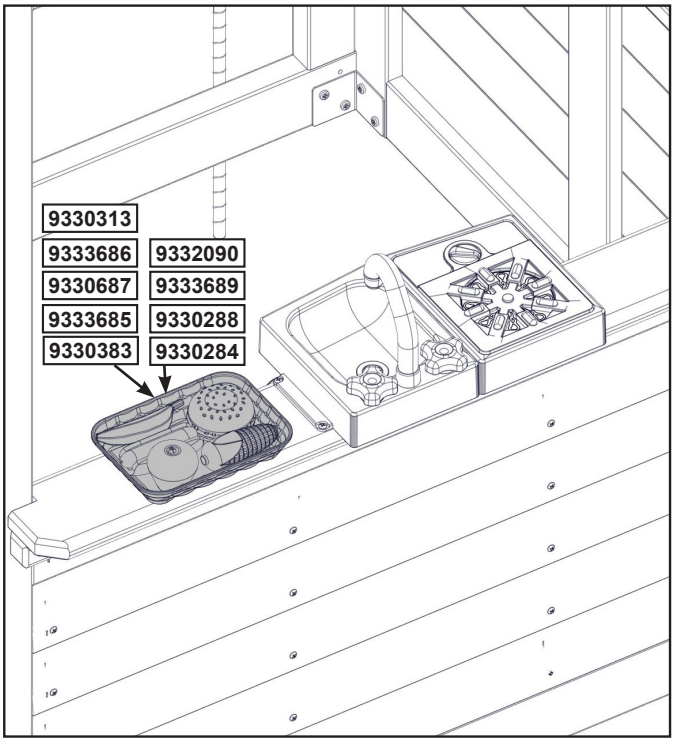


Hardware

2 x (S0) #8 x 22.2mm (#8 x 7/8 in)

Other Parts


1 x 9331613	1 x 9331651	1 x 9330313	1 x 9330687	1 x 9330383	1 x 9333689
1 x 9331650	1 x 9321691	1 x 9333686	1 x 9333685	1 x 9332090	1 x 9330288
					1 x 9330284

57

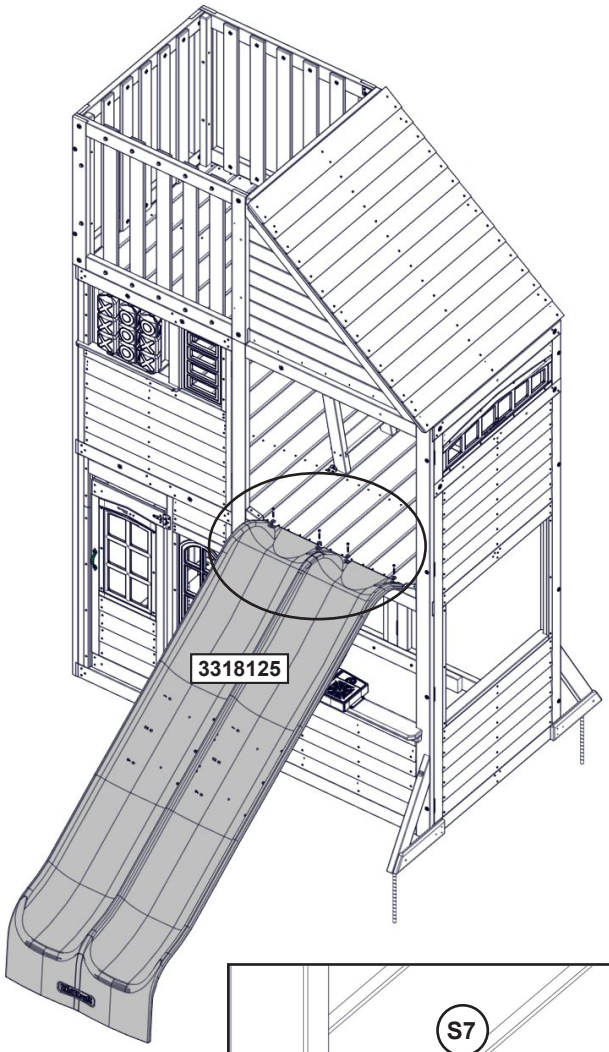

Note: Pre-drill all holes using a 1/8 in drill bit before installing the pan screws.

Place Slide centered in the opening.

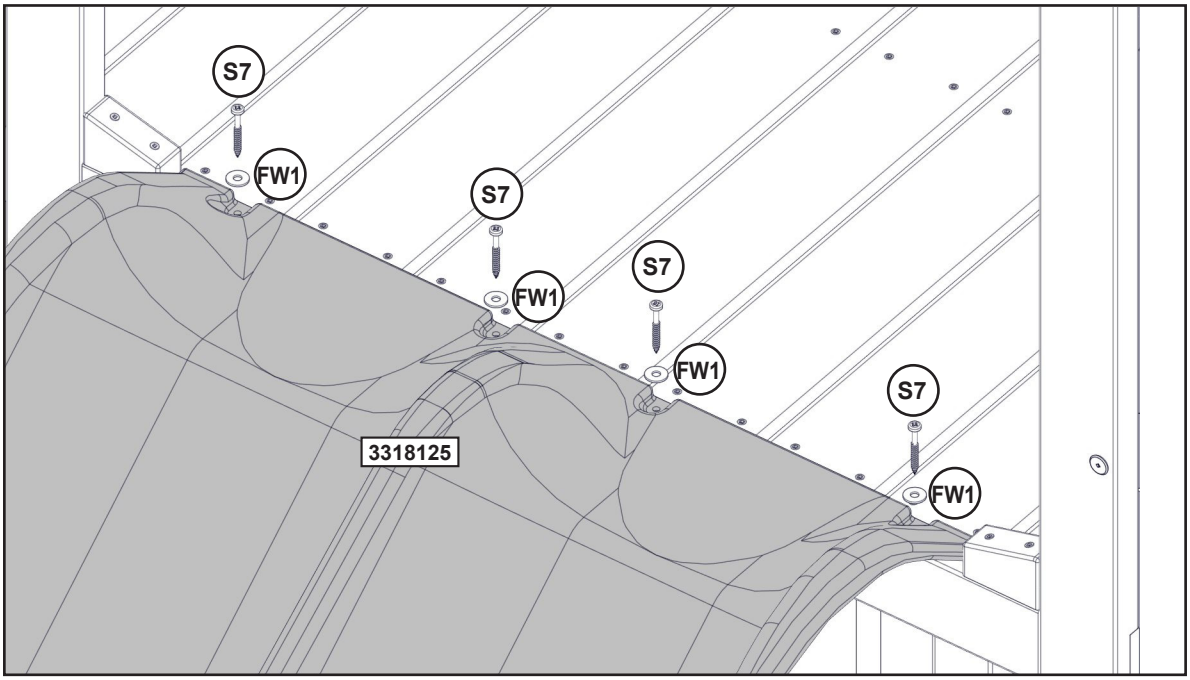

Hardware

4 x S7 #12 x 2 in (50.8 mm)

4 x FW1

Other Parts


1 x 3318125


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

58

Rock Wall Ladder assembled to the fort in a previous step.

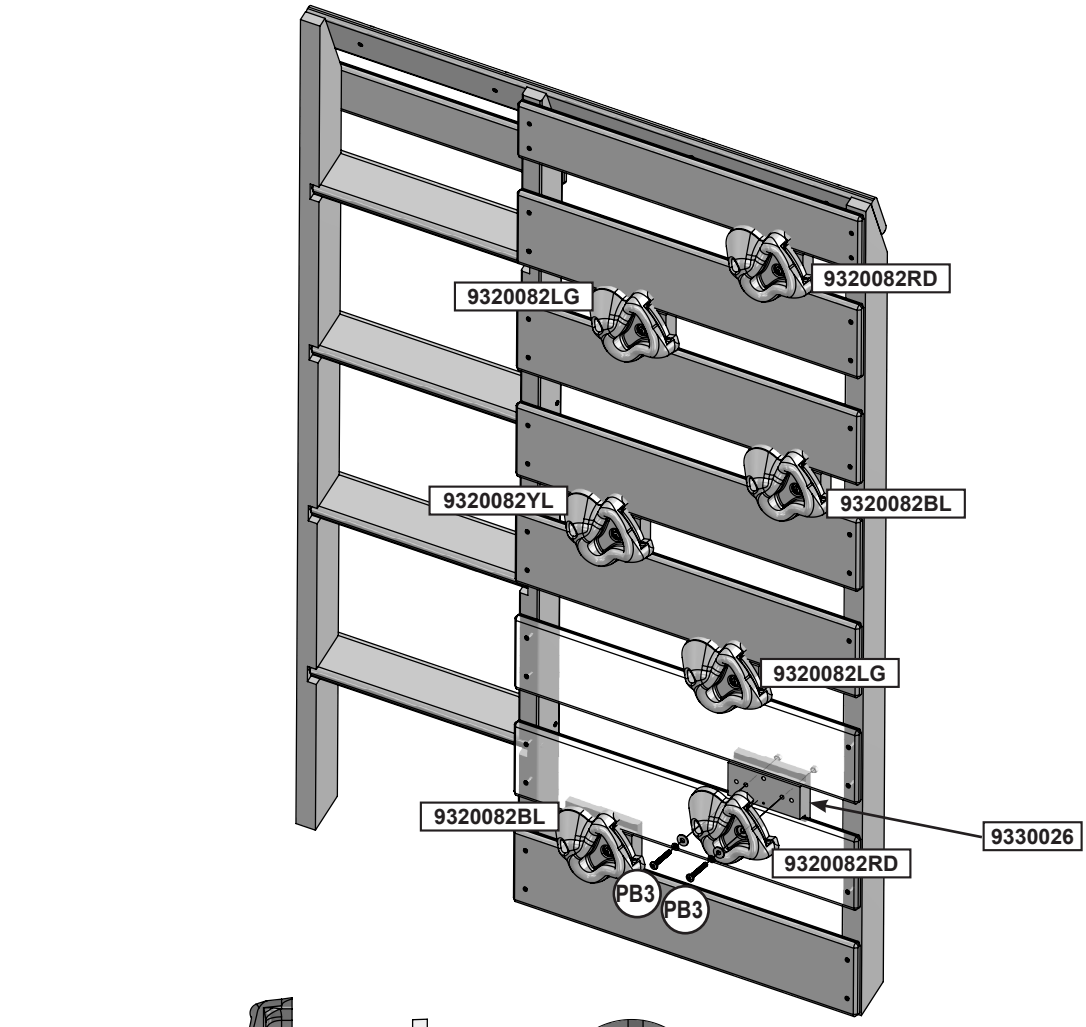

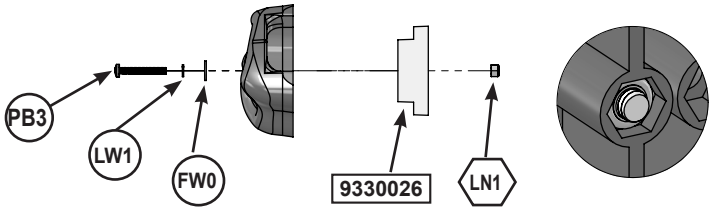


Hardware


14 x (PB3) 6.4mm x 44.5 mm (1/4 x 1-3/4 in) (FW0,LW1,LN1)

Other Parts

2 x	9320082BL	2 x	9320082LG
2 x	9320082RD	1 x	9320082YL
7 x	9330026		

59 **Assemble T-Nuts first with hammer!**

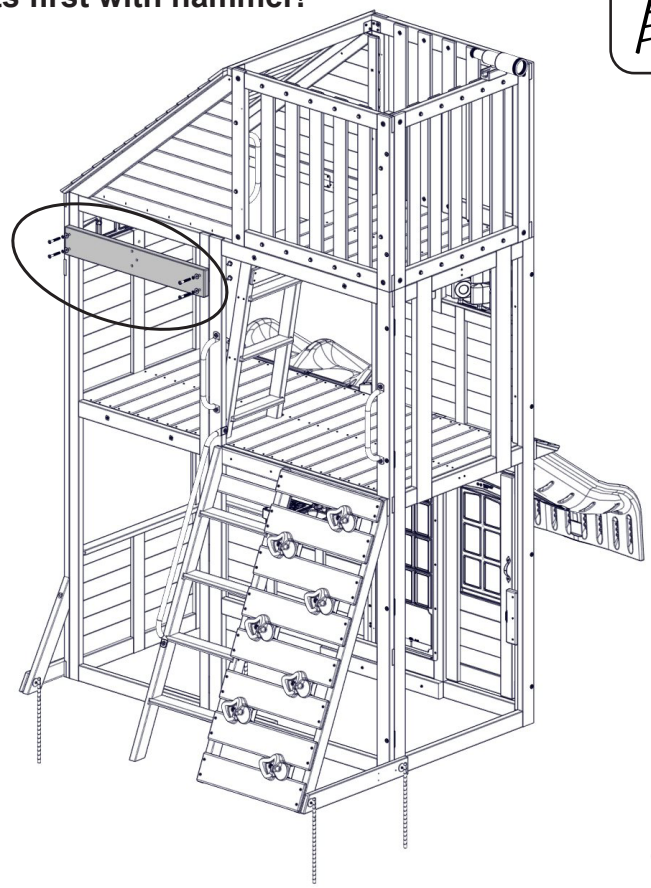

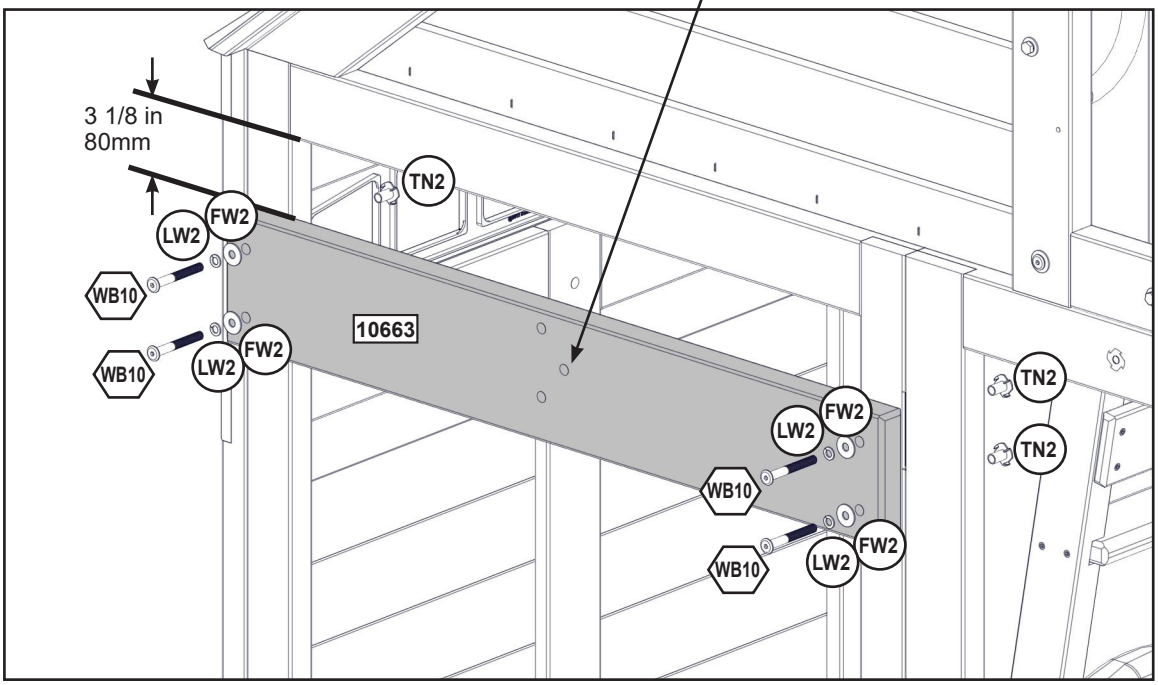

Wood Parts

1 x 10663 31.8 x 133.4 x 846.3 mm (1 1/4 x 5 1/4 x 33 5/16 in)

Hardware


4 x WB10 7.9mm x 66.6 mm (5/16 x 2-5/8 in)(FW2, LW2, TN2)


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu

60

Assemble T-Nuts first with hammer!

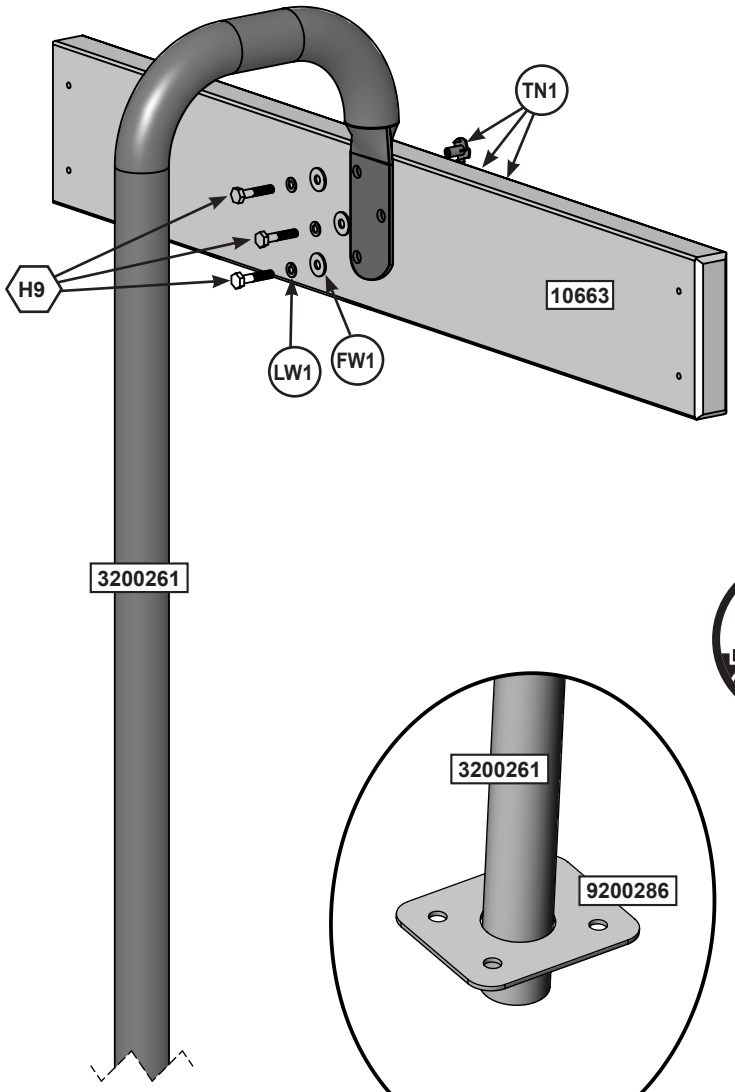

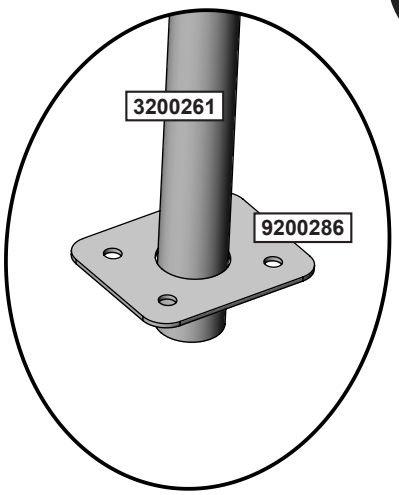

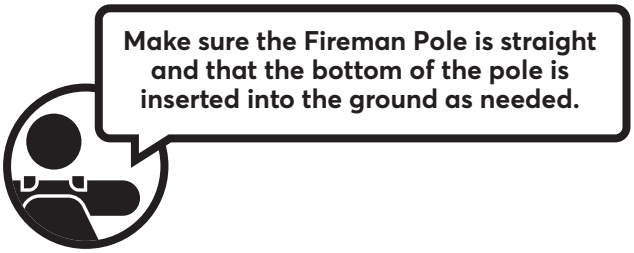


Hardware


3 x H9 6.4mm x 31.8mm (1/4 x 1-1/4 in)(FW1, LW1, TN1)

Other Parts

1 x 9200286
1 x 3200261

61

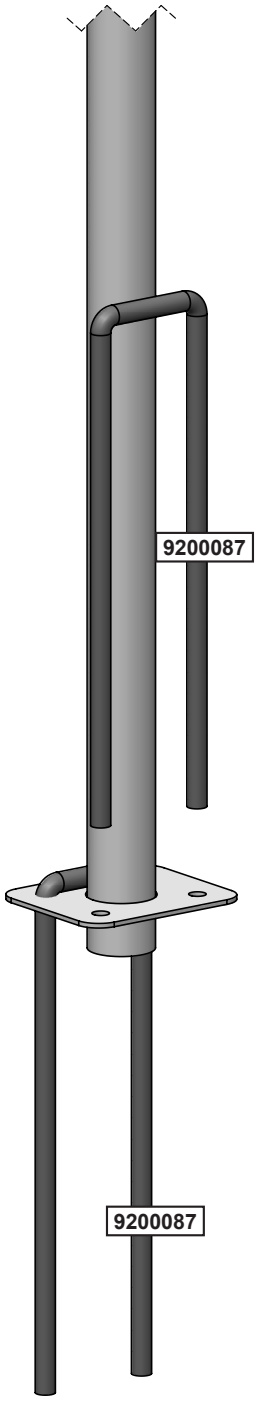

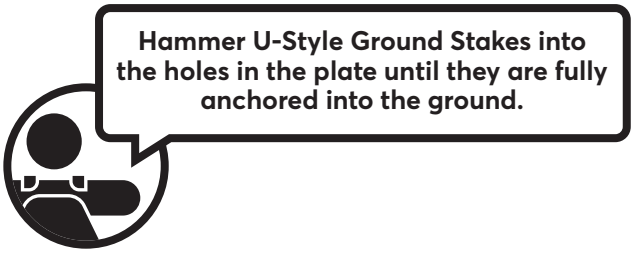


Other Parts


2 x 9200087

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

62

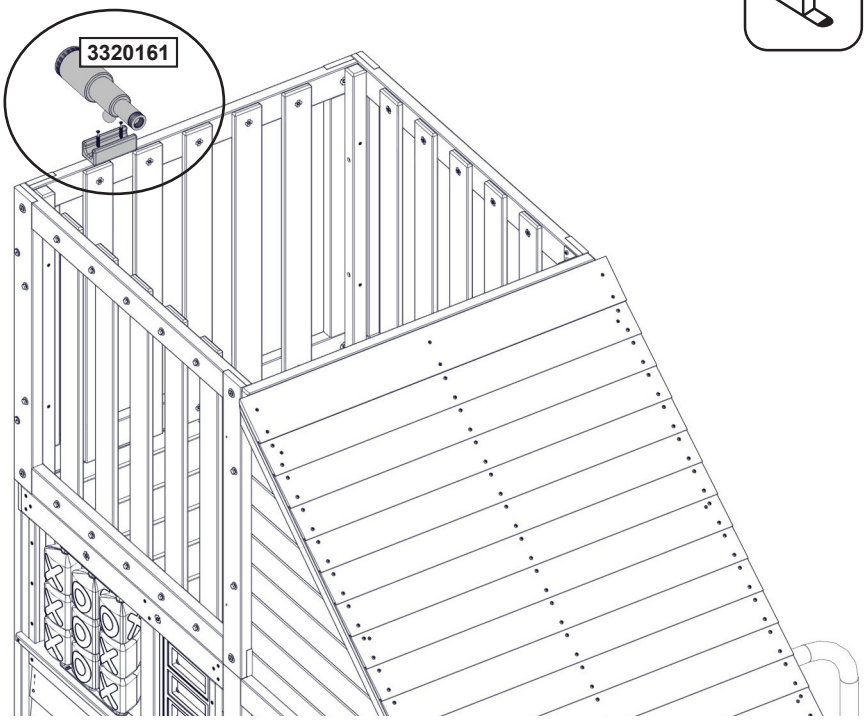

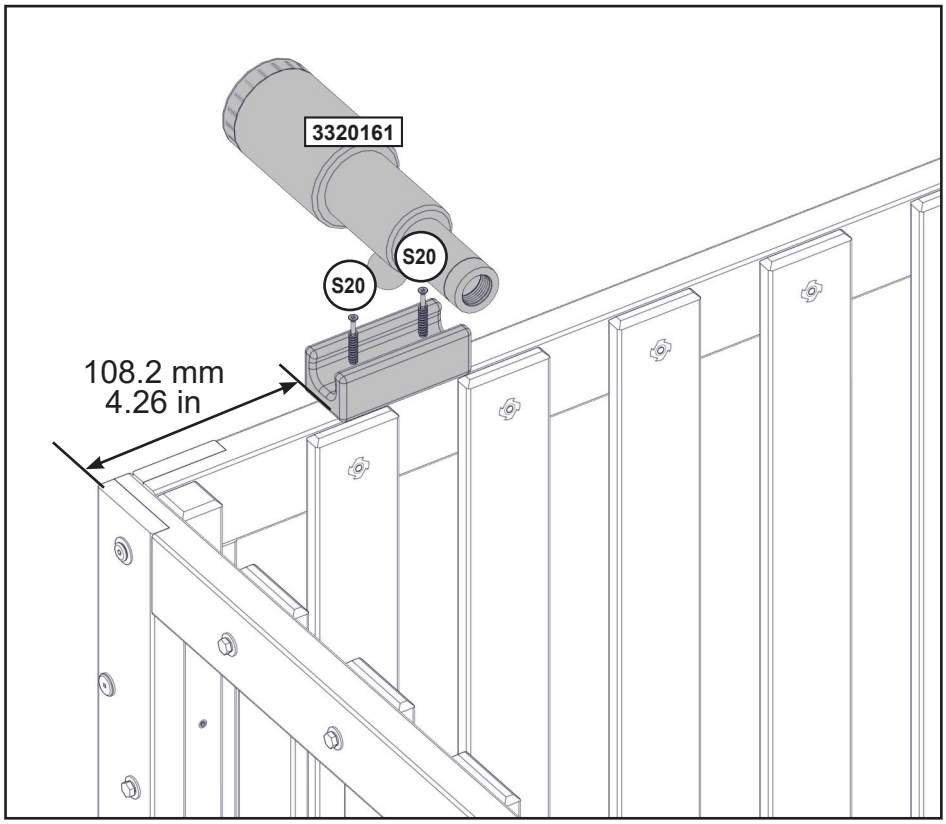

Hardware

2 x (S20) #8 x 34.9mm (#8 x 1-3/8 in)


Other Parts


1 x 3320161


63

ATTACH THIS WARNING & I.D. PLAQUE TO THIS LOCATION ON YOUR PLAY EQUIPMENT!

This provides warnings concerning safety and important contact information. A Tracking Number is provided to allow you to get critical information or order replacement parts for this specific model.

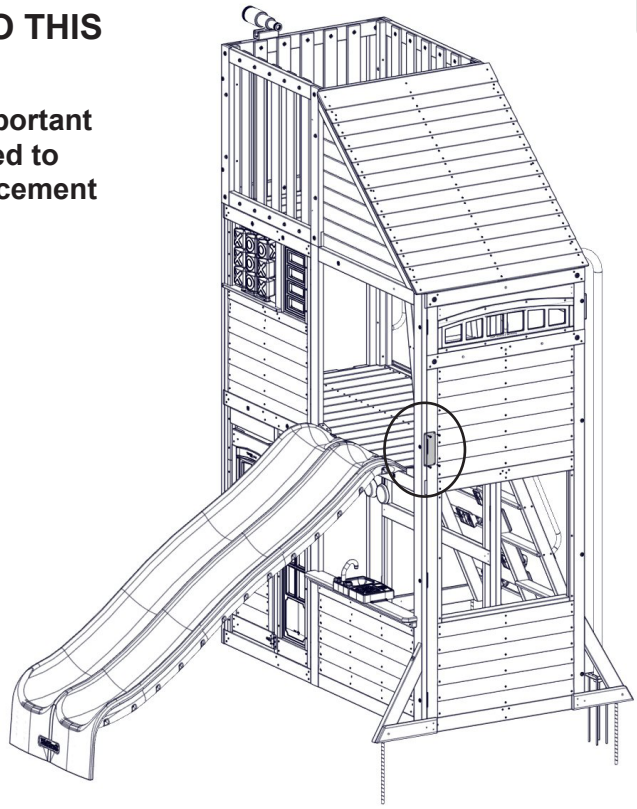

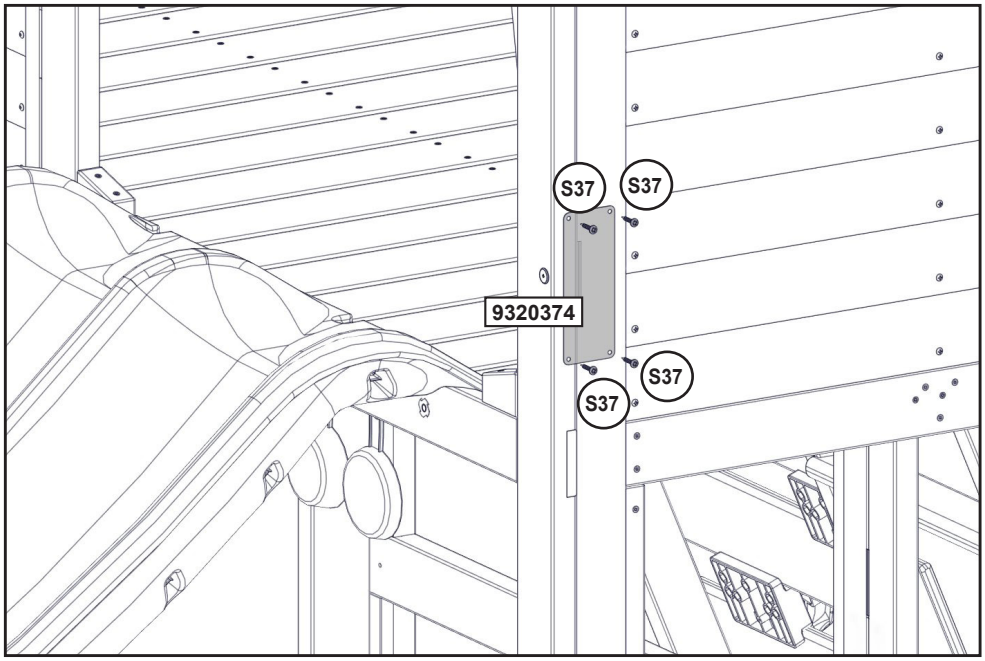

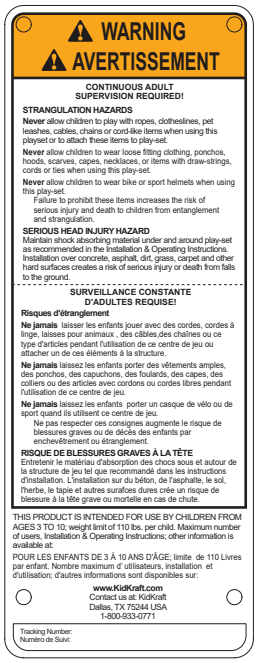

⚠ WARNING
⚠ AVERTISSEMENT

CONTINUOUS ADULT SUPERVISION REQUIRED!

STRANGULATION HAZARDS

Never allow children to play with ropes, clotheslines, pet leashes, cables, chains or cord-like items when using this playset or to attach these items to play-set.

Never allow children to wear loose fitting clothing, ponchos, hoods, scarves, capes, necklaces, or items with draw-strings, cords or ties when using this play-set.

Never allow children to wear bike or sport helmets when using this play-set.

Failure to prohibit these items increases the risk of serious injury and death to children from entanglement and strangulation.

SERIOUS HEAD INJURY HAZARD

Maintain shock absorbing material under and around play-set as recommended in the Installation & Operating Instructions. Installation over concrete, asphalt, dirt, grass, carpet and other hard surfaces creates a risk of serious injury or death from falls to the ground.

SURVEILLANCE CONSTANTE D'ADULTES REQUISE!

Risques d'étranglement

Ne jamais laisser les enfants jouer avec des cordes, cordes à linge, laisses pour animaux , des câbles,des chaînes ou ce type d'articles pendant l'utilisation de ce centre de jeu ou attacher un de ces éléments à la structure.

Ne jamais laissez les enfants porter des vêtements amples, des ponchos, des capuchons, des foulards, des capes, des colliers ou des articles avec cordons ou cordes libres pendant l'utilisation de ce centre de jeu.

Ne jamais laissez les enfants porter un casque de vélo ou de sport quand ils utilisent ce centre de jeu.

Ne pas respecter ces consignes augmente le risque de blessures graves ou de décès des enfants par enchevêtrement ou étranglement.

RISQUE DE BLESSURES GRAVES À LA TÊTE

Entretenir le matériau d'absorption des chocs sous et autour de la structure de jeu tel que recommandé dans les instructions d'installation. L'installation sur du béton, de l'asphalte, le sol, l'herbe, le tapie et autres surafces dures crée un risque de blessure à la tête grave ou mortelle en cas de chute.

THIS PRODUCT IS INTENDED FOR USE BY CHILDREN FROM AGES 3 TO 10; weight limit of 110 lbs. per child. Maximum number of users, Installation & Operating Instructions; other information is available at:

POUR LES ENFANTS DE 3 À 10 ANS D'ÂGE; limite de 110 Livres par enfant. Nombre maximum d' utilisateurs, installation et d'utilisation; d'autres informations sont disponibles sur:

www.KidKraft.com
Contact us at: KidKraft
Dallas, TX 75244 USA
1-800-933-0771

Tracking Number:
Numéro de Suivi:


Hardware

4 x (S37) **#7 x 15.87mm (#7 x 5/8 in)**

Other Parts

1 x 9320374

64

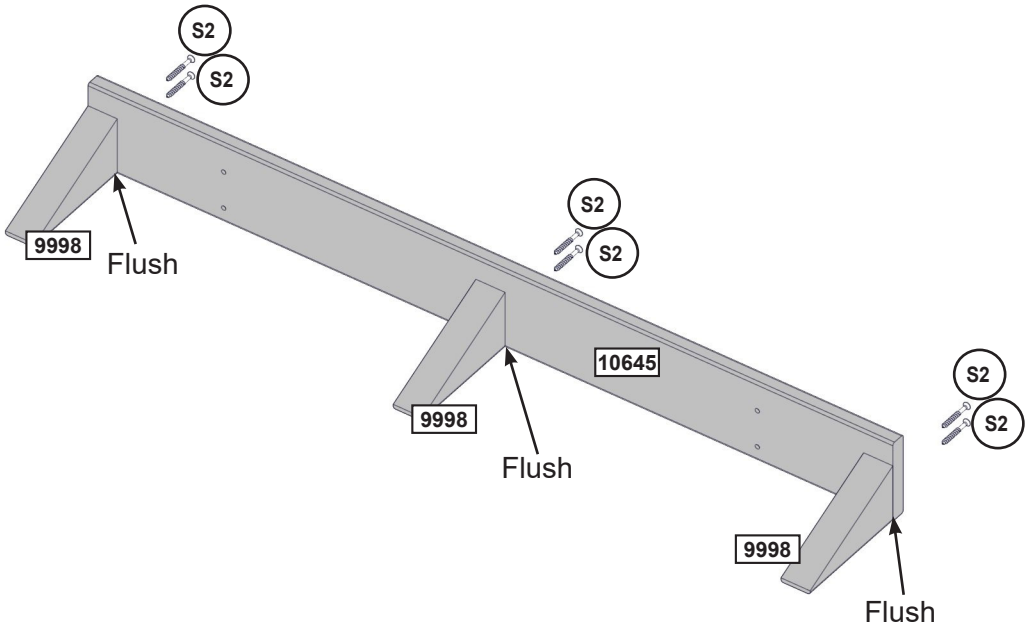


Wood Parts


1 x 10645 15.9 x 88.9 x 878 mm (“5/8 x 3 1/2 x 34 9/16 in)
3 x 9998 31.8 x 63.5 x 127 mm (1 1/4 x 2 1/2 x 5 in)

Hardware

6 x S2 #8 x 38.1mm (#8 x 1-1/2 in)

65

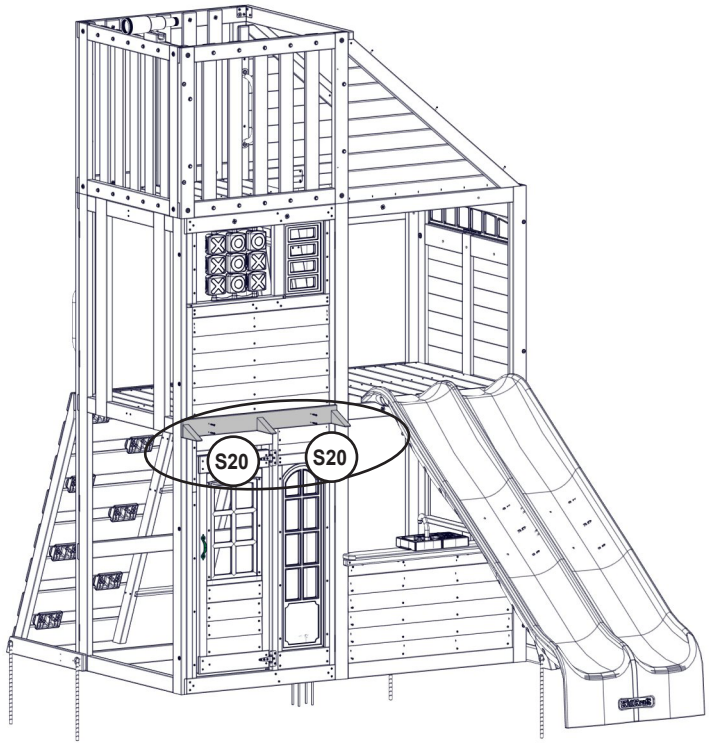


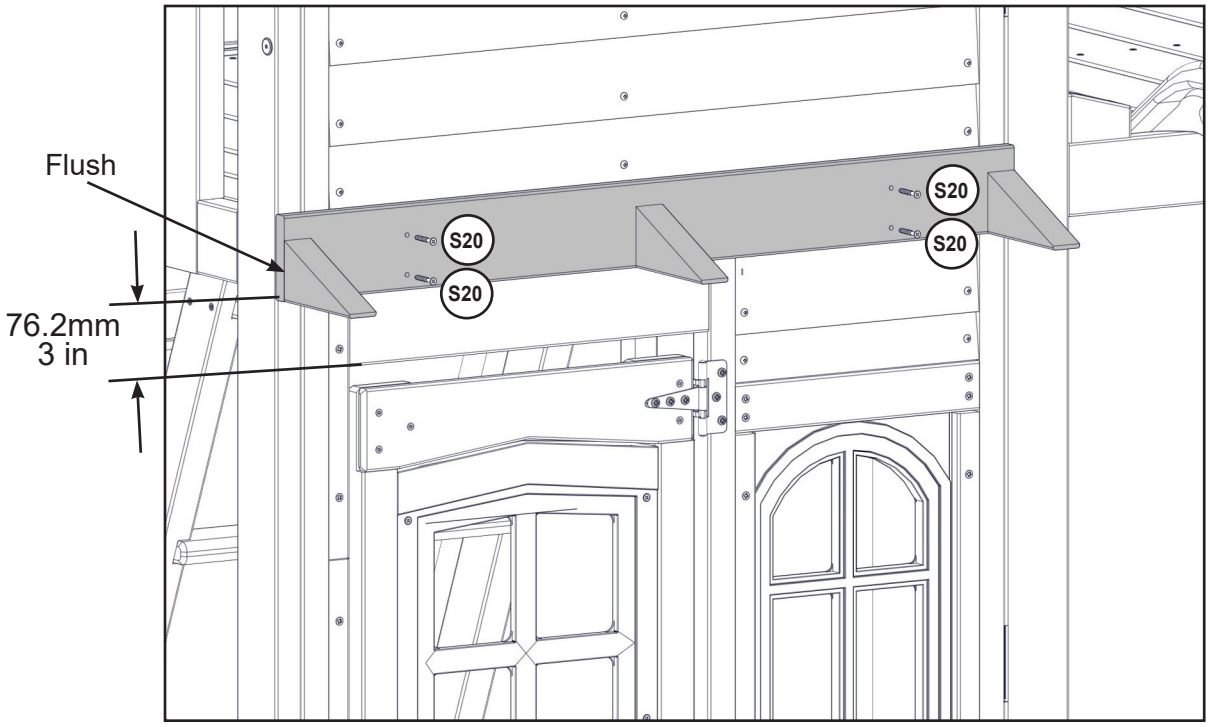


Hardware

4 x (S20) #8 x 34.9mm (#8 x 1-3/8 in)

66

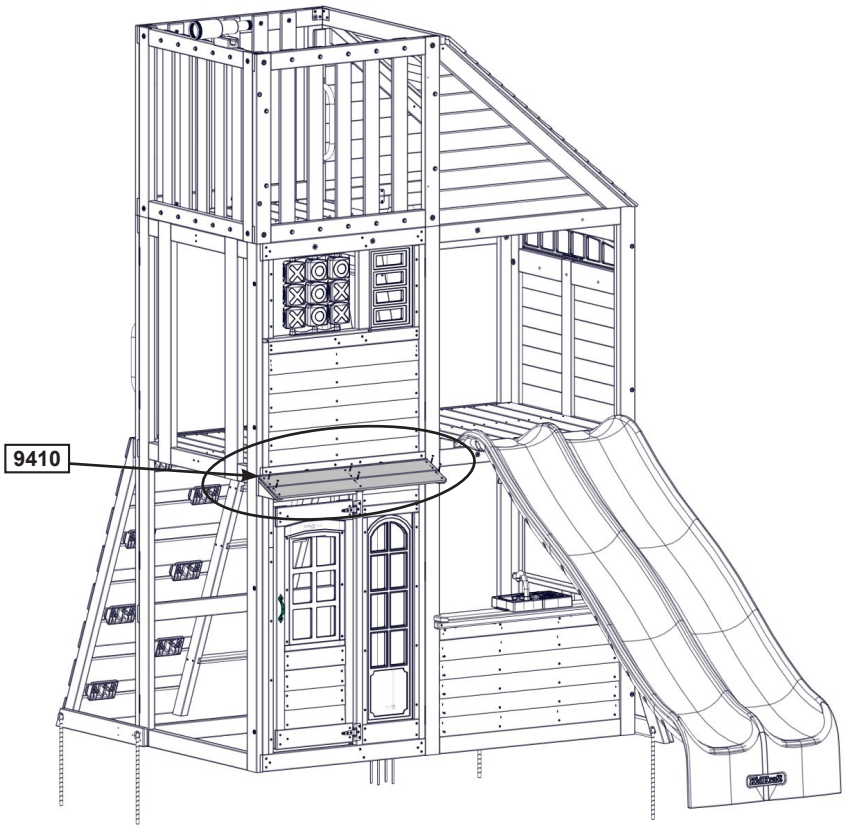

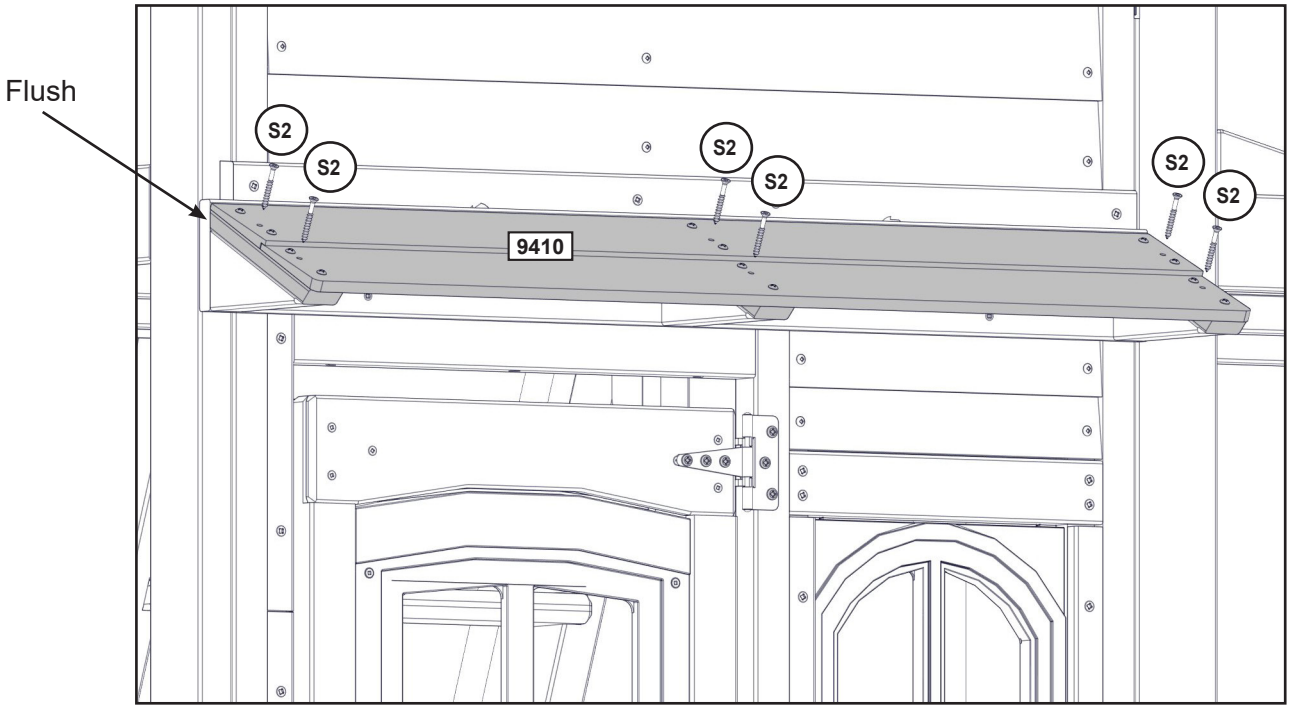


Wood Parts


1 x 9410 25.4 x 173 x 877.9 mm (1 x 6 13/16 x 34 9/16 in)

Hardware

6 x S2 #8 x 38.1mm (#8 x 1-1/2 in)

67

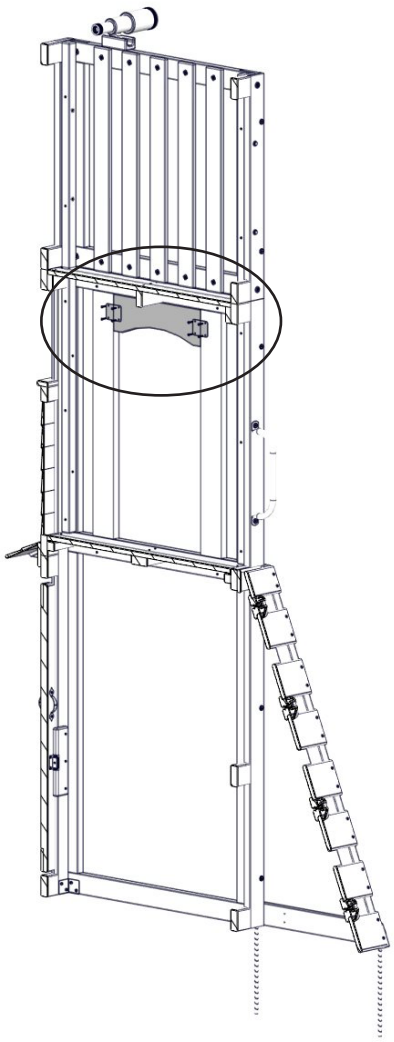

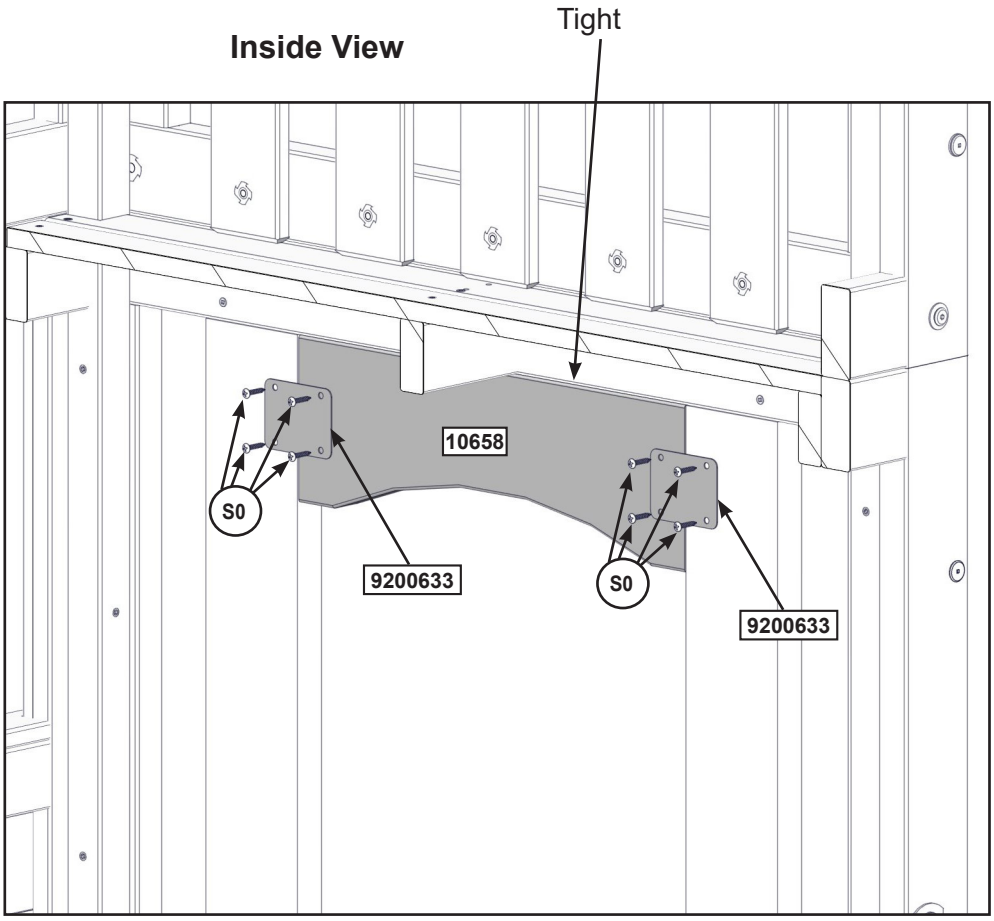

Wood Parts

1 x 10658 31.8 x 139.6 x 428.6 mm (1 1/4 x 5 1/2 x 16 7/8 in)

Hardware

8 x S0 #8 x 22.2mm (#8 x 7/8 in)

Other Parts

2 x 9200633


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu

68 Tube Slide Fort



Assemble T-Nuts first with hammer!

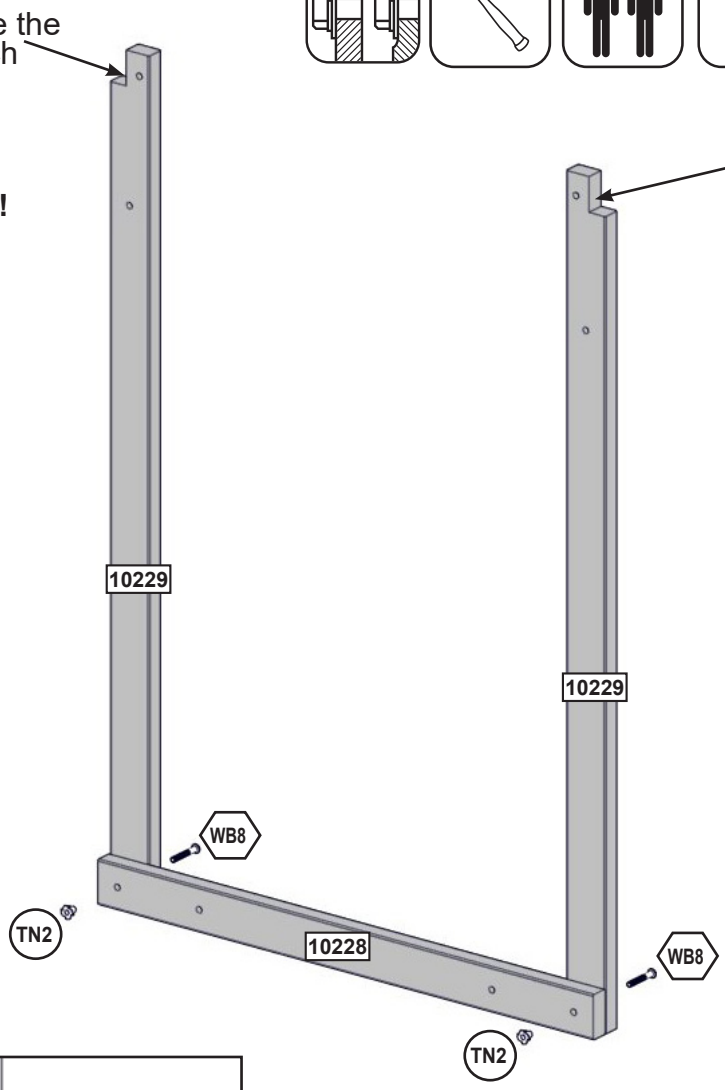

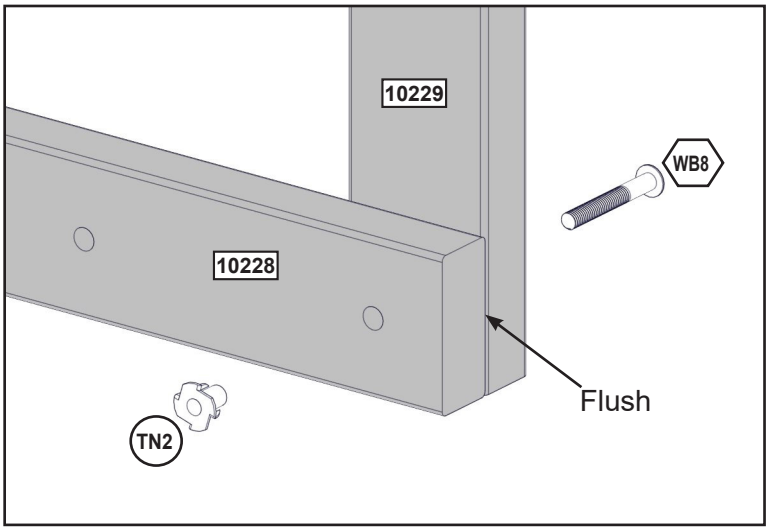

Wood Parts

1 x 10228 31.8 x 76.2 x 965.1 mm (1 1/4 x 3 x 38 in)
2 x 10229 31.8 x 76.2 x 1435.1 mm (1 1/4 x 3 x 56 1/2 in)


Hardware


2 x WB8 7.9mm x 60.3 mm (5/16 x 2-3/8 in)(TN2)

69



Assemble T-Nuts first with hammer!

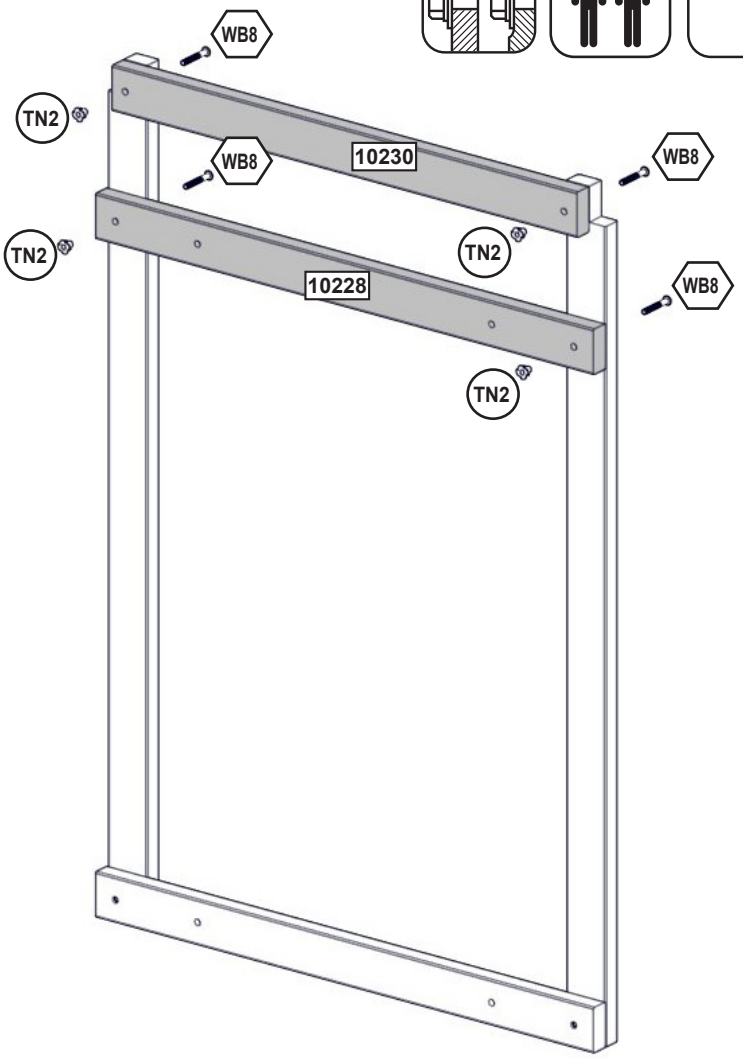

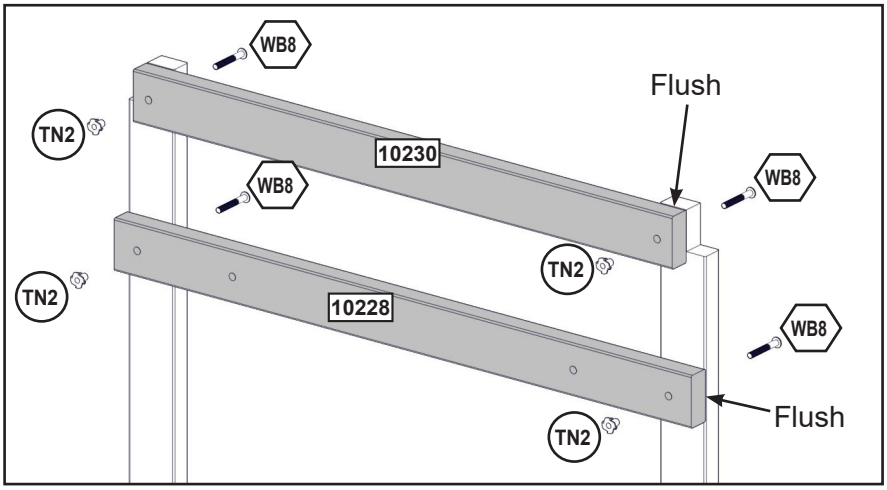

Wood Parts

1 x 10228 31.8 x 76.2 x 965.1 mm (1 1/4 x 3 x 38 in)
1 x 10230 31.8 x 76.2 x 901.5 mm (1 1/4 x 3 x 35 1/2 in)

Hardware

4 x WB8 7.9mm x 60.3 mm (5/16 x 2-3/8 in)(TN2)


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu


70



Pre-drill holes using a 3/16 in drill bit.

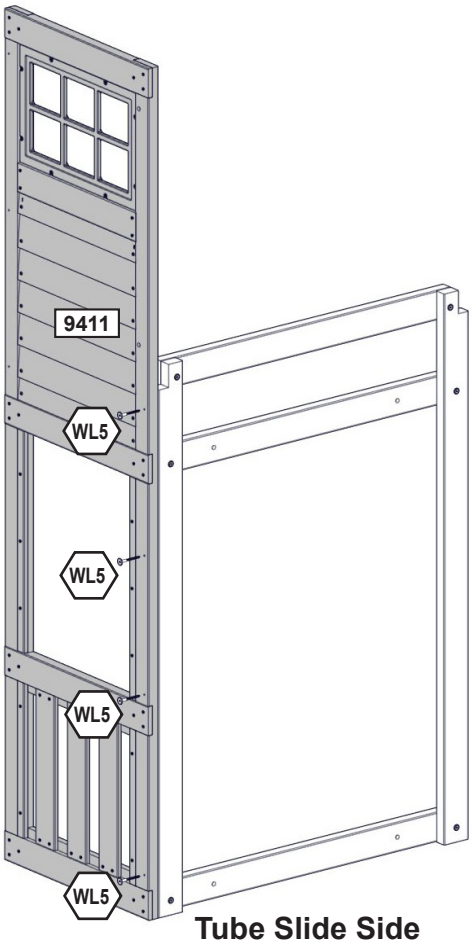

Tube Slide Side

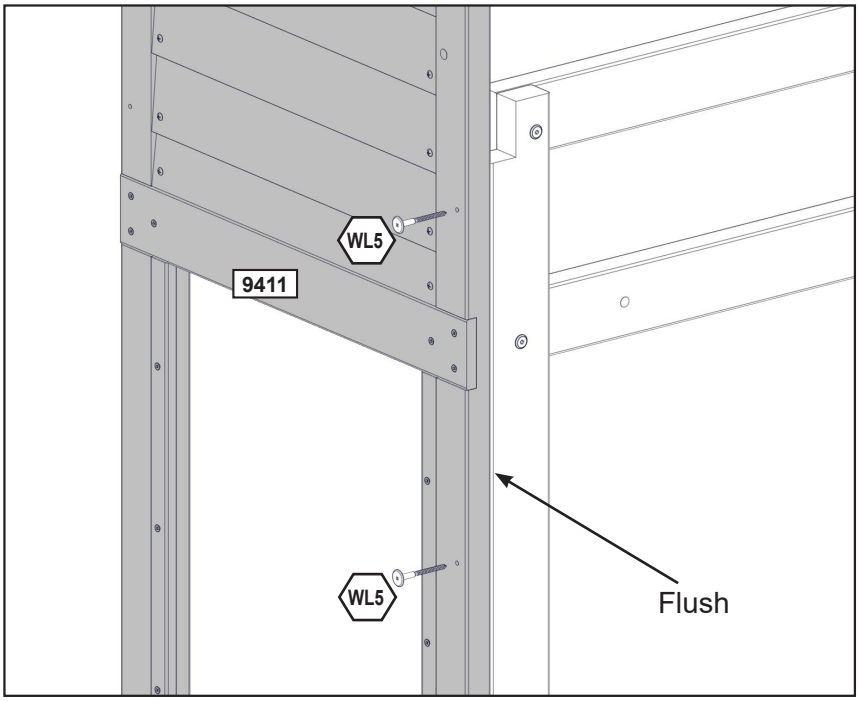


Wood Parts


1 x 9411 31.8 x 575.6 x 2217.7mm (1 1/4 x 22 11/16 x 87 5/16 in)

Hardware


4 x WL5 6.4mm x 63.5 mm (1/4 x 2-1/2 in)

71 **Pre-drill holes using a 3/16 in drill bit.**

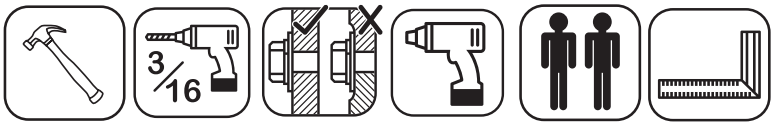


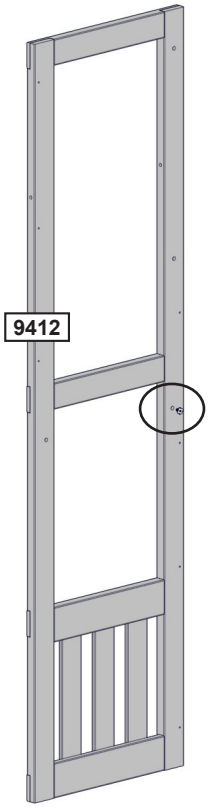


Assemble T-Nuts first with hammer!

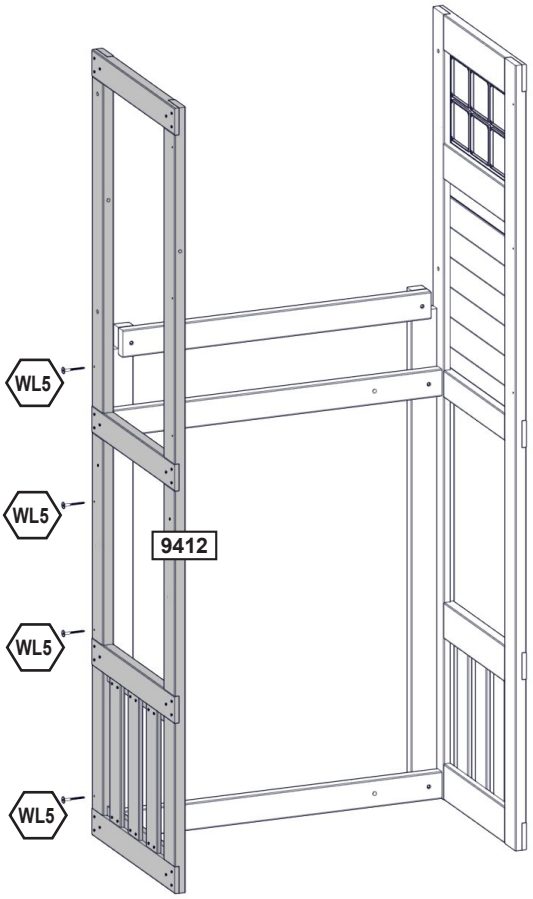

Tunnel Side

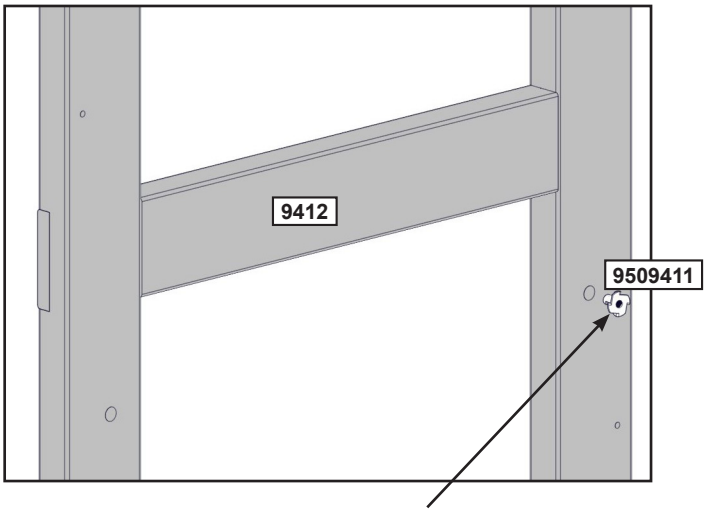

Previously installed for step 152

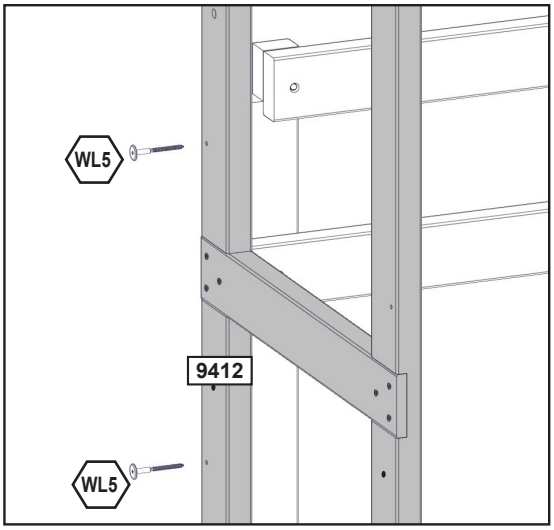

Wood Parts

1 x 9412 31.8 x 575.6 x 2217.7mm (1 1/4 x 22 11/16" x 87 5/16 in)

Hardware

4 x WL5 6.4mm x 63.5 mm (1/4 x 2-1/2 in)


Other Parts

1 x 9509411


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

72



Assemble T-Nuts first with hammer!
Note hole orientation.

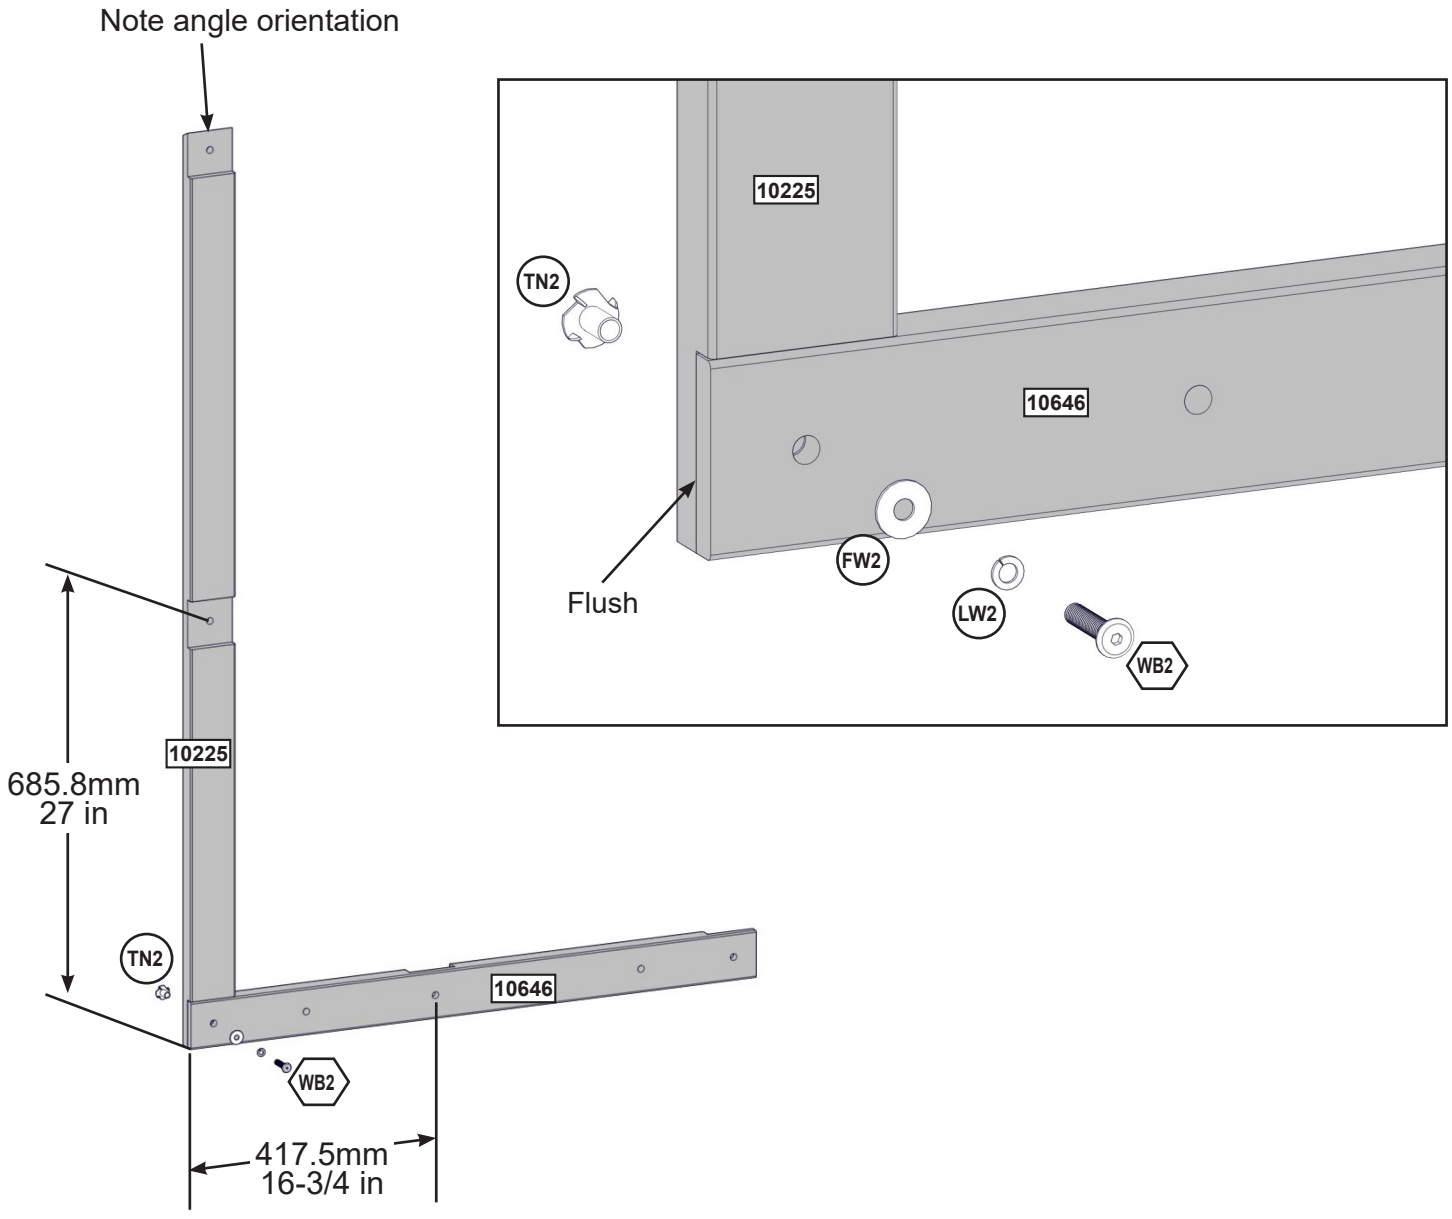


Wood Parts

1 x 10646 31.8 x 76.2 x 965.1 mm (1 1/4 x 3 x 38 in)
1 x 10225 31.8 x 76.2 x 1479.6 mm (1 1/4 x 3 x 58 1/4 in)

Hardware

1 x WB2 7.9mm x 34.9 mm (5/16 x 1-3/8 in)(FW2, LW2, TN2)


73




Note angle orientation

Assemble T-Nuts first with hammer!

Note hole orientation.

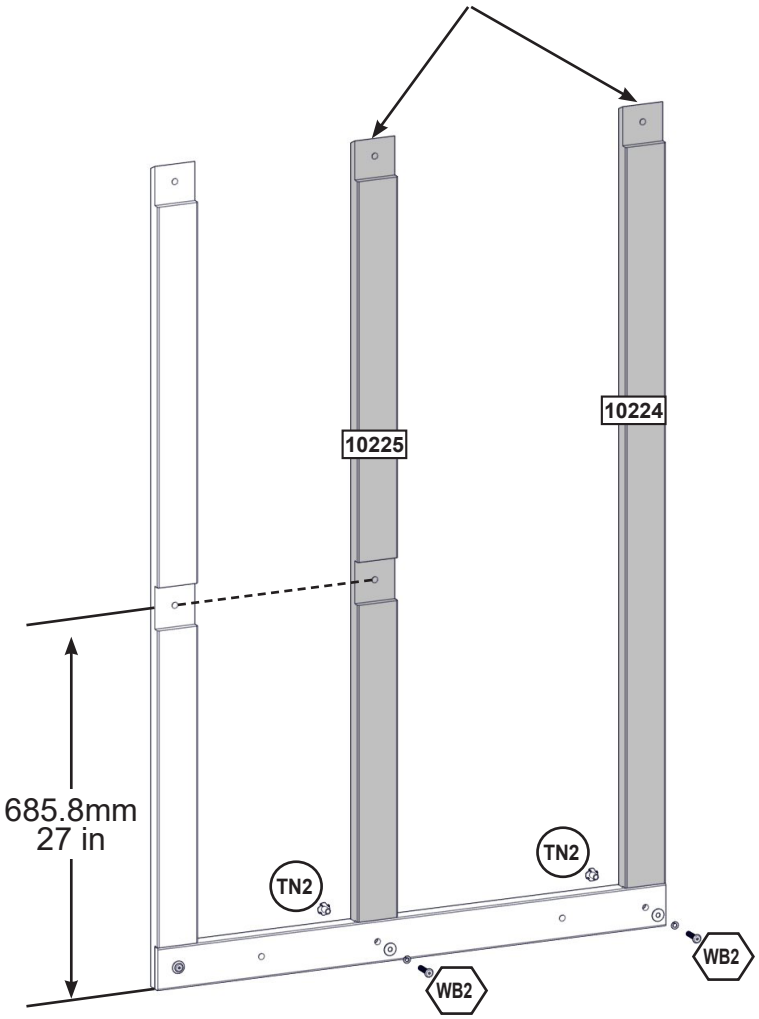

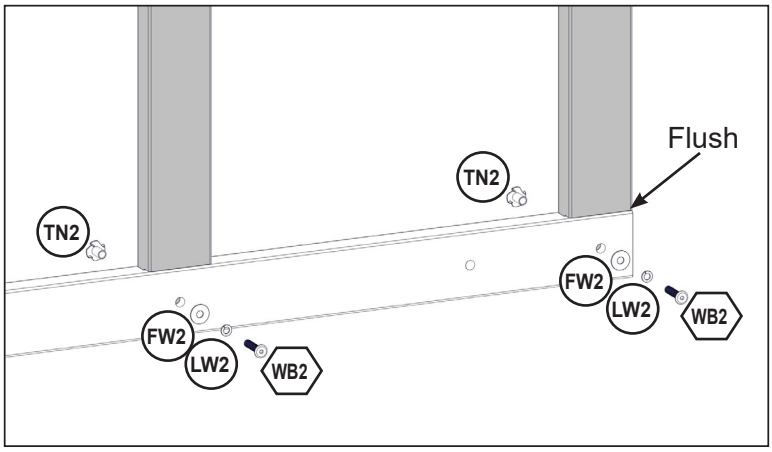

Wood Parts


1 x 10224 **31.8 x 76.2 x 1479.6 mm (1 1/4 x 3 x 58 1/4 in)**

1 x 10225 **31.8 x 76.2 x 1479.6 mm (1 1/4 x 3 x 58 1/4 in)**

Hardware


2 x WB2 **7.9mm x 34.9 mm (5/16 x 1-3/8 in)(FW2, LW2, TN2)**


74

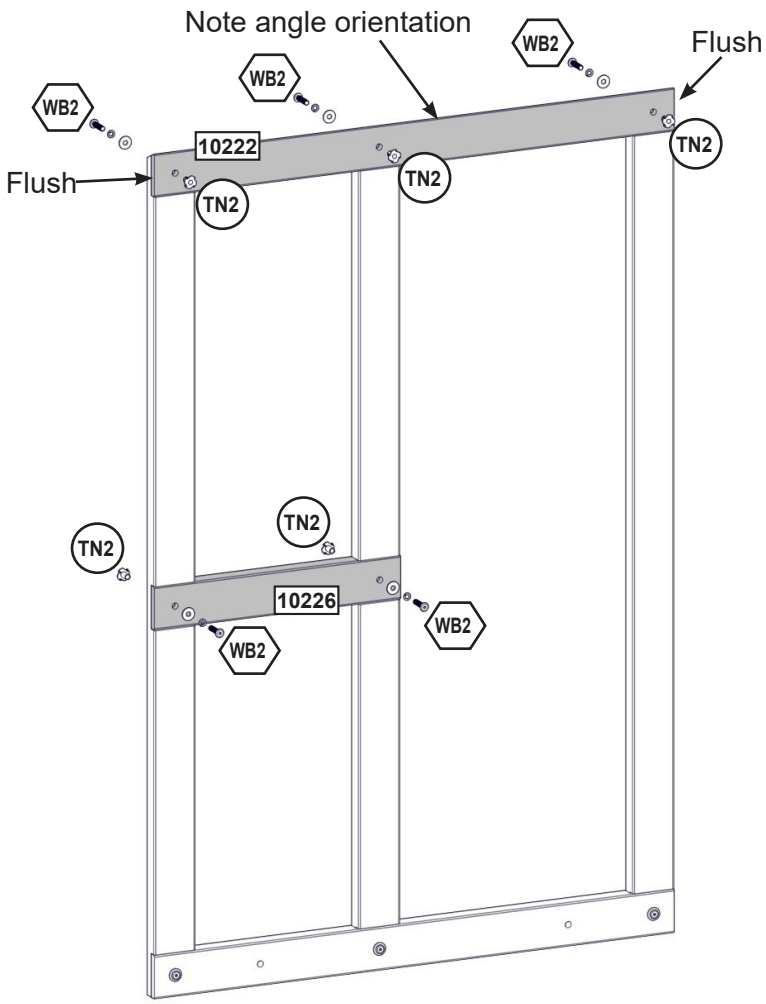

Note WB2 orientation

Assemble T-Nuts first with hammer!

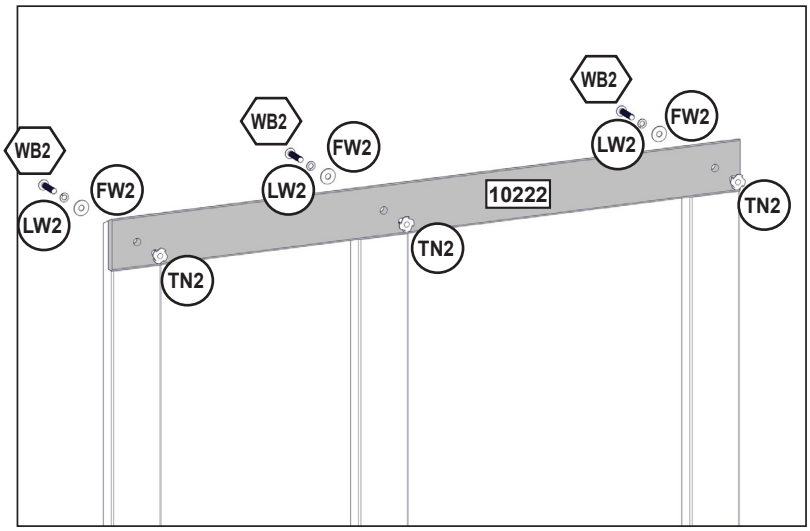

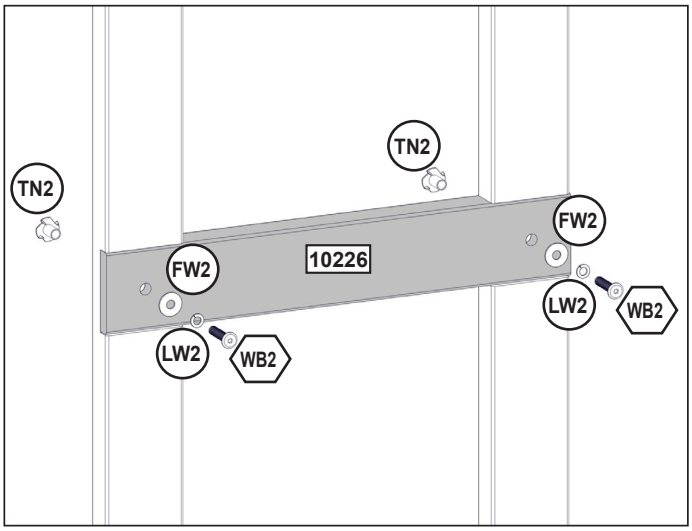


Wood Parts


1 x 10222 31.8 x 76.2 x 965.1 mm (1 1/4 x 3 x 38 in)
1 x 10226 31.8 x 76.2 x 457.1 mm (1 1/4 x 3 x 18 in)

Hardware

5 x WB2 7.9mm x 34.9 mm (5/16 x 1-3/8 in)(FW2, LW2, TN2)

75

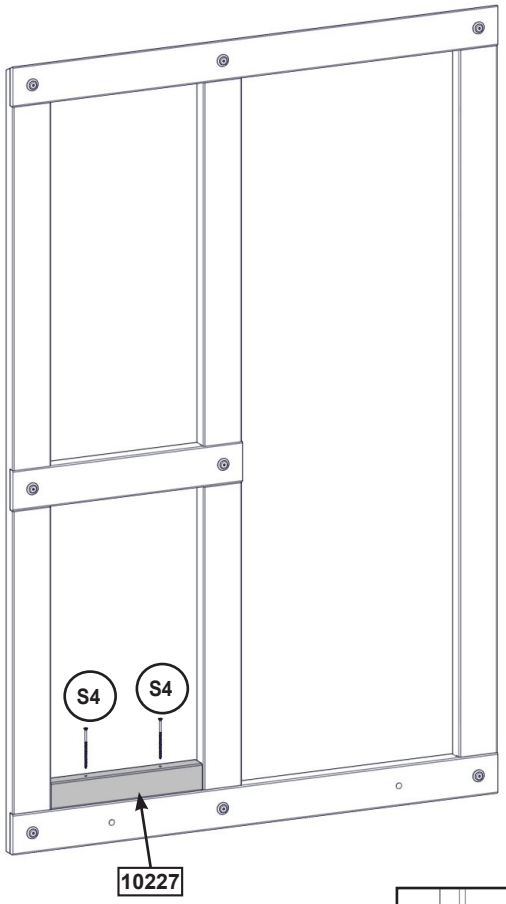

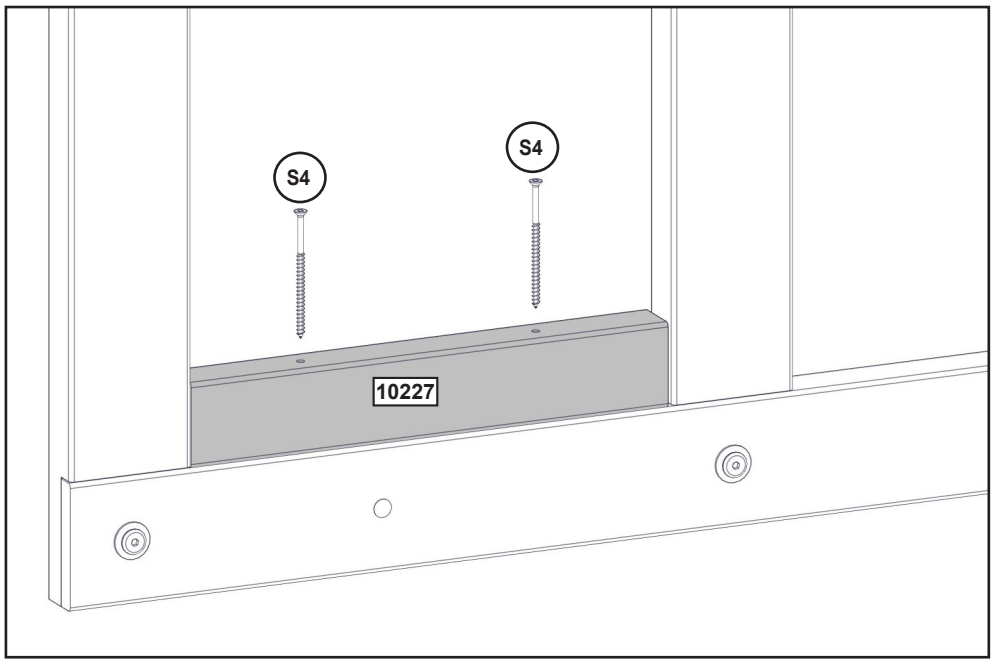

Wood Parts

1 x 10227 31.8 x 50.8 x 300.7 mm (1 1/4 x 2 x 11 13/16 in)


Hardware


2 x S4 #8 x 76.2mm (#8 x 3 in)


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

76

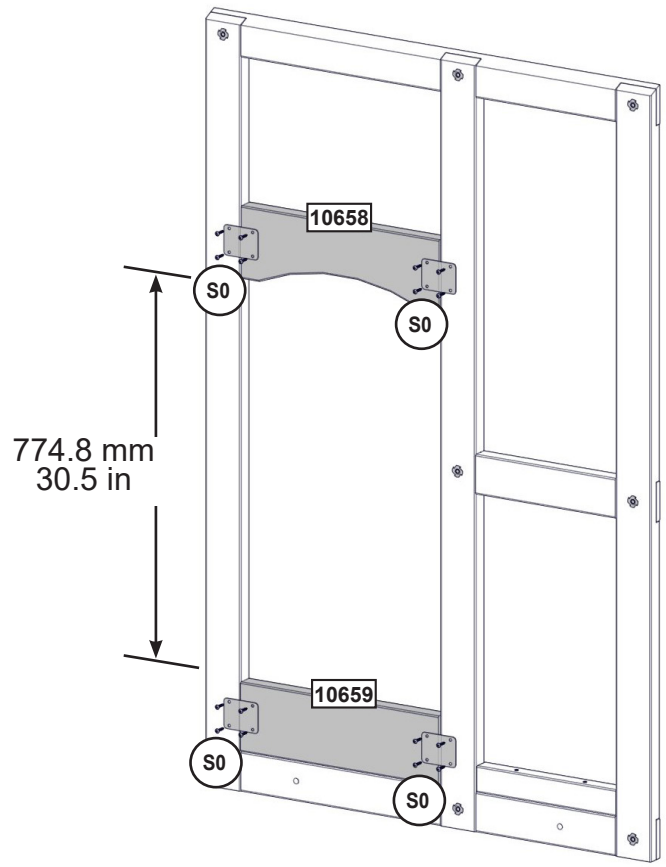

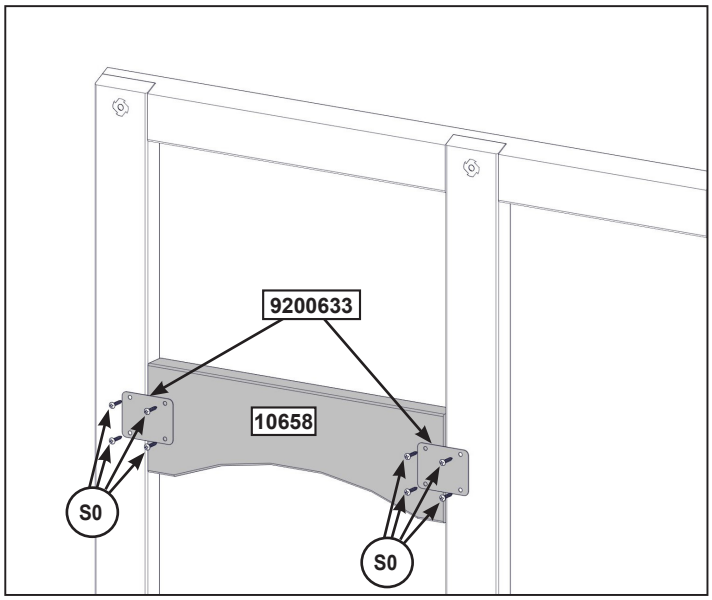

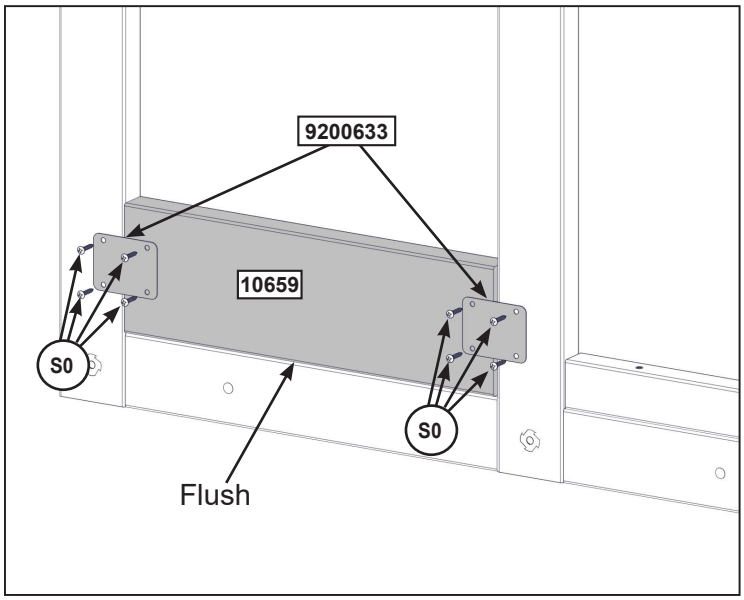

Wood Parts

1 x 10658 31.8 x 139.6 x 428.6 mm (1 1/4 x 5 1/2 x 16 7/8 in)

1 x 10659 31.8 x 133.4 x 428.6 mm (1 1/4 x 5 1/4 x 16 7/8 in)


Hardware

16 x S0 #8 x 22.2mm (#8 x 7/8 in)


Other Parts

4 x 9200633


77

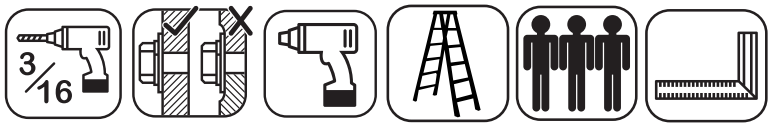

Pre-drill holes using a 3/16 in drill bit.

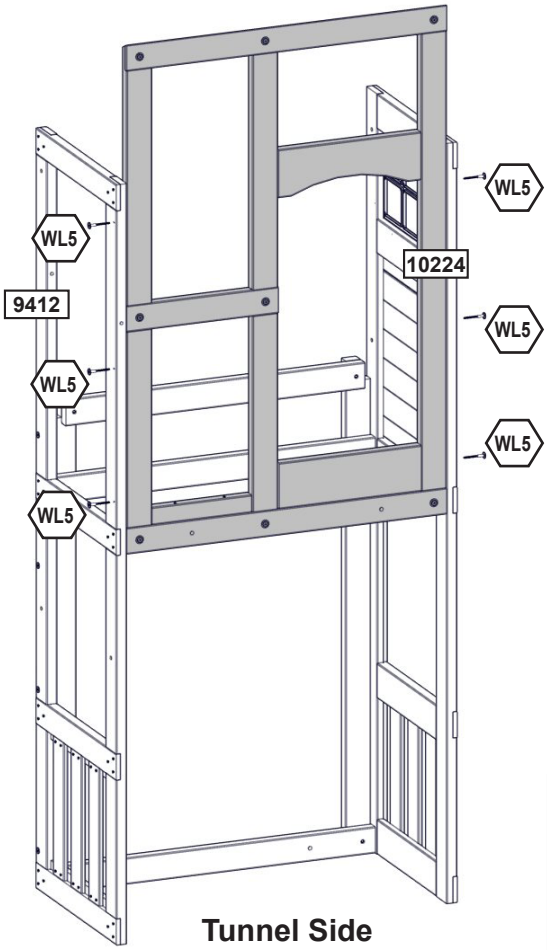

Tunnel Side

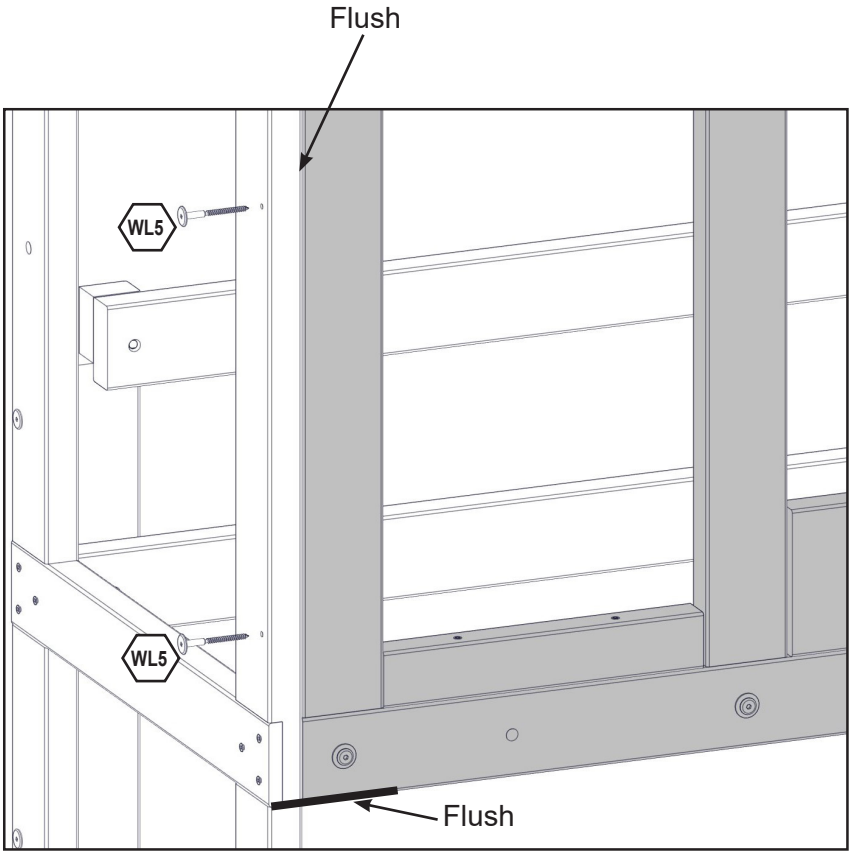


Hardware

6 x WL5 **6.4mm x 63.5 mm (1/4 x 2-1/2 in)**


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu

78

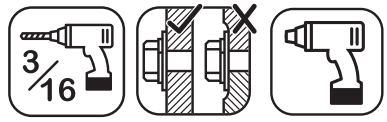

Pre-drill holes using a 3/16 in drill bit.

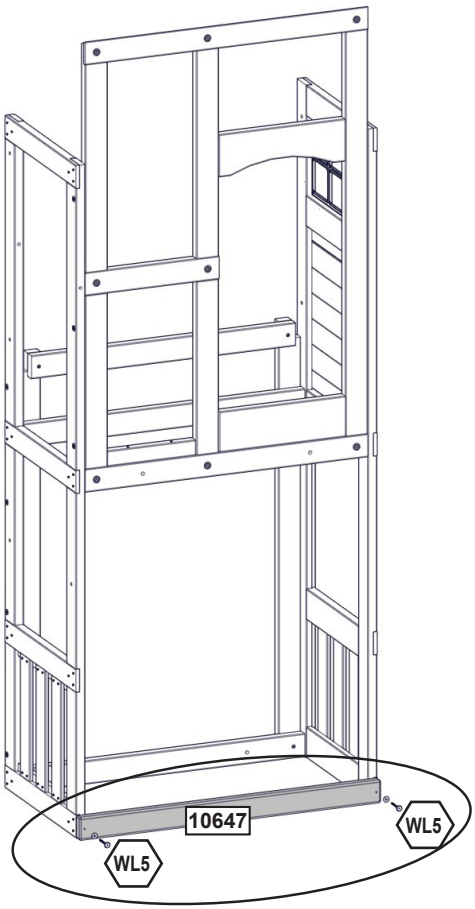

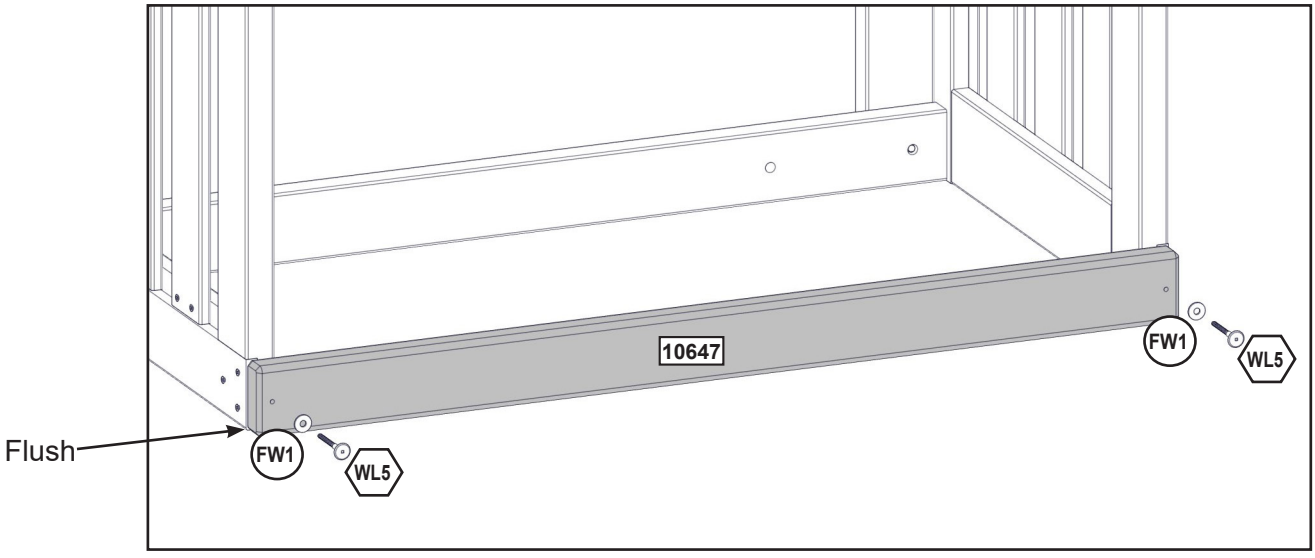

Wood Parts


1 x 10647 31.8 x 76.2 x 1028.7 mm (1 1/4 x 3 x 40 1/2 in)

Hardware

2 x WL5 6.4mm x 63.5 mm (1/4 x 2-1/2 in)

2 x FW1


79

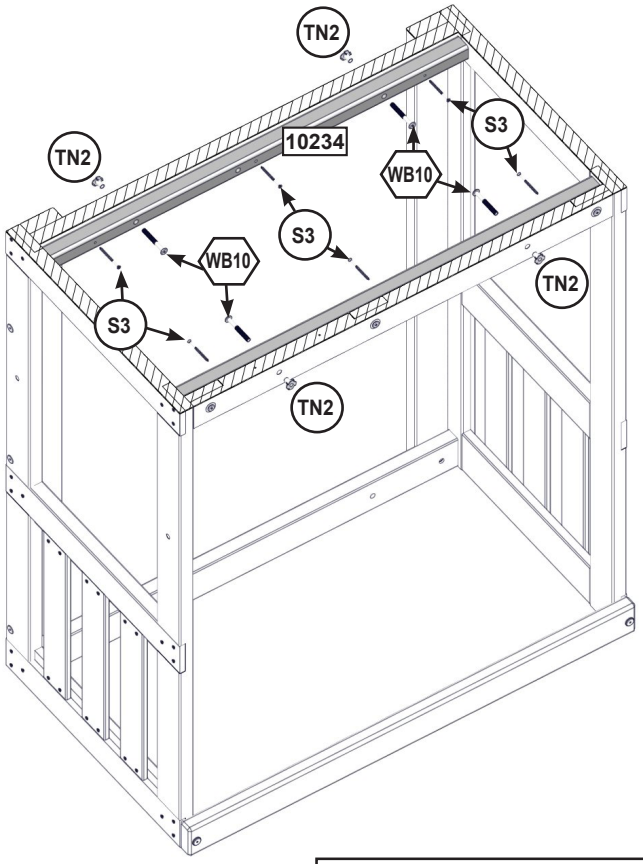




Assemble T-Nuts first with hammer!

Note: Structure partly removed for clarity.

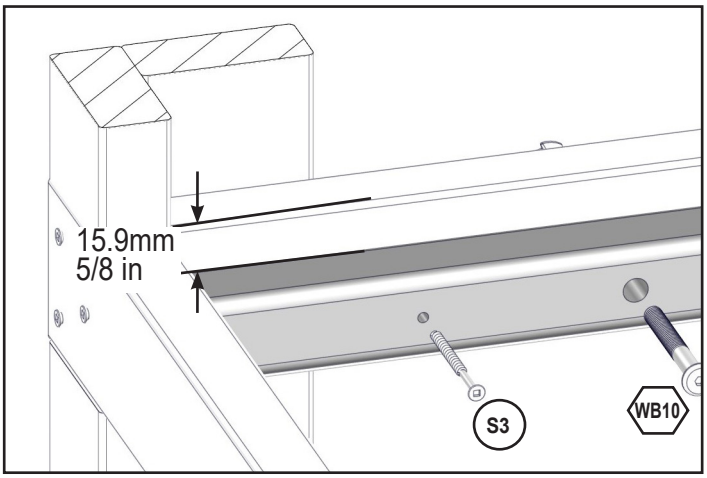

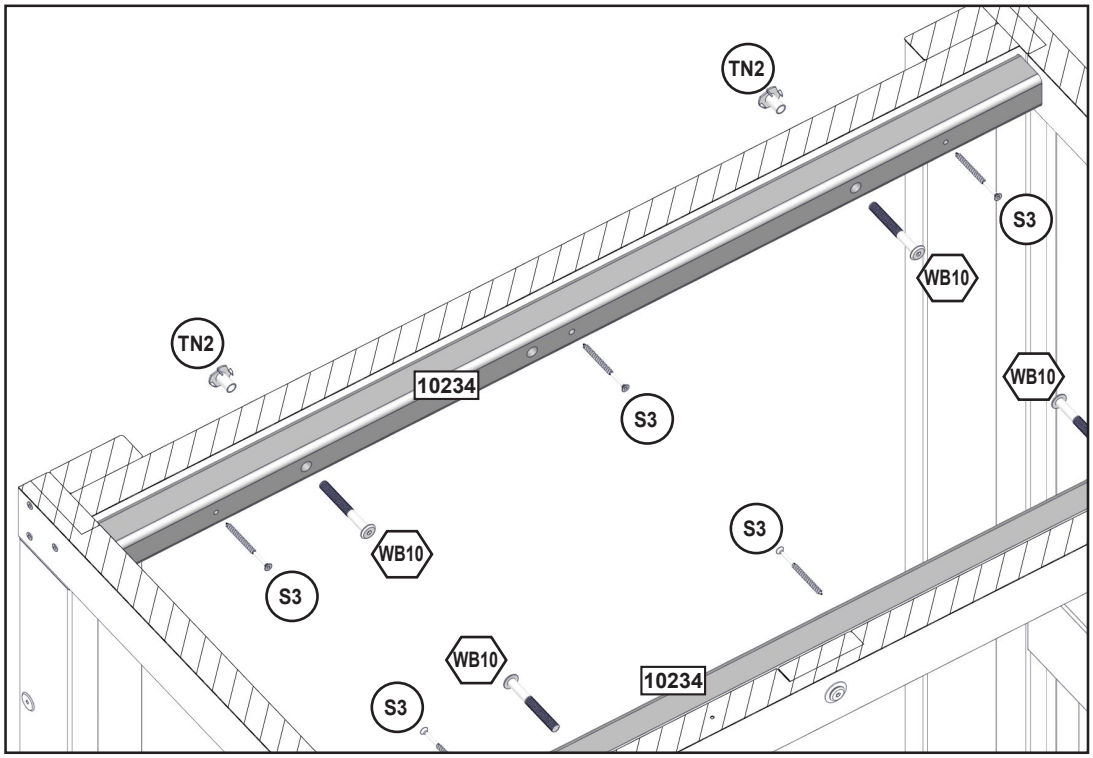

Wood Parts

2 x 10234 38.1 x 38.1 x 959 mm (1 1/2 x 1 1/2 x 37 3/4 in)

Hardware


6 x S3 #8 x 64mm (#8 x 2-1/2 in)


4 x WB10 7.9mm x 66.6 mm (5/16 x 2-5/8 in)(TN2)

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

80

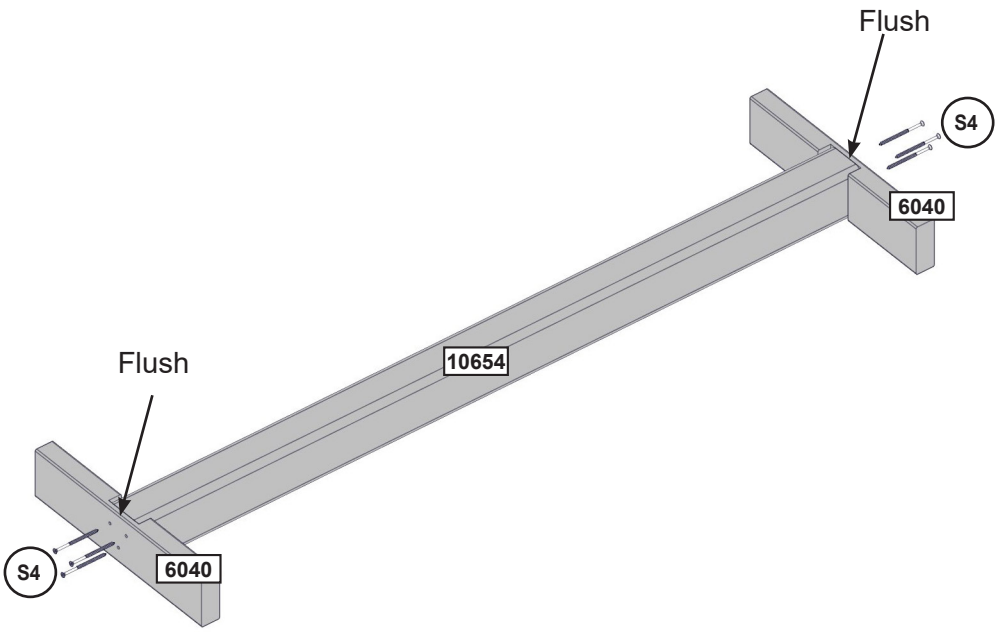

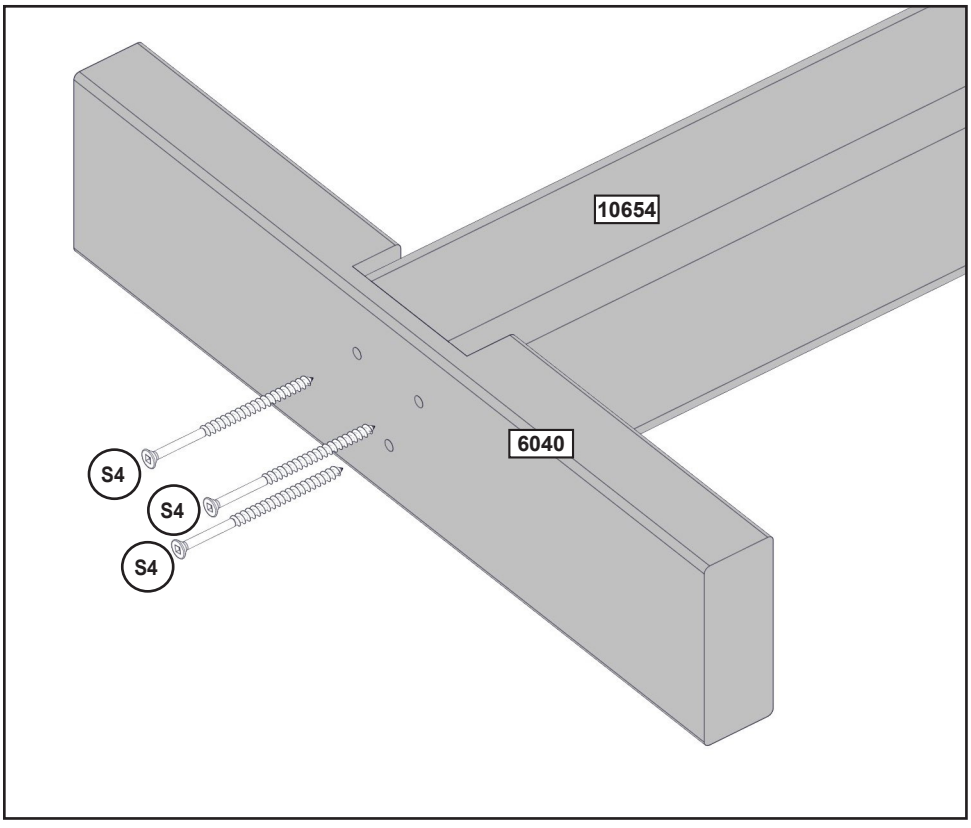

Wood Parts

2 x 6040 31.8 x 82.6 x 367 mm (1 1/4 x 3 1/4 x 14 7/16 in)


1 x 10654 63.5 x 82.6 x 1263.7 mm (2 1/2 x 3 1/4 x 49 3/4 in)


Hardware

6 x (S4) #8 x 64mm (#8 x 2-1/2 in)

81

Assemble T-Nuts first with hammer!

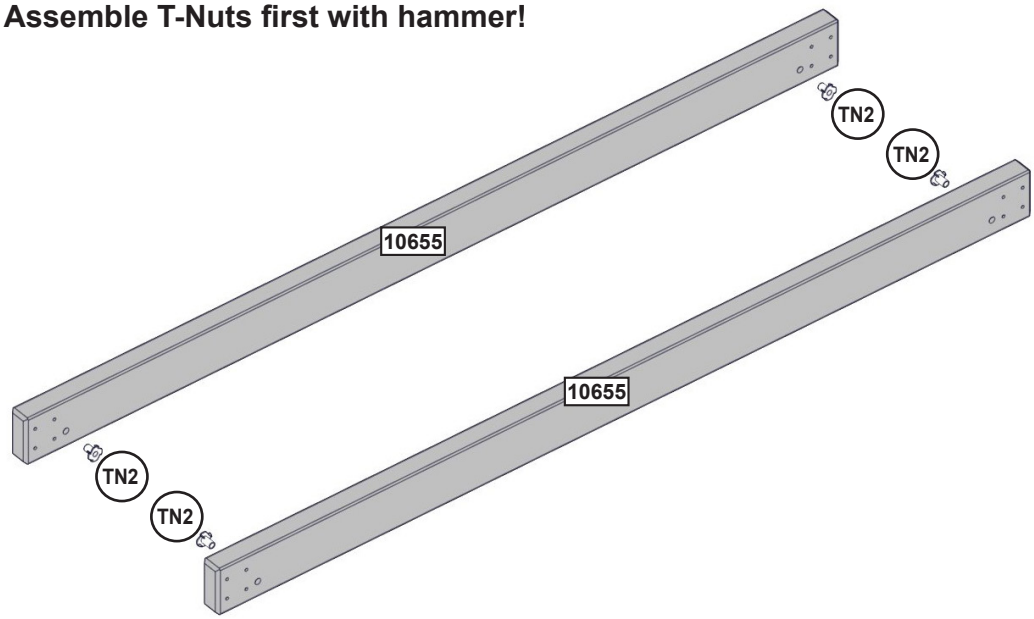

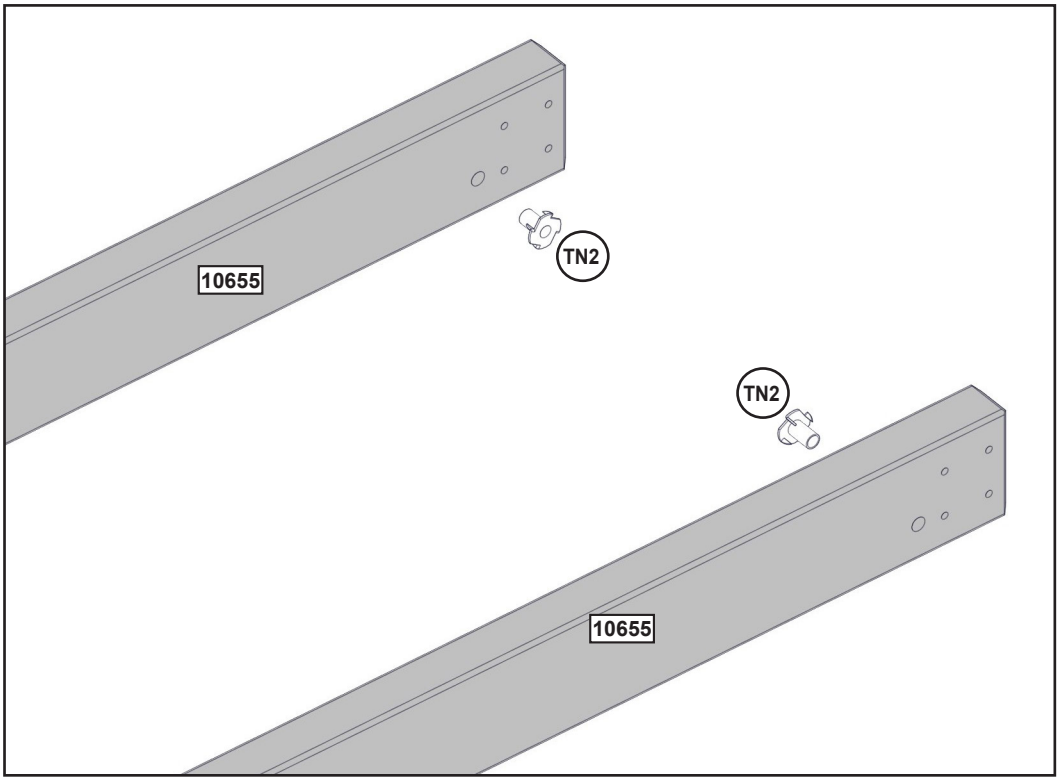

Wood Parts

2 x 10655 31.8 x 76.2 x 1346.2 mm (1 1/4 x 3 x 53 in)


Hardware


4 x TN2

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

82

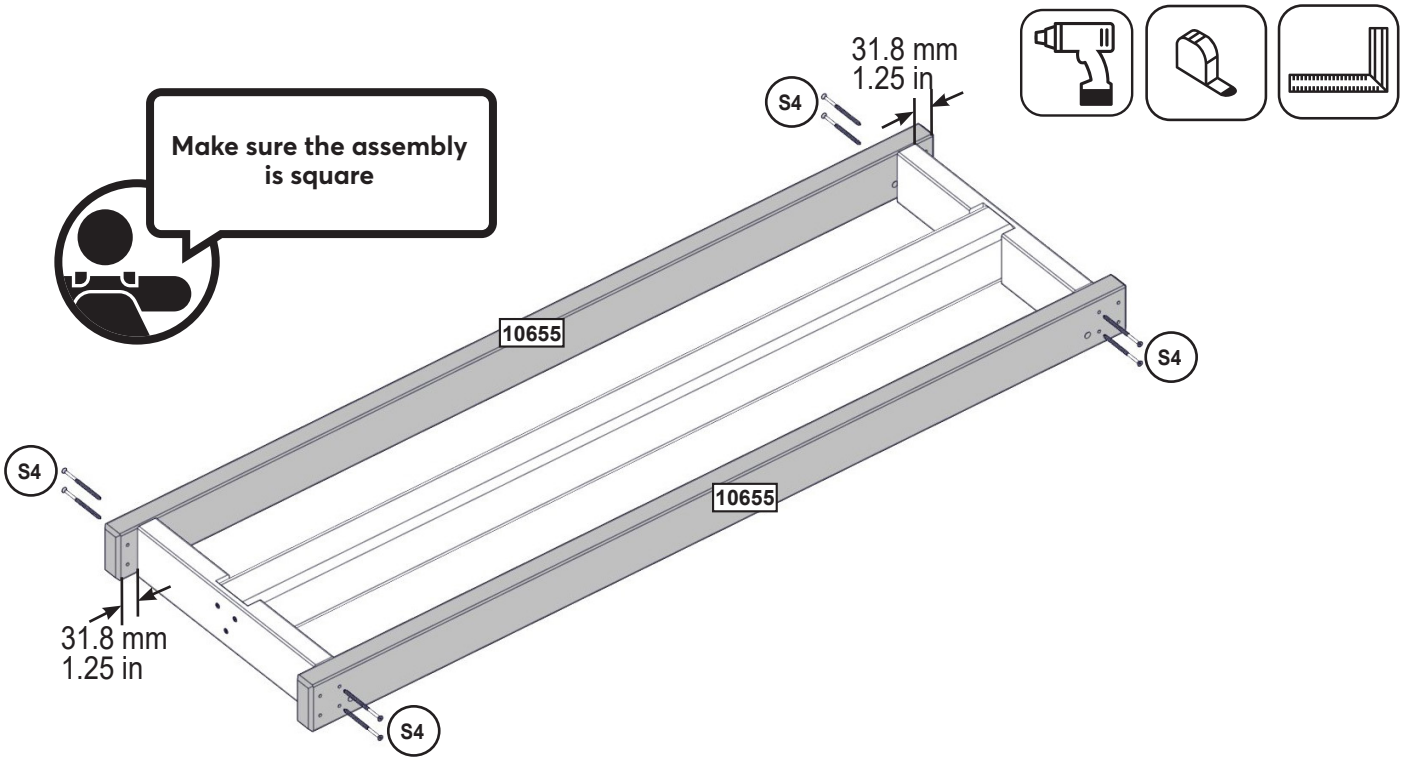


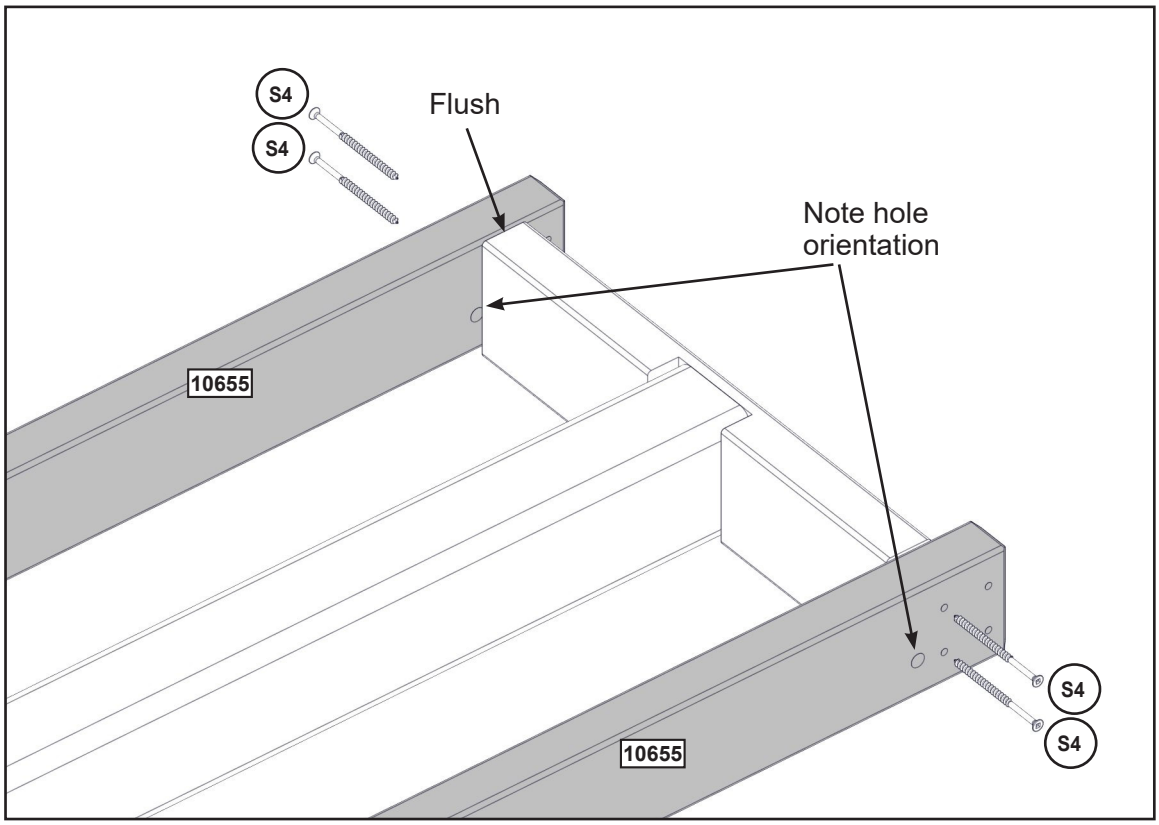


Hardware

8 x (S4) #8 x 76.2mm (#8 x 3 in)

83

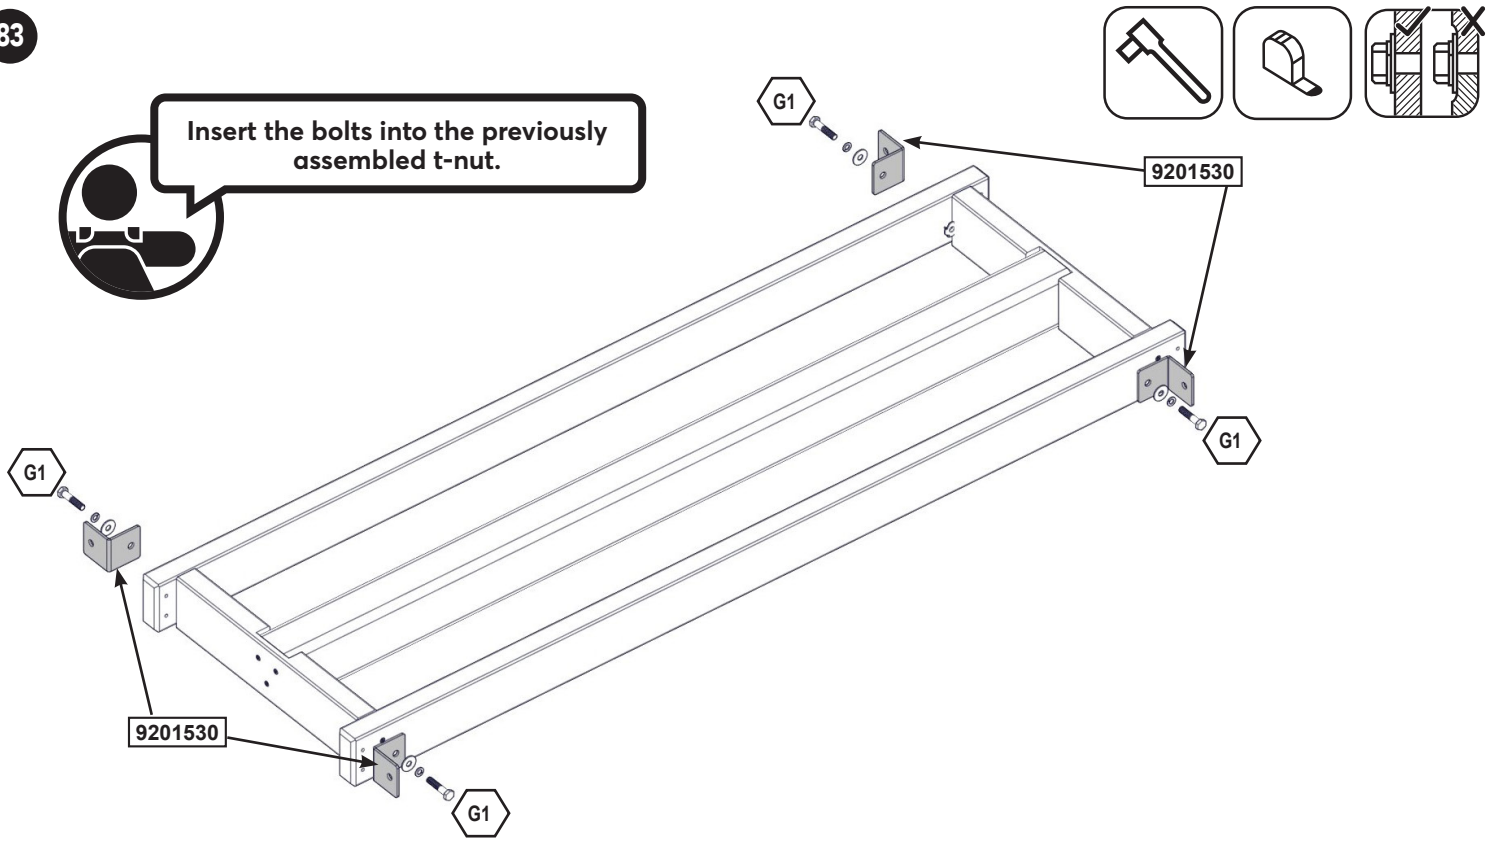

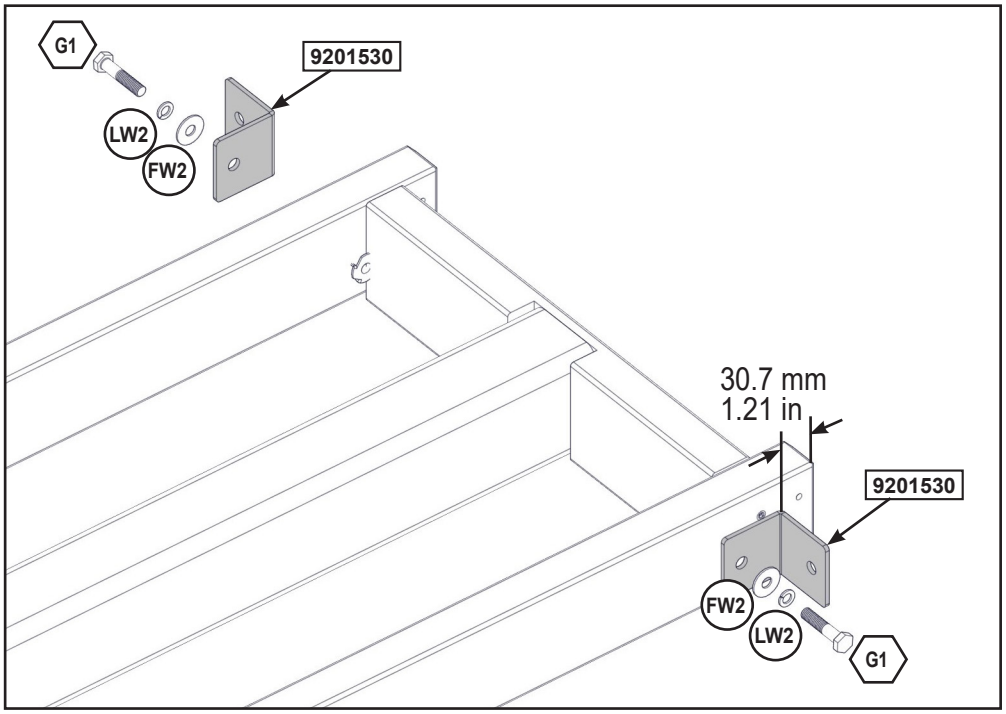

Hardware

4 x G1 7.9mm x 38.1mm (5/16 x 1-1/2 in)(LW2,FW2)

Other Parts


4 x 9201530


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu


84

Pre-drill holes using a 3/16 in drill bit.

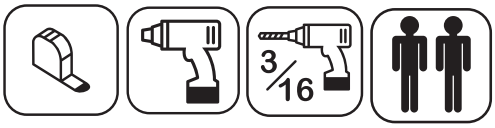

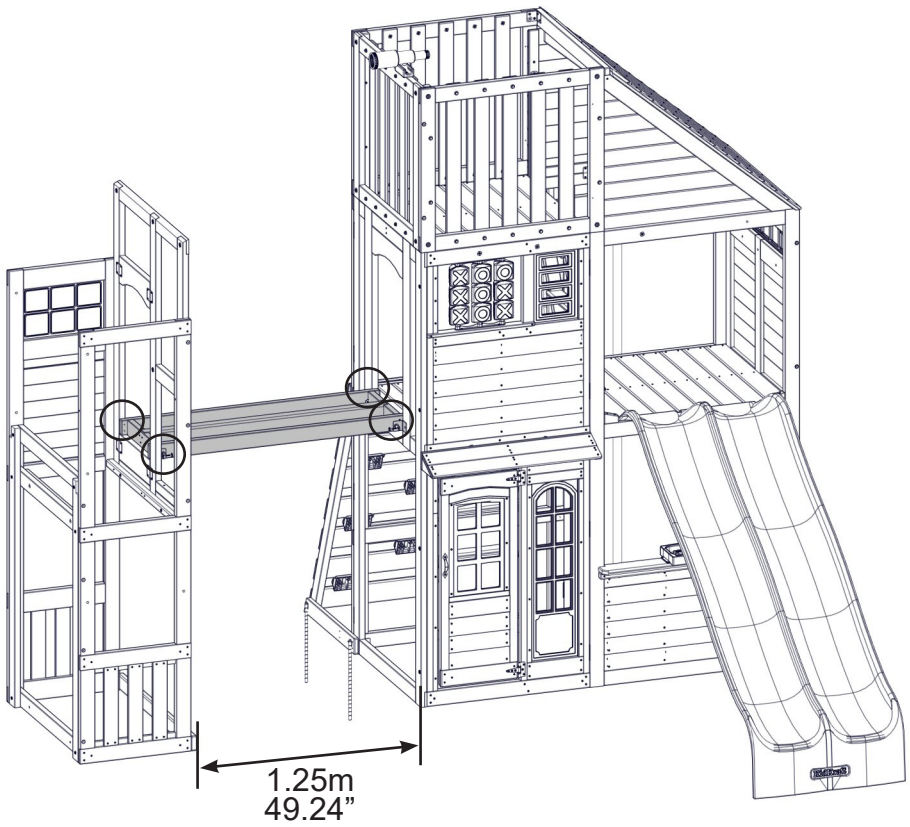

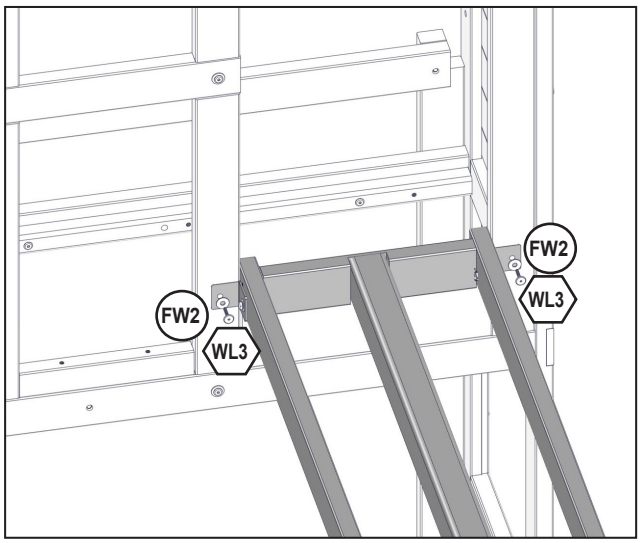


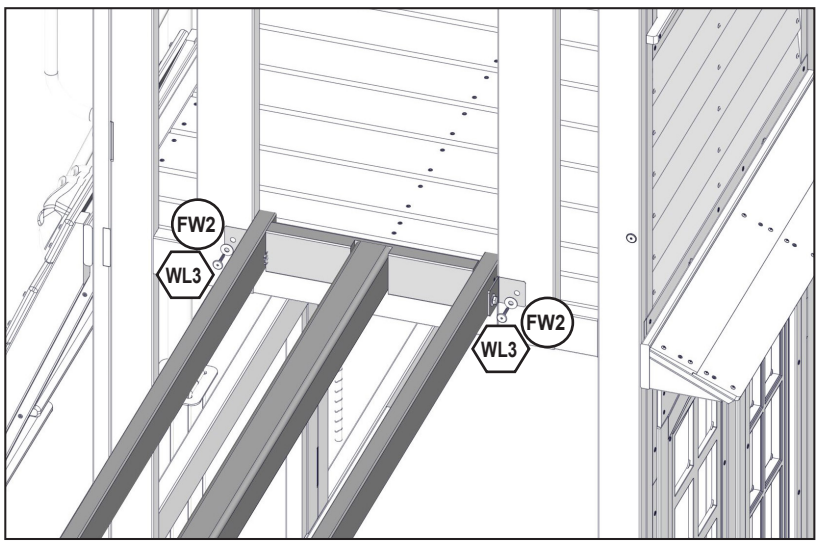

Hardware


4 x (WL3) 6.4mm x 34.9mm (1/4 x 1-3/8 in)(FW2)

85

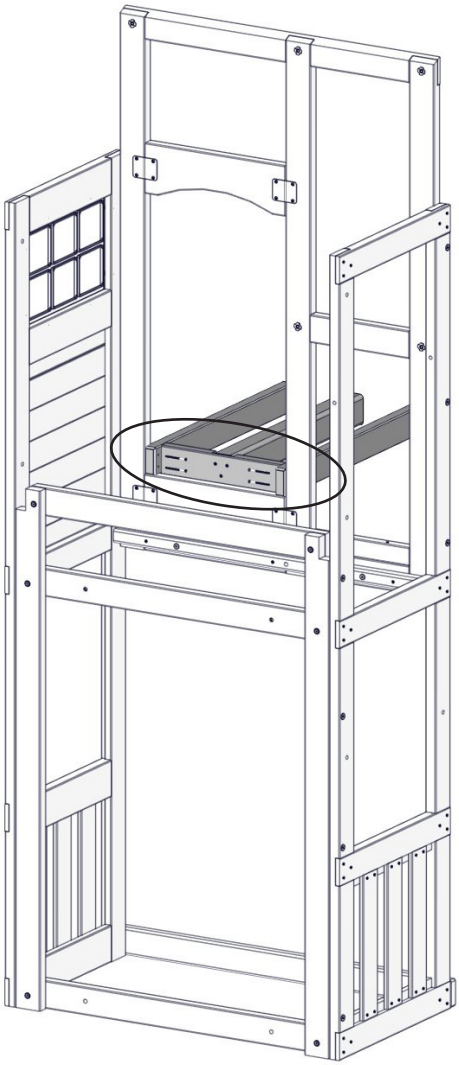

Tube Slide Side

Note: Structure partly removed for clarity.

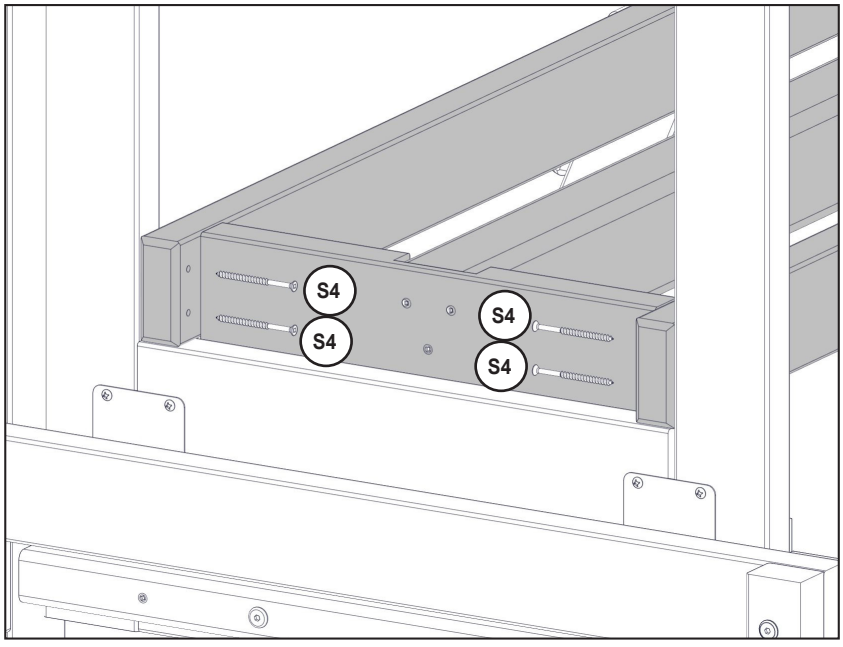


Hardware

4 x (S4) #8 x 76.2mm (#8 x 3 in)


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

86

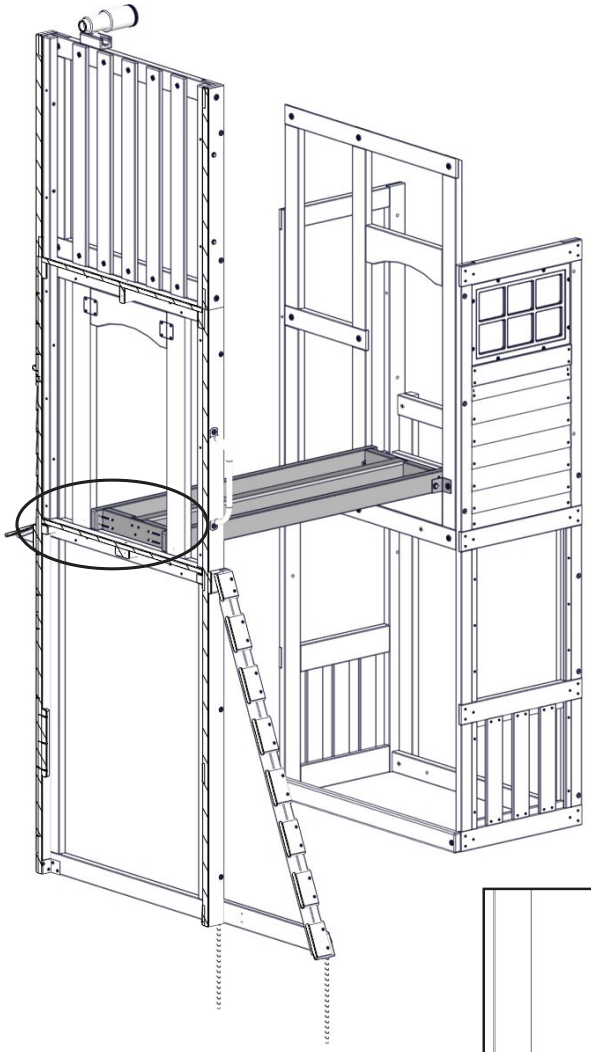


Note: Structure partly removed for clarity.

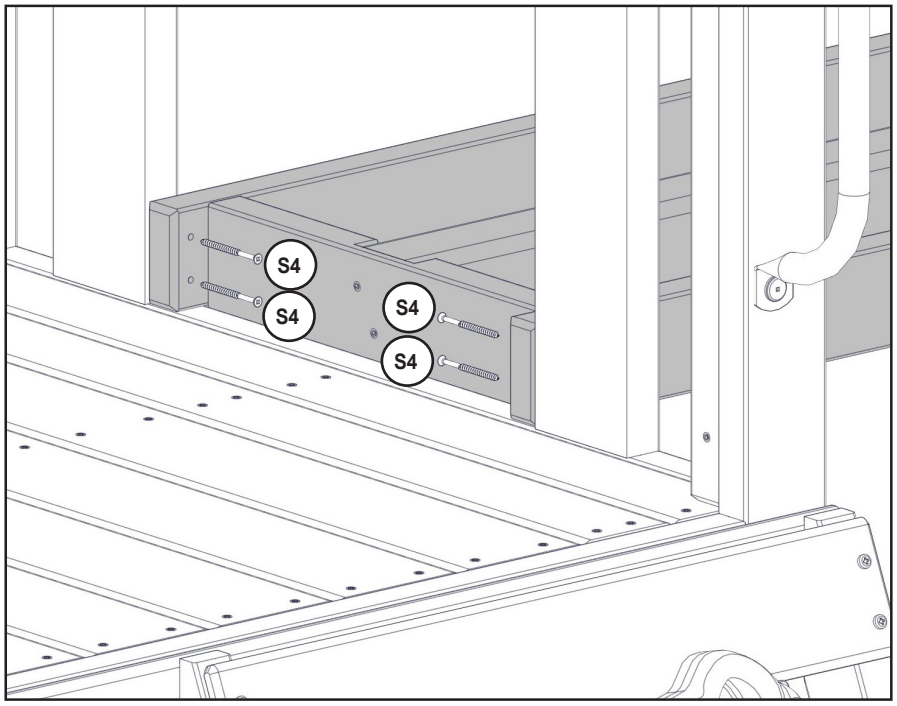

Hardware

4 x (S4) #8 x 76.2mm (#8 x 3 in)

87

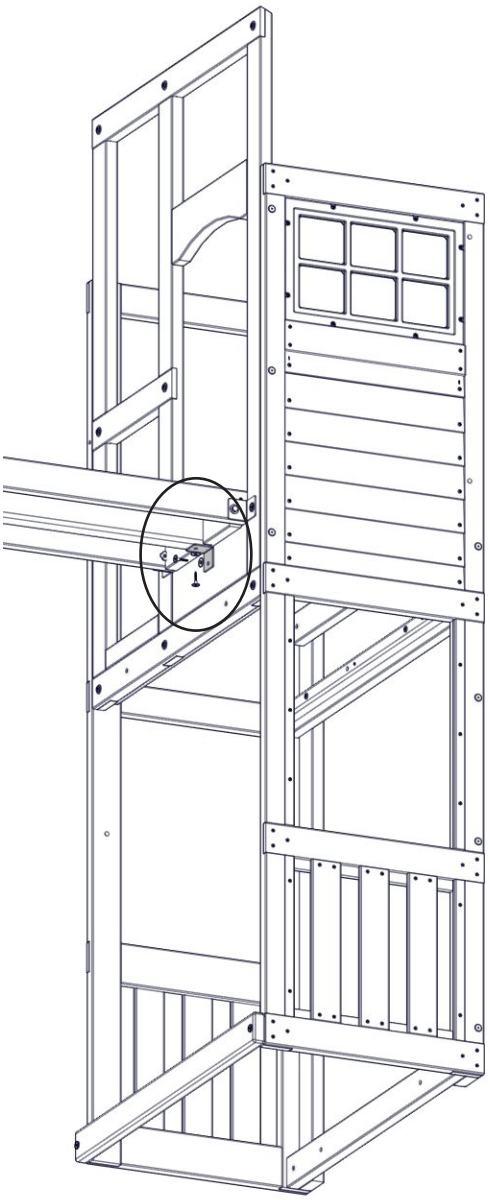




Note: Structure partly removed for clarity.

Pre-drill holes using a 3/16 in drill bit.

Underneath View

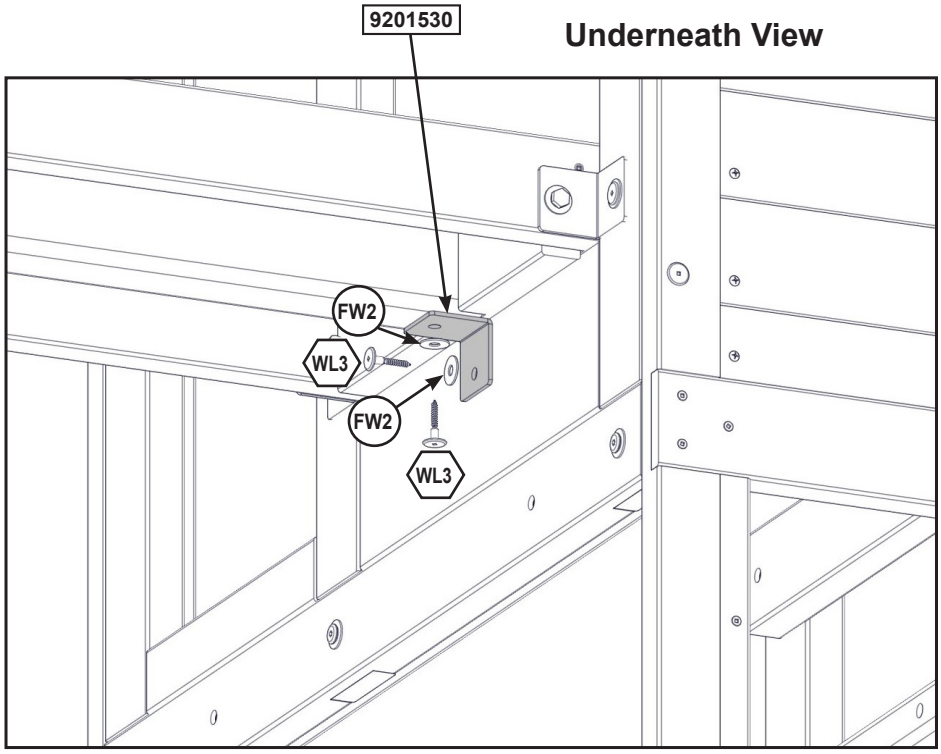

Hardware

2 x WL3 6.4mm x 34.9mm (1/4 x 1-3/8 in)(FW2)


Other Parts

1 x 9201530

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu


88

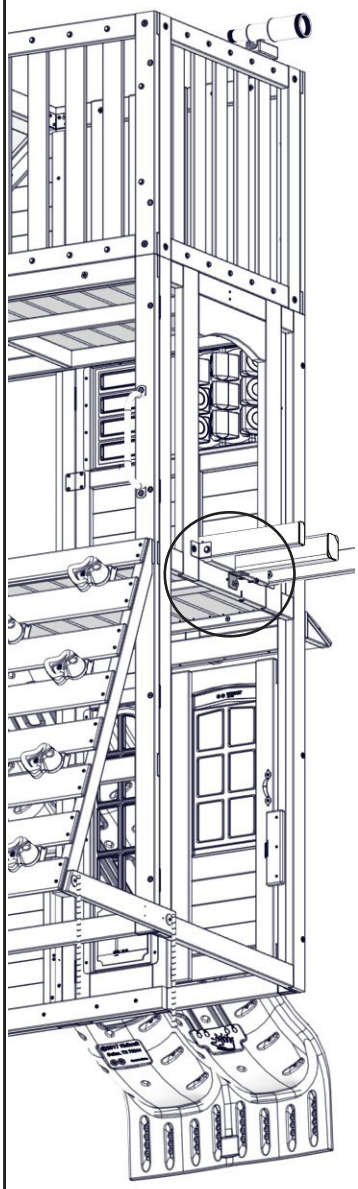



Note: Structure partly removed for clarity.

Pre-drill holes using a 3/16 in drill bit.

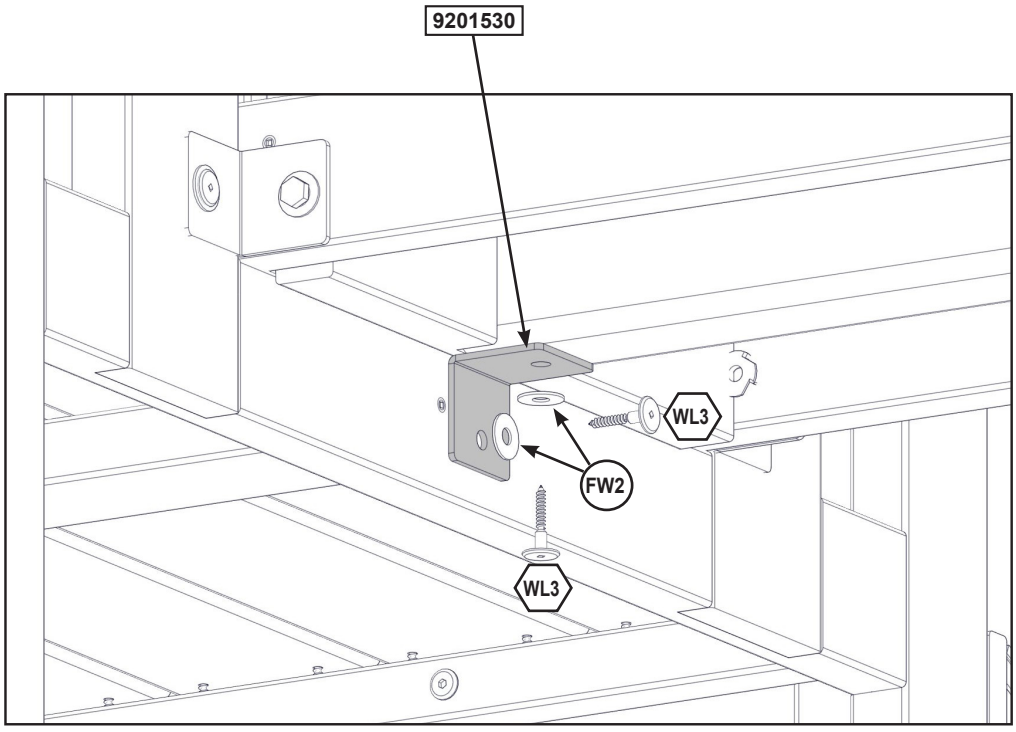

Hardware

2 x WL3 6.4mm x 34.9mm (1/4 x 1-3/8 in)(FW2)

Other Parts


1 x 9201530


89


It is important that these bolts are attached. It will minimize checking of wood.



Assemble t-nuts first with hammer!

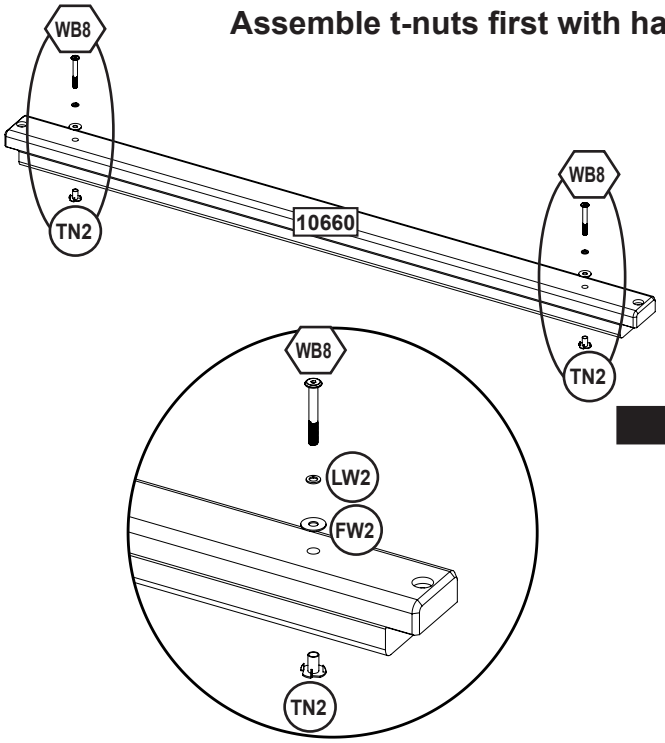

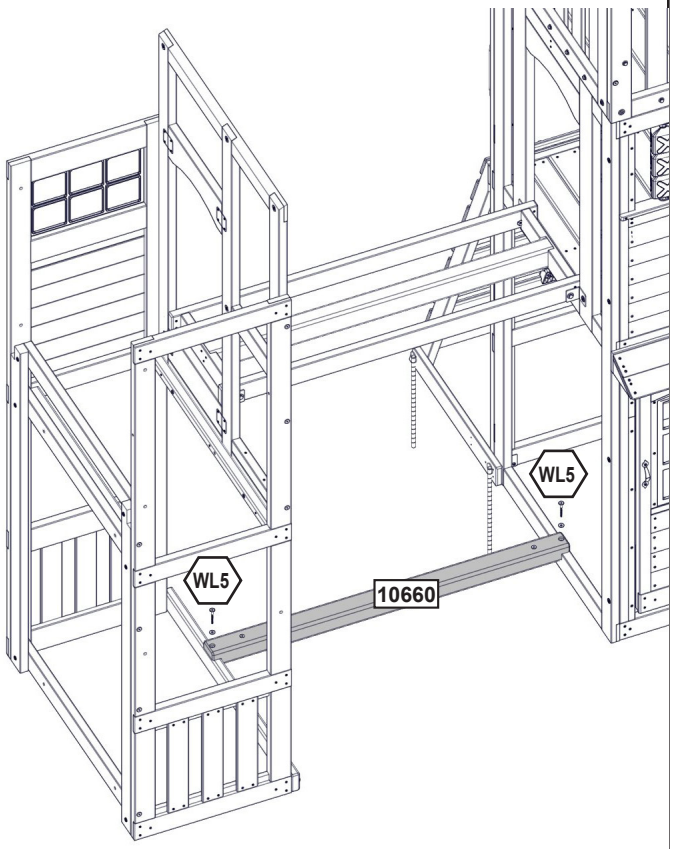

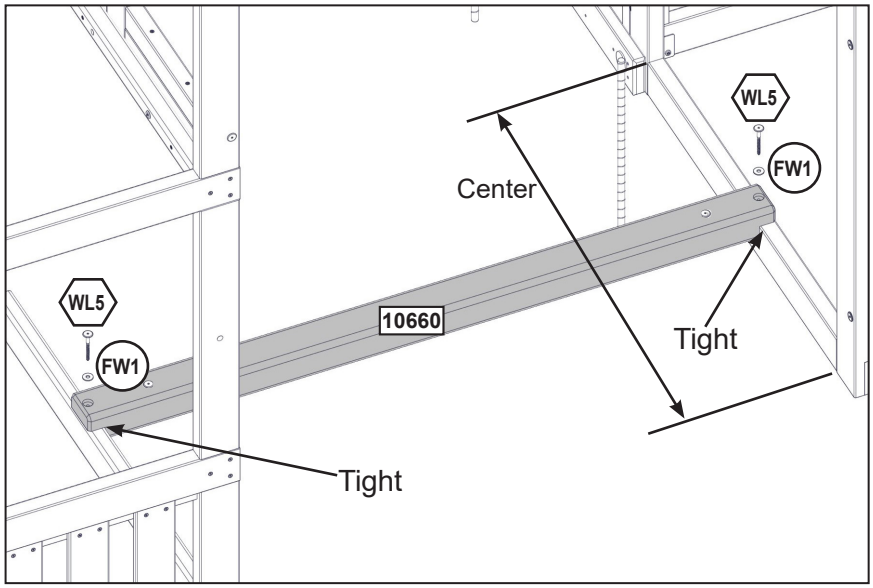

Note: Structure partly removed for clarity.

Pre-drill holes using a 3/16 in drill bit.

Wood Parts

1 x 10660 63.5 x 76.2 x 1314.5 mm (2 1/2 x3 x 51 3/4 in)

Hardware

2 x WL5 6.4mm x 63.5 mm (1/4 x 2-1/2 in)(FW1)

2 x WB8 7.9mm x 60.3 mm (5/16 x 2-3/8 in)(FW2, LW2, TN2)

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu


MISSING SOMETHING? CALL US OR GO ONLINE

90




SEE COVER PAGE FOR SAFETY CLEARANCE

Warning! To prevent tipping and avoid potential injury, stakes must be driven 13 in(330mm) into ground. Digging or driving stakes can be dangerous if you do not check first for under-ground wiring, cables or gas lines.

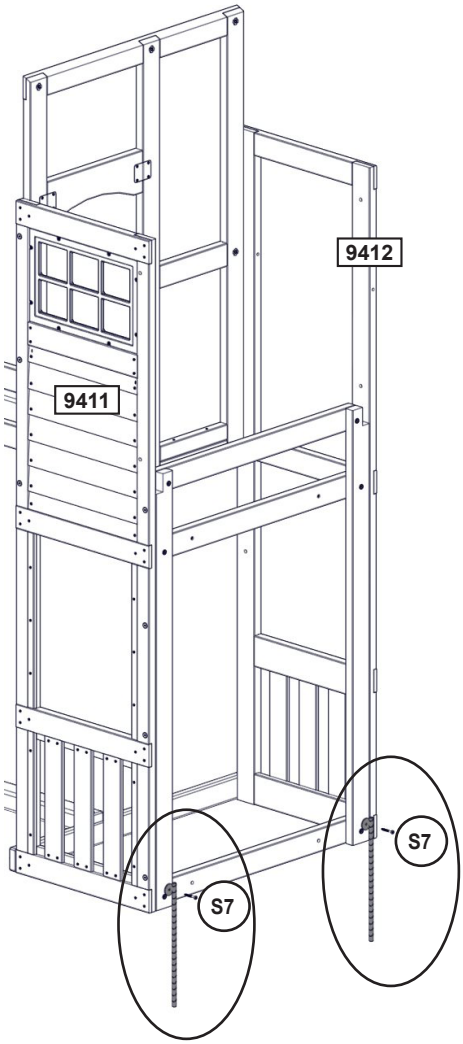

Note: Structure partly removed for clarity.

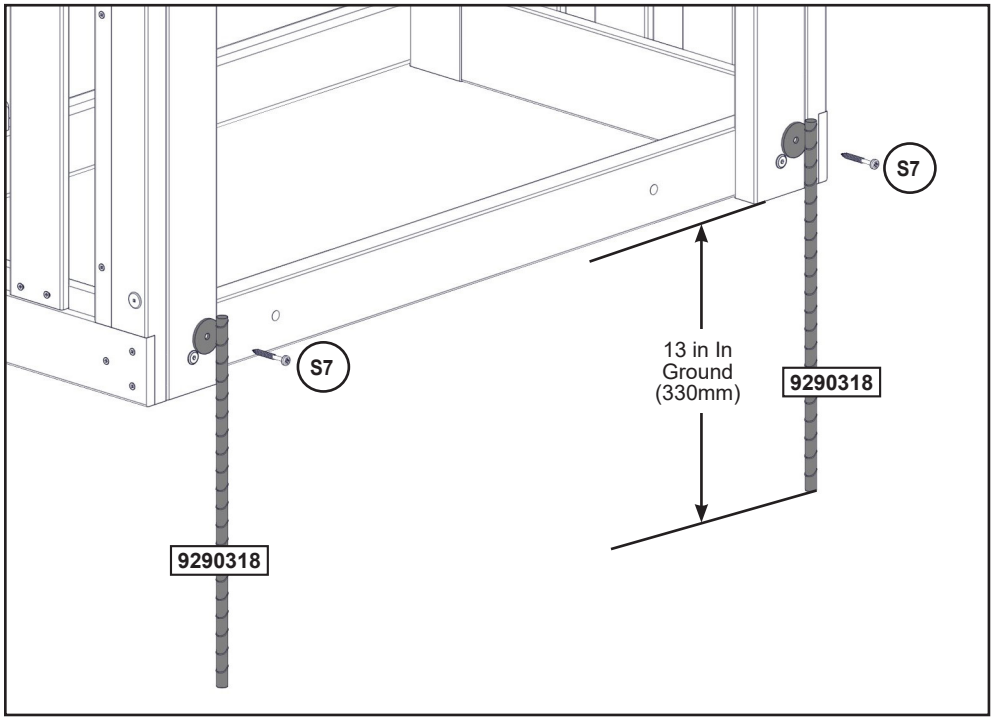

Hardware


2 x (S7) #12 x 50.8mm (#12 x 2 in)

Other Parts

2 x 9290318

91

Assemble T-Nuts first with hammer!

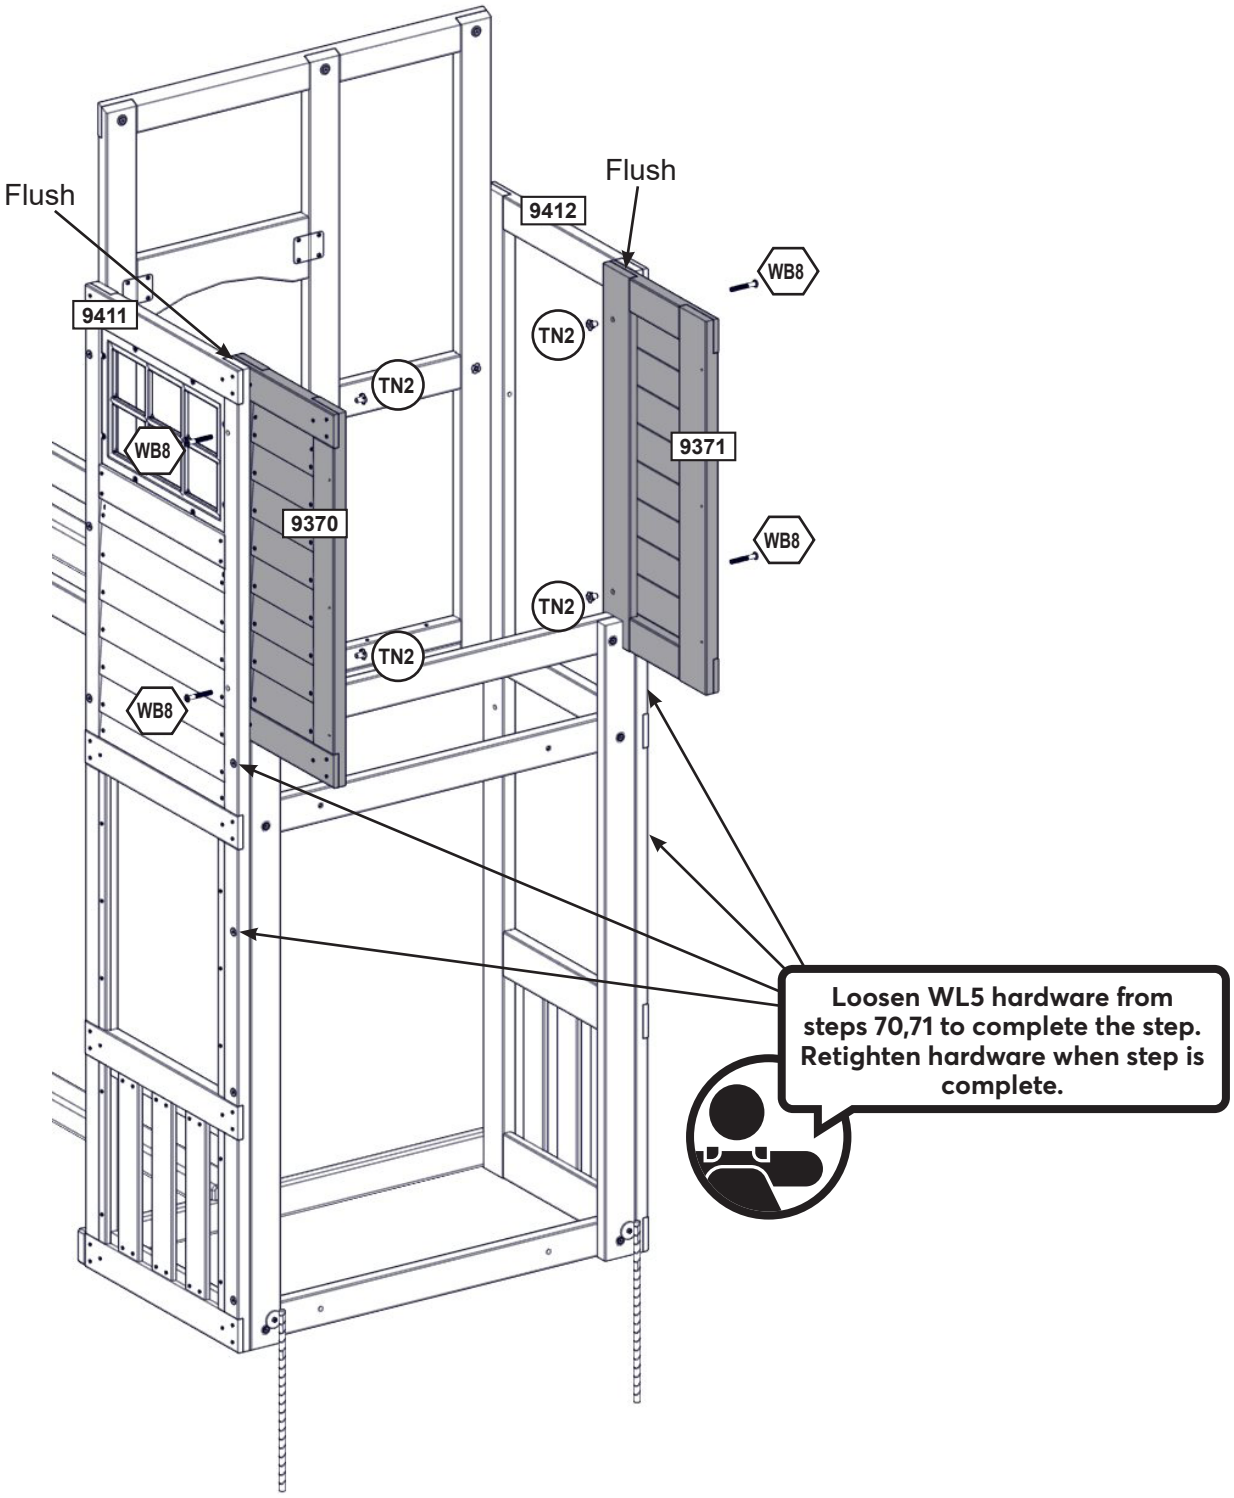

Wood Parts

1 x 9370 31.8 x 389.6 x 843.4 mm (1 1/4 x 15 5/16 x 33 3/16 in)
1 x 9371 31.8 x 389.6 x 843.4 mm (1 1/4 x 15 5/16 x 33 3/16 in)

Hardware

4 x WB8 7.9mm x 60.3 mm (5/16 x 2-3/8 in)(TN2)


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu

92

Assemble T-Nuts first with hammer!



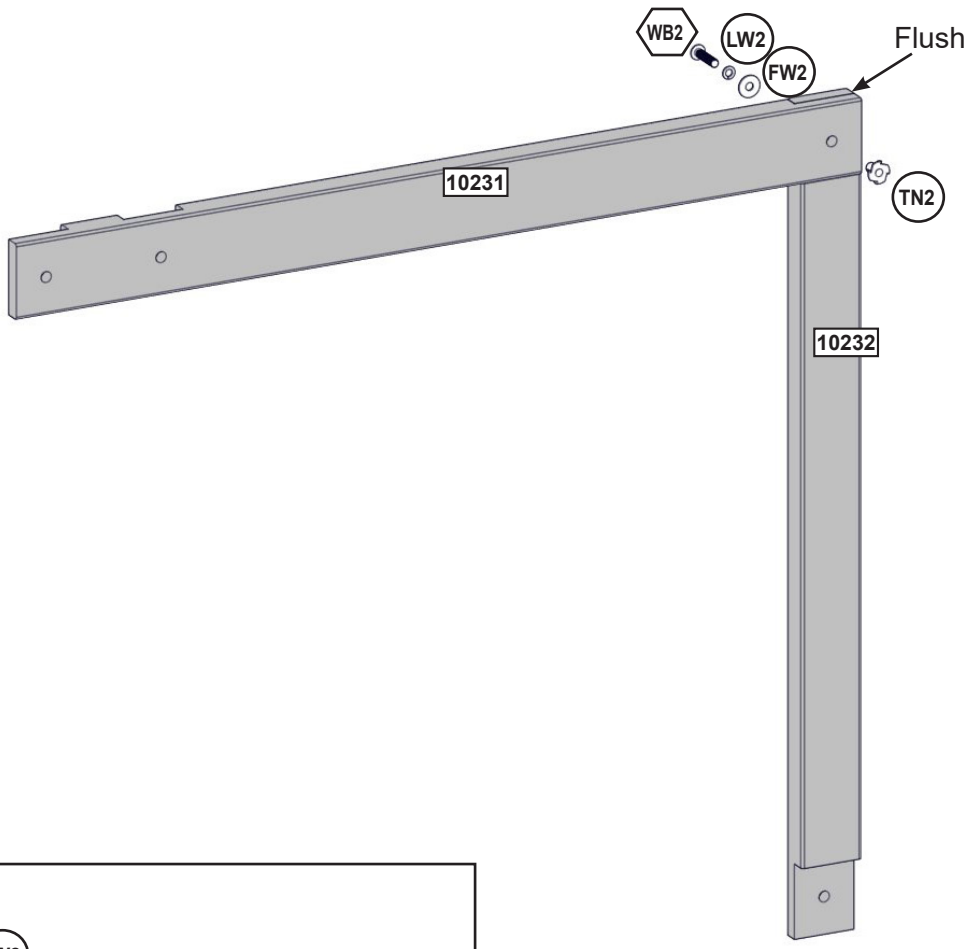

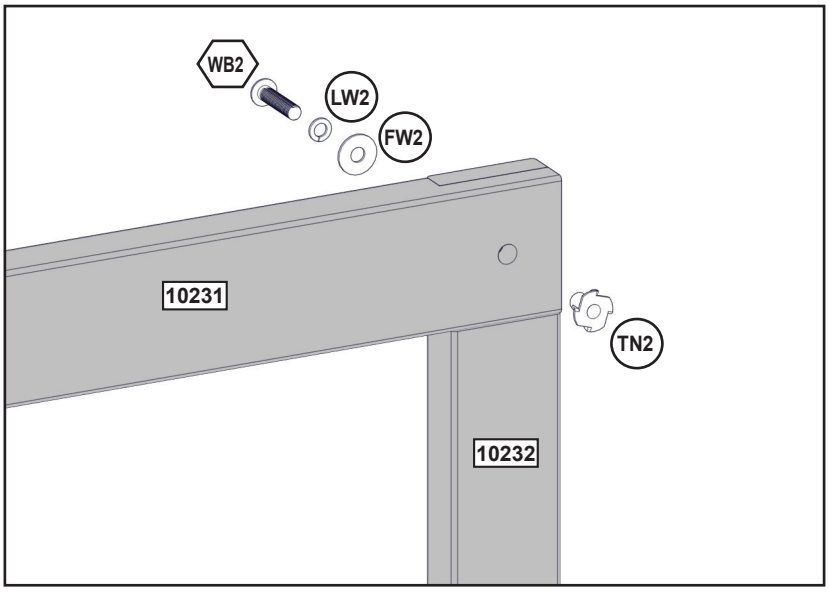

Wood Parts

1 x 10231 31.8 x 76.2 x 901.5 mm (1 1/4 x 3 x 35 1/2 in)

1 x 10232 31.8 x 63.5 x 843.4 mm (1 1/4 x 2 1/2 x 33 3/16 in)


Hardware


1 x WB2 7.9mm x 34.9 mm (5/16 x 1-3/8 in)(FW2, LW2, TN2)

93

Assemble T-Nuts first with hammer!



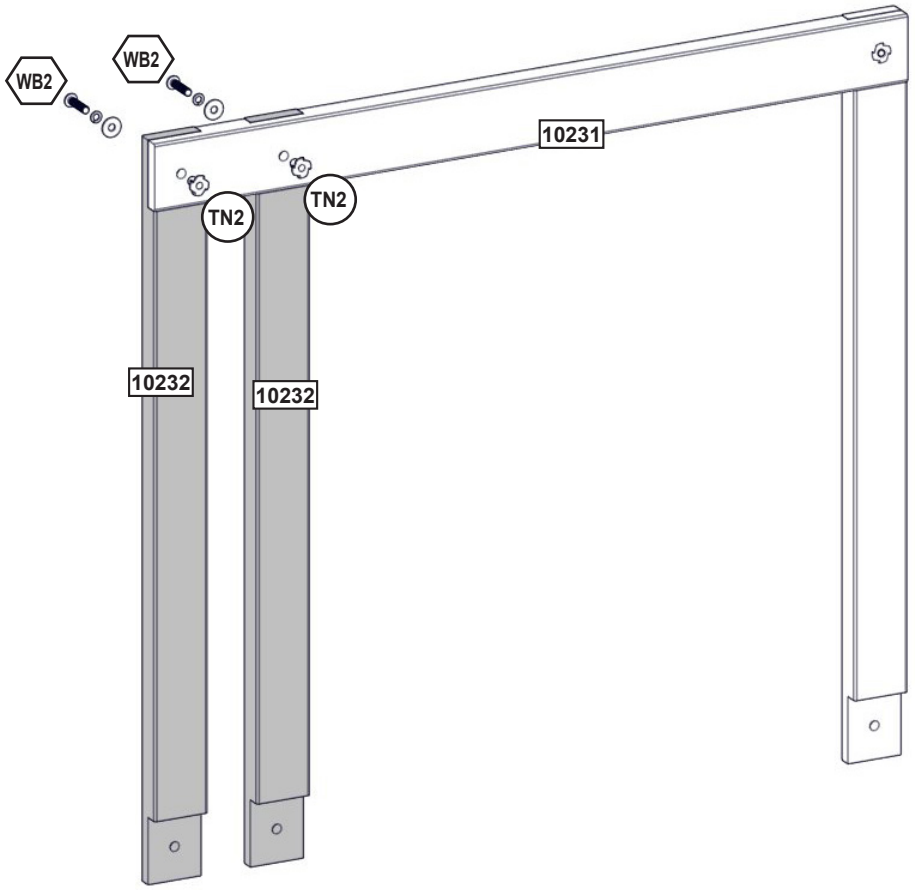

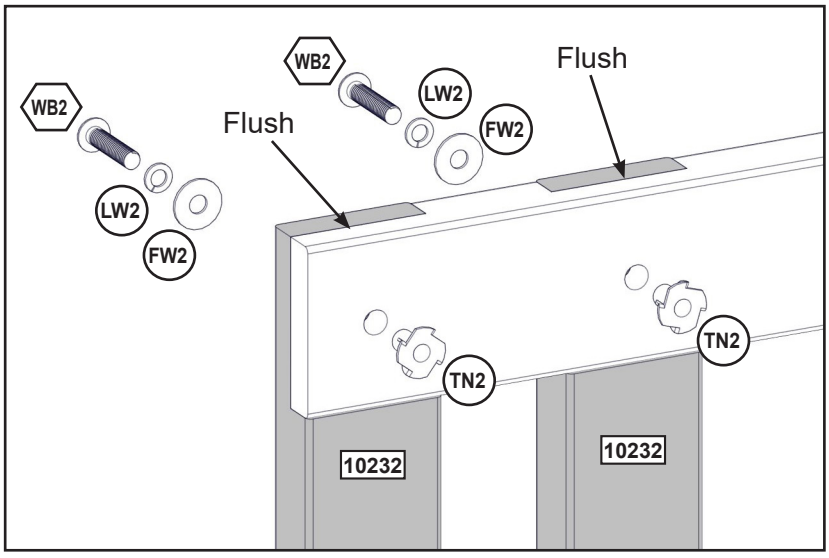

Wood Parts

2 x 10232 31.8 x 63.5 x 843.4 mm (1 1/4 x 2 1/2 x 33 3/16 in)

Hardware


2 x WB2 7.9mm x 34.9 mm (5/16 x 1-3/8 in)(FW2, LW2, TN2)


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

94 **Assemble T-Nuts first with hammer!**



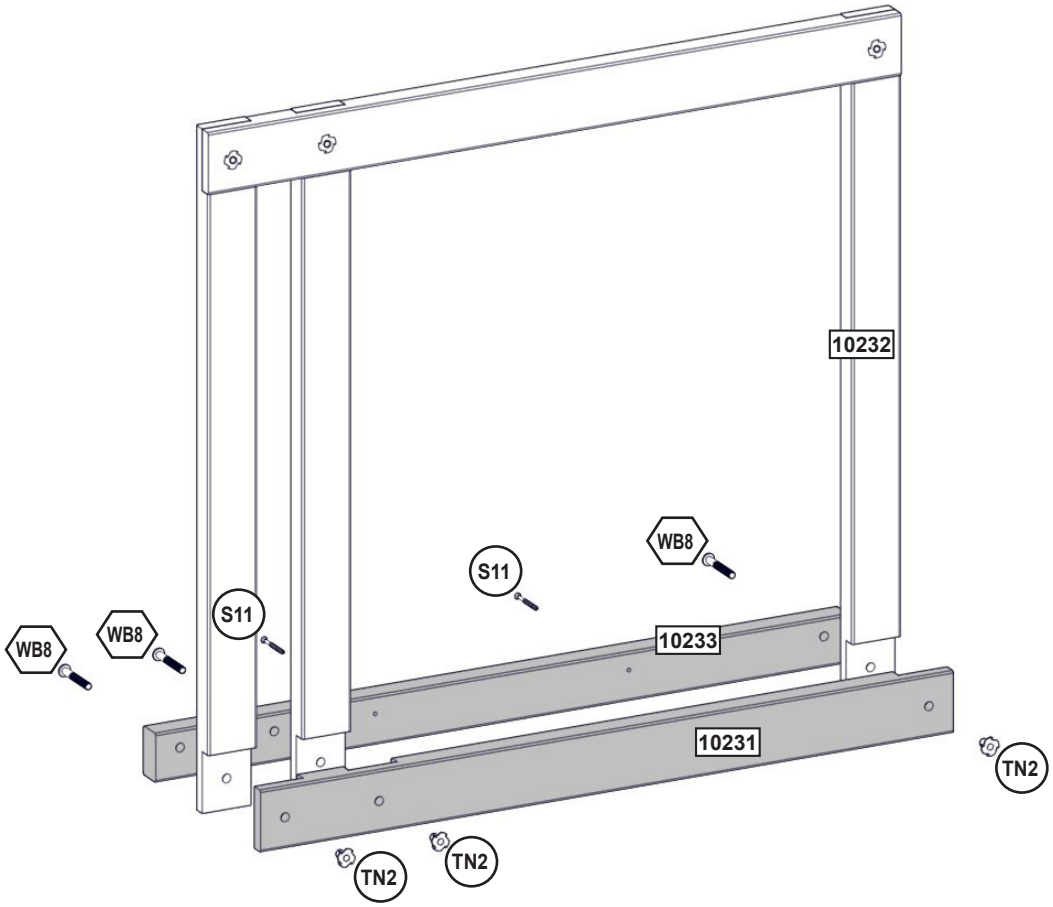

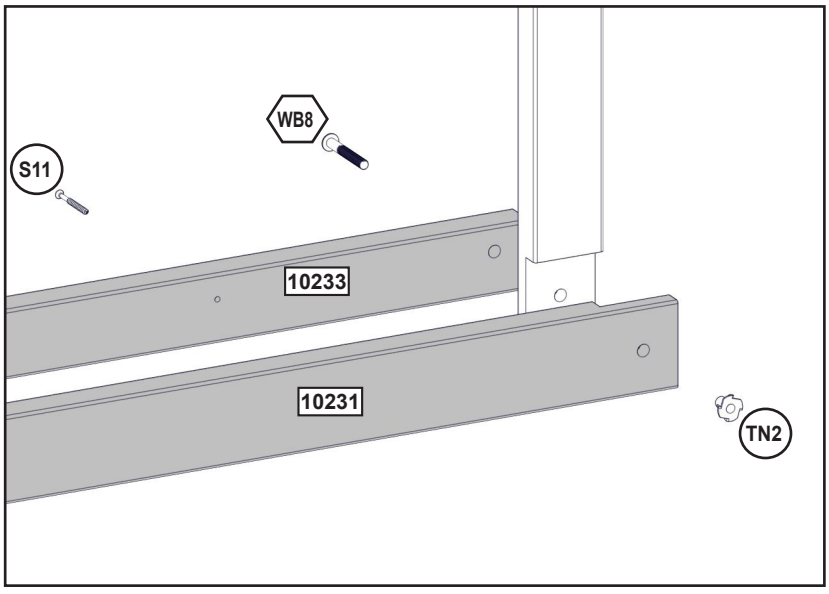

Wood Parts

1 x 10231 31.8 x 76.2 x 901.5 mm (1 1/4 x 3 x 35 1/2 in)

1 x 10233 31.8 x 60.3 x 901.5 mm (1 1/4 x 2 3/8 x 35 1/2 in)


Hardware


3 x WB8 7.9mm x 60.3 mm (5/16 x 2-3/8 in)(TN2)


2 x S11 #8 x 50.8mm (#8 x 2 in)

95

Pre-drill holes using a 3/16 in drill bit.

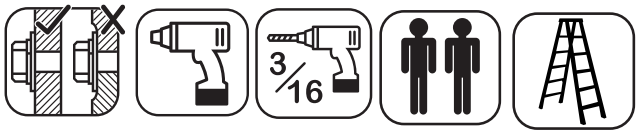

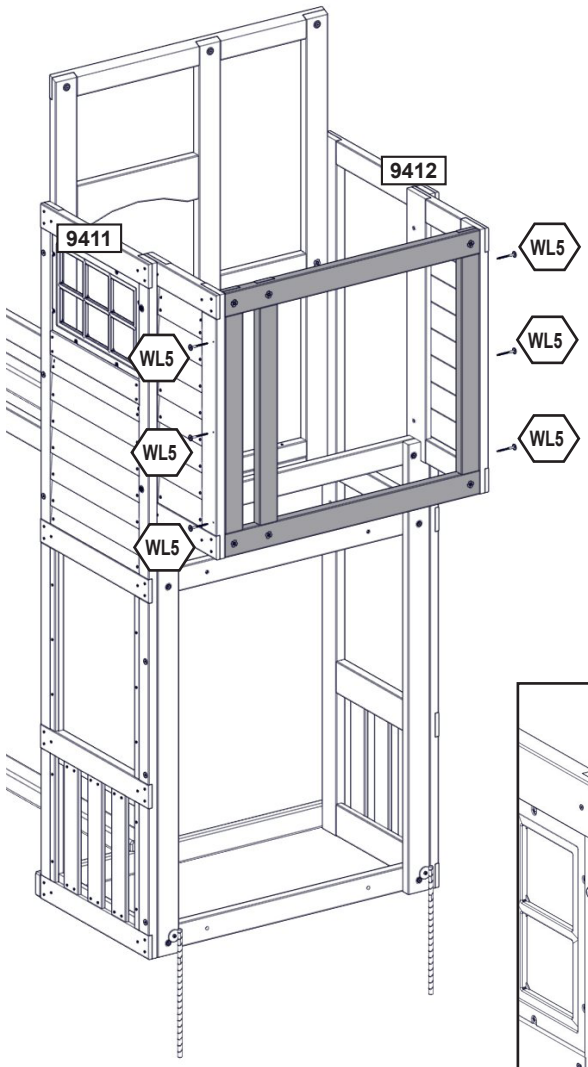

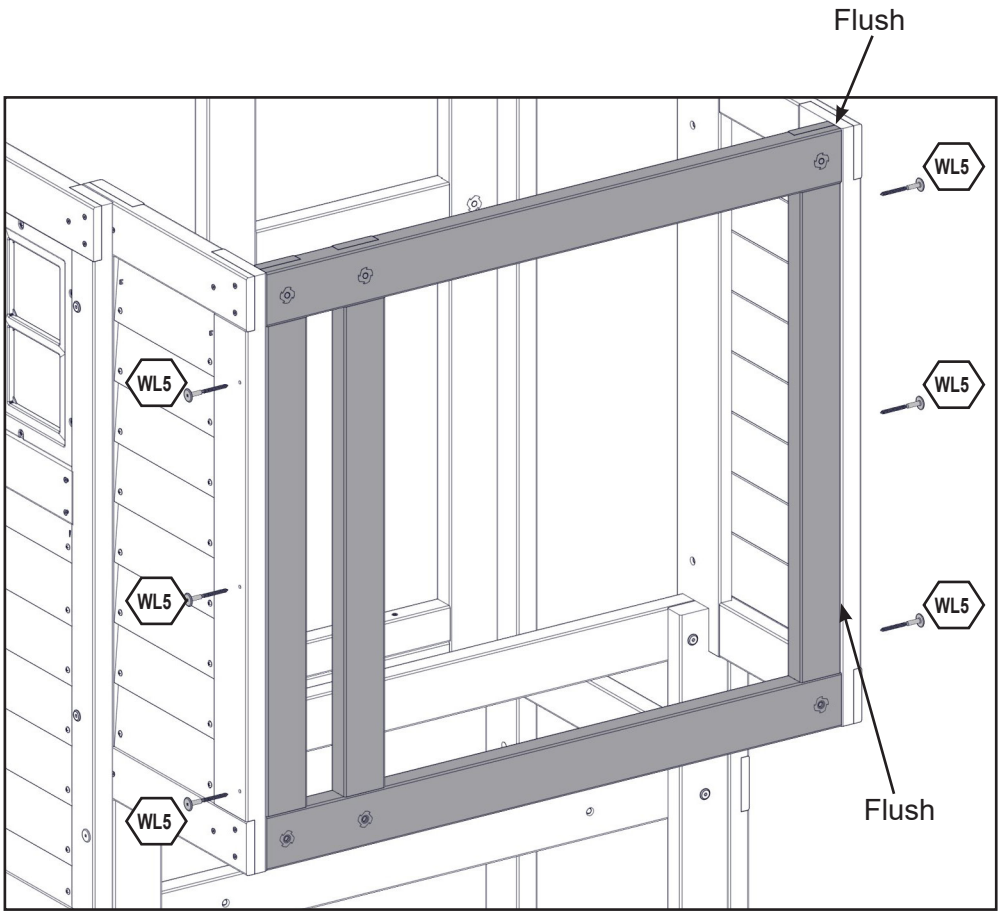


Hardware

6 x WL5 **6.4mm x 63.5 mm (1/4 x 2-1/2 in)**


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

96

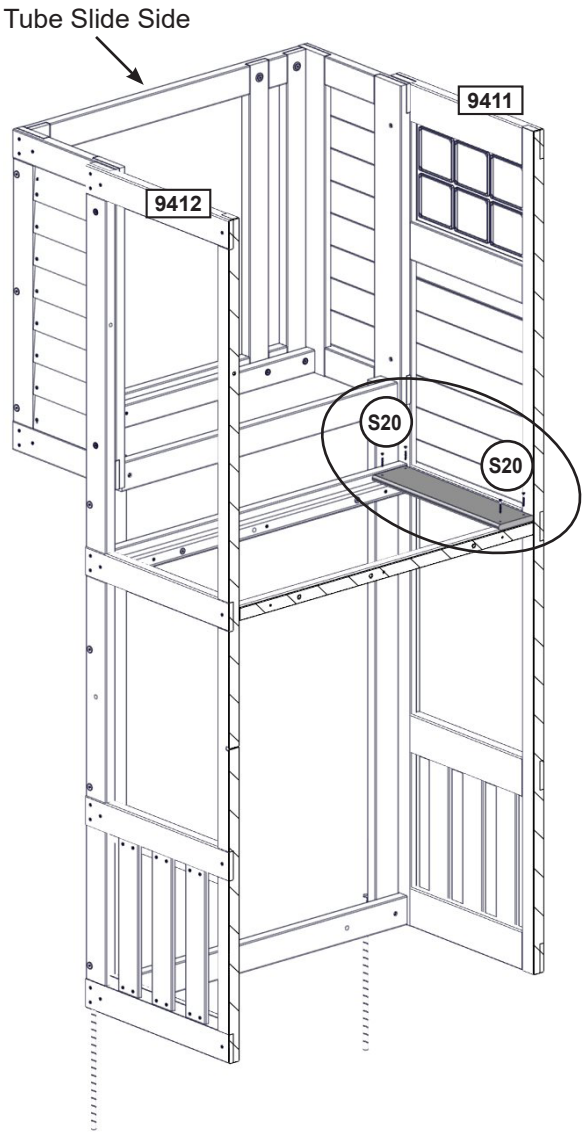

Note: Structure partly removed for clarity.

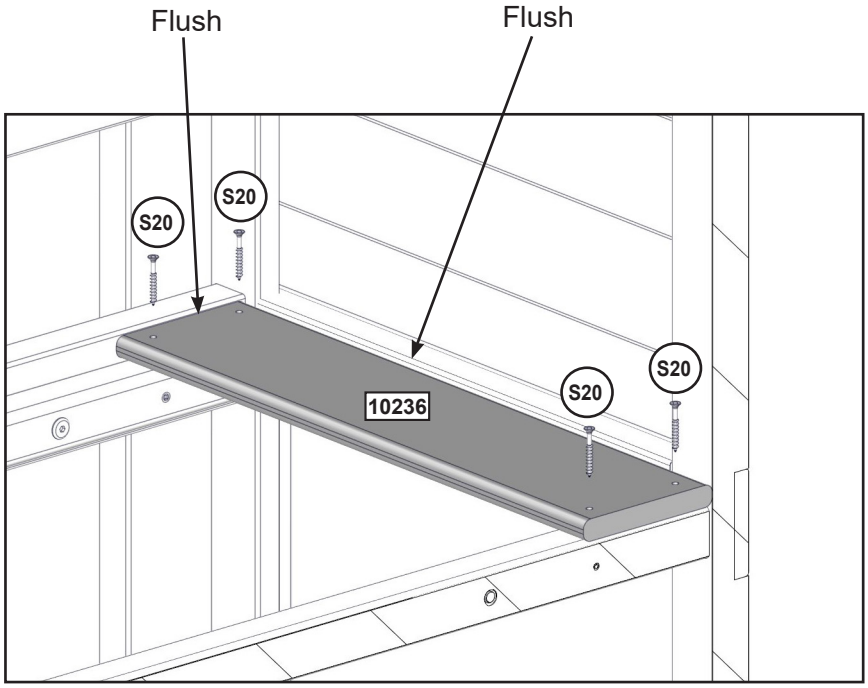


Wood Parts

1 x 10236 15.9 x 114.3 x 479.2 mm (5/8 x 4 1/2 x 18 7/8 in)

Hardware


4 x S20 #8 x 35mm (#8 x 1-3/8 in)

97

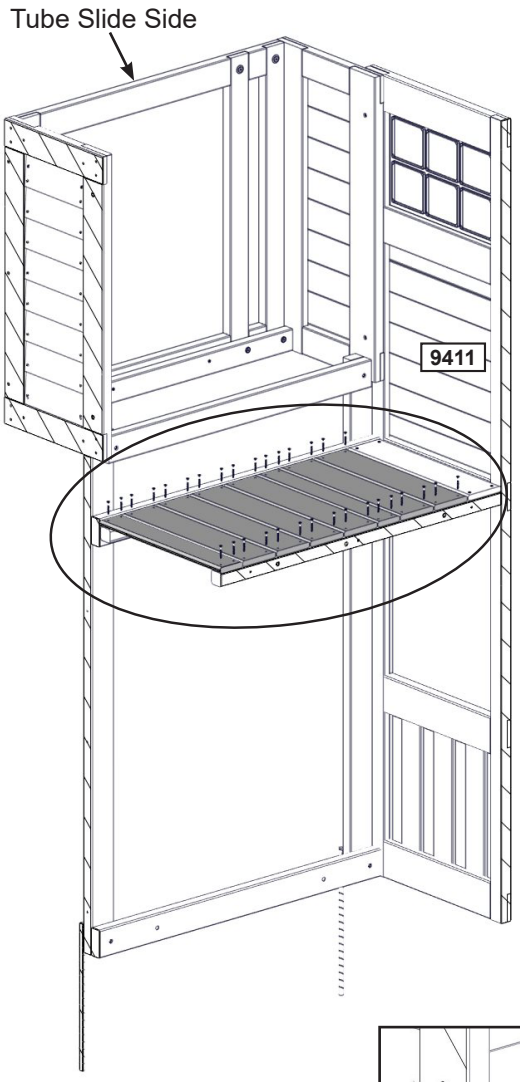

Note: Structure partly removed for clarity.

Evenly space the boards

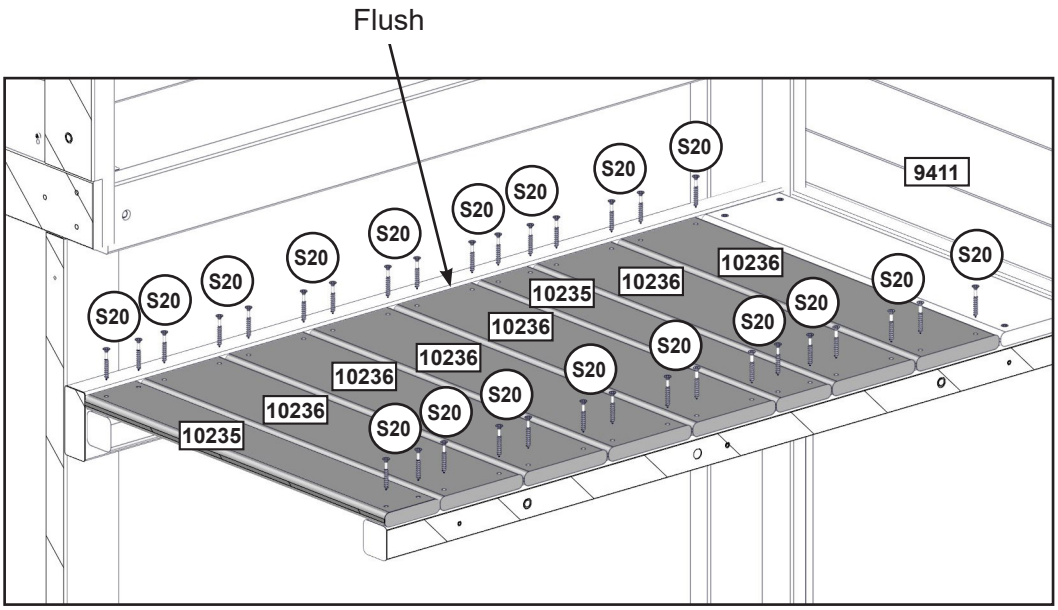

Wood Parts


2 x 10235 15.9 x 76.2 x 479.2 mm (5/8 x 3 x 18 7/8 in)

6 x 10236 15.9 x 114.3 x 479.2 mm (5/8 x 4 1/2 x 18 7/8 in)


Hardware

32 x (S20) #8 x 35mm (#8 x 1-3/8 in)

98

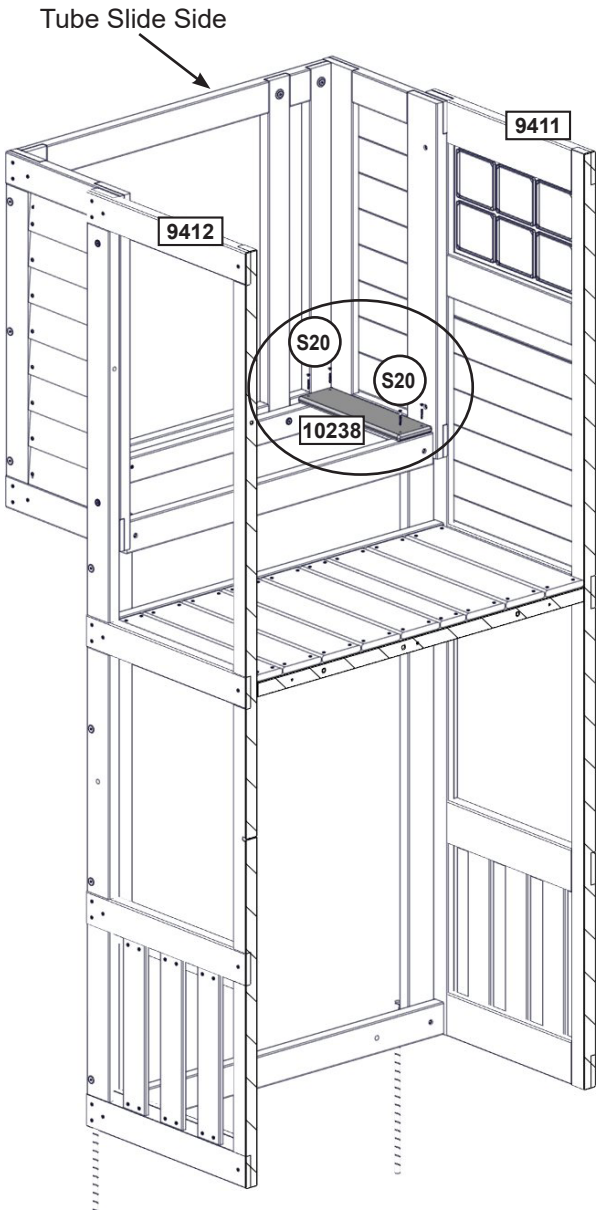

Note: Structure partly removed for clarity.

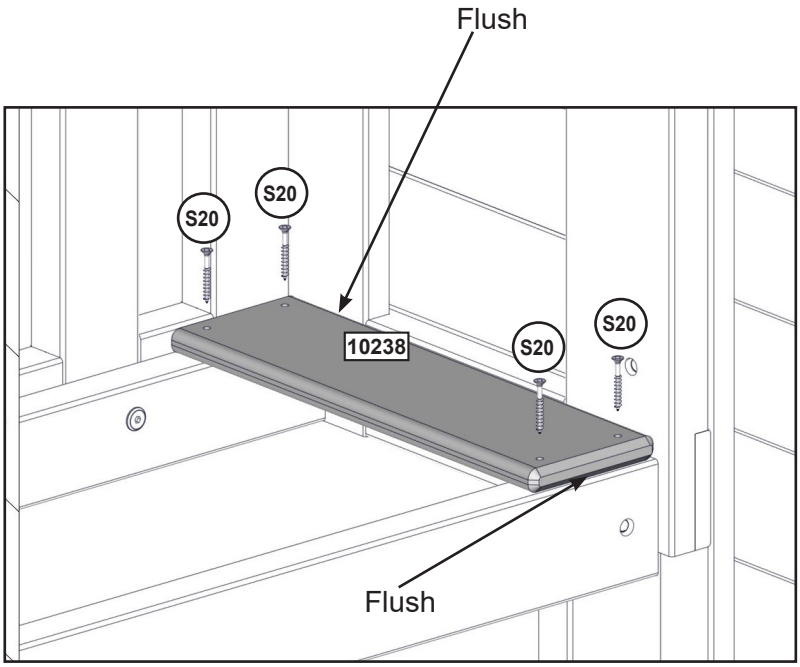


Wood Parts

1 x 10238 15.9 x 101.6 x 345.2 mm (5/8 x 4 x 13 9/16 in)

Hardware


4 x S20 #8 x 35mm (#8 x 1-3/8 in)

99

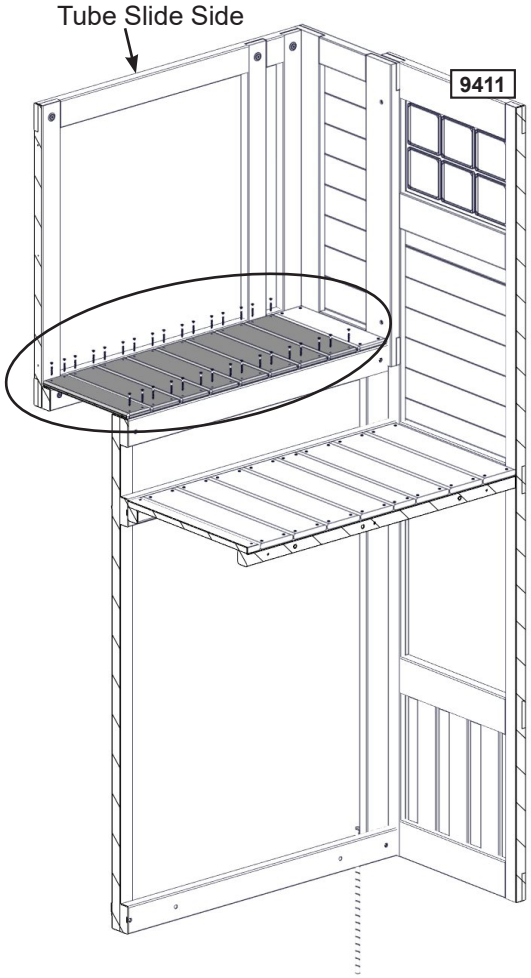

Note: Structure partly removed for clarity.

Evenly space the boards

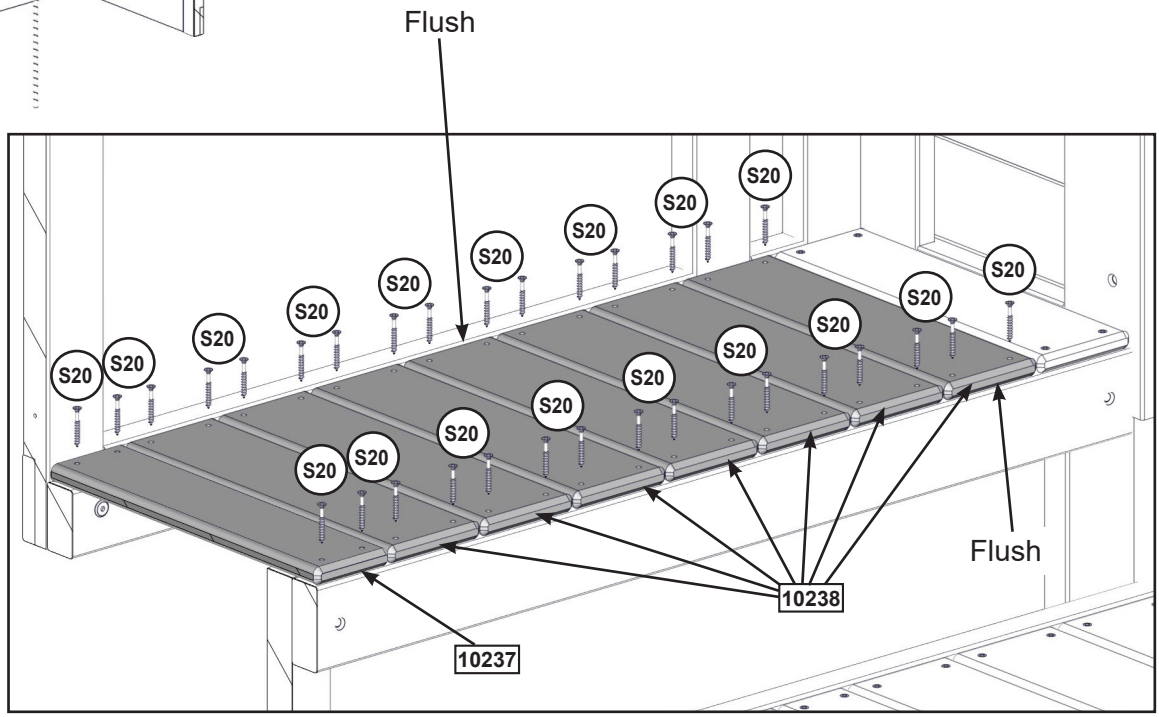

Wood Parts


1 x 10237 15.9 x 82.6 x 345.2 mm (5/8 x 3 1/4 x 13 9/16 in)

7 x 10238 15.9 x 101.6 x 345.2 mm (5/8 x 4 x 13 9/16 in)

Hardware


32 x S20 #8 x 35mm (#8 x 1-3/8 in)

100

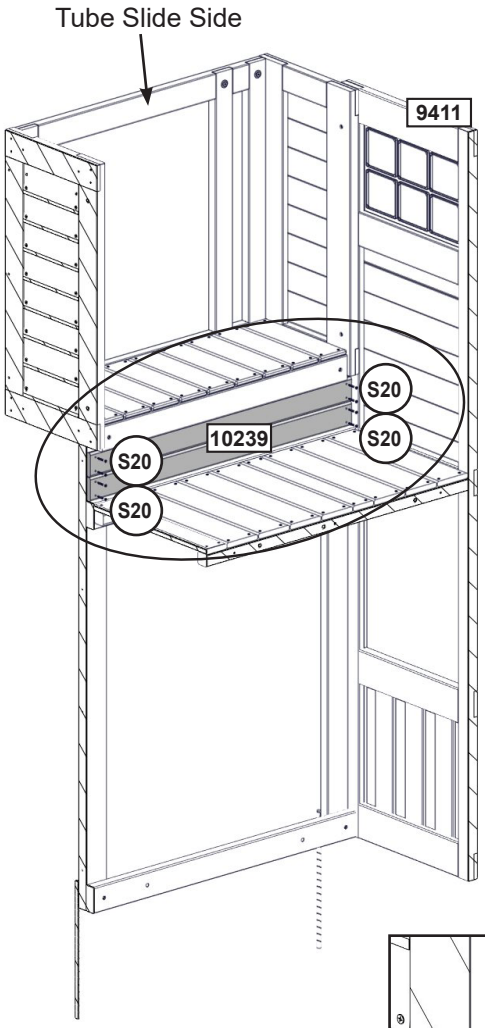

Note: Structure partly removed for clarity.

Evenly space the boards

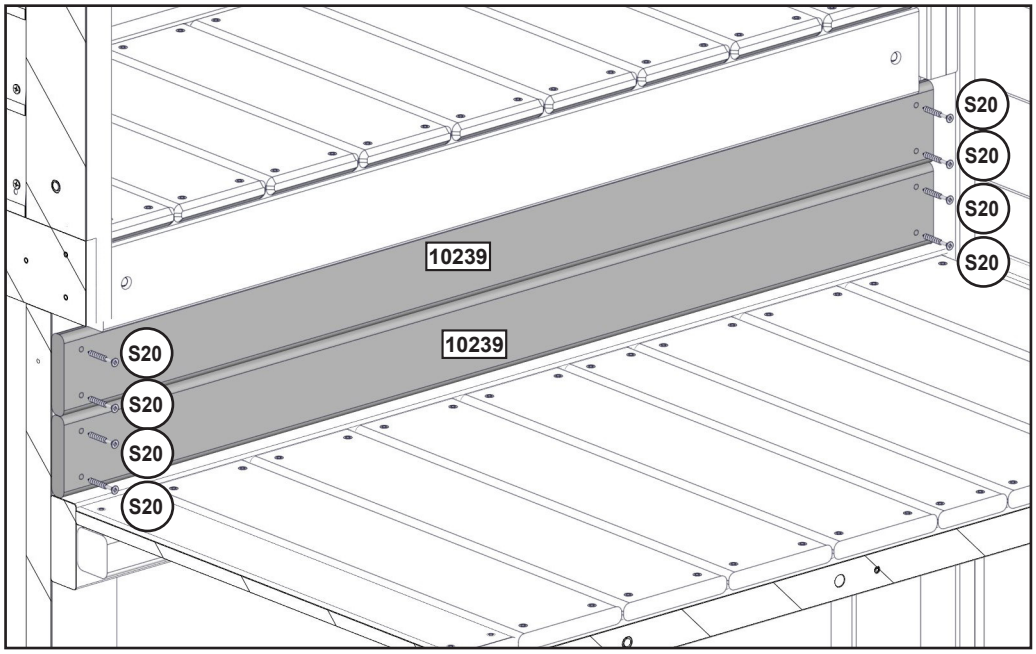


Wood Parts


2 x 10239 15.9 x 72.6 x 961.1 mm (5/8 x 2 7/8 x 37 13/16 in)

Hardware

8 x S20 #8 x 35mm (#8 x 1-3/8 in)

101

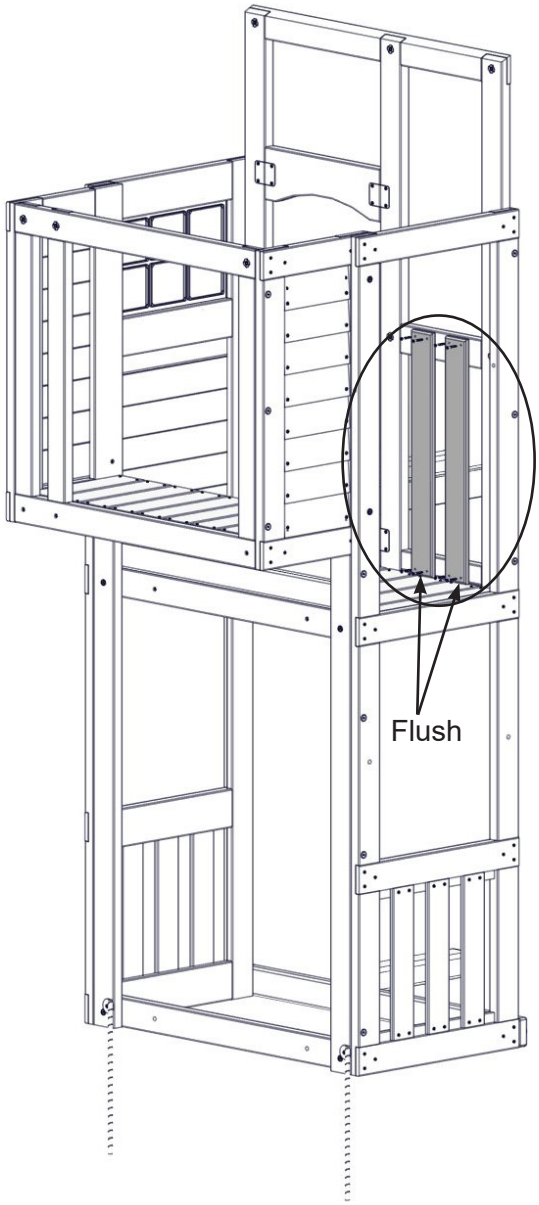

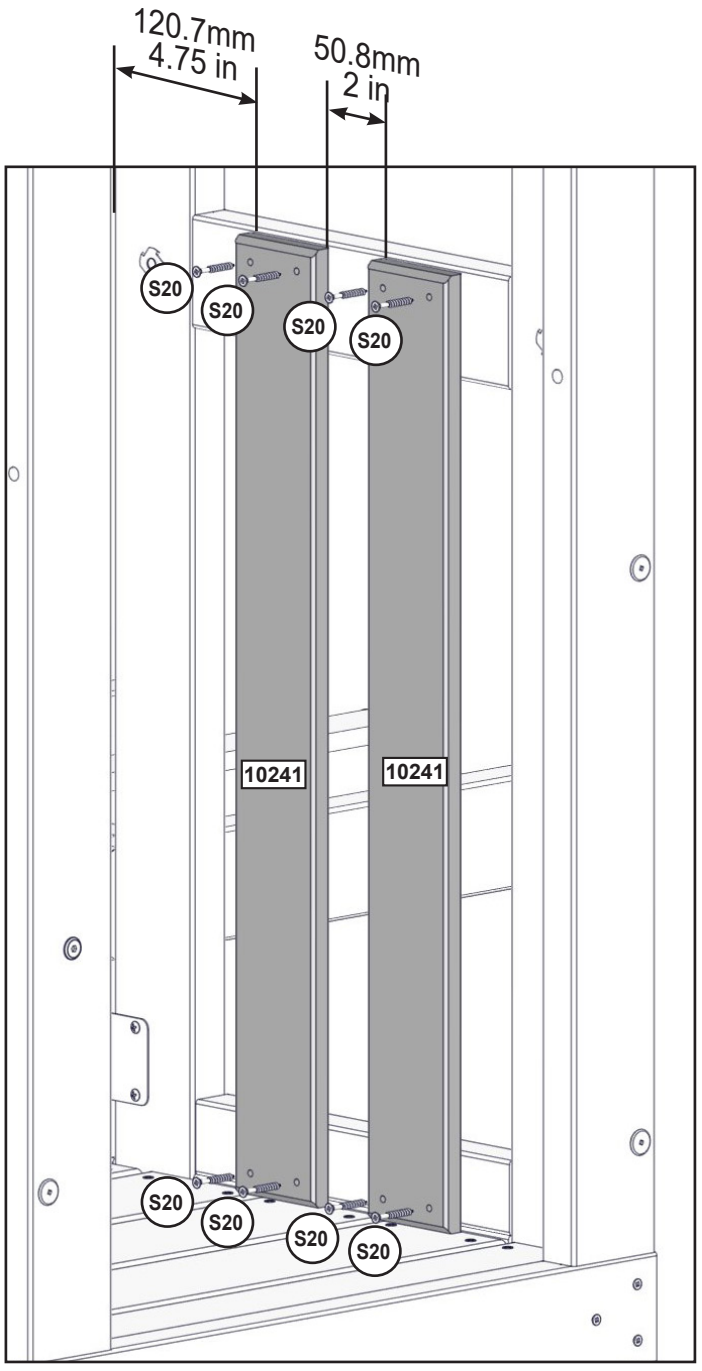

Wood Parts

2 x 10241 **15.9 x 76.2 x 648.2 mm (5/8 x 3 x 25 1/2 in)**

Hardware


8 x S20 **#8 x 35mm (#8 x 1-3/8 in)**


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

102

Note: Structure partly removed for clarity.

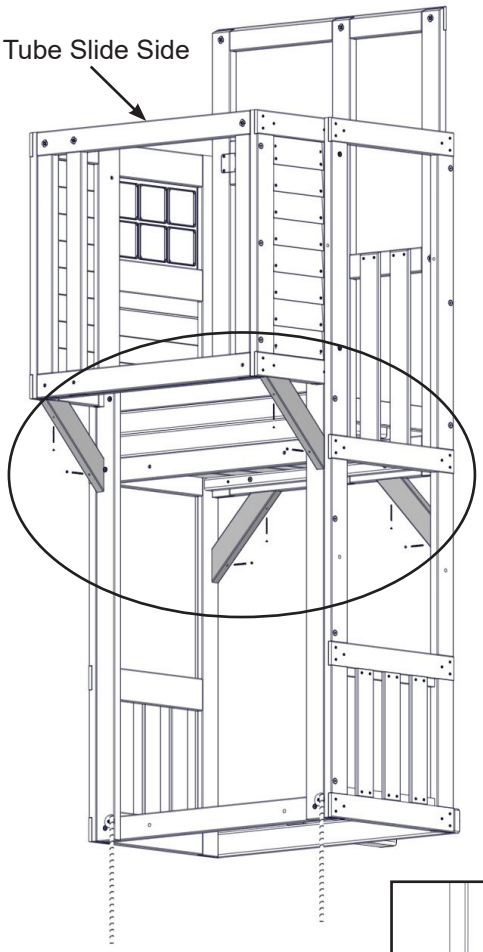

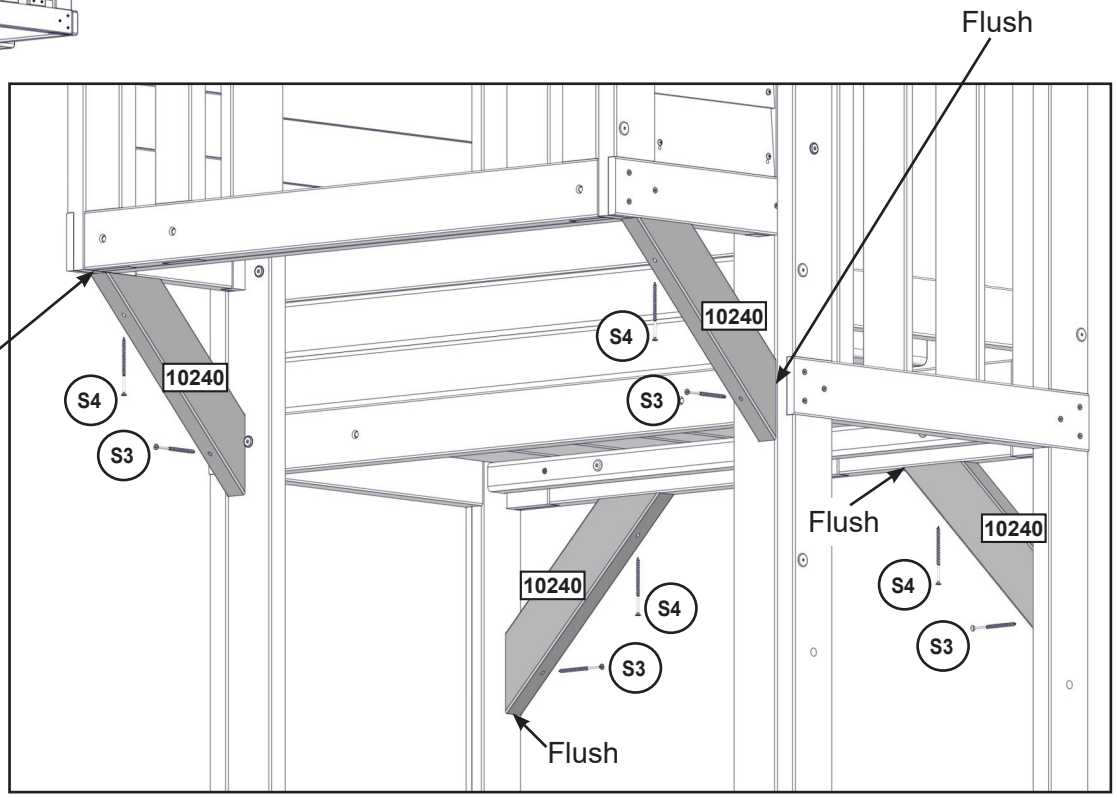

Wood Parts


4 x 10240 31.8 x 76.2 x 381 mm (1 1/4 x 3 x 15 in)

Hardware


4 x S4 #8 x 76.2mm (#8 x 3 in)

4 x S3 #8 x 63.5mm (#8 x 2-1/2 in)

103

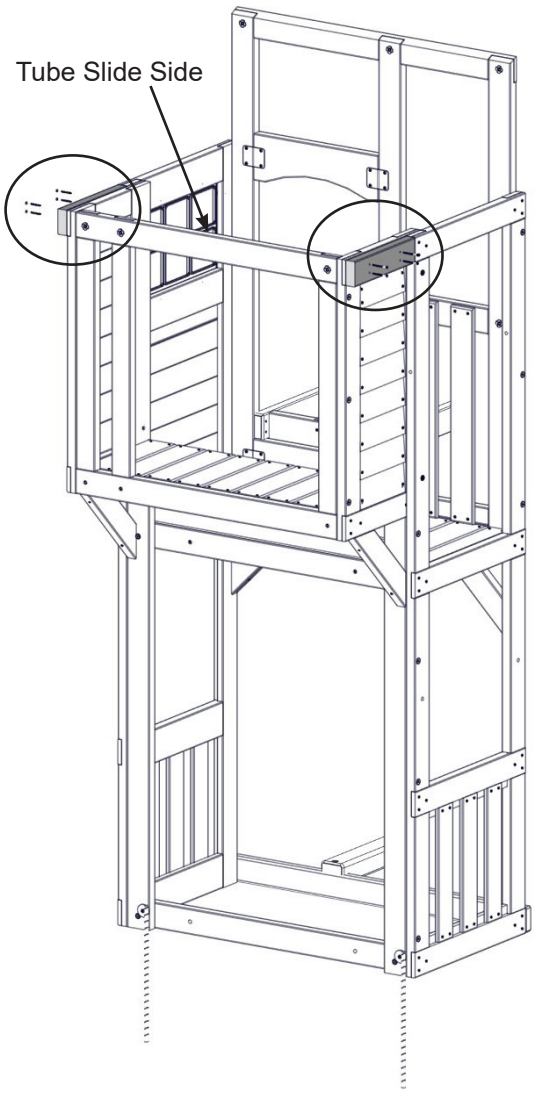

Note: Structure partly removed for clarity.

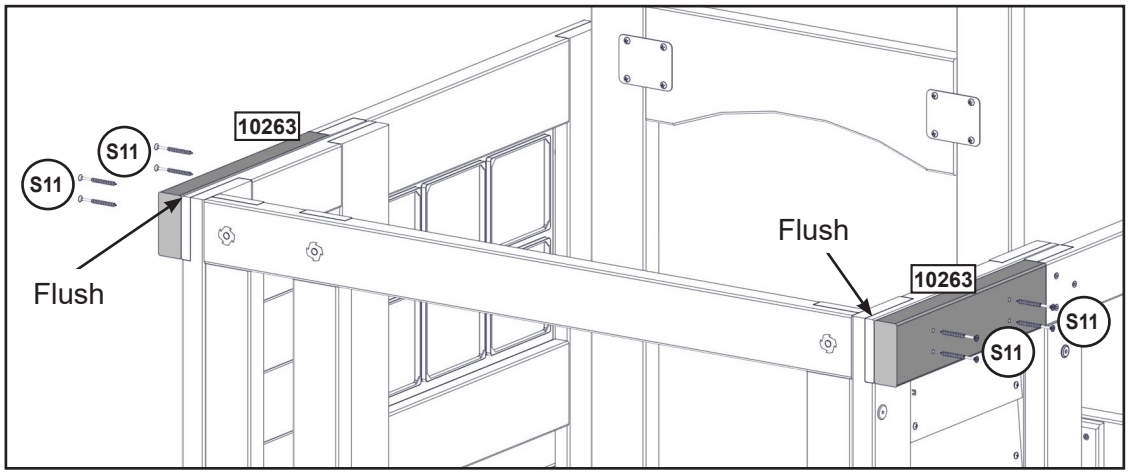


Wood Parts

2 x 10263 31.8 x 76.2 x 312 mm (1 1/4 x 3 x 12 5/6 in)


Hardware

8 x S11 #8 x 50.8mm (#8 x 2 in)

104

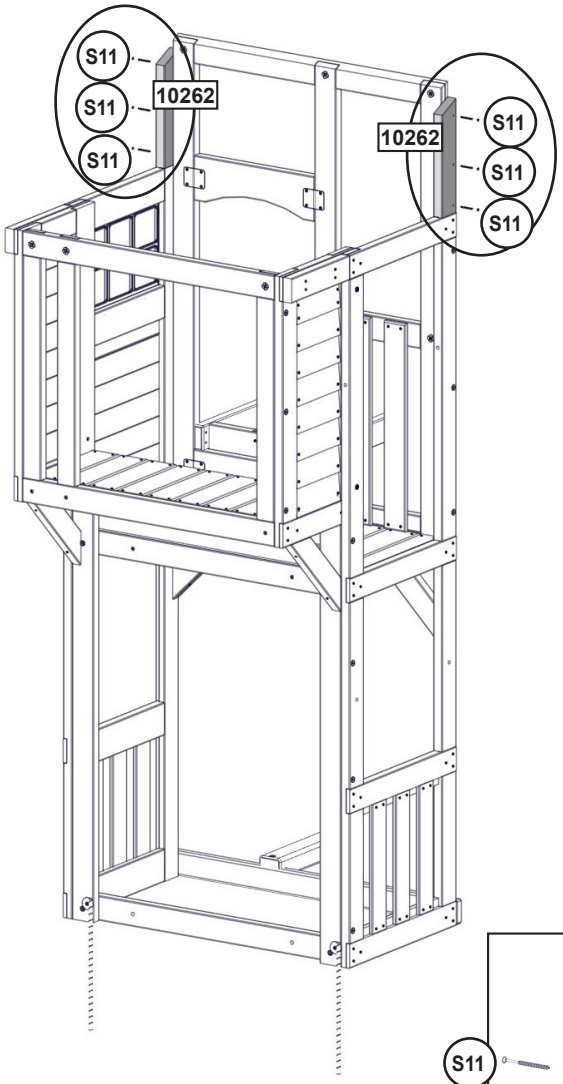

Note: Structure partly removed for clarity.

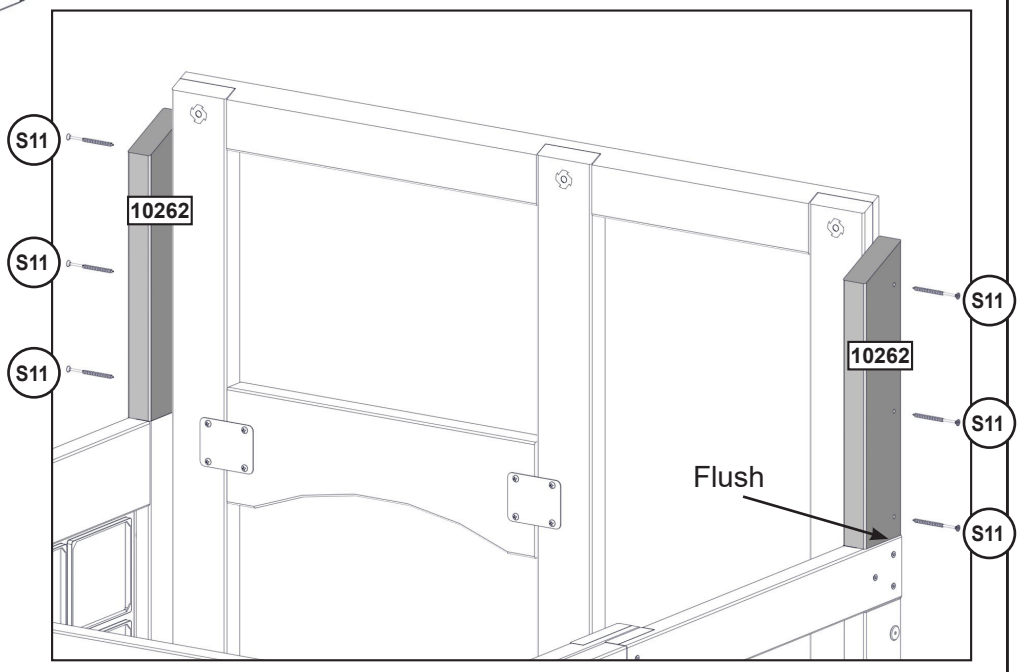


Wood Parts

2 x 10262 31.8 x 76.2 x 355 mm (1 1/4 x 3 x 14 in)


Hardware

6 x S11 #8 x 50.8mm (#8 x 2 in)

105

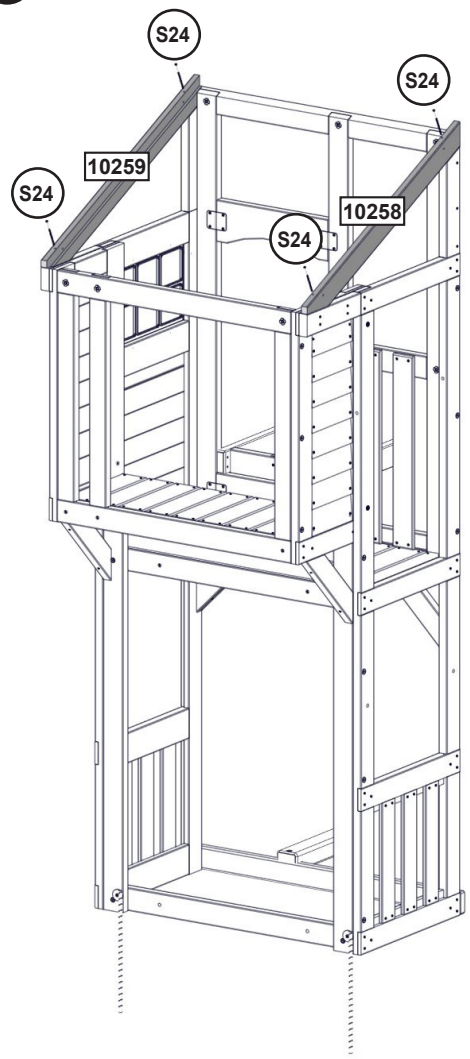

Note: Structure partly removed for clarity.

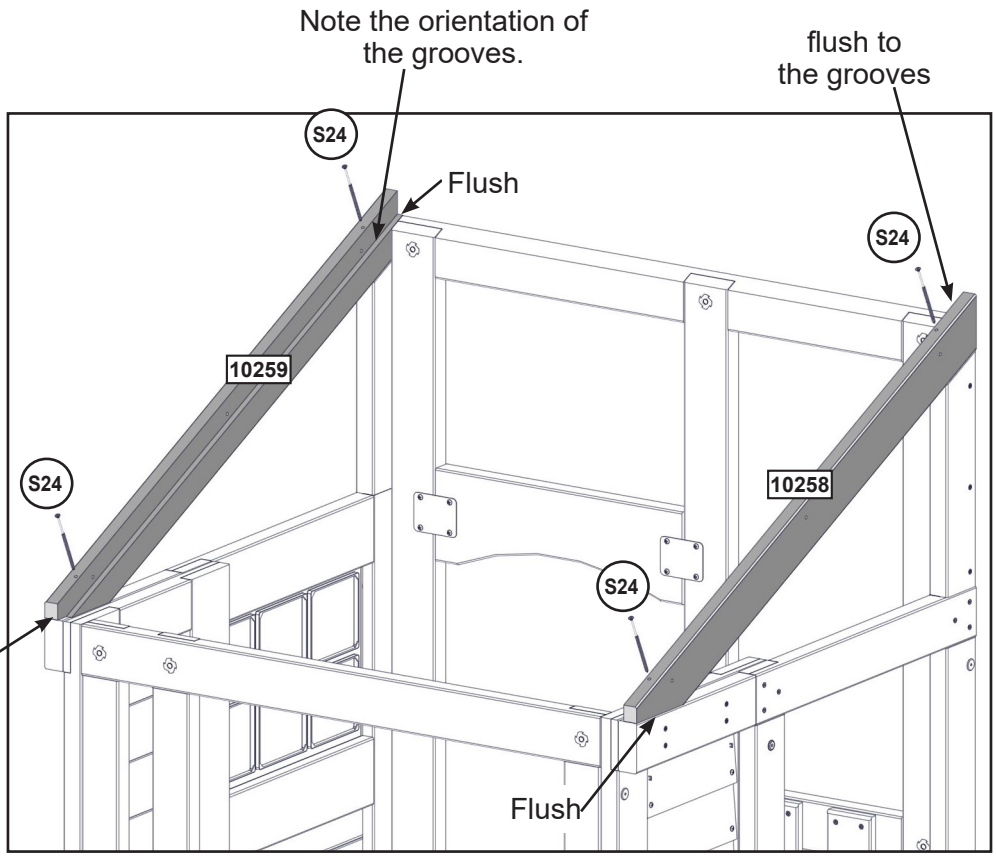

Wood Parts

1 x 10258 31.8 x 76.2 x 991.4 mm (1 1/4 x 3 x 39 1/16 in)
1 x 10259 31.8 x 76.2 x 991.4 mm (1 1/4 x 3 x 39 1/16'' in)


Hardware


4 x S24 #10 x 101.6mm (#10 x 4 in)

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

106

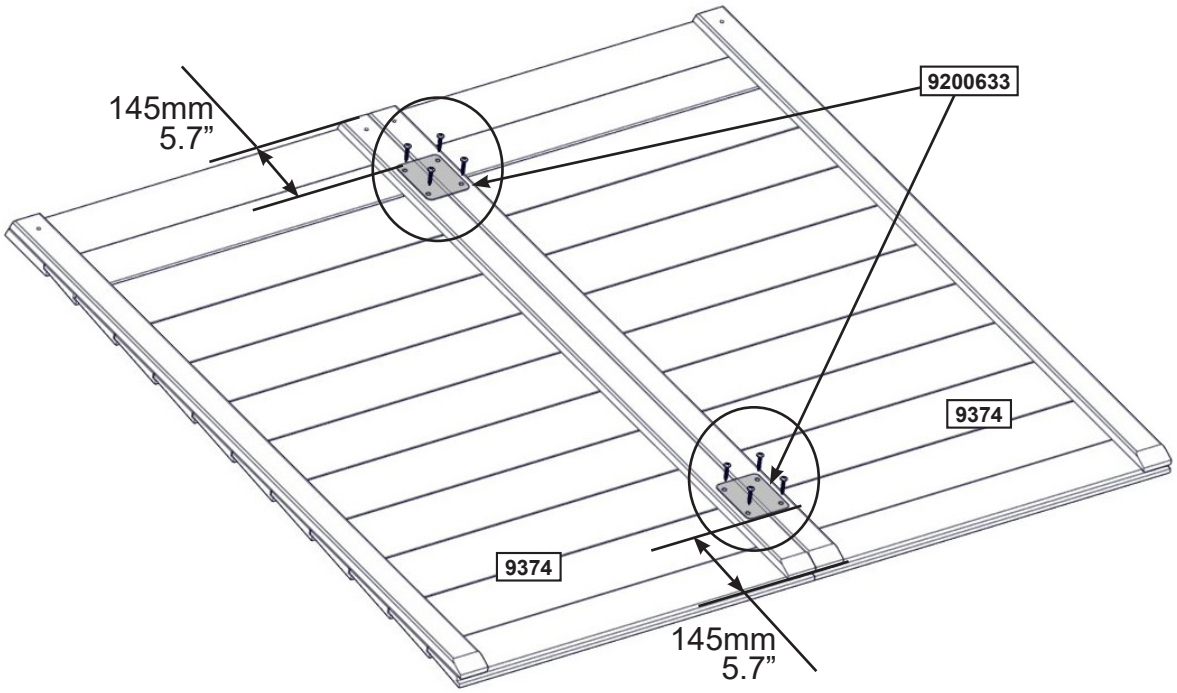

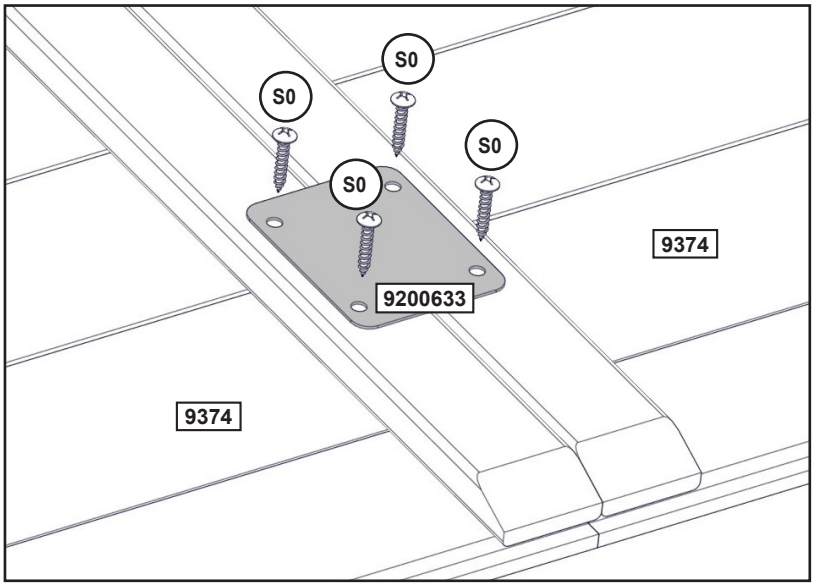

Wood Parts

2 x 9374 28.6 x 979.8 x 492.1mm (1 1/8” x 38 9/16” x 19 3/8”)

Hardware


8 x S0 #8 x 22.2mm (#8 x 7/8 in)


Other Parts

2 x 9200633

107

Note: Structure partly removed for clarity.

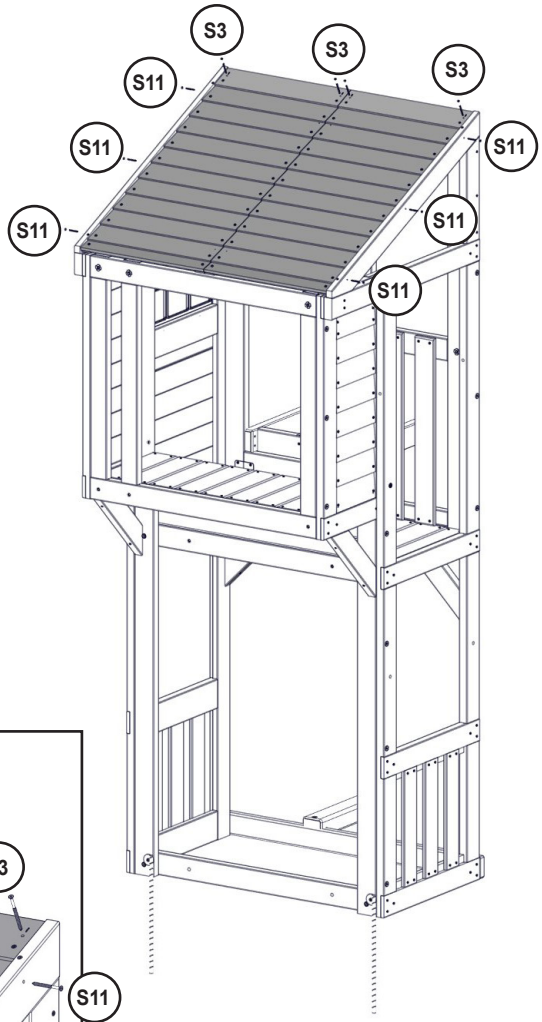

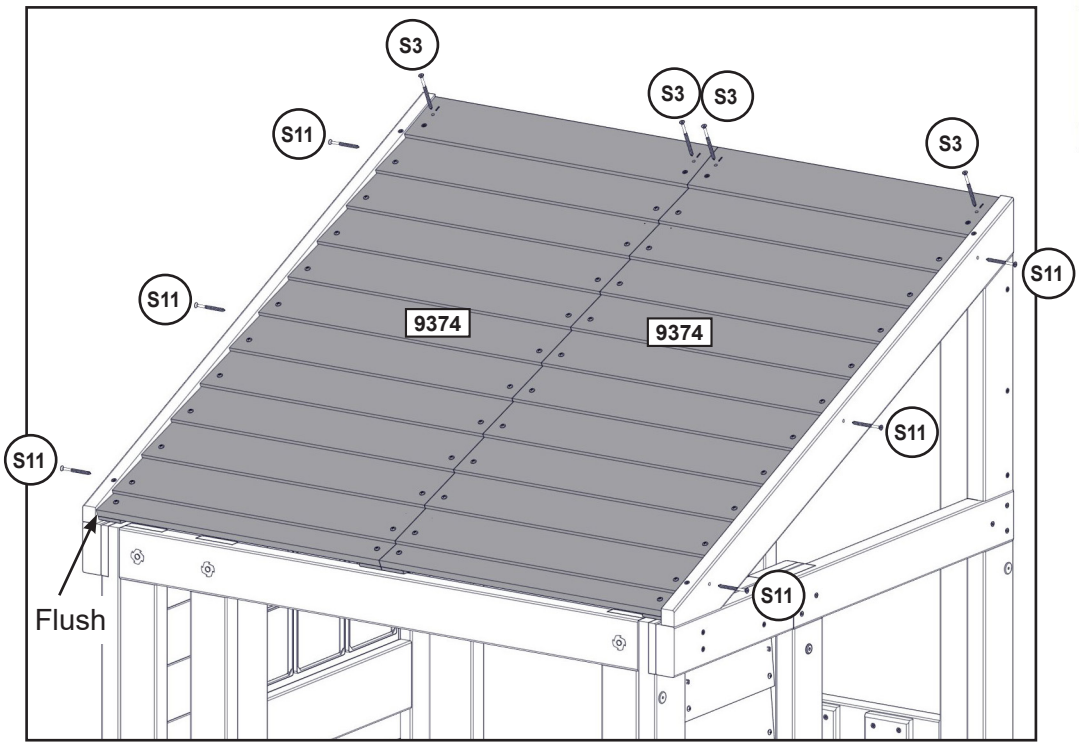

Hardware

4 x (S3) #8 x 63.5mm (#8 x 2-1/2 in)


6 x (S11) #8 x 50.8mm (#8 x 2 in)

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu


108


Note: Structure partly removed for clarity.

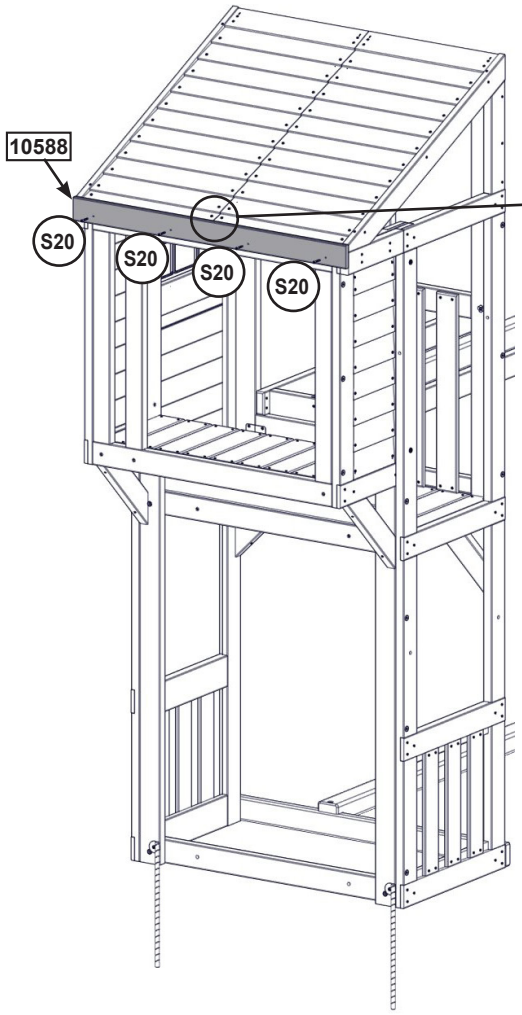


Inside View

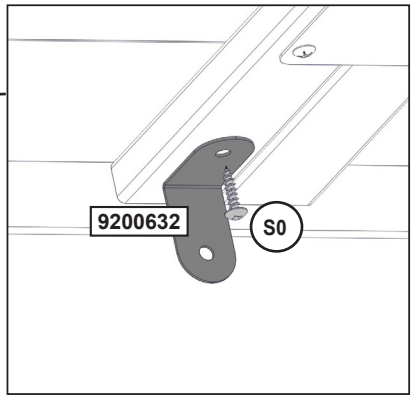

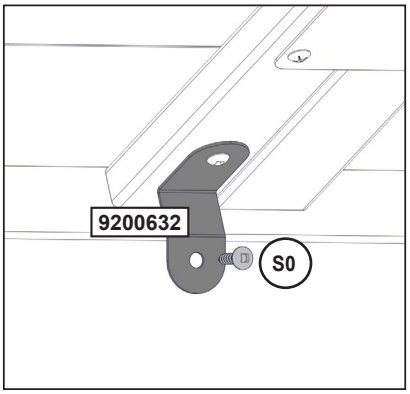

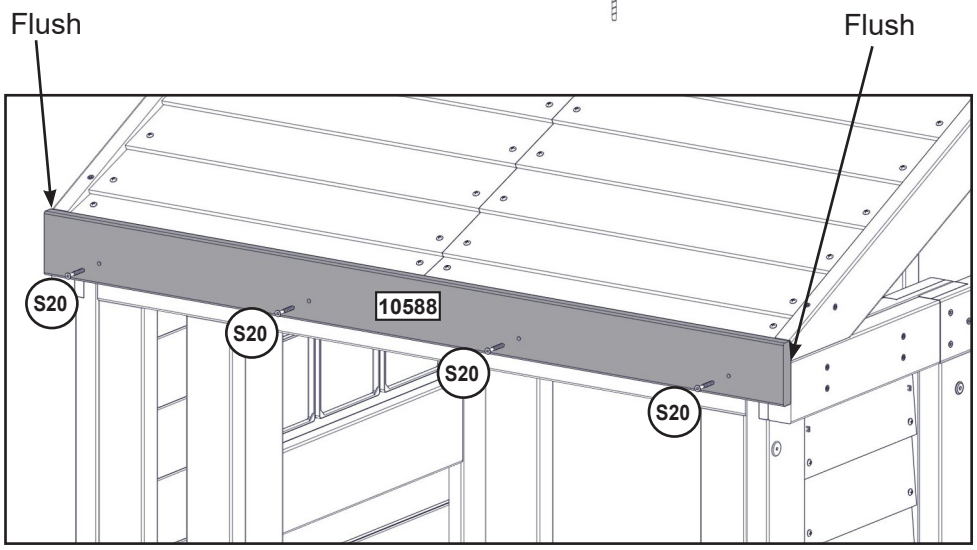

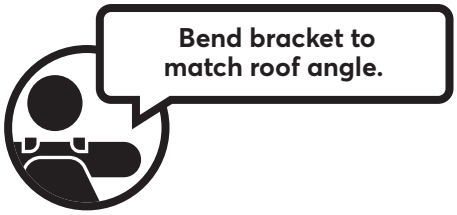

Wood Parts

1 x 10588 15.9 x 76.2 x 1028.7 mm (5/8 x 3 x 40 1/2 in)

Hardware

4 x S20 #8 x 34.9mm (#8 x 1-3/8 in)


2 x S0 #8 x 22.2mm (#8 x 7/8 in)


Other Parts

1 x 9200632

109

Note: Structure partly removed for clarity.

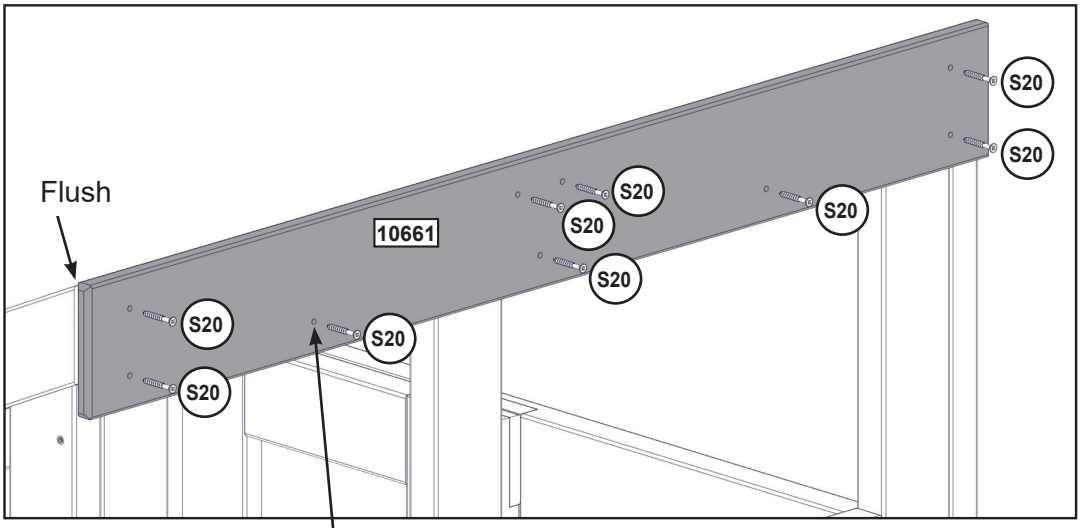

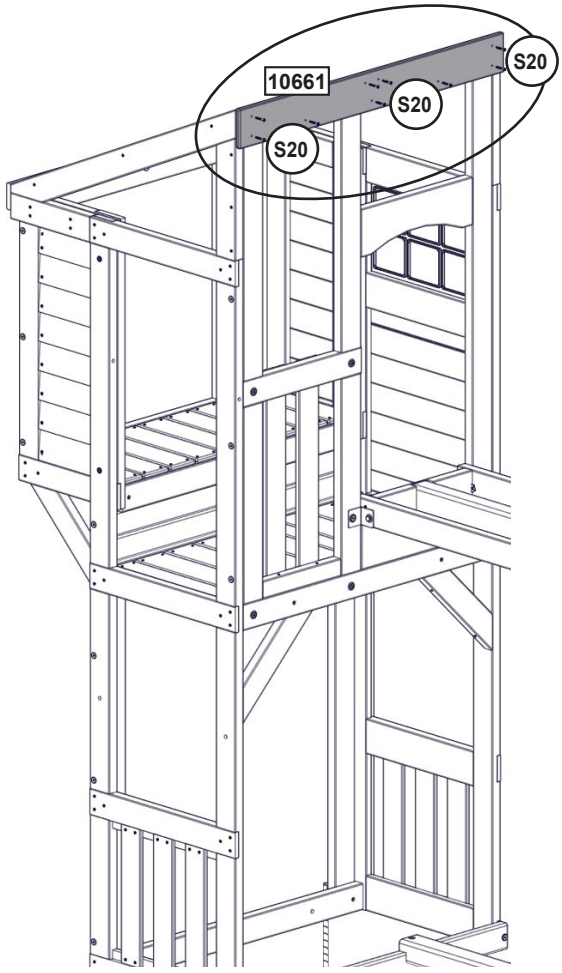


Wood Parts


1 x 10661 15.9 x 114.3 x 1028.7 mm (5/8 x 4 1/2 x 40 1/2 in)

Hardware

9 x S20 #8 x 34.9mm (#8 x 1-3/8 in)

110

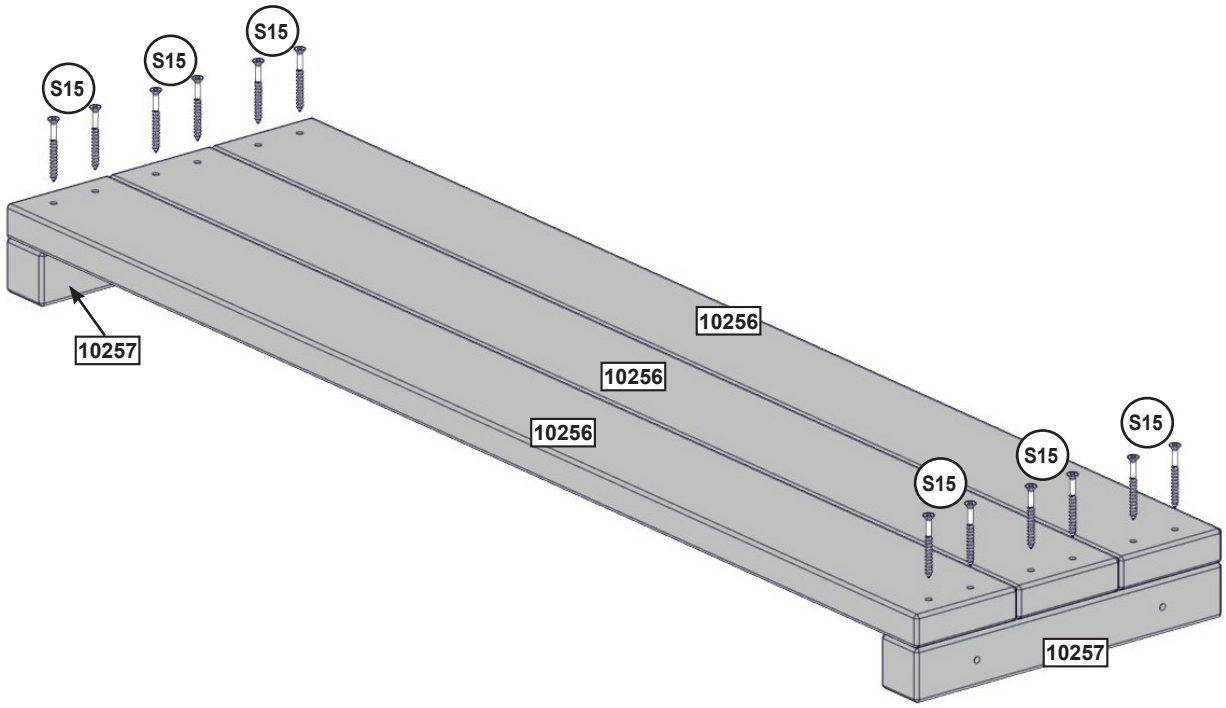

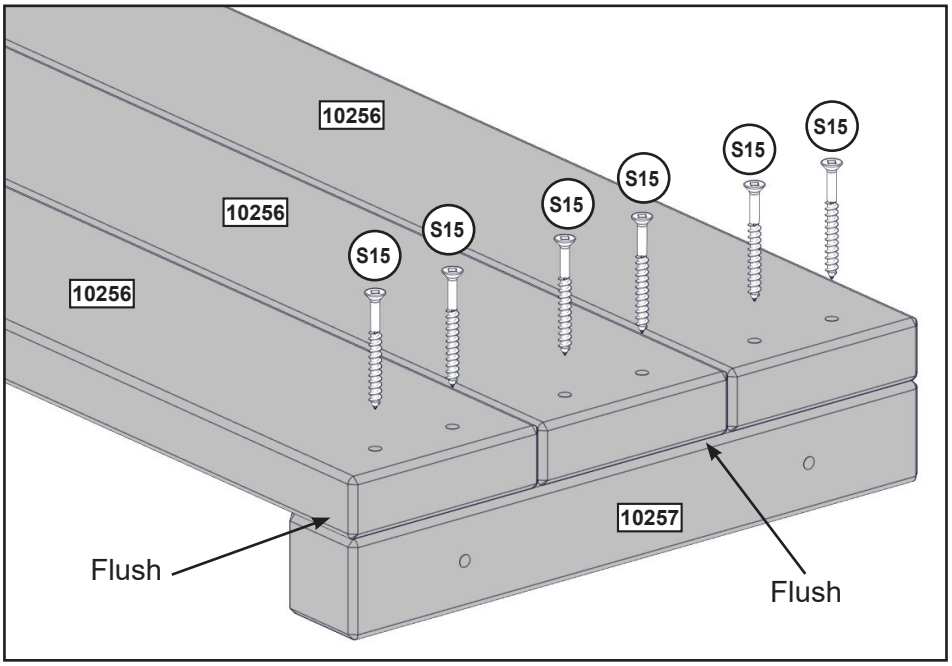

Wood Parts


3 x 10256 23.8 x 85.7 x 963.2 mm (15/16 x 3 3/8 x 37 15/16 in)

2 x 10257 38.1 x 38.1 x 257.1 mm (1 1/2 x 1 1/2 x 10 1/8 in)


Hardware


12 x S15 #8 x 44.5mm (#8 x 1-3/4 in)

111

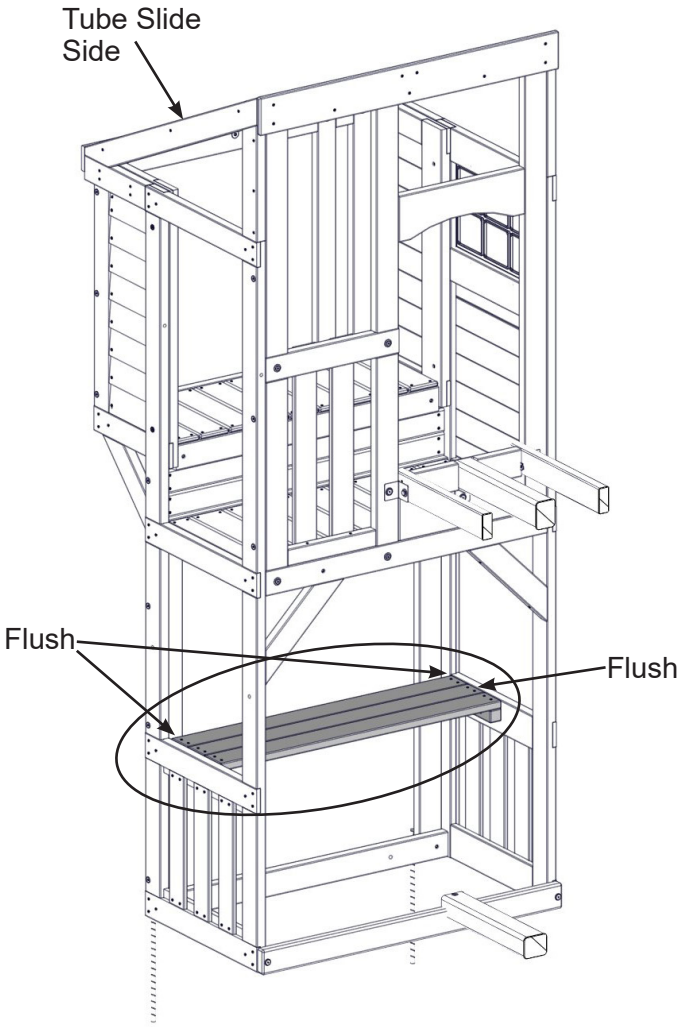

Note: Structure partly removed for clarity.

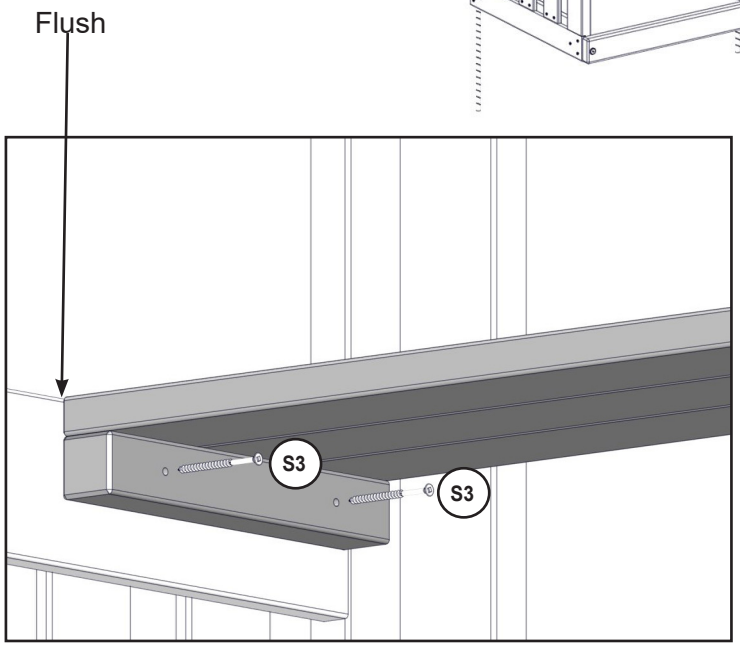

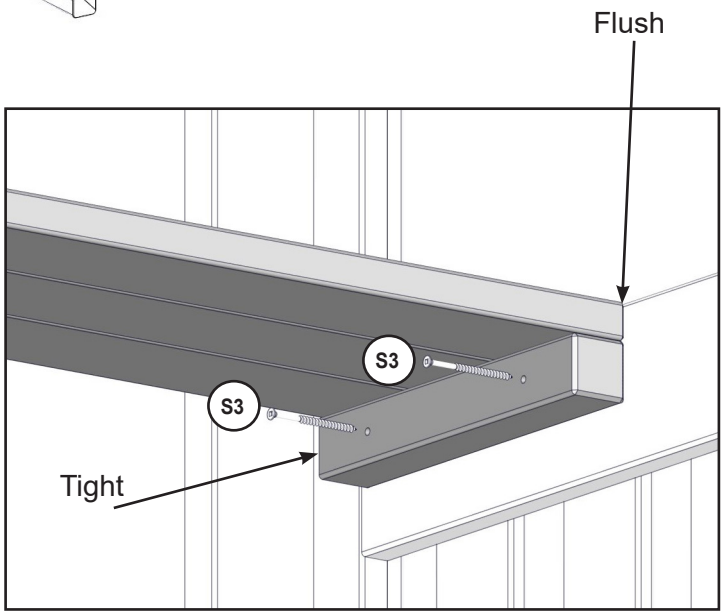


Hardware

4 x (S3) #8 x 64mm (#8 x 2-1/2 in)

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu

112

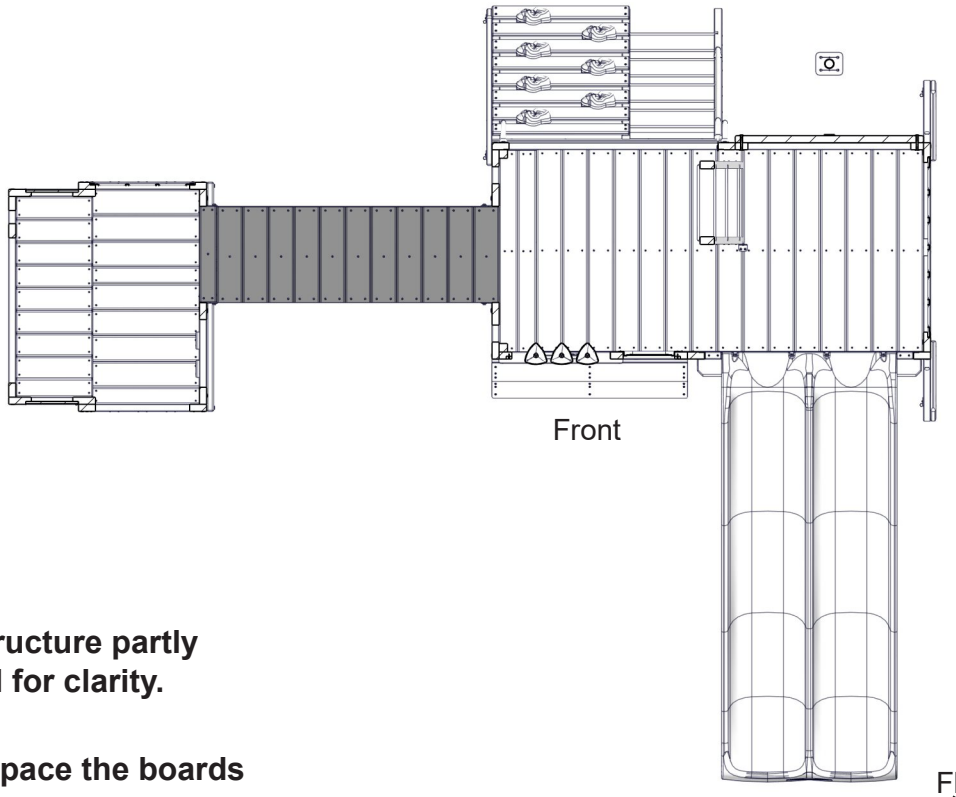

Note: Structure partly removed for clarity.

Evenly space the boards

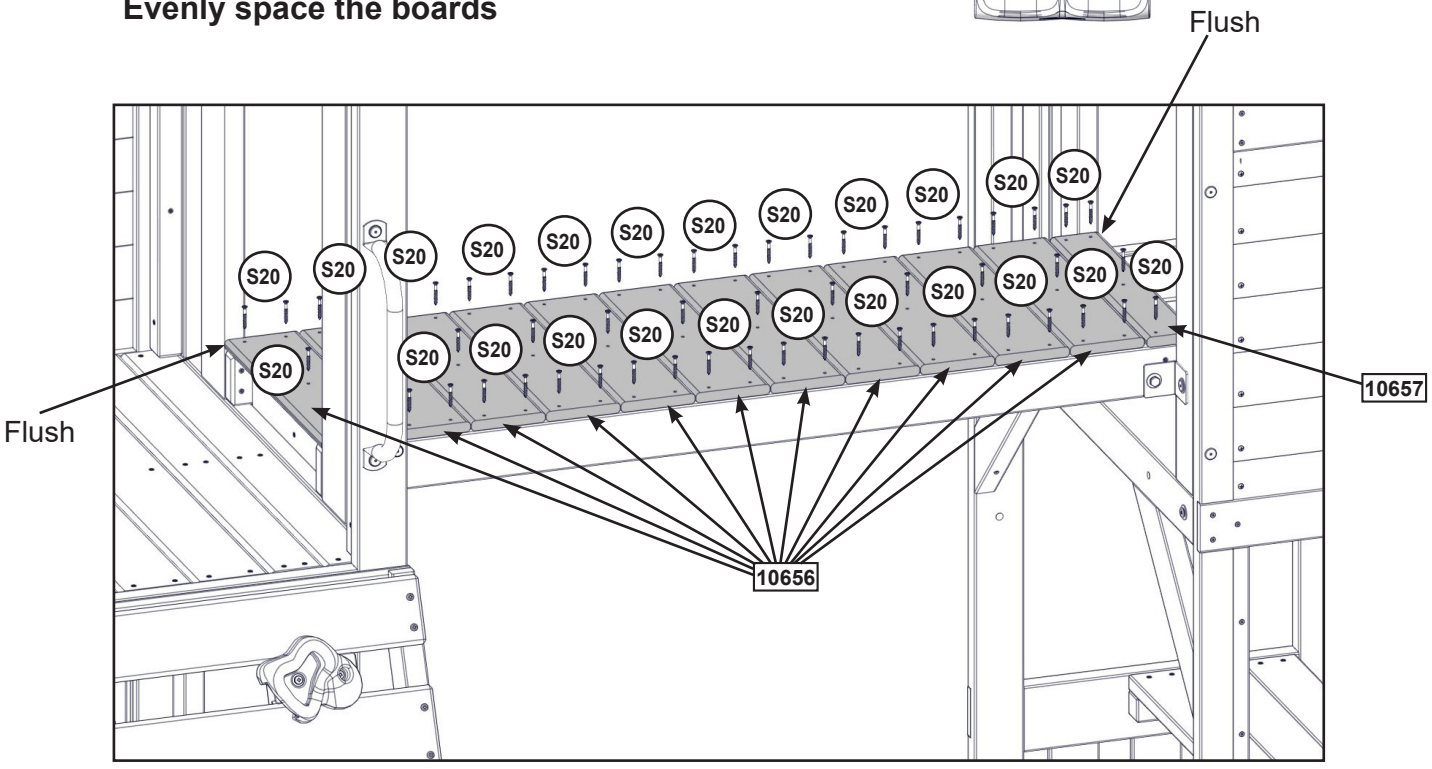

Wood Parts


11 x [10656] 15.9 x 114.3 x 428.6 mm (5/8 x 4 1/2 x 16 7/8 in)
1 x [10657] 15.9 x 76.2 x 428.6 mm (5/8 x 3 x 16 7/8 in)

Hardware

60 x (S20) #8 x 35mm (#8 x 1-3/8 in)

113

Note: Structure partly removed for clarity.

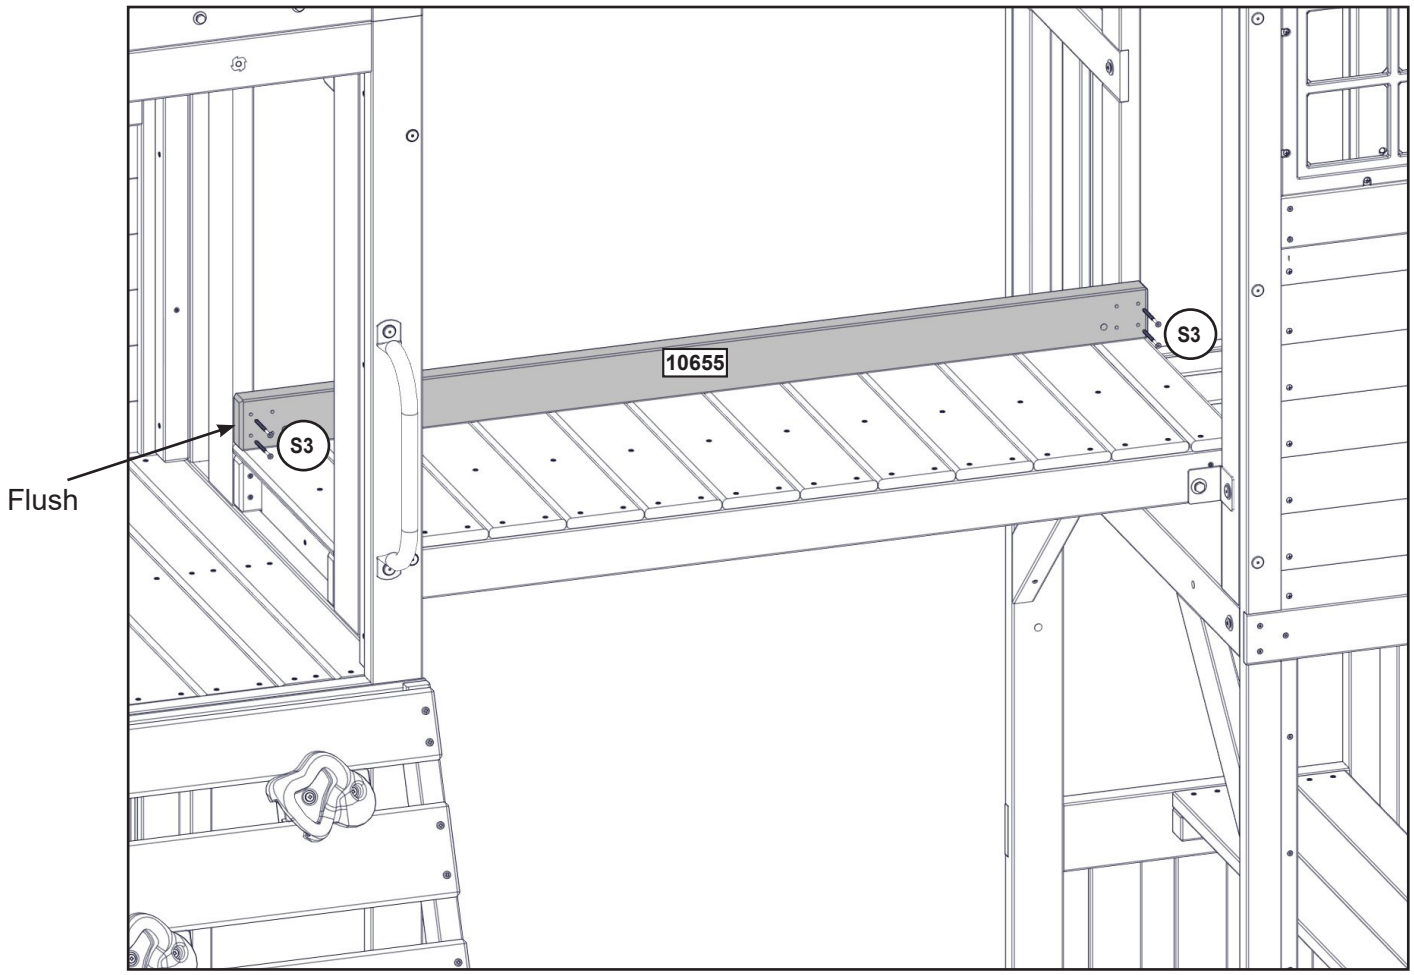

Wood Parts


1 x 10655 31.8 x 76.2 x 1346.2 mm (1 1/4 x 3 x 53 in)

Hardware

4 x S3 #8 x 63.5mm (#8 x 2-1/2 in)

114

Note: Structure partly removed for clarity.

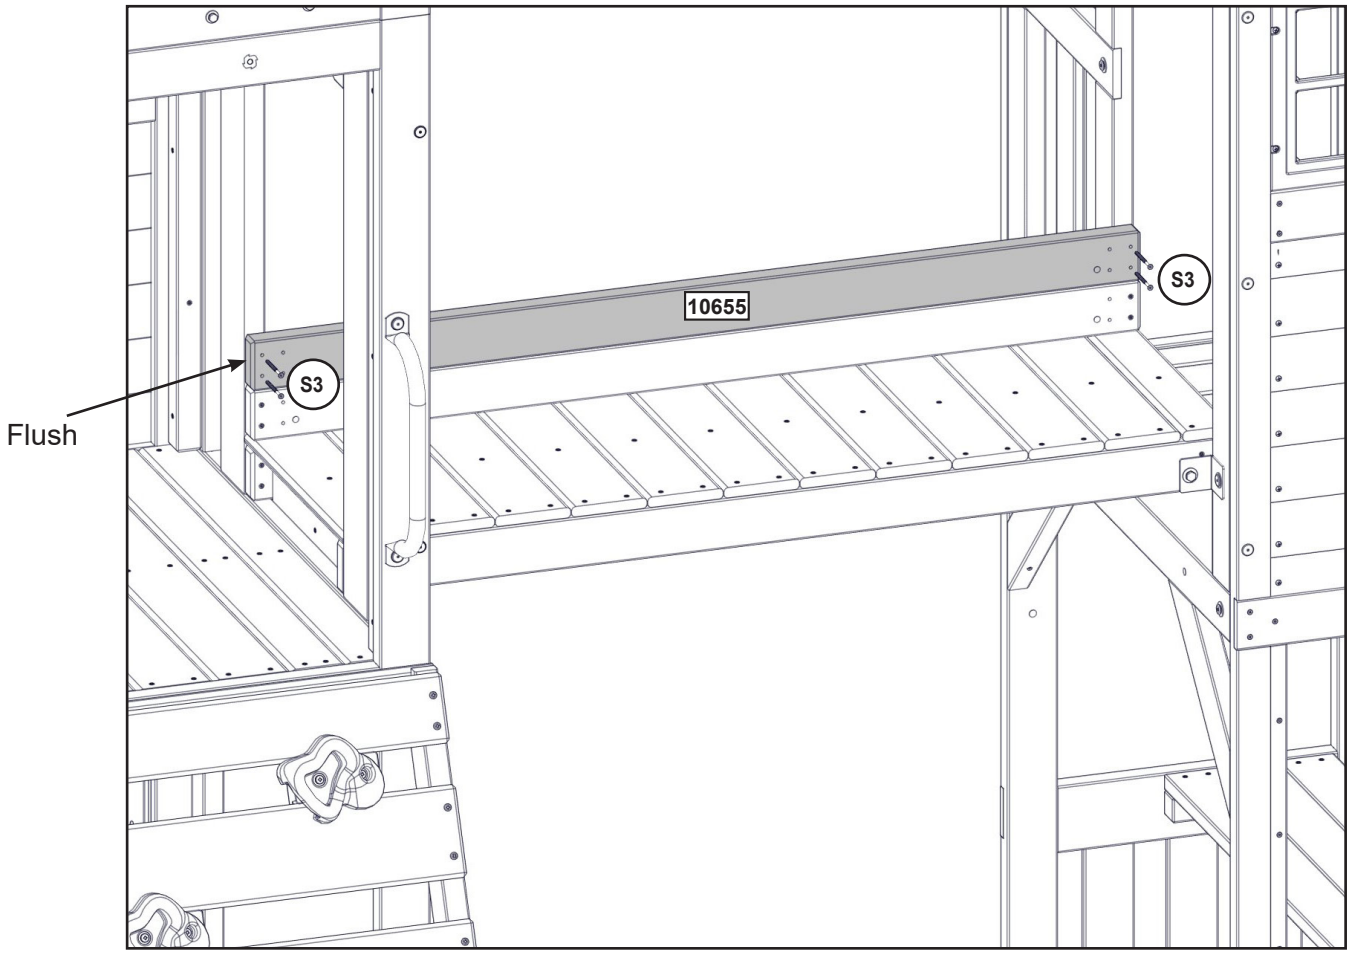


Wood Parts


1 x 10655 31.8 x 76.2 x 1346.2 mm (1 1/4 x 3 x 53 in)

Hardware

4 x S3 #8 x 63.5mm (#8 x 2-1/2 in)

115

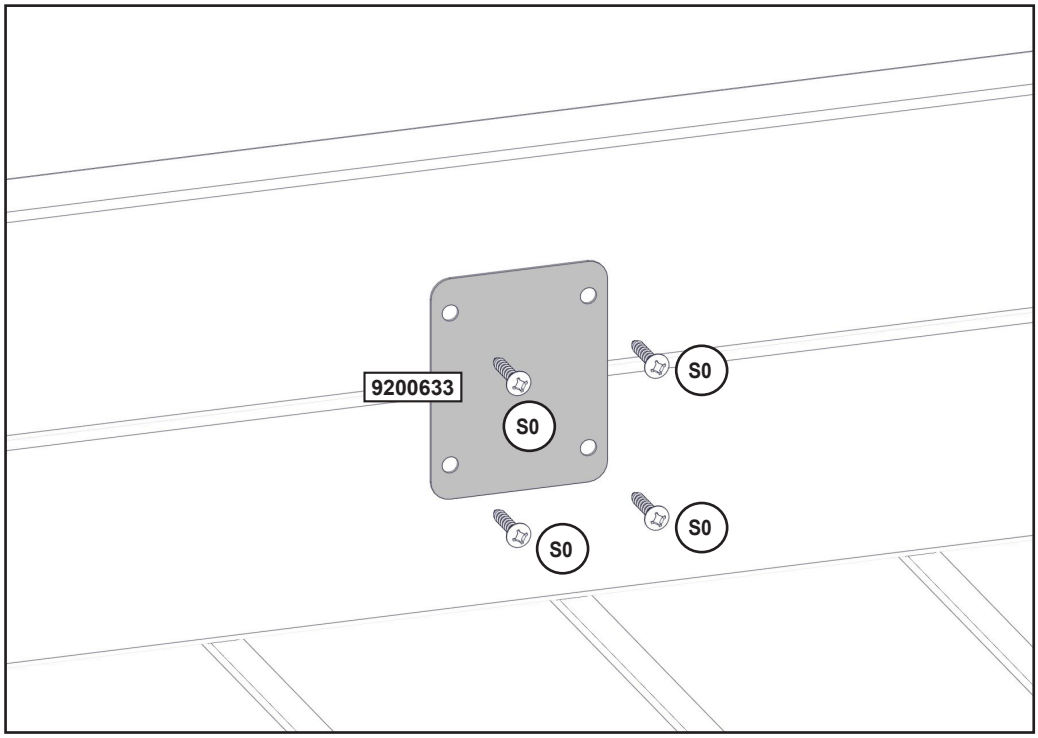

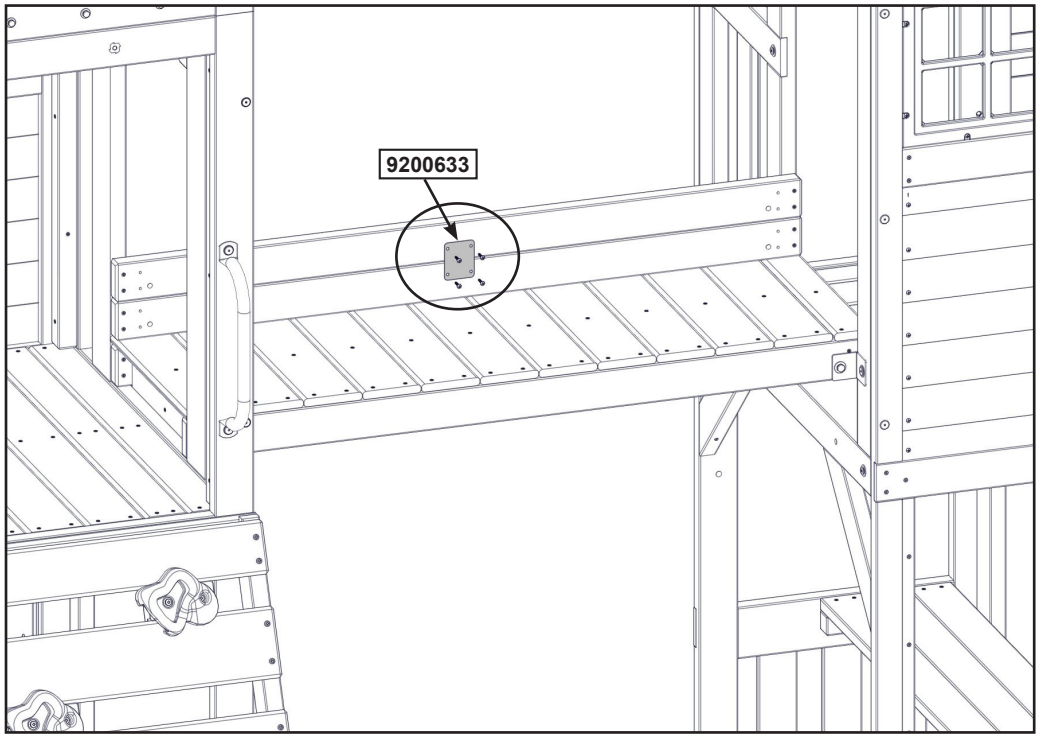

Hardware

4 x S0 #8 x 22.2mm (#8 x 7/8 in)

Other Parts


1 x 9200633

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

116

Note: Structure partly removed for clarity.

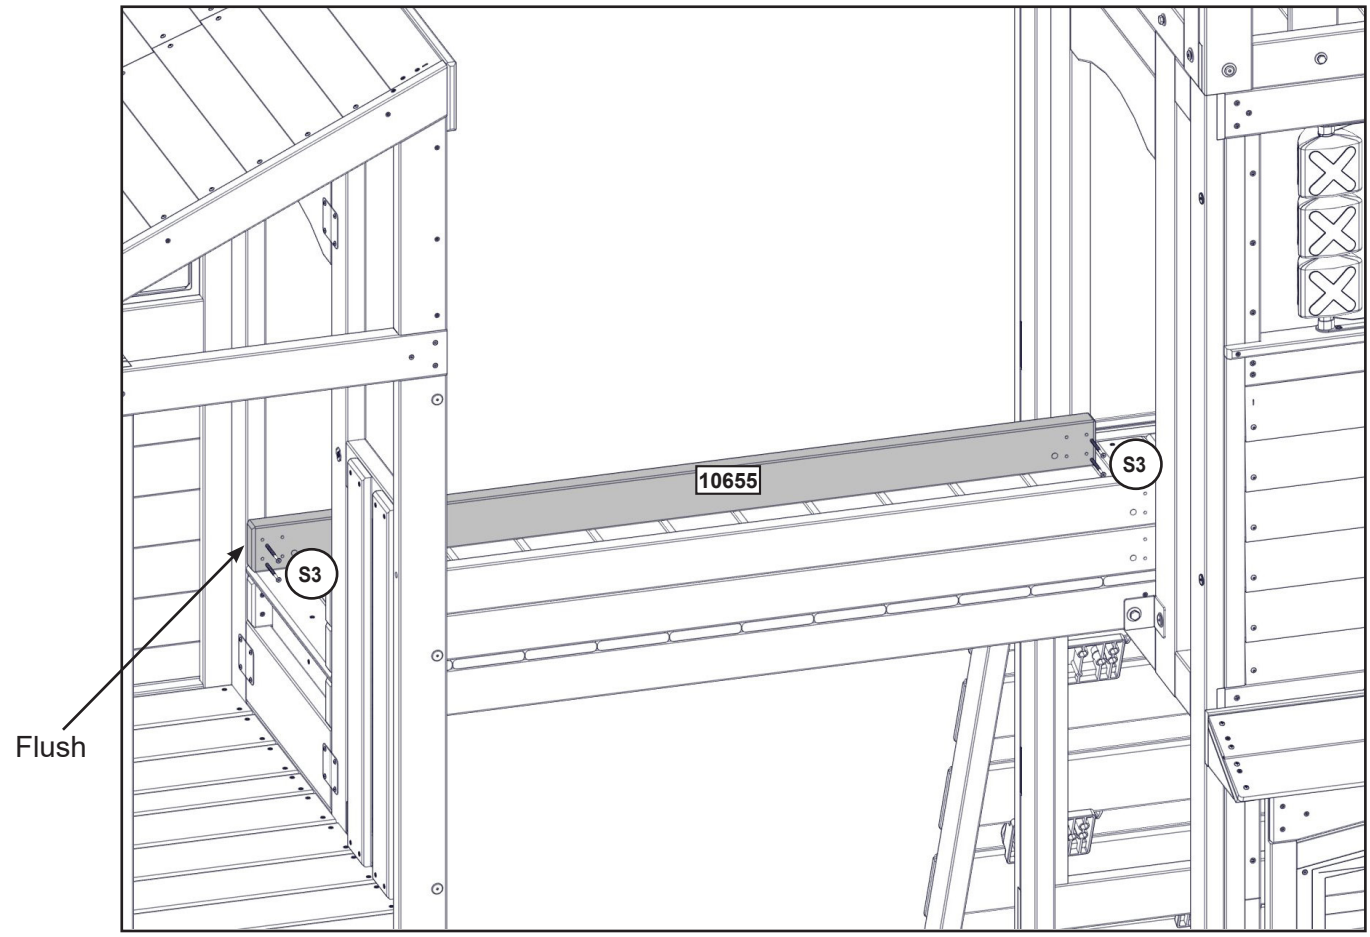

Wood Parts


1 x 10655 31.8 x 76.2 x 1346.2 mm (1 1/4 x 3 x 53 in)

Hardware

4 x S3 #8 x 63.5mm (#8 x 2-1/2 in)

117

Note: Structure partly removed for clarity.

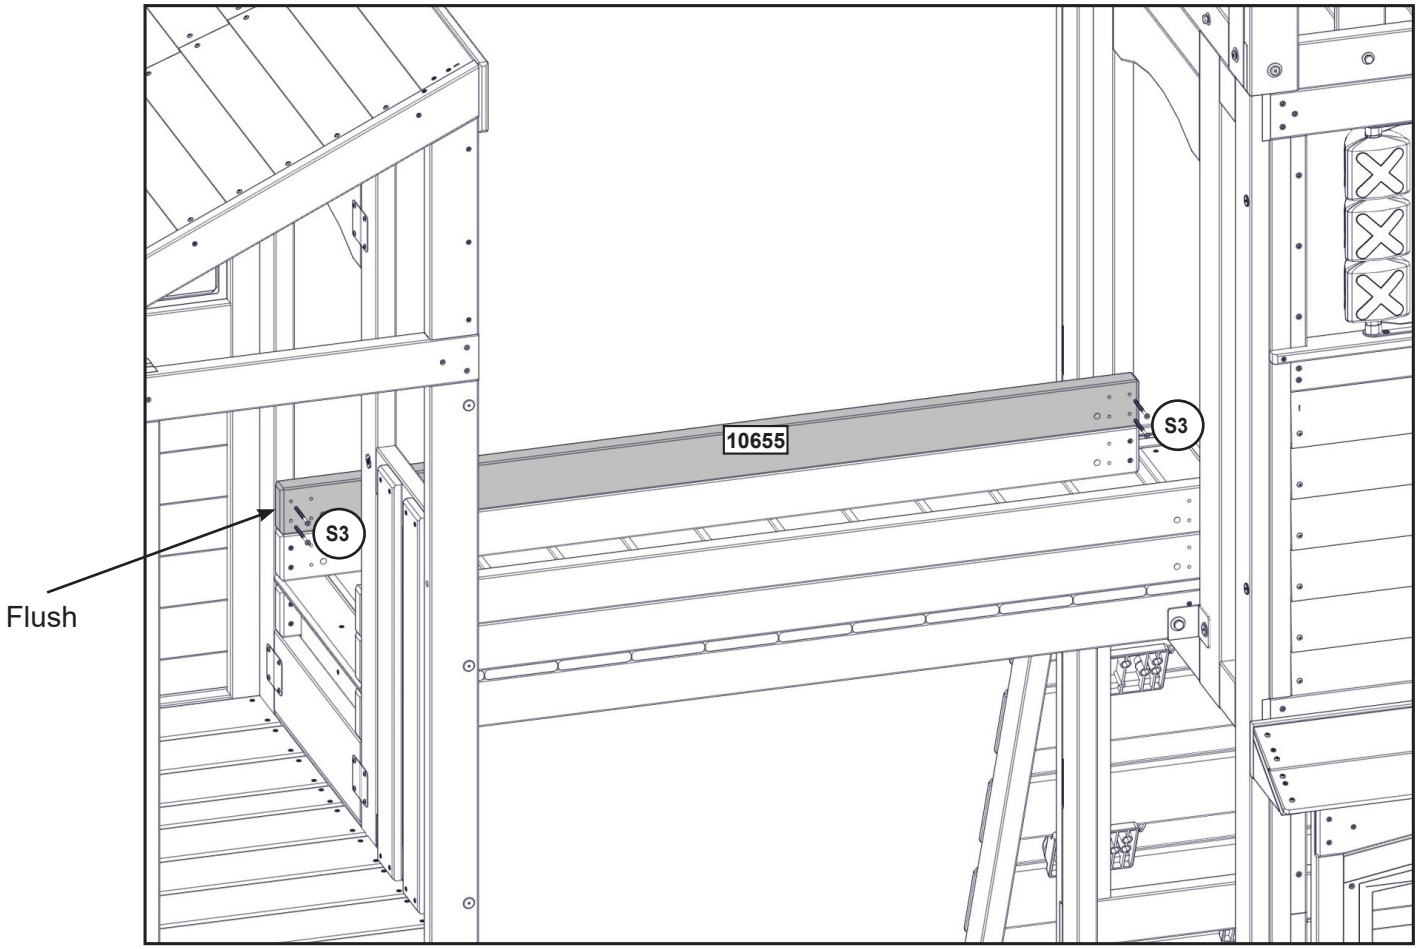

Wood Parts

1 x 10655 31.8 x 76.2 x 1346.2 mm (1 1/4 x 3 x 53 in)


Hardware


4 x S3 #8 x 63.5mm (#8 x 2-1/2 in)

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

118

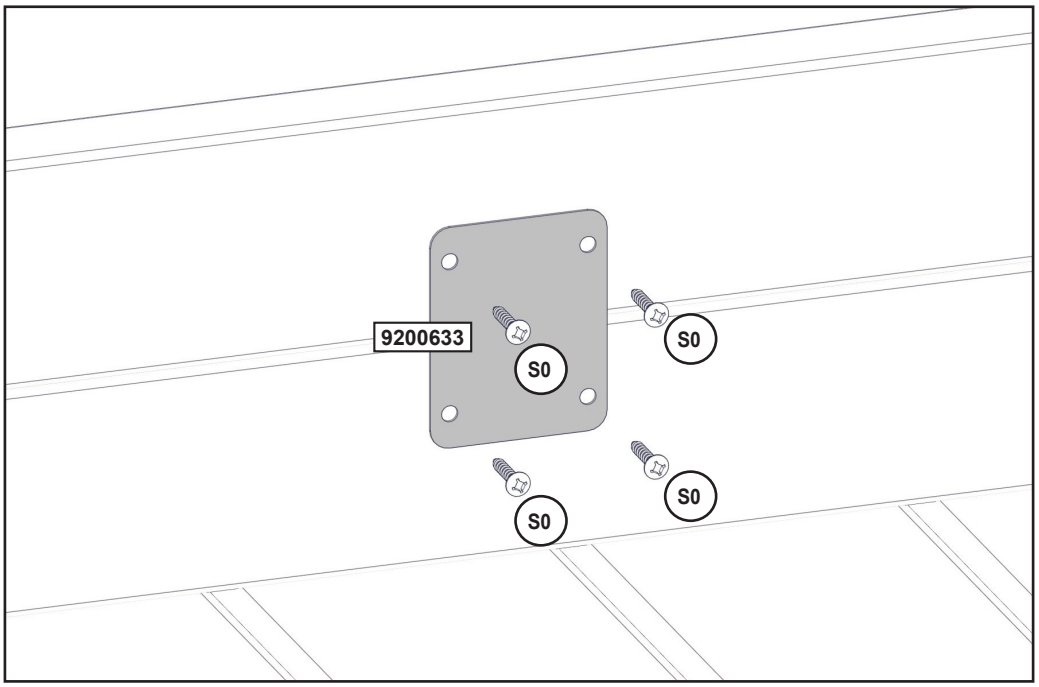

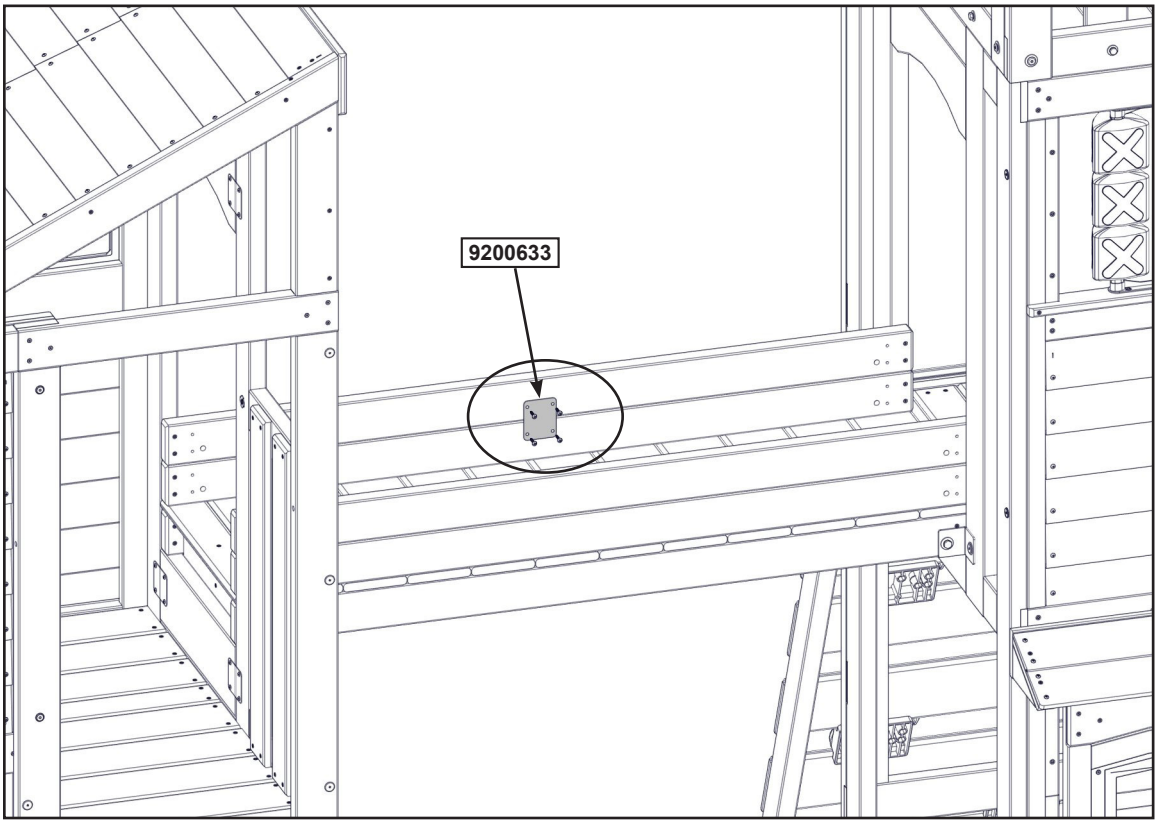

Hardware

4 x S0 #8 x 22.2mm (#8 x 7/8 in)


Other Parts

1 x 9200633


119

Outside View

Repeat this step to create two Tunnel Sides

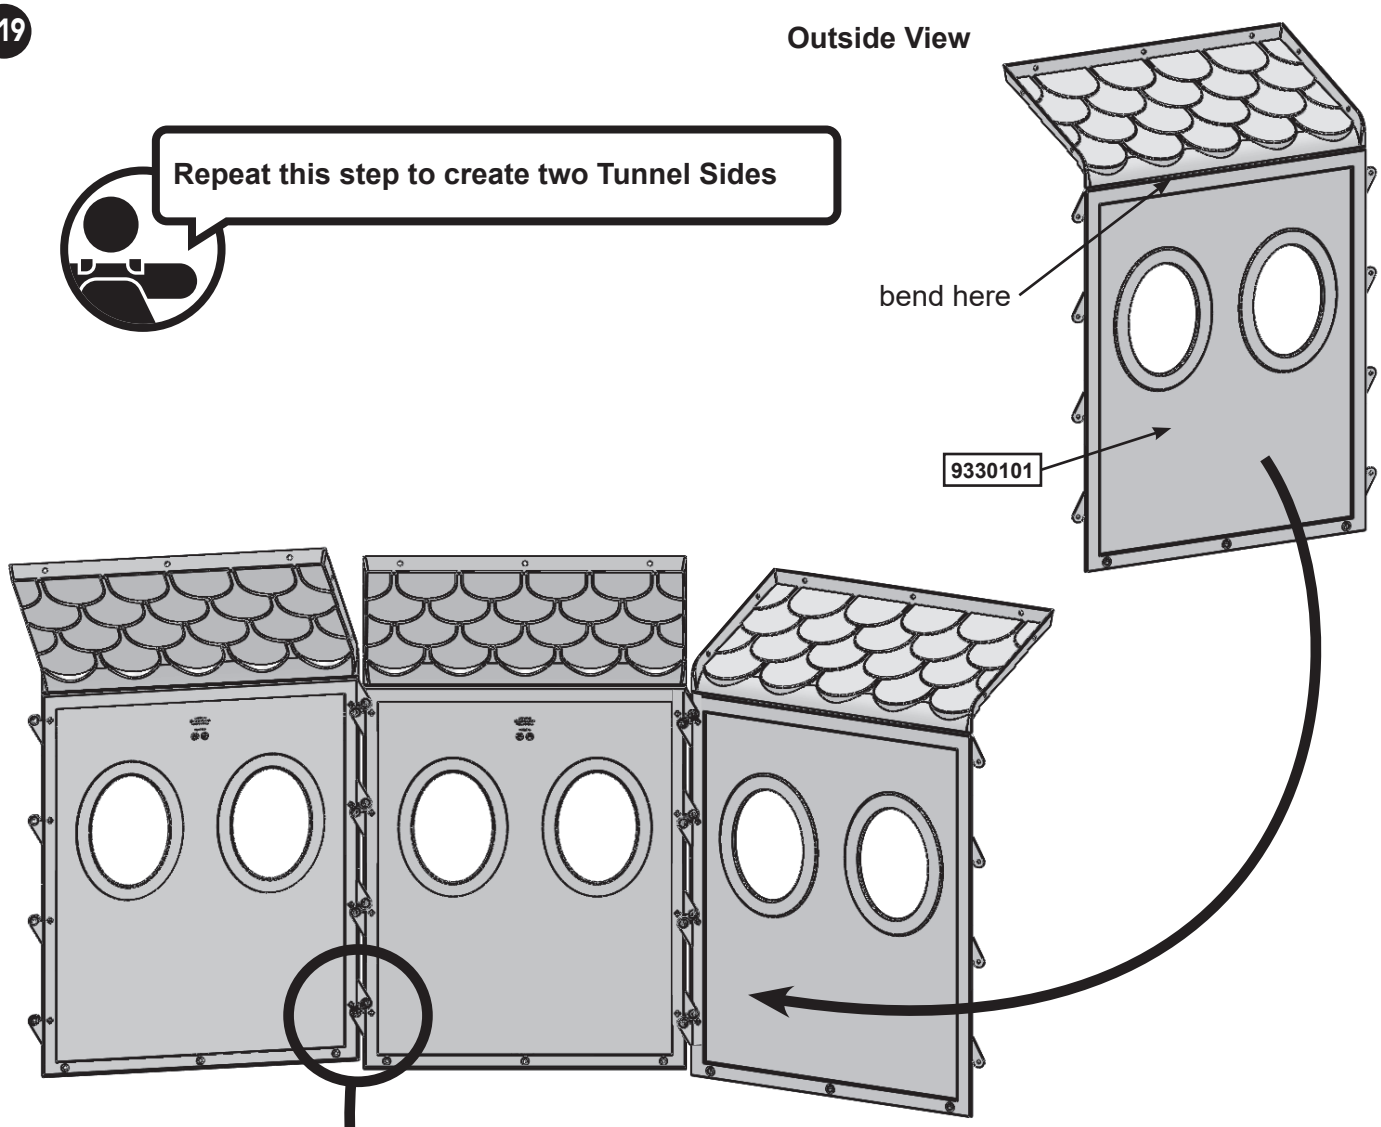


Inside View

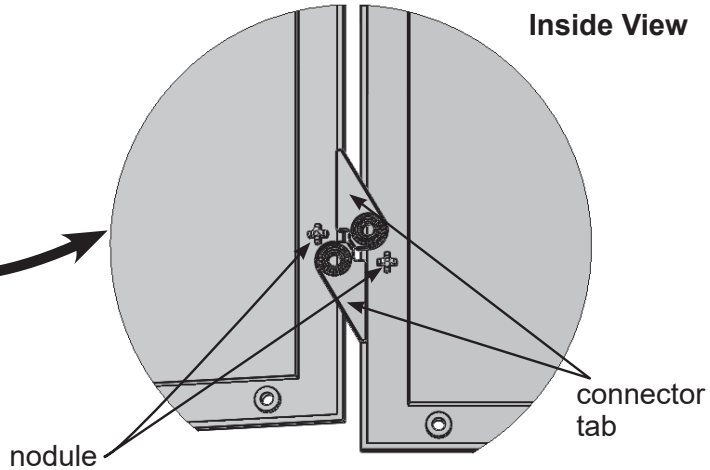

Other Parts

6 x 9330101


120

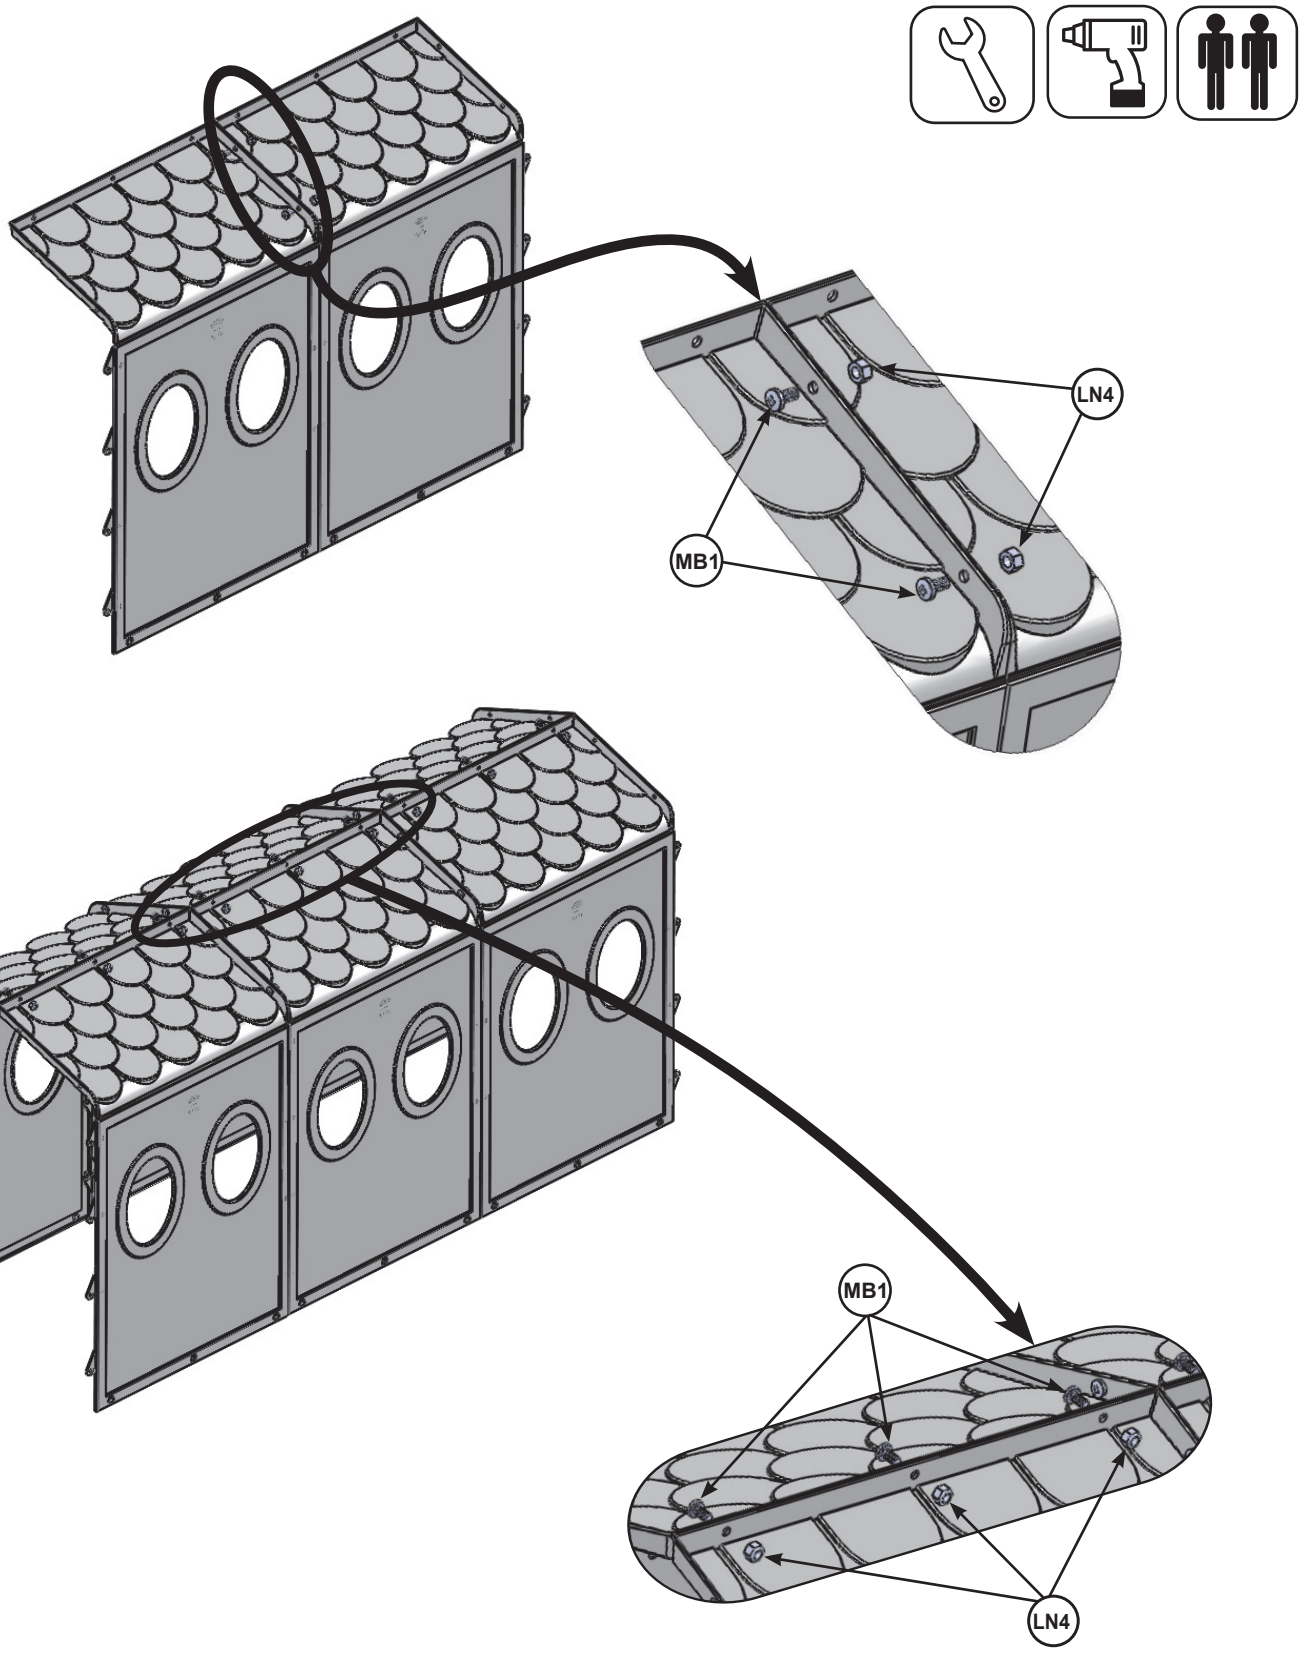


Hardware

17 x (MB1) #12 x 1/2 in (12.7mm) (LN4)

121

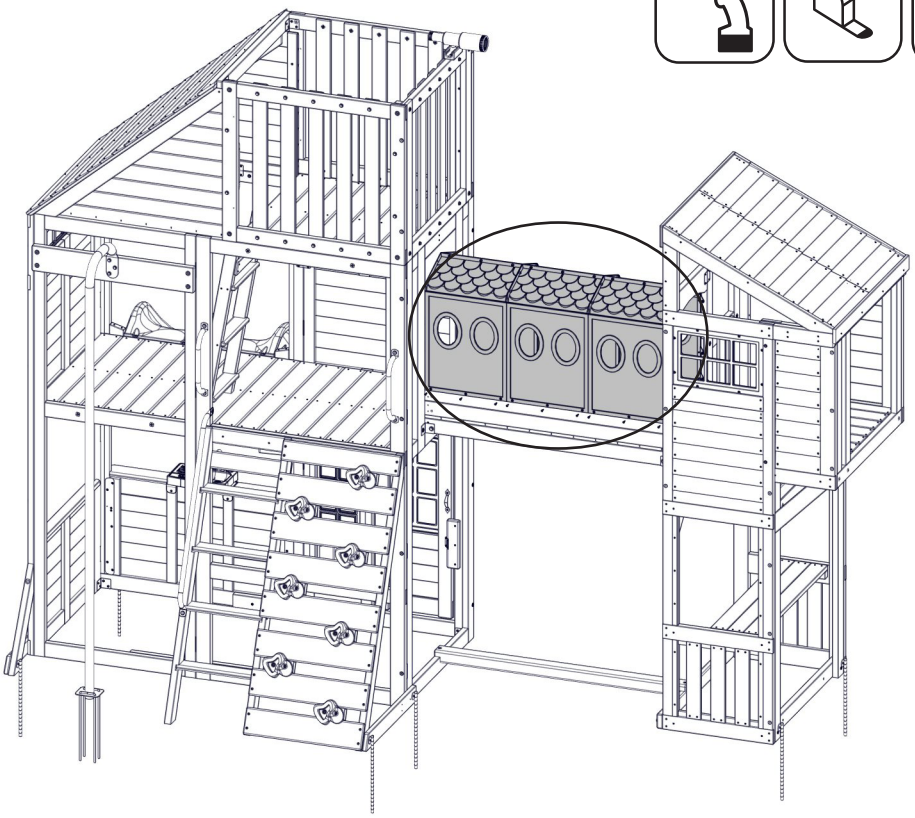

Repeat this step on the front side

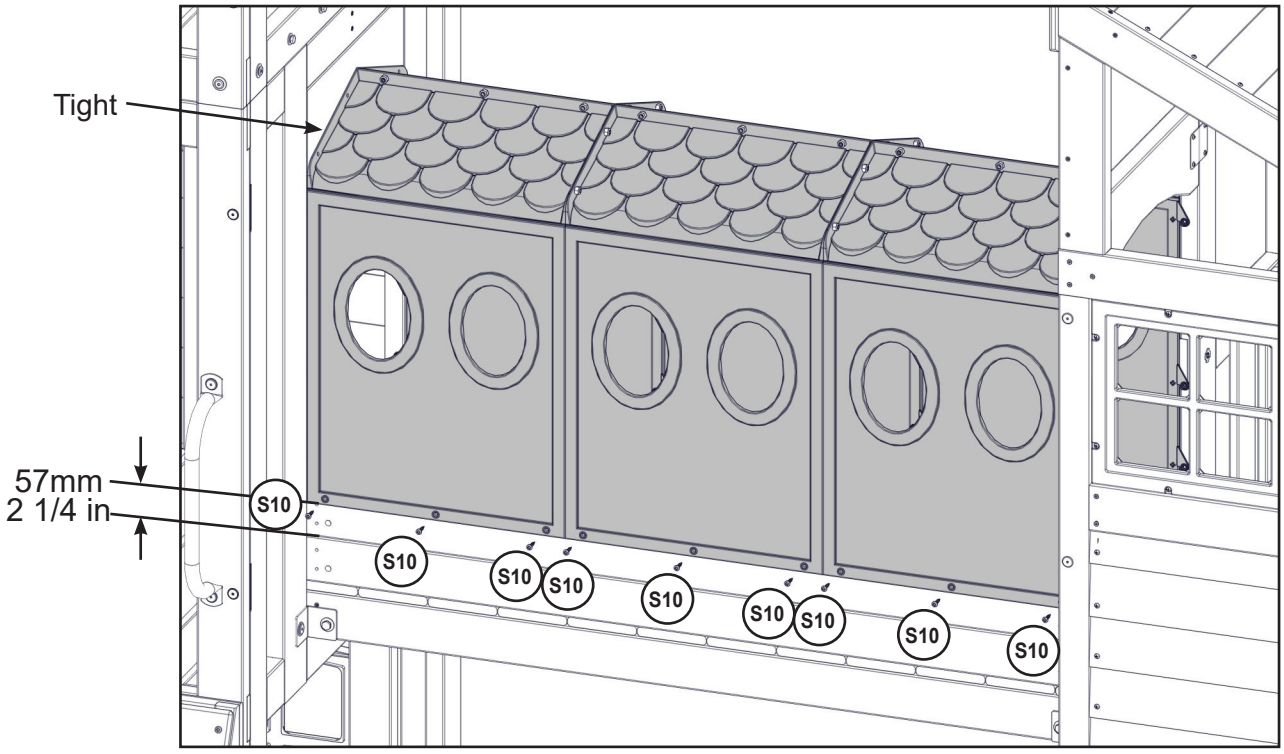

Hardware


18 x (S10) #8 x 25.4 mm (#8 x 1 in)


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

122

Note: Structure partly removed for clarity.

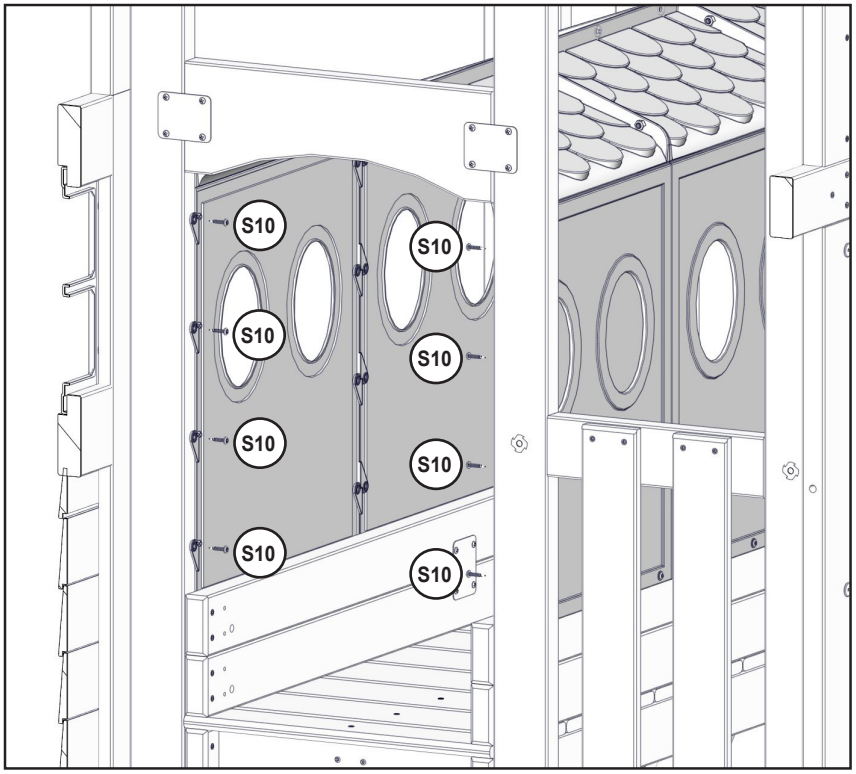


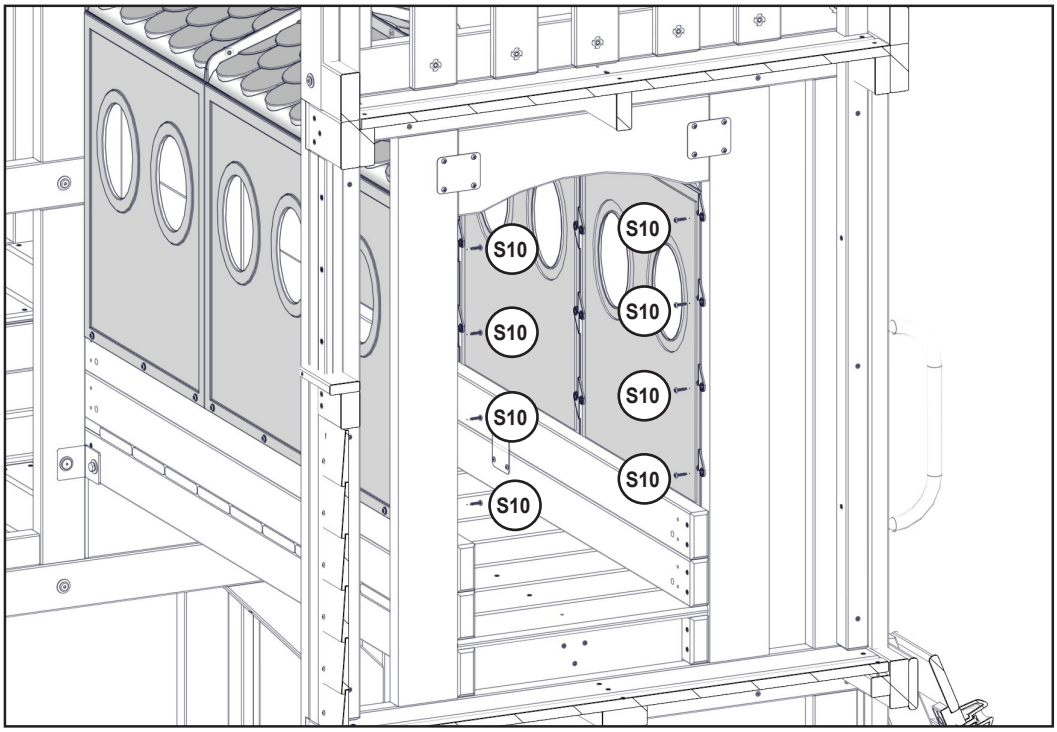


Hardware

16 x (S10) #8 x 25.4 mm (#8 x 1 in)

123

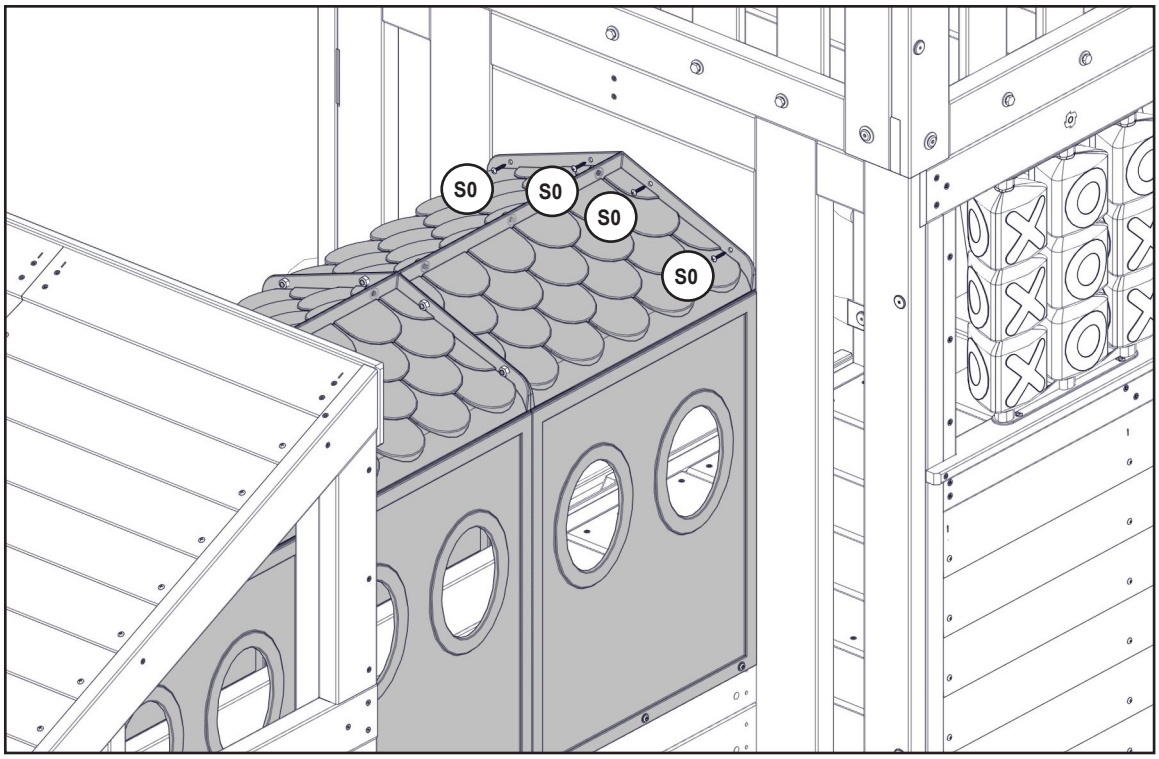

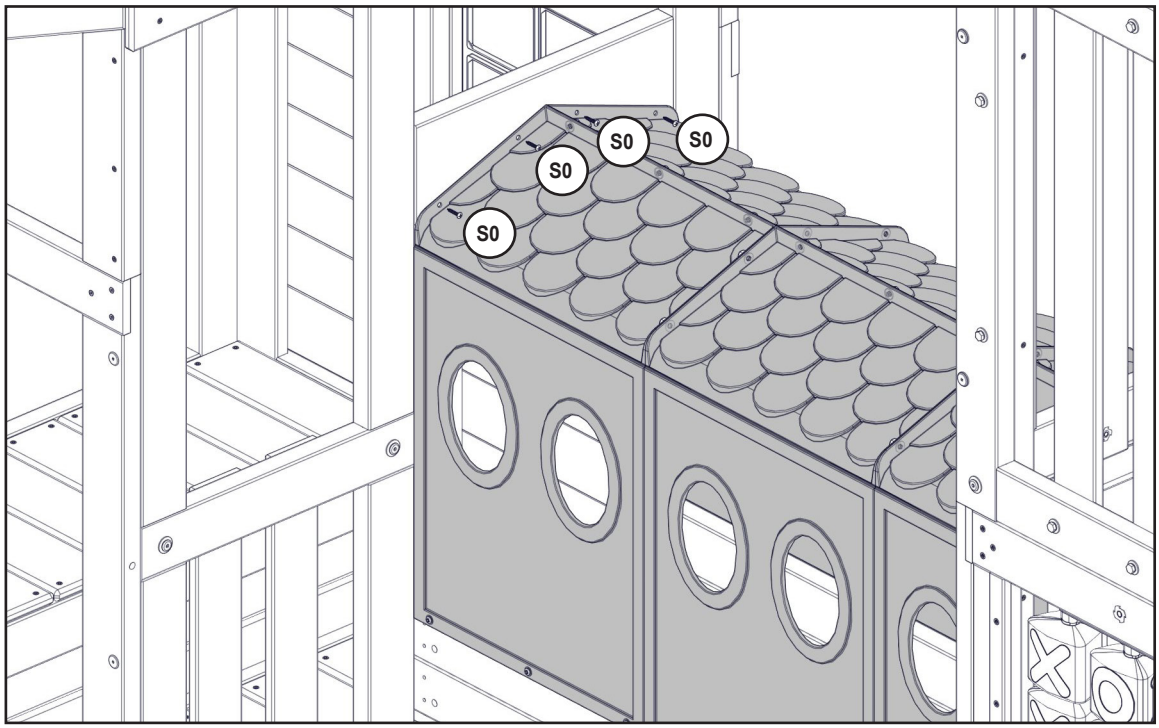


Hardware

8 x (S0) **#8 x 22.2mm (#8 x 7/8 in)**

124

Complete this step twice

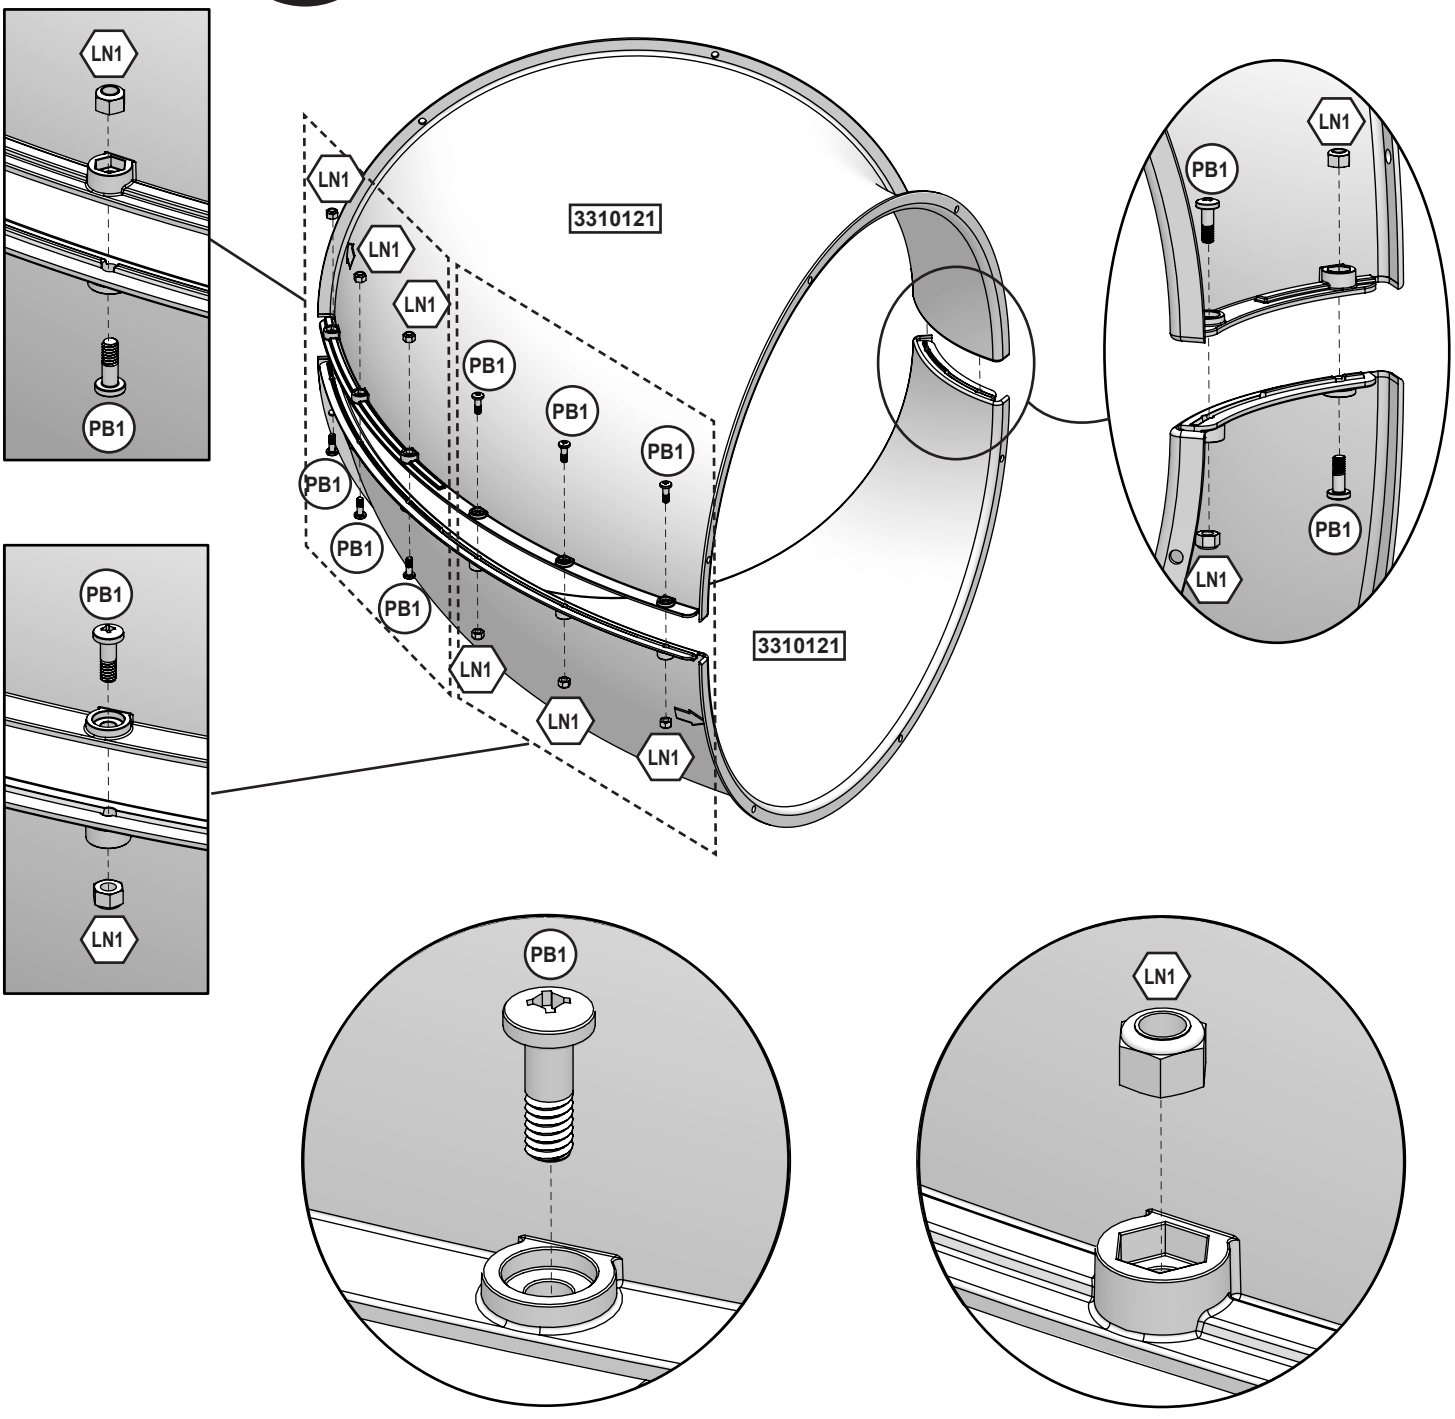


Hardware


32 x (PB1) 6.3mm x 19 mm (1/4 x 3/4 in) (LN1)


Other Parts

8 x 3310121

125

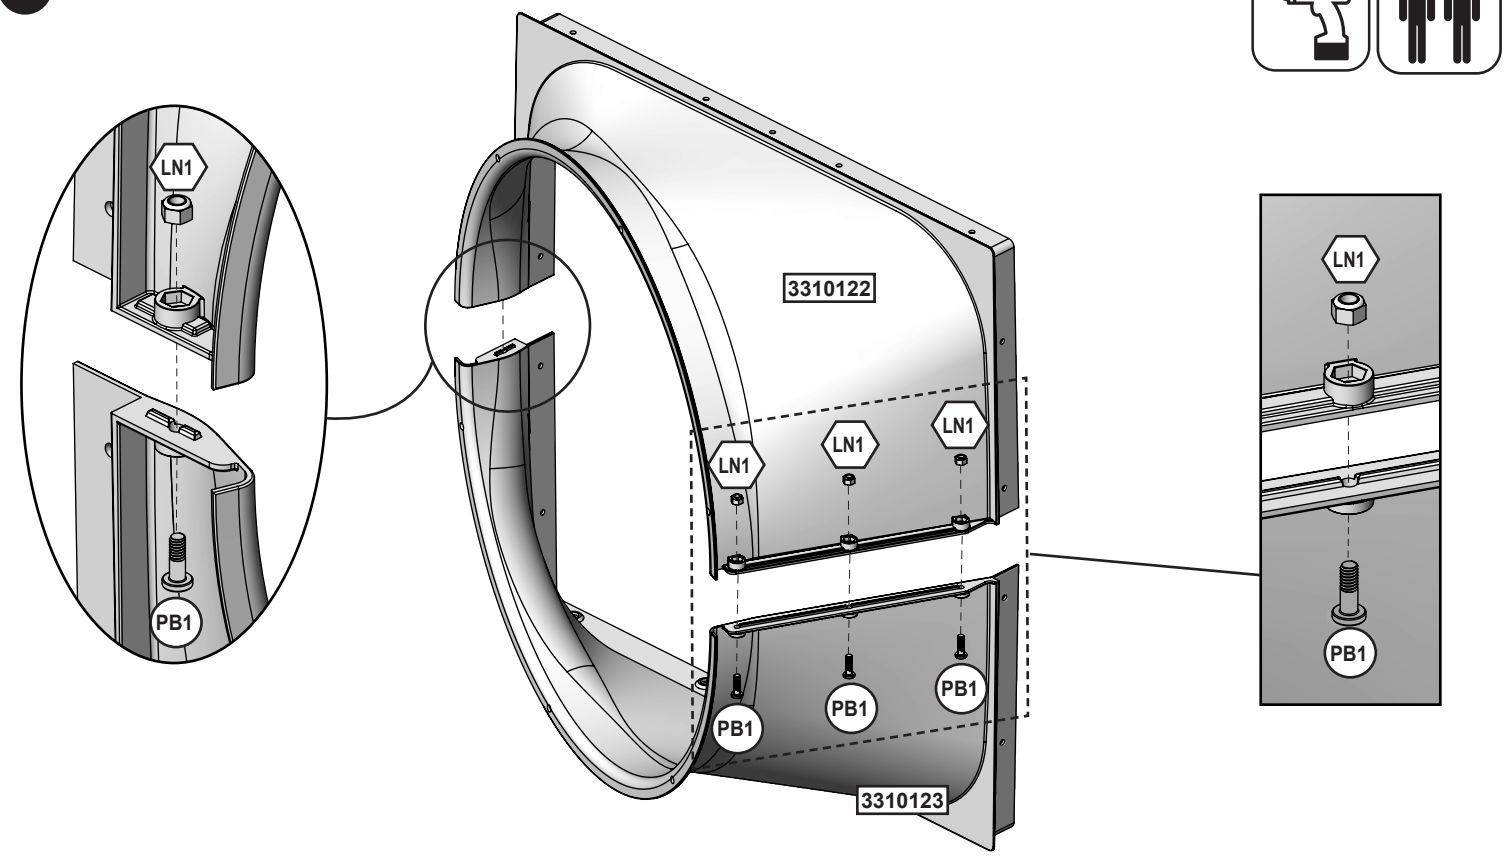

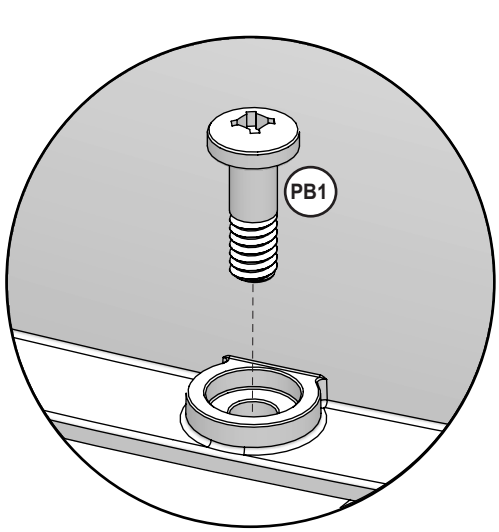

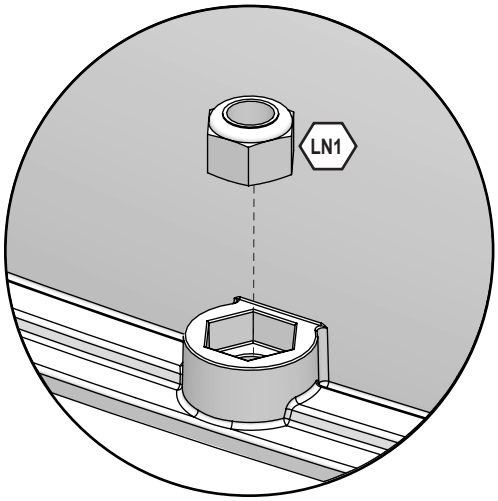

Hardware

4 x (PB1) 6.3mm x 19 mm (1/4 x 3/4 in) (LN1)

Other Parts


1 x 3310122

1 x 3310123

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

126

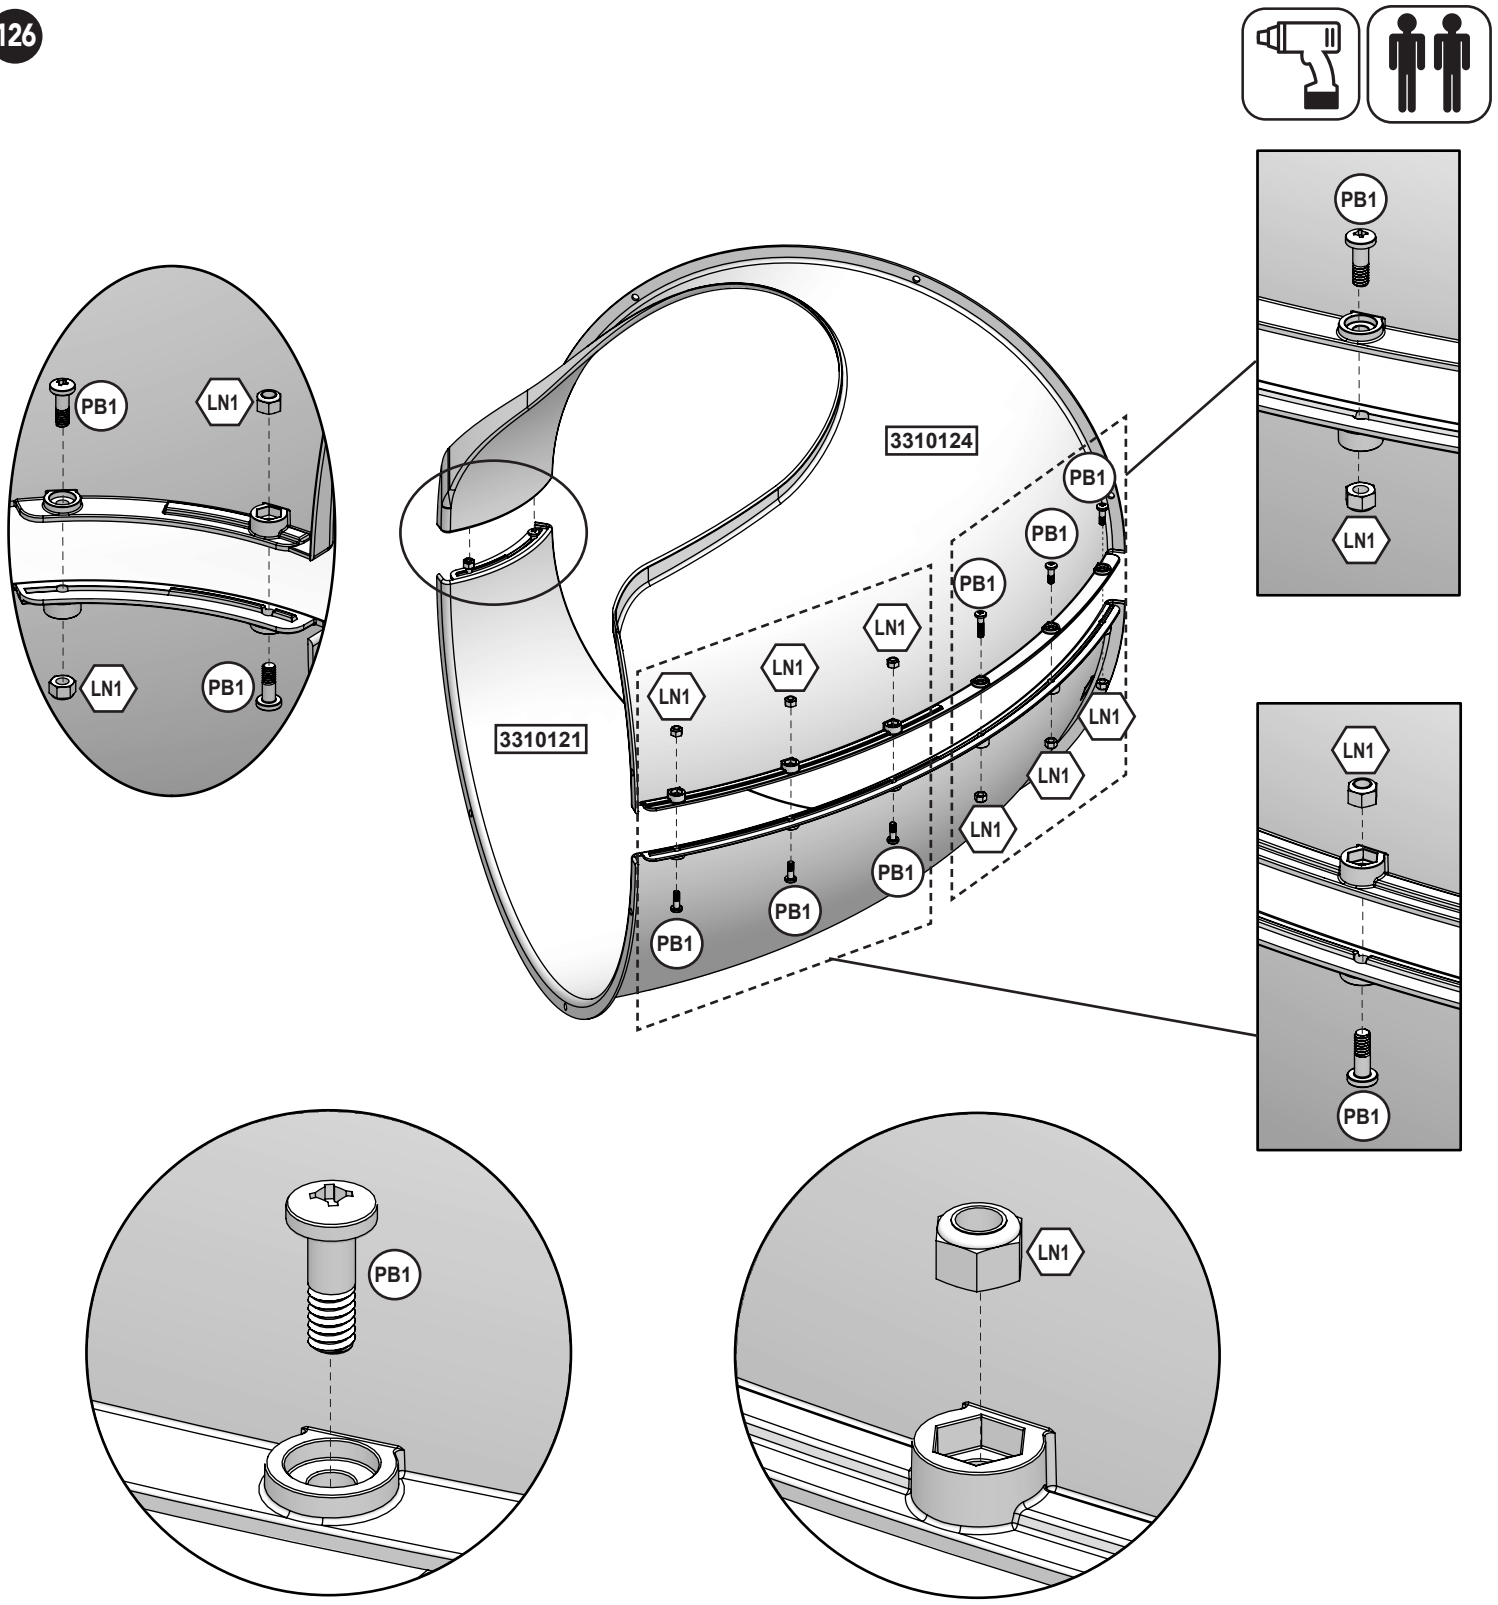

Hardware


8 x (PB1) 6.3mm x 19 mm (1/4 x 3/4 in) (LN1)

Other Parts

1 x 3310124

1 x 3310121

127

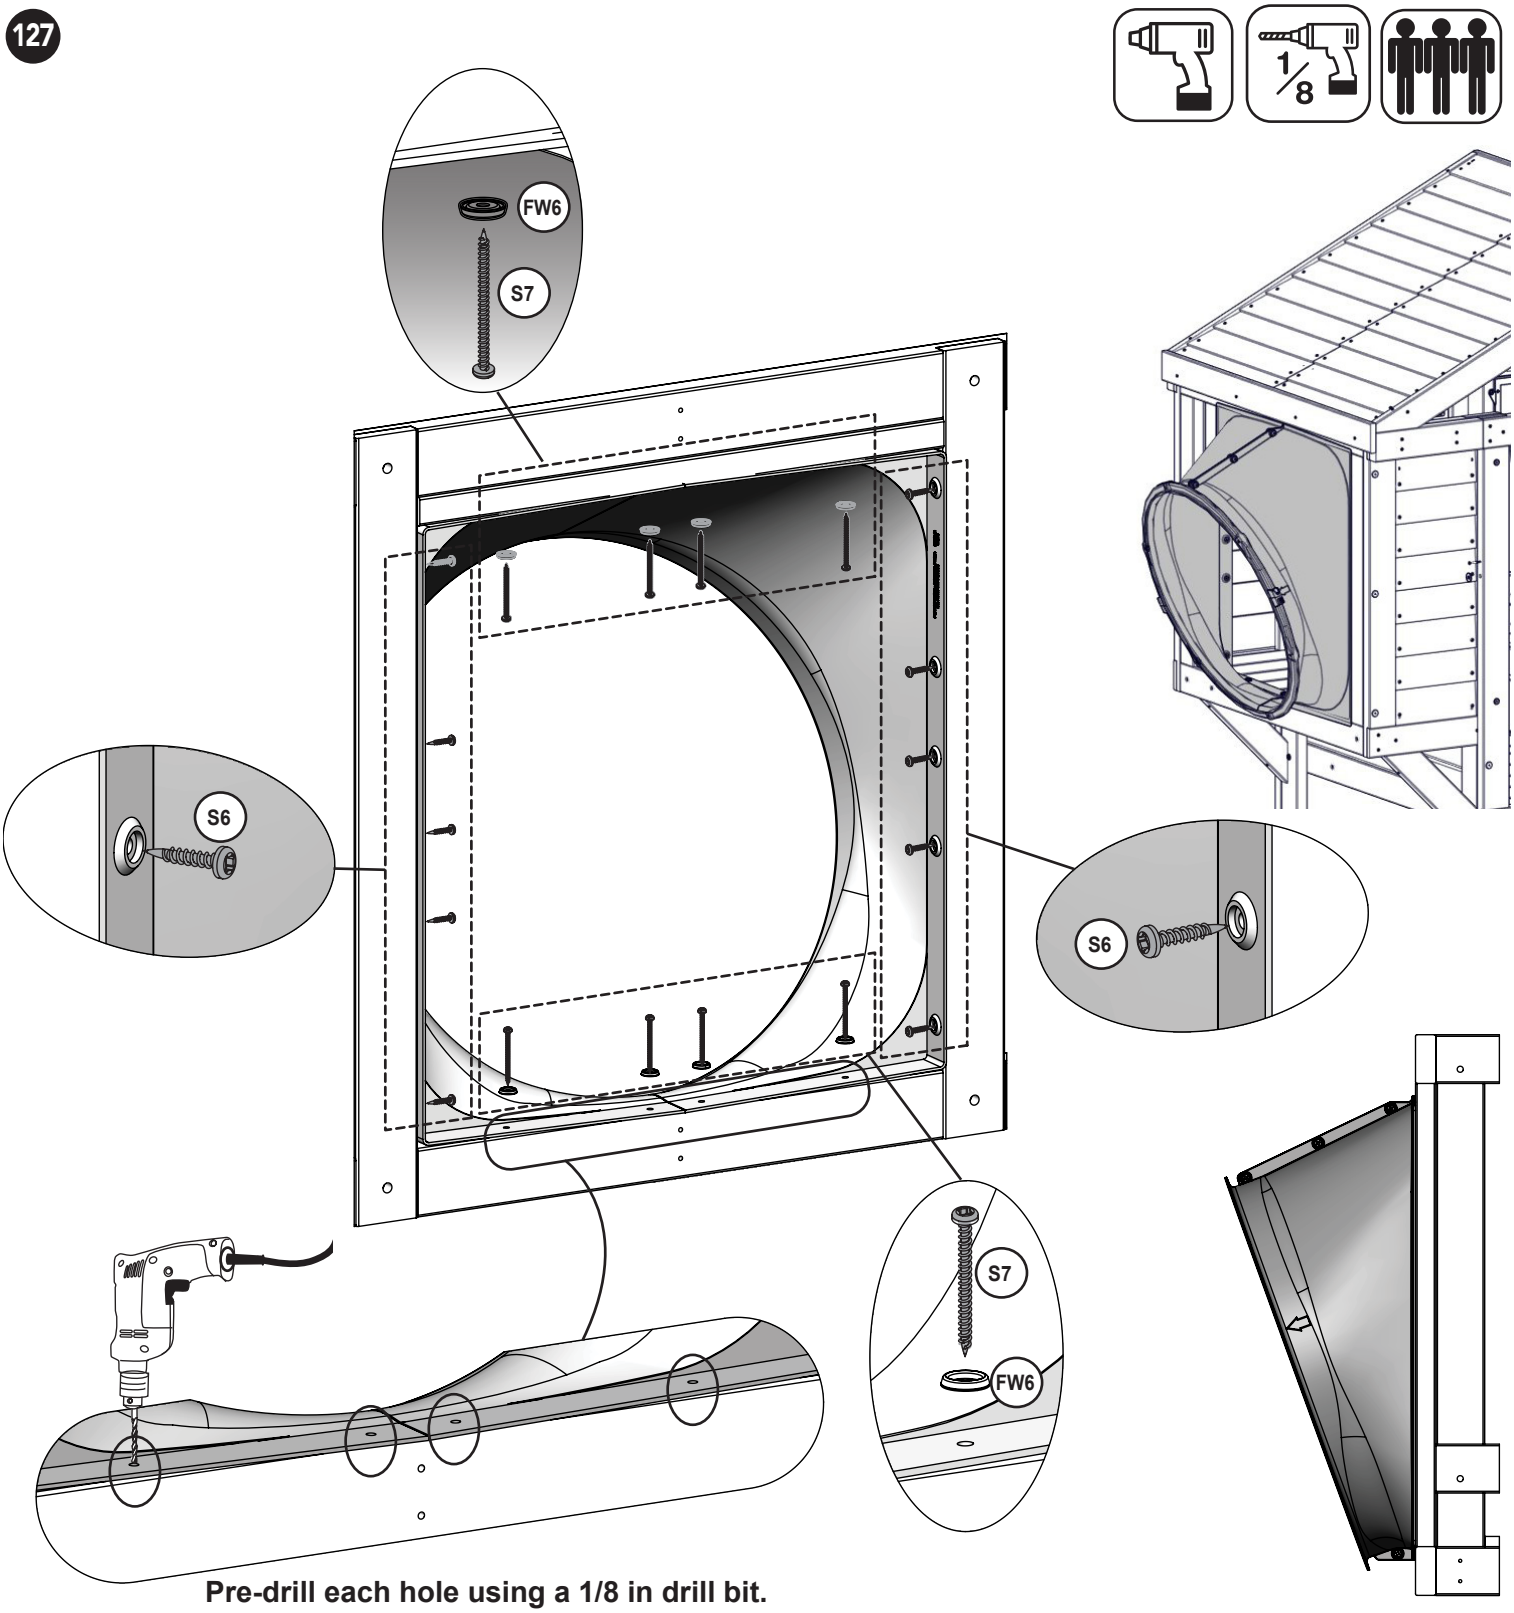

Pre-drill each hole using a 1/8 in drill bit.
Making sure the pre-drilled holes are a minimum of 1 in deep.

Hardware

10 x (S6) #12 x 25.4mm (#12 x 1 in)
8 x (S7) #12 x 50.8mm (#12 x 2 in)
8 x (FW6) #12


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu

128 **Note: Keep all bolts loose until further step.**

Use Quadrex Driver as a guide pin for each hole before inserting bolt.

Align each elbow using the molded arrows.

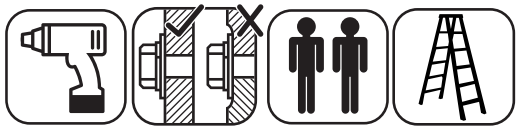


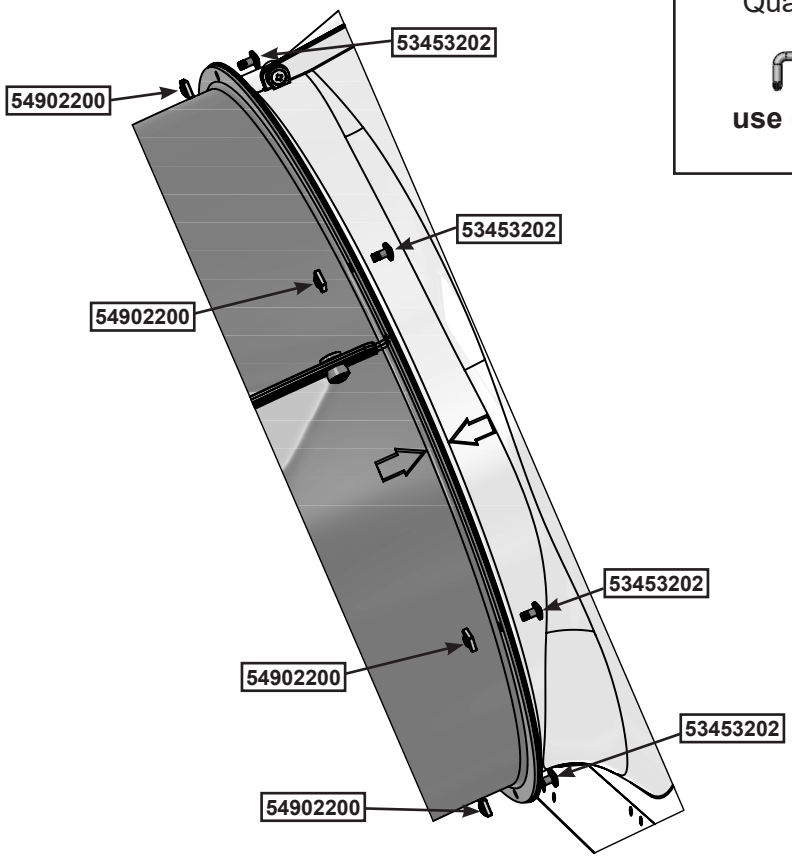



Quadrex Driver



use driver where needed

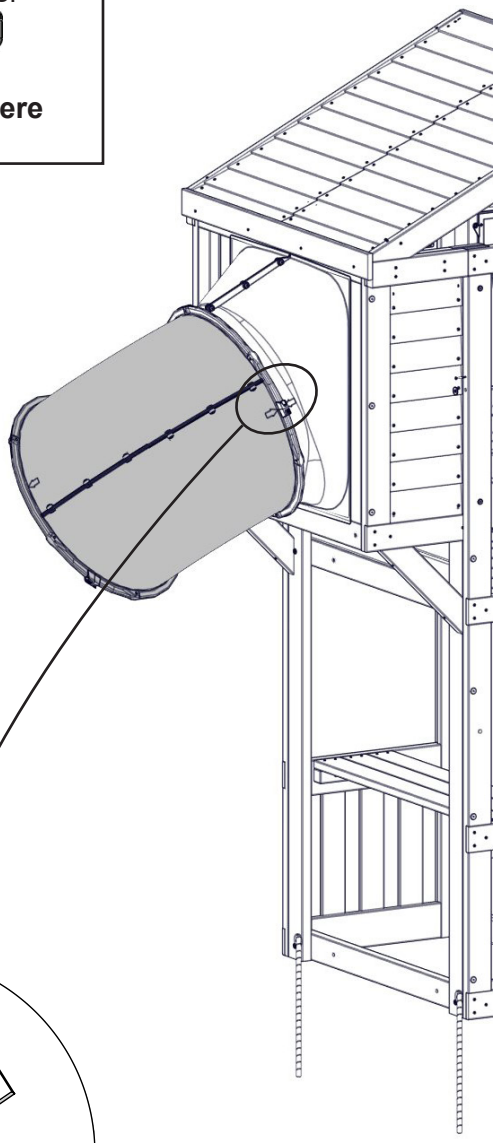

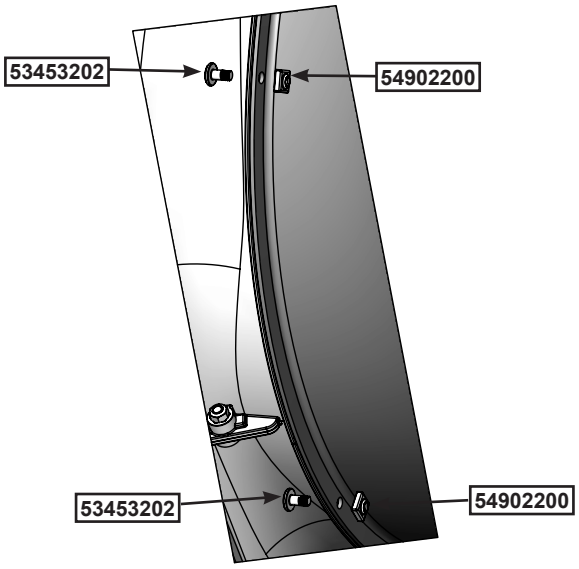

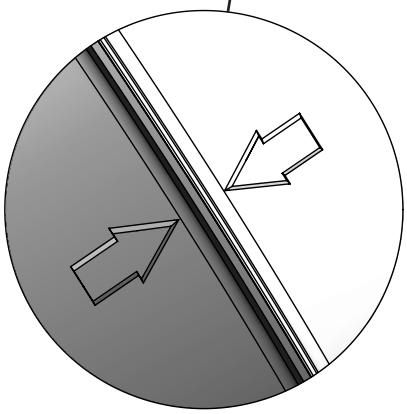

Align each elbow using the molded arrows.


Other Parts

6 x 54902200

6 x 53453202 **1/4 in x 12.7mm**

129

Complete this three times

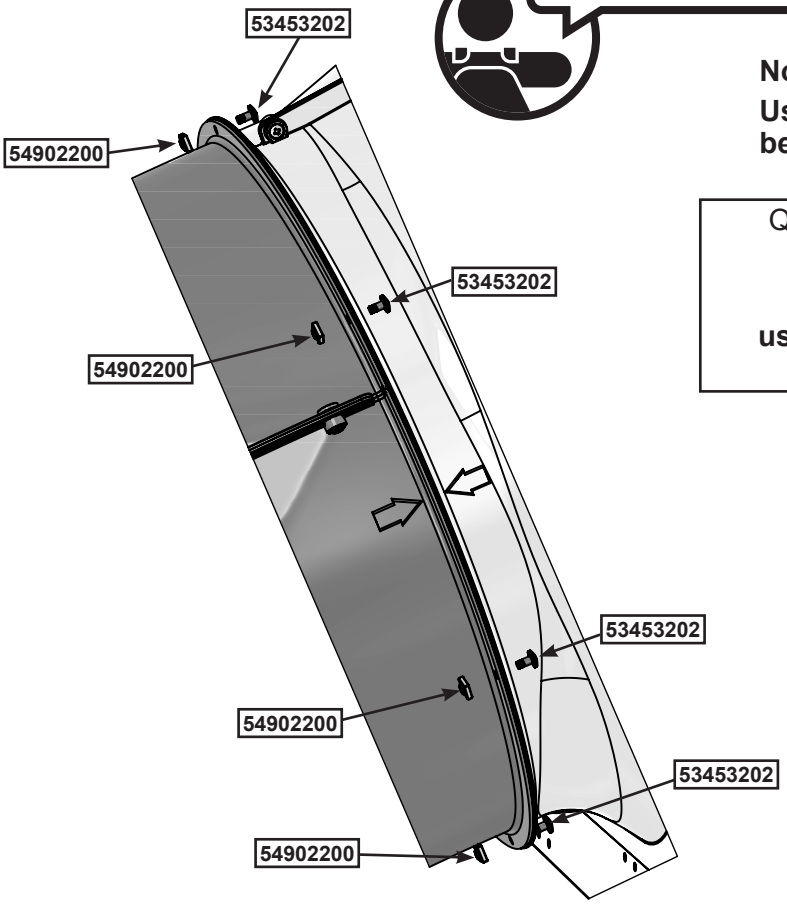


Note: Keep all bolts loose until further step.


Use Quadrex Driver as a guide pin for each hole before inserting bolt.


Quadrex Driver



use driver where needed

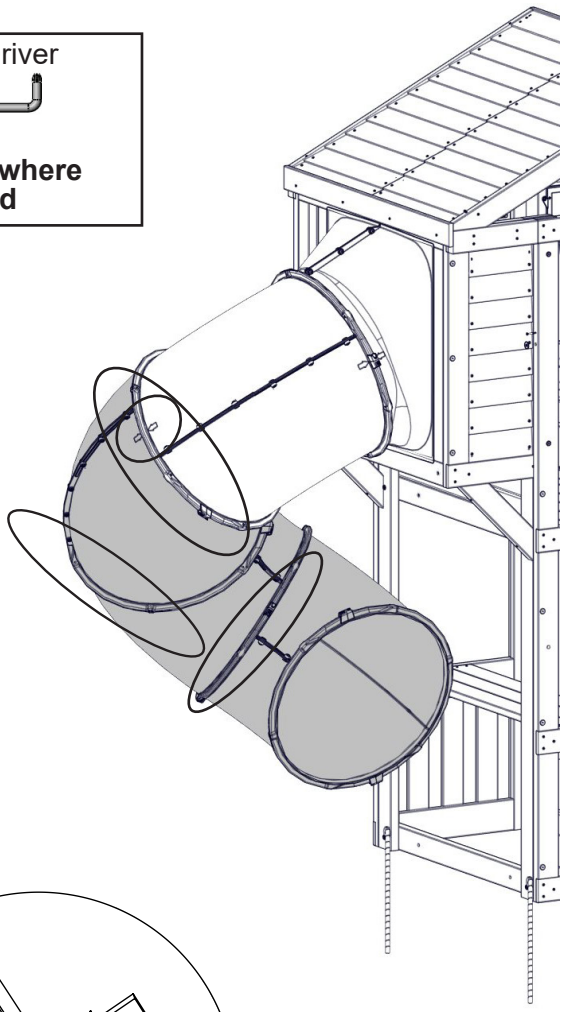

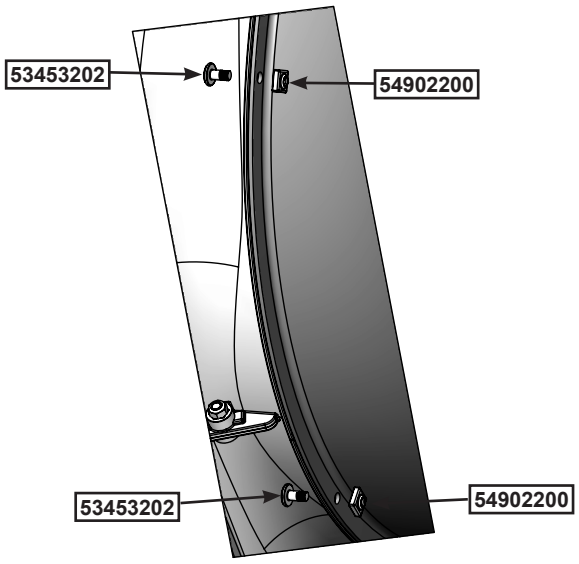

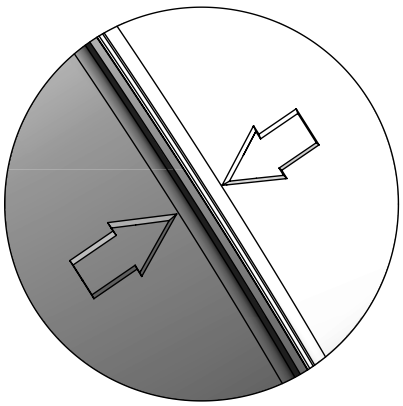

Align each elbow using the molded arrows.


Other Parts

18 x 54902200

18 x 53453202 1/4 in x 12.7mm

130

Use a 7/16 in open end wrench to hold nut and then tighten bolt with Quadrex Driver.

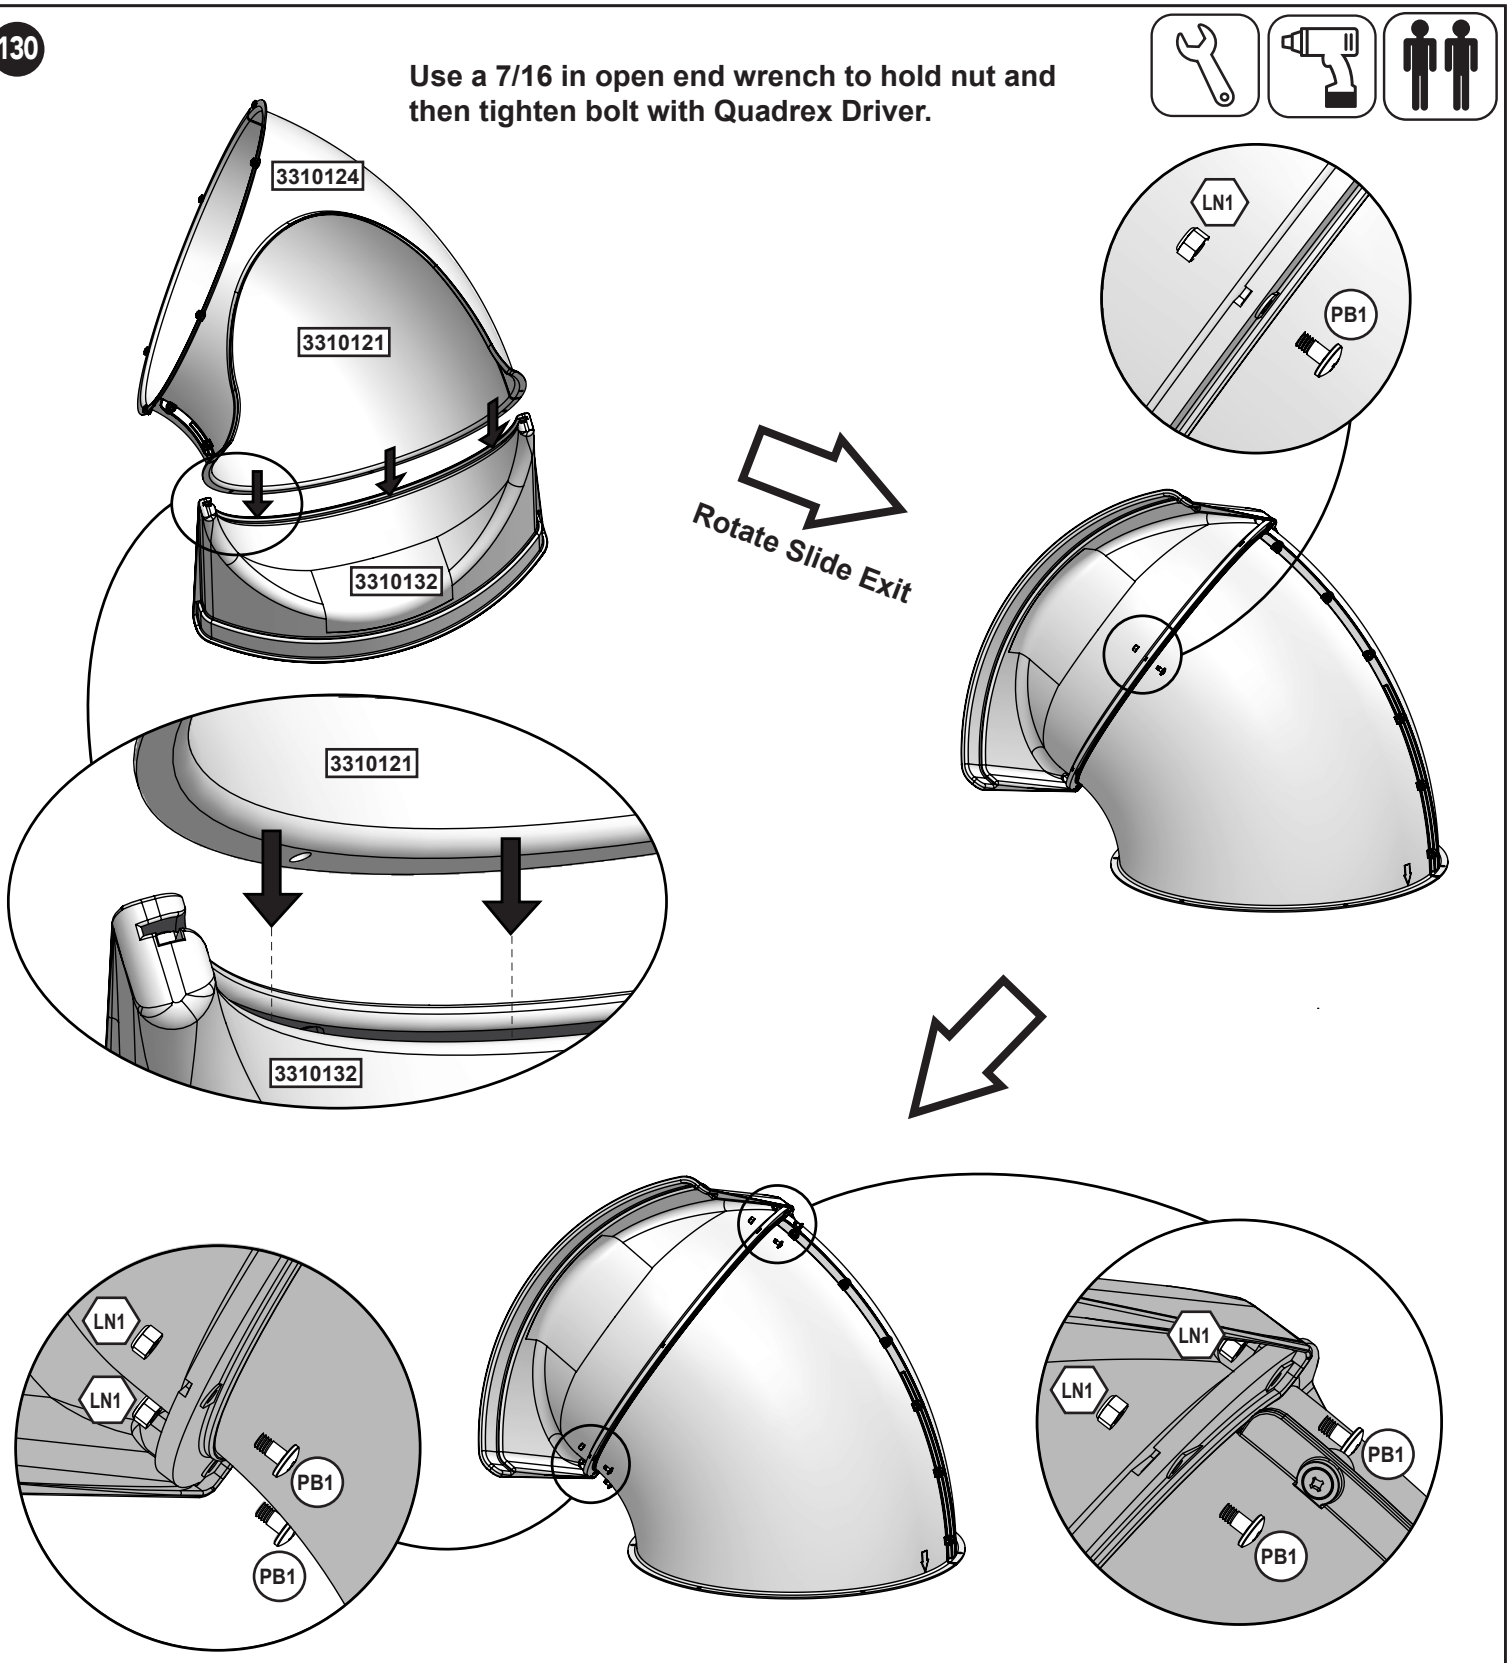

Hardware


5 x (PB1) 6.4mm x 19 mm (1/4 x 3/4 in) (LN1)


Other Parts


1 x 3310132


131

Tighten all slide bolts before the clamp rings go on in the next step.

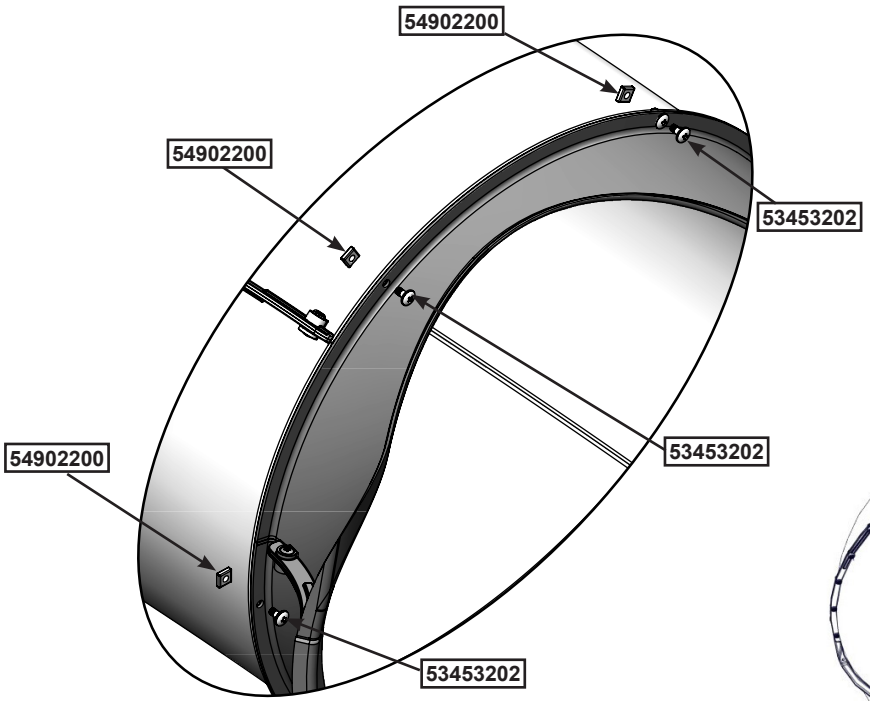

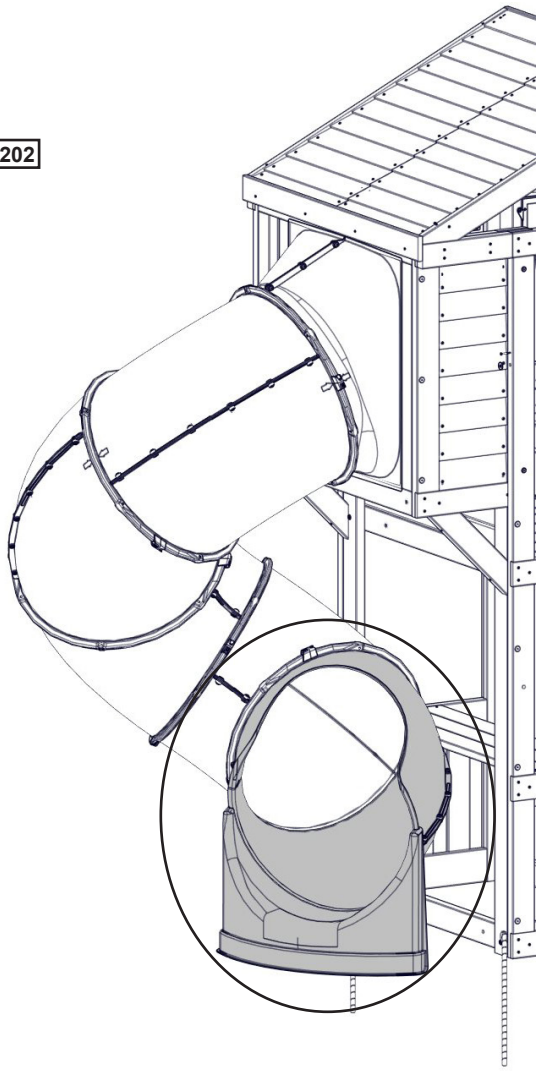

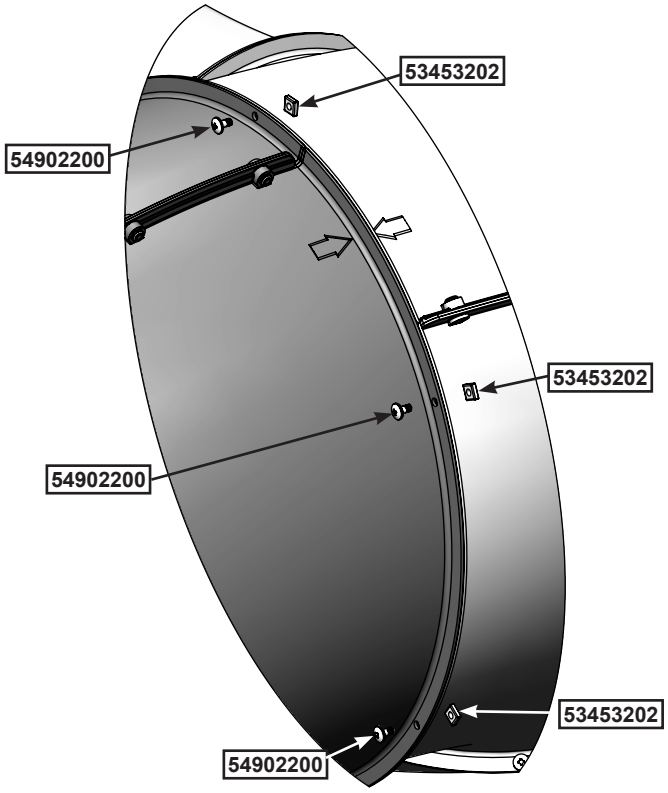

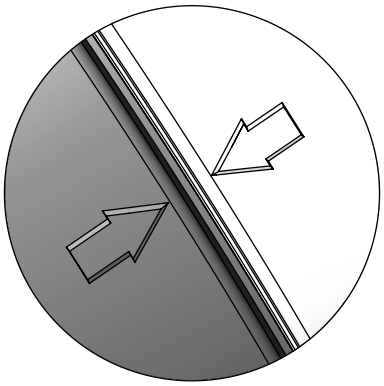

Align each elbow using the molded arrows.

Other Parts

6 x 54902200


6 x 53453202 1/4 in x 12.7mm

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu


132


Warning. Do not over tighten the clamp rings.

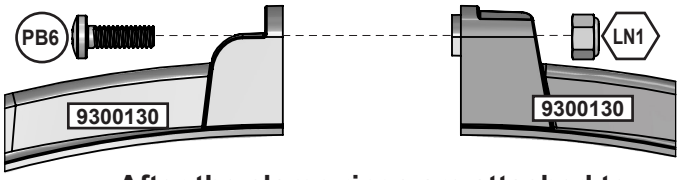

After the clamp rings are attached to the elbows, fasten them end to end with two pan bolts and lock nuts

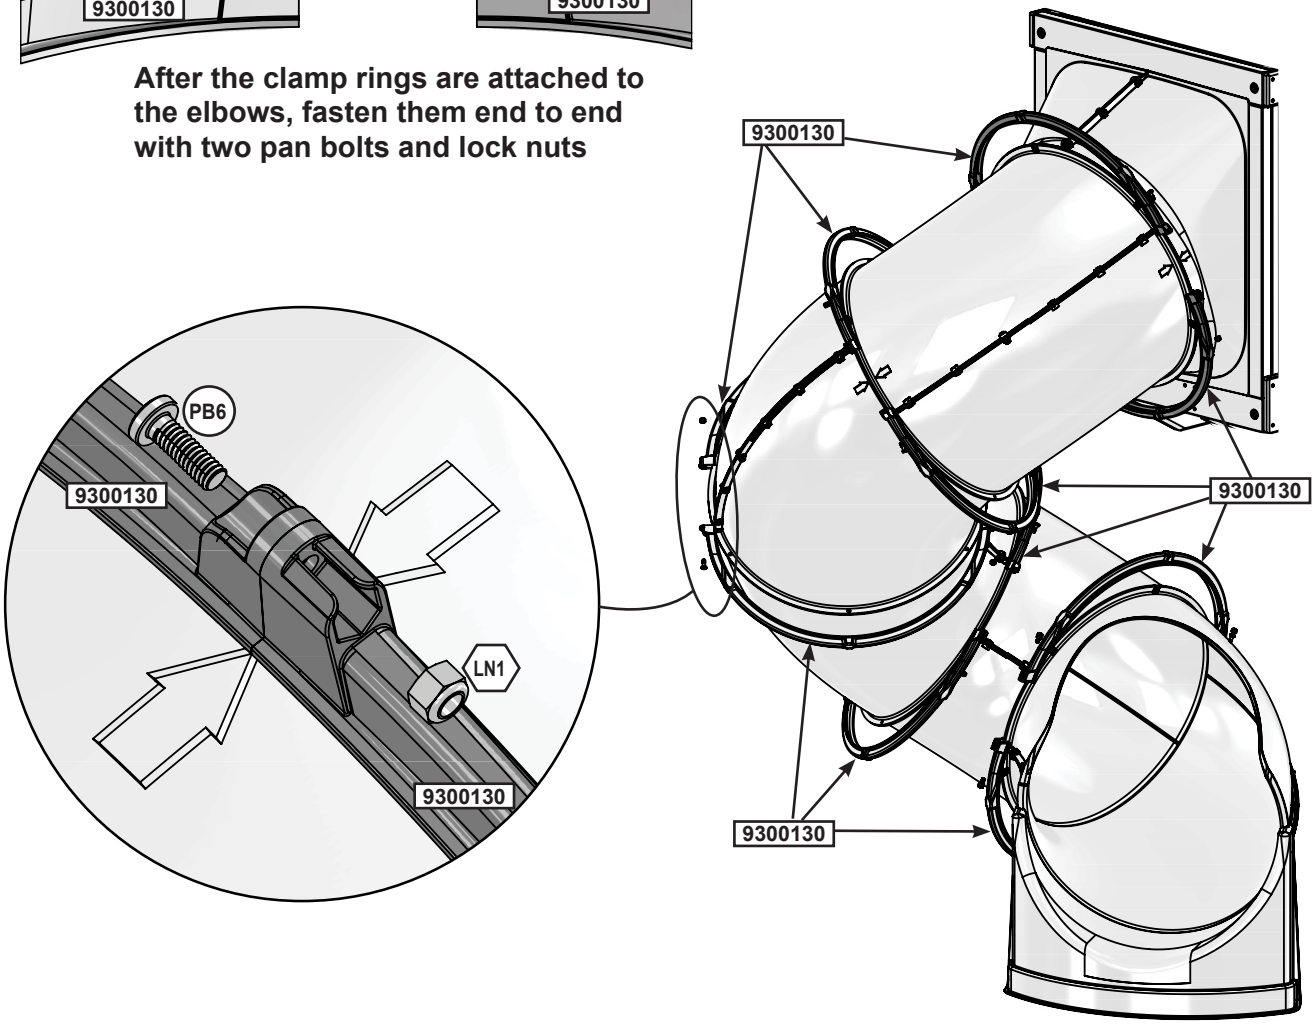

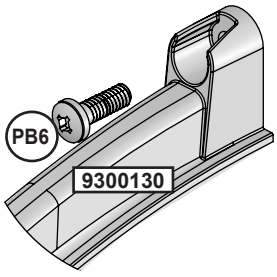

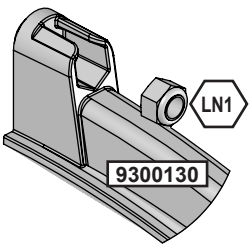

Note: For ease of assembly bottom set of clamp rings can be rotated 90 degrees to install bolts.


Hardware


10 x (PB6) 6.4mm x 25.4 mm (1/4 x 1 in) (LN1)

Other Parts


10 x 9300130


133

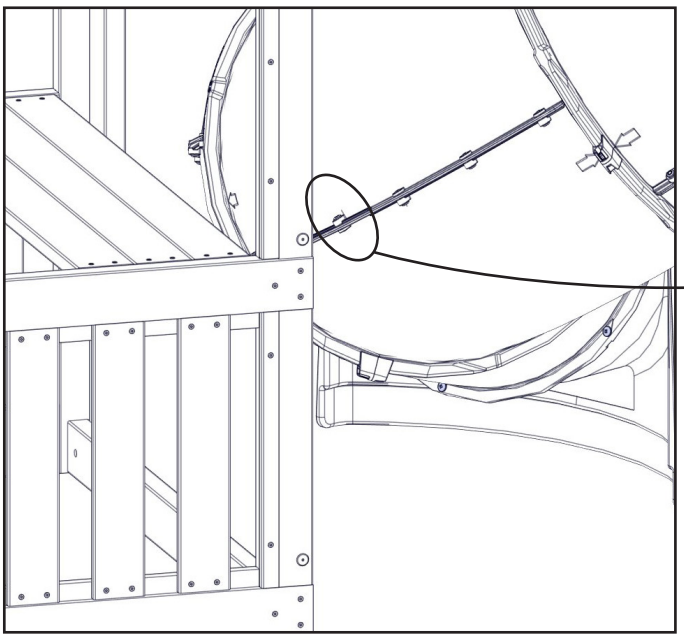

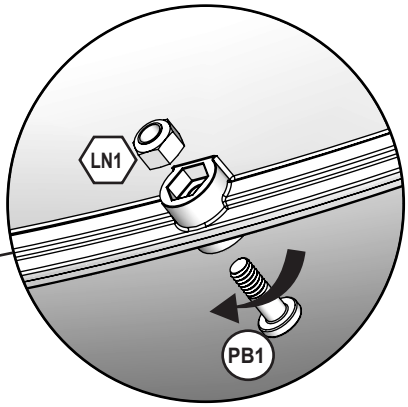

Remove PB1 (1/4 x 3/4 in Pan Bolt), The bolt (PB1) will no longer be needed, but keep the lock nut (LN1)

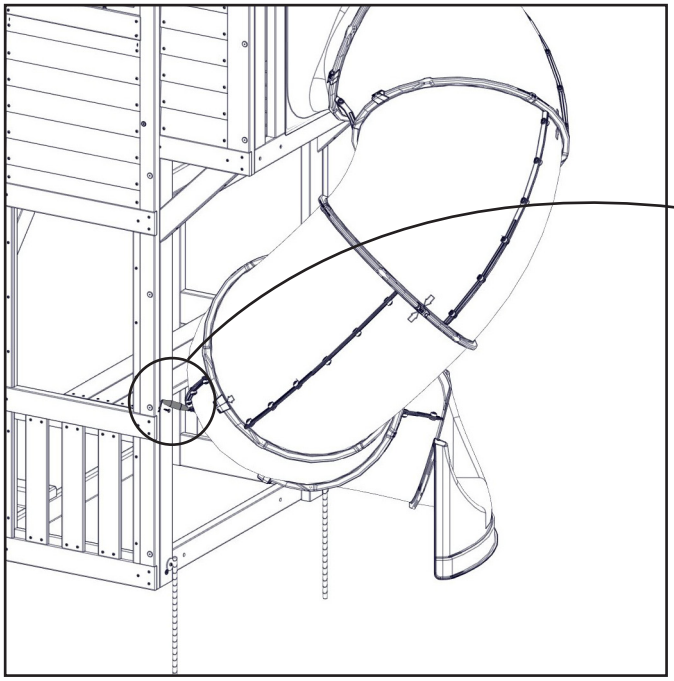

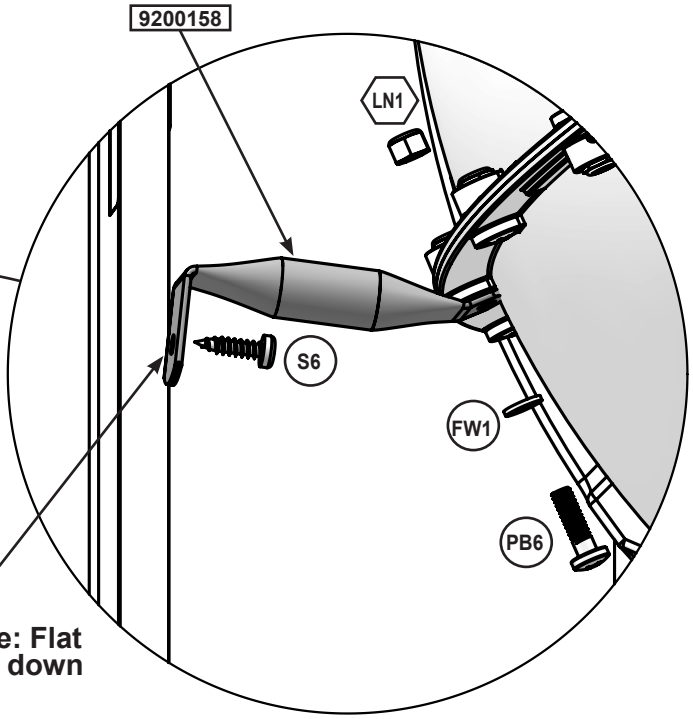

Note: Flat end down

Install PB6 (1/4 x 1 in Pan Bolt) with flat washer (FW1)

Hardware


1 x (PB6) 1/4 x 1 in (6.4 x 25.4 mm) (FW1)


1 x (S6) #12 x 1 in (#12 x 25.4 mm)

Other Parts

1 x 9200158

134 **Assemble T-Nuts first with hammer!**

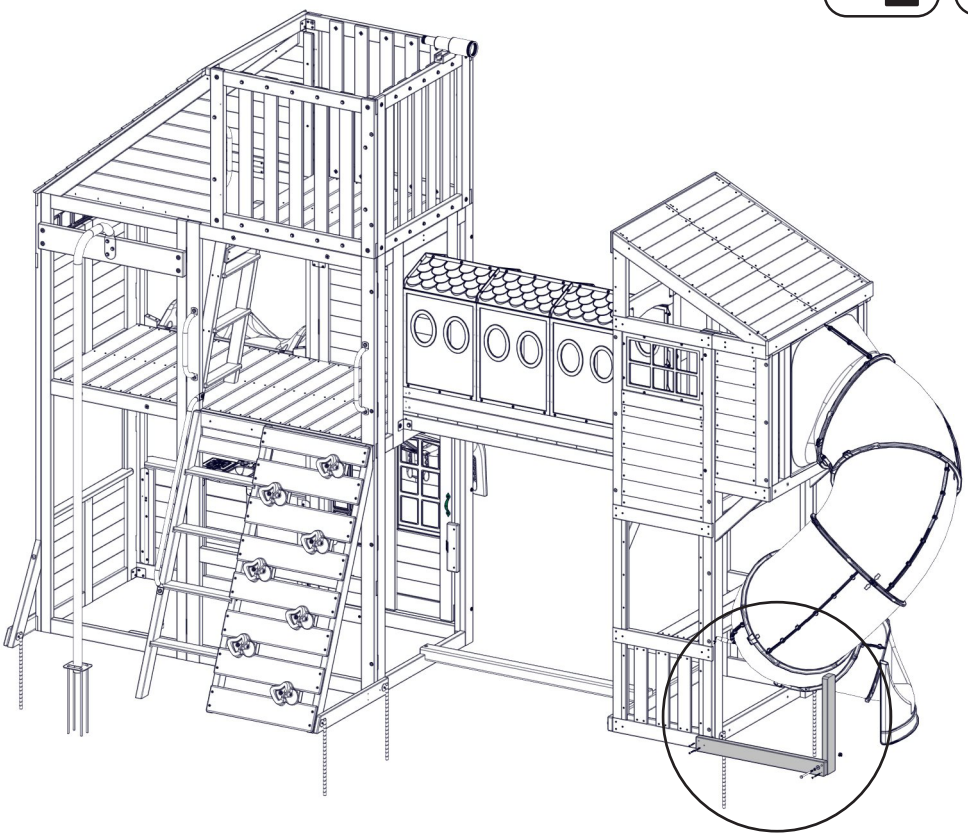

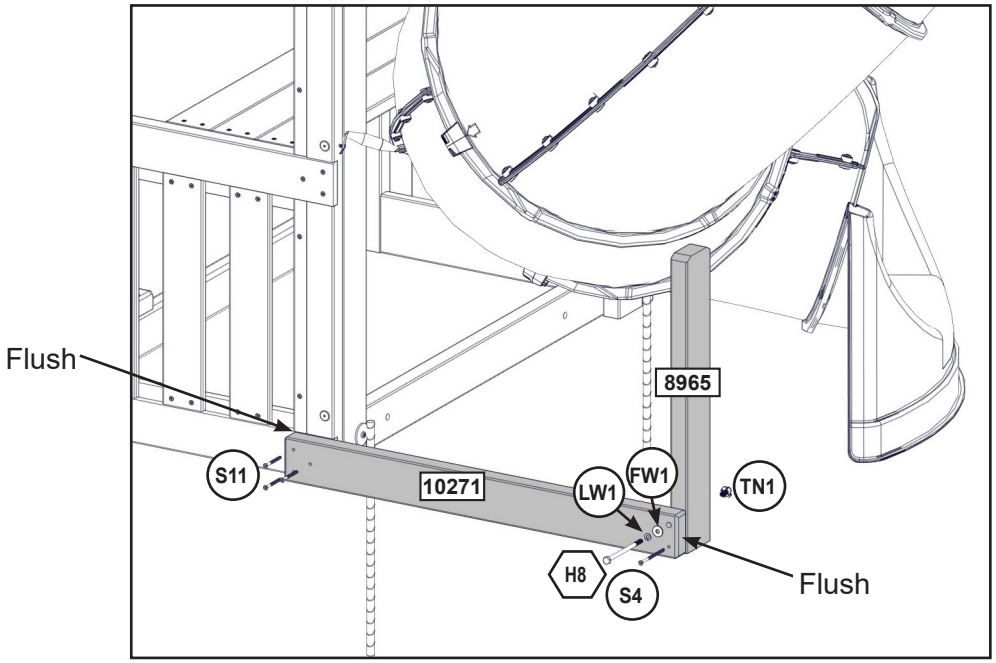


Wood Parts


1 x 10271 31.8 x 76.2 x 749.6 mm (1 1/4 x 3 x 29 1/2 in)
1 x 8965 31.8 x 76.2 x 514.4 mm (1 1/4 x 3 x 20 1/4 in)


Hardware

3 x S11 #8 x 50.8mm (#8 x 2 in)
1 x S4 #8 x 76.2mm (#8 x 3 in)
1 x H8 6.4mm x 108mm (1/4 x 4-1/4 in)(FW1, LW1, TN1)

135

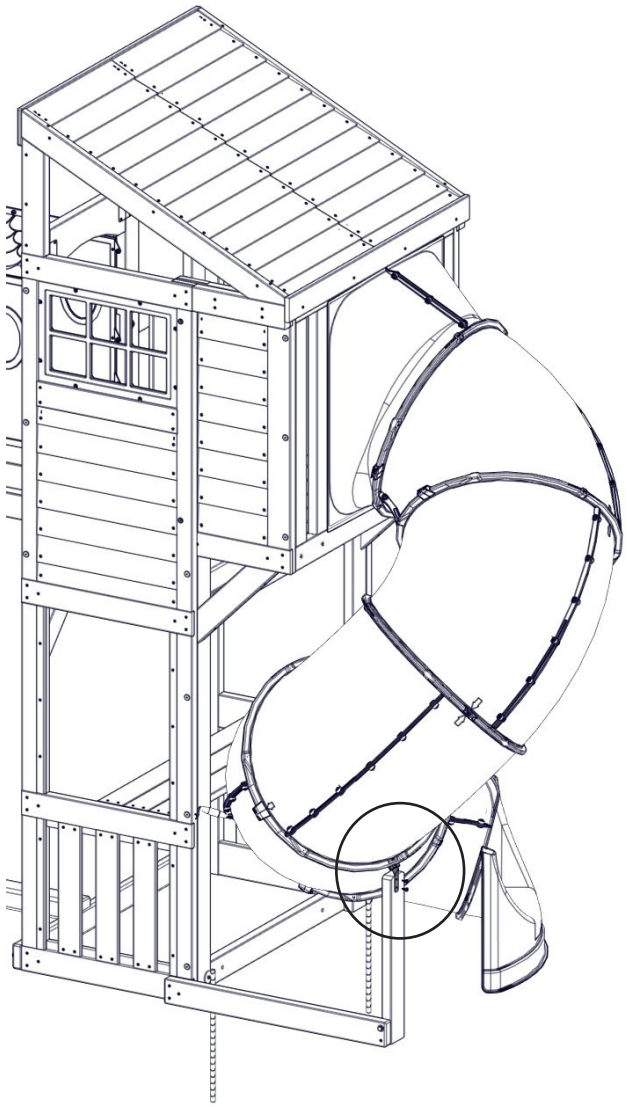

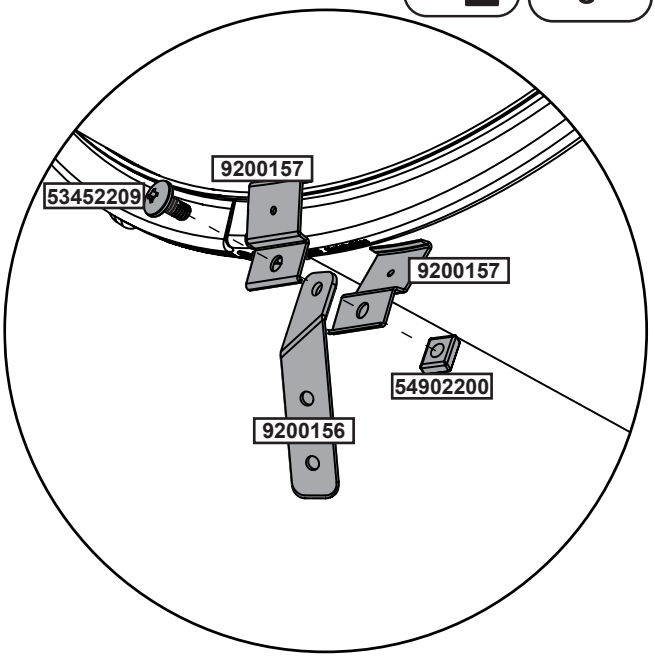

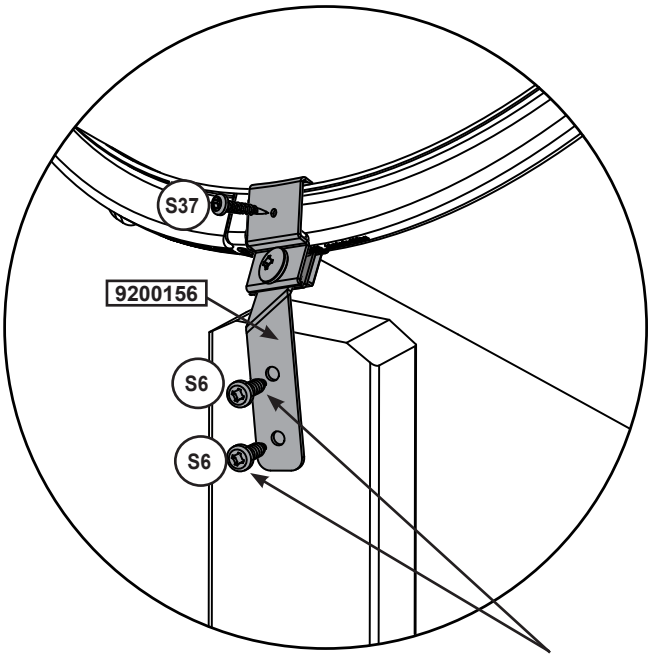

Pre-drill with a 1/8 in drill bit.

Hardware

1 x (S37) #7 x 15.87mm (#7 x 5/8 in)

2 x (S6) #12 x 25.4mm (#12 x 1 in)

Other Parts


1 x 54902200 2 x 9200157


1 x 9200156 1 x 53452209 1/4 x 14.5mm

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

136

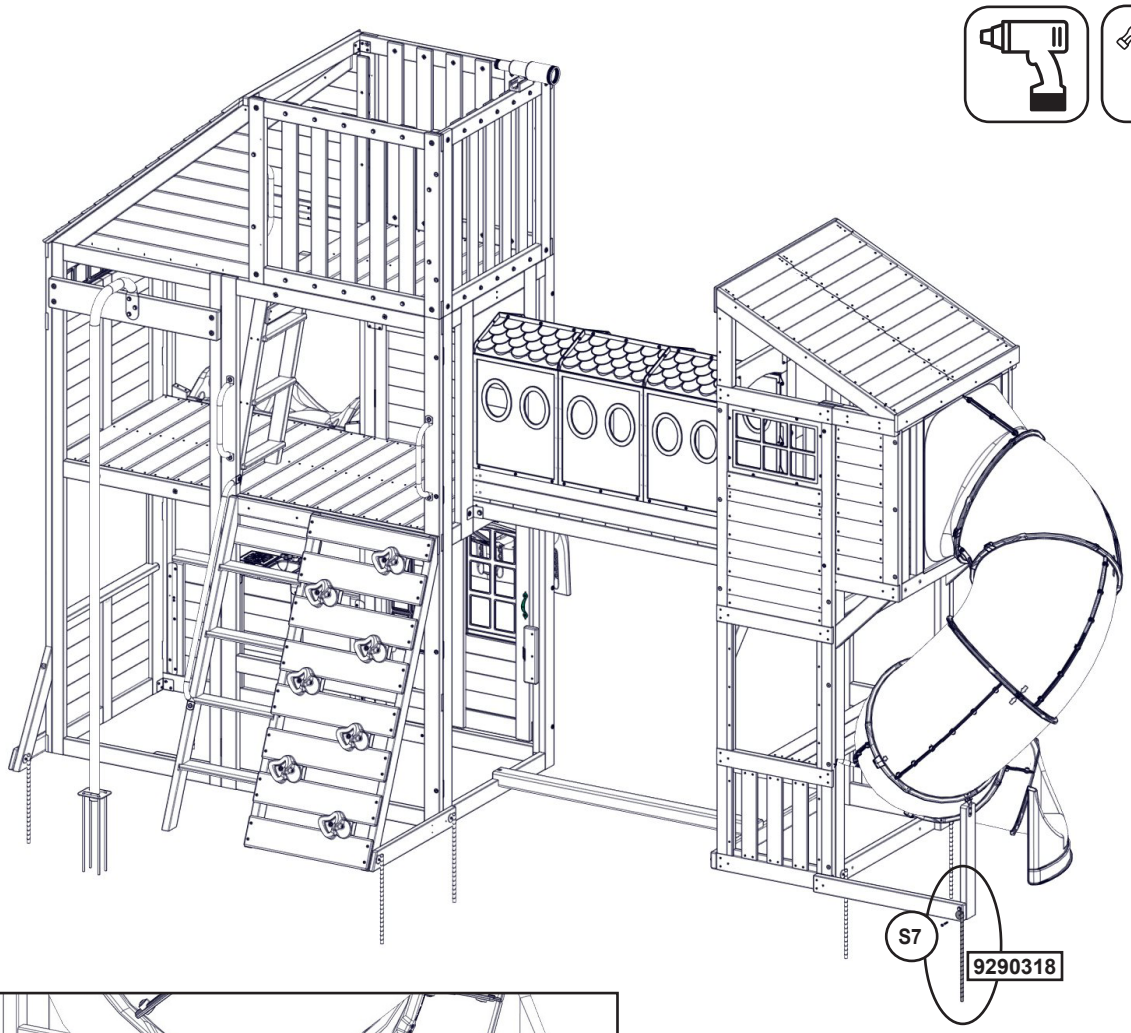

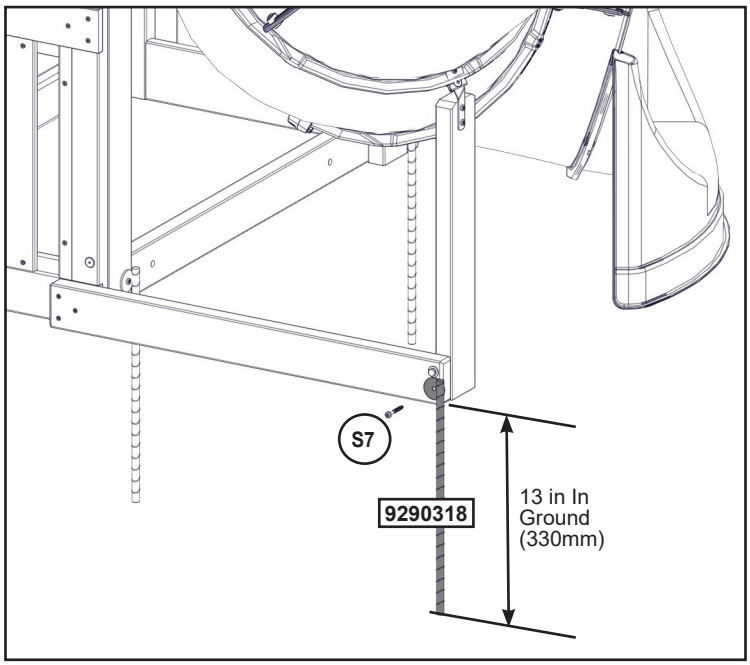

Warning! To prevent tipping and avoid potential injury, stakes must be driven 13 in(330mm) into ground. Digging or driving stakes can be dangerous if you do not check first for under-ground wiring, cables or gas lines.

Hardware


1 x (S7) #12 x 50.8mm (#12 x 2 in)


Other Parts

1 x 9290318

137

Note: Structure partly removed for clarity.

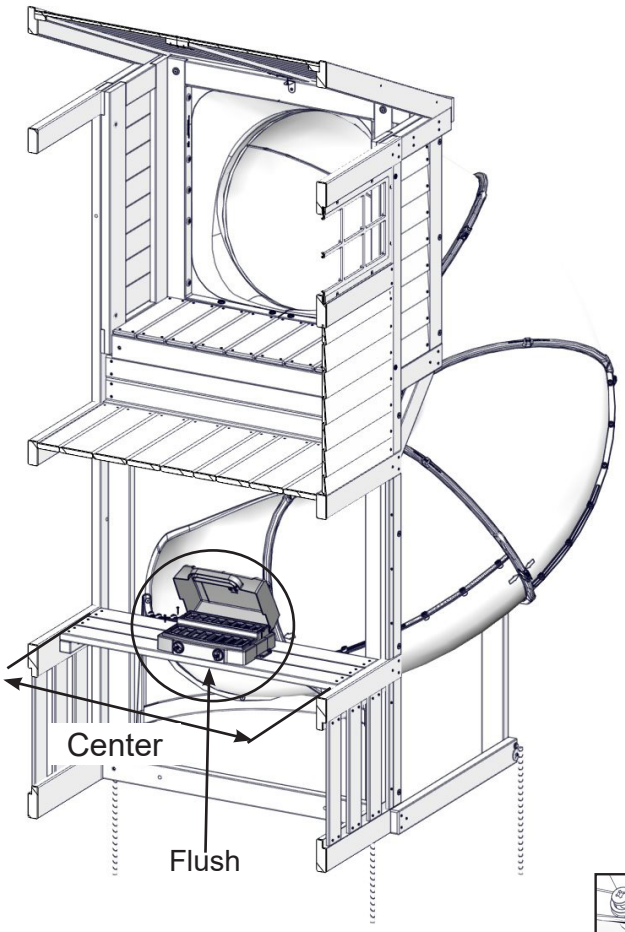

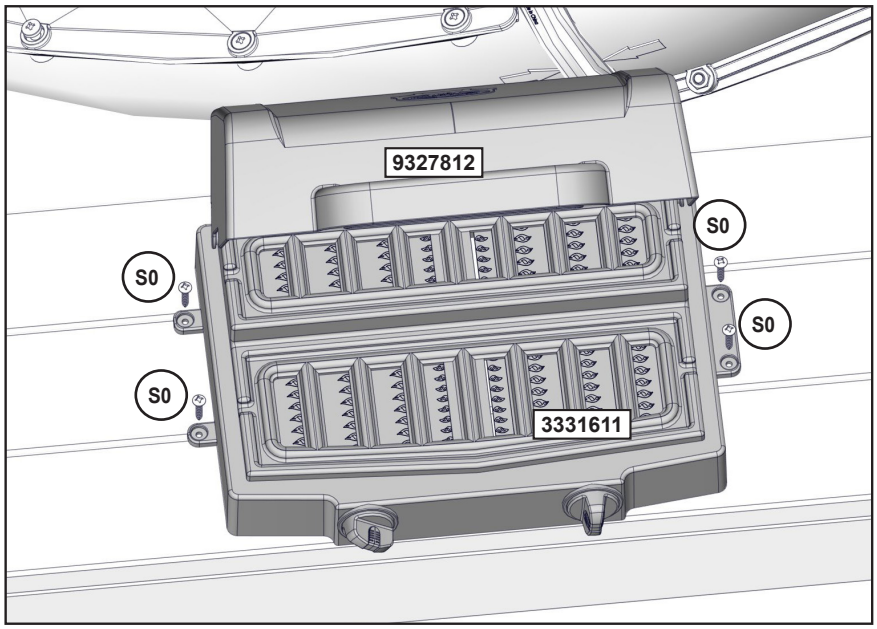

Hardware

4 x (S0) #8 x 22.2mm (#8 x 7/8 in)

Other Parts

1 x 3331611


1 x 9327812


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

138

Note: Structure partly removed for clarity.

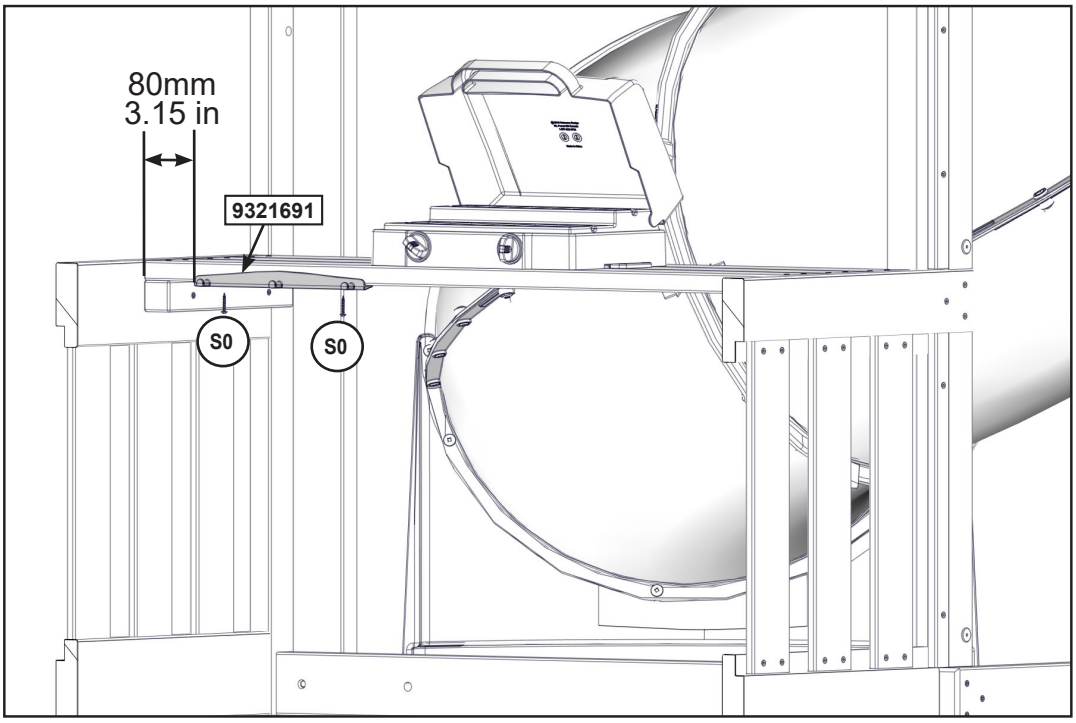

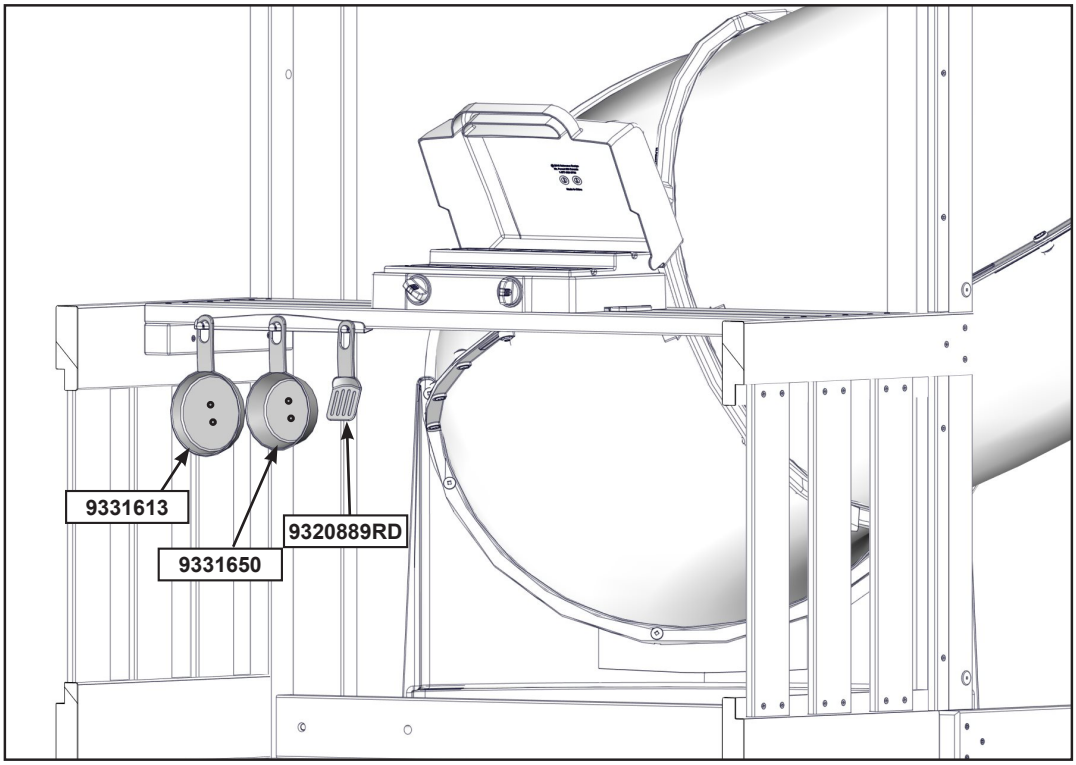

Hardware


2 x (S0) #8 x 22.2mm (#8 x 7/8 in)


Other Parts

1 x 9320889RD
1 x 9331650
1 x 9331613
1 x 9321691

139

Note: Structure partly removed for clarity.

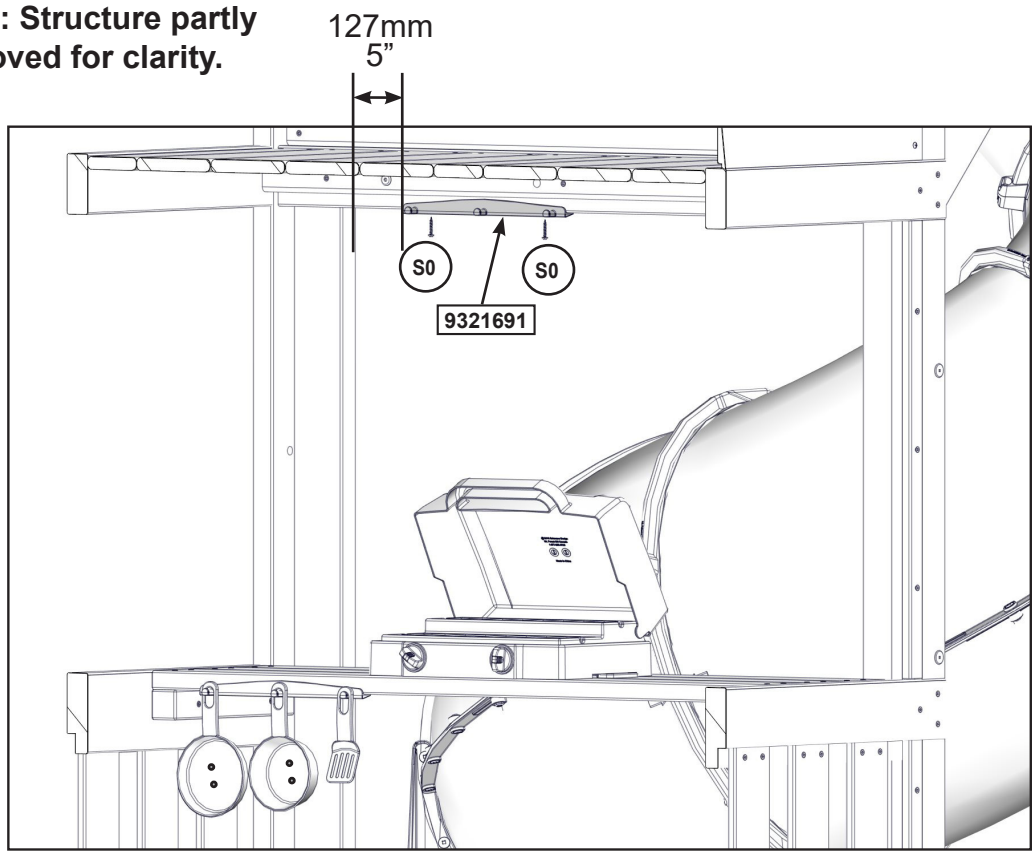

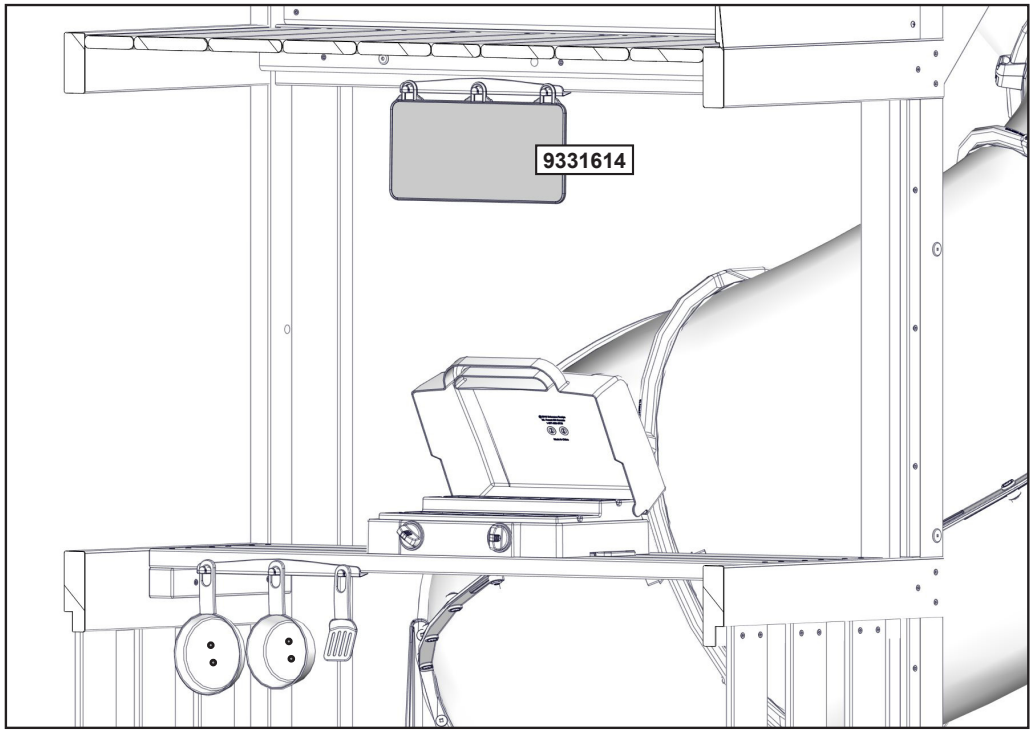

Hardware

2 x (S0) #8 x 22.2mm (#8 x 7/8 in)

Other Parts


1 x 9321691

1 x 9331614


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu


140 Swing Ladder Assembly

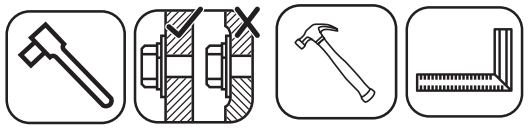

Assemble T-Nuts first with hammer!

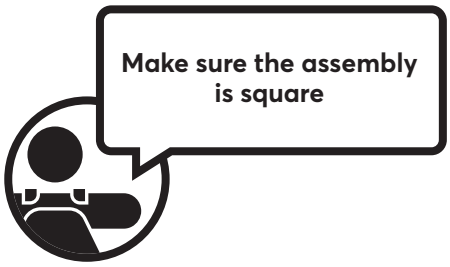

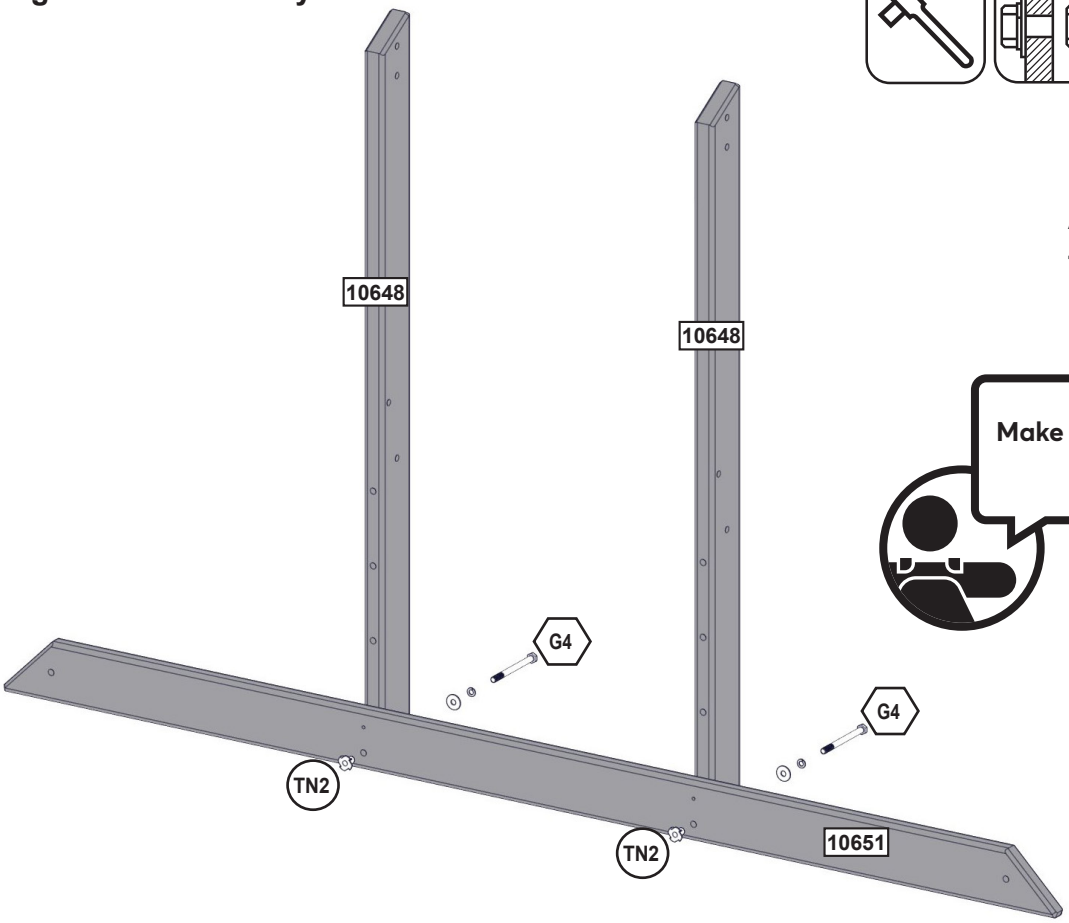

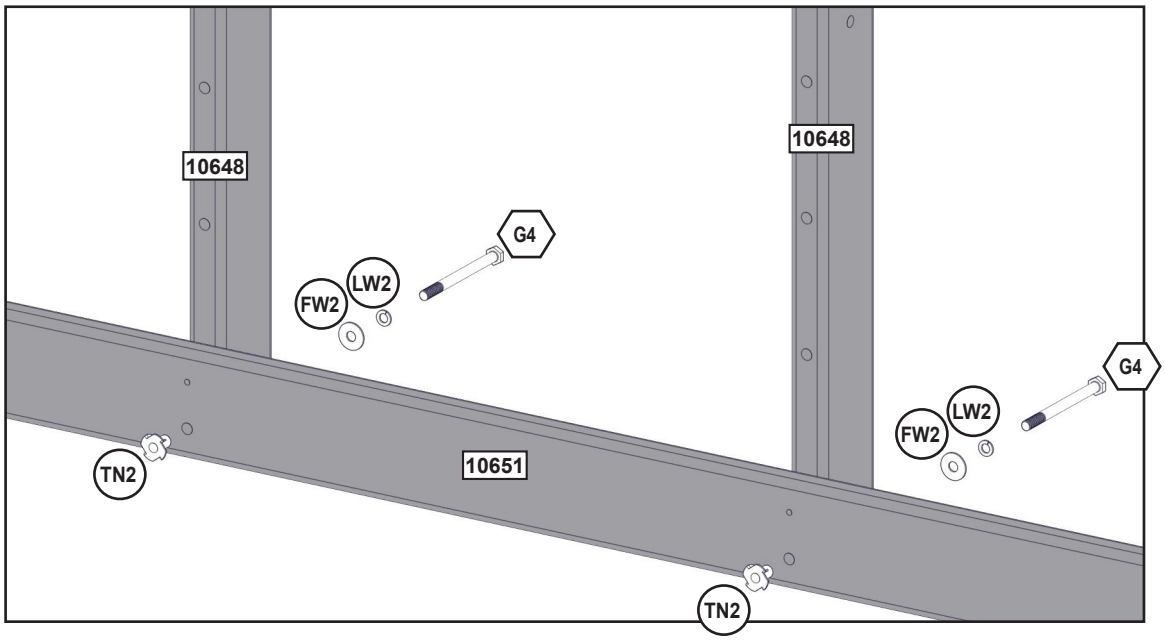

Wood Parts

2 x 10648 31.8 x 76.2 x 1107.6 mm (1 1/4 x 3 x 43 5/8 in)
1 x 10651 25.4 x 88.9 x 1752.2 mm (1 x 3 1/2 x 69 in)


Hardware


2 x G4 7.9mm x 101.5mm (5/16 x 4 in)(LW2,FW2,TN2)

141



Assemble T-Nuts first with hammer!

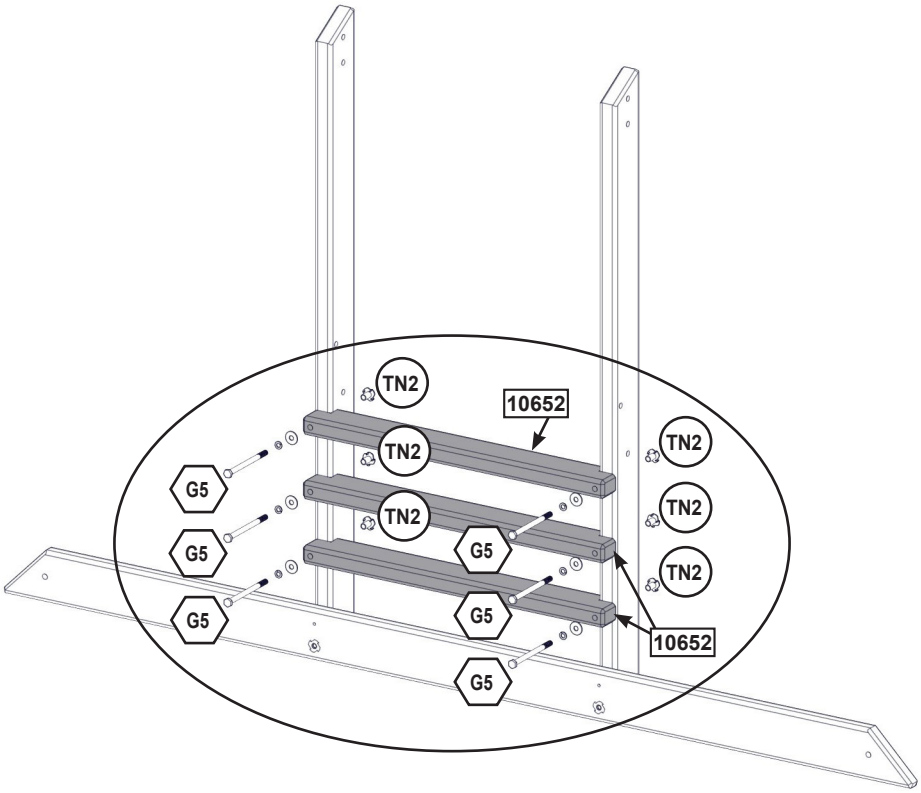

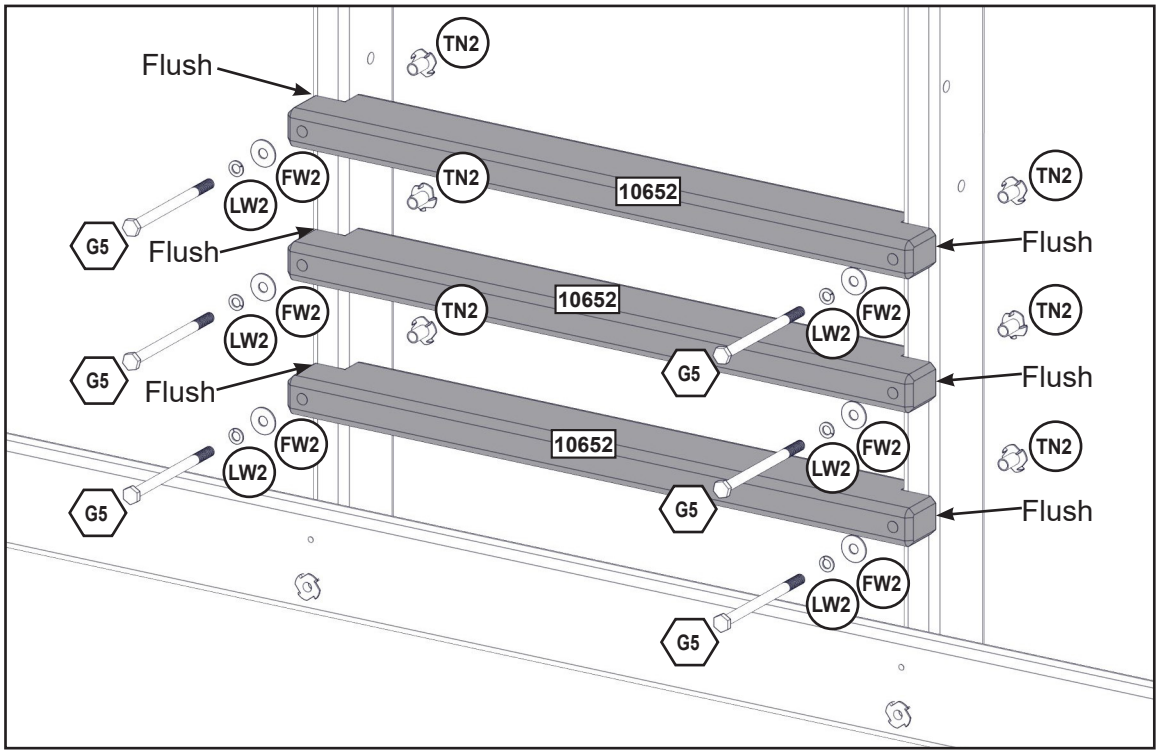

Wood Parts

3 x 10652 31.8 x 63.5 x 575.6 mm (1 1/4 x 2 1/2 x 22 21/32 in)

Hardware


6 x G5 7.9mm x 114.3mm (5/16 x 4-1/2 in)(LW2,FW2,TN2)


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu


142

Assemble T-Nuts first with hammer!

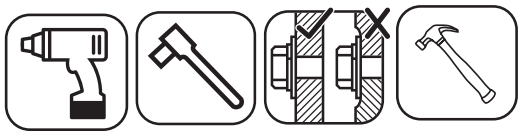

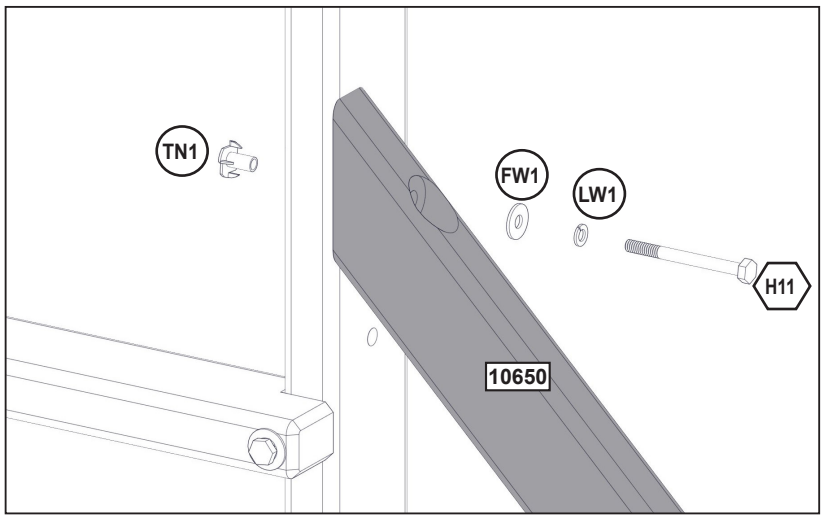

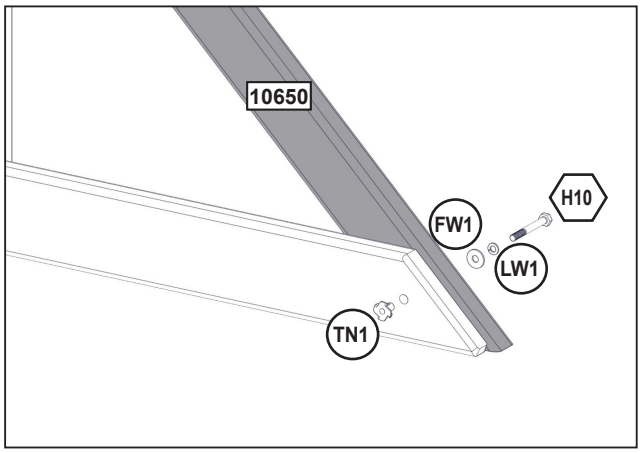

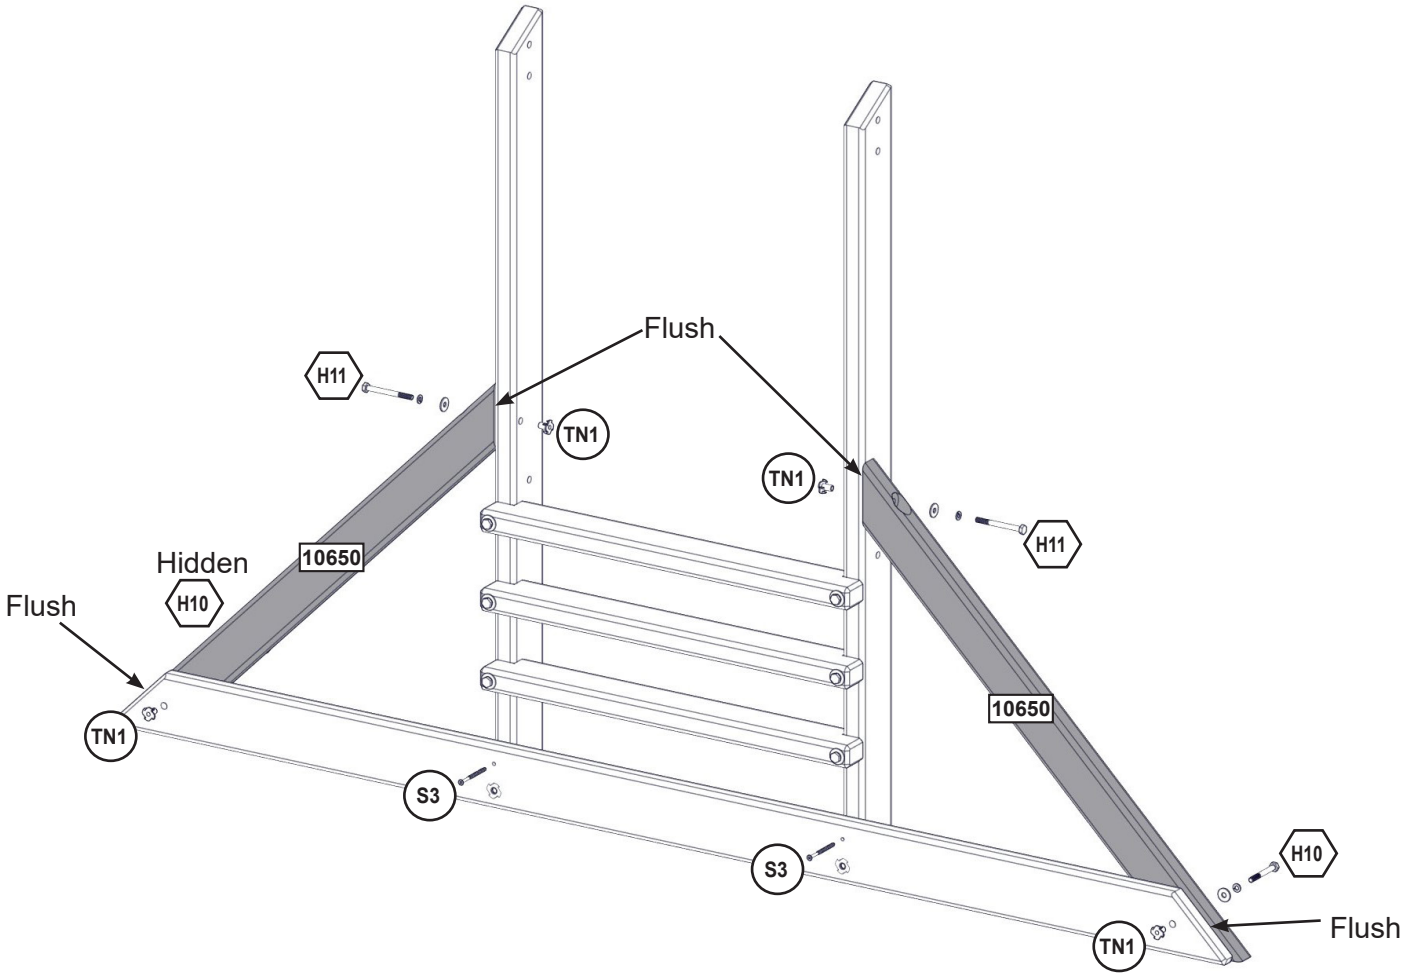

Wood Parts

2 x 10650 31.8 x 63.5 x 832.9 mm (1 1/4 x 2 1/2 x 32 13/16 in)

Hardware

2 x H10 6.4mm x 57.2mm (1/4 x 2-1/4 in)(FW1, LW1, TN1)


2 x H11 6.4mm x 69.9mm (1/4 x 2-3/4 in)(FW1, LW1, TN1)


2 x S3 #8 x 63.5mm (#8 x 2-1/2 in)

143



Assemble T-Nuts first with hammer!

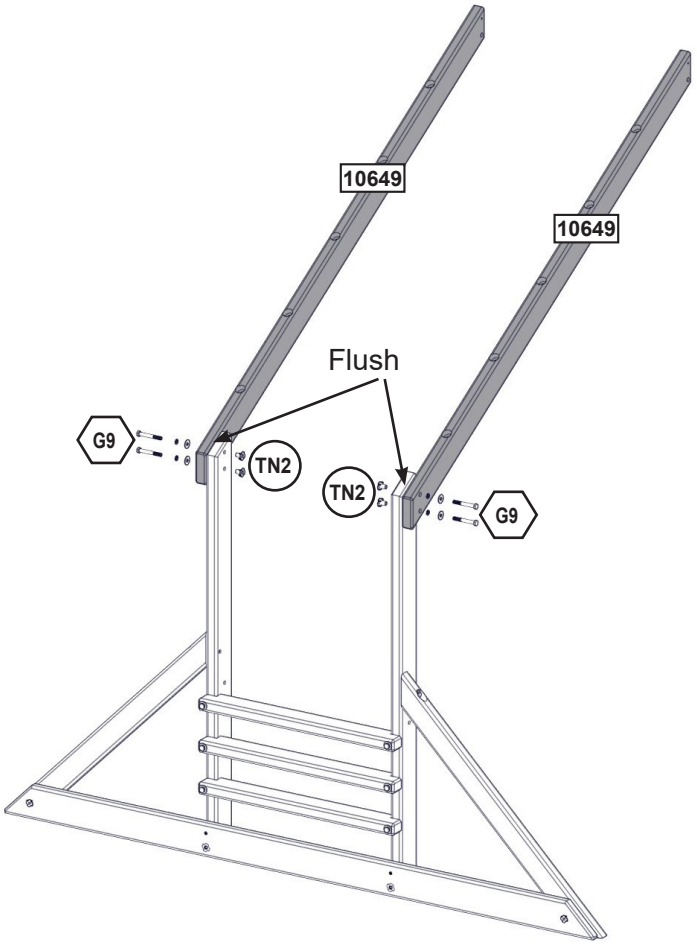

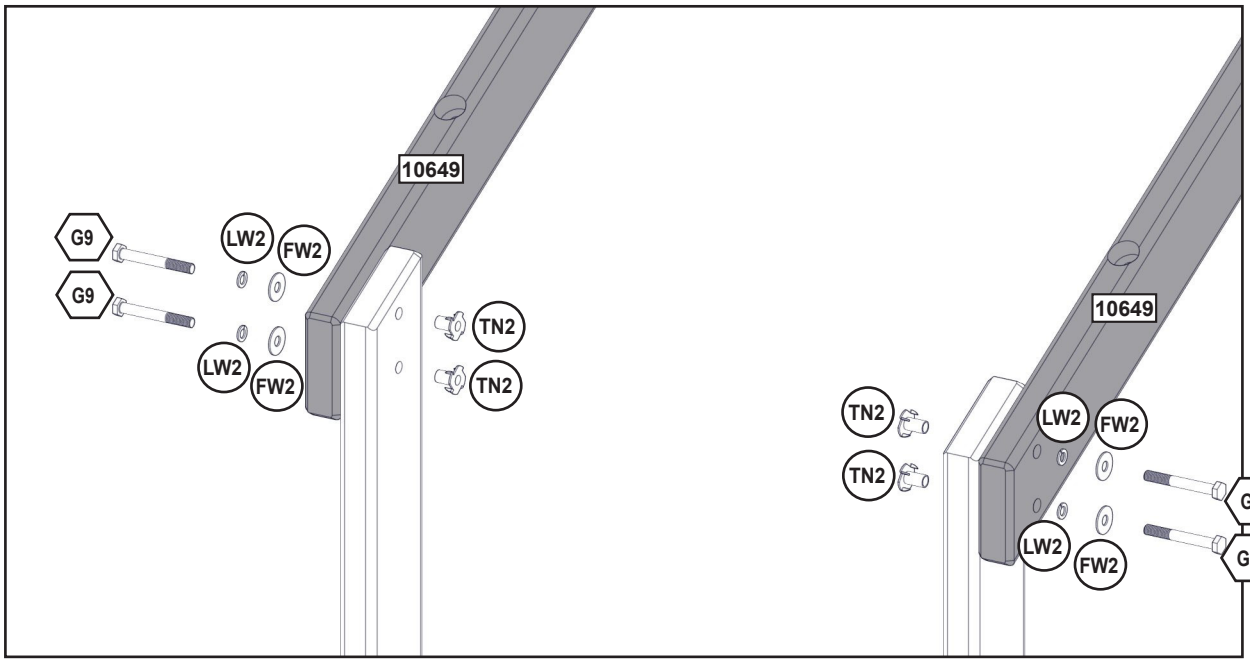

Wood Parts

2 x 10649 31.8 x 76.2 x 1583.5 mm (1 1/4 x 3 x 62 5/16 in)

Hardware


4 x G9 7.9mm x 63.5mm (5/16 in x 2-1/2 in)(LW2, FW2, TN2)

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu

144



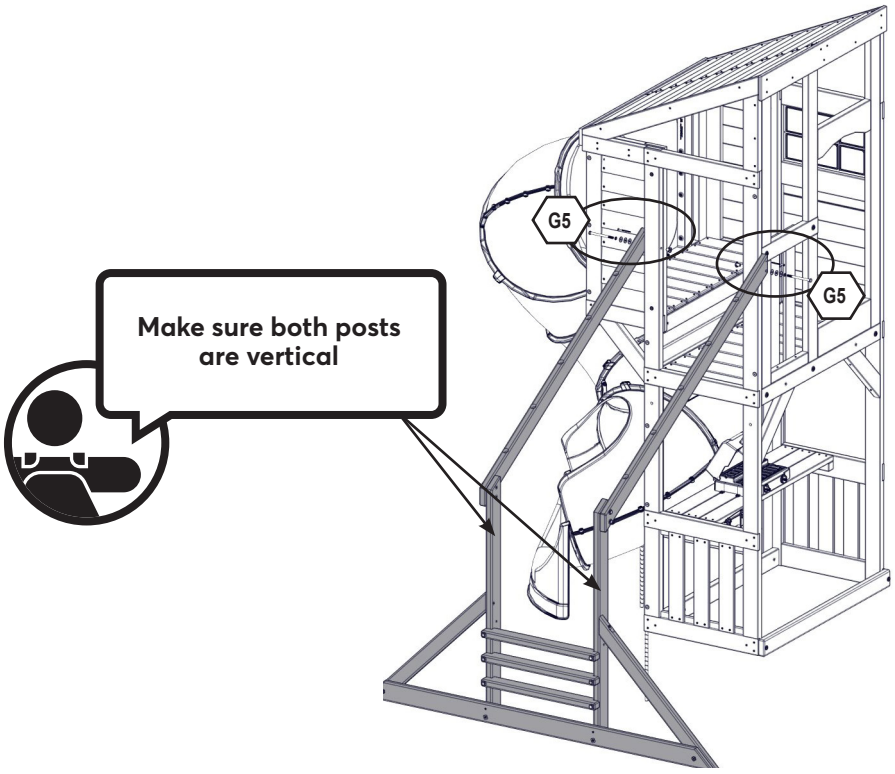

Assemble T-Nuts first with hammer!

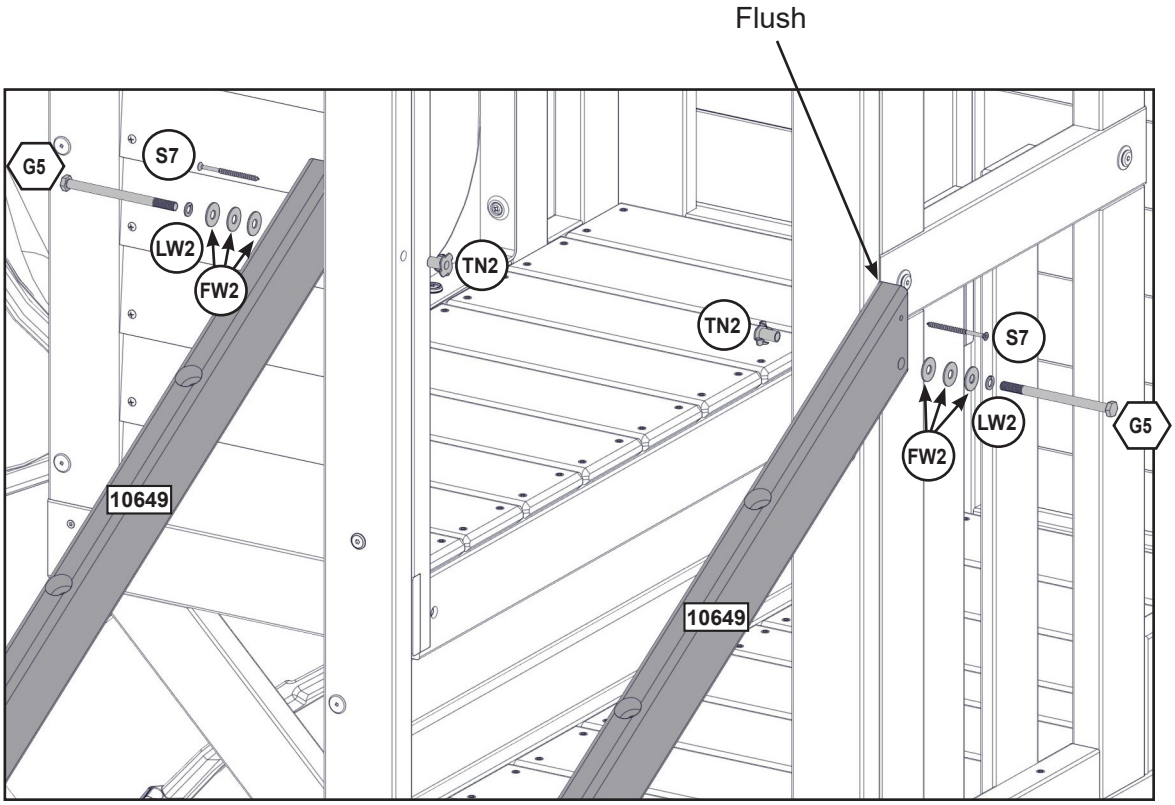


Hardware


2 x (G5) 7.9mm x 114.3mm (5/16 x 4-1/2 in)(LW2,FW2 x 3 ,TN2)

2 x (S7) #12 x 50.8mm (#12 x 2 in)

145

Warning! To prevent tipping and avoid potential injury, stakes must be driven 13 in(330mm) into ground. Digging or driving stakes can be dangerous if you do not check first for under-ground wiring, cables or gas lines.

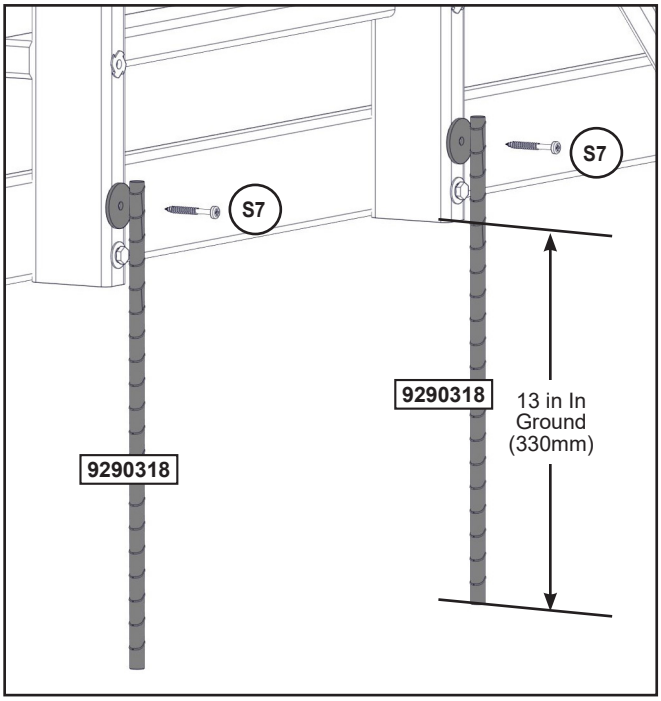

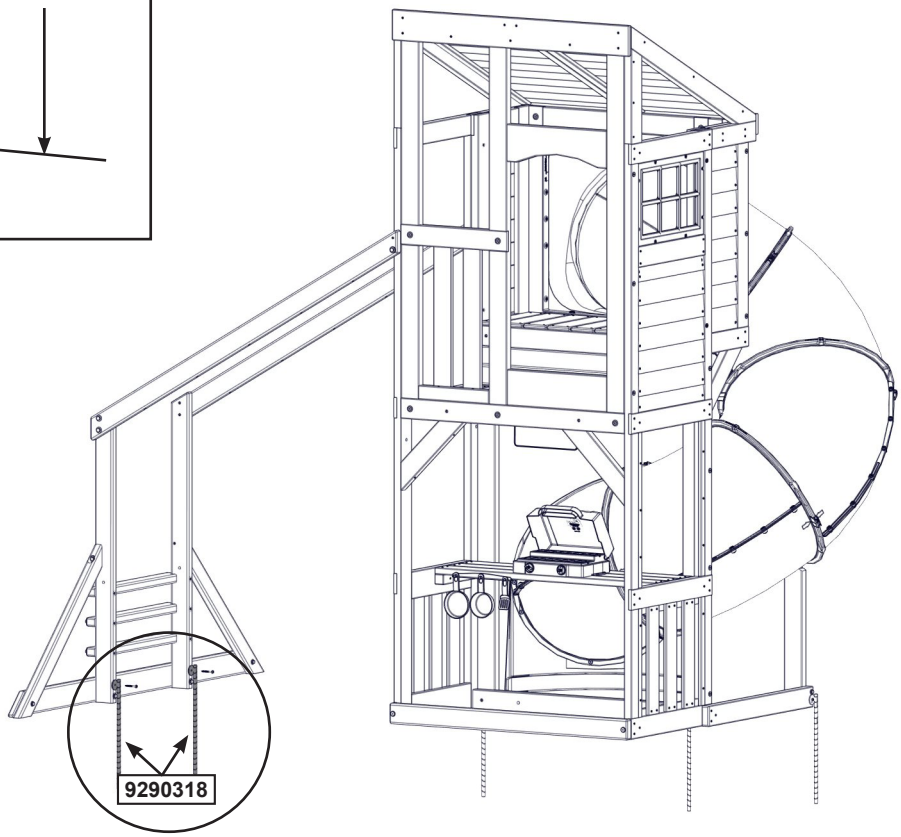

Hardware

2 x (S7) #12 x 50.8mm (#12 x 2 in)

Other Parts


2 x 9290318


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu

146

Complete this step four times

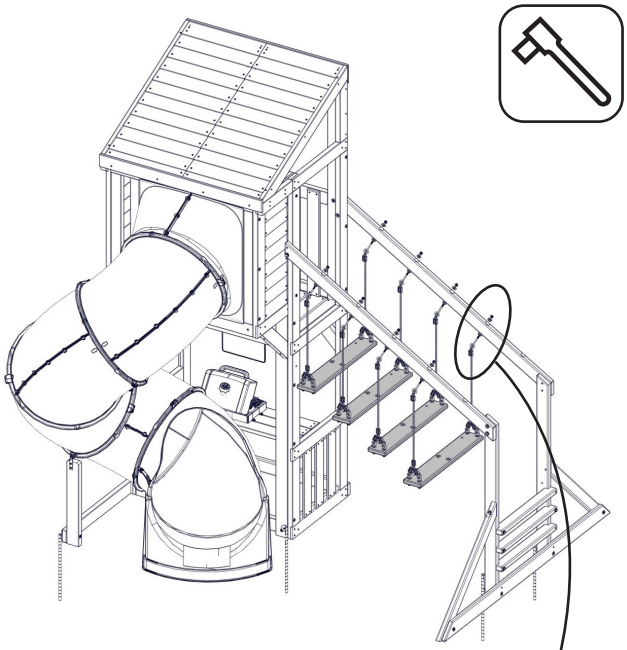

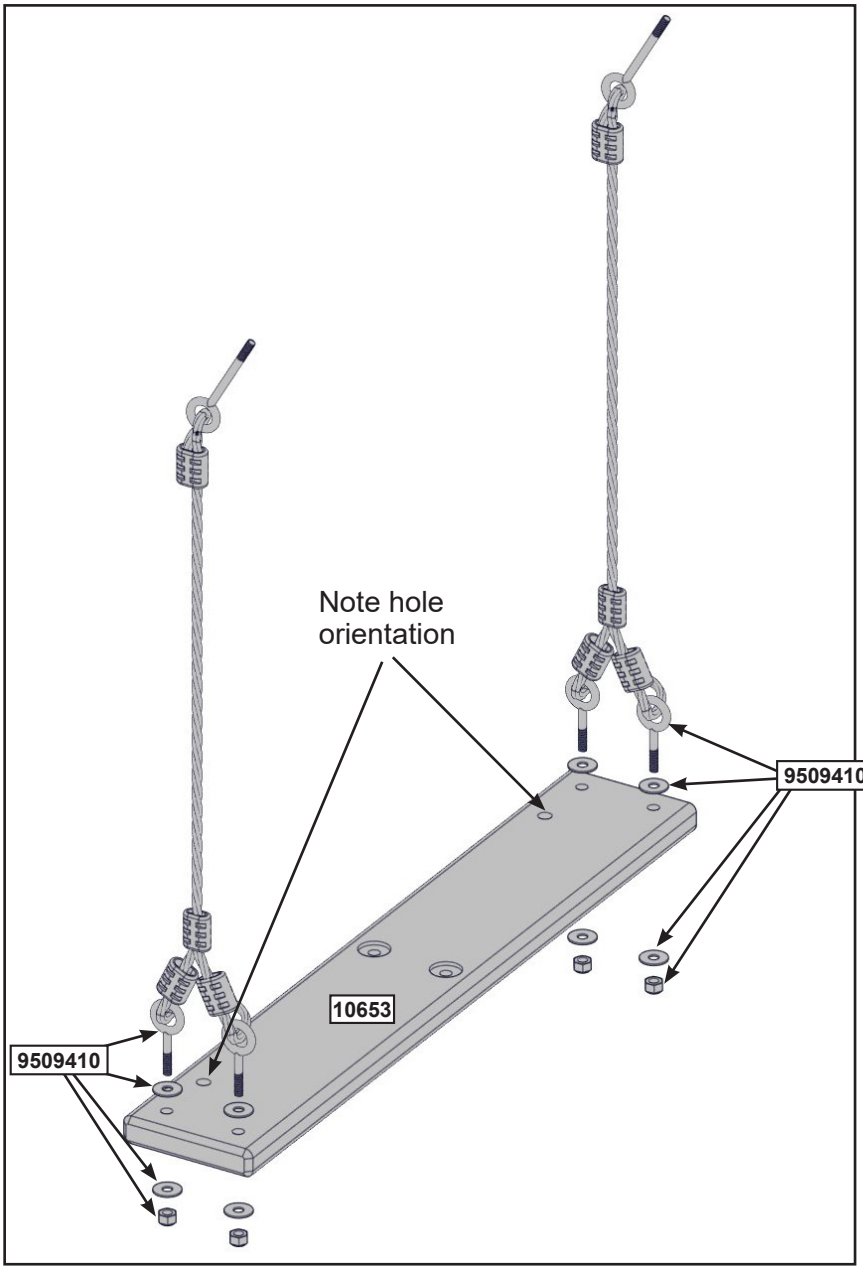

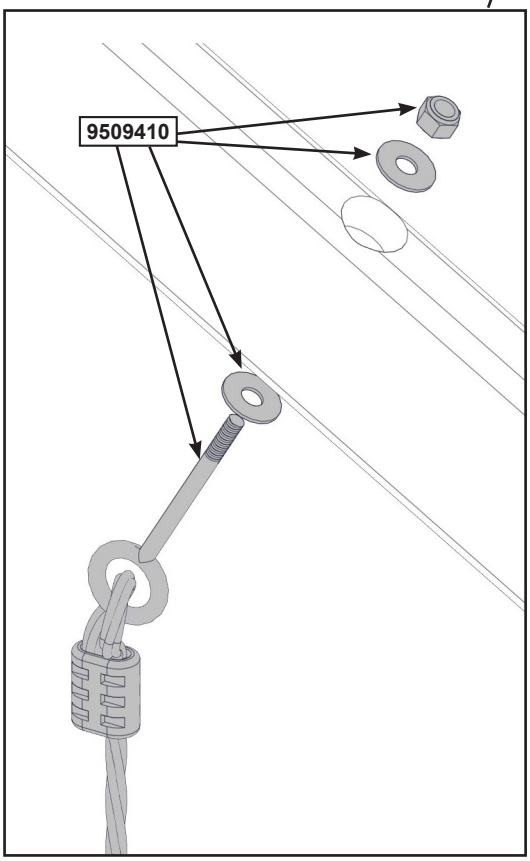


Wood Parts


4 x 10653 31.8 x 114.3 x 658.2 mm (15/16 x 4 1/2 x 25 15/16 in)

Other Parts

8 x 9509410

147

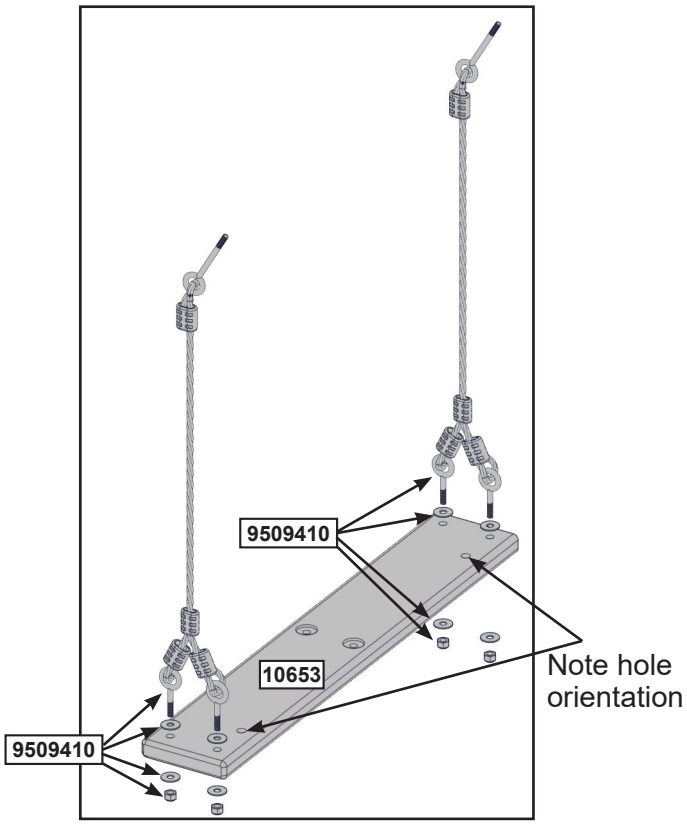

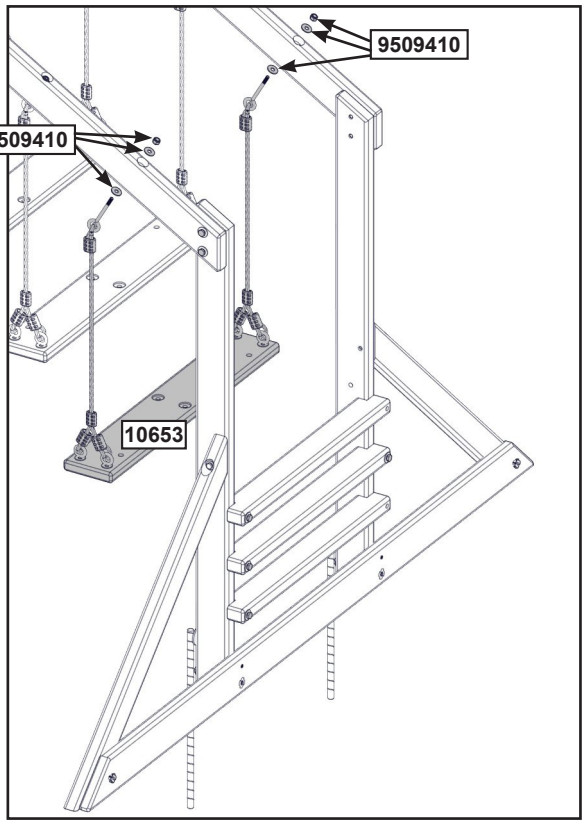

Wood Parts

1 x 10653 31.8 x 114.3 x 658.2 mm (15/16 x 4 1/2 x 25 15/16 in)


Other Parts


2 x 9509410

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

148

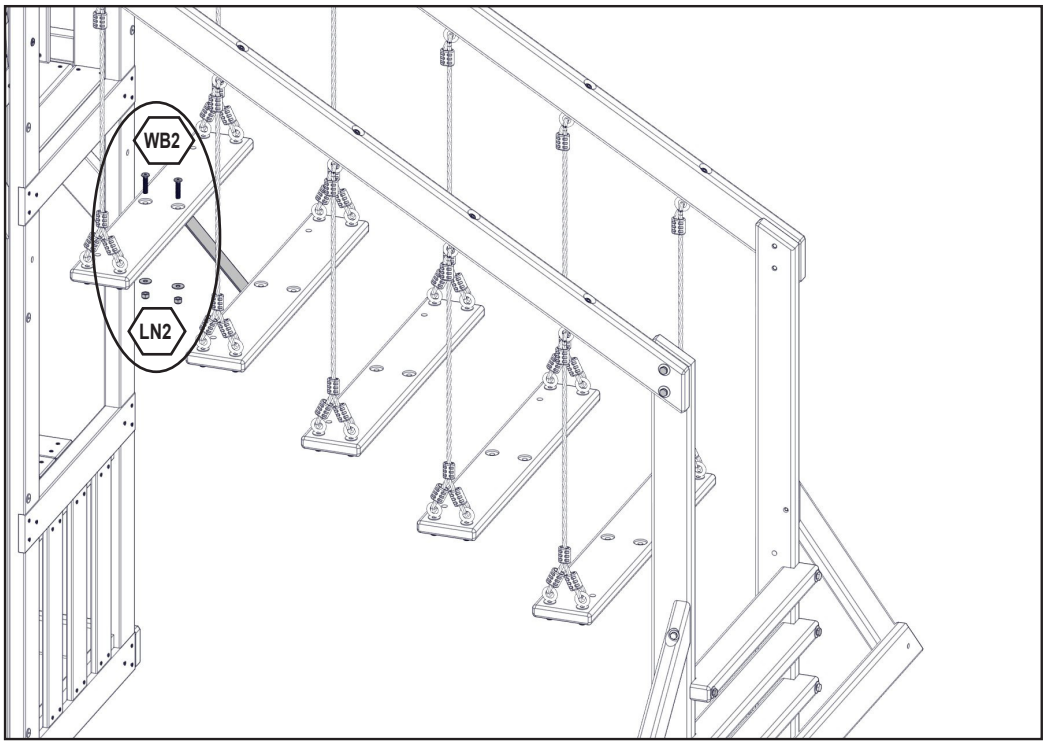

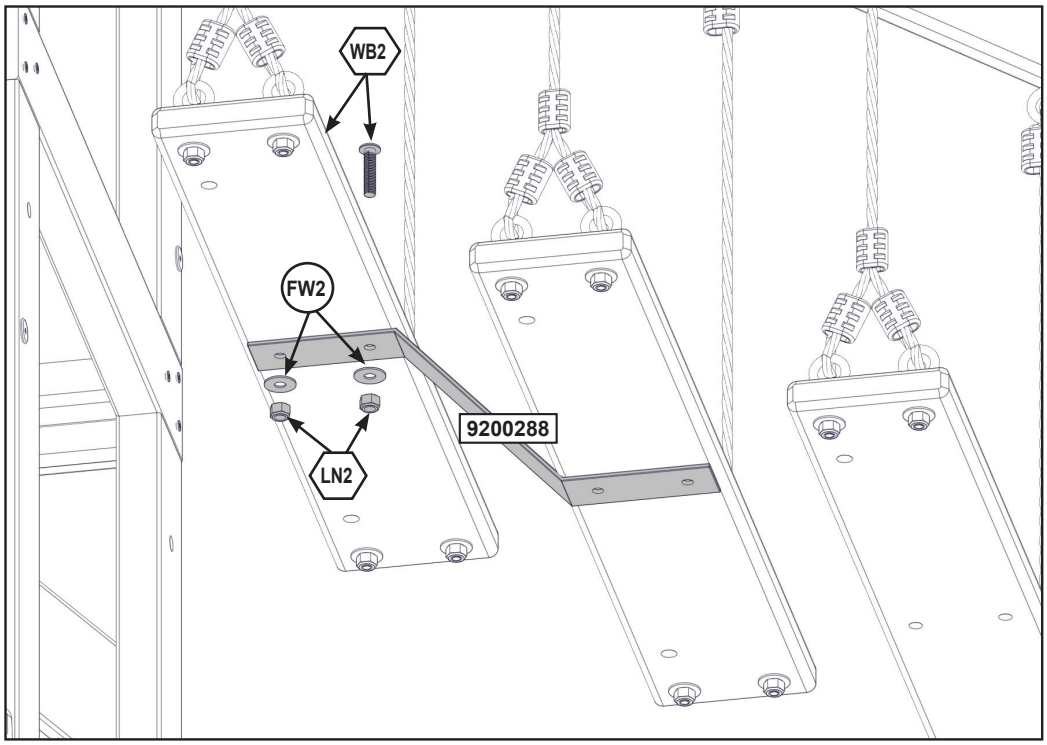


Hardware


2 x WB2 7.9mm x 34.9 mm (5/16 x 1-3/8 in)(FW2, LN2)

Other Parts

1 x 9200288

149

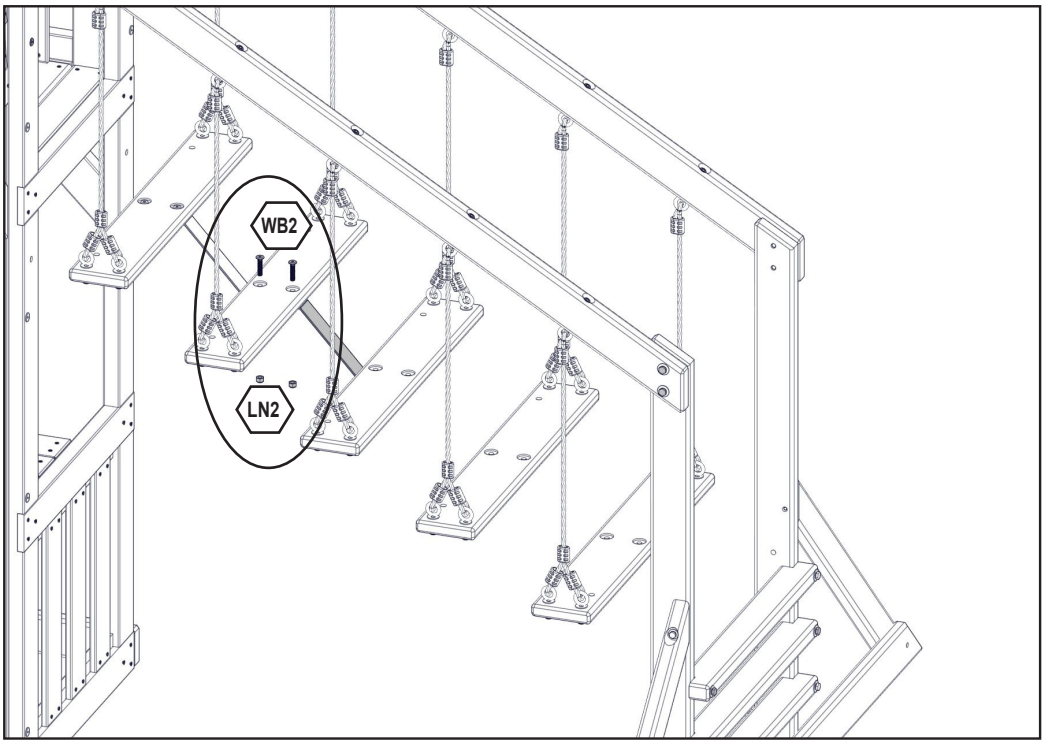

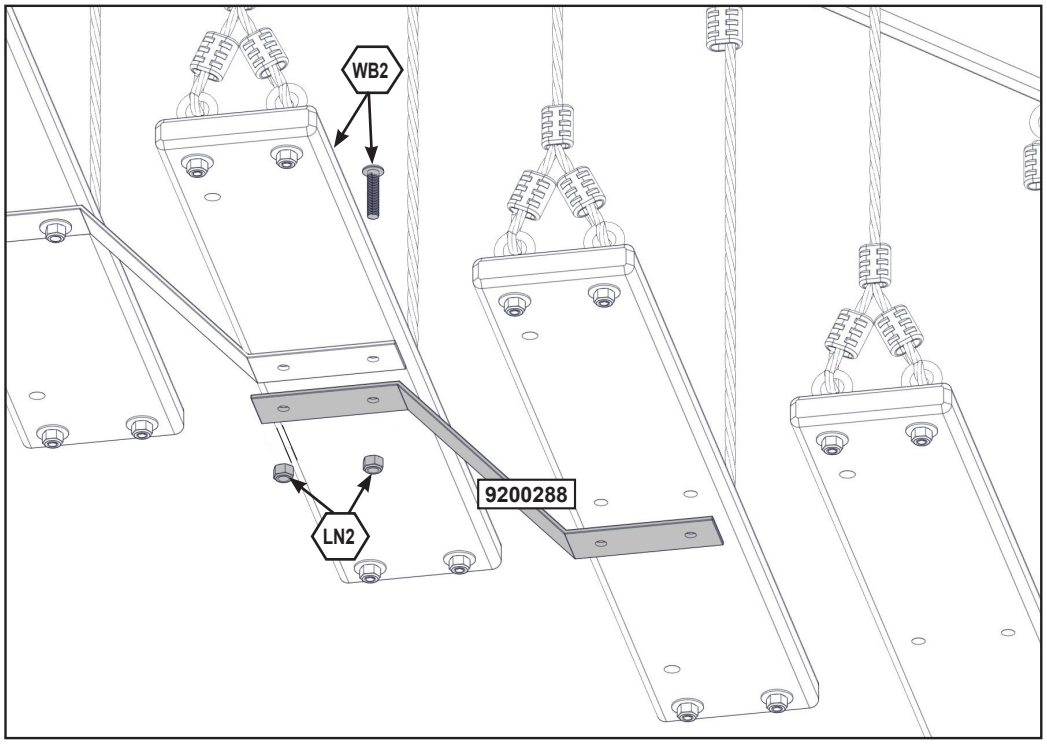


Hardware


2 x WB2 7.9mm x 34.9 mm (5/16 x 1-3/8 in)(LN2)

Other Parts

1 x 9200288

150

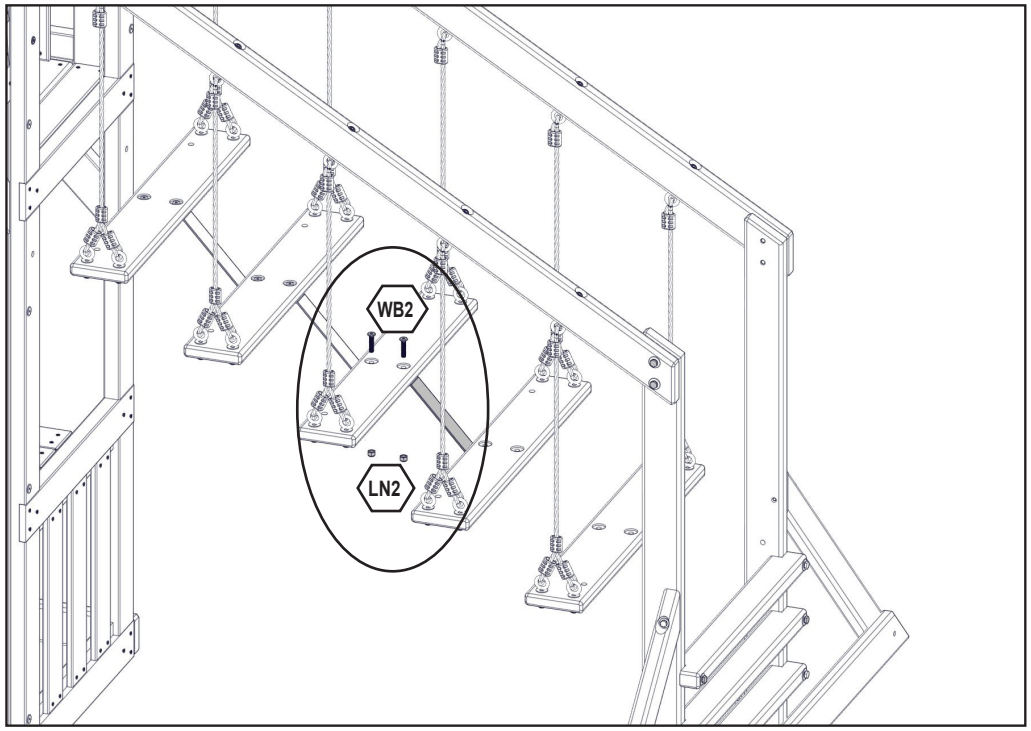

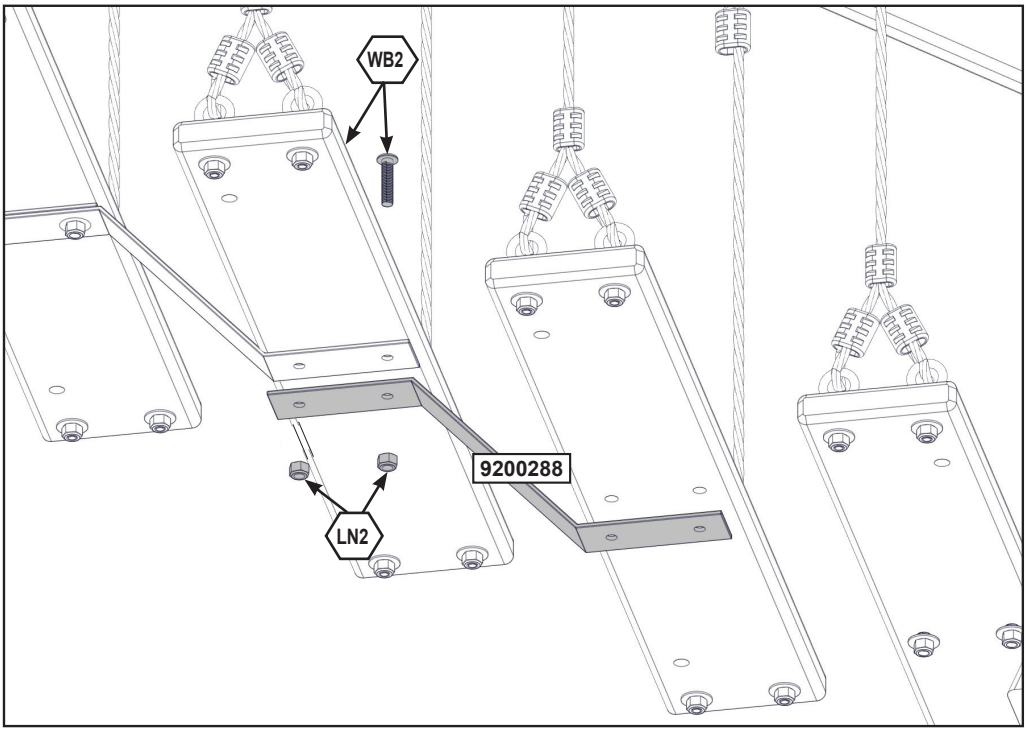


Hardware


2 x WB2 7.9mm x 34.9 mm (5/16 x 1-3/8 in)(LN2)

Other Parts

1 x 9200288

151

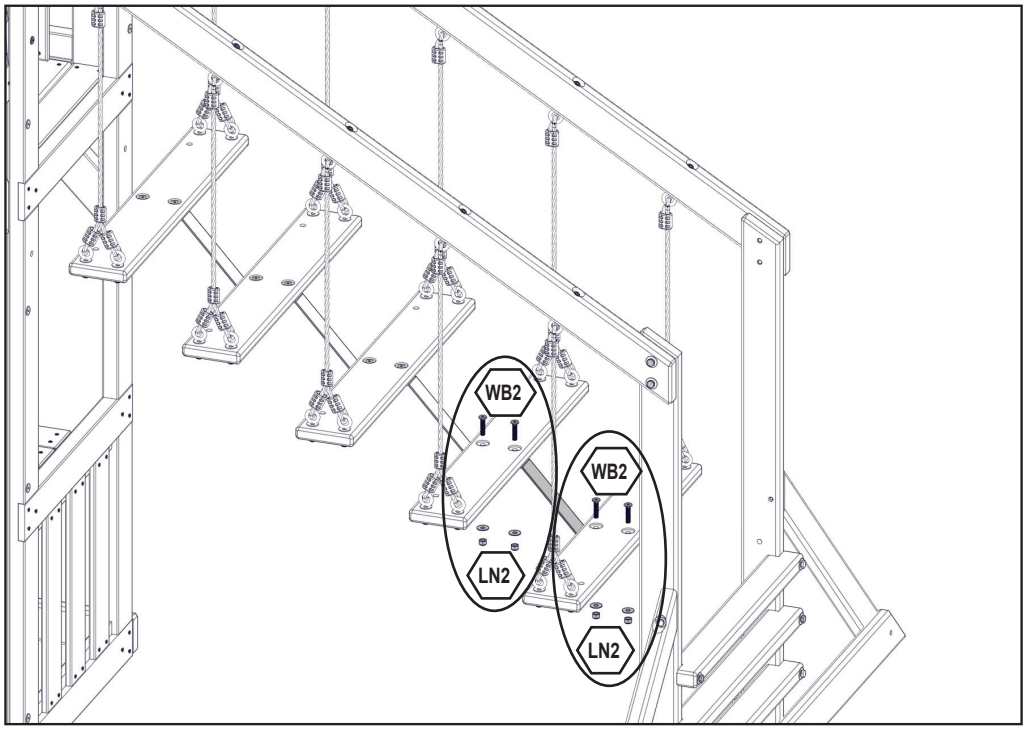

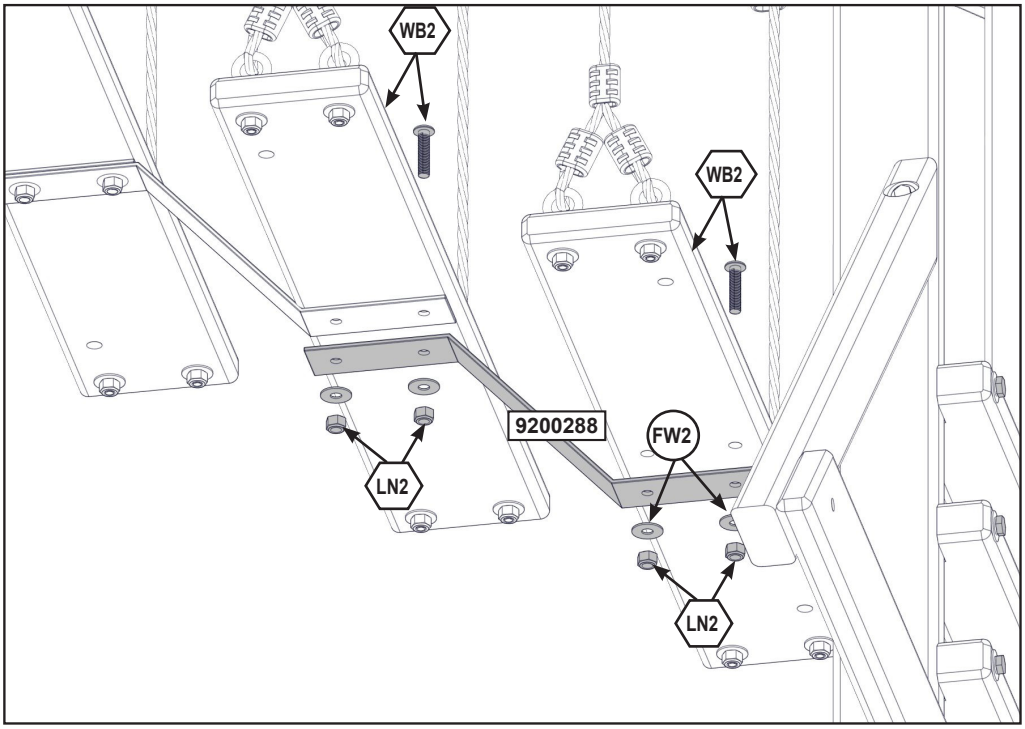

Hardware

4 x WB2 7.9mm x 34.9 mm (5/16 x 1-3/8 in)(FW2, LN2)


Other Parts

1 x 9200288


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu

152

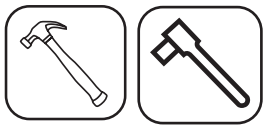

T-Nuts assembled in step 71

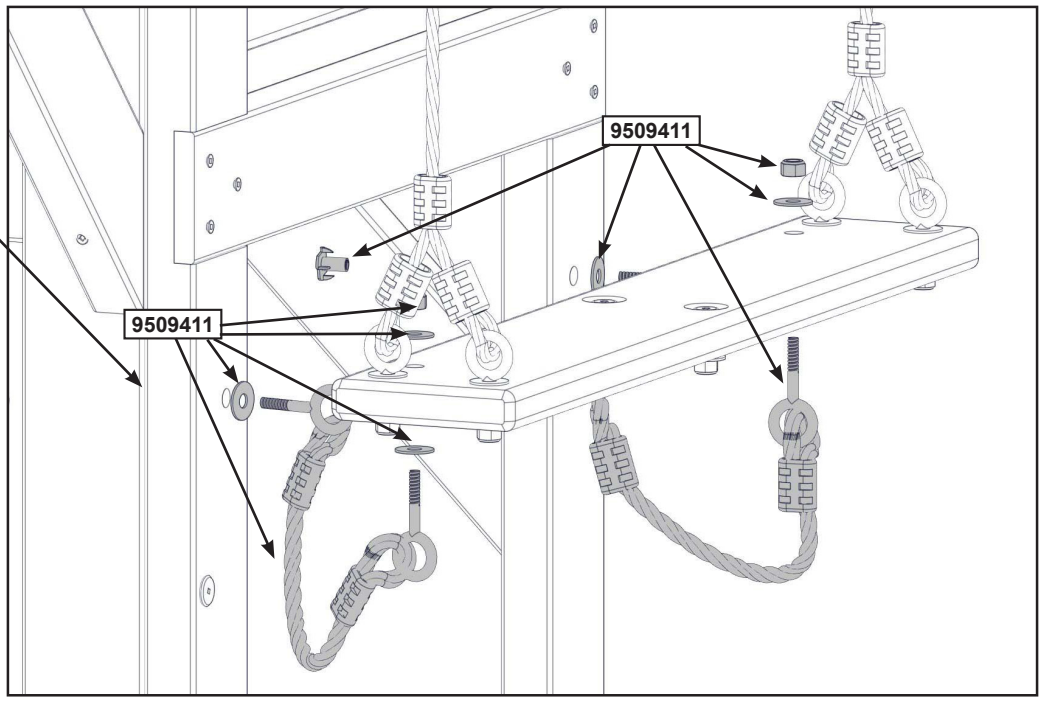


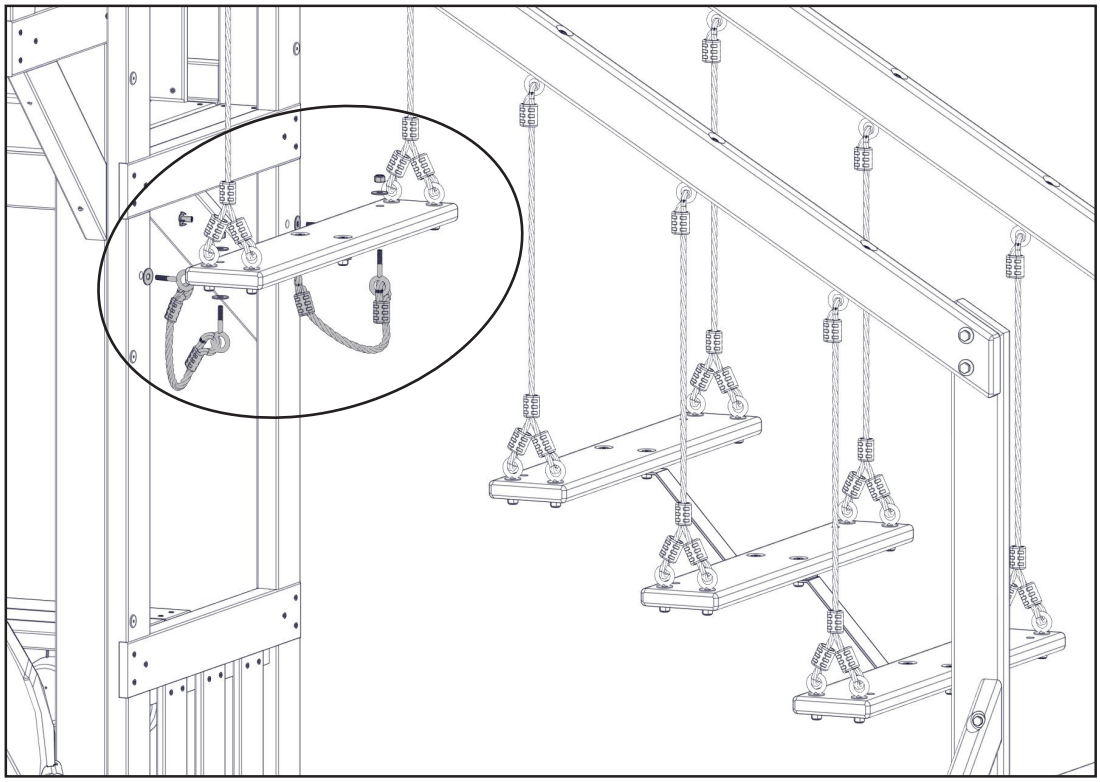

Other Parts

2 x 9509411

153

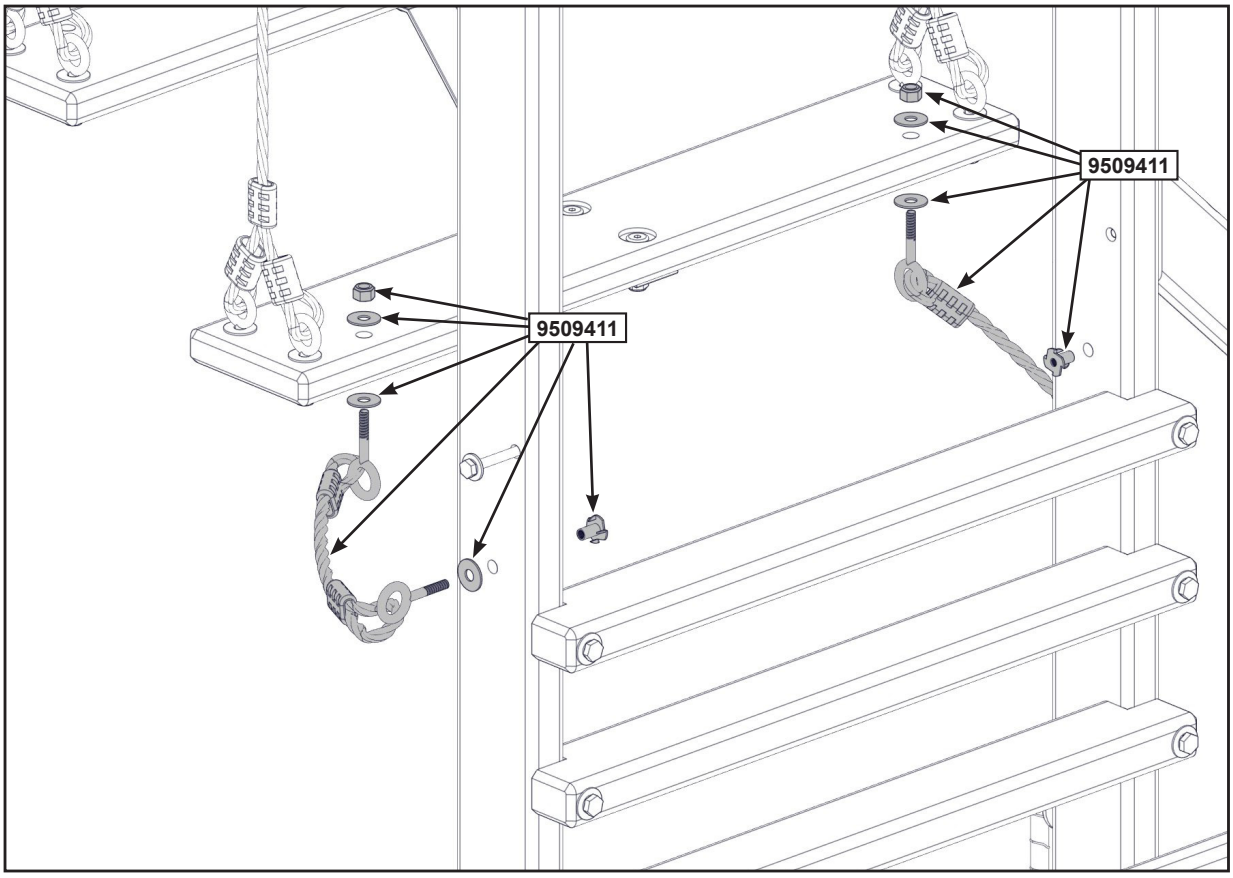

Other Parts

2 x 9509411


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu

154 Swing Beam Assembly



Assemble T-Nuts first with hammer!

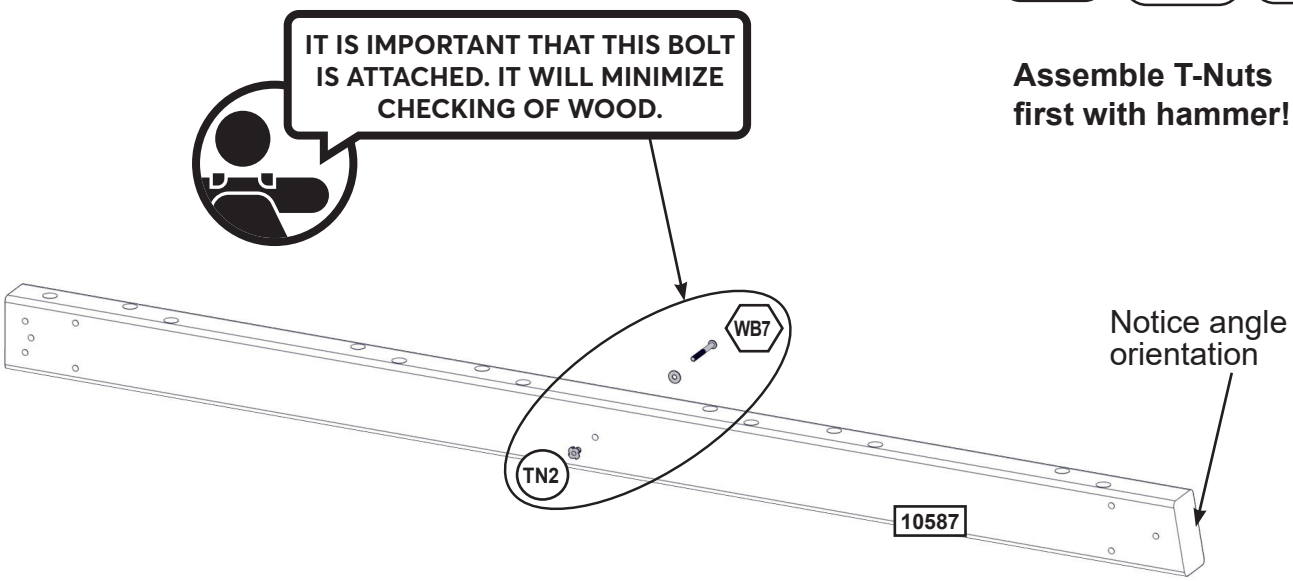

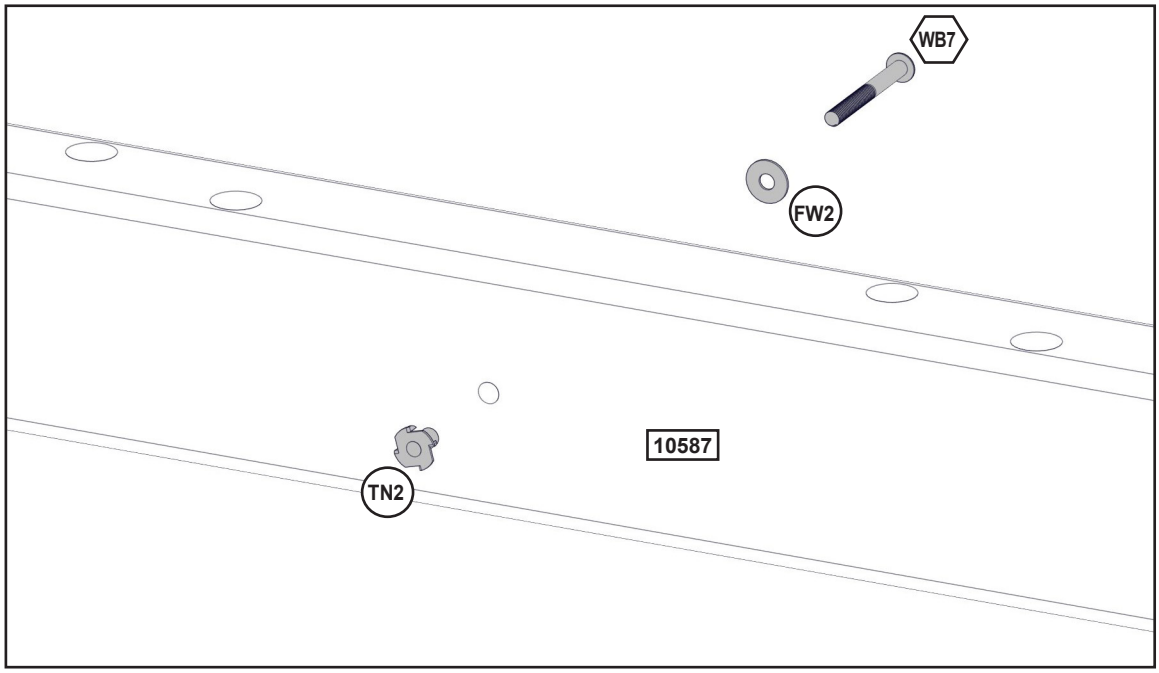


Wood Parts


1 x 10587 76.2 x 133.4 x 2235.2 mm (3 x 5 1/4 x 88 in)


Hardware

1 x WB7 7.9mm x 76.2mm (5/16 x3 in)(FW2 , TN2)

155

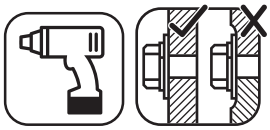

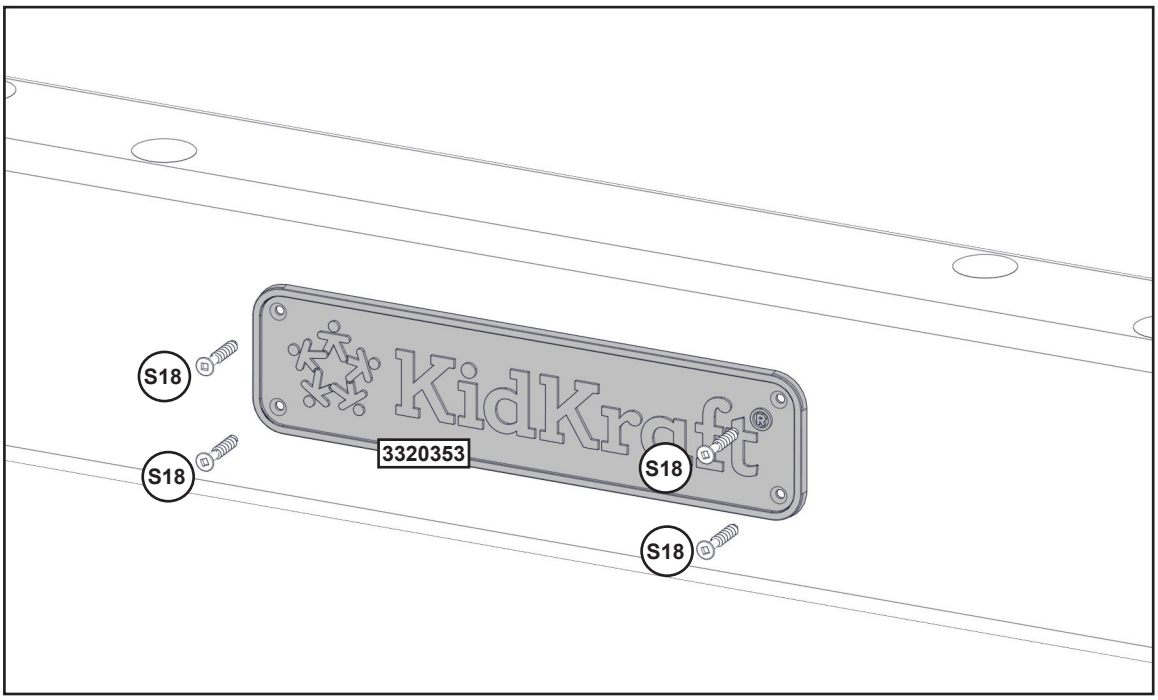

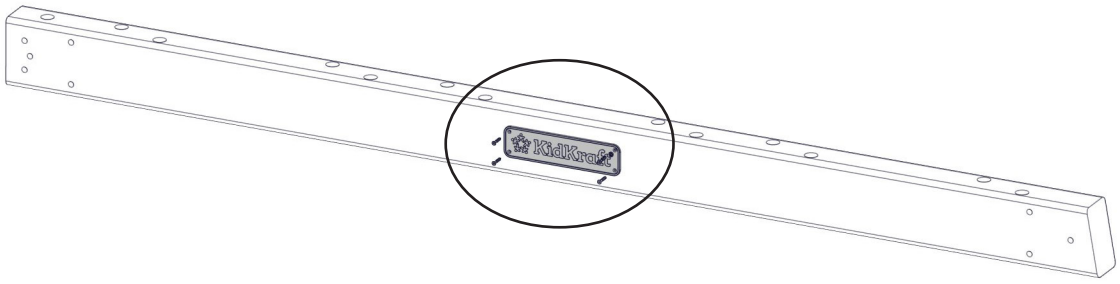

Hardware

4 x S18 #6 x 25.4mm (#6 x 1 in)


Other Parts

1 x 3320353


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

156

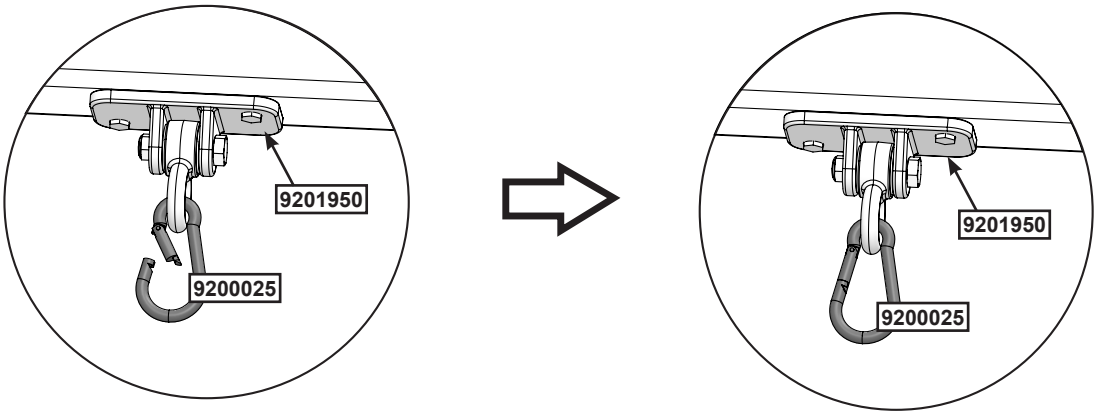

Caution: The Spring Loaded Quick Link must be attached to the Heavy Duty Swing Hanger in the closed position.

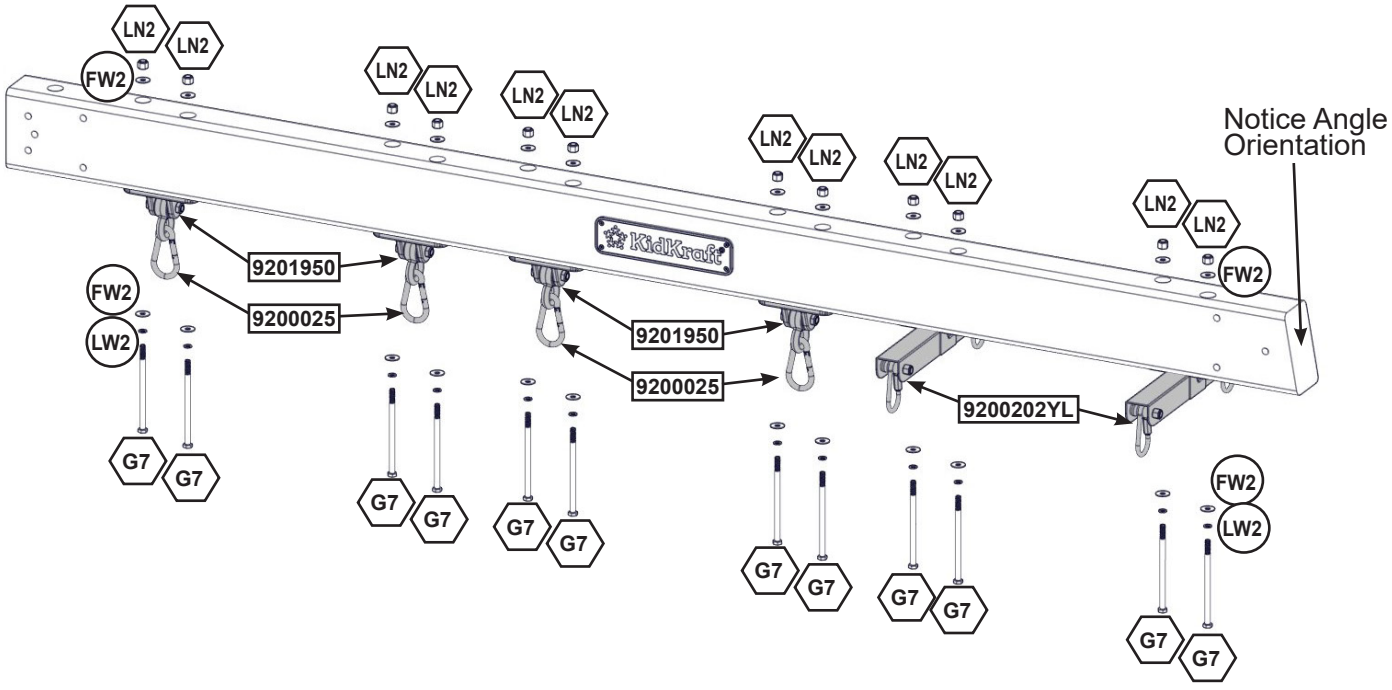

Hardware

12 x G7 7.9mm x 139.7 mm (5/16 x 5-1/2 in) (LN2, FW2 x 2, LW2)


Other Parts


2 x	9200202YL
4 x	9201950
4 x	9200025

157



Assemble T-Nuts first with hammer!

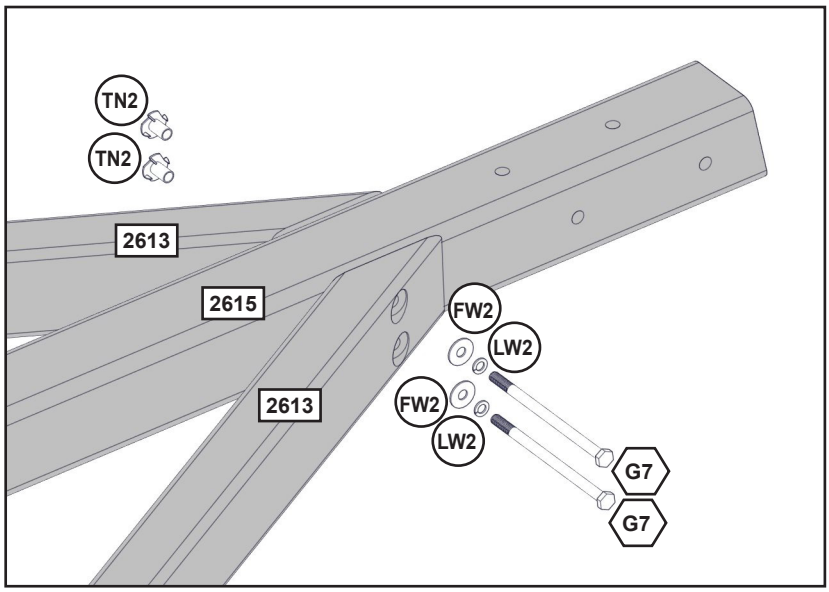

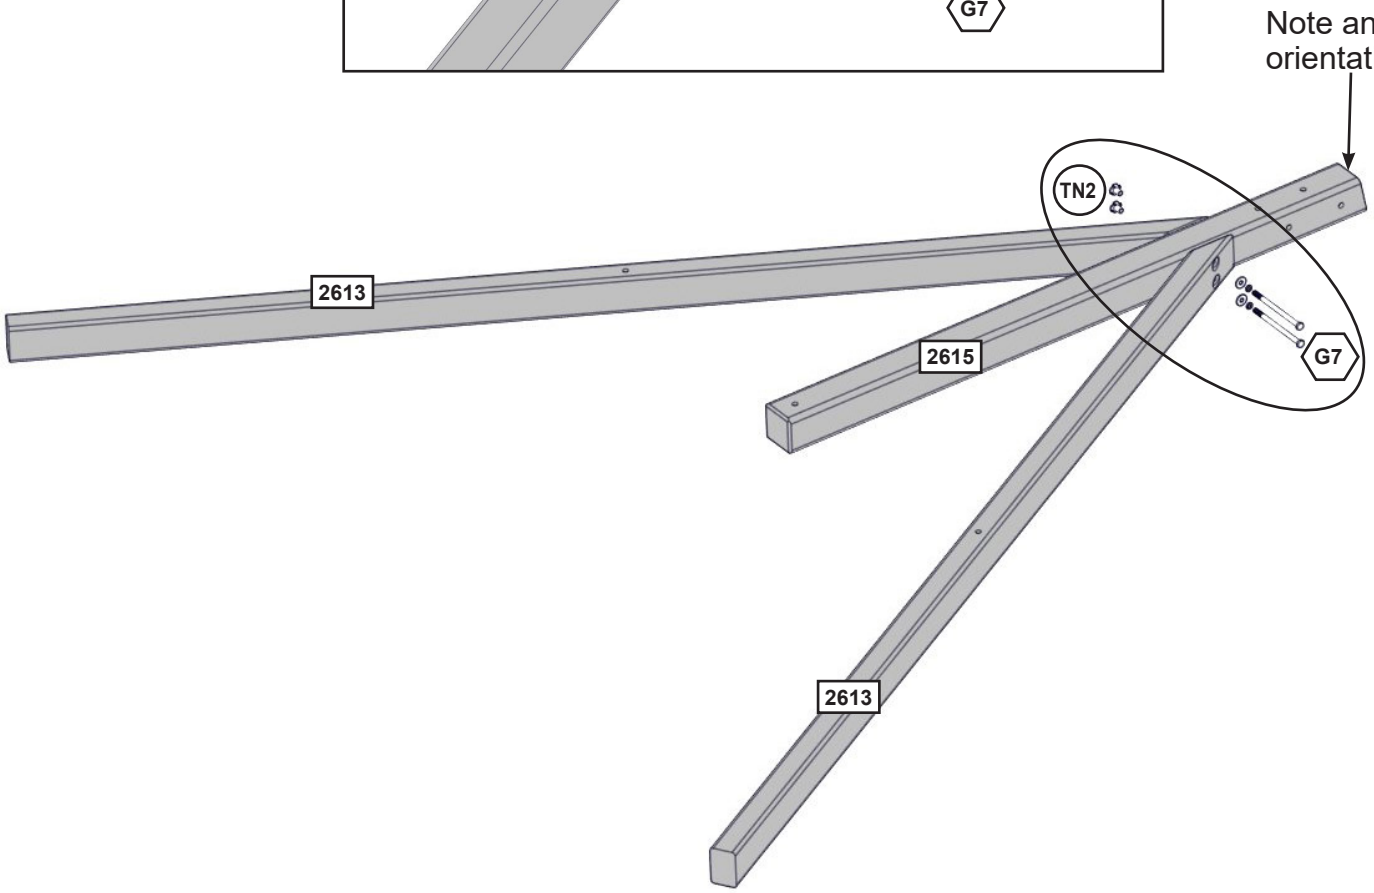

Wood Parts

2 x 2613 **50.8 x 76.2 x 2201.9 mm (2 x 3 x 86 11/16 in)**
1 x 2615 **76.2 x 76.2 x 1294.3 mm (3 x 3 x 50 15/16 in)**


Hardware


2 x G7 **7.9 x 139.7 mm (5/16 x 5-1/2 in) (LW2, FW2, TN2)**

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

158

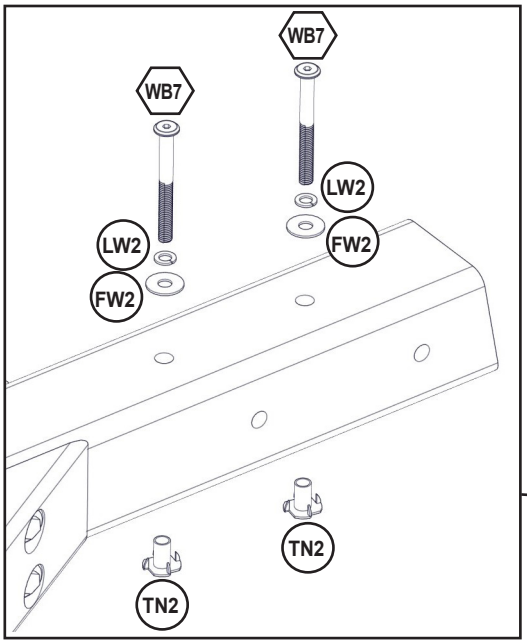


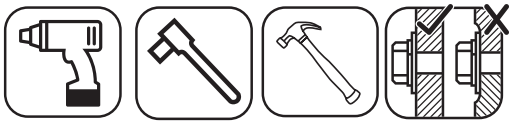

Assemble T-Nuts first with hammer!



IT IS IMPORTANT THAT THIS BOLT IS ATTACHED. IT WILL MINIMIZE CHECKING OF WOOD.

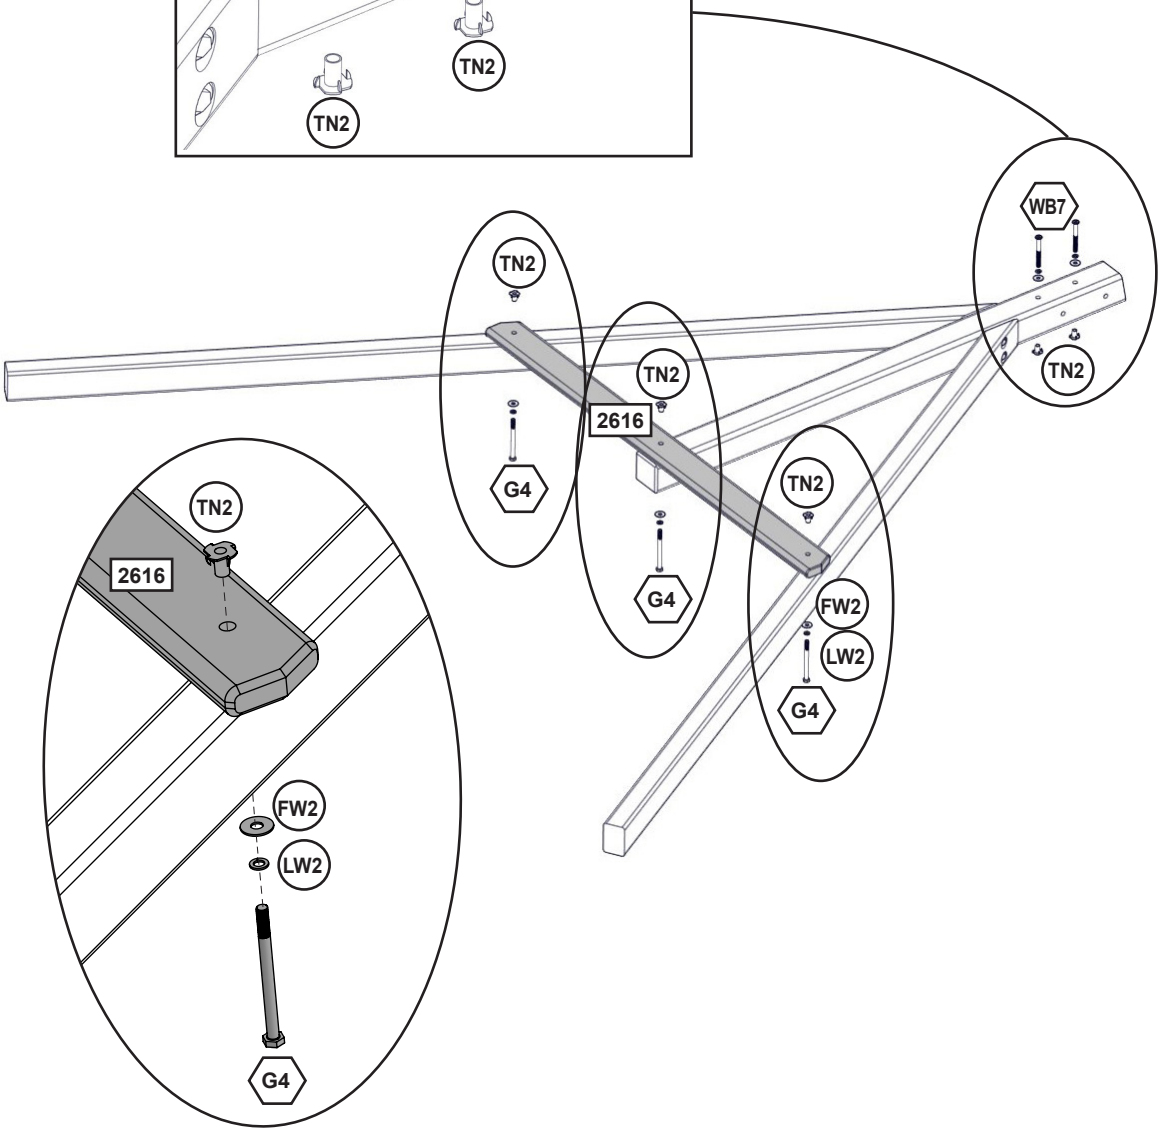

Wood Parts

1 x 2616 23.8 x 82.6 x 1181.1 mm (15/16 x 3 1/4 x 46 1/2 in)


Hardware

3 x G4 7.9mm x 101.6mm (5/16 x 4 in) (LW2, FW2, TN2)

2 x WB7 7.9mm x 76.2mm (5/16 x 3 in) (LW2, FW2, TN2)

159



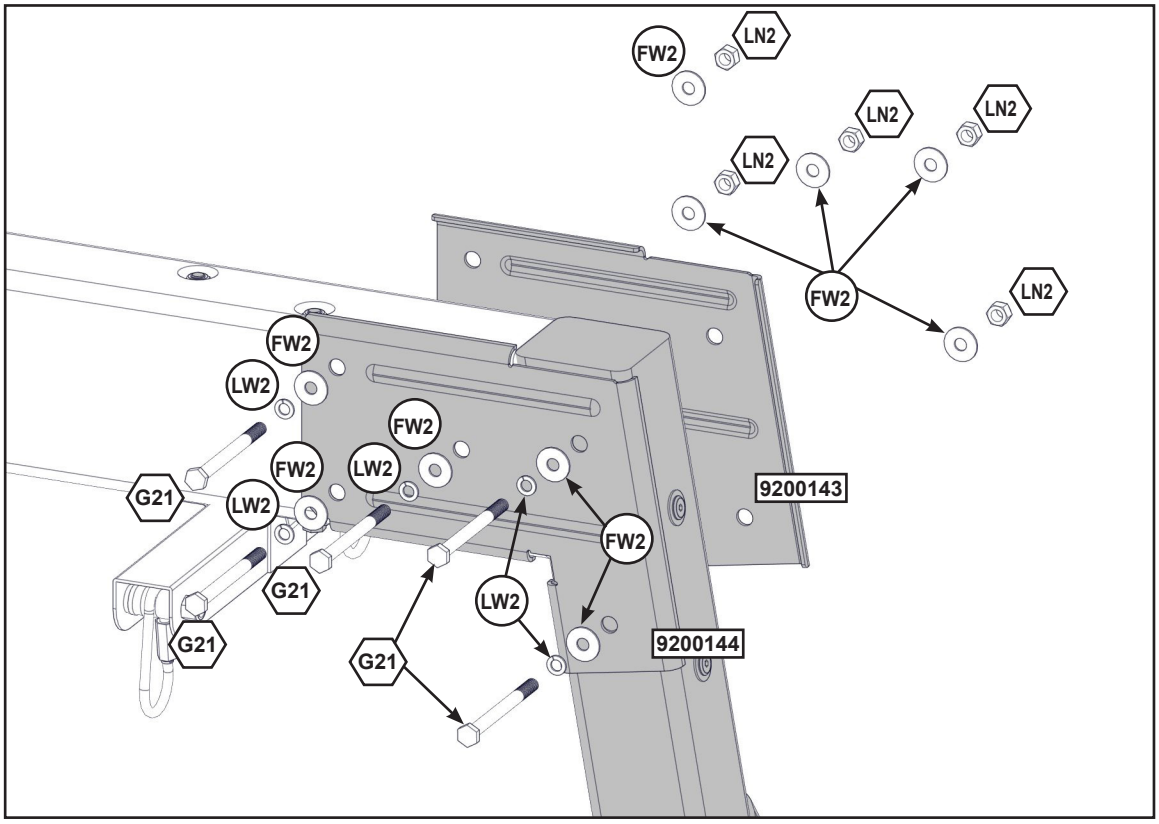

Hardware

5 x G21 7.9mm x 95.2 mm (5/16 x 3-3/4 in) (FW2 x 2, LW2, LN2)


Other Parts

1 x 9200144

1 x 9200143

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

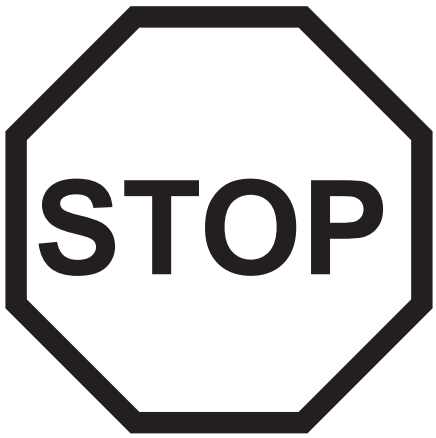


Option 1
Attached Swing Beam Configuration


Pages 187 - 191

Option 2
Separate Swing Beam Configuration

Pages 193 - 197

160

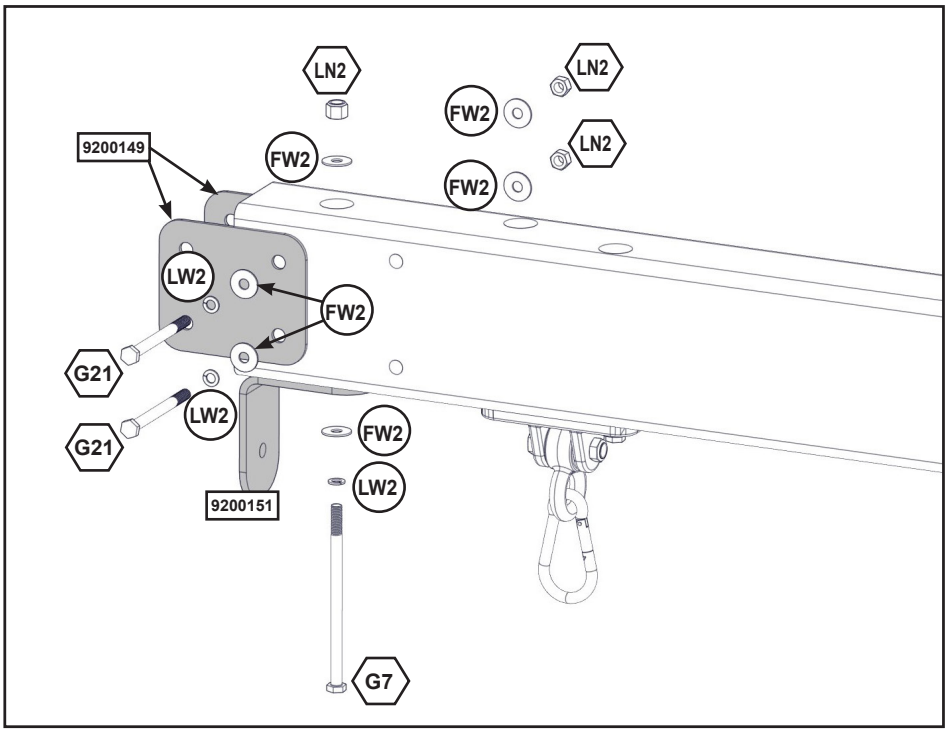

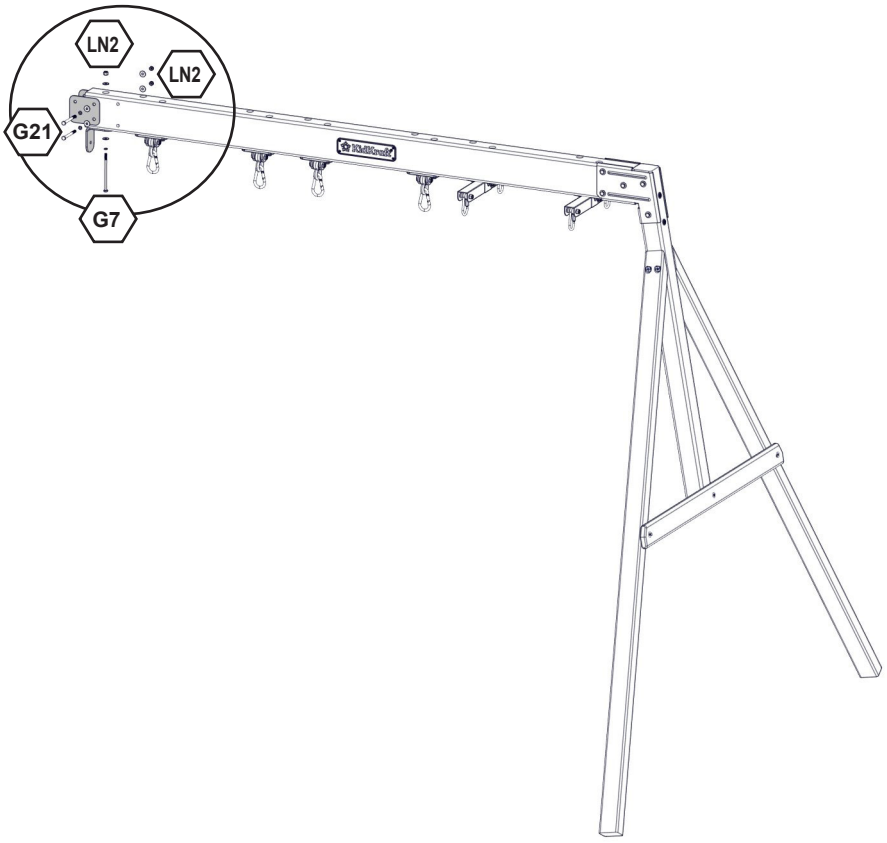


Hardware	Other Parts
2 x G21 7.9mm x 95 mm (5/16 x 3-3/4 in) (LN2, 2 x FW2, LW2)	2 x 9200149
1 x G7 7.9mm x 139.7 mm (5/16 x 5-1/2 in) (LN2, 2 x FW2, LW2)	1 x 9200151


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

161

Assemble T-Nuts first with hammer!

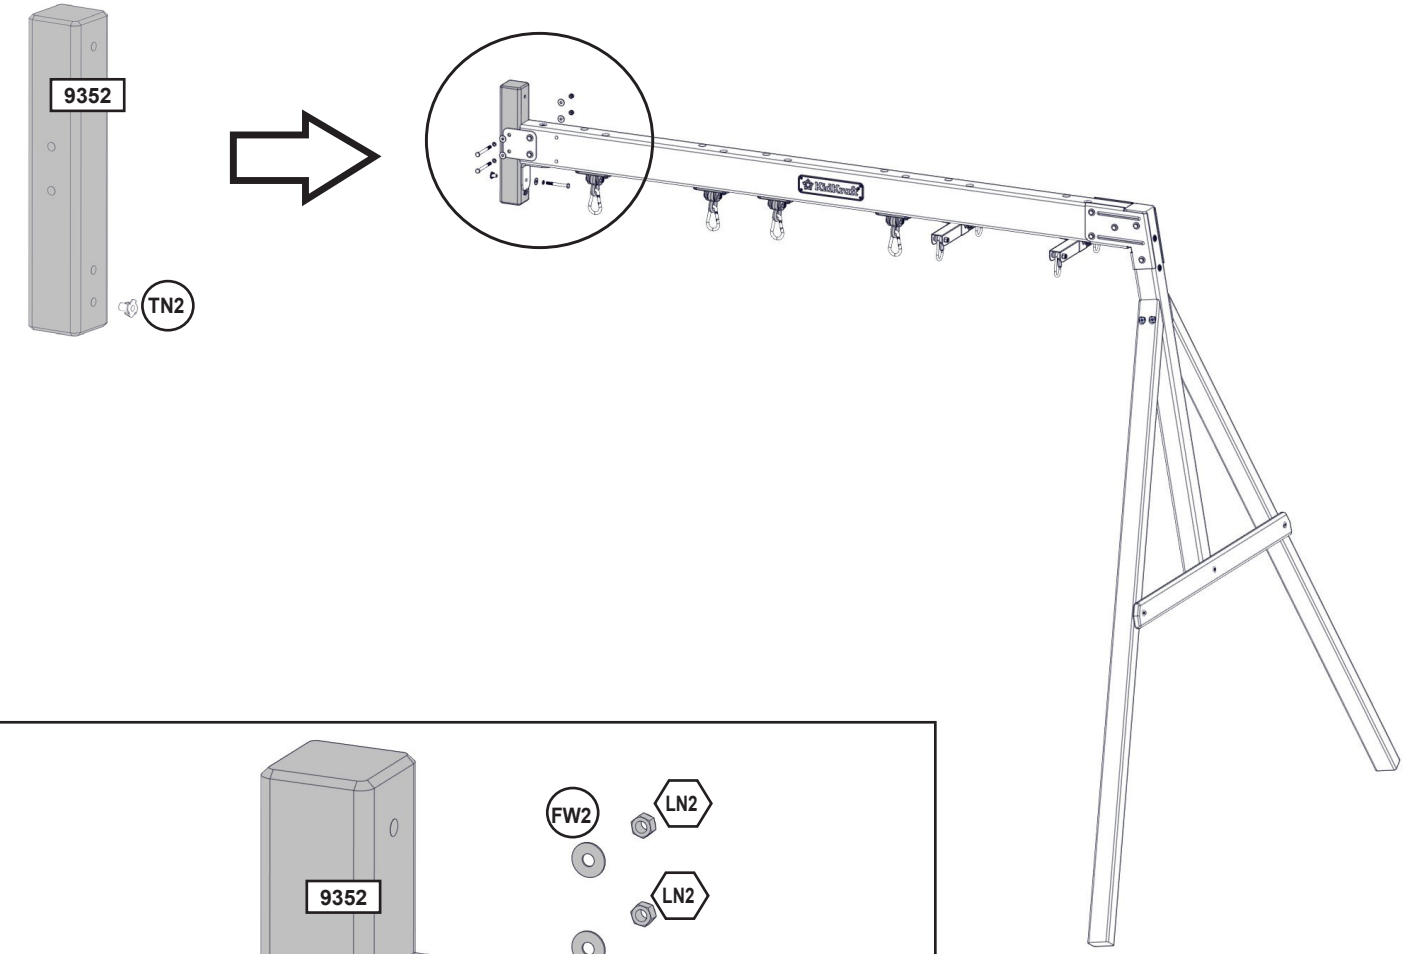

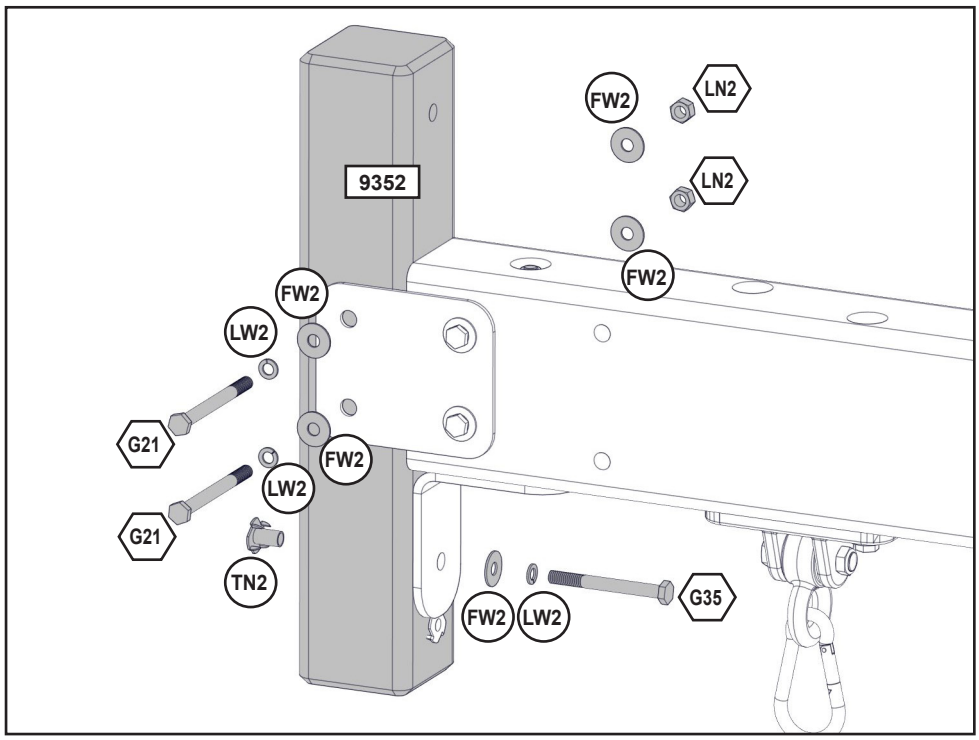

Wood Parts

1 x 9352 76.2 x 76.2 x 406.4 mm (4 x 4 x 16 in)


Hardware


1 x G35 7.9mm x 82.6 mm (5/16 x 3-1/4 in) (FW2 , LW2, TN2)

2 x G21 7.9mm x 95 mm (5/16 x 3-3/4 in) (2 x FW2, LW2, LN2)

1 x TN2


162

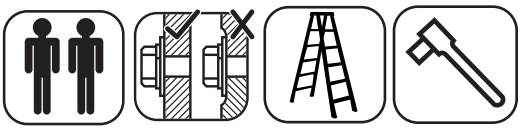

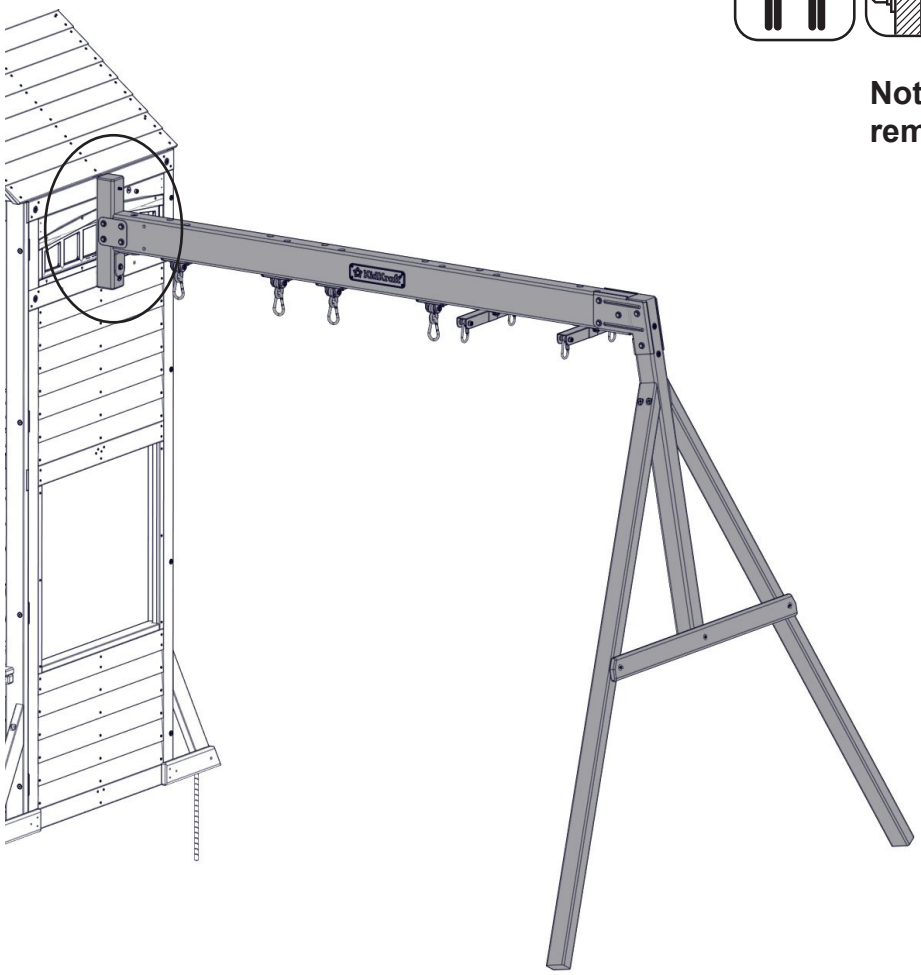


Note: Structure partly removed for clarity.

Outside View

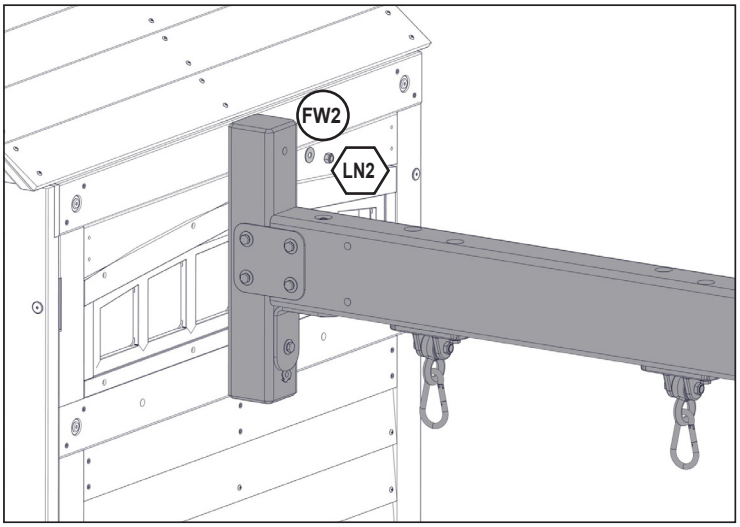

Inside View

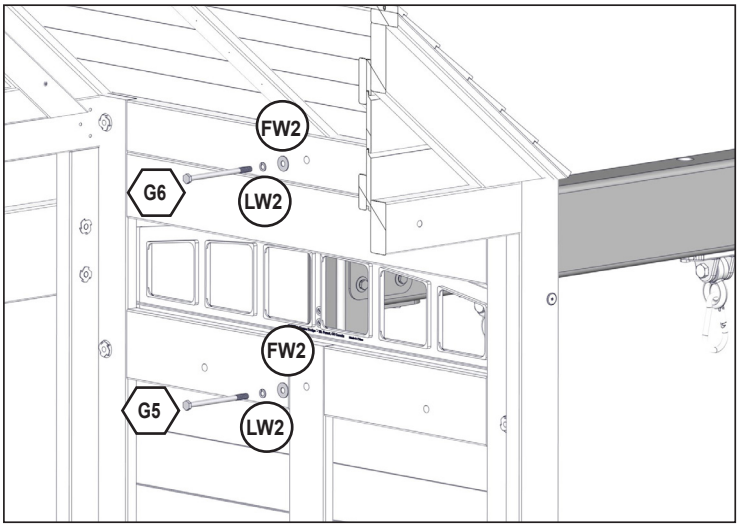

Hardware


1 x G6 7.9mm x 120.6 mm (5/16 x 4-3/4 in) (LW2, FW2 x 2, LN2)

1 x G5 7.9mm x 114.3mm (5/16 x 4-1/2 in)(LW2,FW2)


europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

163

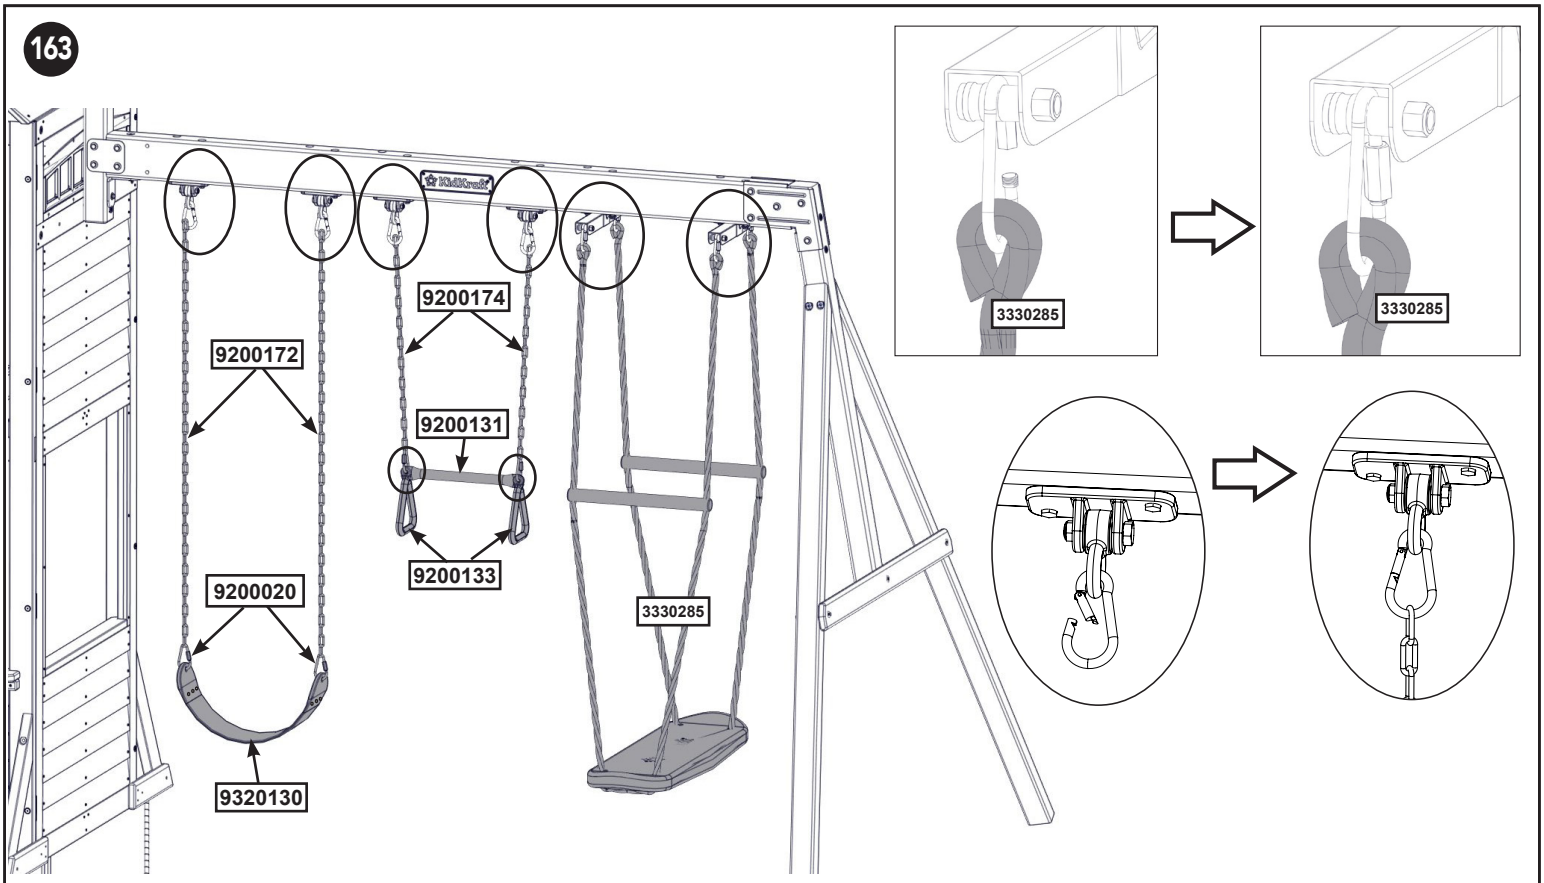



Caution: Threaded Quick Links must be installed with the gate completely down covering the threads and tighten as instructed.

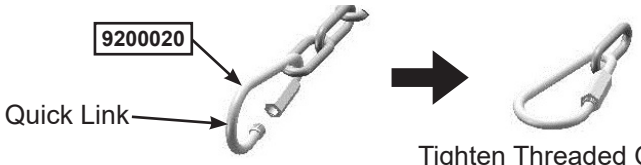

Threaded Quick Links attach to seat.

Tighten Threaded Quick Link using adjustable wrench

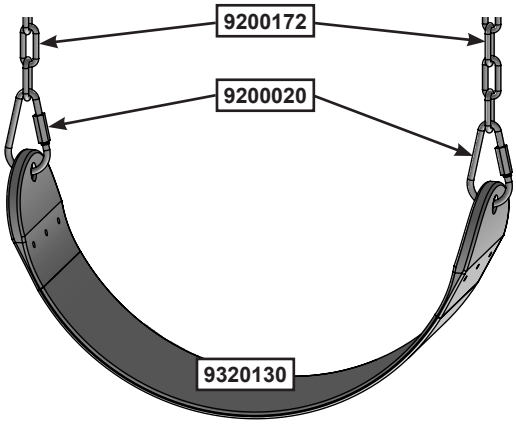


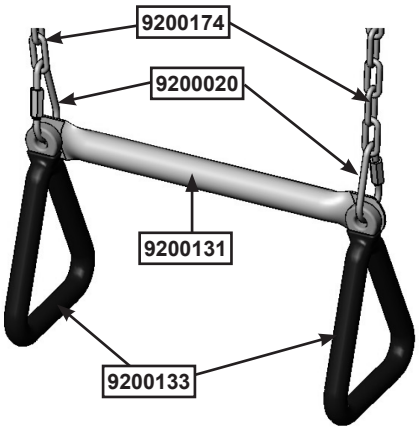

Other Parts

2 x 9200172	2 x 9200133	1 x 3330285
2 x 9200174	1 x 9320130	
1 x 9200131	4 x 9200020	

164

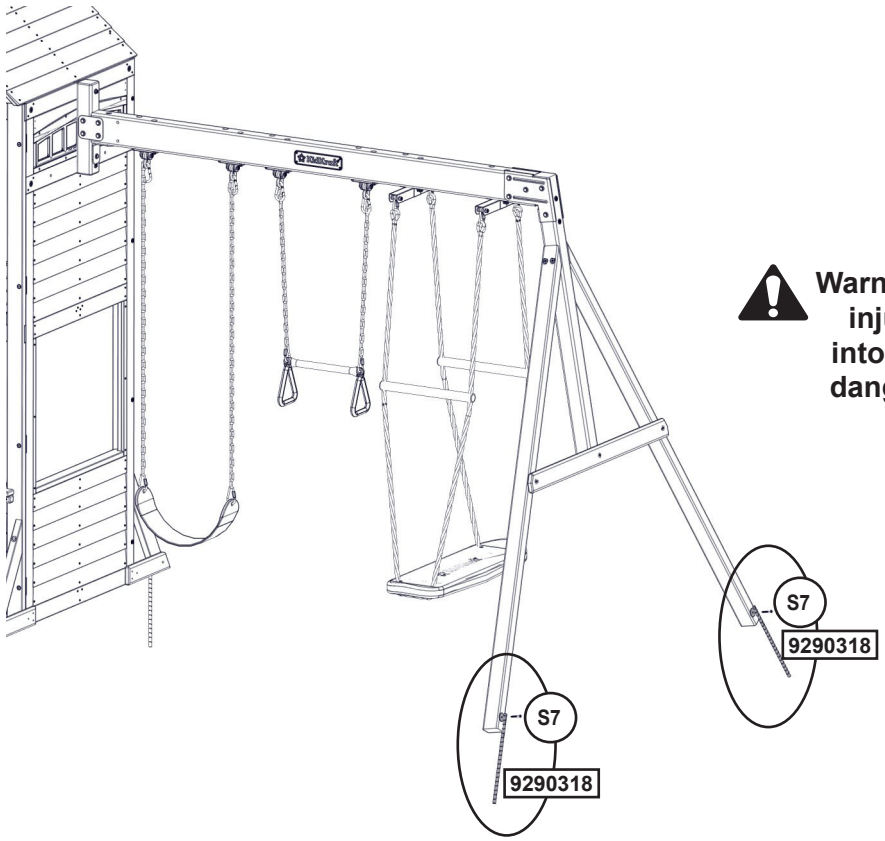

Warning! To prevent tipping and avoid potential injury, stakes must be driven 13 in(330mm) into ground. Digging or driving stakes can be dangerous if you do not check first for underground wiring, cables or gas lines.



Hardware


2 x (S7) #12 x 50.8mm (#12 x 2 in)

Other Parts

2 x 9290318

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

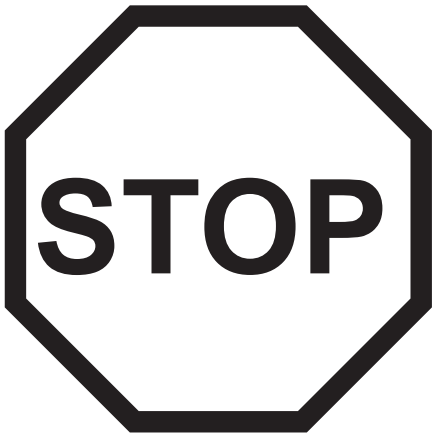



Option 2
Separate Swing Beam Configuration

Pages 193 - 197

165

Assemble T-Nuts first with hammer!

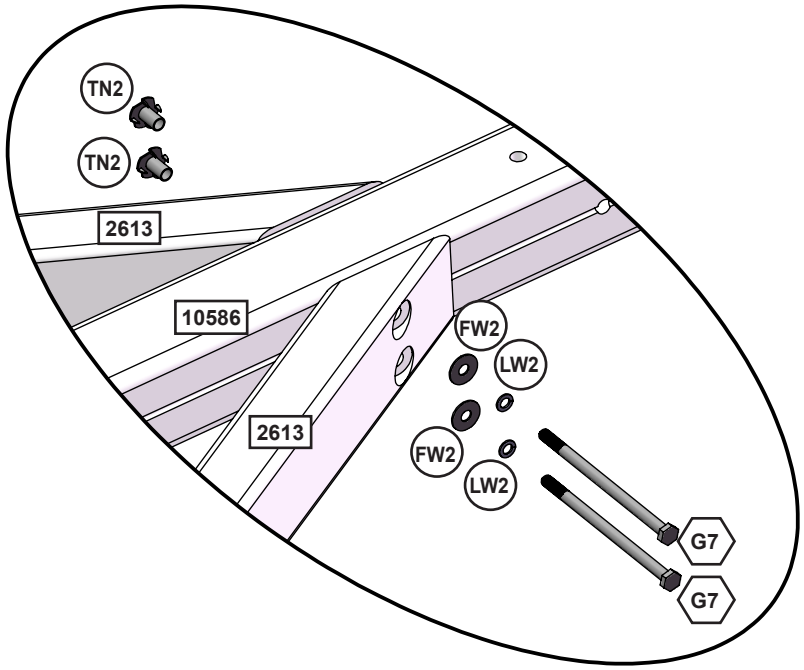

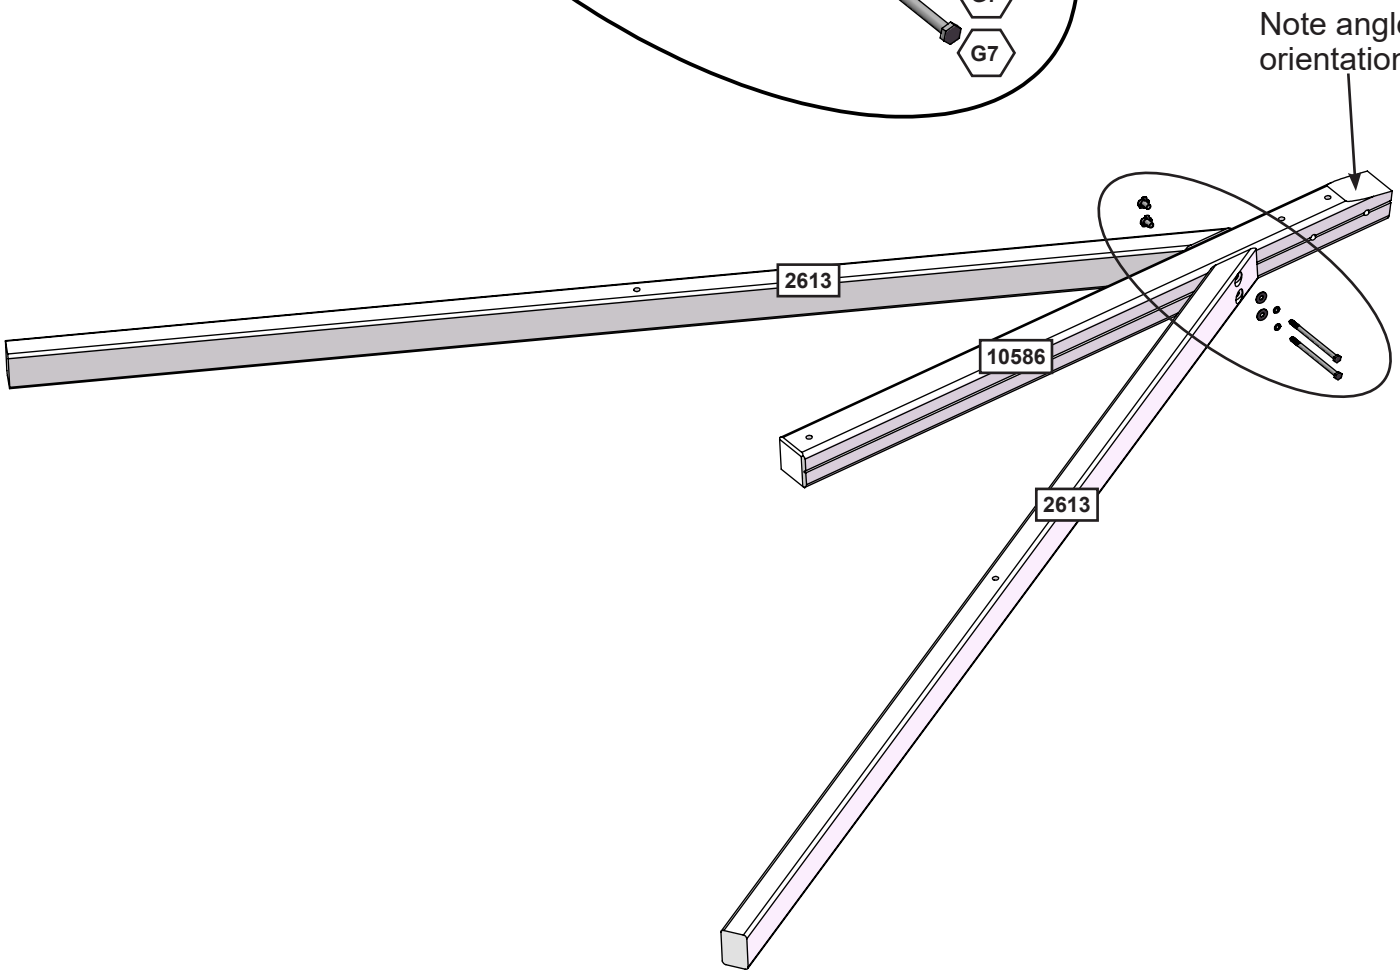

Wood Parts

2 x 2613 50.8 x 76.2 x 2201.9 mm (2 x 3 x 86 11/16 in)
1 x 10586 76.2 x 76.2 x 1294.3 mm (3 x 3 x 50 15/16 in)

Hardware

2 x G7 7.9 x 139.7 mm (5/16 x 5-1/2 in) (LW2, FW2, TN2)

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu

166

Assemble T-Nuts first with hammer!



IT IS IMPORTANT THAT THESE BOLTS ARE ATTACHED. THEY WILL MINIMIZE CHECKING OF WOOD.

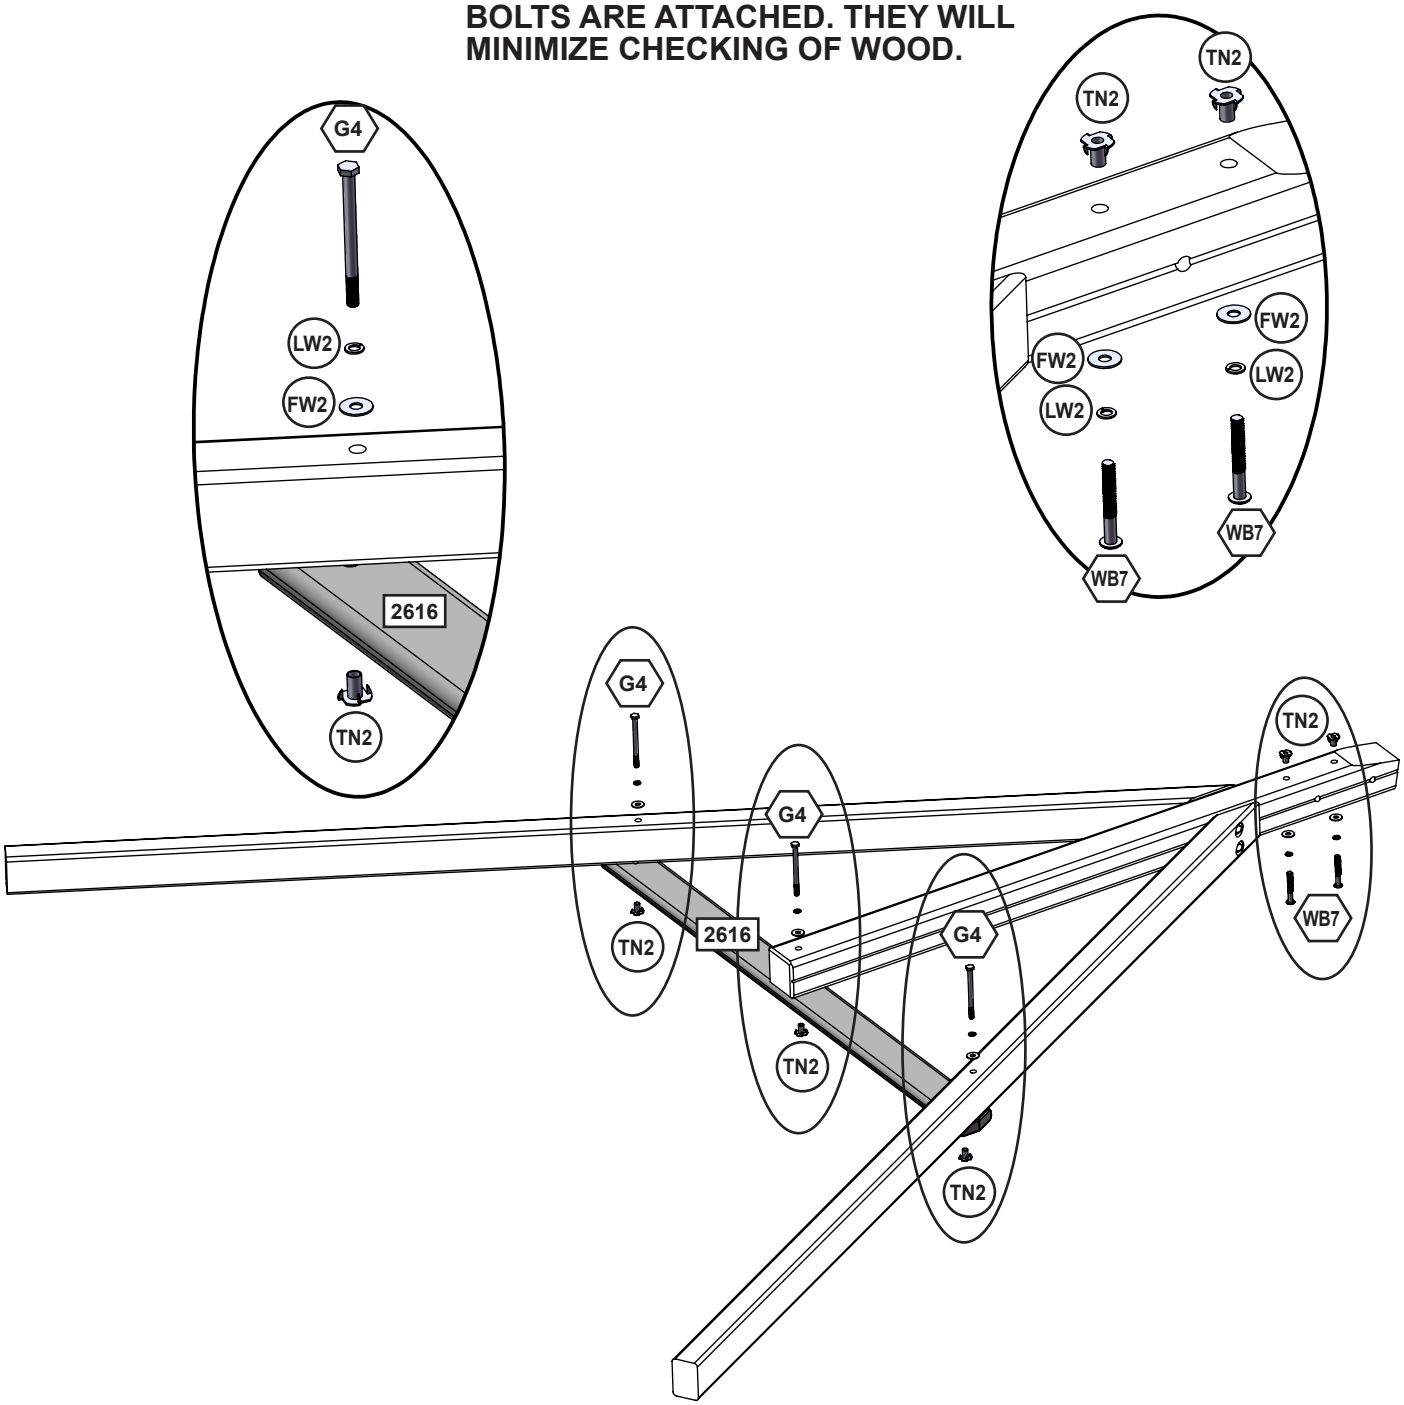

Wood Parts


1 x 2616 23.8 x 82.6 x 1181.1 mm (15/16 x 3 1/4 x 46 1/2 in)


Hardware

3 x G4 7.9mm x 101.6mm (5/16 x 4 in) (LW2, FW2, TN2)

2 x WB7 7.9mm x 76.2mm (5/16 x 3 in) (LW2, FW2, TN2)

167

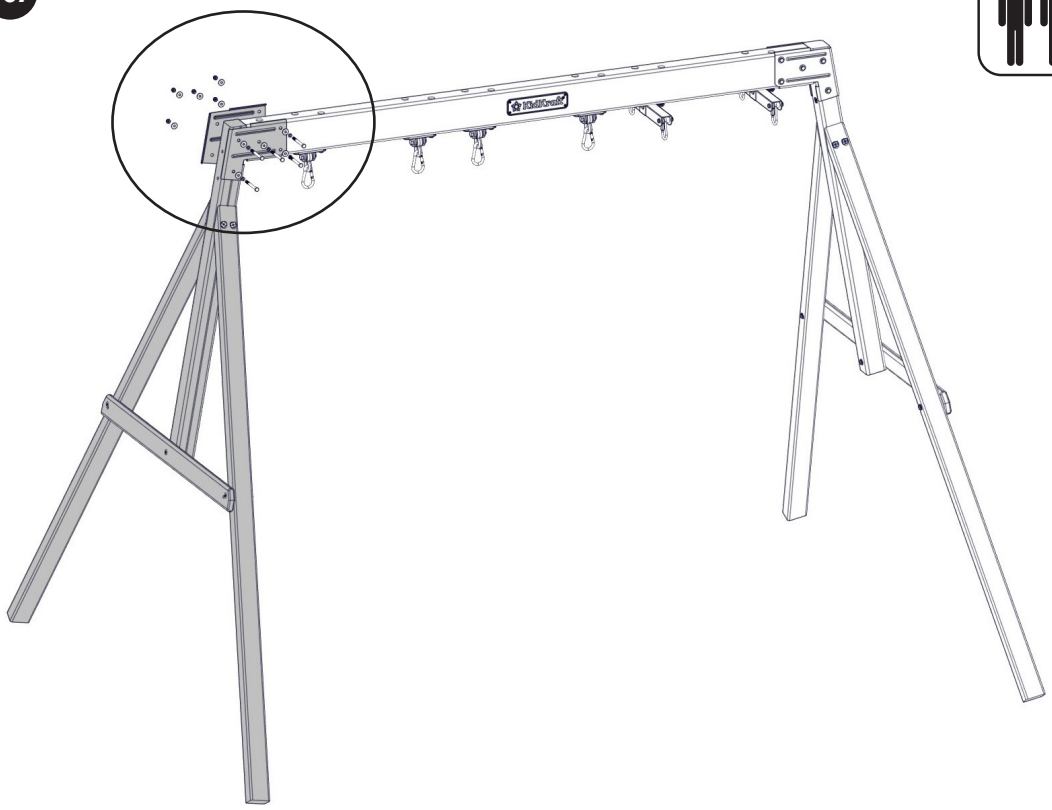

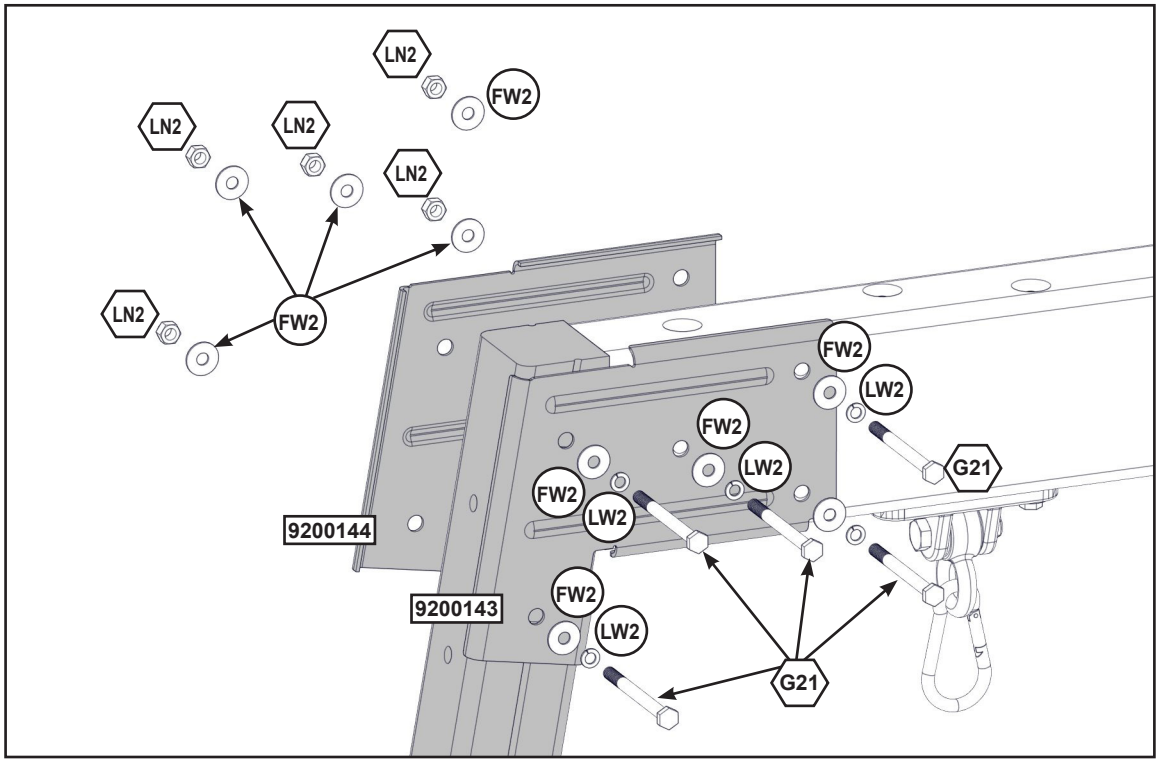

Hardware

5 x (G21) 7.9mm x 95.2 mm (5/16 x 3-3/4 in) (FW2 x 2, LW2, LN2)

Other Parts


1 x 9200144


1 x 9200143

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu

168

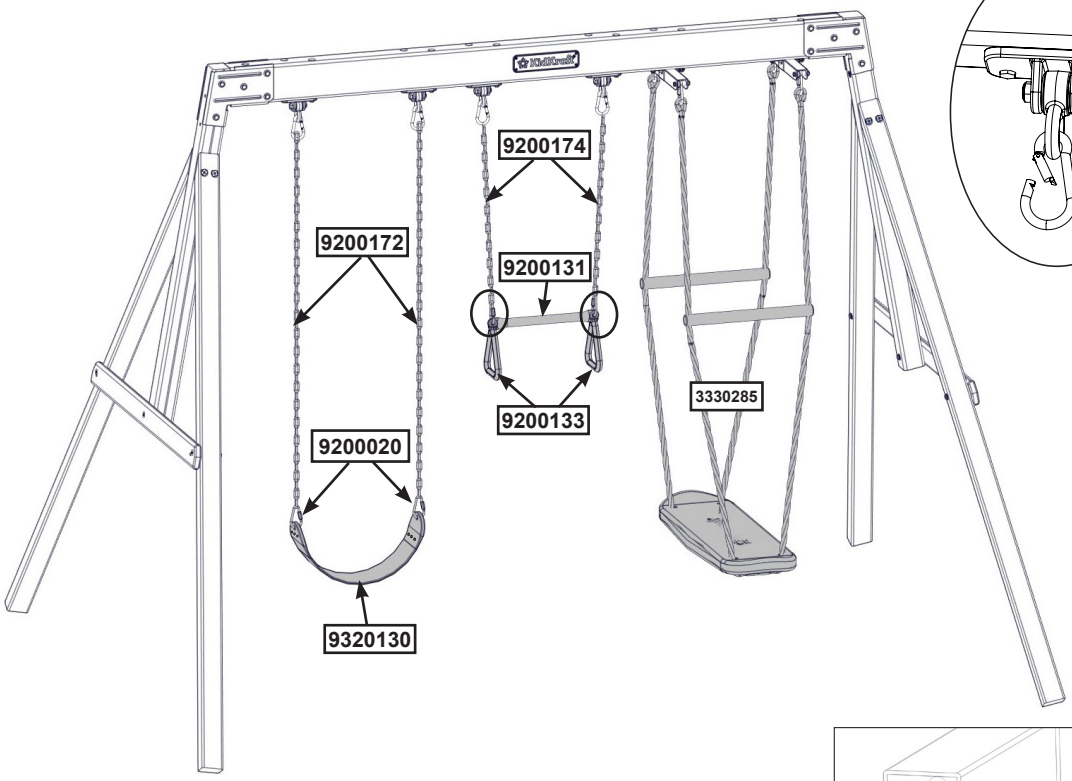

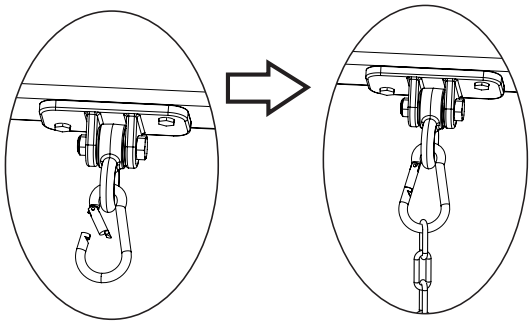



Caution: Threaded Quick Links must be installed with the gate completely down covering the threads and tighten as instructed.

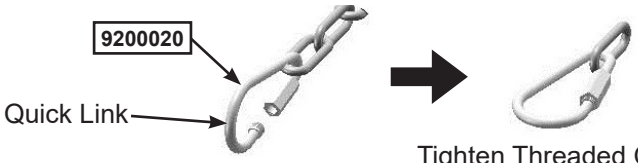


Threaded Quick Links attach to seat.

Tighten Threaded Quick Link using adjustable wrench

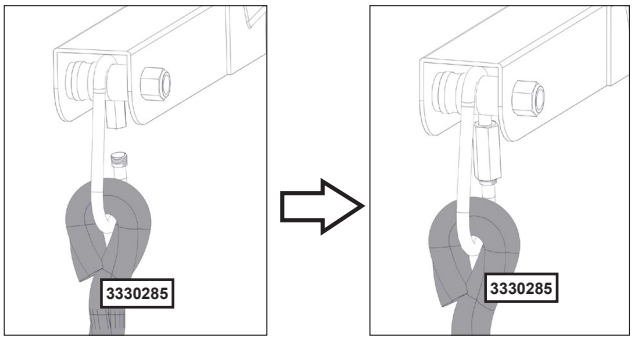

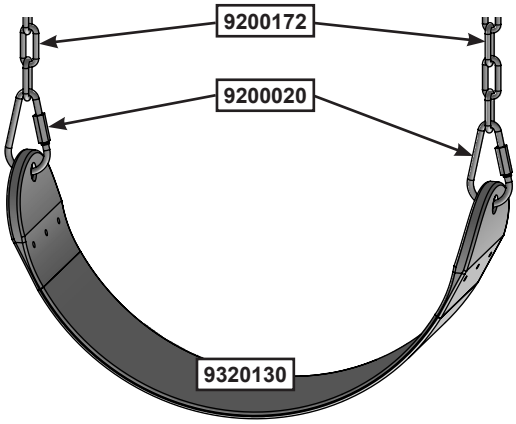


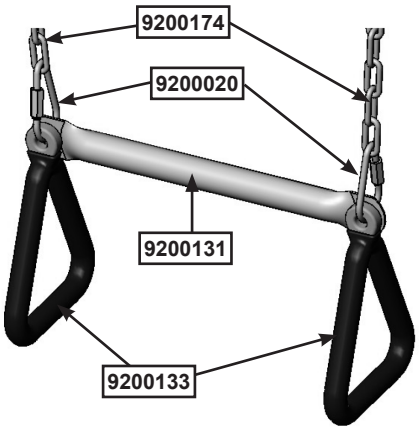


Other Parts

2 x 9200172	2 x 9200133	1 x 3330285
2 x 9200174	1 x 9320130	
1 x 9200131	4 x 9200020	

169

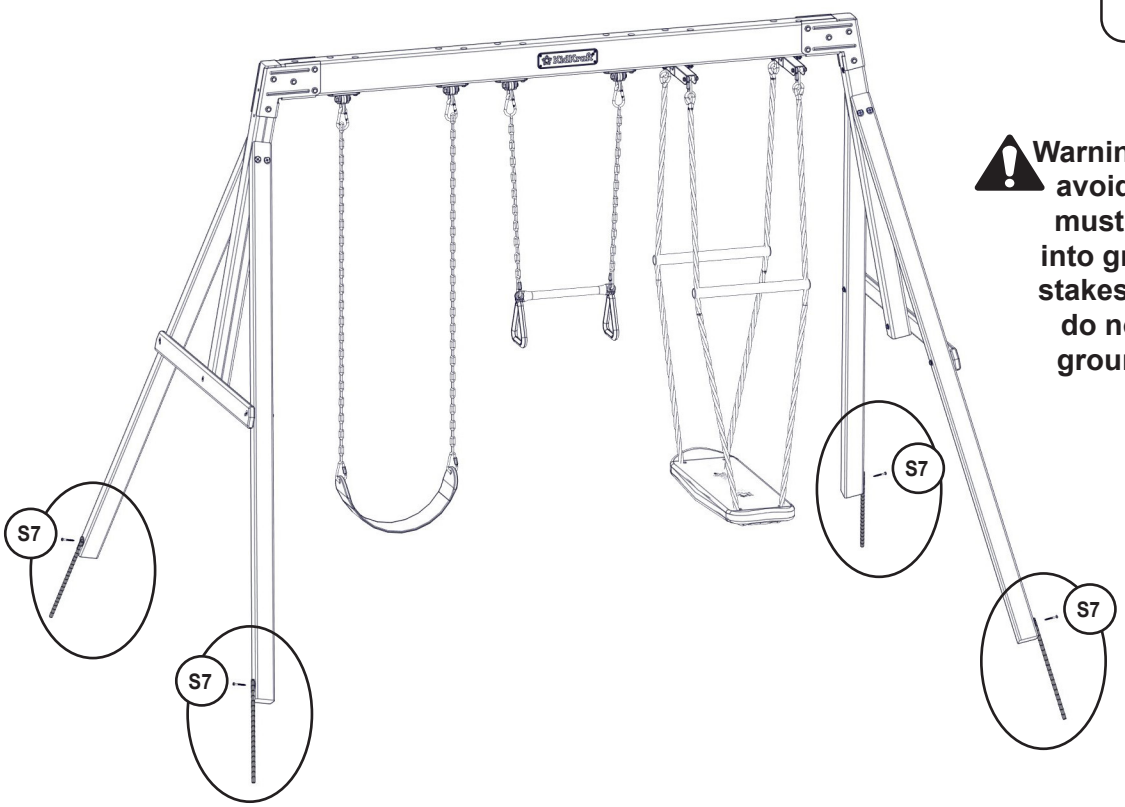

Warning! To prevent tipping and avoid potential injury, stakes must be driven 13 in(330mm) into ground. Digging or driving stakes can be dangerous if you do not check first for underground wiring, cables or gas lines.

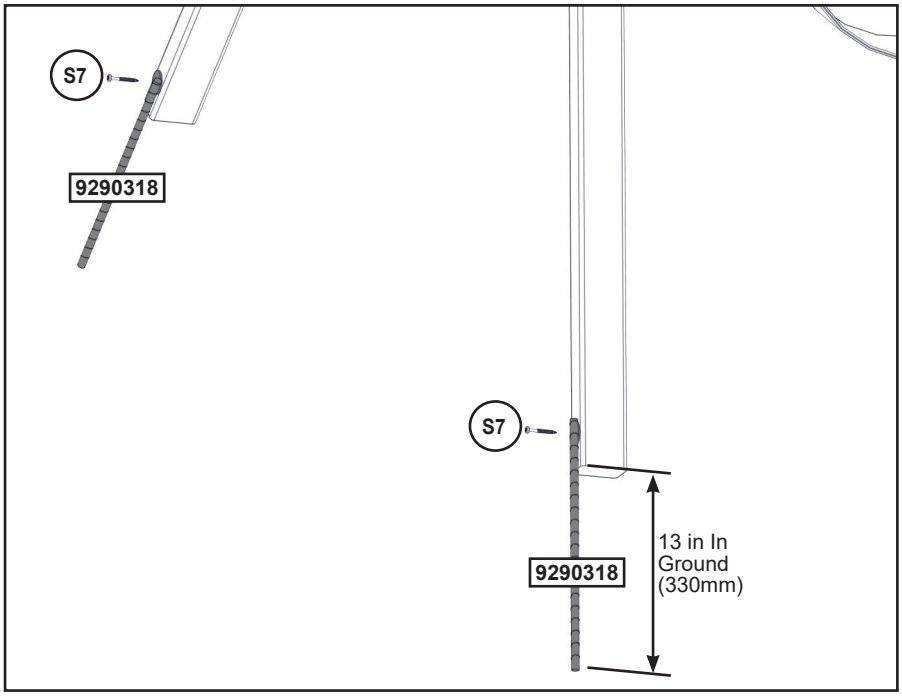

SEE PAGE 2 FOR SAFETY CLEARANCE

MOVE FORT TO FINAL LOCATION PRIOR TO STAKING
FINAL LOCATION MUST BE LEVEL GROUND

Hardware

4 x (S7) #12 x 50.8mm (#12 x 2 in)

Other Parts

4 x 9290318

europecustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

NOTES

NOTES

3 EASY WAYS TO REGISTER YOUR PRODUCT 24/7

1) Scan this QR Code with your smart phone to complete your product registration directly from your phone:

2) Complete the registration online at: https://www.kidkraft.com/us_en/warranty/

3) Mail this completed form to: KidKraft Inc., 4630 Olin Road, Dallas, Tx 75244 USA
Make sure to include a copy of your proof of purchase

KIDKRAFT

Consumer Registration Card

First Name | Initial | Last Name

Street | Apt. No.

City | State/Province | ZIP/Postal Code

Country | Telephone Number

E-Mail Address

Model Number | Model Name

Model Number & Name example
F24145 AINSLEY PLAY SYSTEM

Purchased From | Date Purchase

MM / DD / YY

Serial Number (on ID Plaque)



ID Plaque example

Box #: _____ 1 of _____
Box #: _____ 2 of _____
Box #: _____ 3 of _____
Box #: _____ 4 of _____
Box #: _____ 5 of _____
Box #: _____ 6 of _____

Box # (Ex: B29410 1of 6)

1 OF DE 6

ITEM #
ARTICLE N°
N.° DE ARTÍCULO
B29410

For common questions or for information on ordering replacement parts:

Help Center: https://kidkraft.zendesk.com/hc/en-us/