




Mara XT

Ultra Compact Stroller
50 lb (22.7 kg)

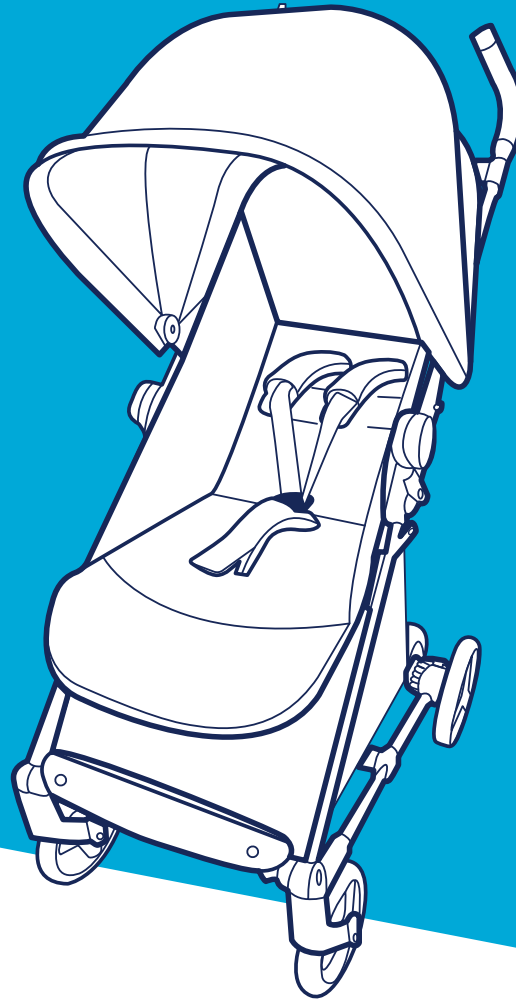

MAXI-COSI® 4358-8155C 5.19.21

We carry the future

KEEP INSTRUCTIONS FOR FUTURE USE.
Read all instructions before using this stroller.

Safety Information

WARNING:

FOR THE SAFETY OF YOUR CHILD, PLEASE READ THE FOLLOWING WARNINGS AND INSTRUCTIONS AND KEEP FOR FUTURE REFERENCE.


- Adult assembly required.
- **NEVER LEAVE CHILD UNATTENDED. ALWAYS** keep child in view when in stroller.
- **AVOID SERIOUS INJURY** from falling or sliding out. **ALWAYS** use the harness system. Check frequently to make sure it is secure.
- **ALWAYS** keep fingers away from moving parts, when folding, unfolding or adjusting stroller to prevent finger entrapment.
- **ALWAYS** make sure stroller is fully open and locked before using.
- **ALWAYS** use the brakes when stroller is stopped.
- **ALWAYS** remove protective material and poly bags and dispose before assembly.
- **NEVER** put hot liquids in the cup holder.
- **NEVER** use stroller on stairs or escalators.
- **NEVER** rollerblade with stroller.
- **NEVER** allow children to play with or hang onto the stroller.
- **NEVER** allow children to climb into the stroller unassisted. Stroller may tip over and injure child.

- **NEVER** place or hang parcels, bags, or accessories on the handle or canopy. The stroller may tip over or the canopy may collapse.
- This product will become unstable if a parcel bag or rack is used when there is no provision for one.
- This product may become unstable if a parcel bag, other than the one recommended by the manufacturer is used.
- This product will become unstable if the manufacturer's recommended load is exceeded.
- Care must be taken when folding and unfolding the stroller to prevent finger entrapment.
- **DO NOT** carry additional children, goods, or accessories in or on this product except as recommended in the manufacturer's instructions.
- **NEVER** place more than 2 lbs (.9 kg) in the cup holder.
- **NEVER** place more than 1 lb (.5 kg) in the storage pocket.
- **NEVER** place more than 10 lb (4.5 kg) in the storage basket. If weight is exceeded, hazardous unstable conditions may exist.
- **STROLLER** is only for use with children up to 50 lb (22.7 kg), **AND WHEN SEATED**, the mid-point of your child's head is at or below the top of the stroller seat.
- **ONLY** use this stroller with **ONE** child at a time.
- **STROLLER** is for use with children who can sit up unassisted and is **NOT** recommended for newborns.
- Failure to follow the steps and warnings on the labels and in the instruction manual can result in serious injury or death to your child.

Contents

Parts of Stroller	1	Adjusting Stroller Seat Harness Straps	10
Installing & Removing Front Wheels	2	Securing Child in Stroller Seat	12
Unfolding Stroller Frame	3	Folding Stroller	13
Using Parking Brake & Locking Swivel Wheels	4	Accessory Use & Care	14
Canopy Use	5	Wash & Care of Stroller Parts	14
Attaching Car Seat to Stroller Frame	6	Dorel Juvenile Group Information	15
Removing Car Seat from Stroller Frame	7	Replacement Parts	15
Reclining Stroller Seat	8	Warranty	15
Adjusting Footrest	8		
Storage Basket & Pocket Use	9		

Parts of Stroller

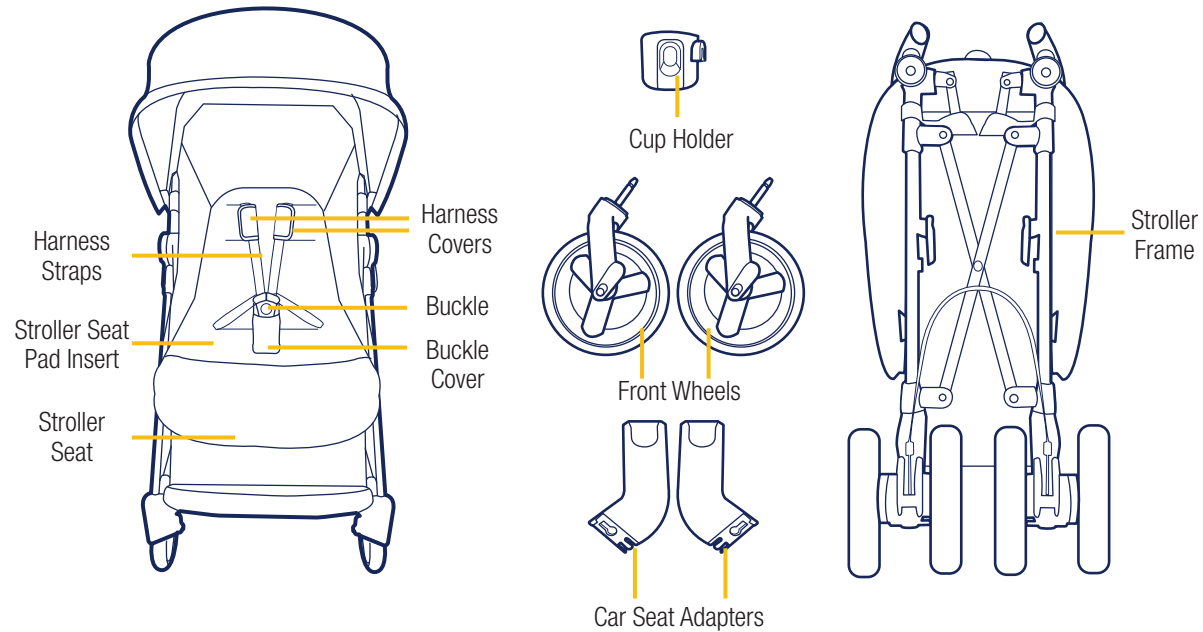

Lay out and identify all of the parts.


If any parts are missing, **do not return this product to the place of purchase.**

Please contact Consumer Care via:

- Phone: 1-800-951-4113
- Text: 1-812-652-2525
- Chat: www.maxicosi.com

You will need to know the model number and manufacture date.


It is located on a label on the stroller frame.

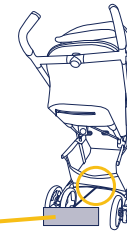


Installing & Removing Front Wheels

Installing Front Wheels


1

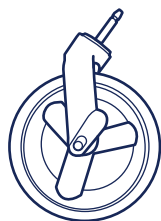

Attach the front wheels as shown.

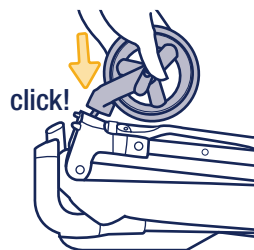

2

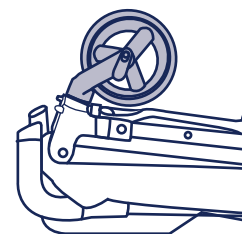


Finished!

NOTE: Pull out on the wheels to make sure they are secured.


Removing Front Wheels

1

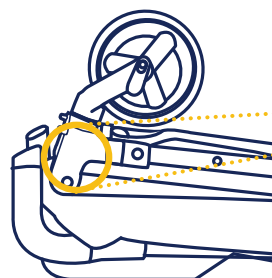


Press the release button on the stroller frame and hold it in.

Inside of leg frame

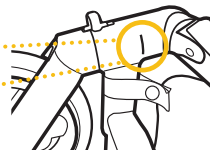


2

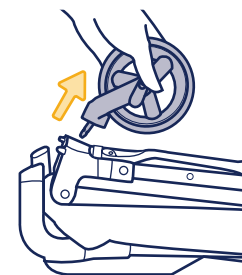


Remove the front wheels.

Unfolding Stroller Frame

Stroller Frame Latch

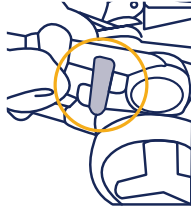


1

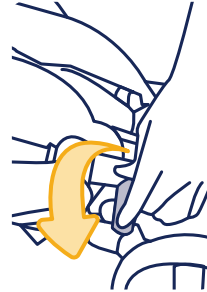


Push in on the stroller frame and then pull the stroller frame latch away from the stroller.

2

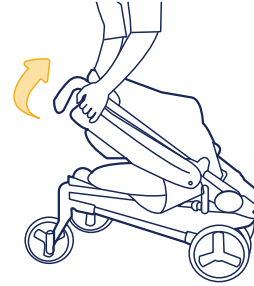


Hold the stroller frame as shown and lift up.

3

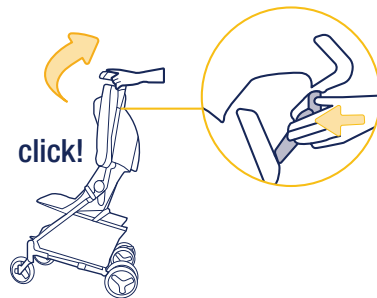

Continue to lift up and then push the crossbar forward until the stroller locks into place.

4

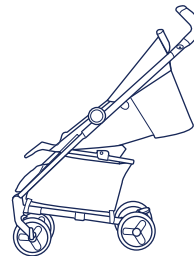


Finished!

⚠ WARNING:
ALWAYS keep fingers away from moving parts, when folding, unfolding, or adjusting stroller to prevent finger entrapment.


Using Parking Brake & Locking Swivel Wheels

Rear Wheels


Parking Brake
(locks both rear wheels)

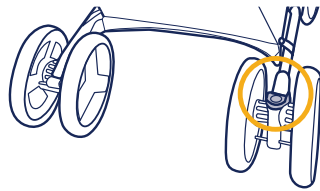

To Lock Parking Brake
Push down.

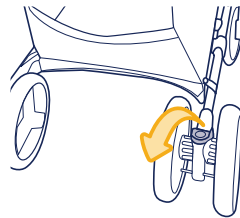


To Release Parking Brake
Lift up.

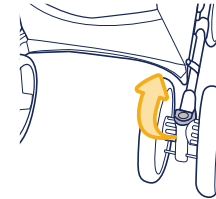


Front Wheels

Front Swivel Wheels

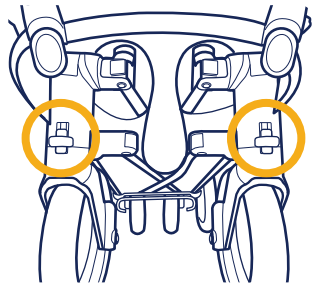

To Lock Swivel Wheels

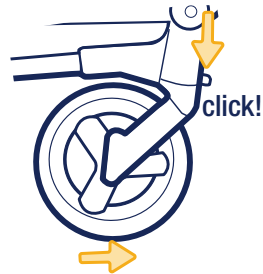

- The wheels must face forward as shown.
- Firmly push the lock tab down.
- Locked swivel wheels are best for traveling over rocky or uneven surfaces.


To Unlock Swivel Wheels




- Firmly pull the lock tab up.
- Unlocked swivel wheels are best for everyday strolling.

Canopy Use


Pull the canopy forward to extend.

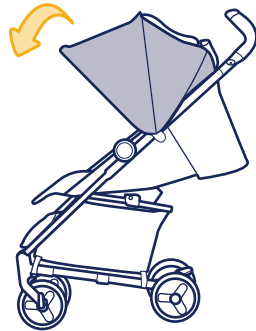

Locate the zipper and unzip to extend the canopy farther.

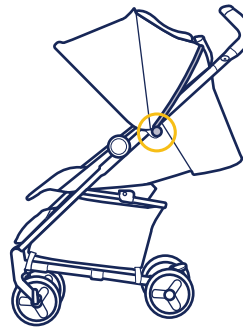


Lift the fabric to access the Peek-a-Boo window.

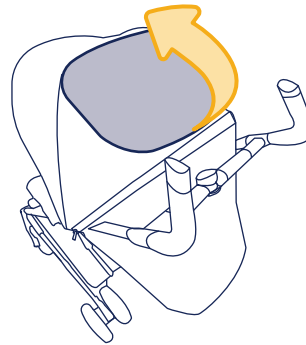


Attaching Car Seat to Stroller Frame

Illustrations show a generic car seat icon.

1

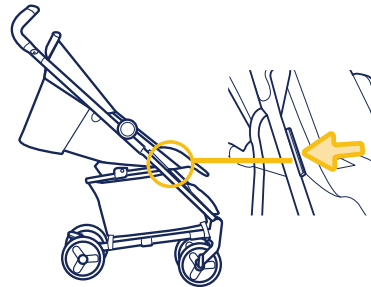


Locate the car seat adapter attachments on the stroller frame.

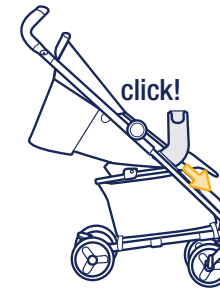

Match the colored dots on the adapters with the colored dots on the attachments.
Slide the car seat adapters onto the attachments.

2

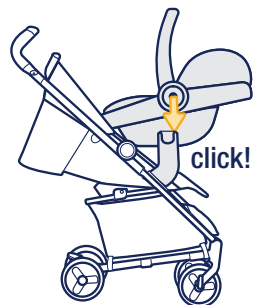


Attach the car seat to the car seat adapters.
ONLY install the car seat rear-facing.

3



Pull up on the car seat either at the carry handle or handle hubs to check if it is securely attached.

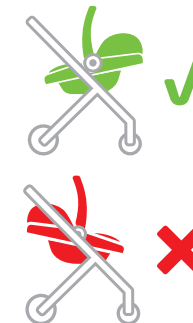

Removing Car Seat from Stroller Frame

Illustrations show a generic car seat icon.




Mico Models'
Stroller Release Buttons



Coral Models'
Stroller Release Lever


1

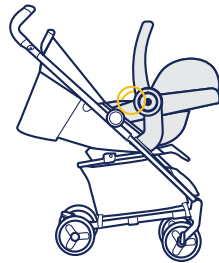

Car seat stroller
release mechanisms
& locations vary by
car seat model.

Review your car seat's
instruction manual
to locate the stroller
release mechanism
on your car seat.


2

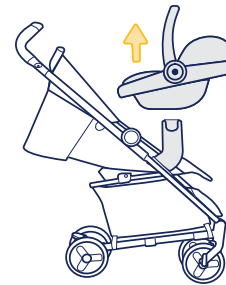

While engaging
your car seat's
stroller release
mechanism, lift
the car seat off
the stroller frame.


Removing Car Seat Adapters

1

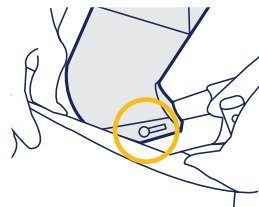

Press the release buttons on the
car seat adapters.

2

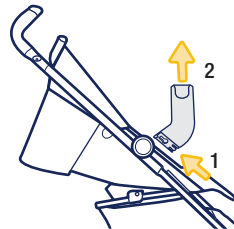


Slide the car seat adapters off
of the attachments and then
lift up to remove.

⚠ CAUTION:

- You may fold the stroller with the adapters still attached when storing the stroller.
- Before putting the folded stroller into a vehicle, the adapters **MUST** be removed.

Reclining Stroller Seat

This stroller seat has multiple recline positions.
Adjust to a position that is comfortable for your child.

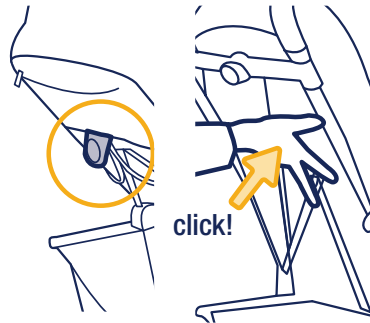

Locate the recline lever and lift it up.
Then push the stroller seat forwards or backwards to the desired position.


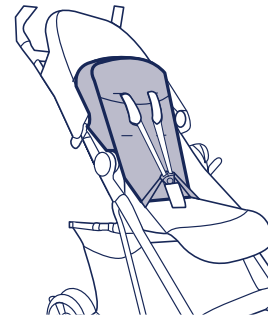


Illustration shows the stroller seat upright. However, there are multiple recline positions.

Adjusting Footrest

This stroller seat has multiple foot rest positions.
Adjust to a position that is comfortable for your child.

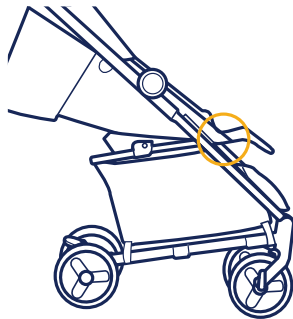


Locate the buttons on each side of the footrest.



To raise footrest, lift the footrest to the desired position.

To lower footrest, press the buttons in and lower the footrest to the desired position.

Storage Basket & Pocket Use

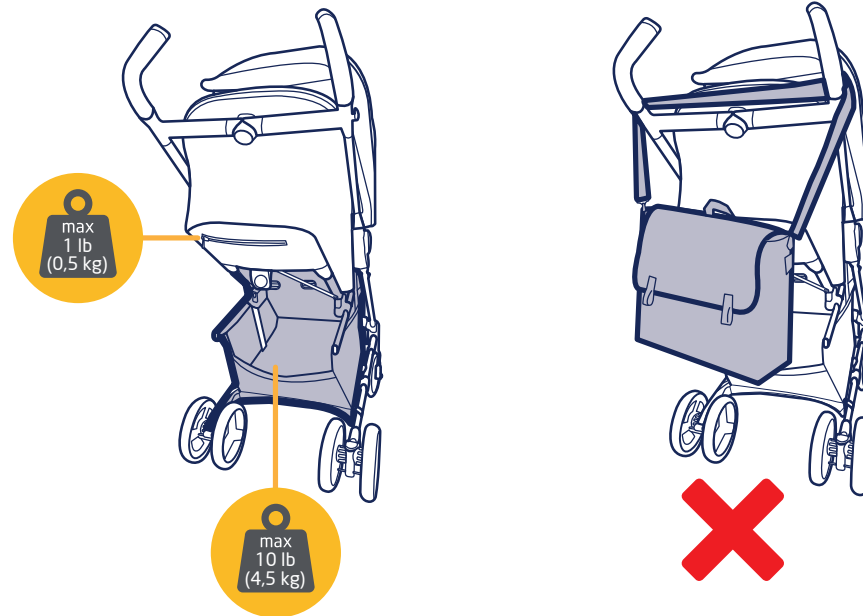


⚠ WARNING:

- **NEVER** place more than 10 lb (4.5 kg) in the storage basket. If the weight is exceeded, hazardous unstable conditions may exist.
- **NEVER** place more than 1 lb (.5 kg) in the storage pocket.


Adjusting Stroller Seat Harness Straps

As your child grows, you will need to adjust the harness strap height.

Harness System

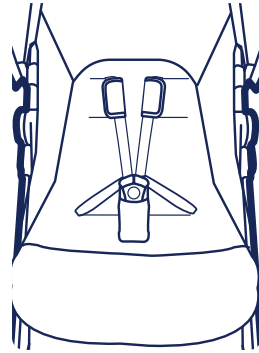


1

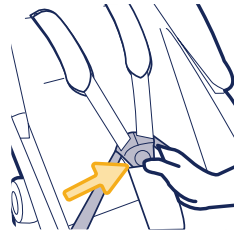

Unbuckle.

2

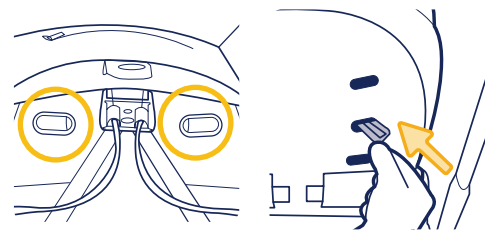

From the back of the seat, push the harness retainers through the harness slots.

3



Pull the harness strap out of the harness slot.

4



Push the harness retainers into the harness slot closest to your child's shoulders.

5




From the back of seat, pull the harness retainers through the harness slots.

⚠ WARNING:

- Belts must be threaded exactly as shown.
- Failure to follow these instructions could result in serious injury or death of your child.


To Shorten Harness Strap

1

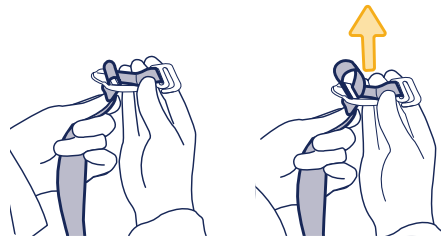

Hold the **long end** of the strap and then push it up.


2

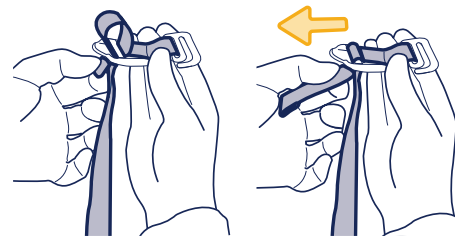

Hold the **short end** of the strap and then pull it out to tighten.


To Lengthen Harness Strap

1

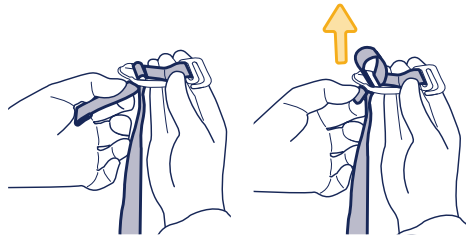


Hold the **short end** of the strap and then push it up.

2

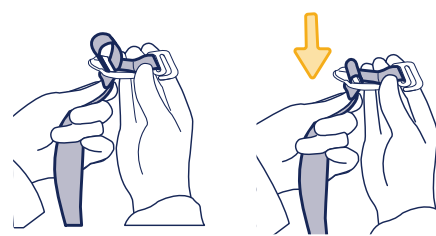

Hold the **long end** of the strap and then pull it down.


Securing Child in Stroller Seat

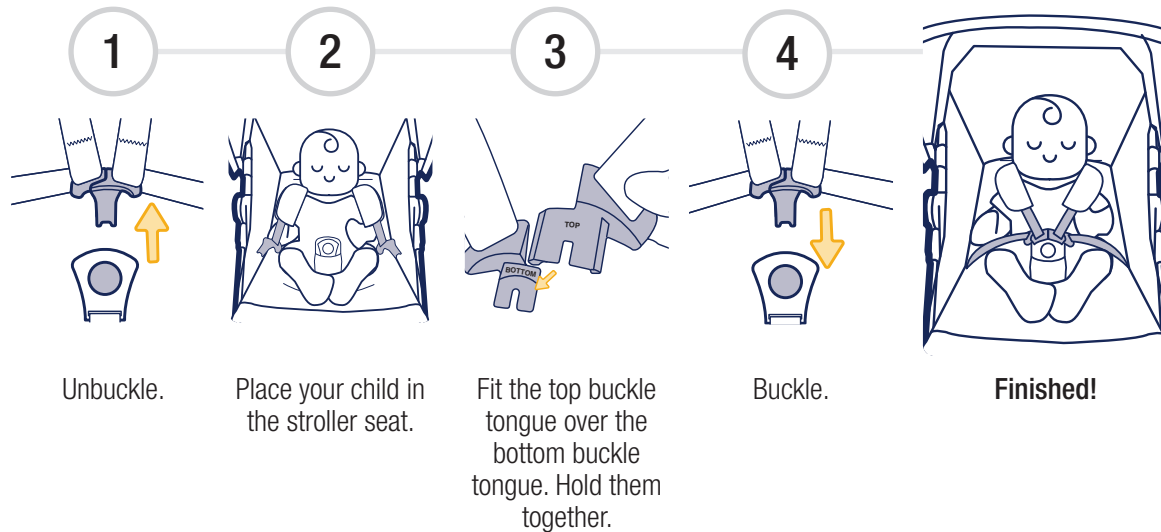

⚠ WARNING:


- **NEVER LEAVE CHILD UNATTENDED. ALWAYS** keep child in view when in stroller.
- **AVOID SERIOUS INJURY** from falling or sliding out. **ALWAYS** use the harness system. Check frequently to make sure it is secure.
- **STROLLER** is only for use with children up to 50 lb (22.7 kg), and **WHEN SEATED**, the midpoint of your child's head is at or below the top of the stroller seat.
- **ONLY** use this stroller with **ONE** child at a time.
- **STROLLER** is for use with children who can sit up unassisted and is **NOT** recommended for newborns.
- Failure to follow these instructions could result in serious injury or death of your child.

Folding Stroller

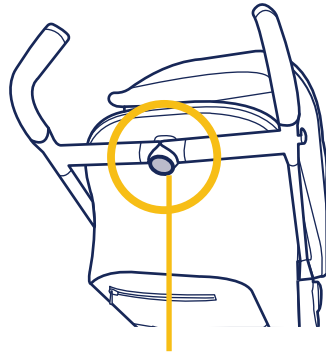


Release Button

1

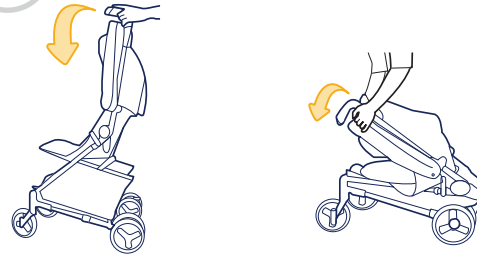


- Press the release button and pull the crossbar away from the stroller.
- With the lock and crossbar disengaged, push the top of the stroller forward until the stroller starts to fold.
- Then lower the stroller frame until it folds together.

2

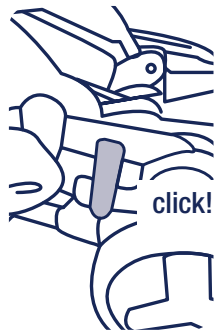

Push down on the frame so the stroller latch locks into place.

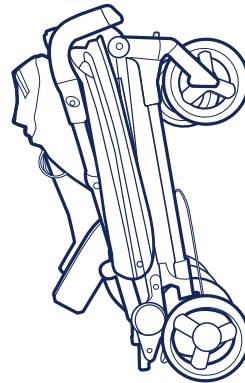

Finished!

The stroller is self-standing.


⚠ WARNING:

ALWAYS keep fingers away from moving parts, when folding, unfolding, or adjusting stroller to prevent finger entrapment.

Accessory Use & Care

Cup Holder


Secure the cup holder to the attachment on the side of the stroller as shown. The cup holder is top-rack dishwasher safe.

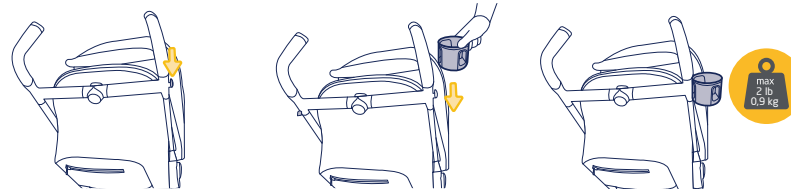

⚠ WARNING:

NEVER place more than 2 lb (.9 kg) in the cup holder.

Wash & Care of Stroller Parts

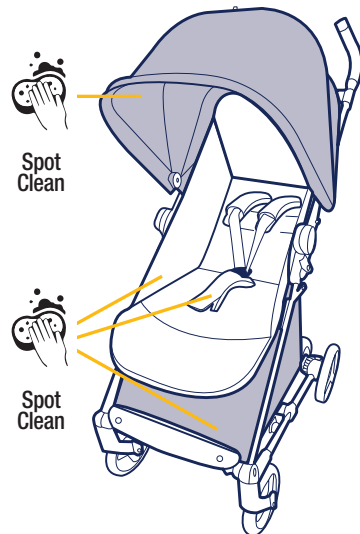

Cleaning Harness Covers

- Machine wash separately with cold water on a gentle cycle.
- Make sure the harness covers are closed so the fastening strips are not exposed.
- Do not use bleach.
- Tumble dry separately for 10-12 minutes on low heat.
- Remove immediately.

Dorel Juvenile Group Information

Thank you for choosing this stroller.

The DJG family is committed to creating strollers with the most comfort and convenience available today.

If you have questions or any concerns with this stroller, please contact our Consumer Care Department.

For parts availability and questions, please contact us via phone, text, or chat.

Include the model number and manufacture date (found on a sticker on the stroller frame) and a brief description of the part.

- Front Wheels (2)
- Harness Strap Covers (2)
- Cup Holder
- Car Seat Adapters



Call: 1-800-951-4113



Text: 1-812-652-2525




Chat: www.maxicosi.com

Hours of Operation:

M-TH: 8:00 AM - 6:00 PM EST

FRI: 8:00 AM - 4:30 PM EST

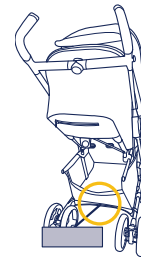

**Date of
Manufacture Label**

Two-Year Limited Warranty

Dorel Juvenile Group, Inc. warrants to the original purchaser that this product (Mara XT Ultra Compact Stroller), is free from material and workmanship defects when used under normal conditions for a period of two (2) years from the date of purchase. Should the product contain defects in material or workmanship Dorel Juvenile Group, Inc., will repair or replace the product, at our option, free of charge. Purchaser will be responsible for all costs associated with packaging and shipping the product to Dorel Juvenile Group Consumer Care Department at the address noted on the back of this document and all other freight or insurance costs associated with the return. Dorel Juvenile Group will bear the cost of shipping the repaired or replaced product to the purchaser. Product should be returned in its original package accompanied by a proof of purchase, either a sales receipt or other proof that the product is within the warranty period. This warranty is void if the owner repairs or modifies the product or the product has been damaged as a result of misuse. This warranty excludes any liability other than that expressly stated previously, including but not limited to, any incidental or consequential damages. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM STATE TO STATE.



Mara XT

Ultra Compact Stroller

50 lb (22.7 kg)



©2021 Dorel Juvenile Group, Inc. (800) 951-4113 www.maxicosi.com. Styles and colors may vary. Les styles et les couleurs peuvent varier. Made in China
Fabriqué en Chine. Distributed by (distribué par) Dorel Juvenile Group, Inc., 2525 State St., Columbus, IN 47201-7494. Dorel Juvenile Canada, 2855 Argentinia
Road, Unit 4, Mississauga, ON L5N 8G6. Importado y Distribuido en Chile por: Comercial e Industrial Silfa S.A. - San Ignacio 0201 / Parque Industrial Portezuelo
Quilicura, Santiago Chile. Fono (562) 2339 9000. En Perú por: Comexa S.A. - Los Libertadores 455 - San Isidro, Lima - Perú. Fono (511) 4469014. En Centro
América, Caribe y Ecuador por: Best Brands Group S.A. - Av. Balboa, Bay Mall Plaza, Planta Baja, local 9, Panamá. - Fono: (507) 300 2884. En Colombia por:
Baby Universe S.A.S. - Vía 40 No. 77-29, Barranquilla, Colombia - Fono: (575) 353 1110 Importador: DJGM, S.A. DE C.V. Gabriel Mancera No.
1041 Col. Del Valle, Benito Juárez C.P. 03100 México, Ciudad de México R.F.C. DJG140305GN9 Tel. (55) 67199202



5/21 4358-8155C

www.maxicosi.com