


SEACOVE PLAYSET - F29075

Before you begin / Antes de comenzar
Avant de commencer

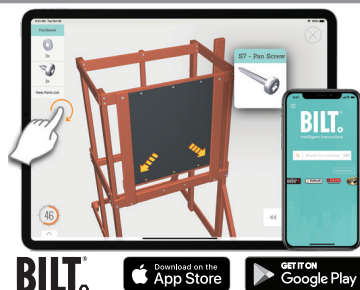


3D-GUIDED INTERACTIVE ASSEMBLY
INSTRUCTIONS CAN BE FOUND IN BILT
DOWNLOAD THE FREE APP

LAS INSTRUCCIONES DE ENSAMBLAJE INTERACTIVO
GUIADAS EN 3D SE PUEDEN ENCONTRAR EN BILT
DESCARGA LA APLICACIÓN GRATUITA

LES INSTRUCTIONS D'ASSEMBLAGE INTERACTIF
GUIDÉES EN 3D PEUVENT ÊTRE TROUVÉES EN BILT
TÉLÉCHARGER L'APPLICATION GRATUITE

INSTALLATION AND OPERATING INSTRUCTIONS

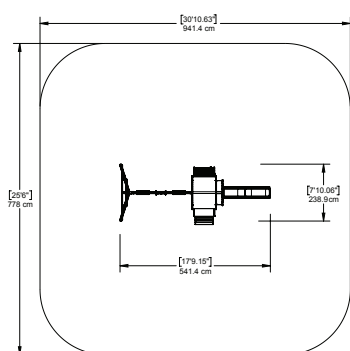

WARNING

To reduce the risk of serious injury or death, you must read and follow these instructions. Keep and refer to these instructions often and give them to any future owner of this play system. Manufacturer contact information provided below.


OBSTACLE FREE SAFETY ZONE - 30'10.63" x 25'6" (9.414m x 7.78m) area requires Protective Surfacing. See page 3.

MAXIMUM VERTICAL FALL HEIGHT - 6' 3-5/8" (1.92m)

CAPACITY - 9 Users Maximum, Ages 3 to 10; Weight Limit 110 lbs. (49.9 kg) per child.

RESIDENTIAL HOME USE ONLY. Not intended for public areas such as schools, churches, nurseries, day cares or parks.

WARNING. Only for domestic use.

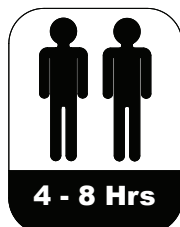

4 - 8 Hrs

Two person
assembly



FOR OUTDOOR FAMILY DOMESTIC USE ONLY



KidKraft, Inc.
4630 Olin Road
Dallas, Texas 75244 USA
customerservice@kidkraft.com
canadacustomerservice@kidkraft.com
1.800.933.0771
972.385.0100
For online parts replacement visit
<https://parts.kidkraft.com/>

KidKraft Netherlands BV
Olympisch Stadion 8
1076 DE Amsterdam
The Netherlands
europecustomerservice@kidkraft.com
+31 20 305 8620 M-F from 09:00 to 17:30
(GMT+1)
For online parts replacement visit
<https://parts.kidkraft.eu/>

Table of Contents

Warnings and Safe Play Instructions	pg. 2
Protective Surfacing Guidelines	pg. 3
Instructions for Proper Maintenance	pg. 4
About Our Wood – Limited Warranty. . . .	pg. 5
Keys to Assembly Success	pg. 6
Part ID	pg. 7
Step-By-Step Instructions	pg. 14
Installation of I.D./Warning Plaque	pg. 82

9409075

Rev 07/17/2020

Warnings and Safe Play Instructions



CONTINUOUS ADULT SUPERVISION REQUIRED. Most serious injuries and deaths on playground equipment have occurred while children were unsupervised! Our products are designed to meet mandatory and voluntary safety standards. Complying with all warnings and recommendations in these instructions will reduce the risk of serious or fatal injury to children using this play system. Go over the warnings and safe play instructions regularly with your children and make certain that they understand and follow them. Remember on-site adult supervision is required for children of all ages.



WARNING

SERIOUS HEAD INJURY HAZARD

Installation over concrete, asphalt, dirt, grass, carpet and other hard surface creates a risk of serious injury or death from falls to the ground. Install and maintain shock absorbing material under and around play-set as recommended on page 3 of these instructions.

COLLISION HAZARD

Place play-set on level ground at least 2m from any obstruction such as a garage or house, fences, poles, trees, sidewalks, walls, landscape timbers, rocks, pavement, planters, garden borders, overhanging branches, laundry lines, and electrical wires. (See OBSTACLE FREE SAFETY ZONE on cover)

CHOKING HAZARD/SHARP EDGES & POINTS

Adult assembly required. This product contains small parts and parts with sharp edges and points. Keep parts away from children until fully assembled.

WARNING LABEL

Owners shall be responsible for maintaining the legibility of the warning labels.

STRANGULATION HAZARD

- NEVER allow children to play with ropes, clotheslines, pet leashes, cables, chains or cord-like items when using this play-set or to attach these items to play-set.
- NEVER allow children to wear loose fitting clothing, ponchos, hoods, scarves, capes, necklaces, items with draw-strings, cords or ties when using this play-set.
- NEVER allow children to wear bike or sport helmets when using this play-set.

Failure to prohibit these items, even helmets with chin straps, increases the risk of serious injury and death to children from entanglement and strangulation.

TIP OVER HAZARD

Choose a level location for the equipment. This can reduce the likelihood of the play set tipping over and loose-fill surfacing materials washing away during heavy rains.

DO NOT allow children to play on the play-set until the assembly is complete and the unit is properly anchored.

Never add extra length to chain or rope. The chains or ropes provided are the maximum length designed for the swinging element(s).



WARNING – Safe Play Instructions

- ✓ Observe capacity limitations of your play-set. See front cover.
- ✓ Dress children with well fitting and full foot enclosing footwear.
- ✓ Teach children to sit with their full weight in the center of the swing seat to prevent erratic swing motion or falling off.
- ✓ Check for splintered, broken or cracked wood; missing, loose, or sharp edged hardware. Replace, tighten and or sand smooth as required prior to playing.
- ✓ Verify that suspended climbing ropes, rope ladders, chain or cable are secured at both ends and cannot be looped back on itself as to create an entanglement hazard.
- ✓ On sunny and or hot days, check the slide and other plastic rides to assure that they are not very hot as to cause burns. Cool hot slide and rides with water and wipe dry prior to using.
- ✓ Orientate slide such that it gets the least amount of exposure to the sun.
- ✗ Do not allow children to wear open toe or heel footwear like sandals, flip-flops or clogs.
- ✗ Do not allow children to walk, in front, between, behind or close to moving rides.
- ✗ Do not let children twist swing chains or ropes or loop them over the top support bar. This may reduce the strength of the chain or rope and cause premature failure.
- ✗ Do not let children get off rides while they are in motion.
- ✗ Do not permit climbing on equipment when it is wet.
- ✗ Do not permit rough play or use of equipment in a manner for which it was not intended. Standing on or jumping from the roof, elevated platforms, swings, climbers, ladders or slide can be dangerous.
- ✗ Do not allow children to swing empty rides or seats.
- ✗ Do not allow children to go down slide head first or run up slide.

⚠️ Protective Surfacing - Reducing Risk of Serious Head Injury From Falls.

One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM F1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

Loose-Fill Materials

- Maintain a minimum depth of 9 inches of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet high; and 9 inches of sand or pea gravel for equipment up to 5 feet high. NOTE: An initial fill level of 12 inches will compress to about a 9-inch depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically raked and refilled to maintain at least a 9-inch depth.
- Use a minimum of 6 inches of protective surfacing for play equipment less than 4 feet in height. If maintained properly, this should be adequate. (At depths less than 6 inches, the protective material is too easily displaced or compacted.)

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are not adequate protective surfacing. Ground level equipment -- such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface -- does not need any protective surfacing.

- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.
- Periodically rake, check and maintain the depth of the loose-fill surfacing material. Marking the correct depth on the play equipment support posts will help you to see when the material has settled and needs to be raked and or replenished. Be sure to rake and evenly redistribute the surfacing in heavily used areas.
- Do not install loose fill surfacing over hard surfaces such as concrete or asphalt.

Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles


You may be interested in using surfacing other than loose-fill materials - like rubber tiles or poured-in-place surfaces.

- Installations of these surfaces generally require a professional and are not "do-it yourself" projects.
- Review surface specifications before purchasing this type of surfacing. Ask the installer/manufacture for a report showing that the product has been tested to the following safety standard: ASTM F1292 *Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment*. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height - vertical distance between a designated play surface (*elevated surface for standing, sitting, or climbing*) and the protective surfacing below - of your play equipment.
- Check the protective surfacing frequently for wear.

Placement

Proper placement and maintenance of protective surfacing is essential. Refer to diagram on front cover. Be sure to;

- Extend surfacing at least 2m from the equipment in all directions.
- For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.
- For tire swings, extend surfacing in a circle whose radius is equal to the height of the suspending chain or rope, plus 6 feet in all directions.

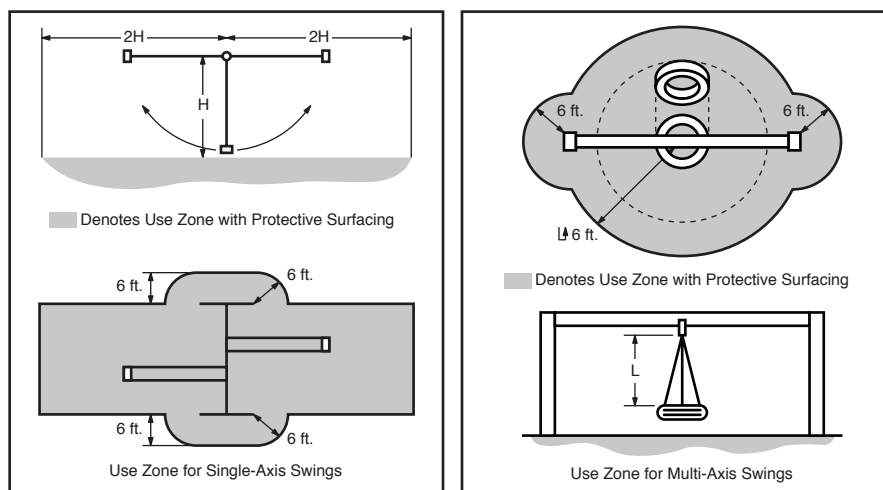



Instructions for Proper Maintenance

Your KidKraft Play System is designed and constructed of quality materials with your child's safety in mind. As with all outdoor products used by children, it will weather and wear. To maximize the enjoyment, safety and life of your Play Set, it is important that you, the owner, properly maintain it.

Check the following at the beginning of the play season:

HARDWARE:

- ✓ Check metal parts for rust. If found, sand and repaint using a non-lead paint complying with 16 CFR 1303.
- ✓ Inspect and tighten all hardware. On wood assemblies **DO NOT OVER-TIGHTEN** as to cause crushing and splintering of wood.
- ✓ Check for sharp edges or protruding screw threads, add washers if required.

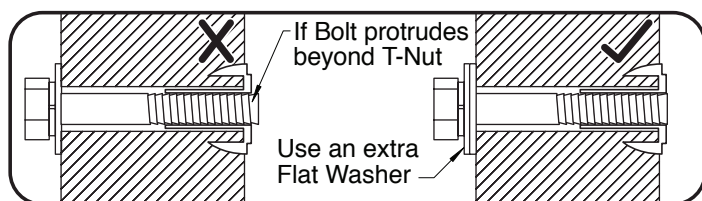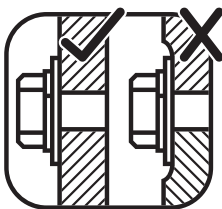

SHOCK ABSORBING SURFACING:

- ✓ Check for foreign objects. Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 3)

GROUND STAKES (ANCHORS):

- ✓ Check for looseness, damage or deterioration. Should firmly anchor unit to ground during use. Re-secure and or replace, if necessary.

SWING HANGERS:

- ✓ Check that bolts are secure and tight. Quick clips should be completely closed and threaded clips screwed tight.
- ✓ If squeaking occurs lubricate bushings with oil or WD-40®.

SWINGS, ROPES AND RIDES:

- ✓ Reinstall if removed during cold season. Check all moving parts including swing seats, ropes, chains and attachments for wear, rust and other deterioration. Replace as needed.
- ✓ Check that ropes are tight, secure at both ends and cannot loop back as to create an entrapment.

WOOD PARTS:

- ✓ Check all wood members for deterioration, structural damage and splintering. Sand down splinters and replace deteriorated wood members. As with all wood, some checking and small cracks in grain is normal.
- ✓ Unprotected, they will appear weathered over time. Periodic application of an exterior water repellent or stain (water-based) will help improve appearance and life.

Check twice a month during play season:

HARDWARE:

- ✓ Inspect for tightness. Must be firmly against, but not crushing the wood. **DO NOT OVER-TIGHTEN.** This will cause splintering of wood.
- ✓ Check for sharp edges or protruding screw threads. Add washers if required.

SHOCK ABSORBING SURFACING:

- ✓ Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 3)

Check once a month during play season:

SWING HANGERS:

- ✓ Check that they are secure and orientated correctly. Hook should rotate freely and perpendicular to support beam.
- ✓ If squeaking occurs lubricate bushings with oil or WD-40®.

SWINGS AND RIDES:

- ✓ Check swing seats, all ropes, chains and attachments for fraying, wear, excessive corrosion or damage. Replace if structurally damaged or deteriorated.

Check at the end of the play season:

SWINGS AND RIDES:

- ✓ To prolong their life, remove swings and store inside when outside temperature is below 32°F/0°C. Below freezing, plastic parts may become more brittle.

SHOCK ABSORBING SURFACING:

- ✓ Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 3)

If you dispose of your play set: Please disassemble and dispose of your unit so that it does not create any unreasonable hazards at the time it is discarded. Be sure to follow your local waste ordinances.

About Our Wood

KidKraft Premium Play Systems uses only premium playset lumber, ensuring the safest product for your children's use. Although we take great care in selecting the best quality lumber available, wood is still a product of nature and susceptible to weathering which can change the appearance of your set.

What causes weathering? Does it affect the strength of my Play System?

One of the main reasons for weathering is the effects of water (moisture); the moisture content of the wood at the surface is different than the interior of the wood. As the climate changes, moisture moves in or out of the wood, causing tension which can result in checking and or warping. You can expect the following due to weathering. These changes will not affect the strength of the product:

1. **Checking** is surface cracks in the wood along the grain. A post (4" x 4") will experience more checking than a board (1" x 4") because the surface and interior moisture content will vary more widely than in thinner wood.
2. **Warping** results from any distortion (twisting, cupping) from the original plane of the board and often happens from rapid wetting and drying of the wood.
3. **Fading** happens as a natural change in the wood color as it is exposed to sun-light and will turn a grey over time.

How can I reduce the amount of weathering to my Play System?

At the factory we have coated the wood with a water repellent or stain. This coating decreases the amount of water absorption during rain or snow thus decreasing the tension in the wood. Sunlight will break down the coating, so we recommend applying a water repellent or stain on a yearly basis (see your local stain and paint supplier for a recommended product).

Most weathering is just the normal result of nature and will not affect safe play and enjoyment for your child. However if you are concerned that a part has experienced a severe weathering problem please call our consumer relations department for further assistance.

Complete and mail registration card to receive important product notifications and assure prompt warranty service.

5 Year Limited Warranty

KidKraft warrants that this product is free from defect in materials and workmanship for a period of one year from the original date of purchase. In addition, lumber is warranted for 5 years against structural failure due to rot and insect damage. All other parts, such as hardware, swings, rides, accessories, and slides carry a one-year warranty only.

This warranty applies to the original owner and registrant and is non-transferable.

Regular maintenance is required to assure the integrity of your Play System. This warranty does not cover any inspection cost.

This Limited Warranty does not cover:

- Labor for replacement of any defective item(s);
- Incidental or consequential damages;
- Cosmetic defects which do not affect performance or integrity;
- Vandalism; improper use or installation; acts of nature;
- Minor twisting, warping, checking, or any other natural occurring properties of wood that do not affect performance or integrity.

KidKraft products have been designed for safety and quality. Any modifications made to the original product could damage the structural integrity of the unit leading to failure and possible injury.

Kidkraft cannot assume any responsibility for modified products. Furthermore, modification voids any and all warranties.

This product is warranted for **RESIDENTIAL USE ONLY**. Under no circumstance should a KidKraft Play System be used in public settings such as schools, churches, playgrounds, parks, day cares and the like. Such use may lead to product failure and potential injury. Any and all public use will void this warranty.

KidKraft disclaims all other representations and warranties of any kind, express or implied.

This Warranty gives you specific legal rights. You may have other rights as well which vary from state to state or province to province. This warranty excludes all consequential damages, however, some states do not allow the limitation or exclusion of consequential damages, and therefore this limitation may not apply to you.


Keys to Assembly Success

Tools Required

• Tape Measure • Carpenters Level • Carpenters Square • Claw Hammer • Standard or Cordless Drill	• #1, #2 & #3 Phillips or Robertson Bits or Screwdriver • Ratchet with extension (1/2" & 9/16" sockets)	• Open End Wrench (7/16", 1/2" & 9/16") • Adjustable Wrench • 1/8" & 3/16" Drill Bits • Pencil	• 3/16" Hex Key • 8' Step Ladder • Safety Glasses • Pliers • Adult Helpers
--	--	---	--

Part Identification Key

On each page, you will find the parts and quantities required to complete the assembly step illustrated on that page. Here is a sample.

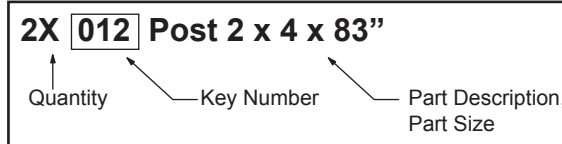


Symbols

Throughout these instructions symbols are provided as important reminders for proper and safe assembly.

This identifies information that requires special attention. Improper assembly could lead to an unsafe or dangerous condition.		Check that set or assembly is properly level before proceeding. Use Level
Use Help	Use Help	Where this is shown, 2 or 3 people are required to safely complete the step. To avoid injury or damage to the assembly make sure to get help!
Measure Distance	Check that assembly is square before tightening bolts.	Pre-drill 1/8" & 3/16" Bit Pre-drill a pilot hole before fastening screw or lag to prevent splitting of wood.
Square Assembly	Use a measuring tape to assure proper location.	Tighten Bolts This indicates time to tighten bolts, but not too tight! Do not crush the wood. This may create splinters and cause structural damage.

CAUTION – Protrusion Hazard

Once the assembly is tightened, watch for exposed threads. If a thread protrudes from the T-Nut, remove the bolt and add washers to eliminate this condition. Extra washers have been provided for this purpose.

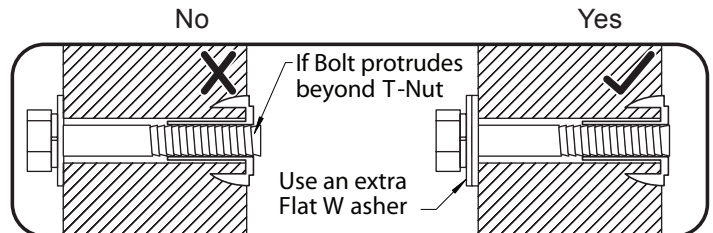


Proper Hardware Assembly

Lag screws require drilling pilot holes to avoid splitting wood. Only a flat washer is required. For ease of installation liquid soap can be used on all lag-type screws.


For bolts, tap T-Nut into hole with hammer. Insert the hex bolt through lock washer first then flat washer then hole. Because the assemblies need to be squared do not completely tighten until instructed. Pay close attention to diameter of the bolts. 5/16" is slightly larger than 1/4".

Note: Wafer head bolts with blue lock tight or a bolt with a Ny-Lok nut do NOT require a lock washer.

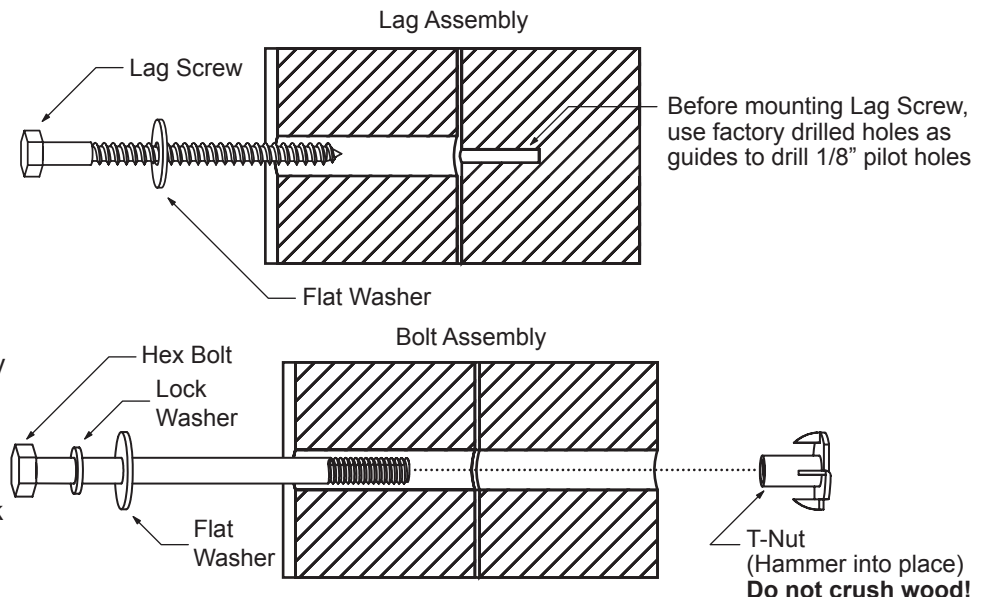

Part Identification (Reduced Part Size)


2pc. - **9590** - 25.4 x 76.2 x 939.8 - 3569590



4pc. - **9591** - 25.4 x 76.2 x 844.6mm - 3569591



2pc. - **9592** - 34.9 x 85.7 x 1143mm - 3569592




2pc. - **9593** - 34.9 x 85.7 x 1143mm - 3569593




1pc. - **9594** - 34.9 x 85.7 x 1143mm - 3569594




1pc. - **9595** - 34.9 x 85.7 x 1143mm - 3569595




1pc. - **9596** - 34.9 x 85.7 x 1143mm - 3569596




1pc. - **9597** - 34.9 x 85.7 x 1143mm - 3569597




6pc. - **9598** - 25.4 x 76.2 x 269.9mm - 3569598



1pc. - **9599** - 25.4 x 76.2 x 717.6mm - 3569599




2pc. - **9600** - 34.9 x 85.7 x 1181.1mm - 3569600




5pc. - **9601** - 15.9 x 114.3 x 939.8mm - 3569601



1pc. - **9602** - 15.9 x 88.9 x 939.8mm - 3569602



1pc. - **9603** - 15.9 x 114.4 x 717.6mm - 3569603




2pc. - **9604** - 15.9 x 114.3 x 939.8mm - 3569604




Part Identification (Reduced Part Size)

1pc. - [9605] - 15.9 x 114.3 x 717.6mm - 3569605




2pc. - [9606] - 25.4 x 76.2 x 581mm - 3569606



2pc. - [9608] - 31.8 x 88.9 x 533.4mm - 3569608




2pc. - [9609] - 31.8 x 76.2 x 254mm - 3569609




2pc. - [9610] - 31.8 x 76.2 x 166.2mm - 3569610



2pc. - [9611] - 25.4 x 76.2 x 287.8mm - 3569611



5pc. - [9612] - 15.9 x 82.6 x 660.4mm - 3569612




1pc. - [9613] - 25.4 x 76.2 x 939.8mm - 3569613



2pc. - [9614] - 25.4 x 76.2 x 914.4mm - 3569614



1pc. - [9615] - 25.4 x 76.2 x 889mm - 3569615




1pc. - [9616] - 25.4 x 76.2 x 844.6mm - 3569616




1pc. - [9617] - 25.4 x 76.2 x 844.6mm - 3569617




1pc. - [9618] - 38.1 x 38.1 x 844.6mm - 3569618



1pc. - [9619] - 23.8 x 108 x 844.6mm - 3569619



5pc. - [9620] - 15.9 x 76.2 x 630.3mm - 3569620




Part Identification (Reduced Part Size)


10pc. - 9621 - 15.9 x 76.2 x 635mm - 3569621




2pc. - 9622 - 15.9 x 76.2 x 870mm - 3569622




1pc. - 9623 - 25.4 x 50.8 x 844.6mm - 3569623




1pc. - 9624 - 25.4 x 50.8 x 889mm - 3569624



1pc. - 9625 - 25.4 x 139.7 x 889mm - 3569625




2pc. - 9626 - 25.4 x 76.2 x 508mm - 3569626



1pc. - 9627 - 25.4 x 76.2 x 723.9mm - 3569627



3pc. - 9628 - 25.4 x 76.2 x 844.6mm - 3569628




2pc. - 9629 - 25.4 x 76.2 x 882.7mm - 3569629



2pc. - 9630 - 25.4 x 76.2 x 882.7mm - 3569630




3pc. - 9631 - 25.4 x 76.2 x 209.6mm - 3569631



1pc. - 9632 - 25.4 x 76.2 x 679.5mm - 3569632



1pc. - 9633 - 25.4 x 76.2 x 679.5mm - 3569633




1pc. - 9634 - 25.4 x 76.2 x 679.5mm - 3569634



1pc. - 9635 - 25.4 x 76.2 x 679.5mm - 3569635



2pc. - 9636 - 31.8 x 63.5 x 692.2mm - 3569636



Part Identification (Reduced Part Size)

2pc. - **9637** - 31.8 x 63.5 x 692.2mm - 3569637




5pc. - **9638** - 15.9 x 136.5 x 762mm - 3569638




1pc. - **9639** - 15.9 x 114.3 x 762mm - 3569639



1pc. - **9640** - 76.2 x 133.4 x 1168.4mm - 3569640



1pc. - **9641** - 76.2 x 133.4 x 1168.4mm - 3569641




1pc. - **9642** - 25.4 x 82.6 x 982mm - 3569642




1pc. - **9643** - 76.2 x 76.2 x 1124mm - 3569643




2pc. - **9644** - 50.8 x 76.2 x 933.5mm - 3569644




2pc. - **9645** - 50.8 x 76.2 x 1174.8mm - 3569645



2pc. - **9646** - 25.4 x 101.6 x 1073.2mm - 3569646




6pc. - **9647** - 31.8 x 76.2 x 419.1mm - 3569647




2pc. - **9648** - 31.8 x 76.2 x 395.2mm - 3569648




1pc. - **9649** - 31.8 x 76.2 x 1079.5mm - 3569649




2pc. - **9740** - 31.8 x 88.9 x 292.1mm - 3569740




2pc. - **9741** - 25.4 x 76.2 x 217.2mm - 3569741



2pc. - **9748** - 34.9 x 76.2 x 177.8mm - 3569748




2pc. - **9749** - 25.4 x 108 x 125.9mm - 3569749



Hardware Identification (Actual Size)


22pc. **(LW2)** - 5/16" - 51303300
7.9mm




73pc. **(LW1)** - 1/4" - 51303200
6.4mm




34pc. **(LN2)** - 5/16" - 54303300
7.9mm

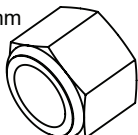

2pc. **(LN3)** - 3/8" - 54303800
9.5mm

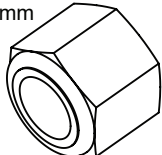

26pc. **(S5)** - #8 x 1/2"
- 52433502
12.7mm



156pc. **(S20)** - #8 x 1-3/8" - 52043516
34.9mm



24pc. **(S11)** - #8 x 2" - 52043520
50.8mm




16pc. **(S3)** - #8 x 2-1/2" - 52043522
63.5mm




58pc. **(S4)** - #8 x 3" - 52043530
76.2mm




38pc. **(S7)** - #12 x 2" - 52433620
50.8mm




12pc. **(S6)** - #12 x 1" - 52433610
25.4mm




6pc. **(S10)** - #8 x 1" - 52433510
25.4mm




32pc. **(FW0)** - 3/16" - 51103100
4.8mm




83pc. **(FW1)** - 1/4" - 51103200
6.4mm

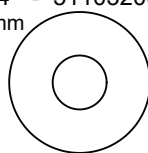

107pc. **(FW2)** - 5/16" - 51103300
7.9mm

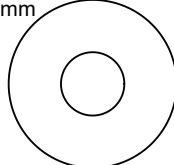


4pc. **(FW10)** - 3/8" - 51103800
9.5mm

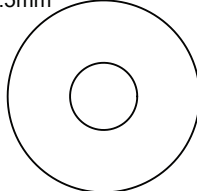


4pc. **(S0)** - #8 x 7/8" - 52933505
22.2mm




67pc. **(TN1)** - 1/4" - 54503200
6.4mm

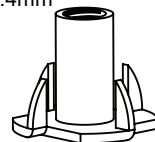


44pc. **(TN2)** - 5/16" - 54503300
7.9mm

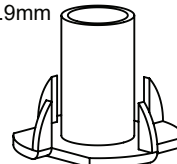


6pc. **(BN1)** - 1/4" - 54803200
6.4mm

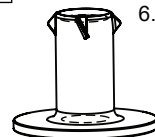


4pc. **(WL3)** - 1/4 x 1-3/8" - 52613216
34.9mm

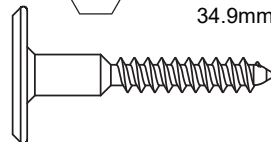


8pc. **(WL5)** - 1/4 x 2-1/2" - 52613222
6.4 x 63.5mm

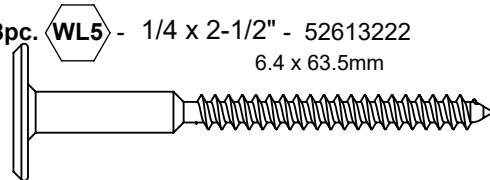


19pc. **(WB9)** - 5/16 x 2-1/8" - 53613324
7.9 x 54mm

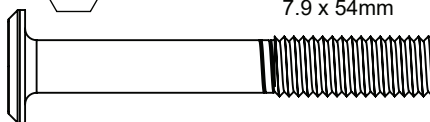


4pc. **(WB8)** - 5/16 x 2-3/8" - 53613326
7.9 x 60.3mm

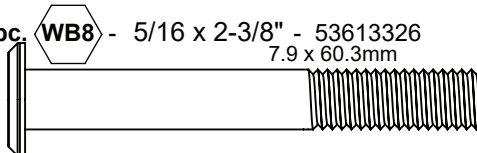














6pc. **(PB2)** - 1/4 x 1-1/4" - 53433212
32mm



6pc. **(PB9)** - 5/16 x 2-1/2" - 53453322
7.9 x 63.5mm



Hardware Identification

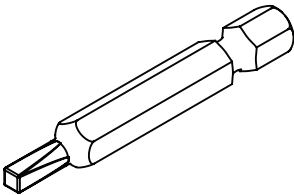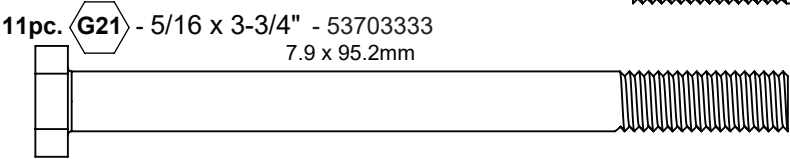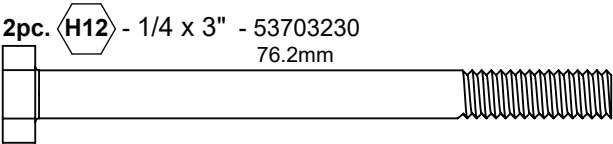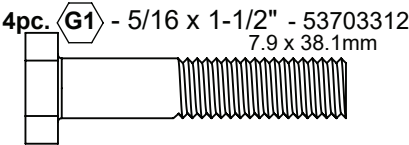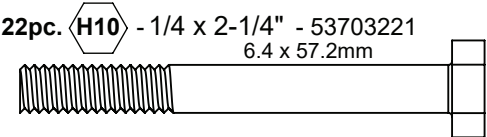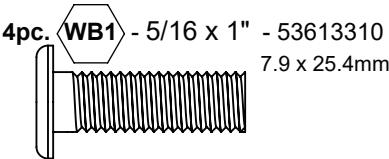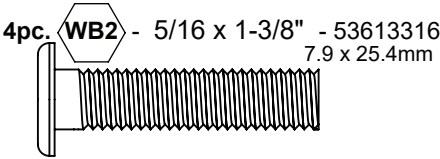

1pc. **D4** - #2 x 2 - (9200014)

Part Identification (Reduced Part Size)



1x - 9320374





1x - 3320355




1x - 3200718 (7pk)

1x - 3320283 (6 Pk)

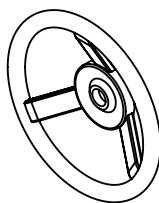

1x - 3320255


1x - 3759075

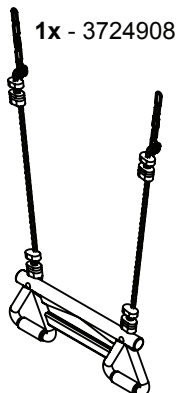


1x - 3724908



1x - 3206206 (6pk)

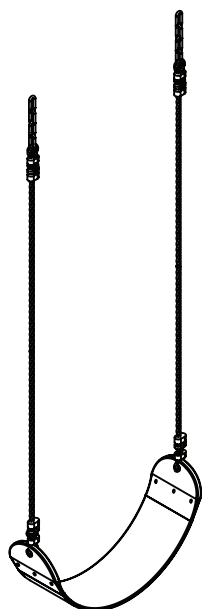


2x - 3724943

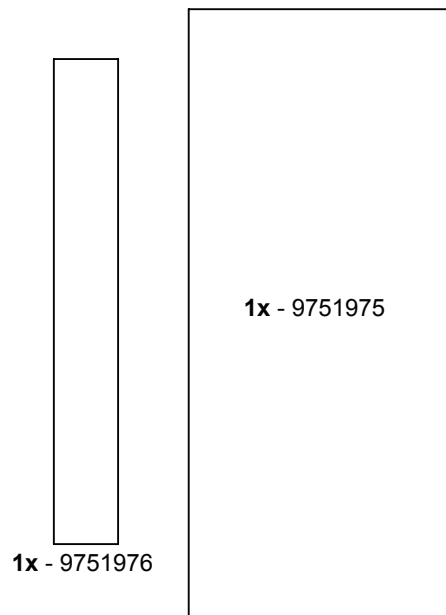

1x - 9751975

1x - 9751976

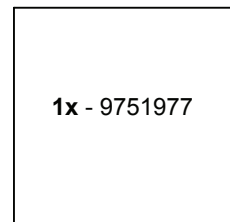

1x - 9751977


1x - 5790252

7x - 1/4-20
- 54303200

7x - 1/4 x 20mm
- 53703203

10x - #12 x 15mm
- 52403603

10x - 9330244


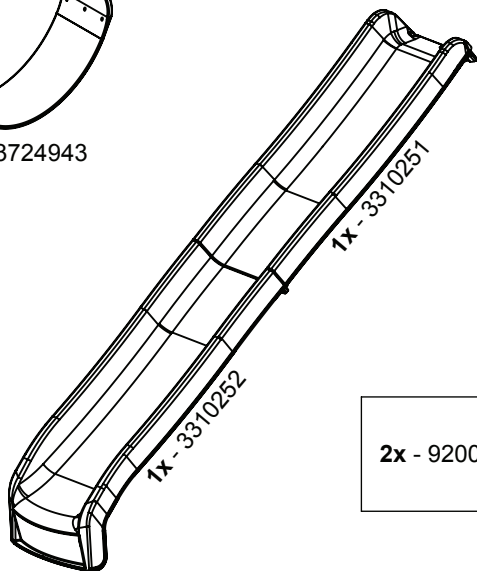


1x - 3310252
1x - 3310251

1x - 3200294

1x - 9200294

2x - 9200295

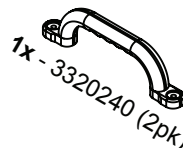

1x - 3320240 (2pk)

1x - 9201633



1x - 3200289 (2pk)




1x - 3200243


1x - 3200245 (2pk)



1x - 3200293 (4pk)




1x - 3200291


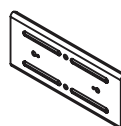


2x - 9200291

1x - 9200243
1x - 9200244



Step 1: Inventory Parts - Read This Before Starting Assembly

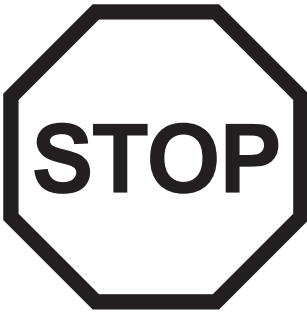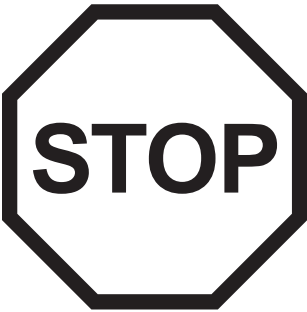

- A. This is the time for you to inventory all your hardware, wood and accessories, referencing the parts identification sheets. This will assist you with your assembly.
- The wood pieces will have the key number stamped on the ends of the boards. Organize the wood pieces by step, as per the key numbering system below.

1X

131

Cafe Top FSC 15.9 x 127 x 1225.6 mm

Quantity

Key Number

Part Description, Part Size

- Please refer to Page 6 for proper hardware assembly.
 - Each step indicates which bolts and/or screws you will need for assembly, as well as any flat washers, lock washers, t-nuts or lock nuts.
- B. If there are any missing or damaged pieces or you need assistance with assembly please contact the consumer relations department directly. Call us before going back to the store.
- 1.800.933.0771 or 972.385.0100

customerservice@kidkraft.com

canadacustomerservice@kidkraft.com

For online parts replacement visit

https://parts.kidkraft.com/

+31 20 305 8620

europcustomerservice@KidKraft.com

For online parts replacement visit

https://parts.kidkraft.eu/
- C. Read the assembly manual completely, paying special attention to ANSI warnings; notes; and safety/maintenance information on pages 1 - 6.
- D. Before you discard your cartons fill out the form below.
- The carton I.D. stamp is located on the end of each carton. The tracking number is located on the KidKraft ID Plaque (9320374).
 - Please retain this information for future reference. You will need this information if you contact the Consumer Relations Department.

MODEL NUMBER: F29075

CARTON I.D. STAMP: ___ ___ ___ ___ 14459 ___ (Box 1)

CARTON I.D. STAMP: ___ ___ ___ ___ 14459 ___ (Box 4)

CARTON I.D. STAMP: ___ ___ ___ ___ 14459 ___ (Box 2)


CARTON I.D. STAMP: ___ ___ ___ ___ 14459 ___ (Box 5)

CARTON I.D. STAMP: ___ ___ ___ ___ 14459 ___ (Box 3)

CARTON I.D. STAMP: ___ ___ ___ ___ 14459 ___ (Box 6)

TRACKING NUMBER (from ID Plaque): _____

Step 2

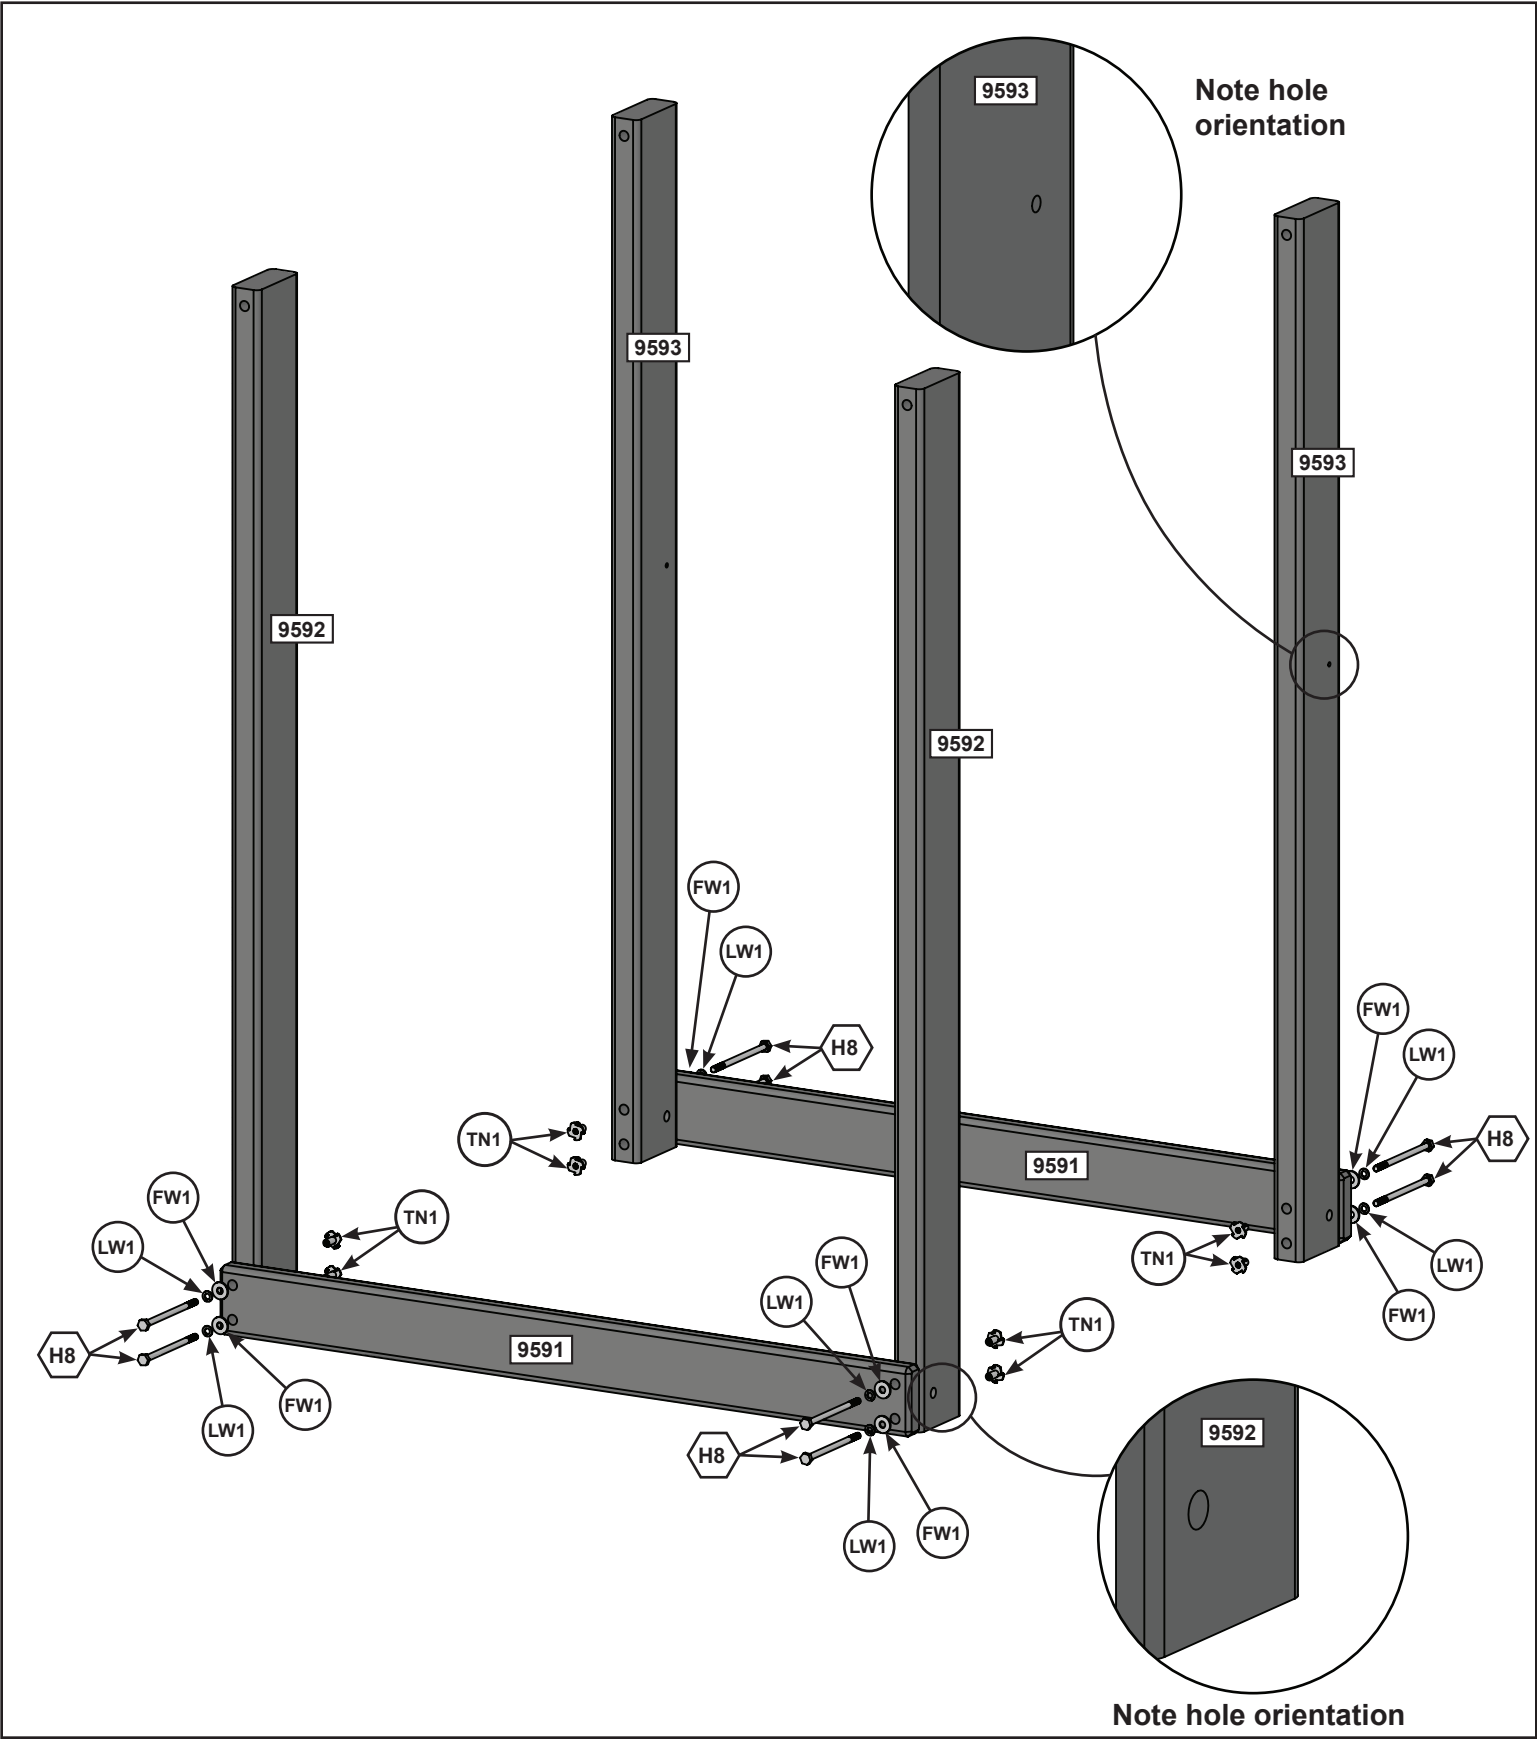



Wood Parts

- 2 x 9591 1 x 3 x 33-1/4" (25.4 x 76.2 x 844.6 mm)
- 2 x 9592 1-3/8 x 3-3/8 x 45" (34.9 x 85.7 x 1143 mm)
- 2 x 9593 1-3/8 x 3-3/8 x 45" (34.9 x 85.7 x 1143 mm)

Hardware

- 8 x H8 1/4 x 4-1/4" (108mm) (FW1, LW1, TN1)

Step 3

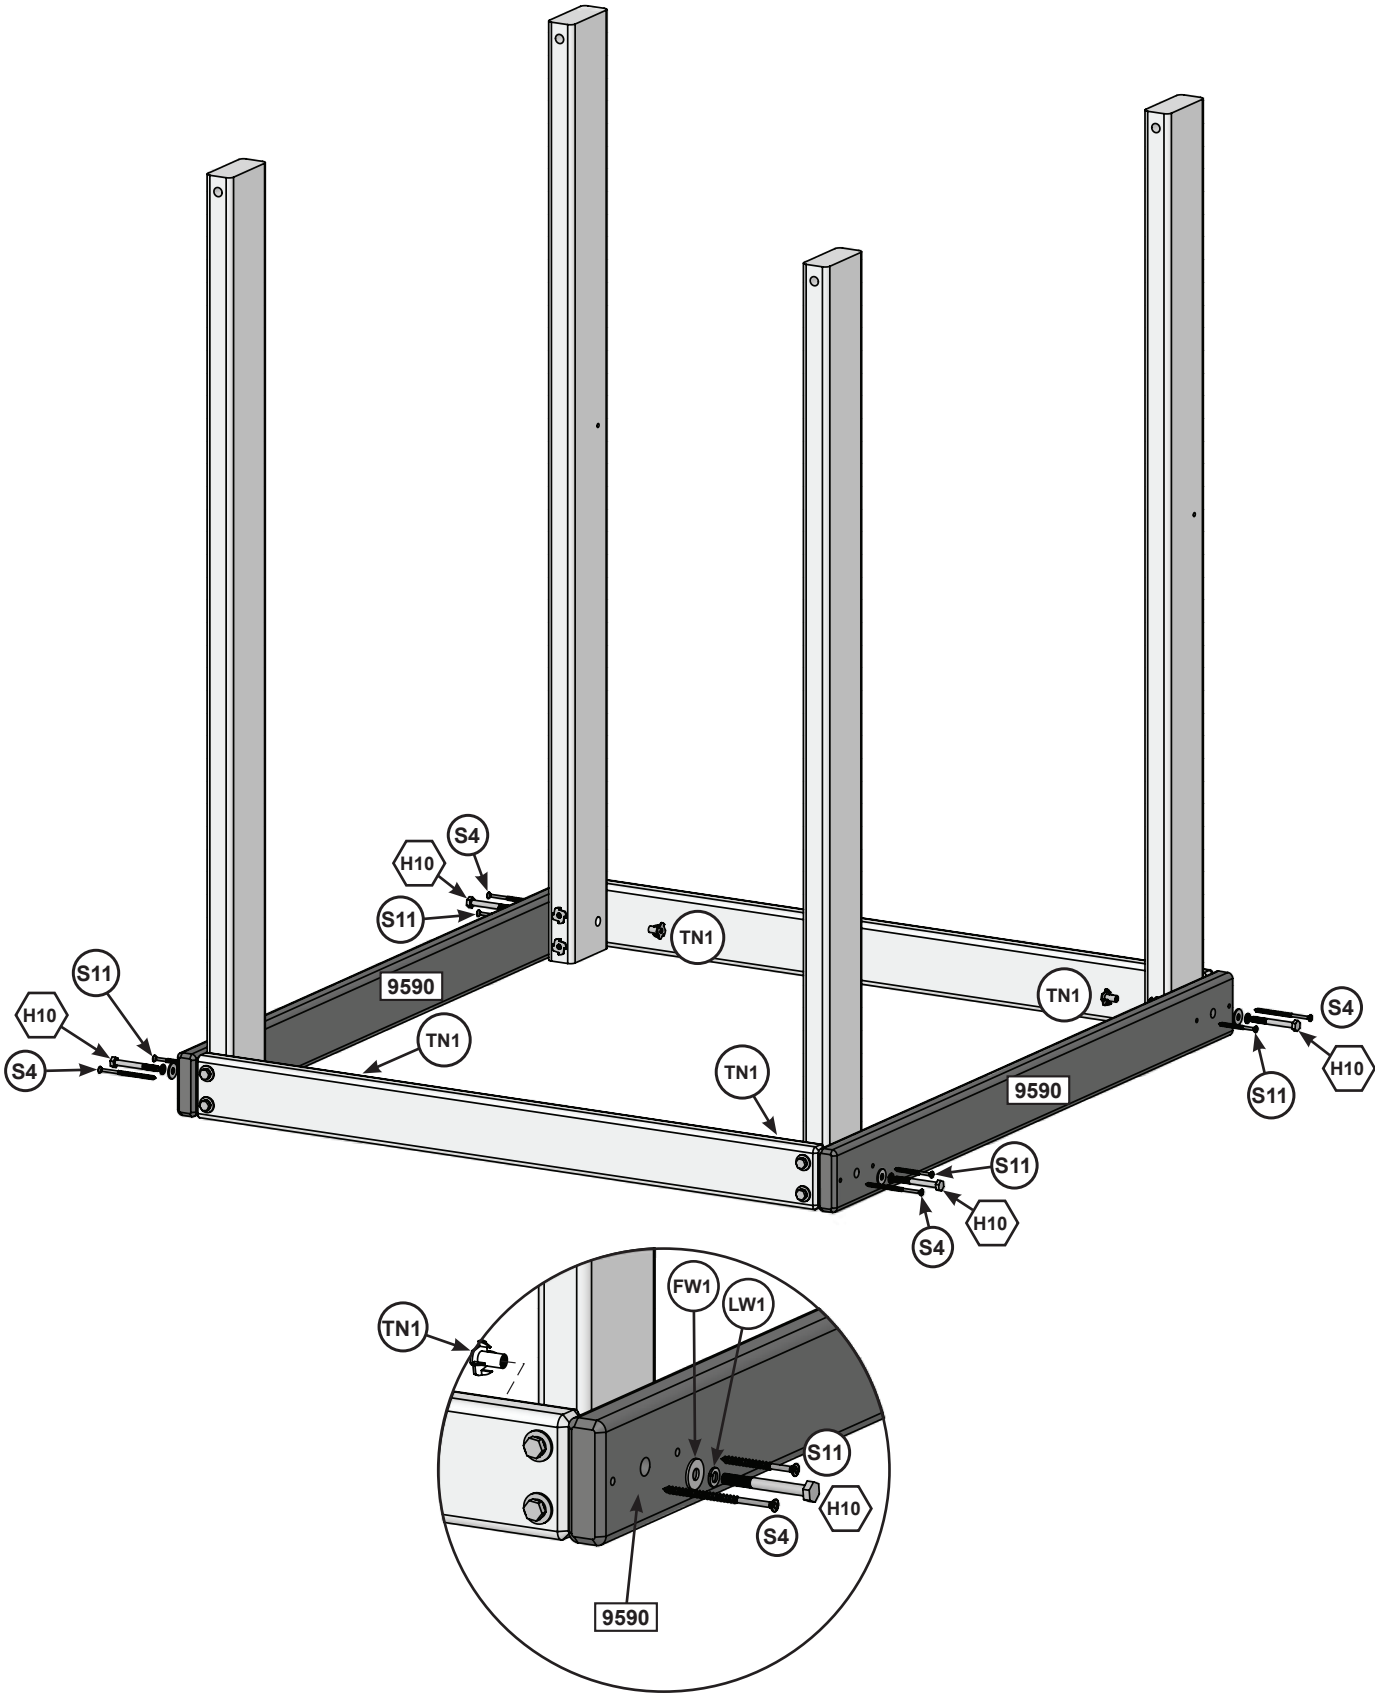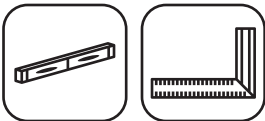


Wood Parts

2 x 9590 1 x 3 x 37" (25.4 x 76.2 x 939.8 mm)

Hardware

- 4 x H10 1/4 x 2-1/4" (57.1mm) (FW1, LW1, TN1)
- 4 x S4 #8 x 3" (76.2 mm)
- 4 x S11 #8 x 2" (50.8 mm)

Step 4

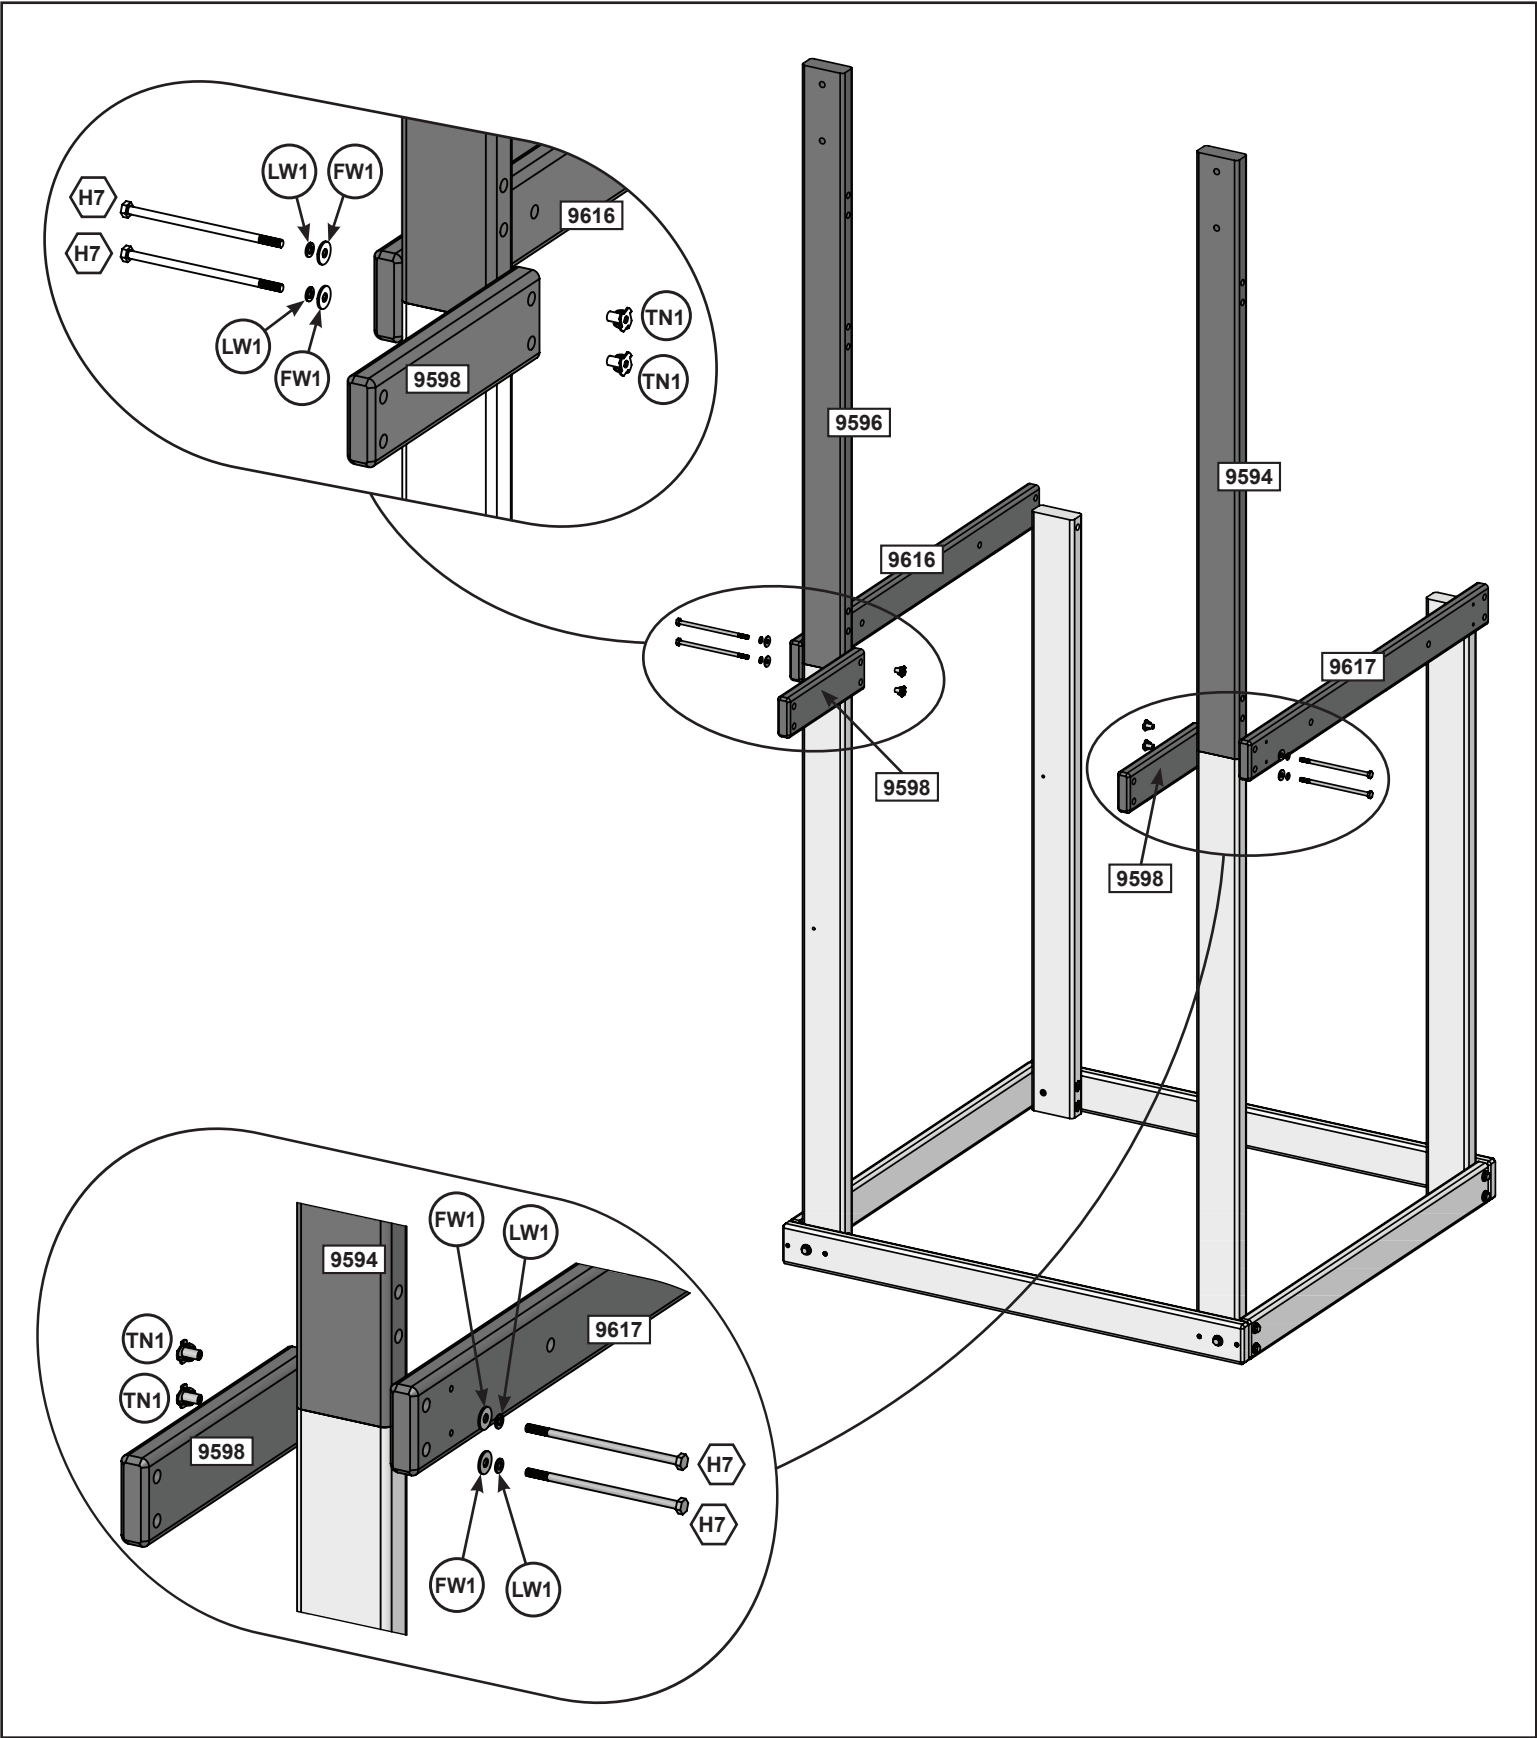


Wood Parts

1 x 9594	1-3/8 x 3-3/8 x 45" (34.9 x 85.7 x 1143 mm)	1 x 9616	1 x 3 x 33-1/4" (25.4 x 76.2 x 844.6 mm)
1 x 9596	1-3/8 x 3-3/8 x 45" (34.9 x 85.7 x 1143 mm)	1 x 9617	1 x 3 x 33-1/4" (25.4 x 76.2 x 844.6 mm)
2 x 9598	1 x 3 x 10-5/8" (25.4 x 76.2 x 269.9 mm)		

Hardware

4 x  1/4 x 5-1/2" (139.7 mm)
(FW1, LW1, TN1)

Step 5

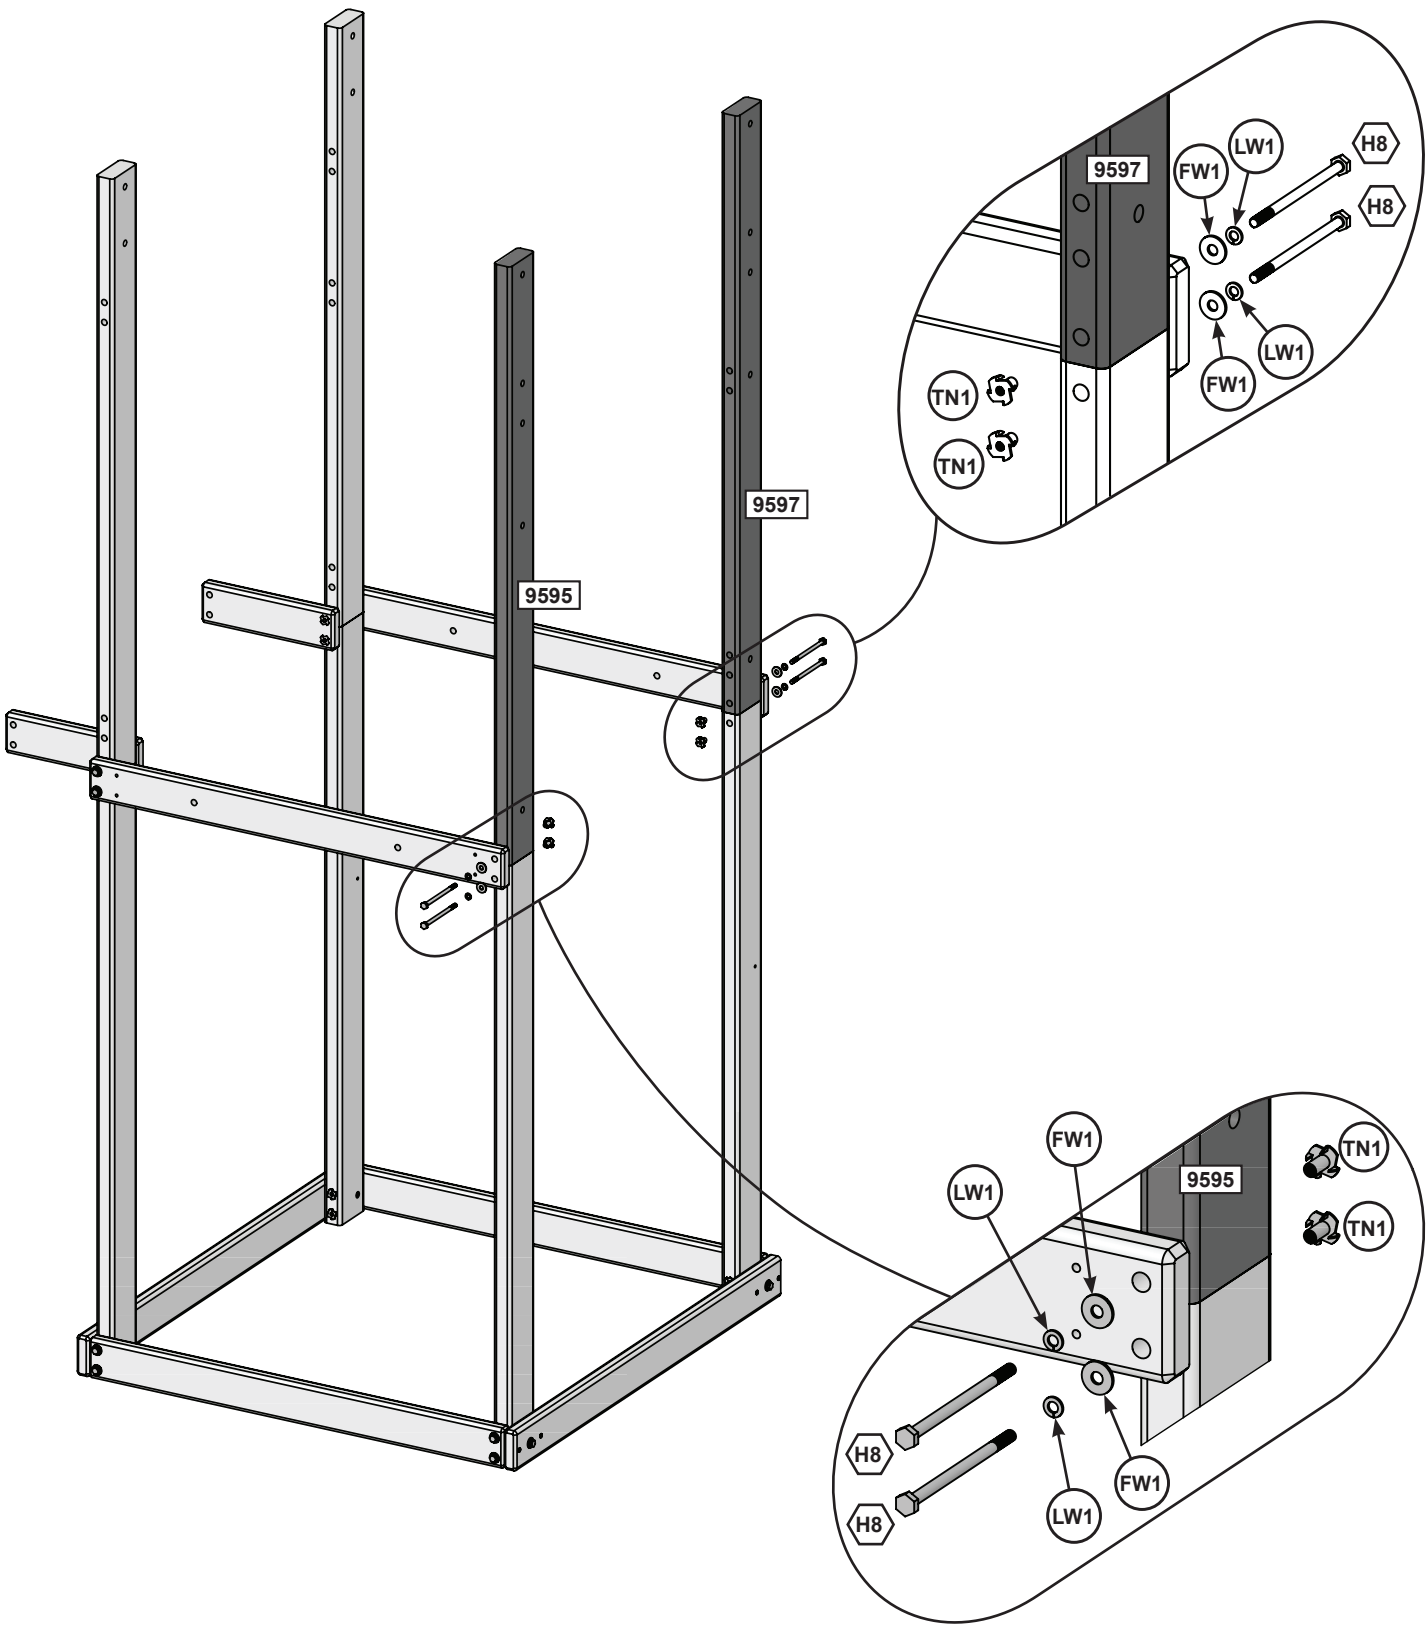



Wood Parts

- 1 x 9595 1-3/8 x 3-3/8 x 45" (34.9 x 85.7 x 1143 mm)
- 1 x 9597 1-3/8 x 3-3/8 x 45" (34.9 x 85.7 x 1143 mm)

Hardware

- 4 x H8 1/4 x 4-1/4" (108mm) (FW1, LW1, TN1)

Step 6

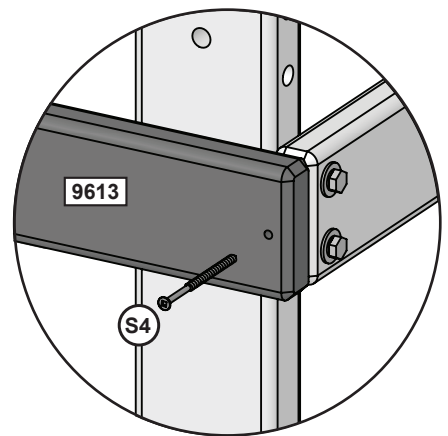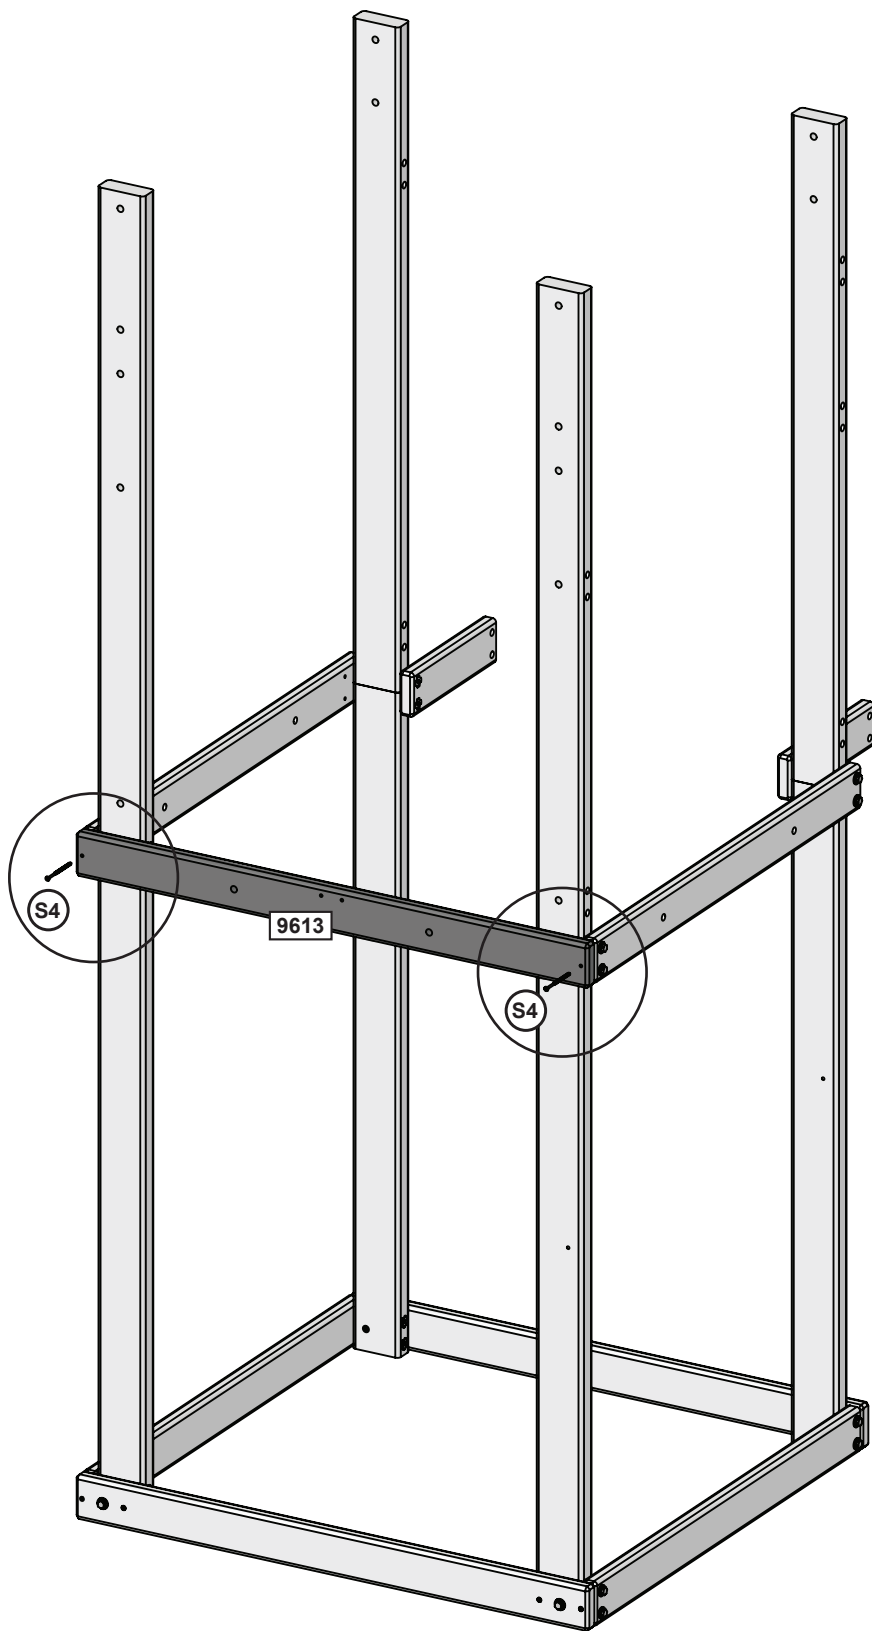



Wood Parts

1 x 9613 1 x 3 x 37" (25.4 x 76.2 x 939.8 mm)


Hardware

2 x S4 #8 x 3" (76.2 mm)

Step 7

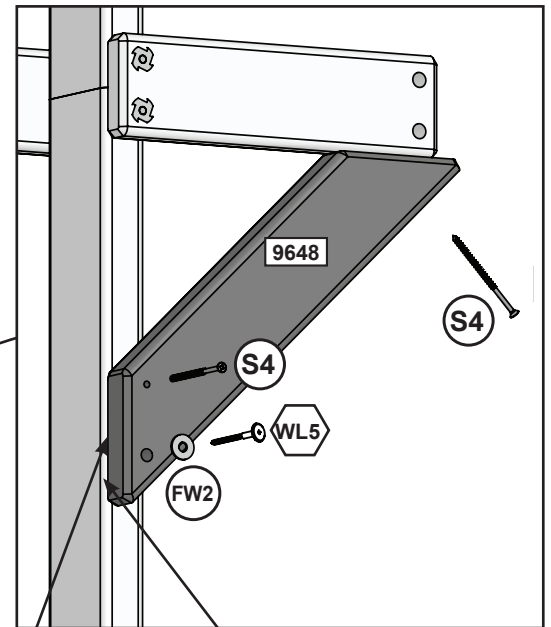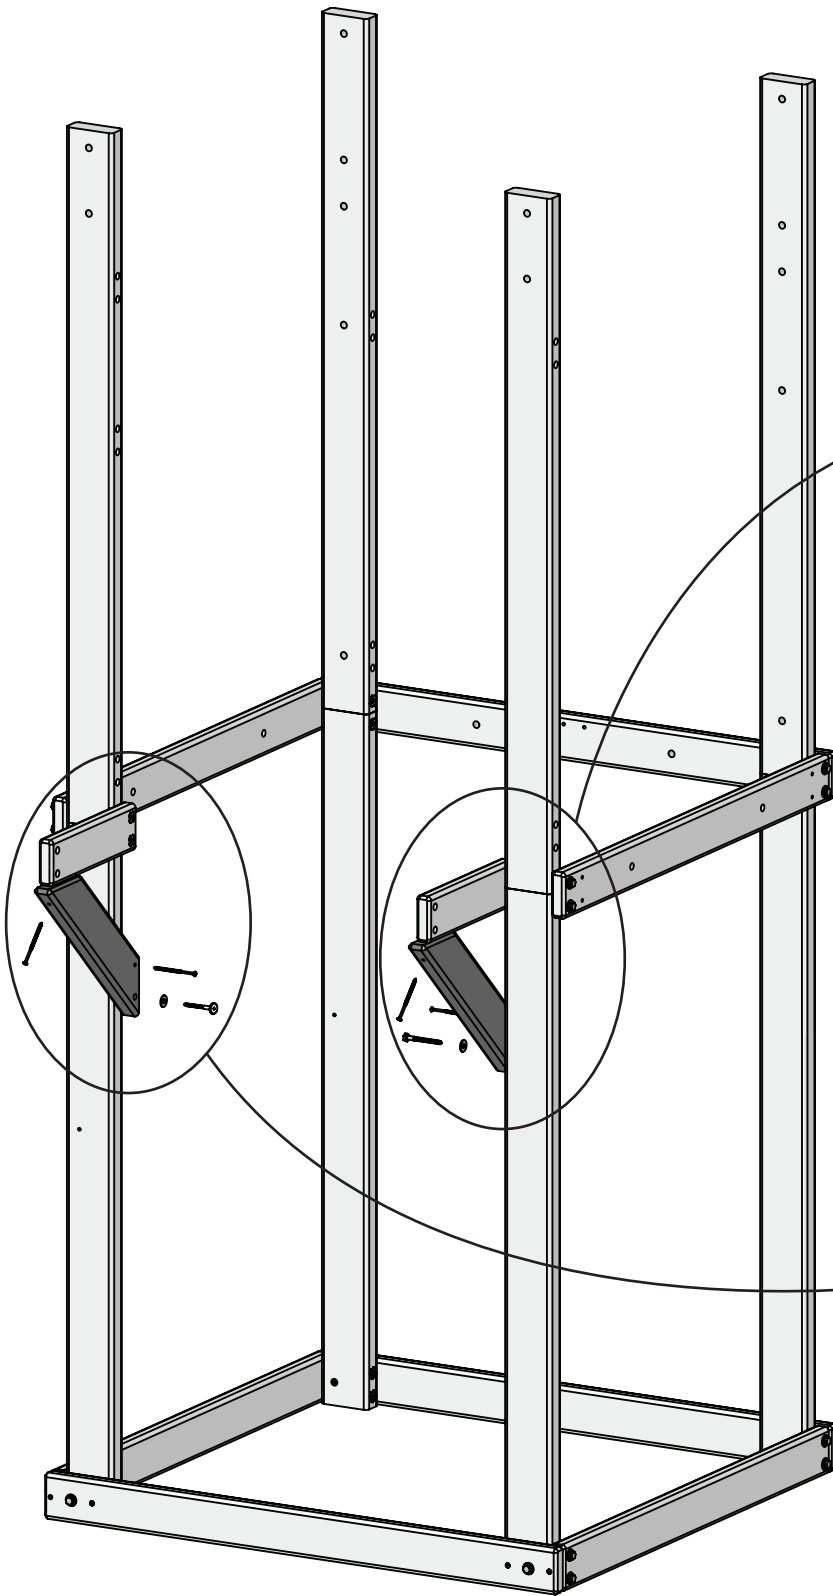

Pre-drill each hole using a 1/8" drill bit for WL5.

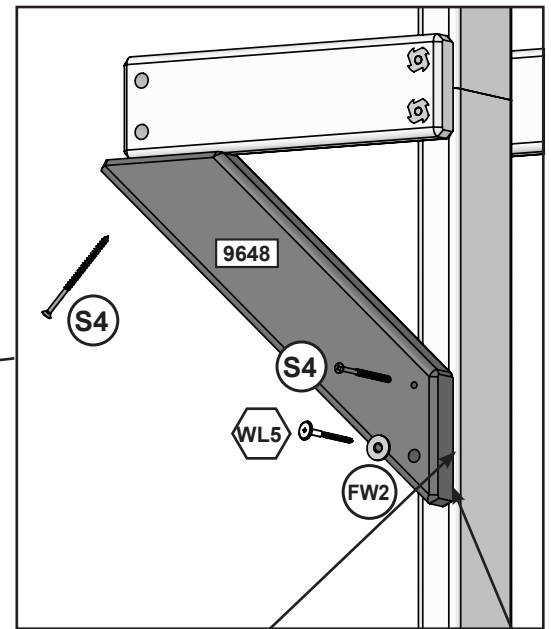

Pre-drill each hole using a 1/8" drill bit for WL5. Flush

Wood Parts


2 x 9648 1-1/4 x 3 x 15-9/16" (31.8 x 76.2 x 395.2 mm)

Hardware

2 x WL5 1/4 x 2-1/2" (63.5 mm) (FW2)

4 x S4 #8 x 3" (76.2 mm)

Step 8

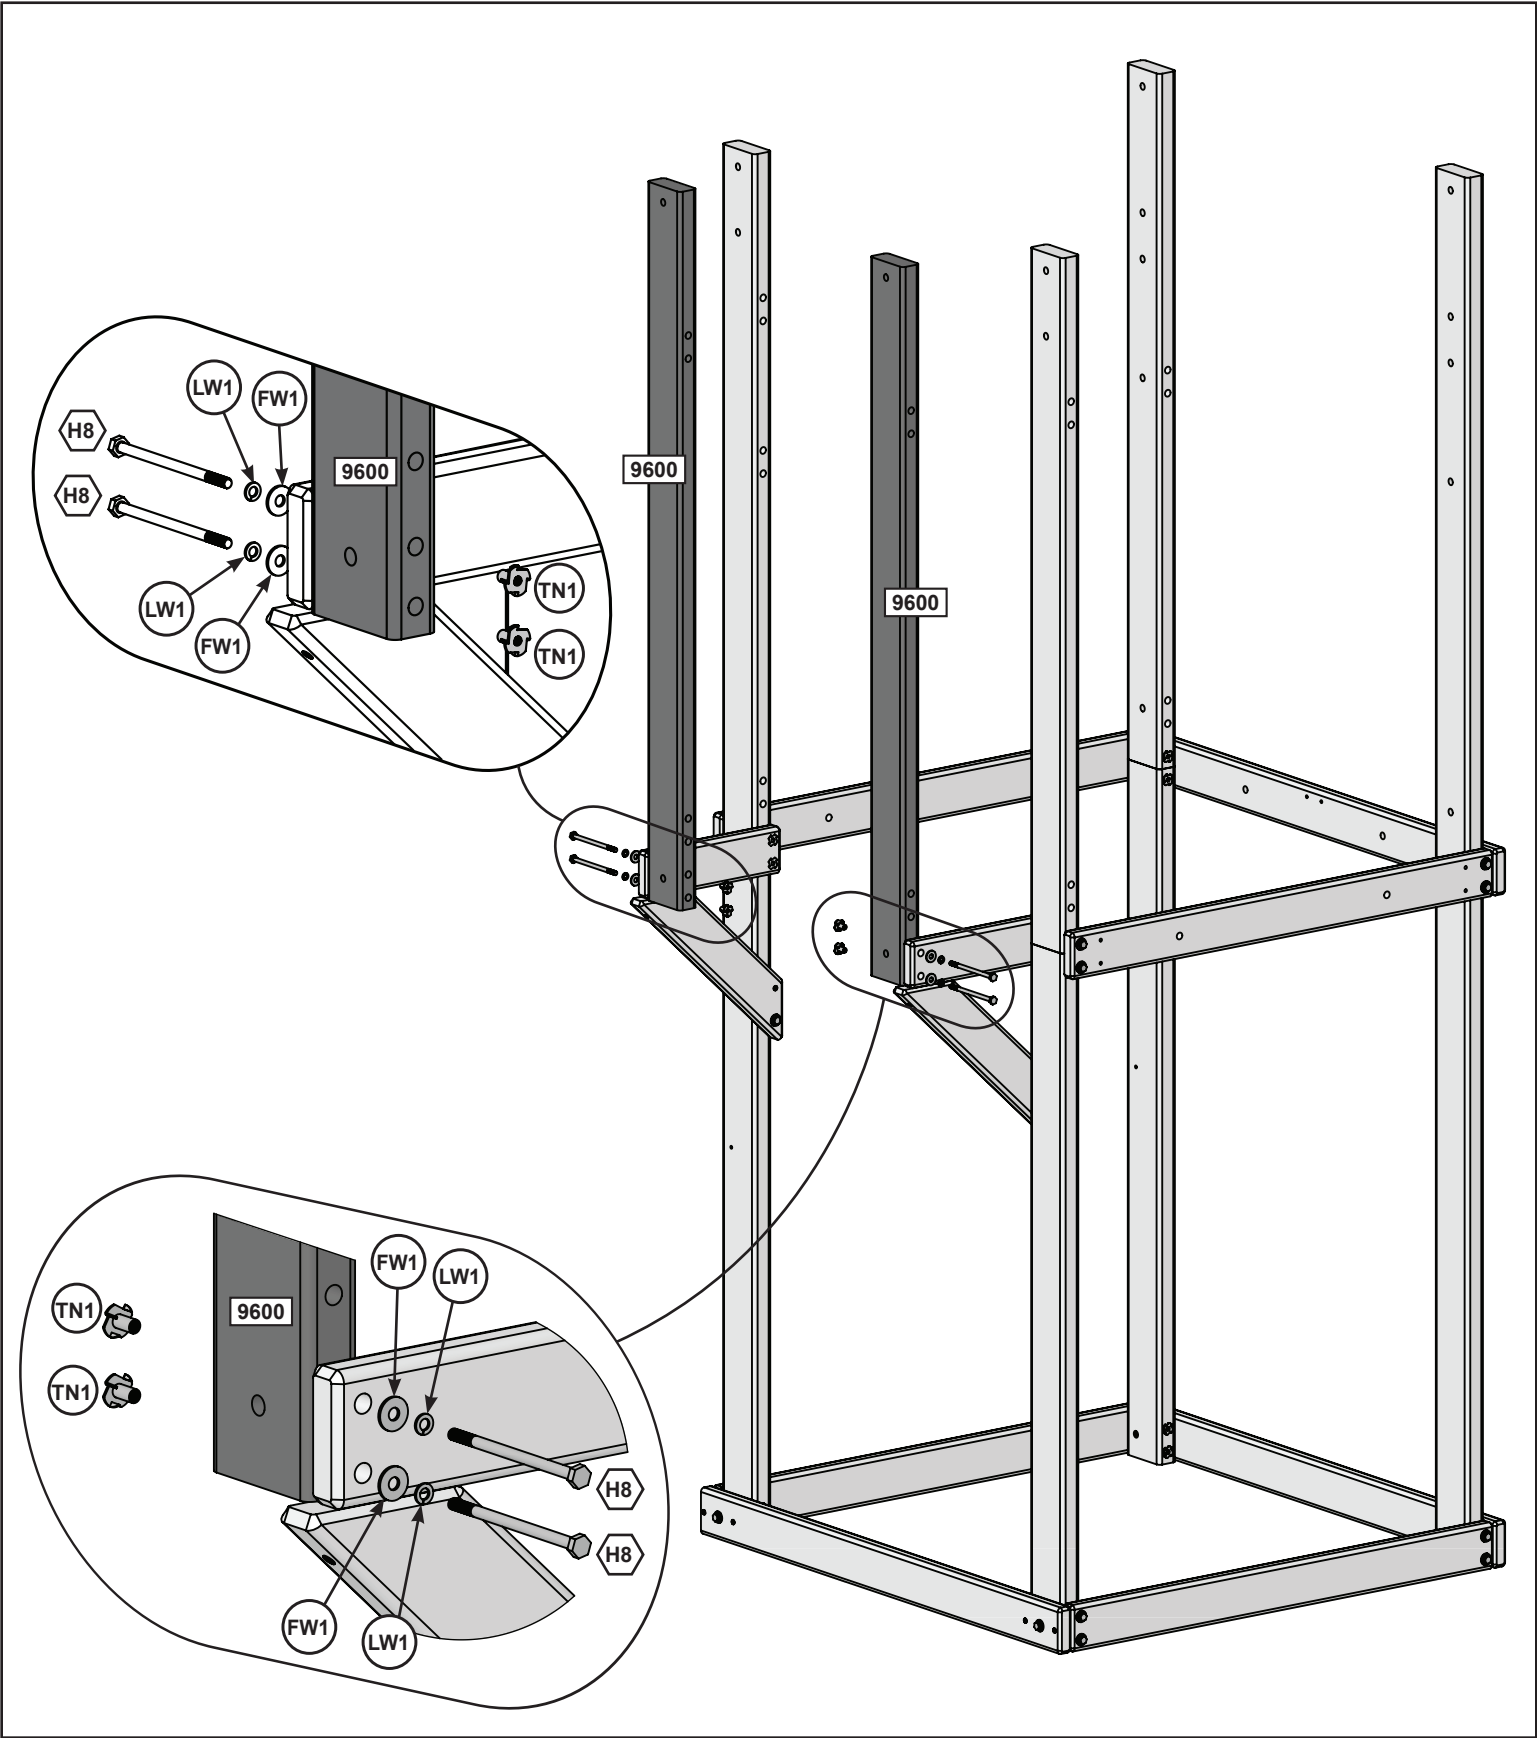


Wood Parts

2 x 9600 1-3/8 x 3-3/8 x 46-1/2" (34.9 x 85.7 x 1181.1 mm)

Hardware

4 x H8 1/4 x 4-1/4" (108mm) (FW1, LW1, TN1)

Step 9

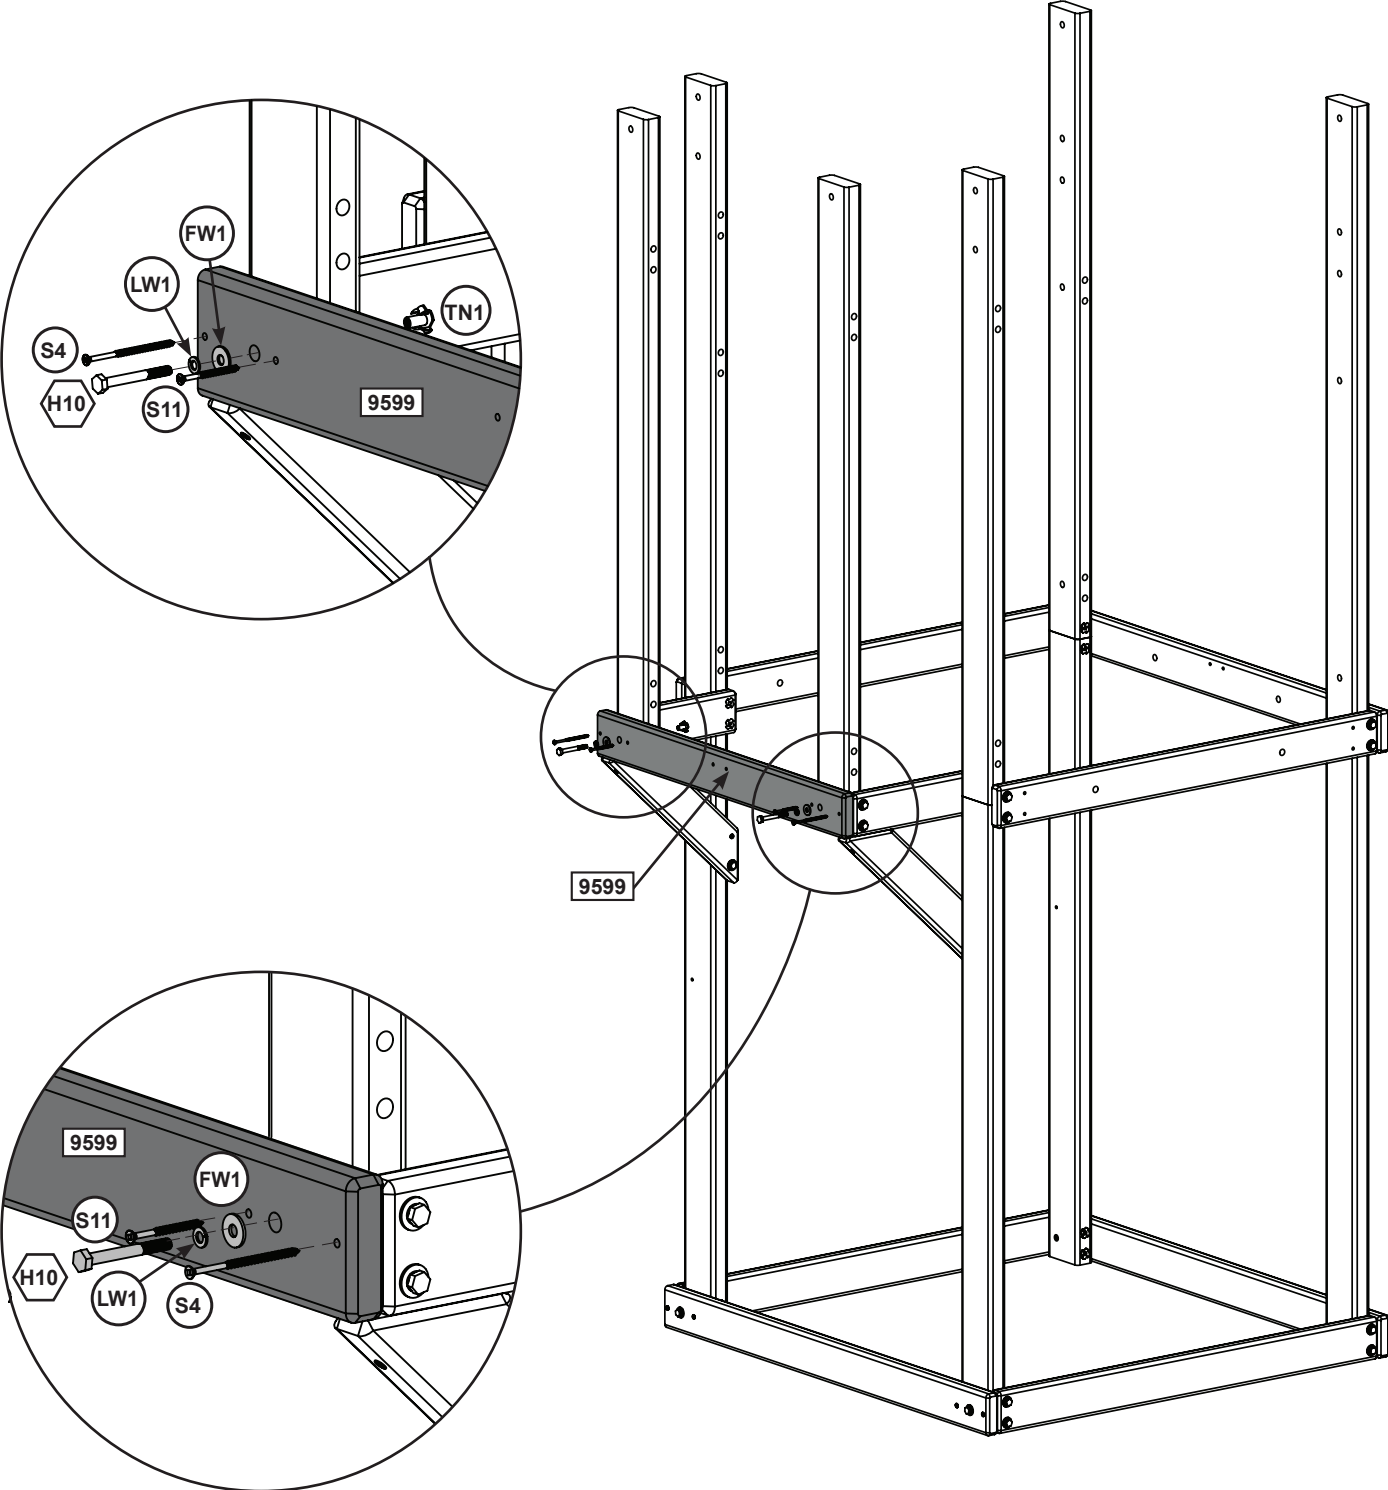



Wood Parts

1 x 9599 1 x 3 x 28-1/4" (25.4 x 76.2 x 717.6 mm)

Hardware

- 2 x H10 1/4 x 2-1/4" (57.1mm) (FW1, LW1, TN1)
- 2 x S4 #8 x 3" (76.2 mm)
- 2 x S11 #8 x 2" (50.8 mm)

Step 10

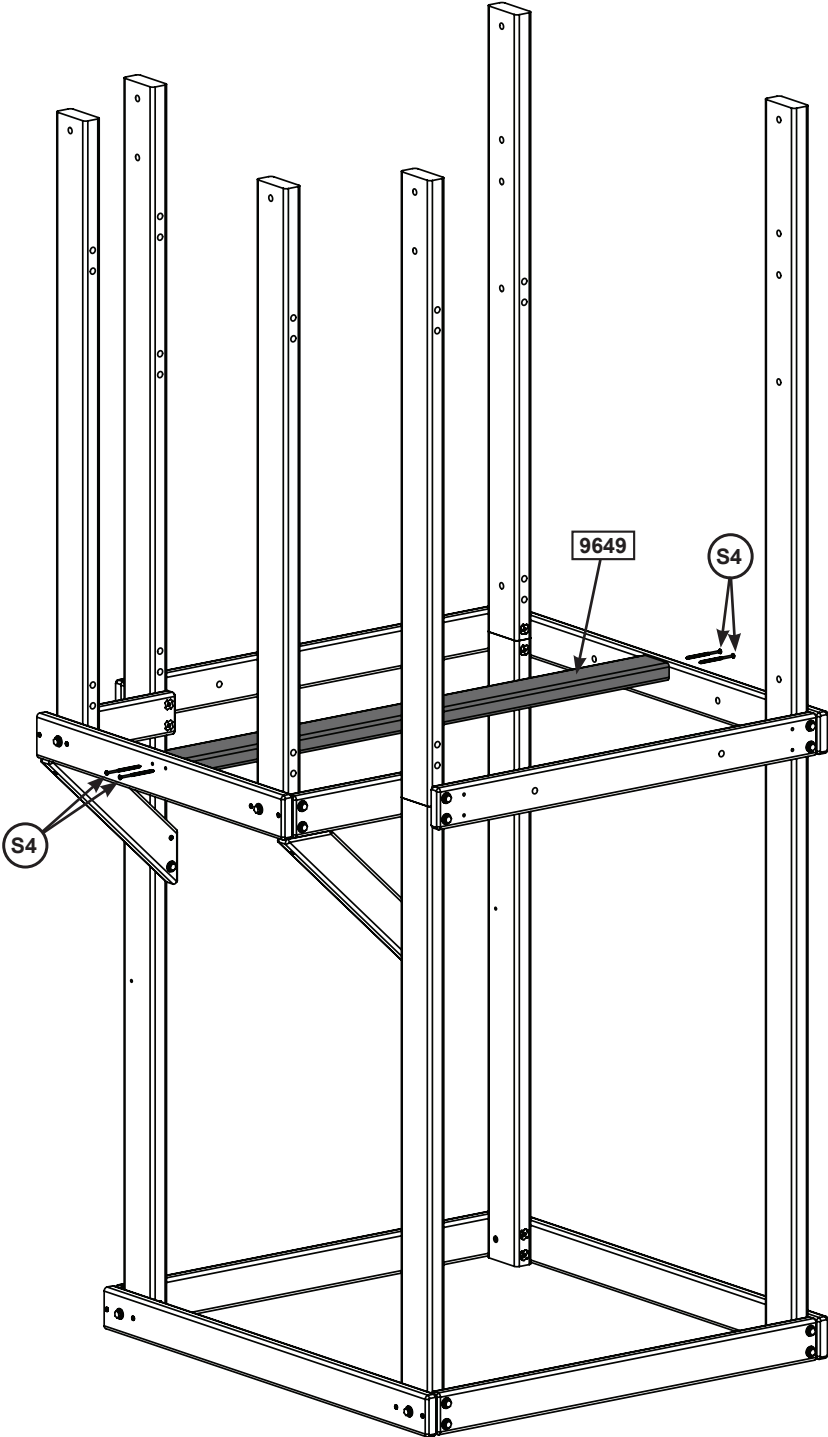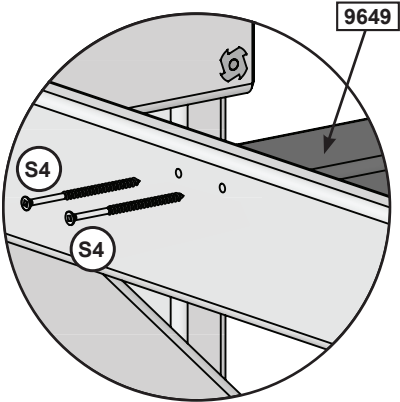



Wood Parts

1 x 9649 1-1/4 x 3 x 42-1/2" (31.8 x 76.2 x 1079.5 mm)

Hardware

4 x S4 #8 x 3" (76.2 mm)

Step 11

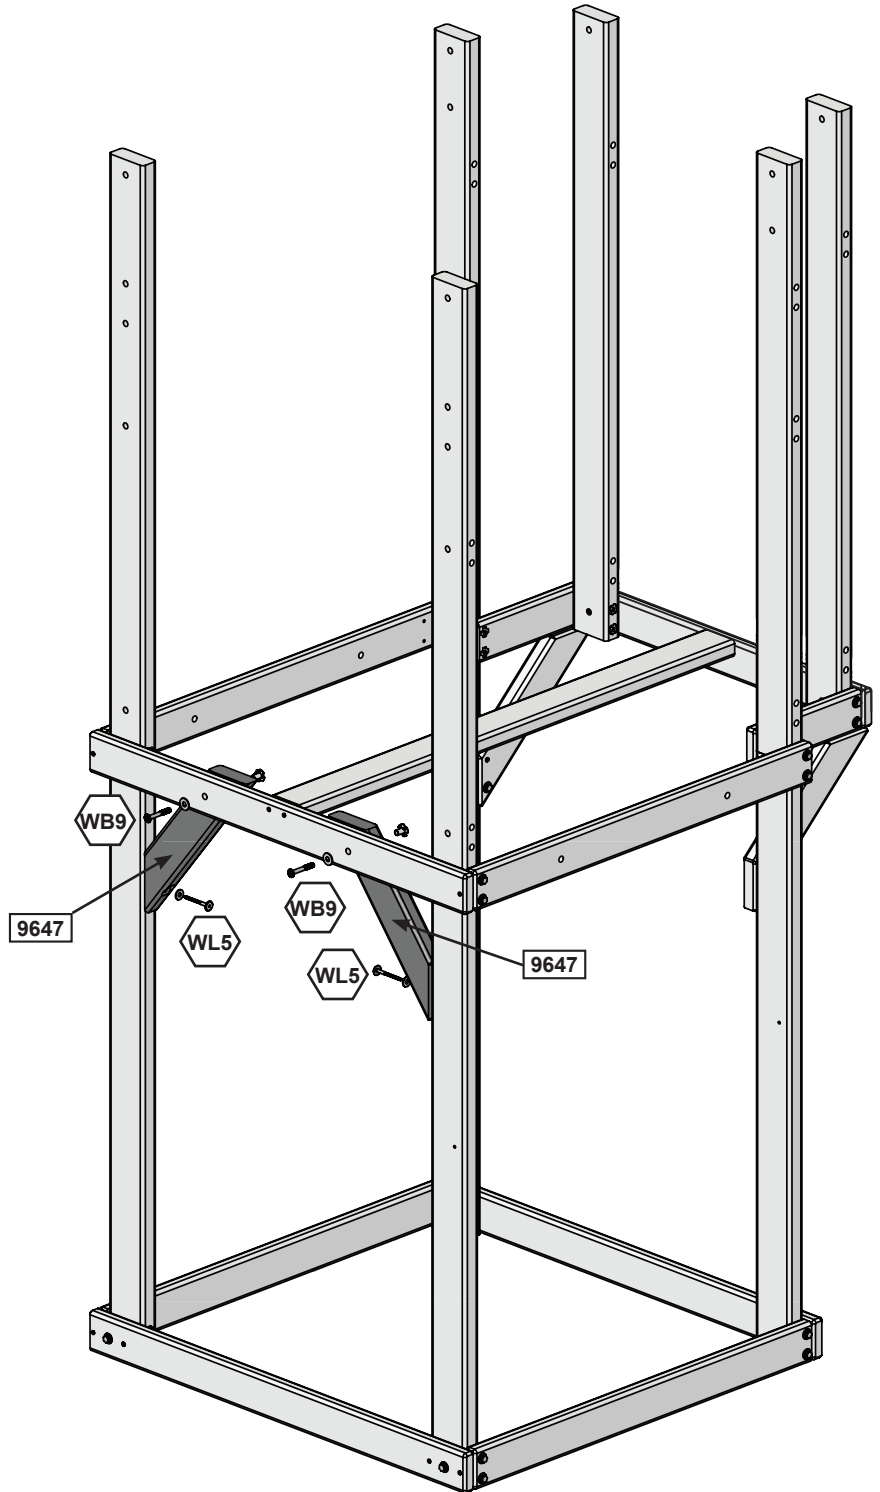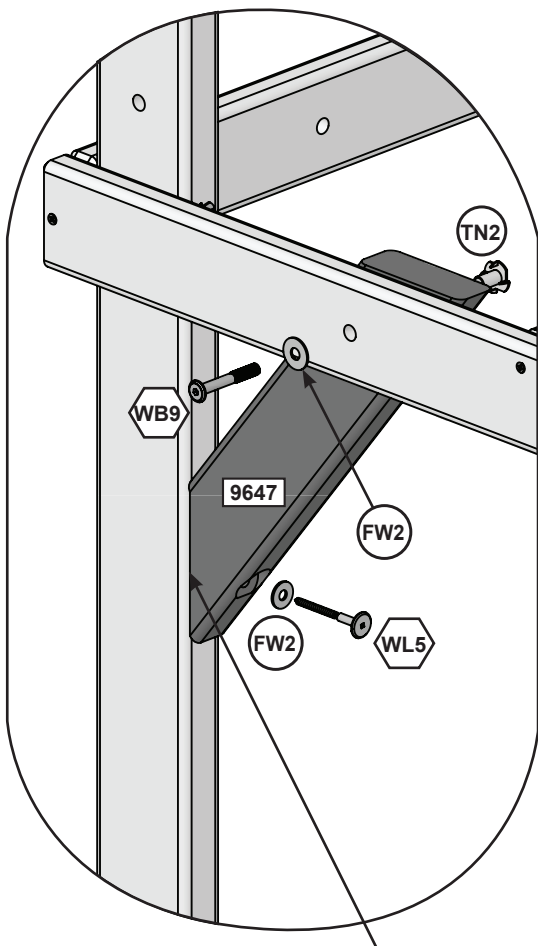

Pre-drill each hole using a 1/8" drill bit for WL5.

Wood Parts



2 x 9647 1-1/4 x 3 x 16-1/2" (31.8 x 76.2 x 419.1 mm)

Hardware

2 x WL5 1/4 x 2-1/4" (57.1 mm) (FW2)

2 x WB9 5/16 x 2-1/8" (54 mm) (FW2, TN2)

Step 12

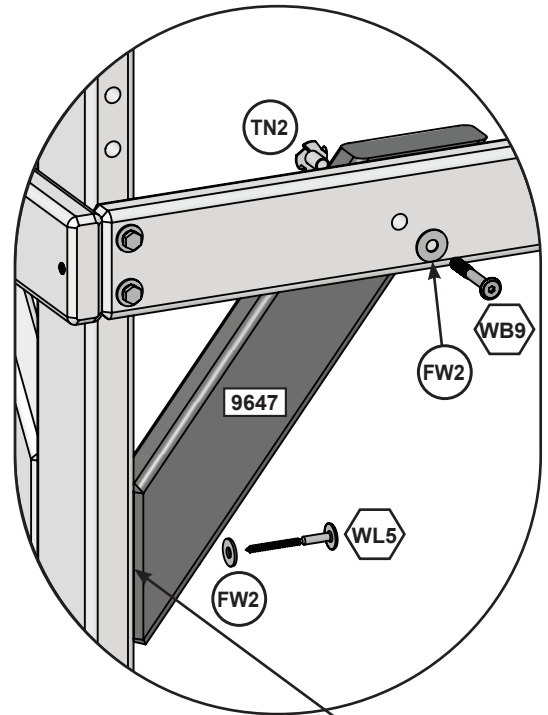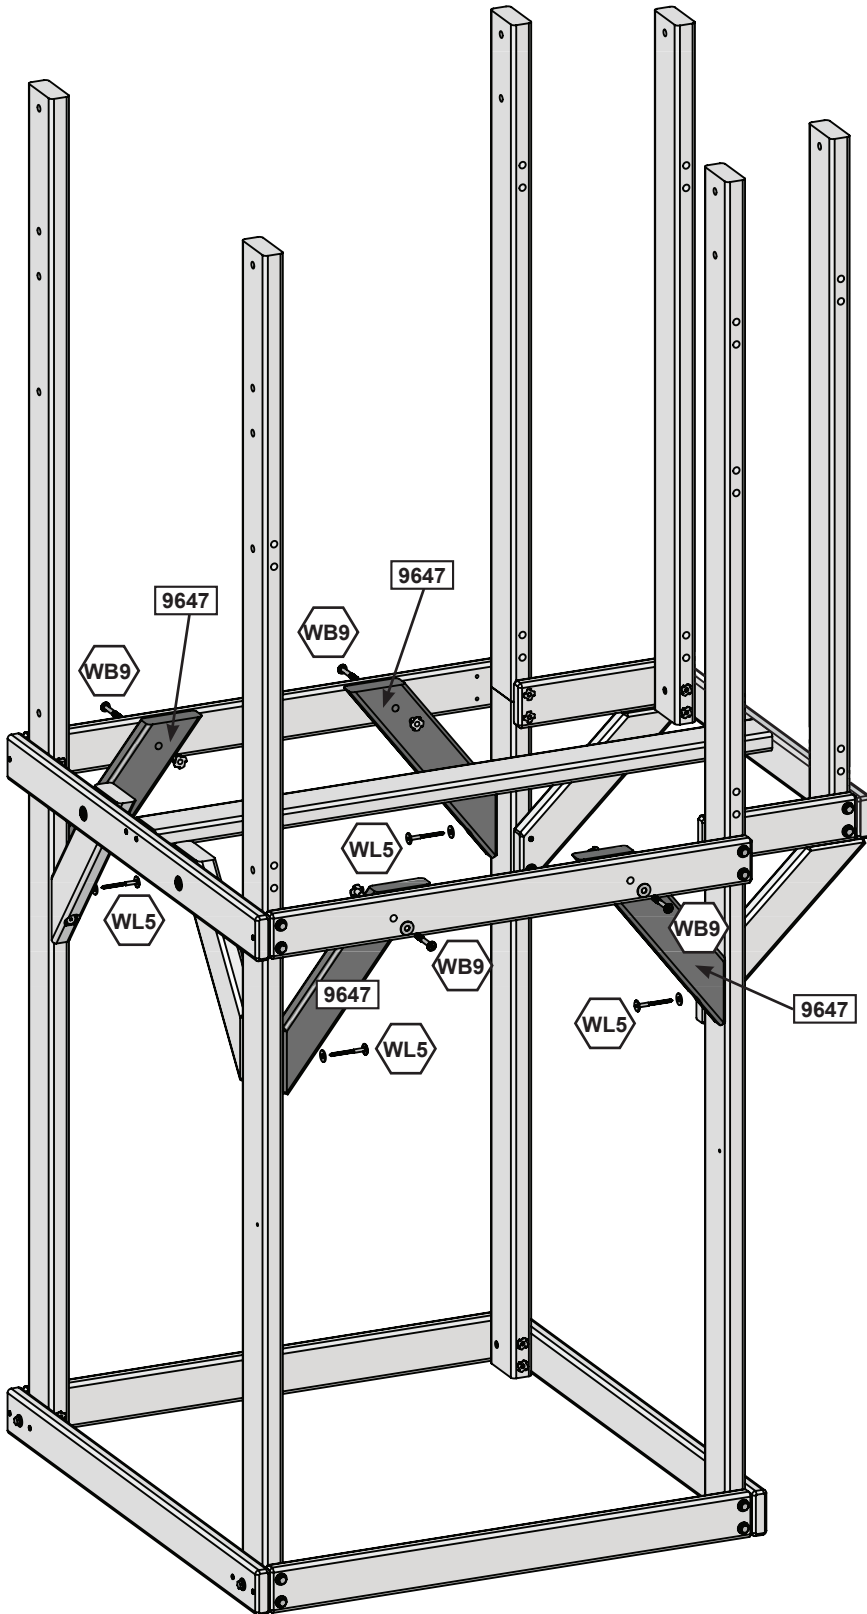

Pre-drill each hole using a 1/8" drill bit for WL5.

Wood Parts







4 x 9647 1-1/4 x 3 x 16-1/2" (31.8 x 76.2 x 419.1 mm)

Hardware

4 x WL5 1/4 x 2-1/4" (57.1 mm) (FW2)

4 x WB9 5/16 x 2-1/8" (54 mm) (FW2, TN2)

Step 13

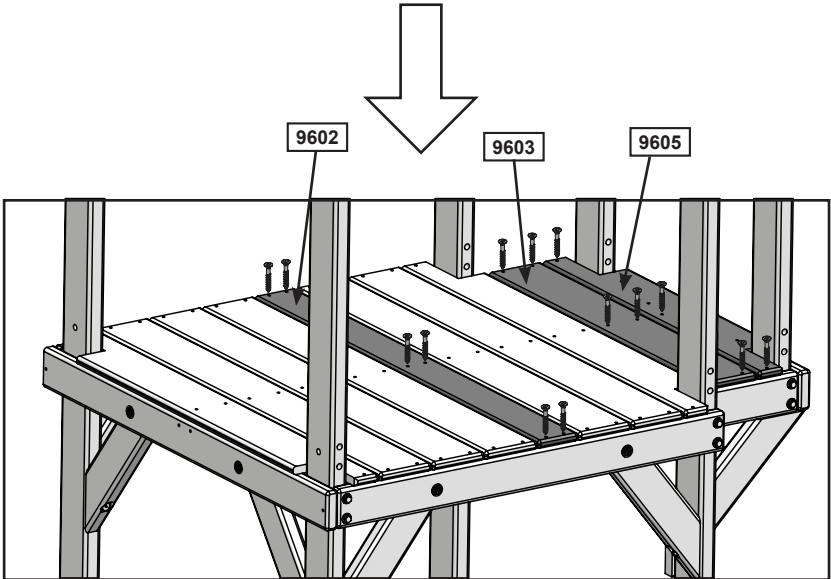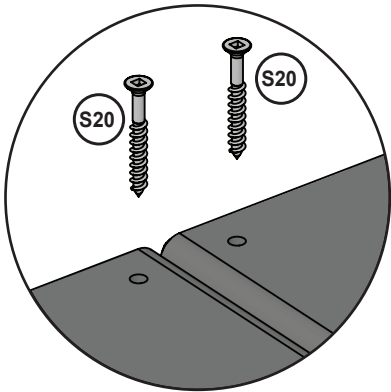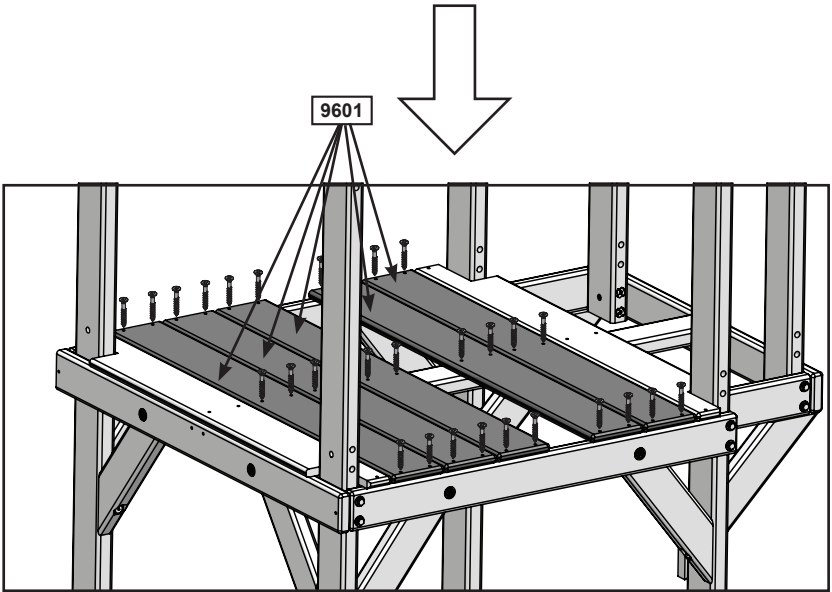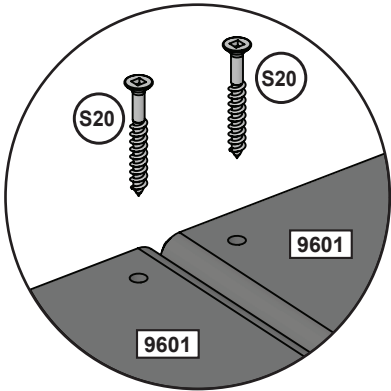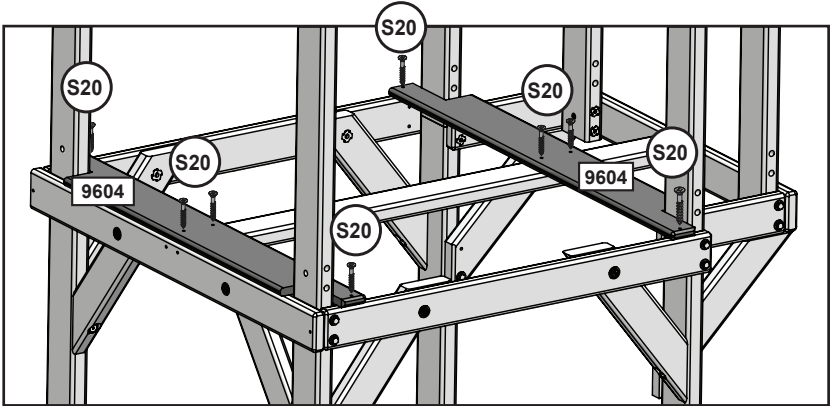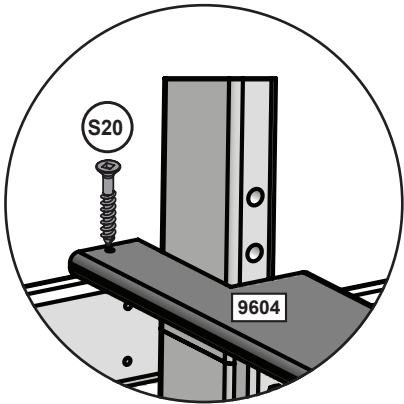

Wood Parts


- 5 x 9601 5/8 x 4-1/2 x 37" (15.9 x 114.3 x 939.8 mm)
1 x 9602 5/8 x 3-1/2 x 37" (15.9 x 88.9 x 939.8 mm)
1 x 9603 5/8 x 4-1/2 x 28-1/4" (15.9 x 114.3 x 717.6 mm)

- 2 x 9604 5/8 x 4-1/2 x 37" (15.9 x 114.3 x 939.8 mm)
1 x 9605 5/8 x 4-1/2 x 28-1/4" (15.9 x 114.3 x 717.6 mm)

Hardware

- 54 x S20 #8 x 1-3/8" (35 mm)

Step 14

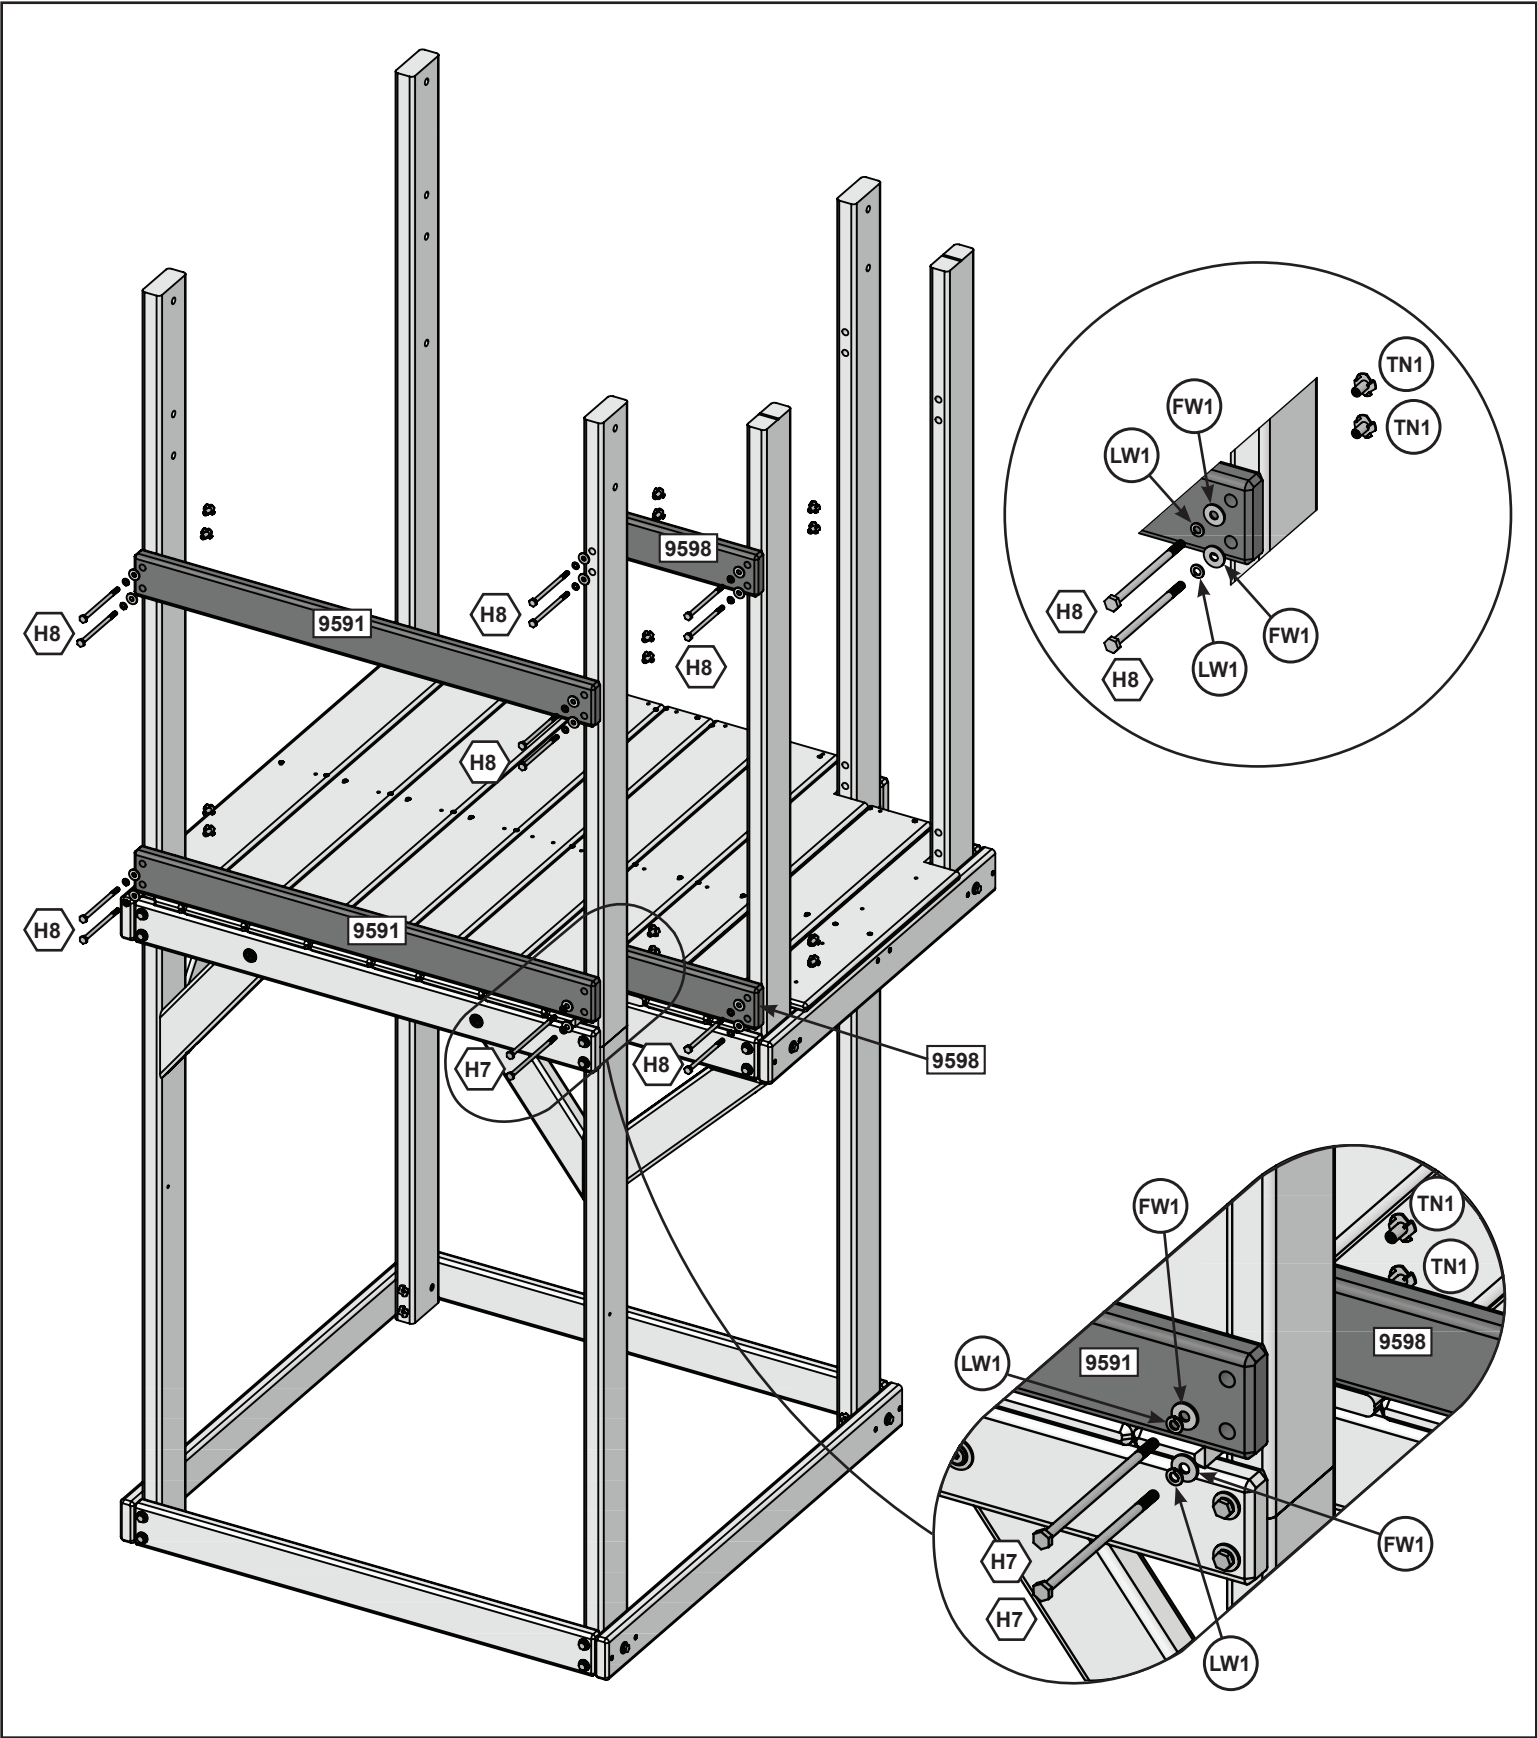



Wood Parts

- 2 x 9591 1 x 3 x 33-1/4" (25.4 x 76.2 x 844.6 mm)
2 x 9598 1 x 3 x 10-5/8" (25.4 x 76.2 x 269.9 mm)

Hardware

- 2 x H7 1/4 x 5-1/2" (140 mm) (FW1, LW1, TN1)
12 x H8 1/4 x 4-1/4" (108 mm) (FW1, LW1, TN1)

Step 15

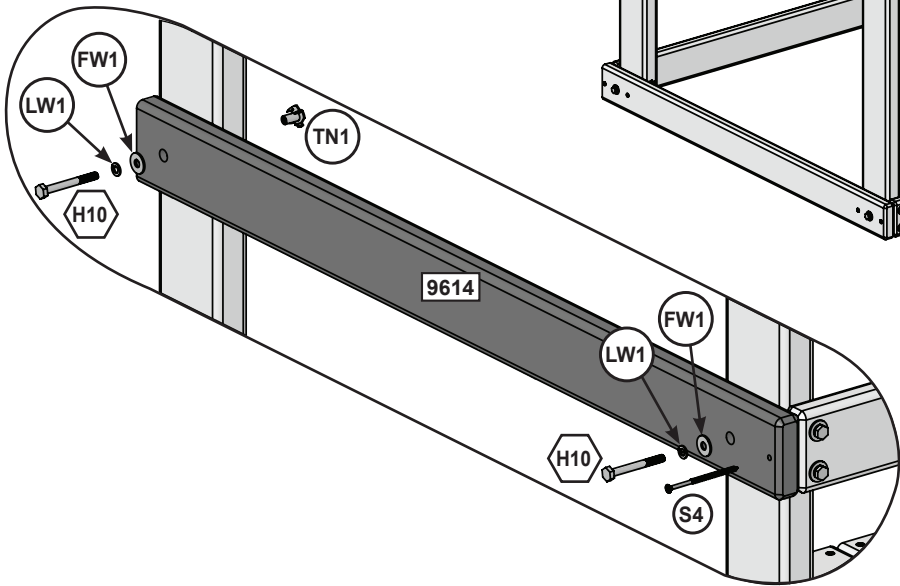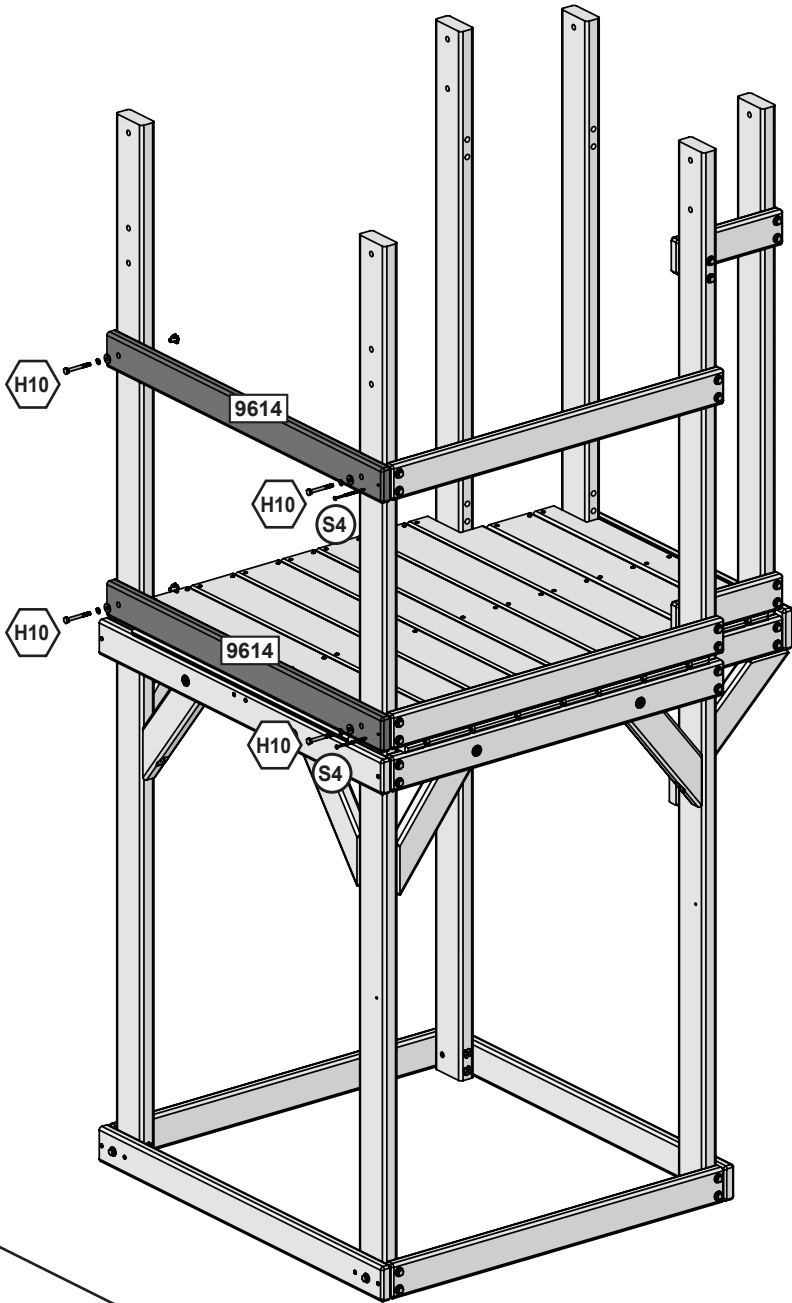

Wood Parts


2 x 9614 1 x 3 x 36" (25.4 x 76.2 x 914.4 mm)

Hardware

4 x H10 1/4 x 2-1/4" (57.2 mm) (FW1, LW1, TN1)

2 x S4 #8 x 3" (76.2 mm)

Step 16

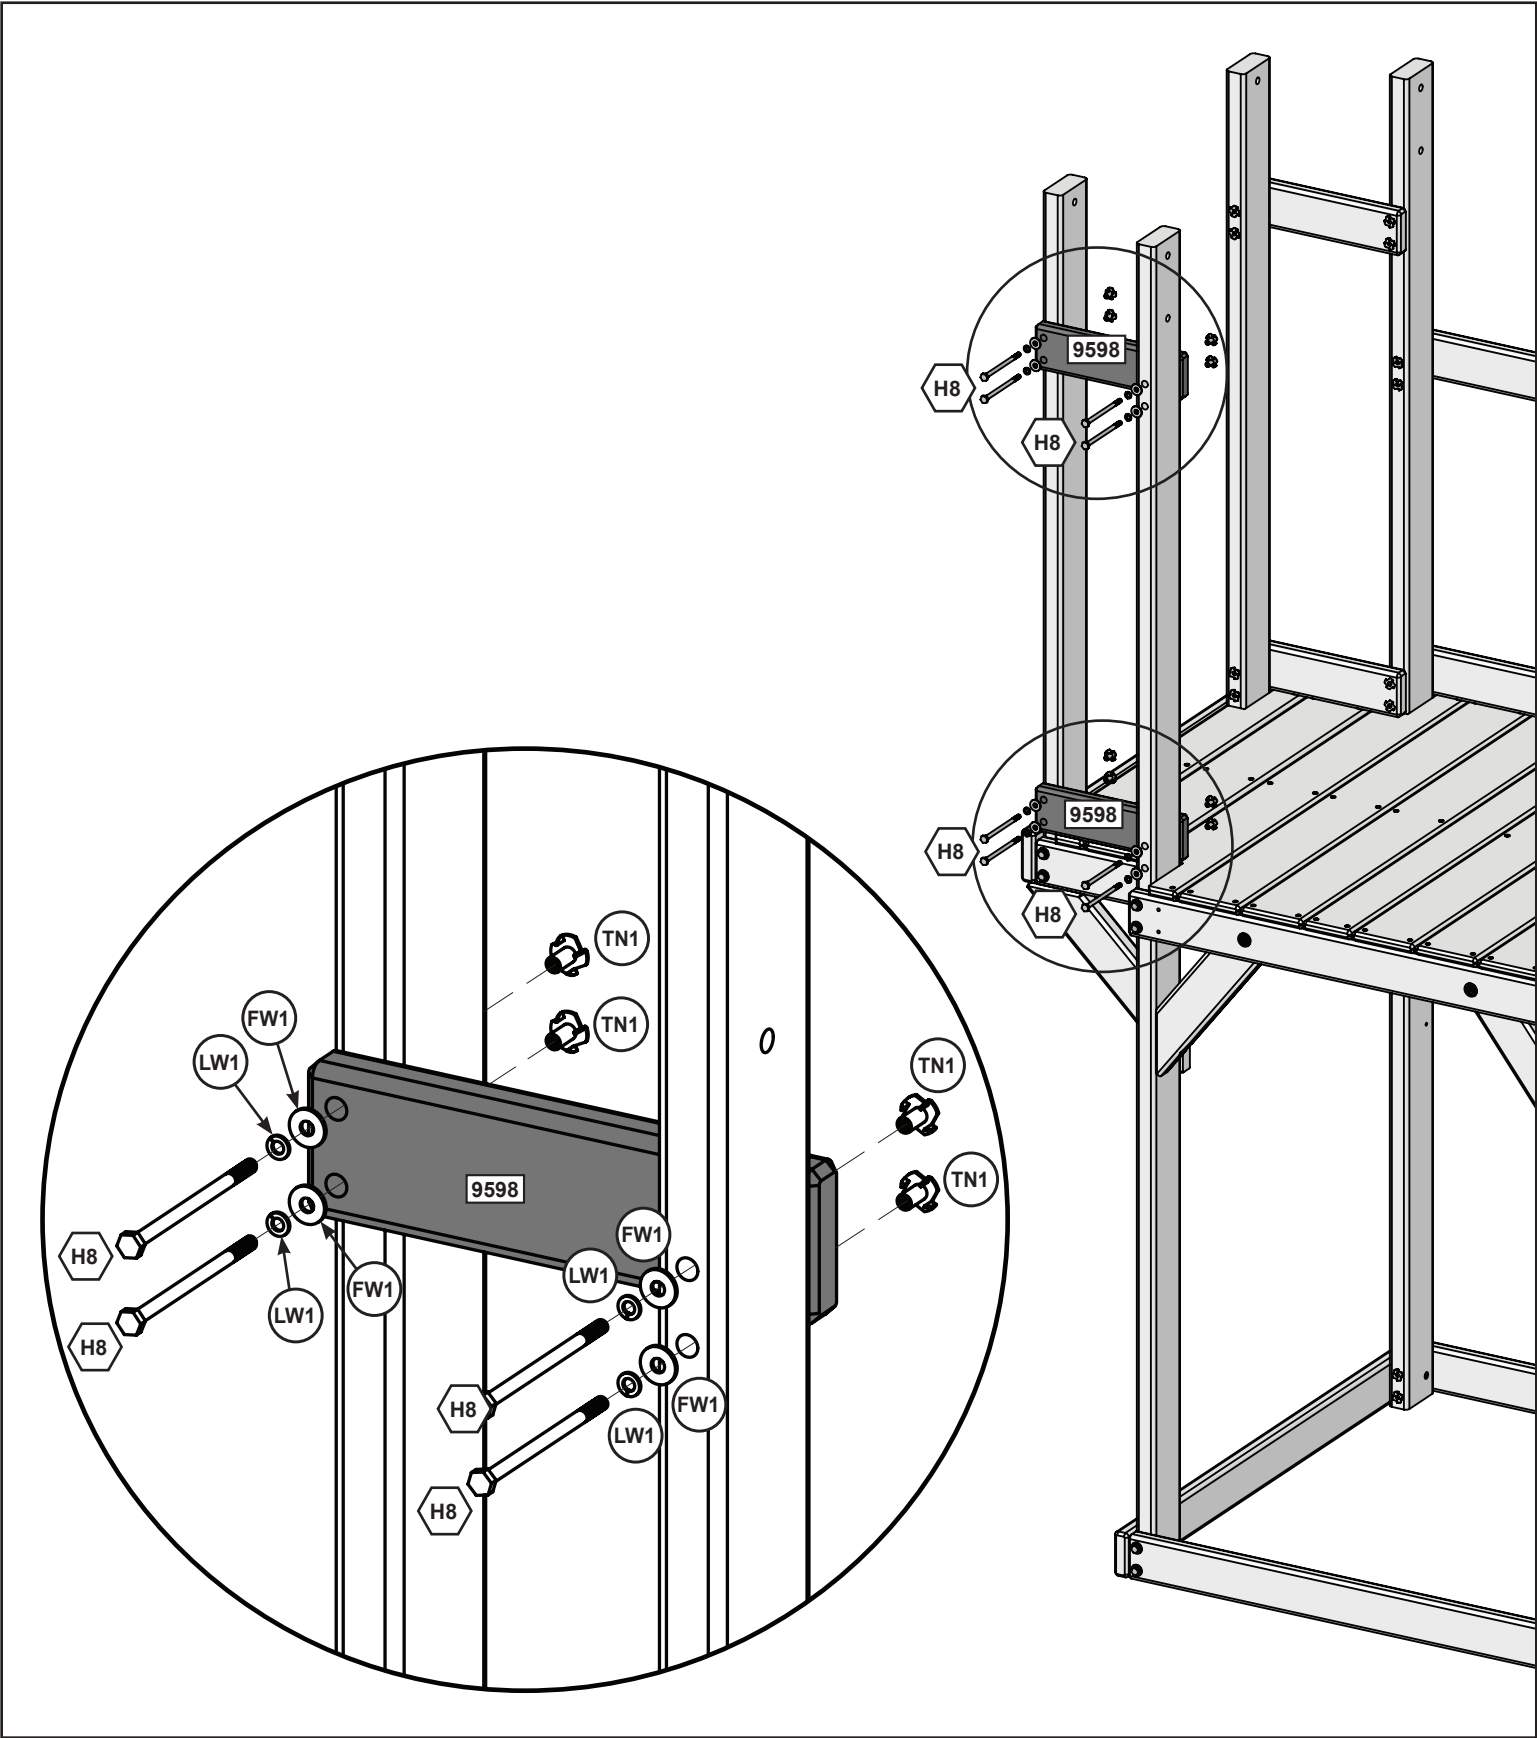



Wood Parts

2 x 9598 1 x 3 x 10-5/8" (25.4 x 76.2 x 269.9 mm)


Hardware

8 x H8 1/4 x 4-1/4" (108 mm) (FW1, LW1, TN1)

Step 17

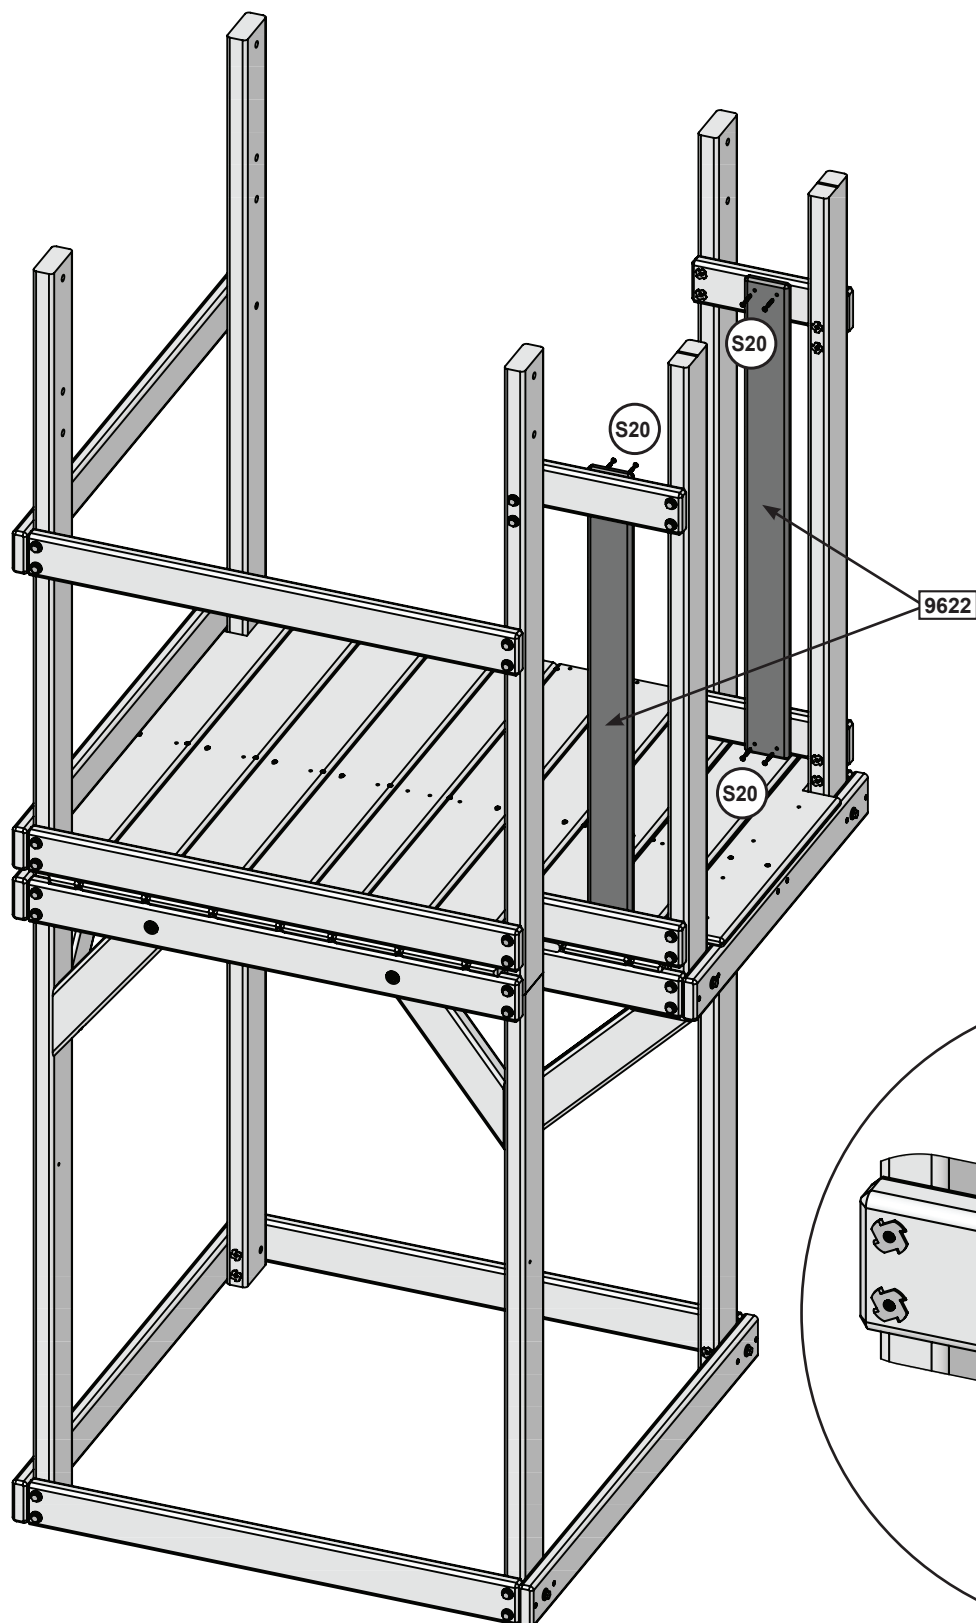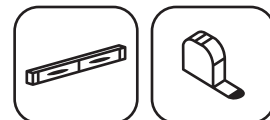

centred the board

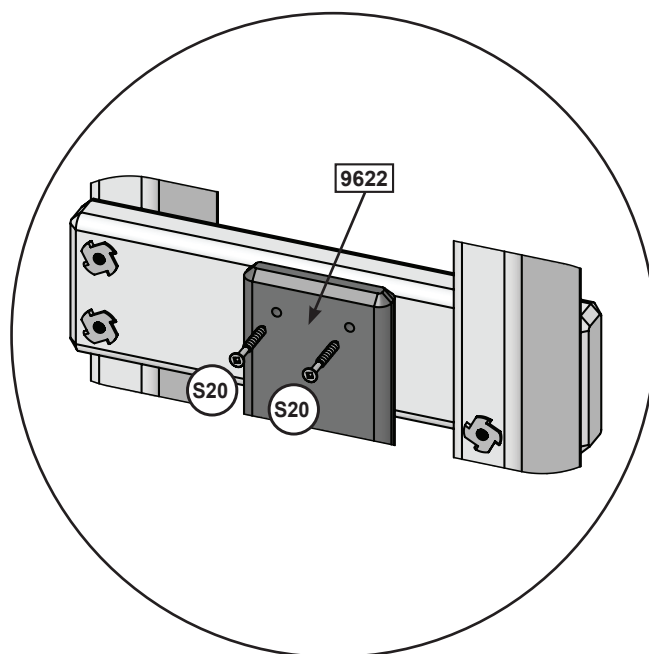





Wood Parts

2 x **9622** 5/8 x 3 x 34-1/4" (15.9 x 76.2 x 870 mm)

Hardware

8 x **S20** #8 x 1-3/8" (35 mm)

Step 18

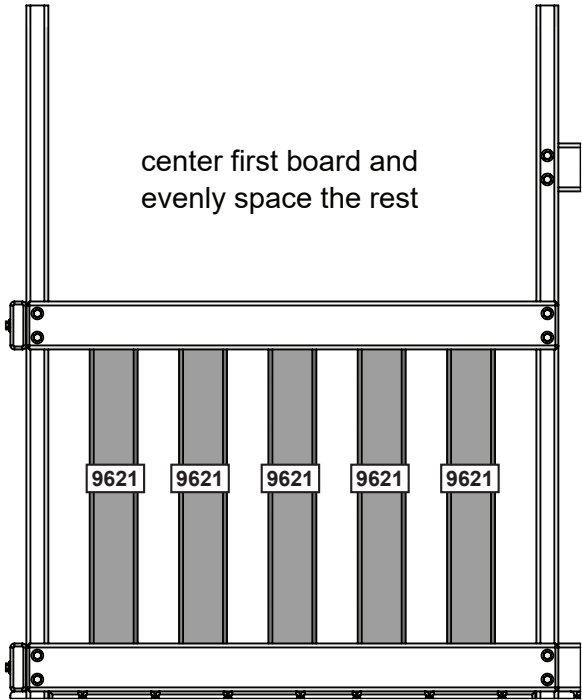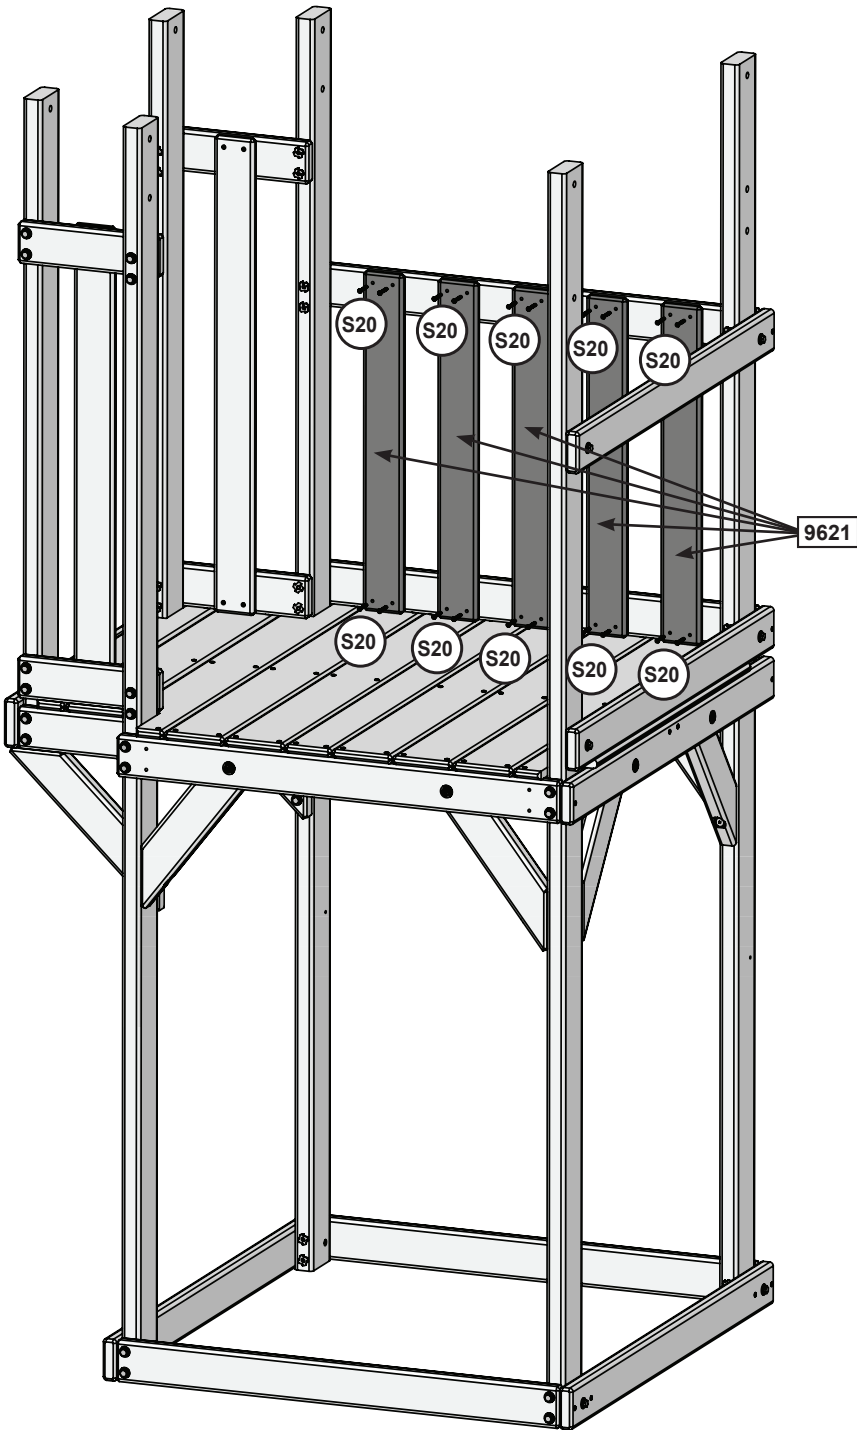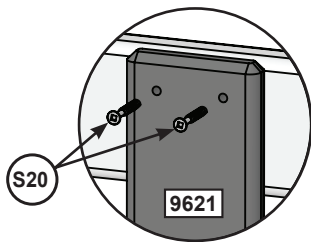




Wood Parts

5 x 9621 5/8 x 3 x 25" (15.9 x 76.2 x 635 mm)


Hardware

20 x S20 #8 x 1-3/8" (35 mm)

Step 19

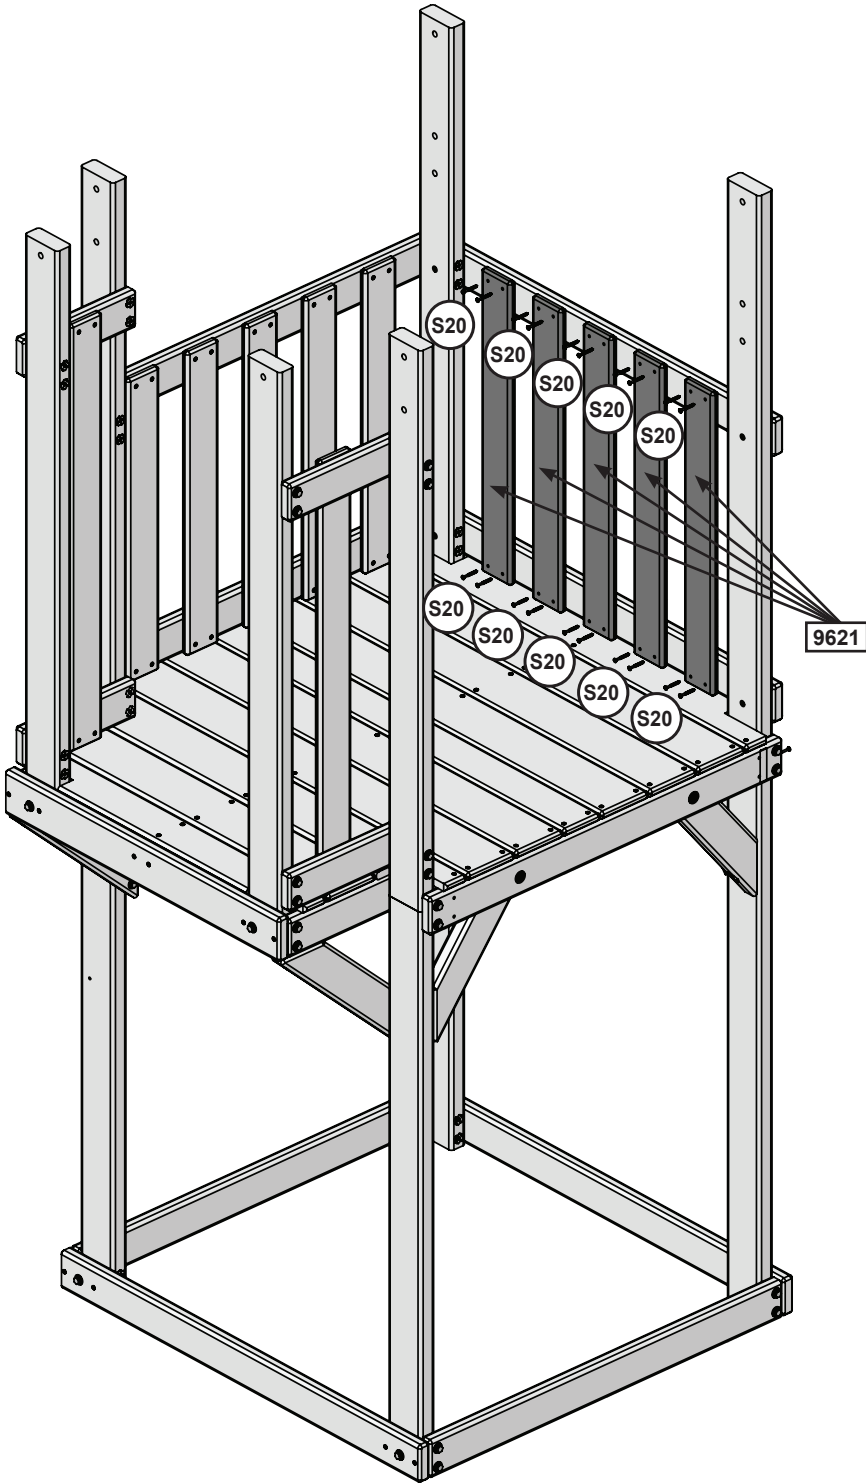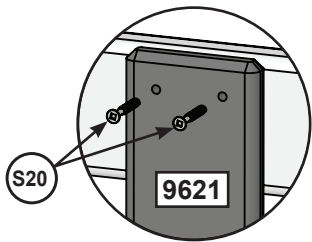

center first board and
evenly space the rest

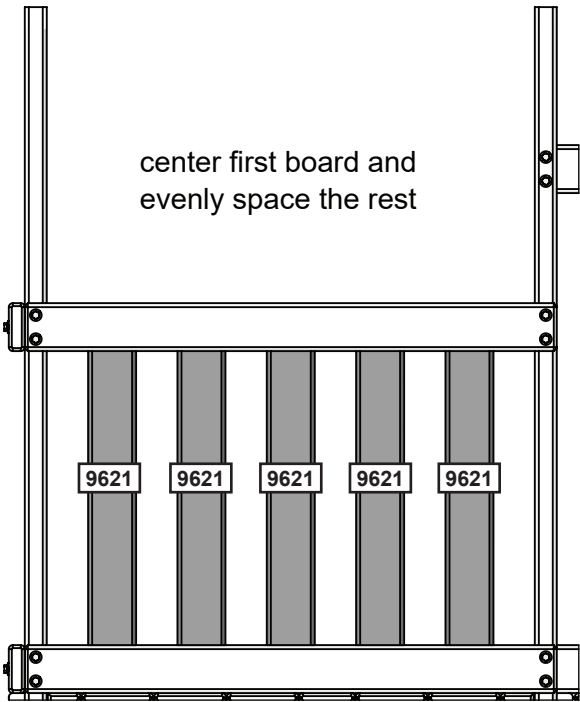


Wood Parts

5 x 9621 5/8 x 3 x 25" (15.9 x 76.2 x 635 mm)

Hardware

20 x S20 #8 x 1-3/8" (35 mm)

Step 20

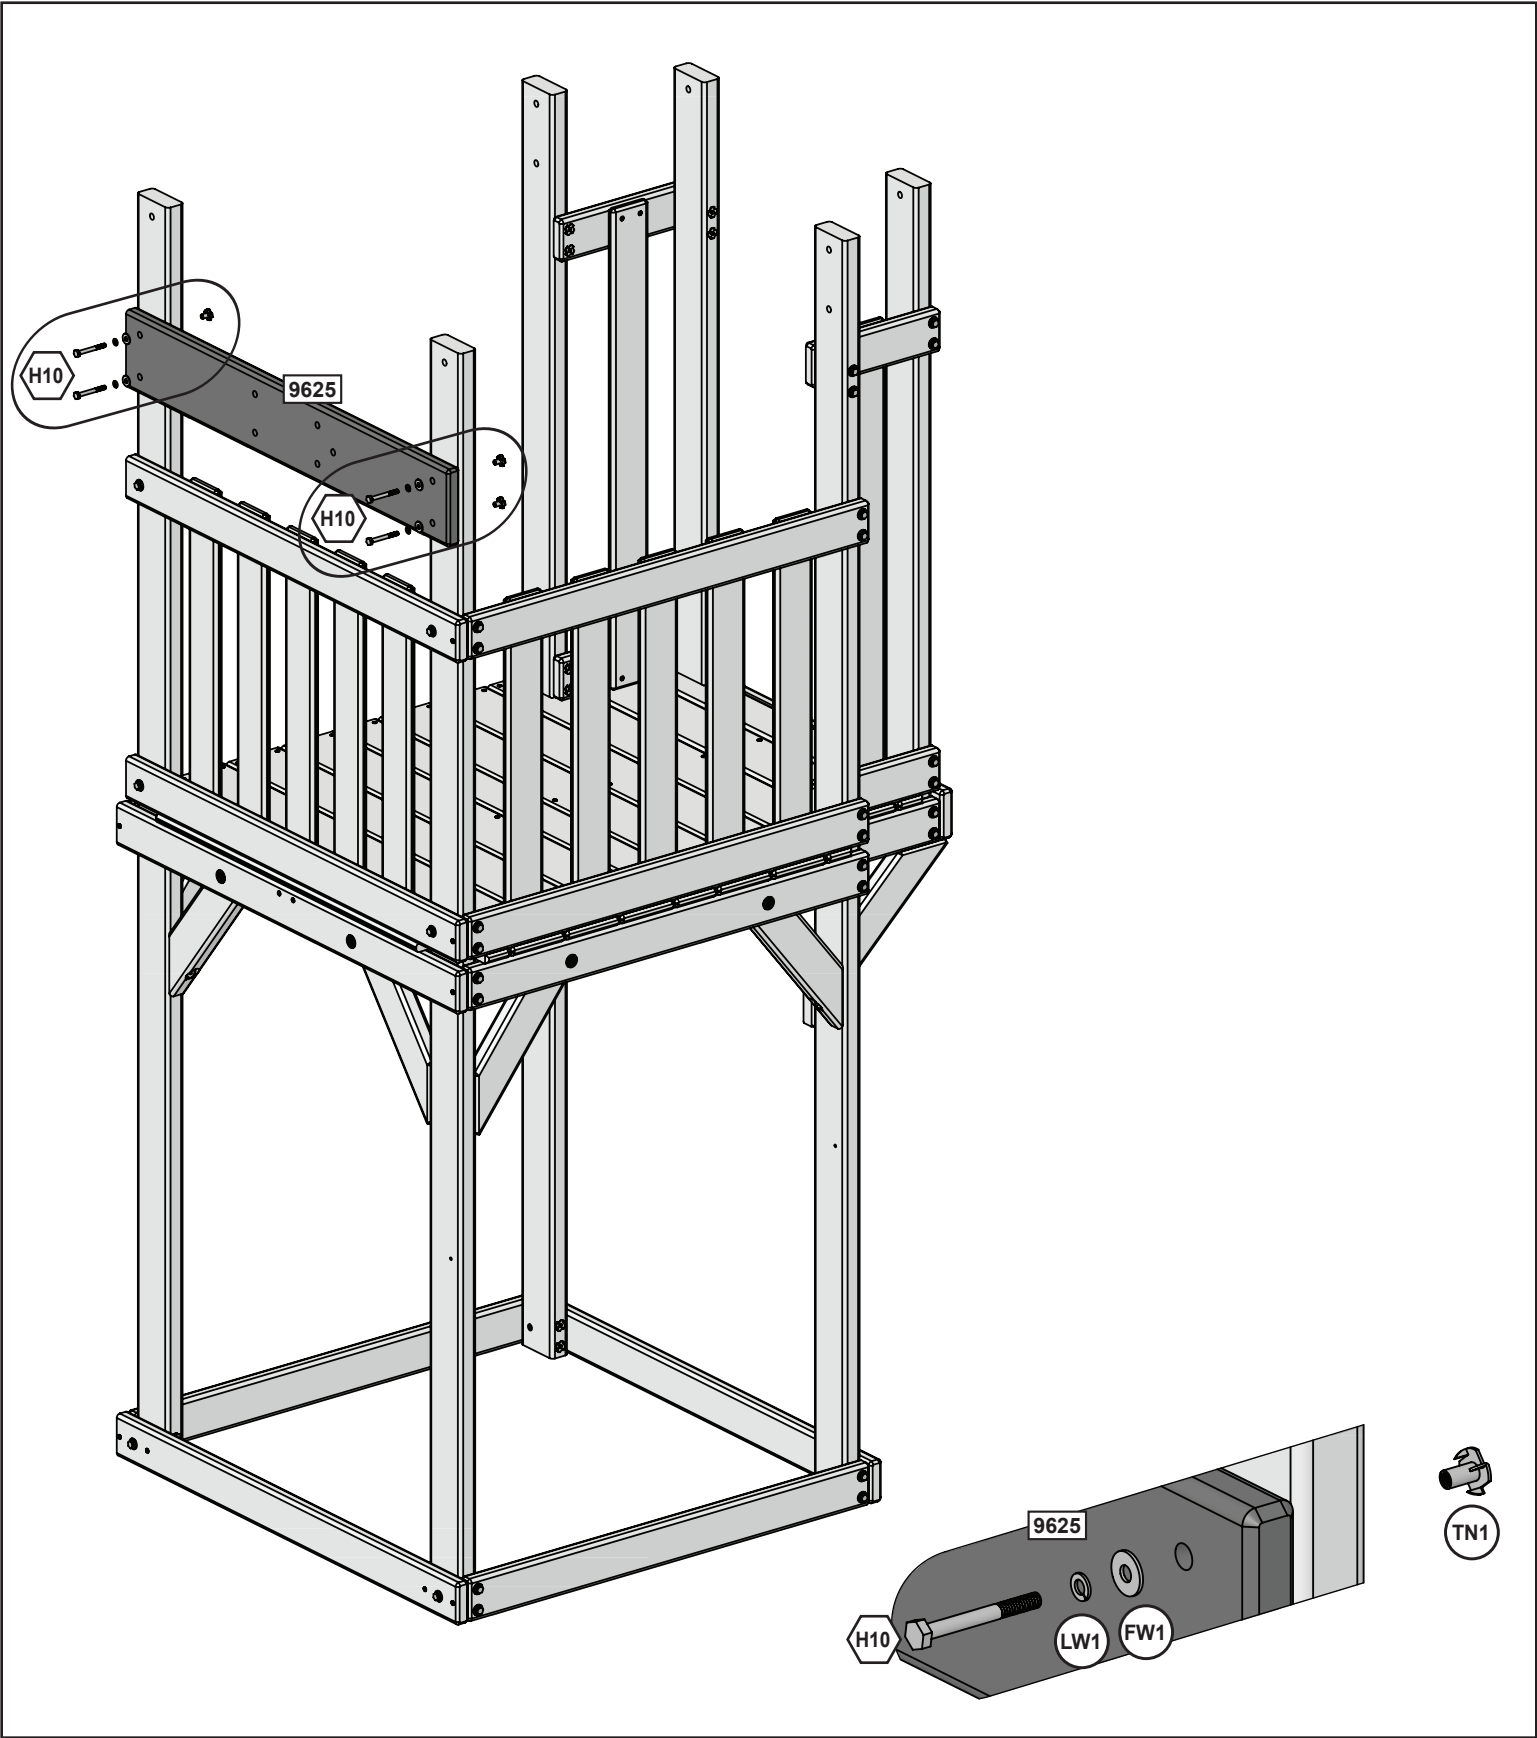


Wood Parts

1 x 9625 1 x 5-1/2 x 35" (25.4 x 139.7 x 889 mm)

Hardware

4 x H10 1/4 x 2-1/4" (57.2 mm) (FW1, LW1, TN1)

Step 21

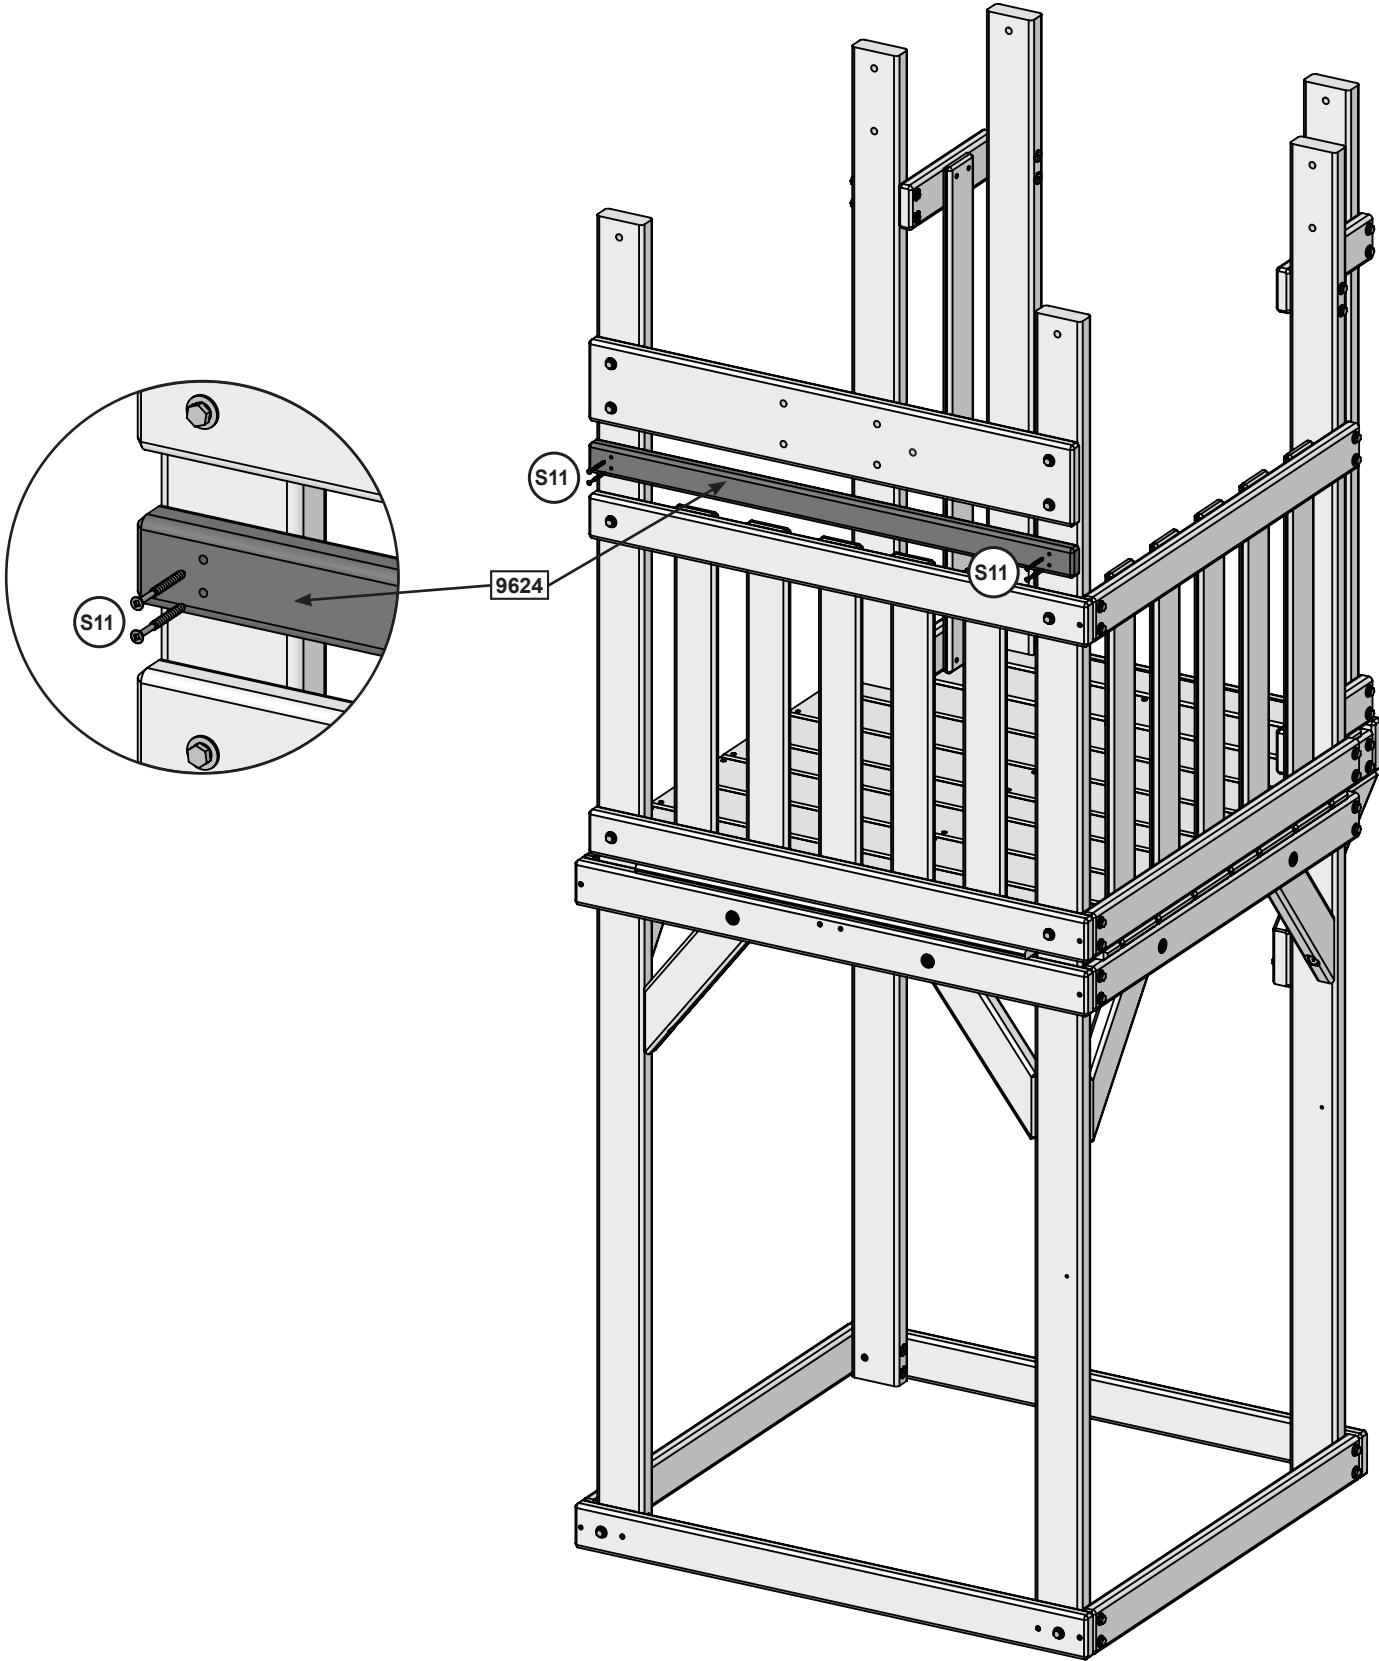


Wood Parts

1 x 9624 1" x 2" x 35" (25.4 x 50.8 x 889 mm)

Hardware

4 x S11 #8 x 2" (50.8 mm)

Step 22

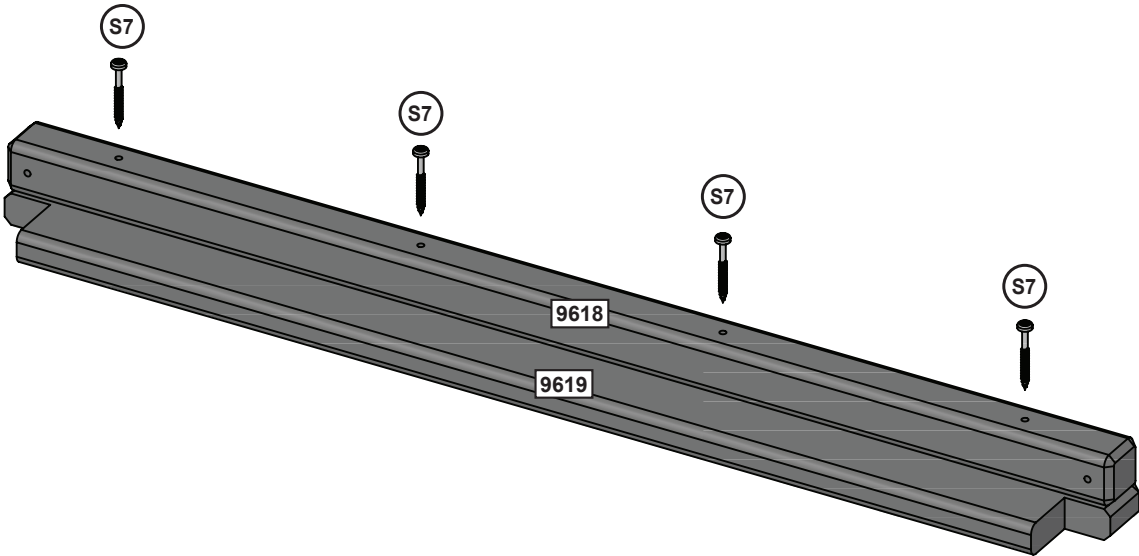





Wood Parts

- 1 x 9618 1-1/2 x 1-1/2 x 33-1/4" (38.1 x 38.1 x 844.6 mm)
- 1 x 9619 15/16 x 4-1/4 x 33-1/4" (23.8 x 108 x 844.6 mm)

Hardware

- 4 x S7 #12 x 2" (50.8 mm)



Step 23

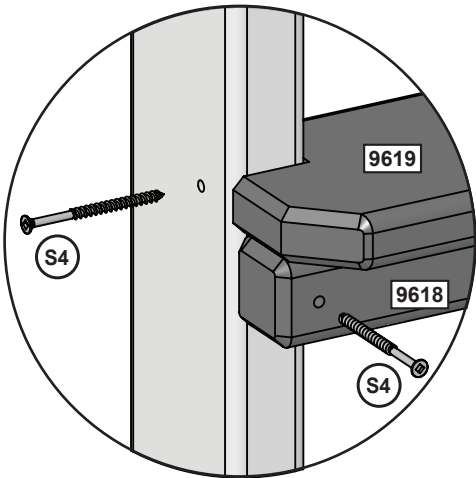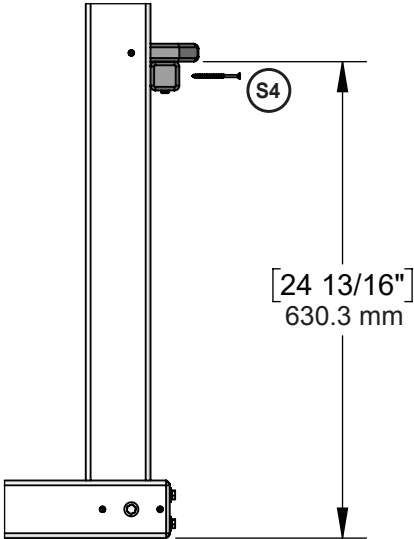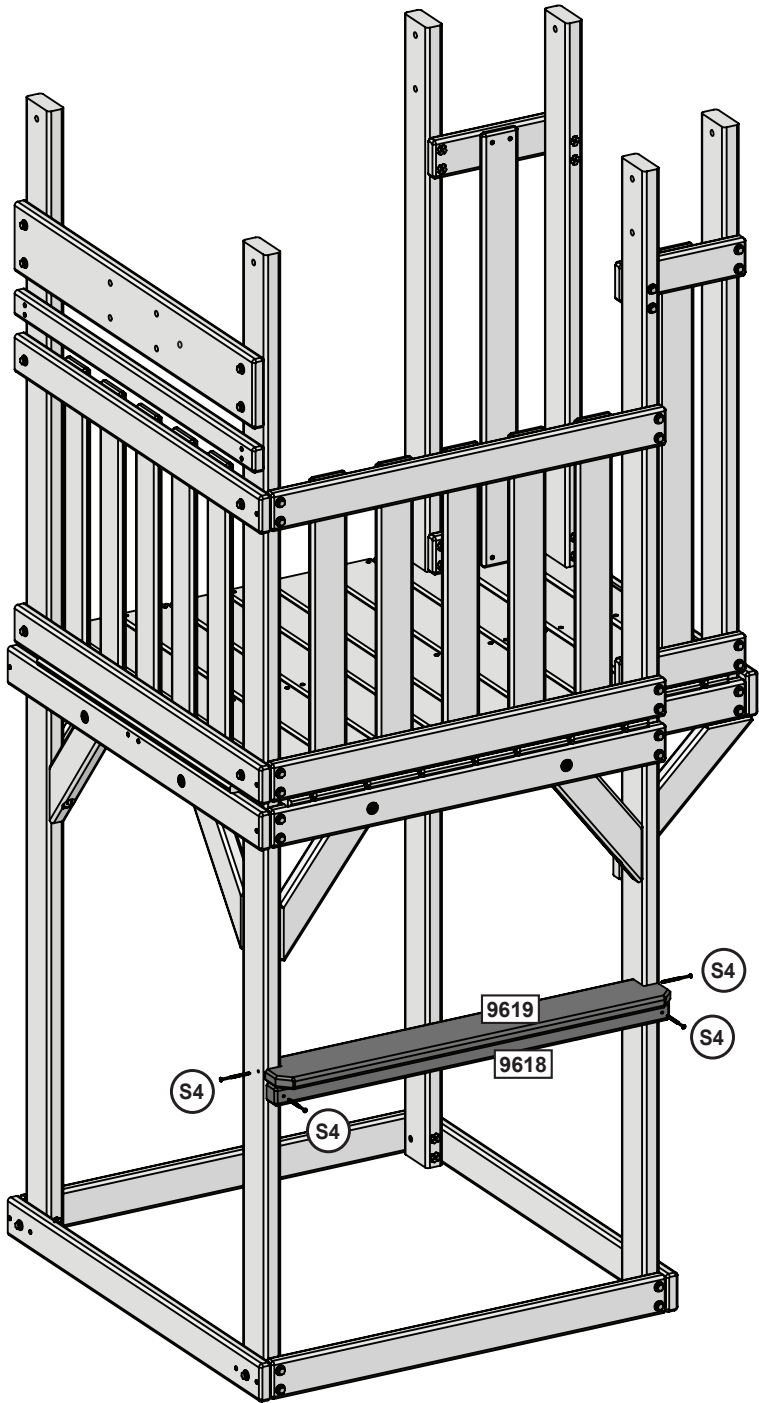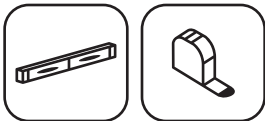



Hardware

4 x S4 #8 x 3" (76.2 mm)

Step 24

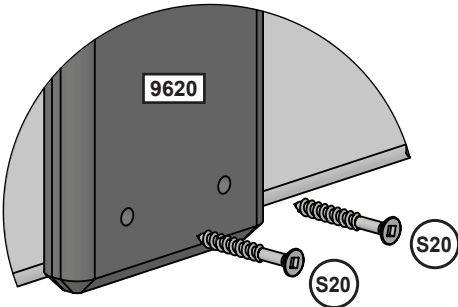

center first board and evenly space remaining

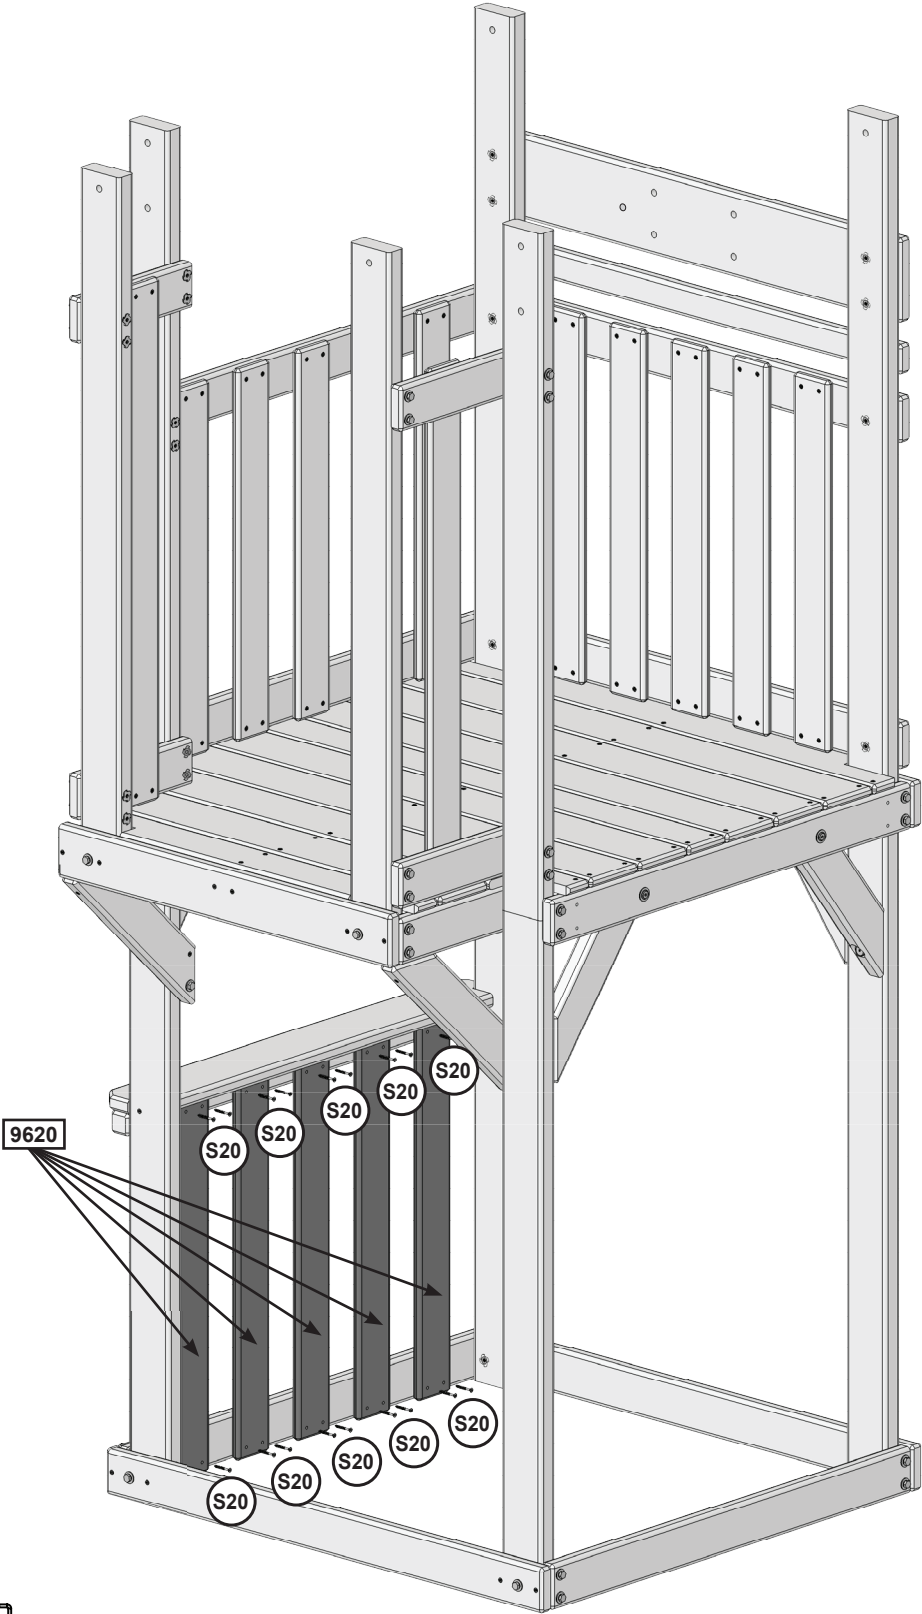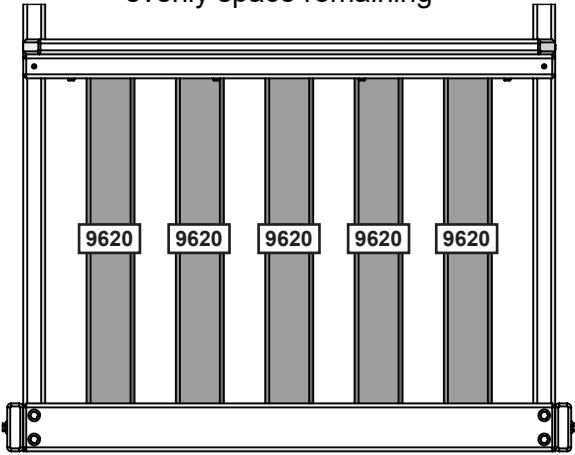



Wood Parts

5 x 9620 5/8 x 3 x 24-13/16" (15.9 x 76.2 x 630.3 mm)

Hardware

20 x S20 #8 x 1-3/8" (35 mm)

Step 25

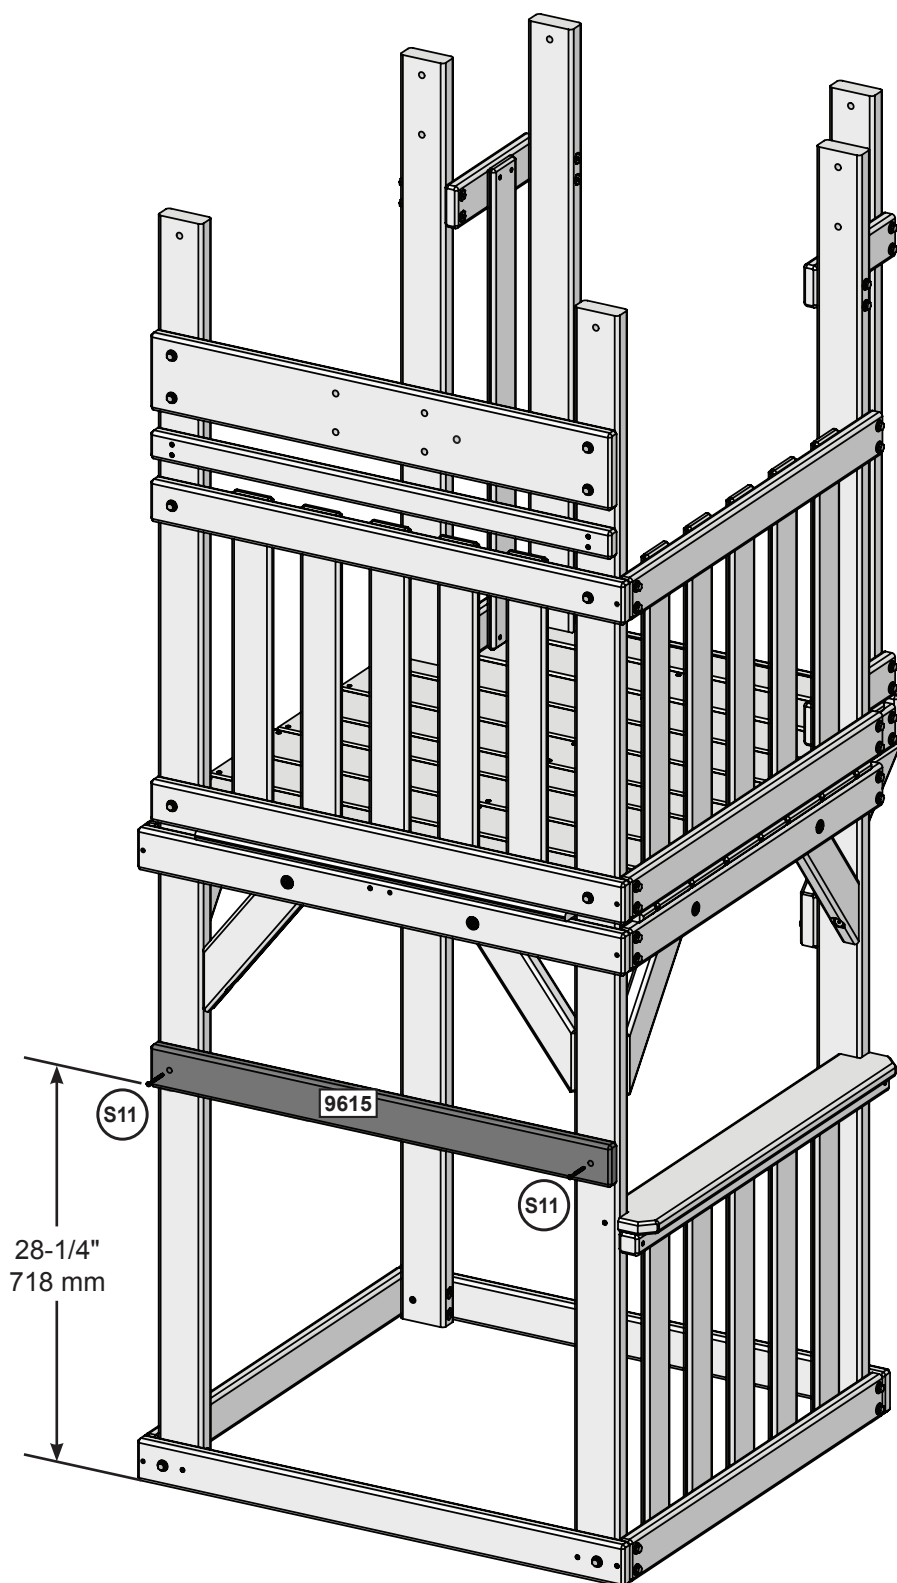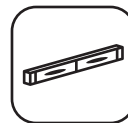


Wood Parts

1 x **9615** 1 x 3 x 35" (25.4 x 76.2 x 889 mm)

Hardware

2 x **S11** #8 x 2" (50.8 mm)

Step 26

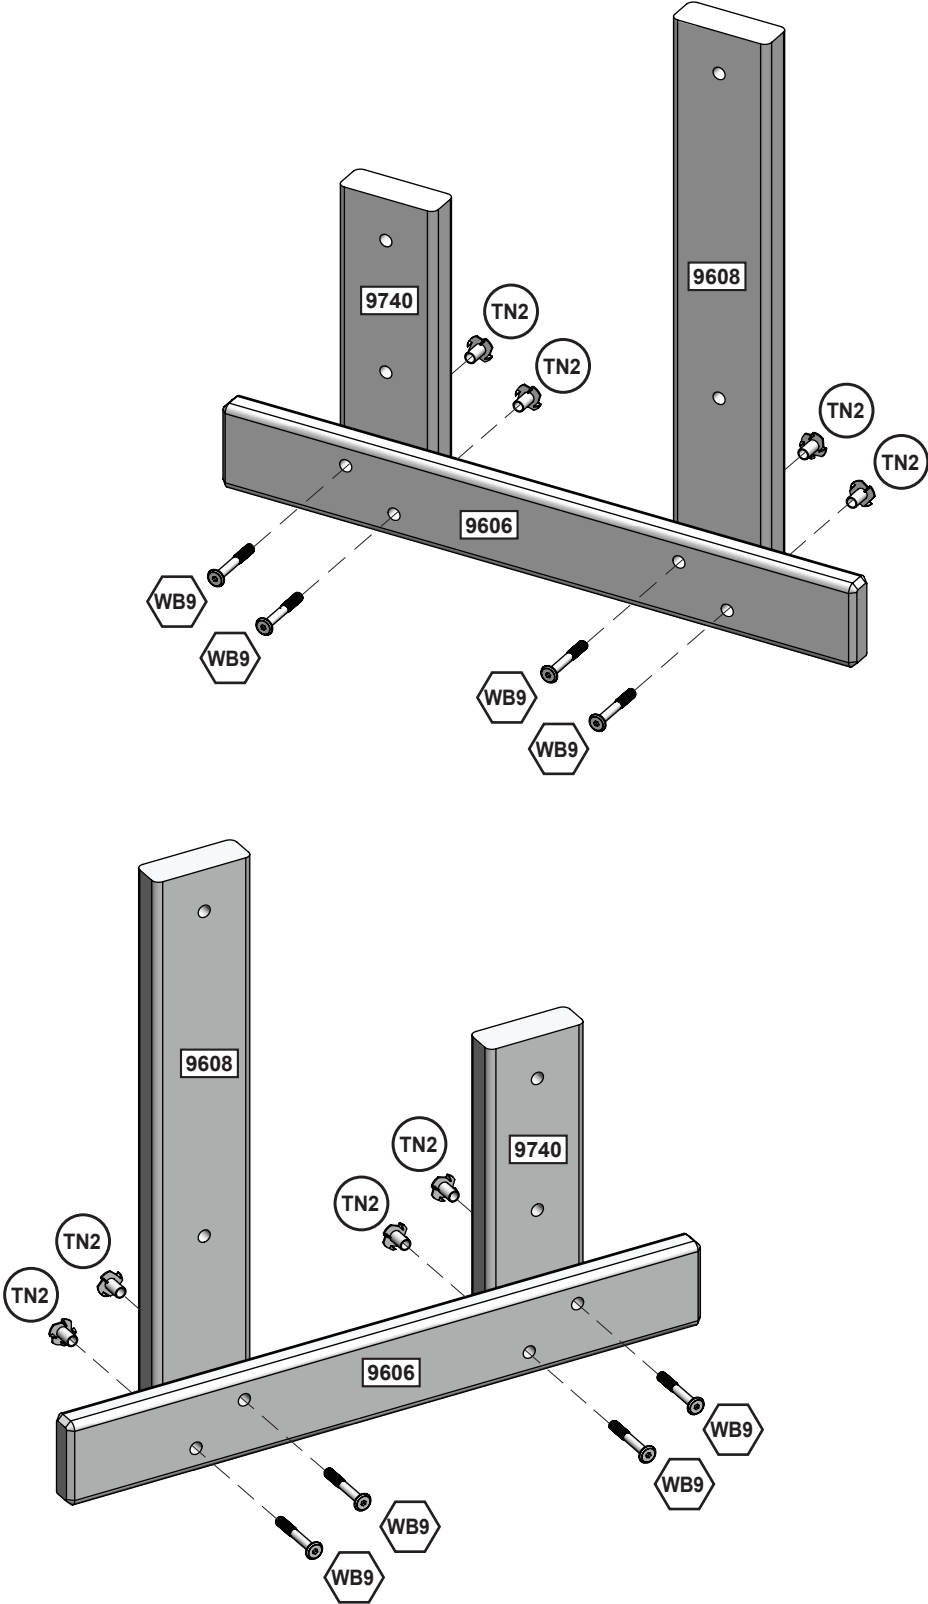



Wood Parts

- 2 x 9606 1 x 3 x 22-7/8" (25.4 x 76.2 x 581 mm)
- 2 x 9608 1-1/4 x 3-1/2 x 21" (31.8 x 88.9 x 533.4 mm)
- 2 x 9740 1-1/4 x 3-1/2 x 11-1/2" (31.8 x 88.9 x 292.1 mm)

Hardware

- 8 x WB9 5/16 x 2-1/8" (54 mm) (TN2)

Step 27

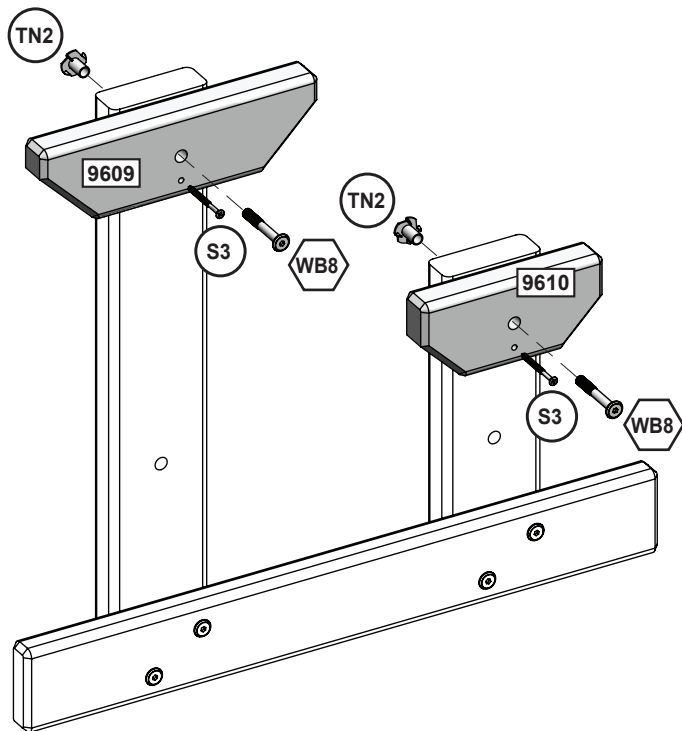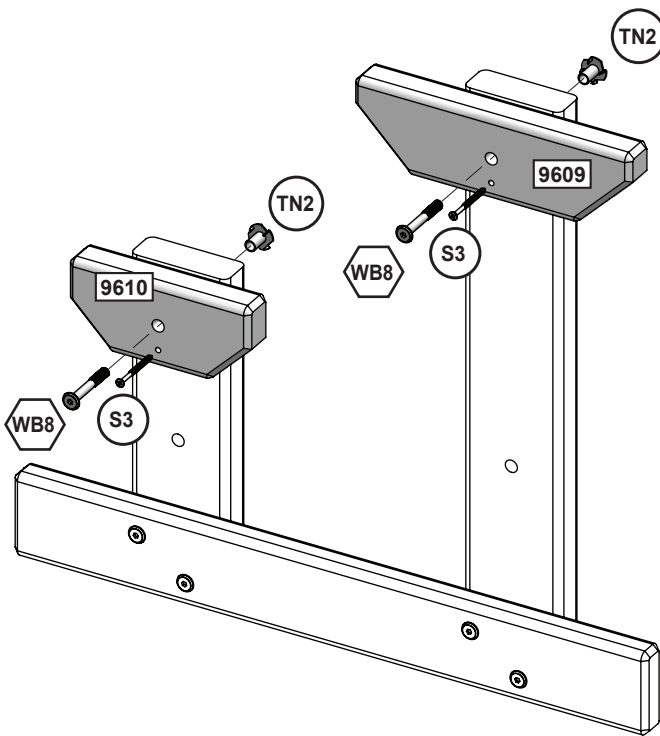


Wood Parts

- 2 x **9609** 1-1/4 x 3 x 10" (31.8 x 76.2 x 254 mm)
2 x **9610** 1-1/4 x 3 x 6-35/64" (31.8 x 76.2 x 166.2 mm)

Hardware

- 4 x **WB8** 5/16 x 2-3/8" (60.3 mm) (TN2)
4 x **S3** #8 x 2-1/2" (63.5 mm)

Step 28

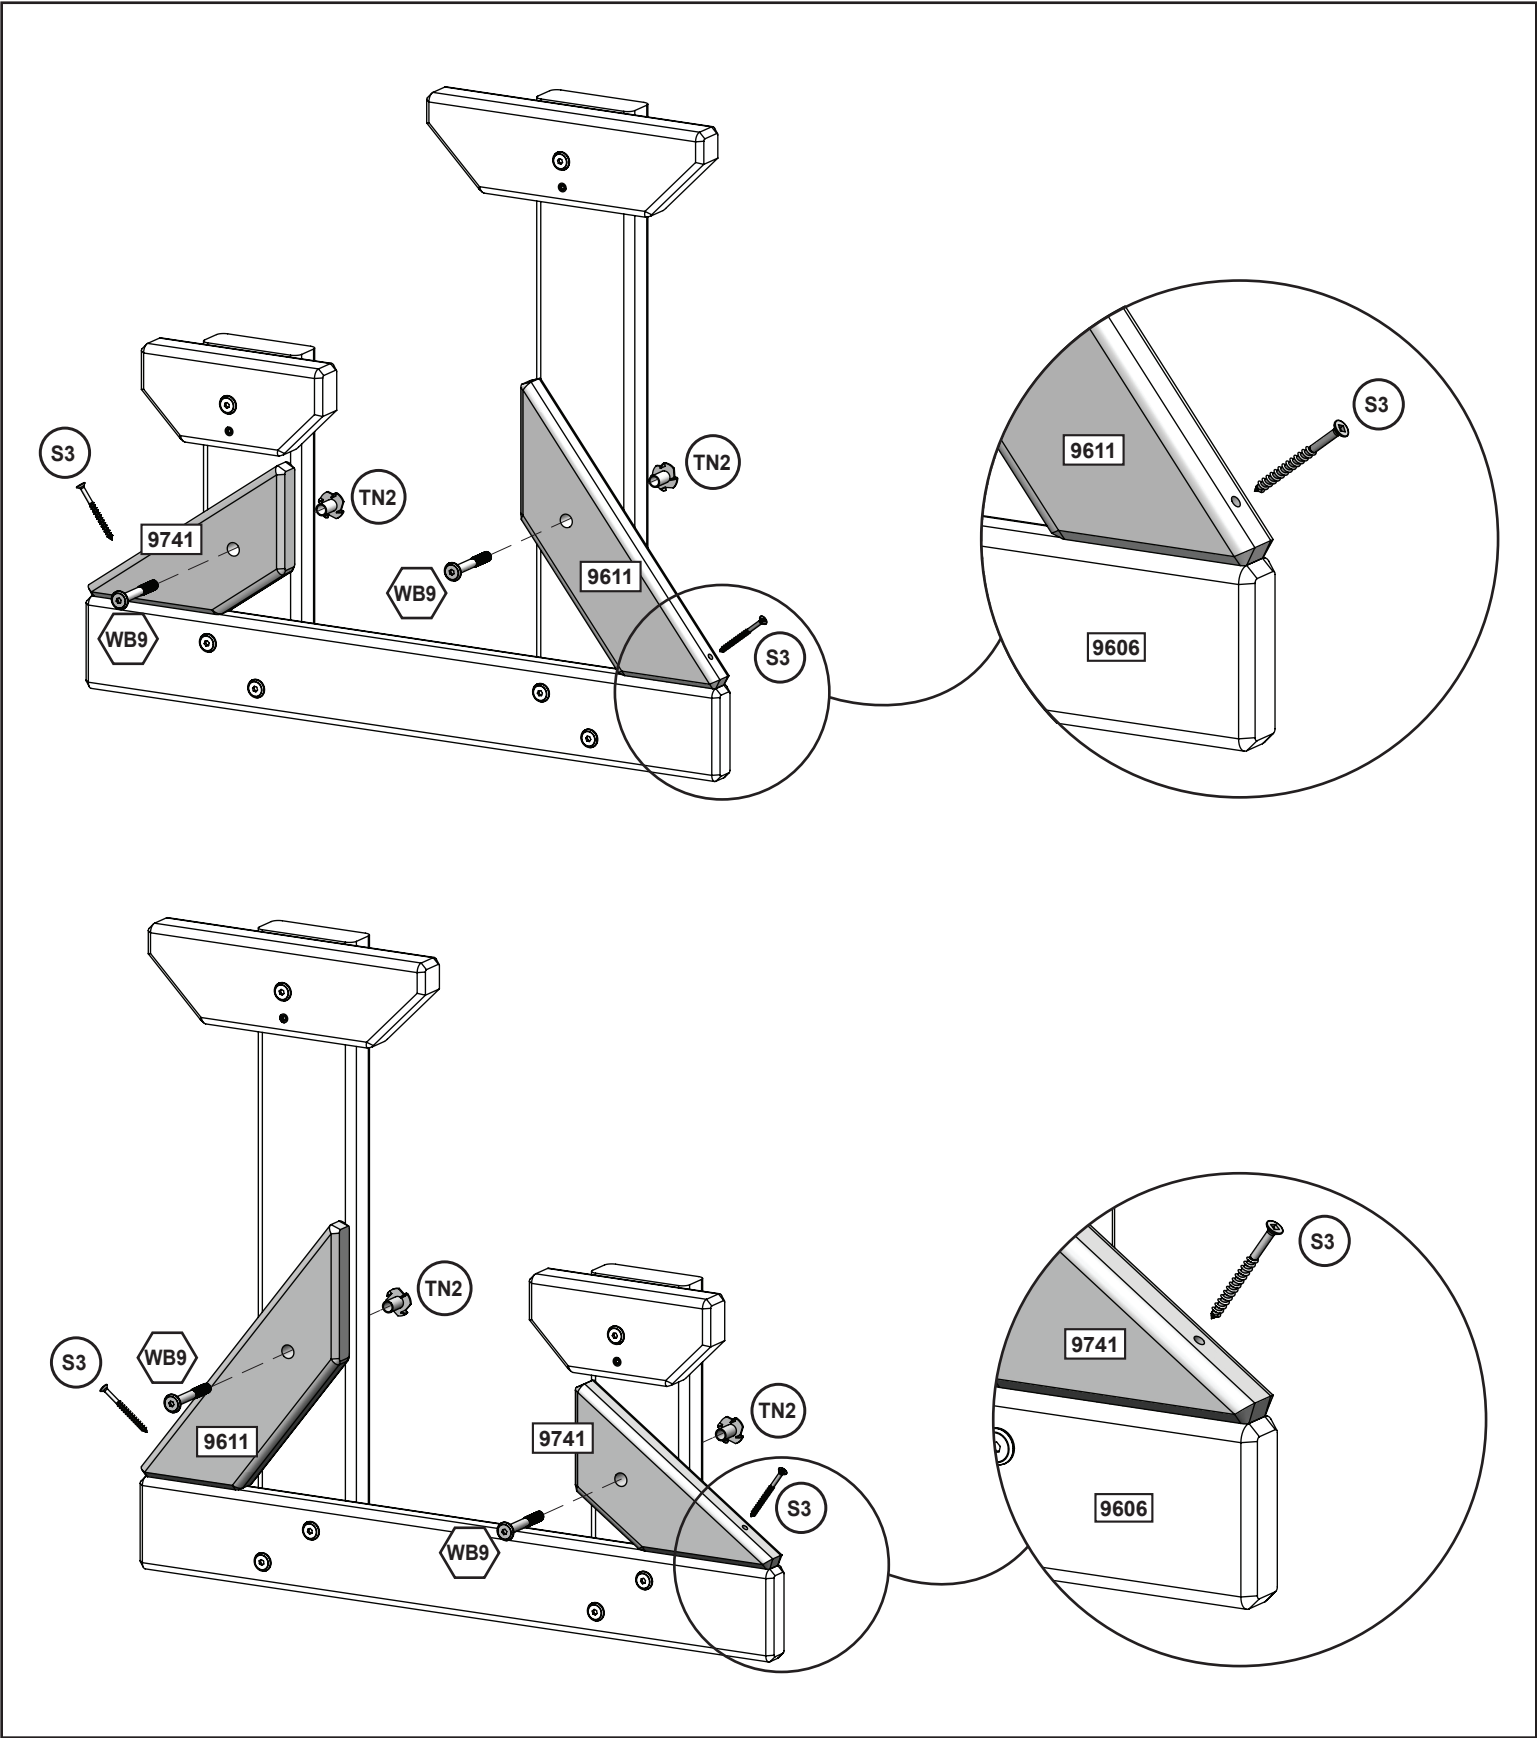


Wood Parts

- 2 x 9611 1 x 3 x 11-21/64" (25.4 x 76.2 x 287.8 mm)
2 x 9741 1 x 3 x 8-35/64" (25.4 x 76.2 x 217.2 mm)

Hardware

- 4 x WB9 5/16 x 2-1/8" (54 mm) (TN2)
4 x S3 #8 x 2-1/2" (63.5 mm)

Step 29

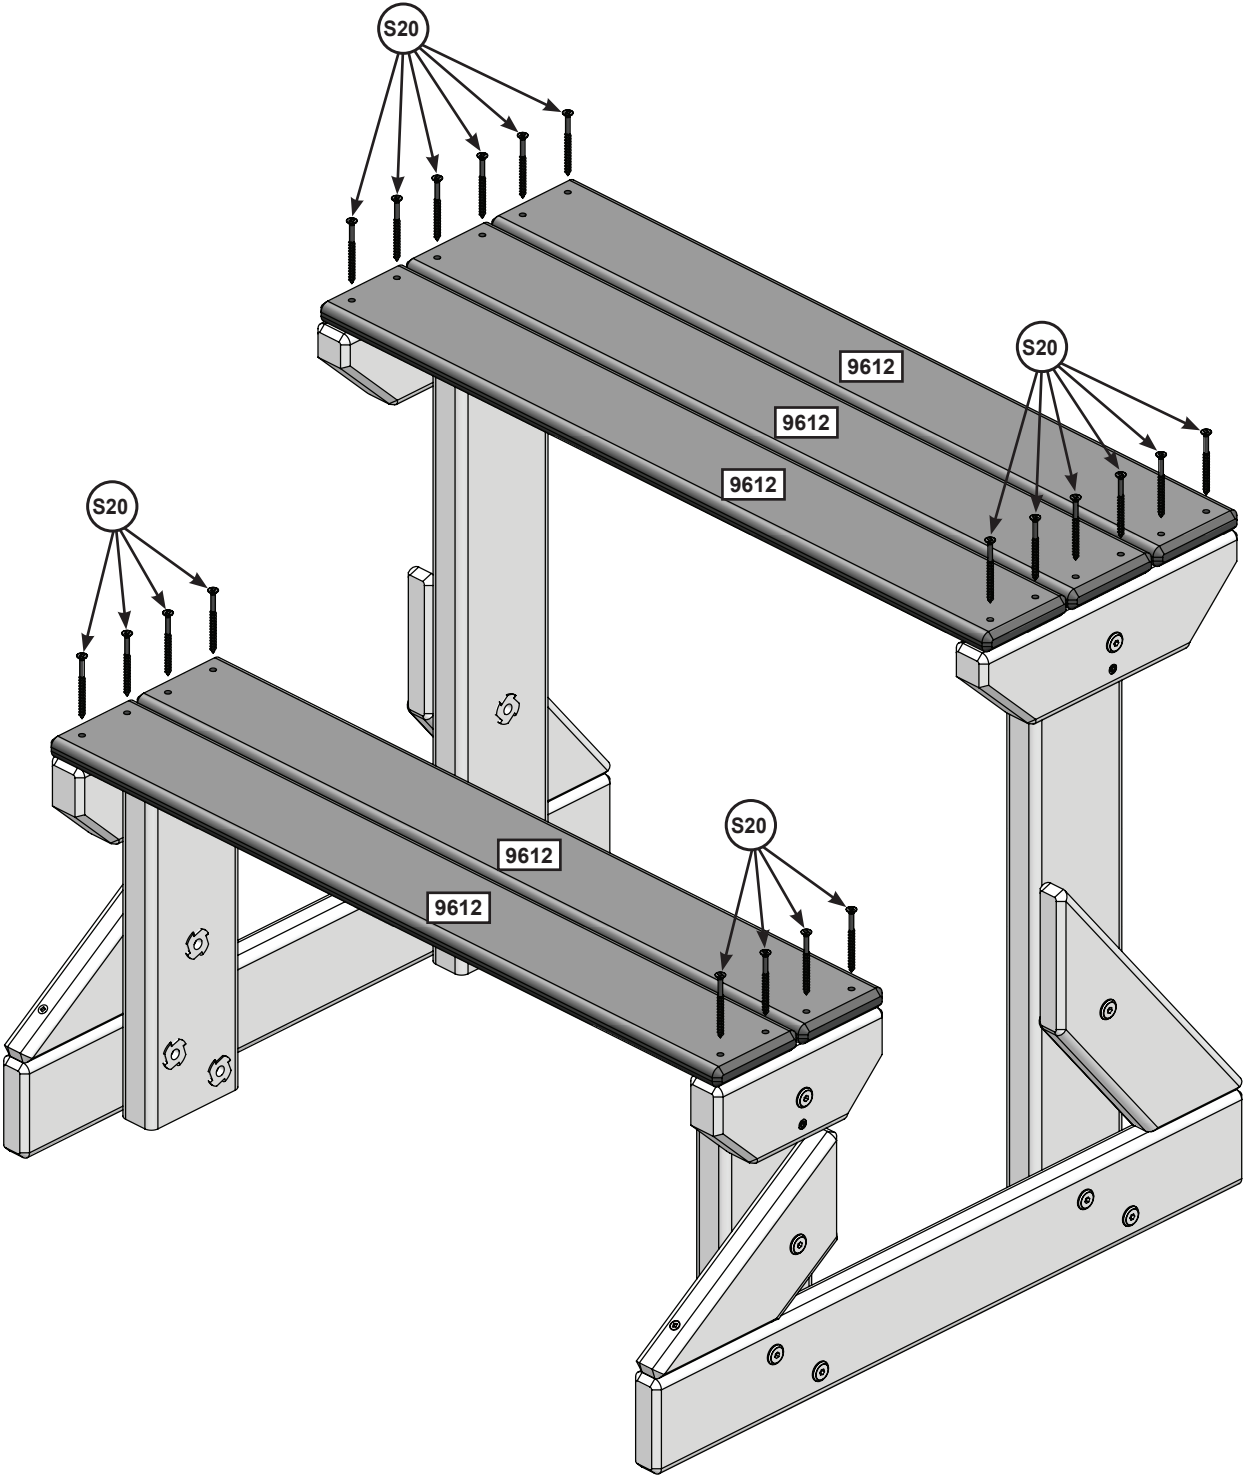


Wood Parts

5 x 9612 5/8 x 3-1/4 x 26" (15.9 x 82.6 x 660.4 mm)

Hardware

20 x S20 #8 x 1-3/8" (35 mm)

Step 30

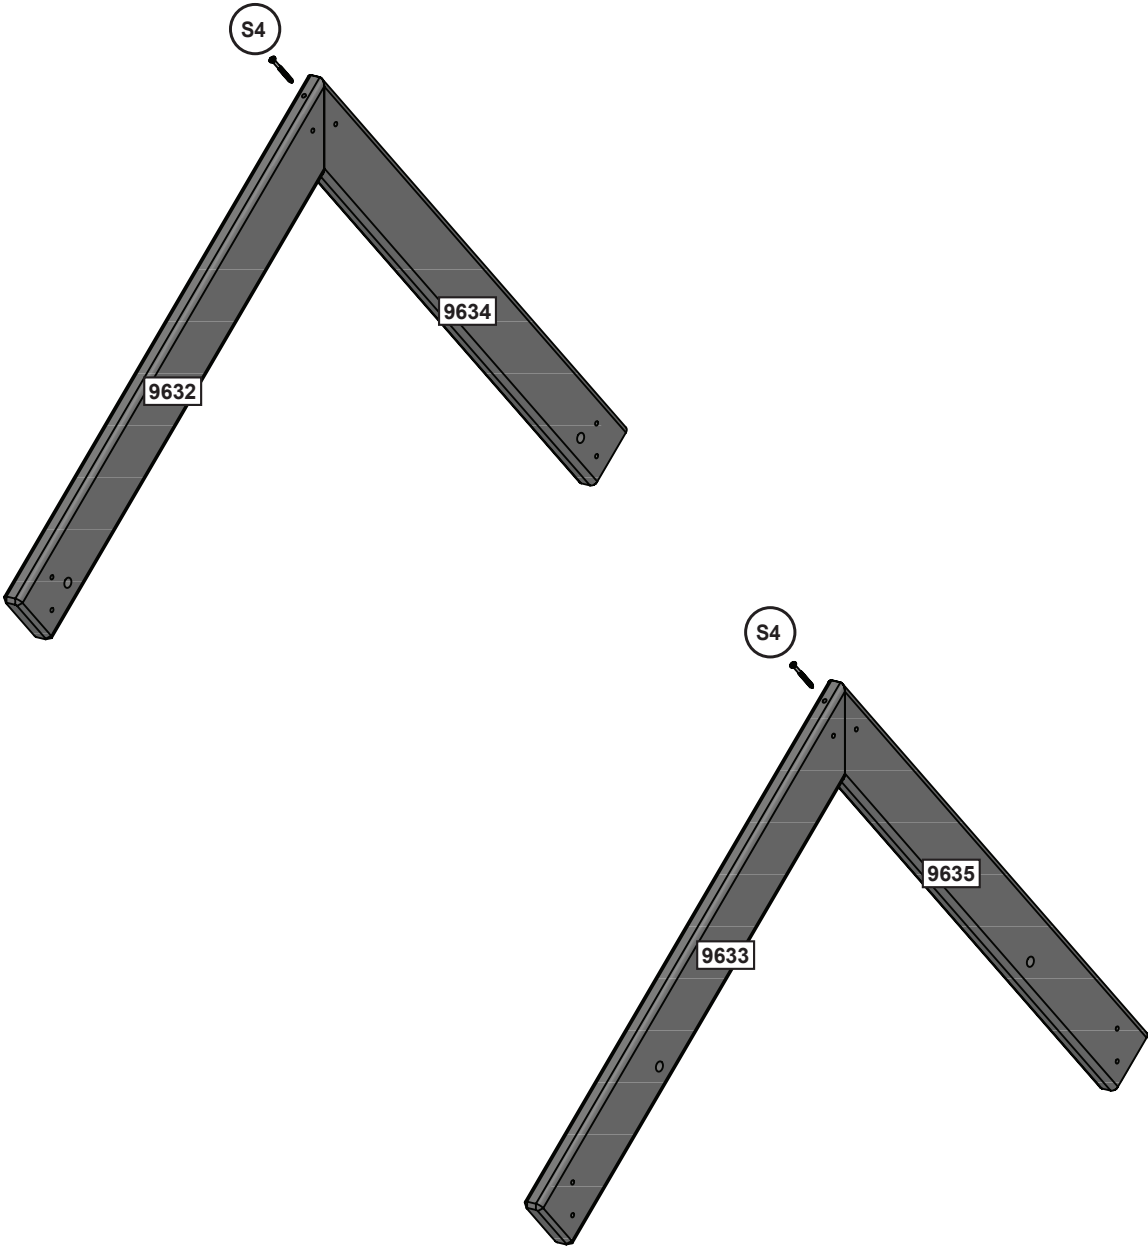

Wood Parts


- 1 x 9632 1 x 3 x 26-3/4" (25.4 x 76.2 x 679.5 mm)
- 1 x 9633 1 x 3 x 26-3/4" (25.4 x 76.2 x 679.5 mm)
- 1 x 9634 1 x 3 x 26-3/4" (25.4 x 76.2 x 679.5 mm)

- 1 x 9635 1 x 3 x 26-3/4" (25.4 x 76.2 x 679.5 mm)

Hardware

- 2 x S4 #8 x 3" (76.2 mm)

Step 31

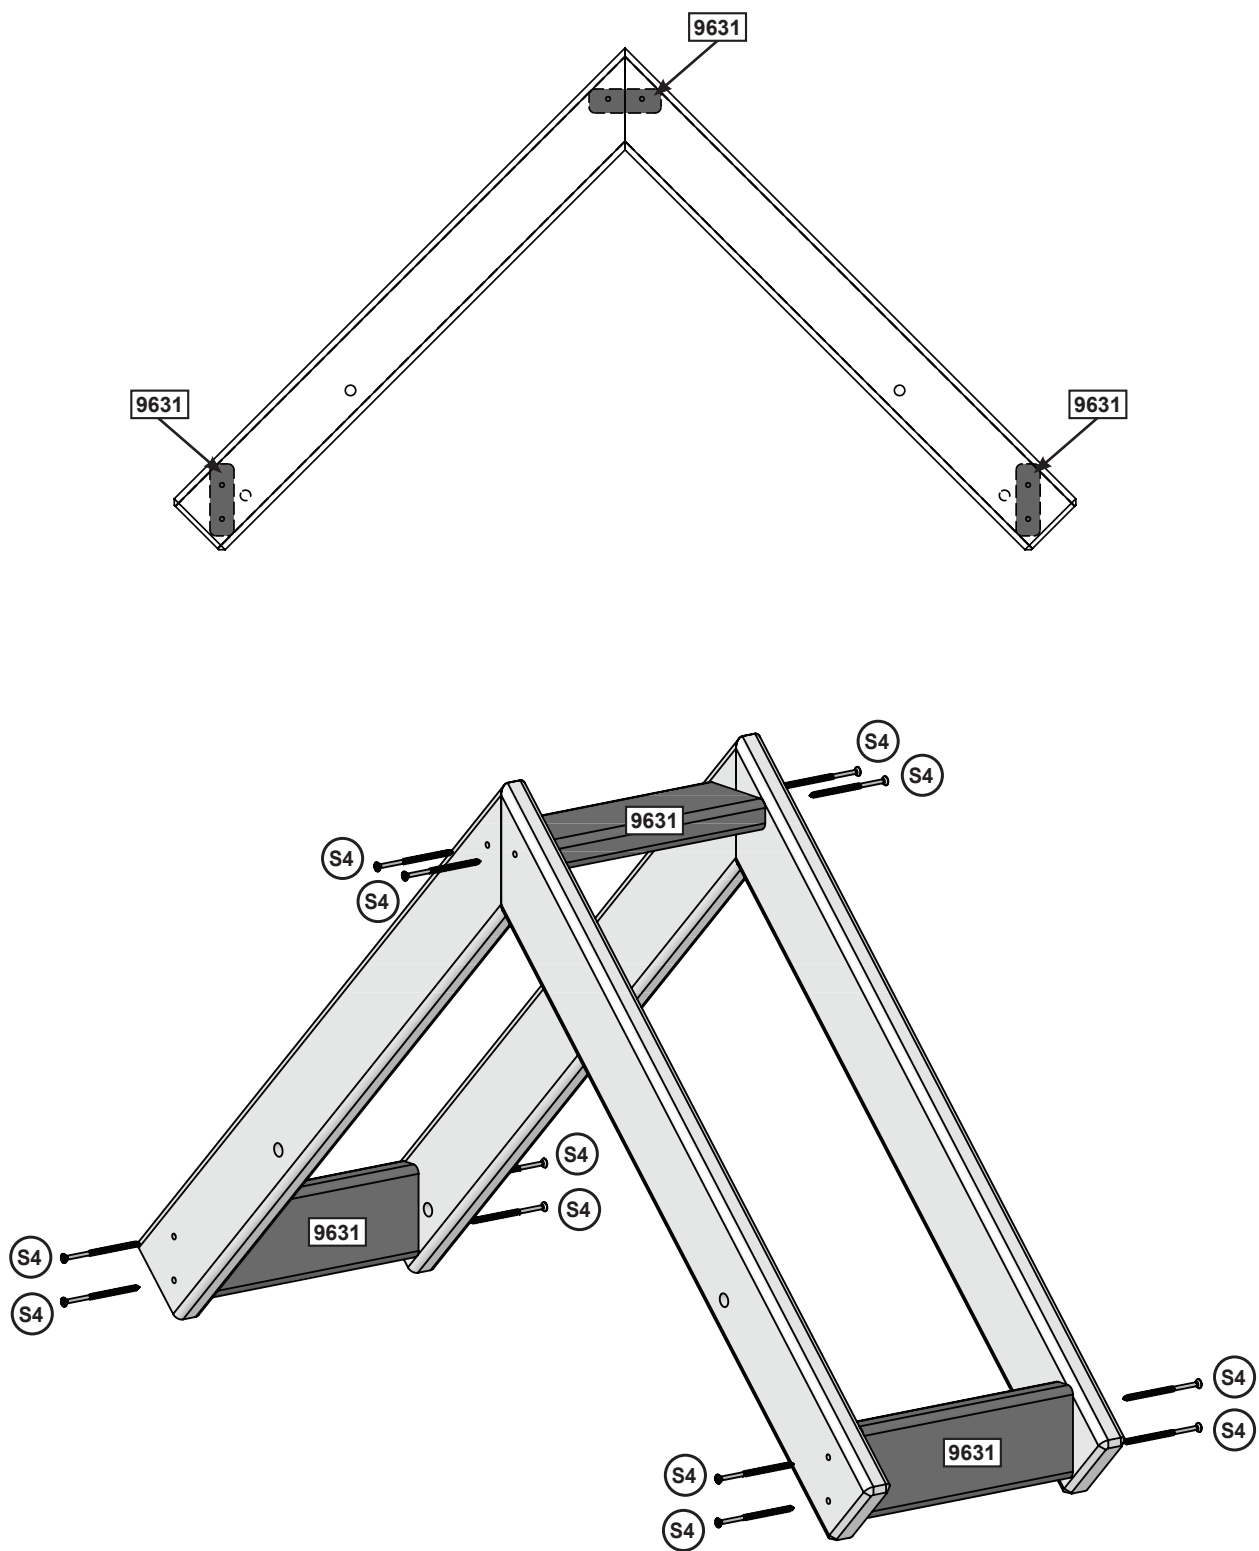


Wood Parts

3 x 9631 1 x 3 x 8-1/4" (25.4 x 76.2 x 209.6 mm)

Hardware

12 x S4 #8 x 3" (76.2 mm)

Step 32

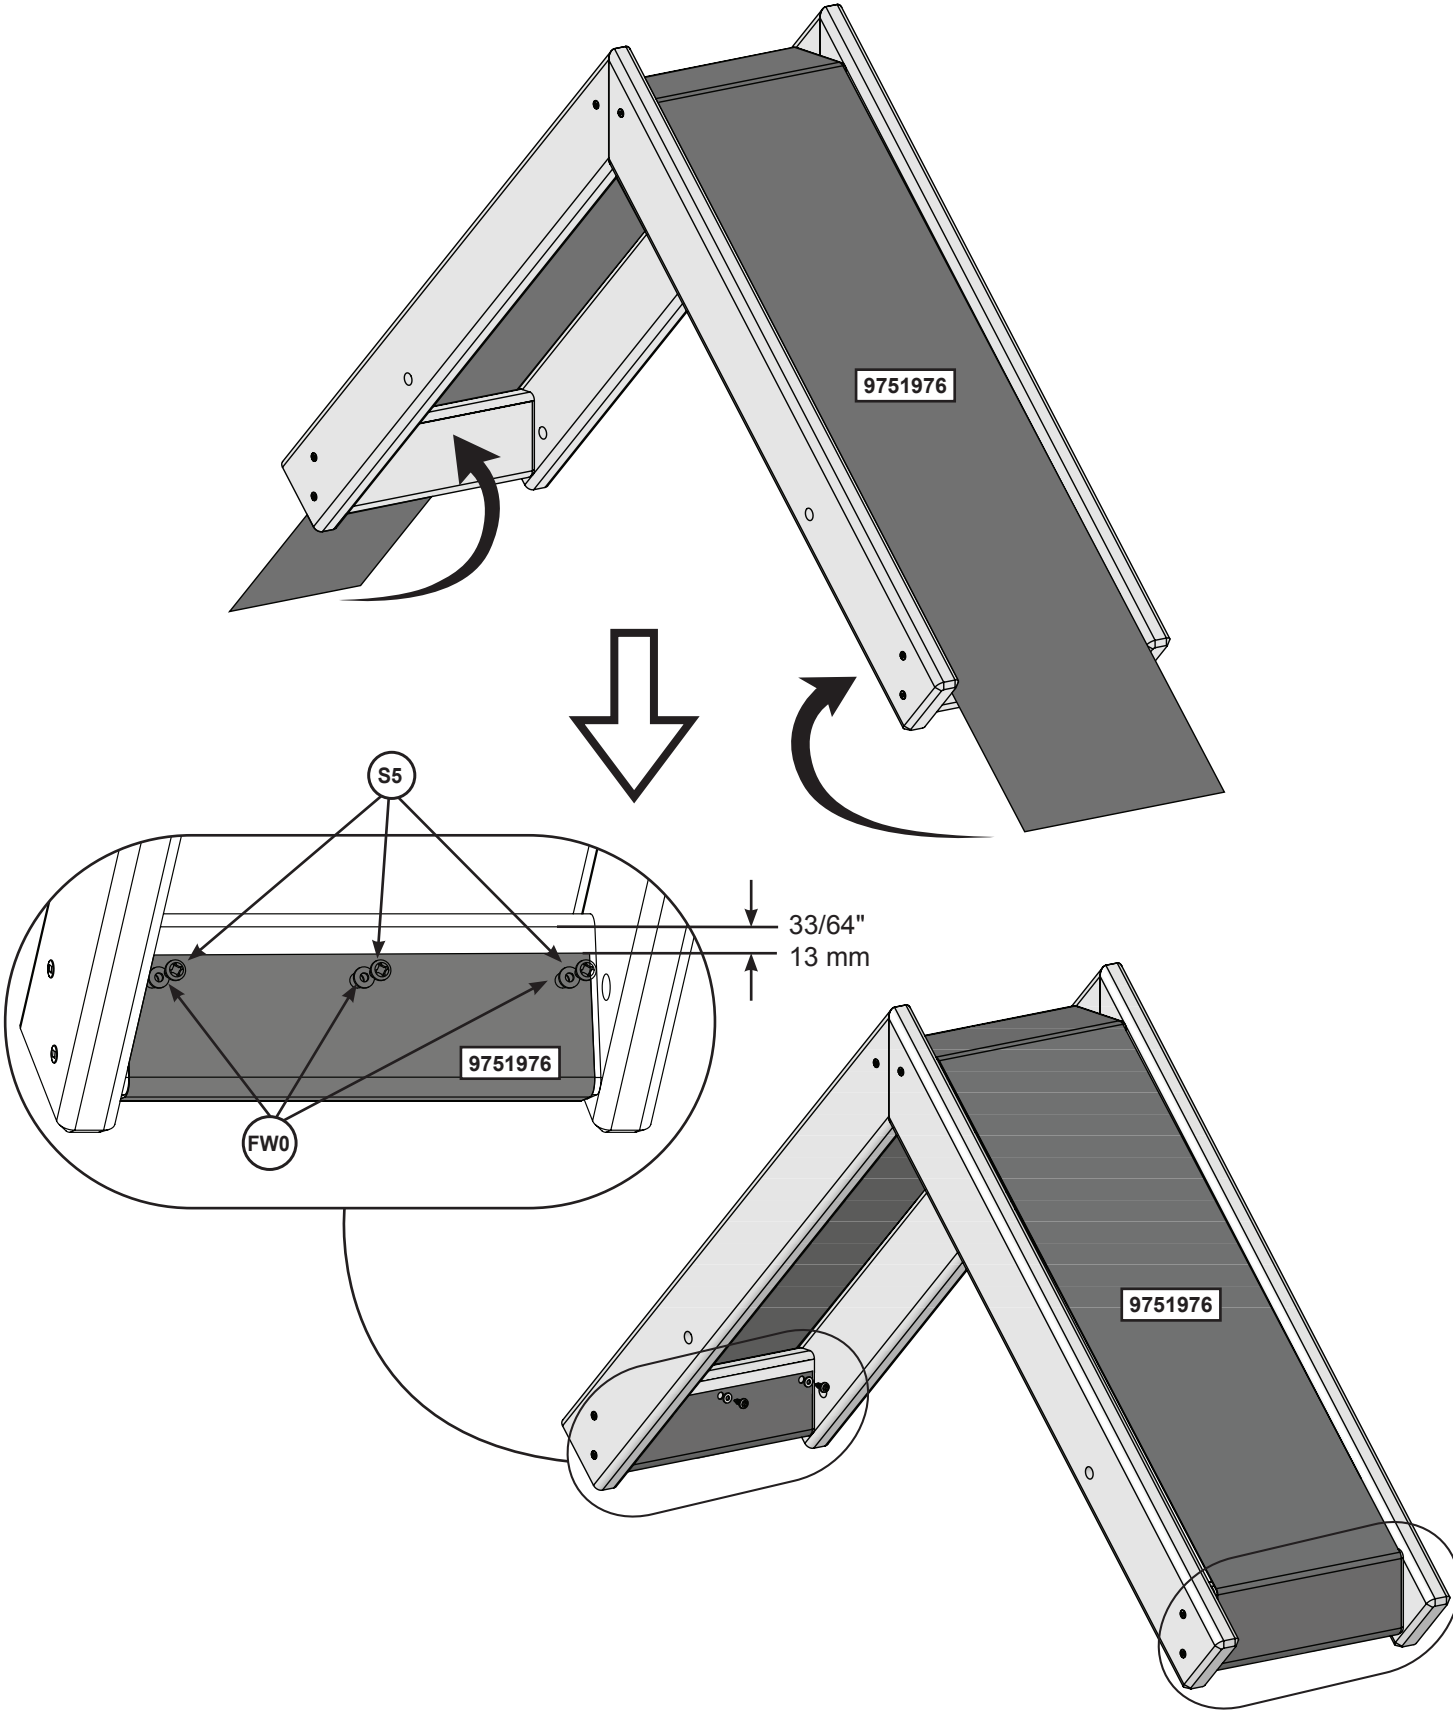


Hardware

6 x S5 #8 x 1/2" (12.7 mm) (FW0)

Other Parts

1 x 9751976

Step 33

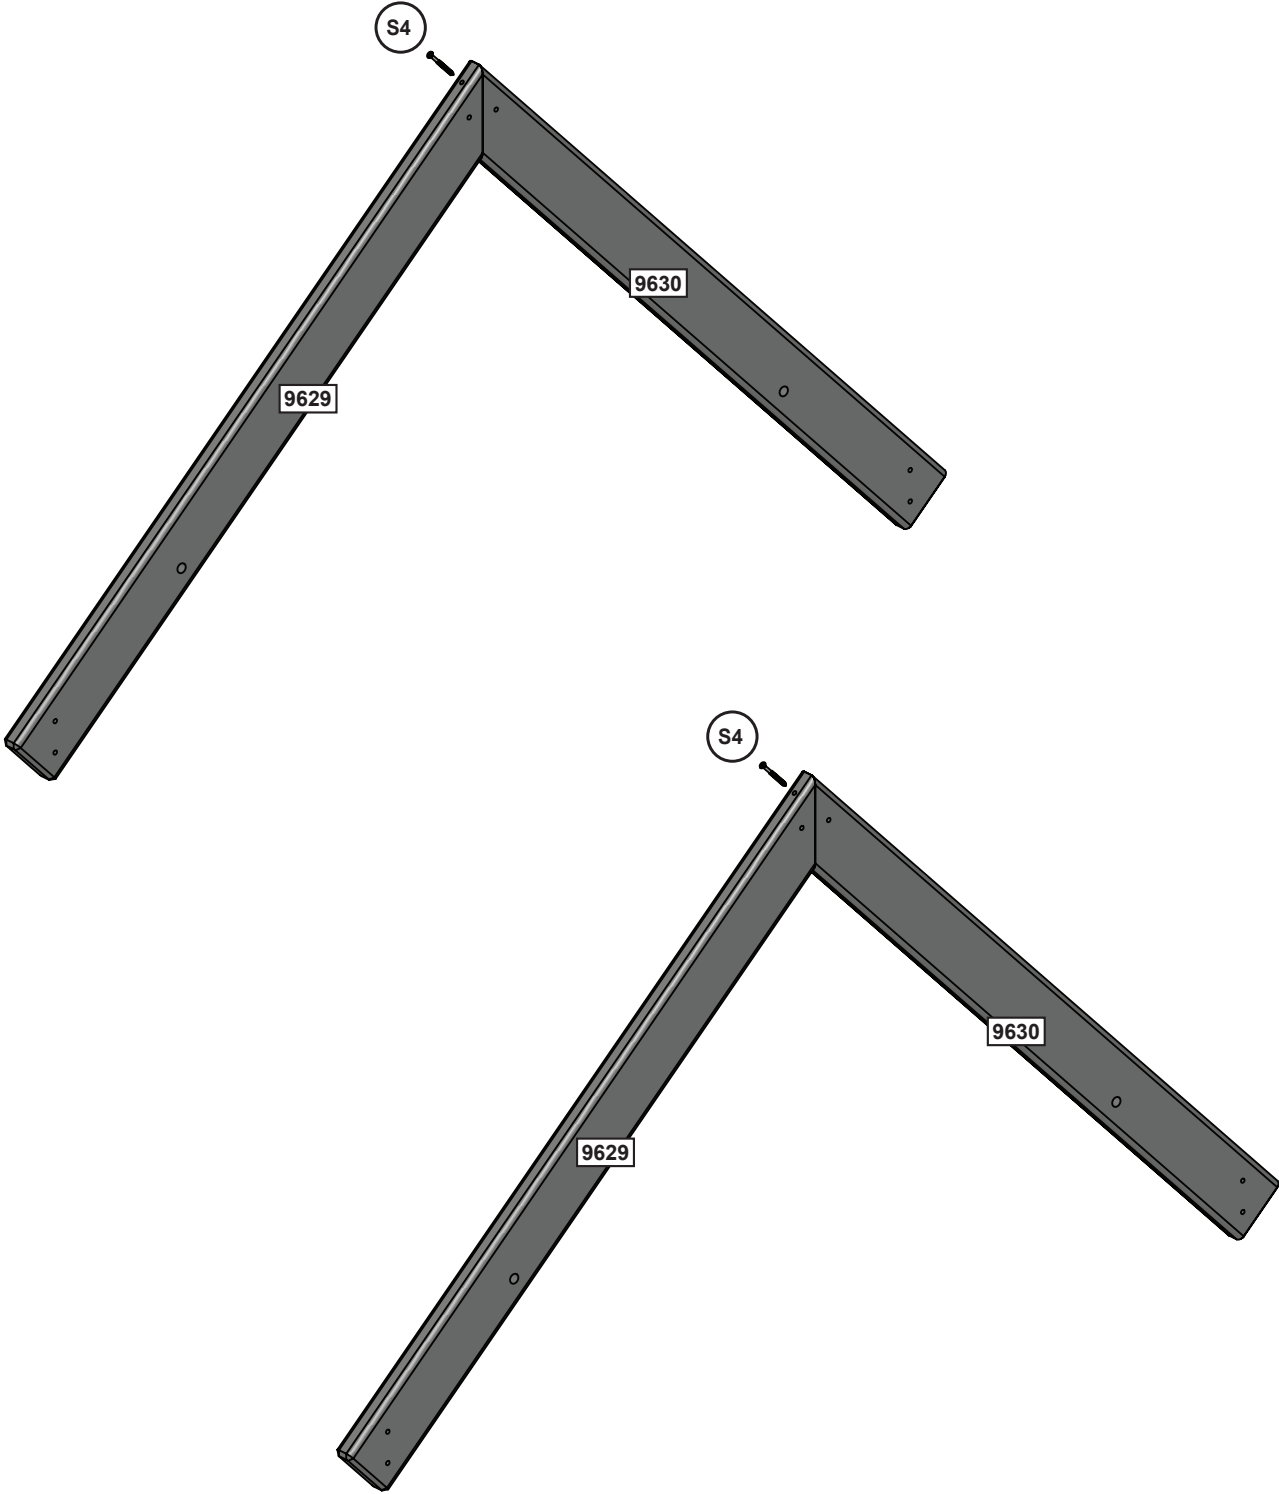



Wood Parts

- 2 x 9629 1 x 3 x 34-3/4" (25.4 x 76.2 x 882.7 mm)
- 2 x 9630 1 x 3 x 34-3/4" (25.4 x 76.2 x 882.7 mm)

Hardware

- 2 x S4 #8 x 3" (76.2 mm)

Step 34

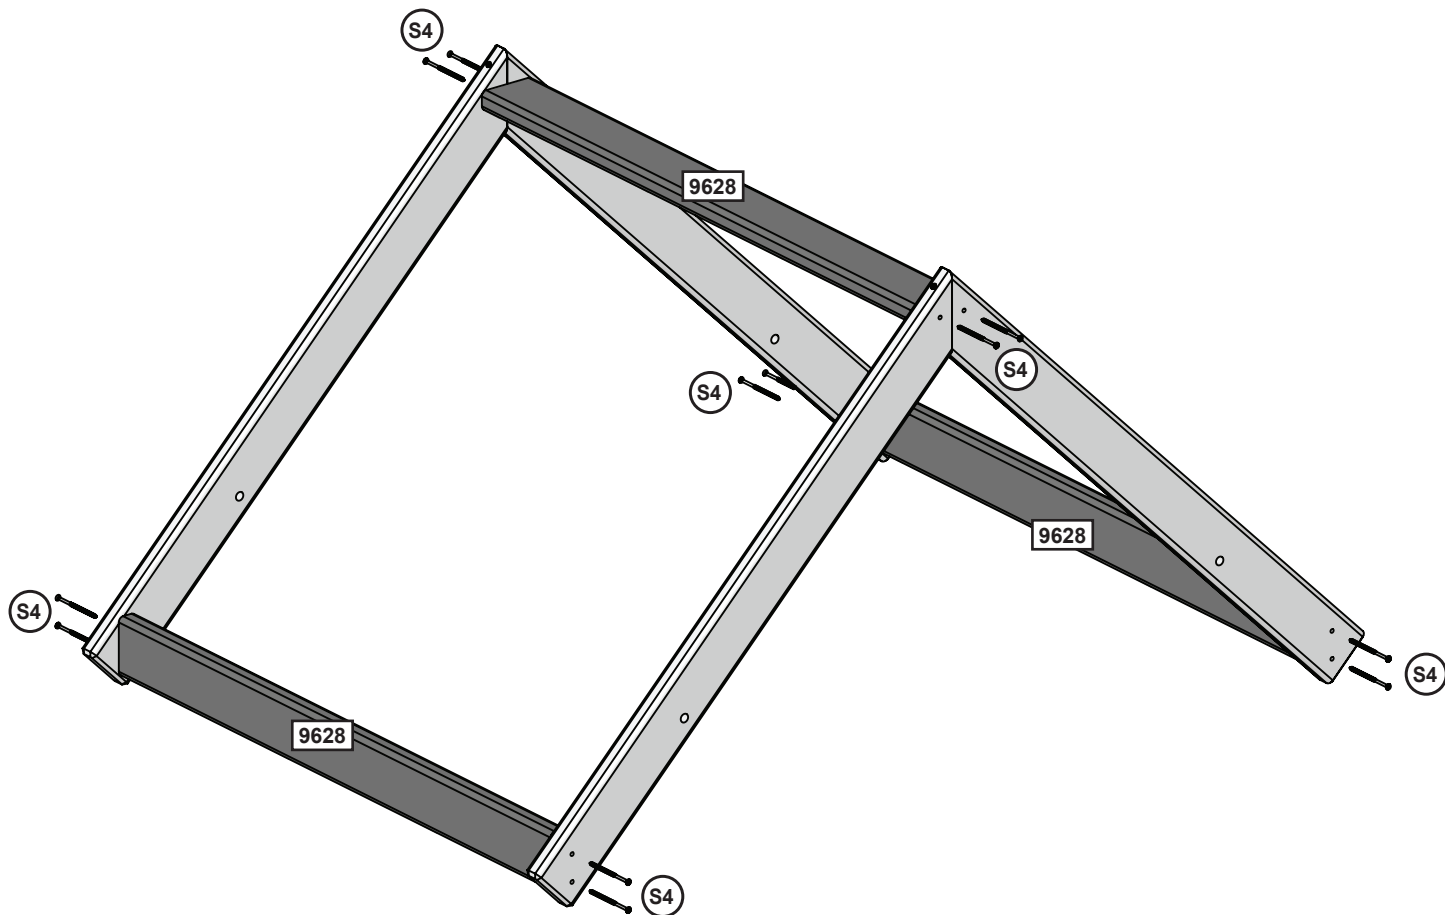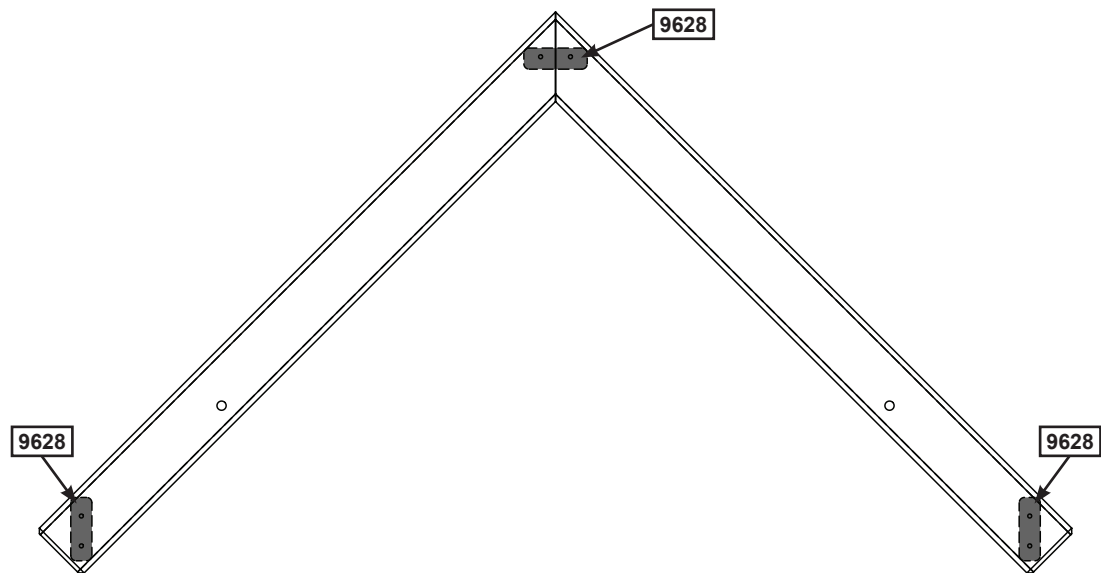


Wood Parts

3 x 9628 1 x 3 x 33-1/4" (25.4 x 76.2 x 844.6 mm)

Hardware

12 x S4 #8 x 3" (76.2 mm)

Step 35

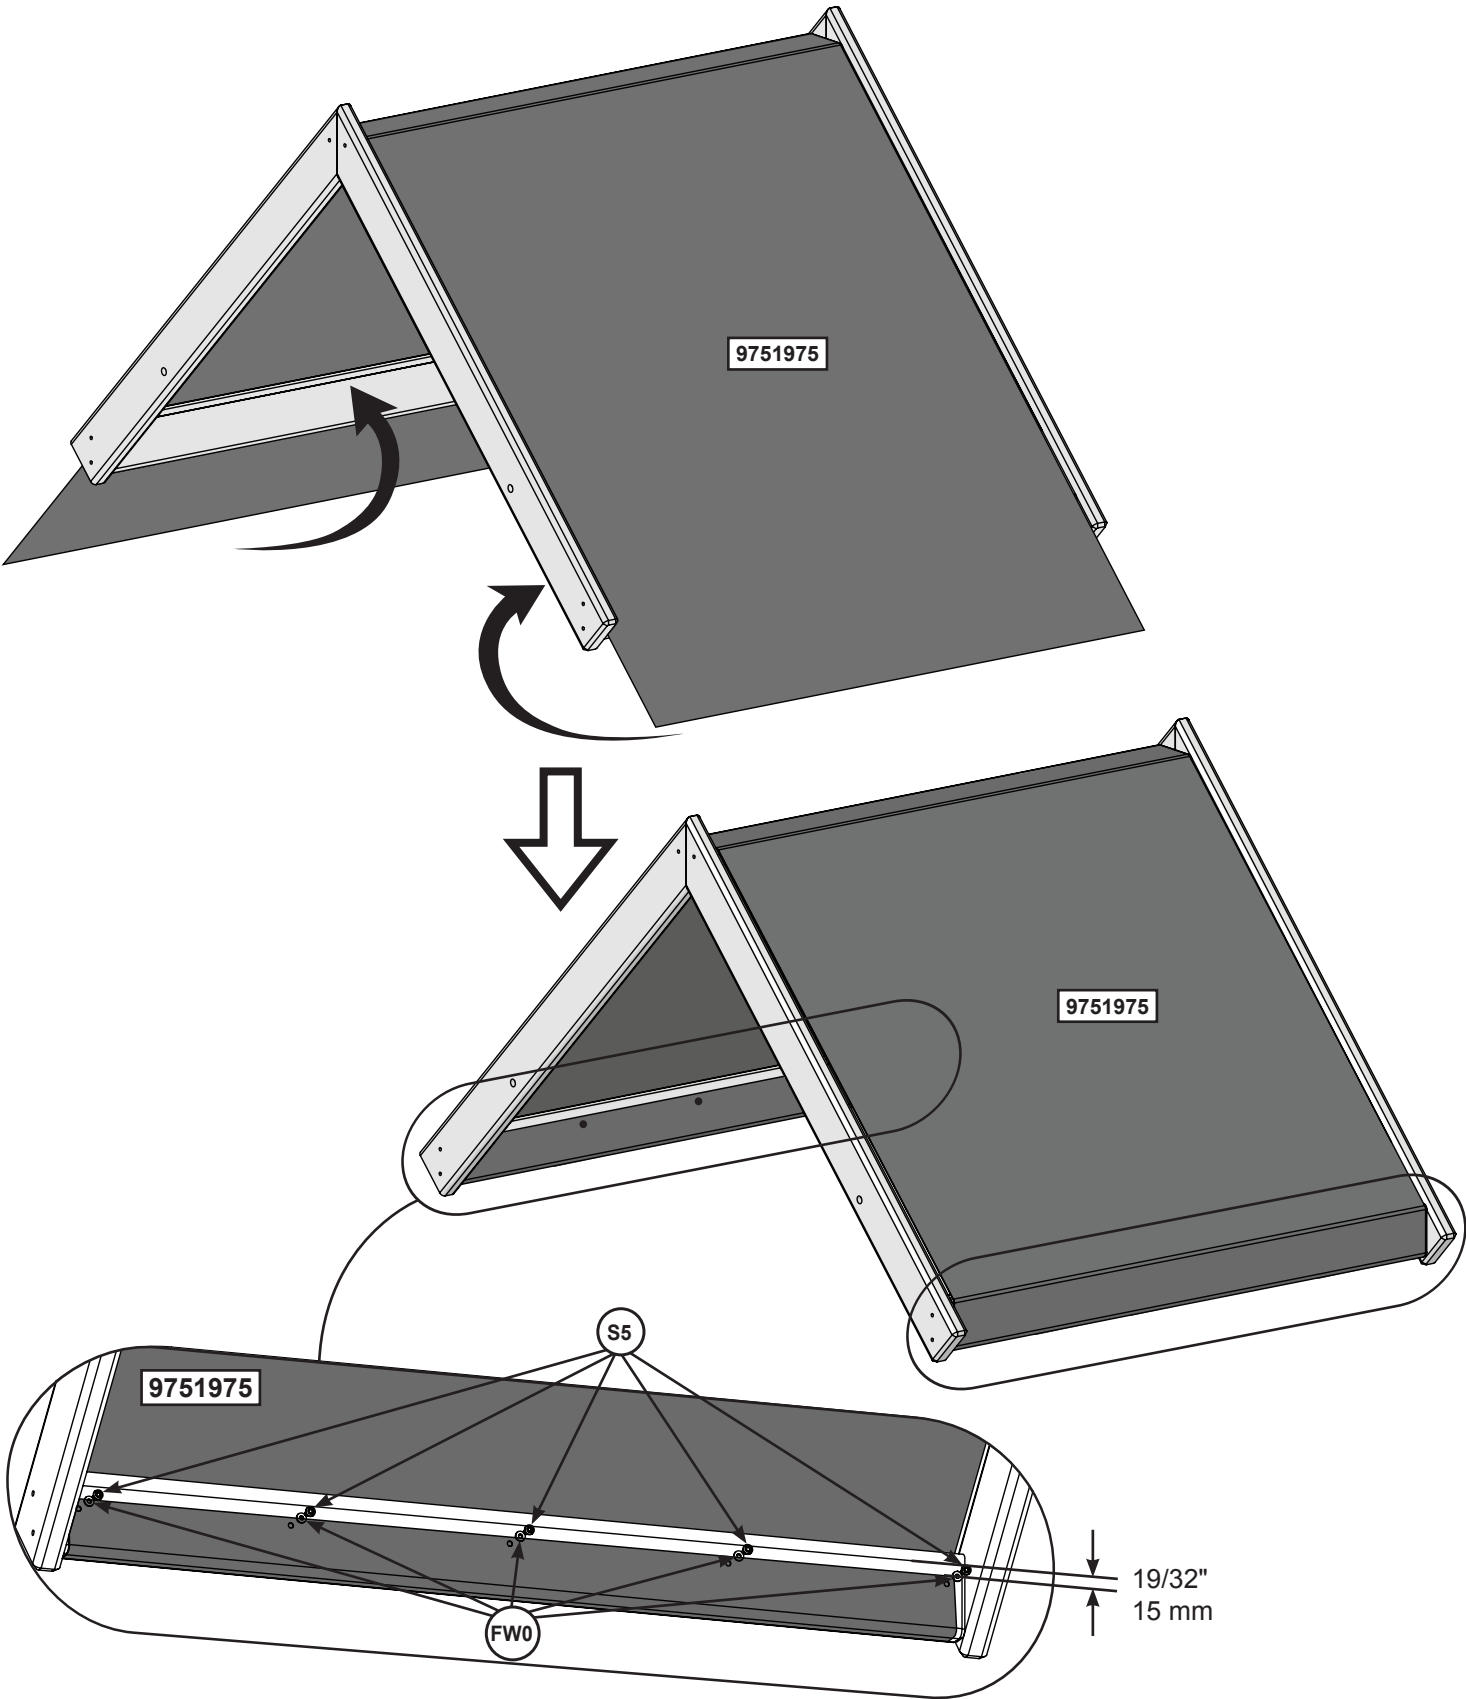



Hardware

10 x **S5** #8 x 1/2" (12.7 mm) (FW0)

Other Parts

1 x **9751975**


Step 36

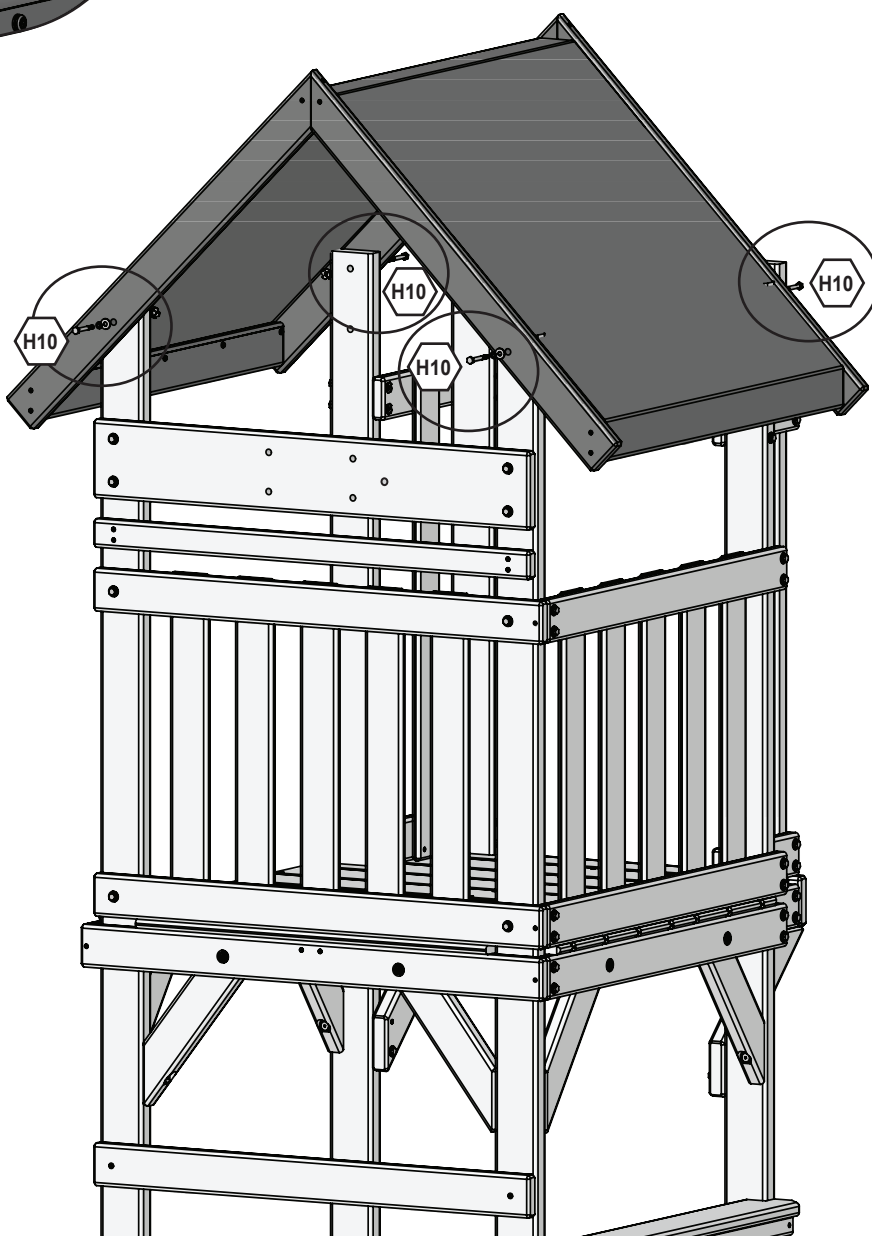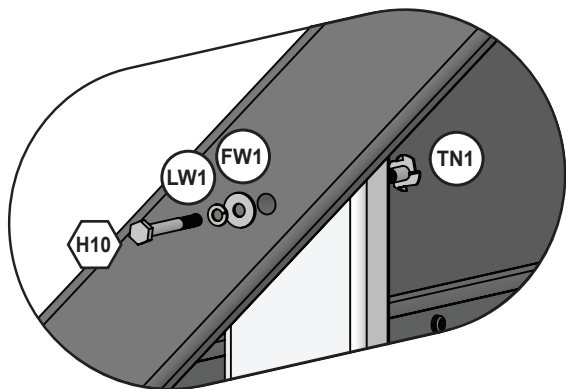



Hardware

4 x  1/4 x 2-1/4" (57.2 mm) (FW1, LW1, TN1)

Step 37

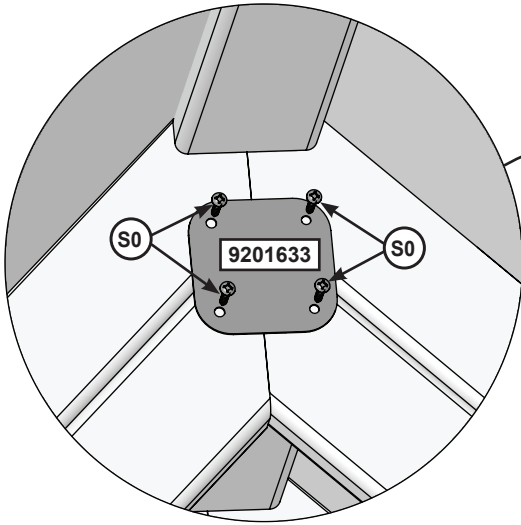


Inside View

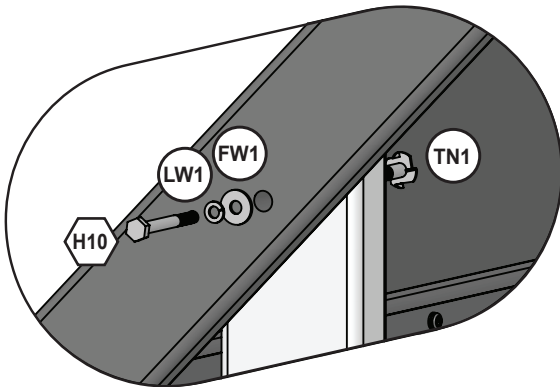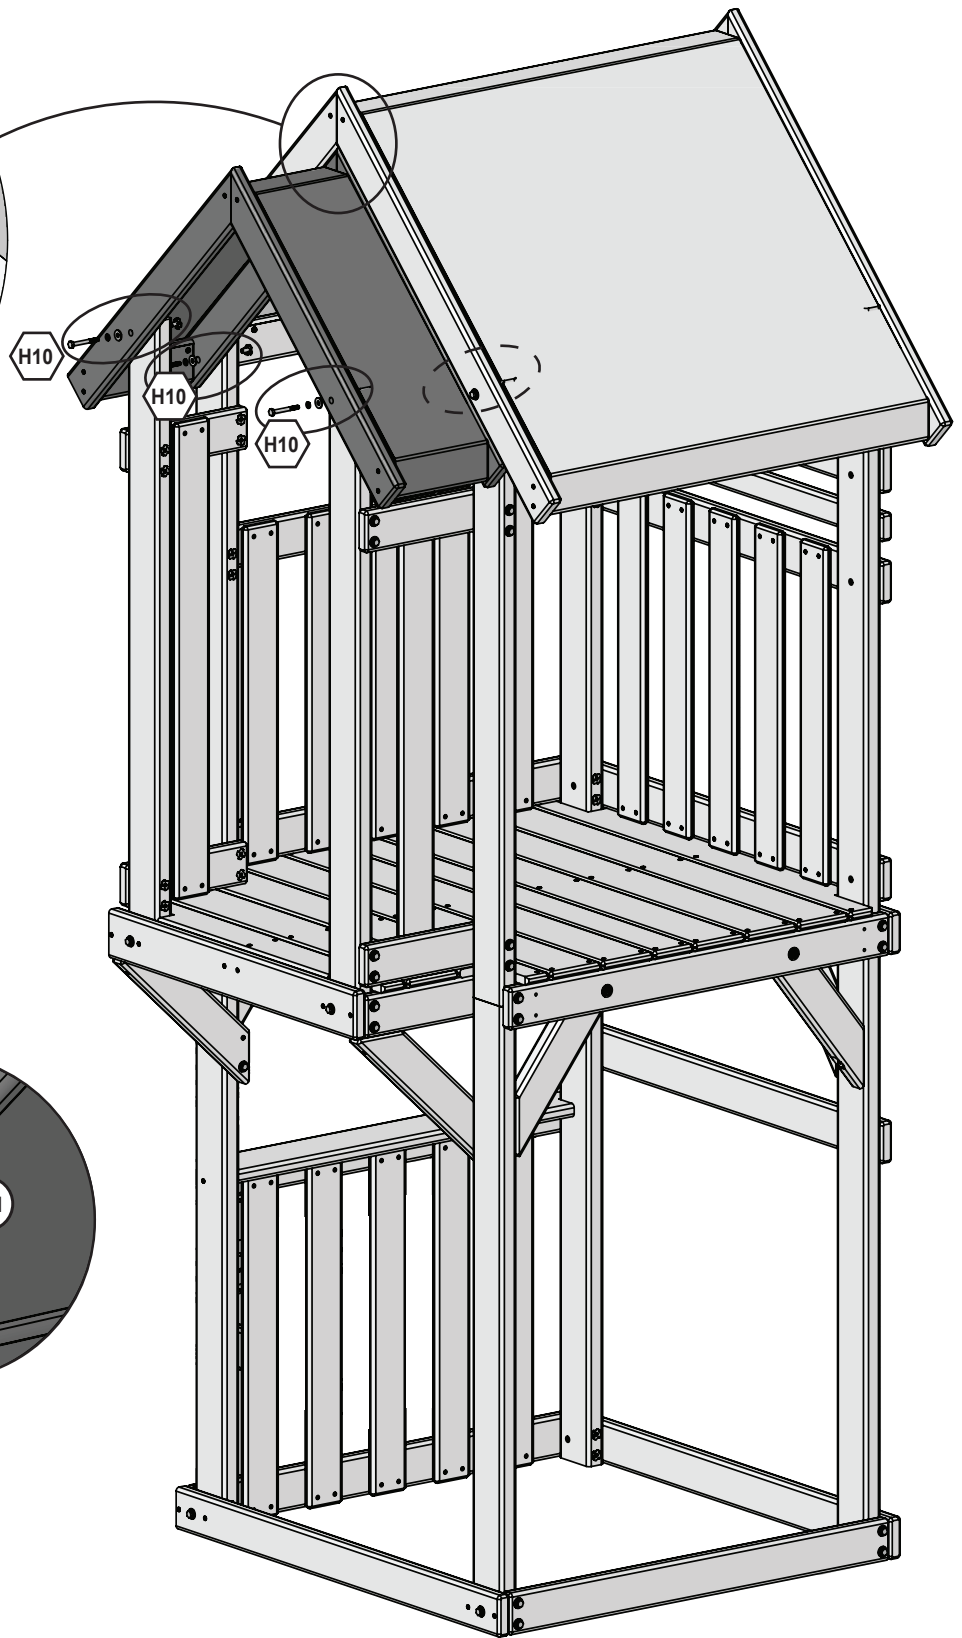


Hardware

- 4 x  1/4 x 2-1/4" (57.2 mm) (FW1, LW1, TN1)
 4 x  #8 x 7/8" (22.2 mm)

Other Parts

- 1 x 

Step 38

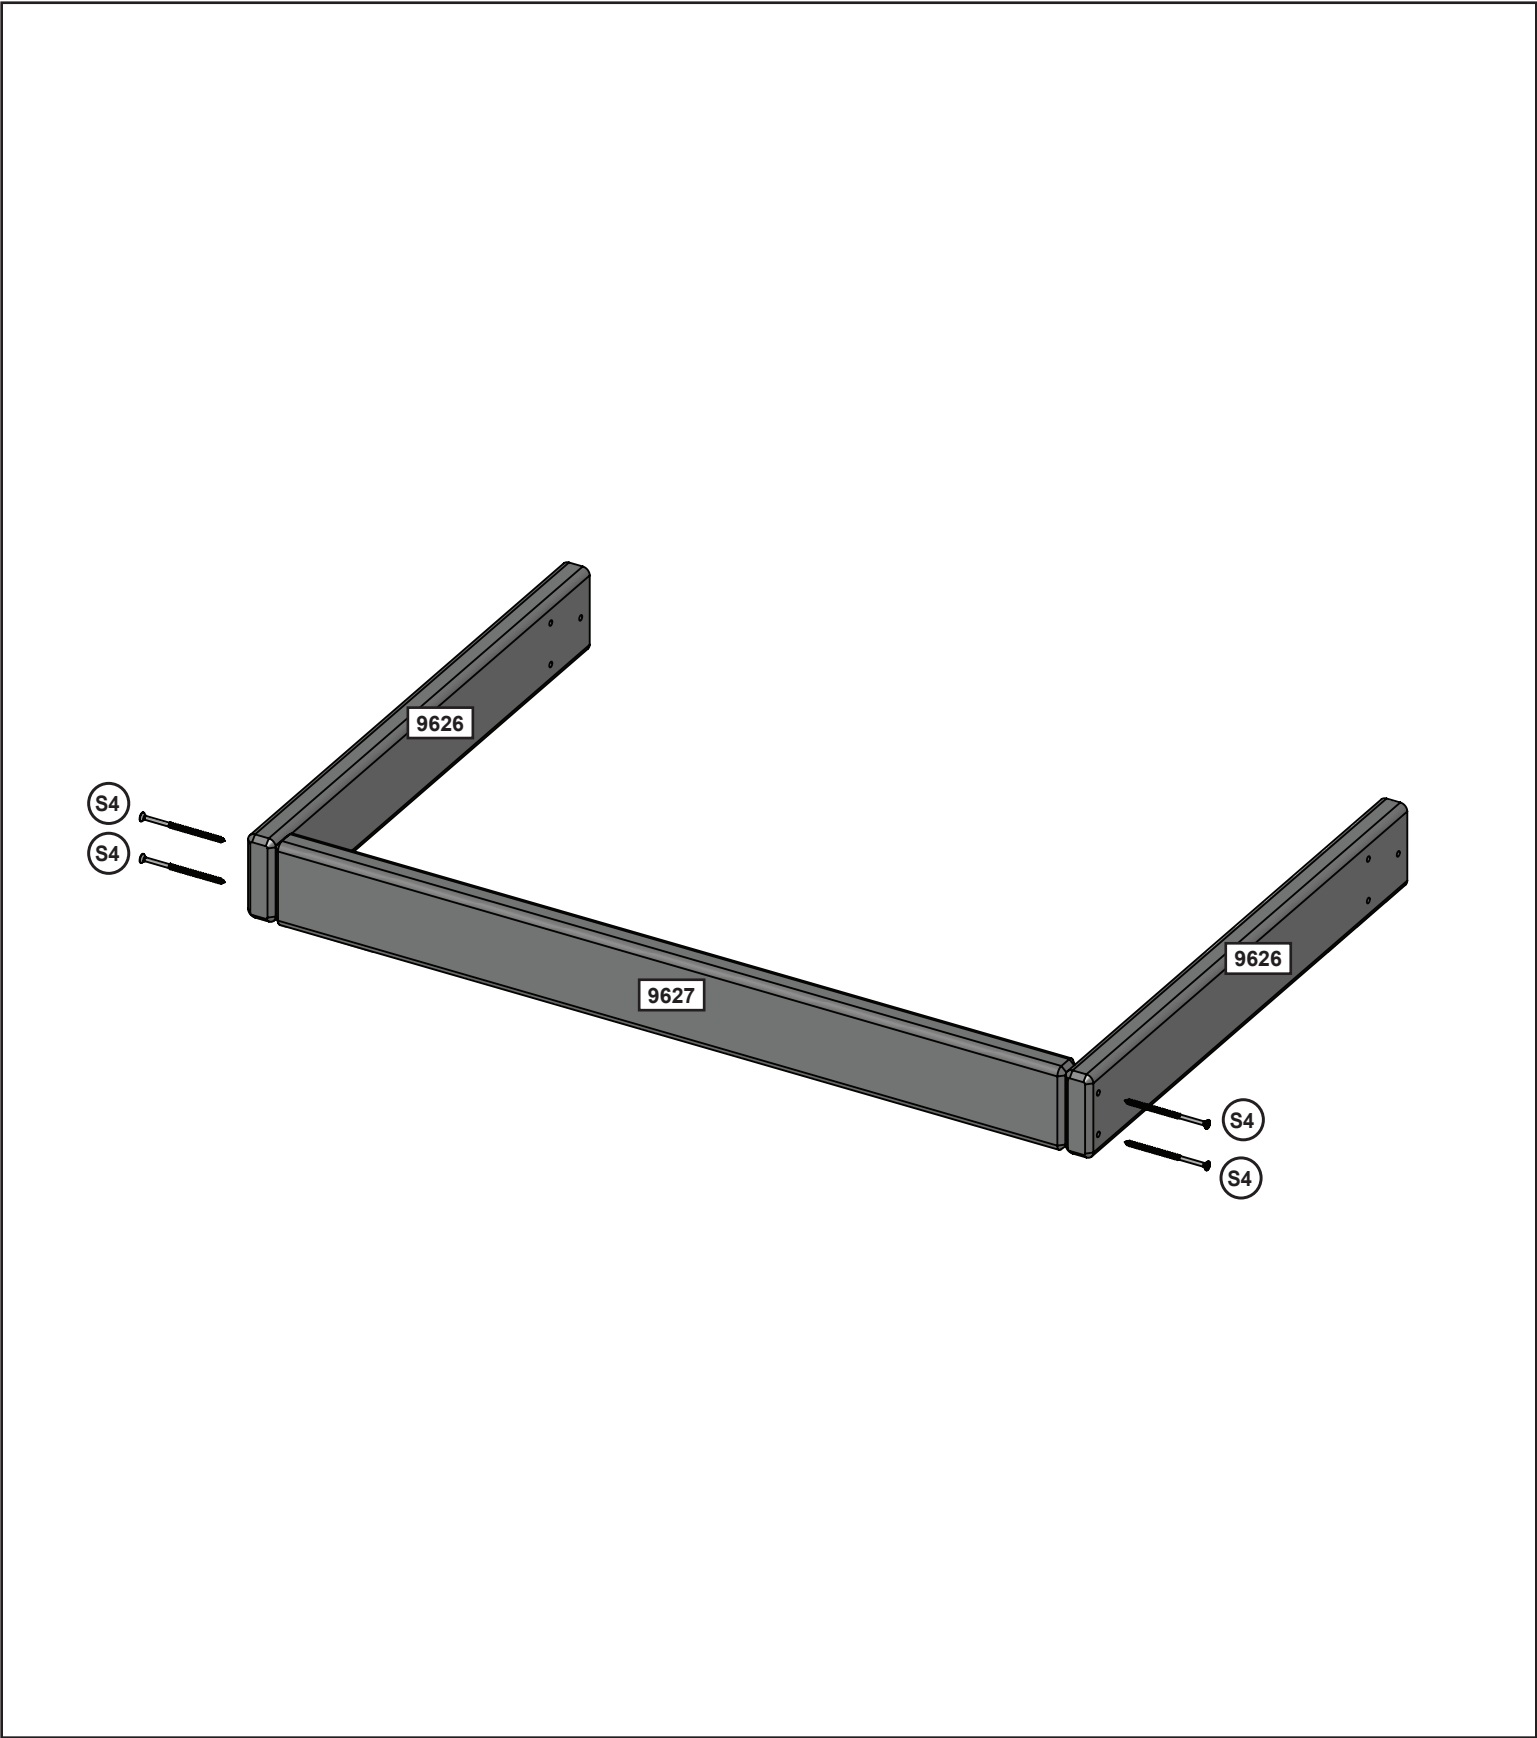





Wood Parts

- 2 x 9626 1 x 3 x 20" (25.4 x 76.2 x 508 mm)
- 1 x 9627 1 x 3 x 28-1/2" (25.4 x 76.2 x 723.9 mm)

Hardware

- 4 x S4 #8 x 3" (76.2 mm)



Step 39

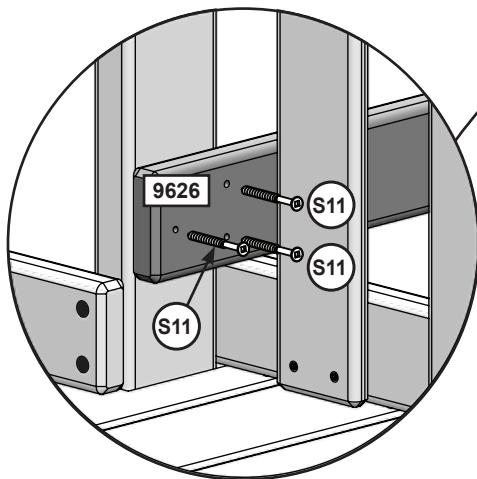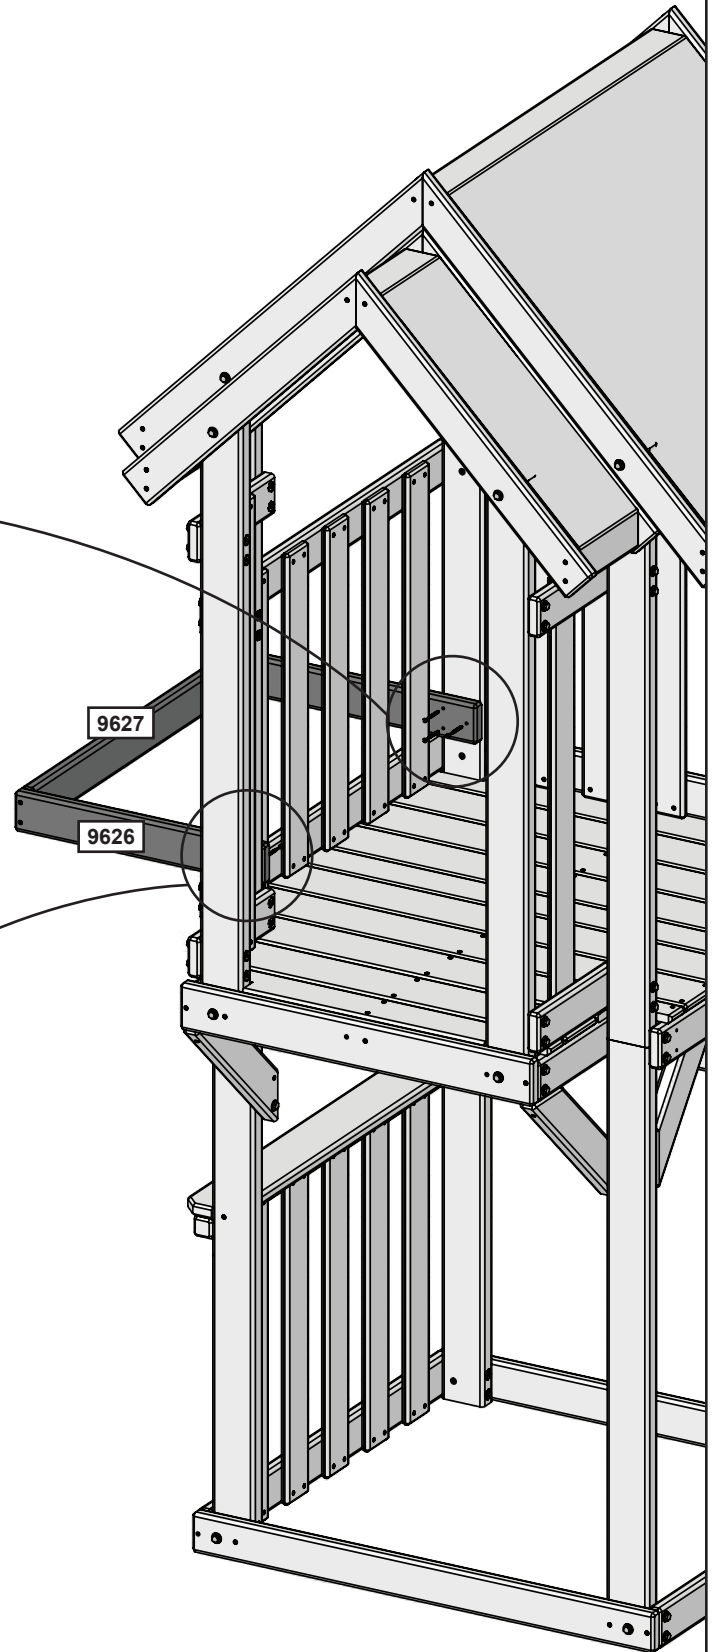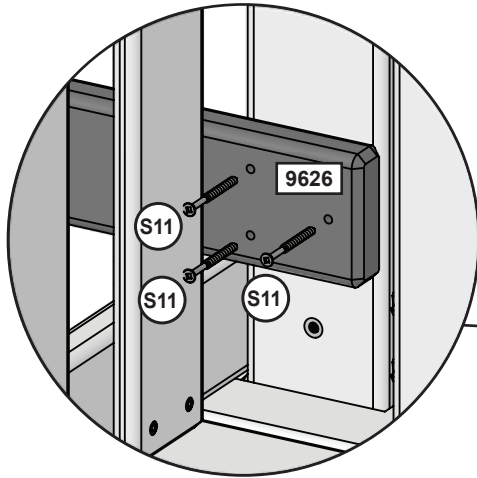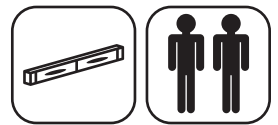

Hardware

6 x  #8 x 2" (50.8 mm)

Step 40

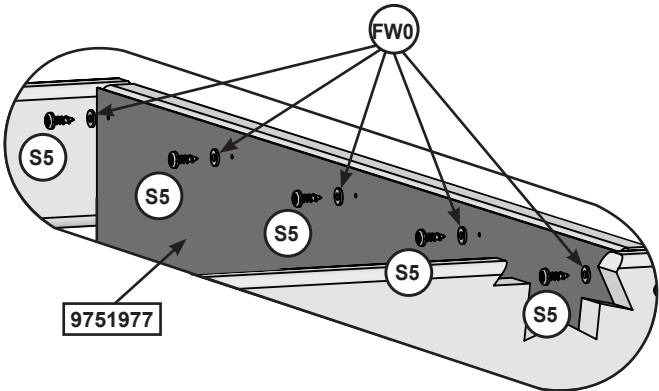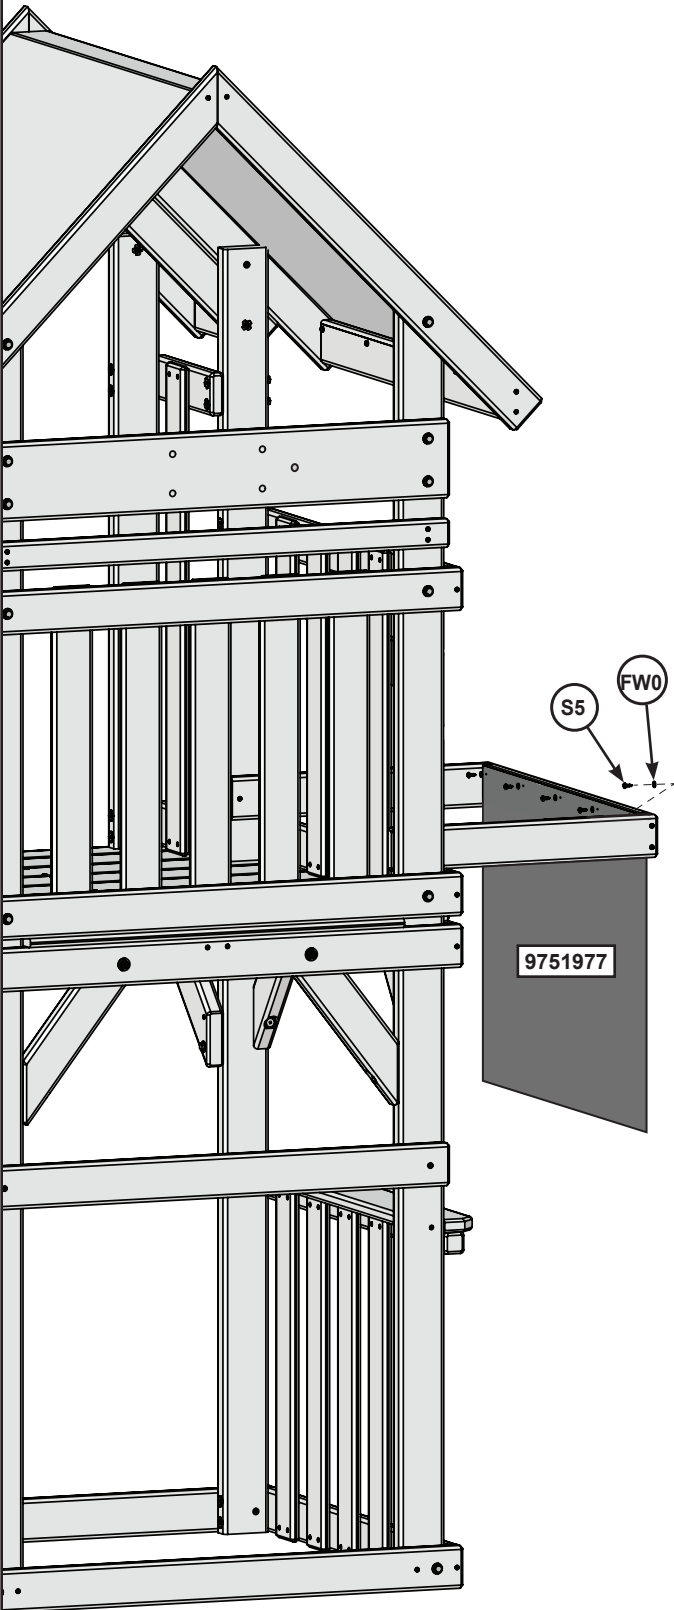


Hardware

5 x S5 #8 x 1/2" (12.7 mm) (FW0)

Other Parts

1 x 9751977

Step 41

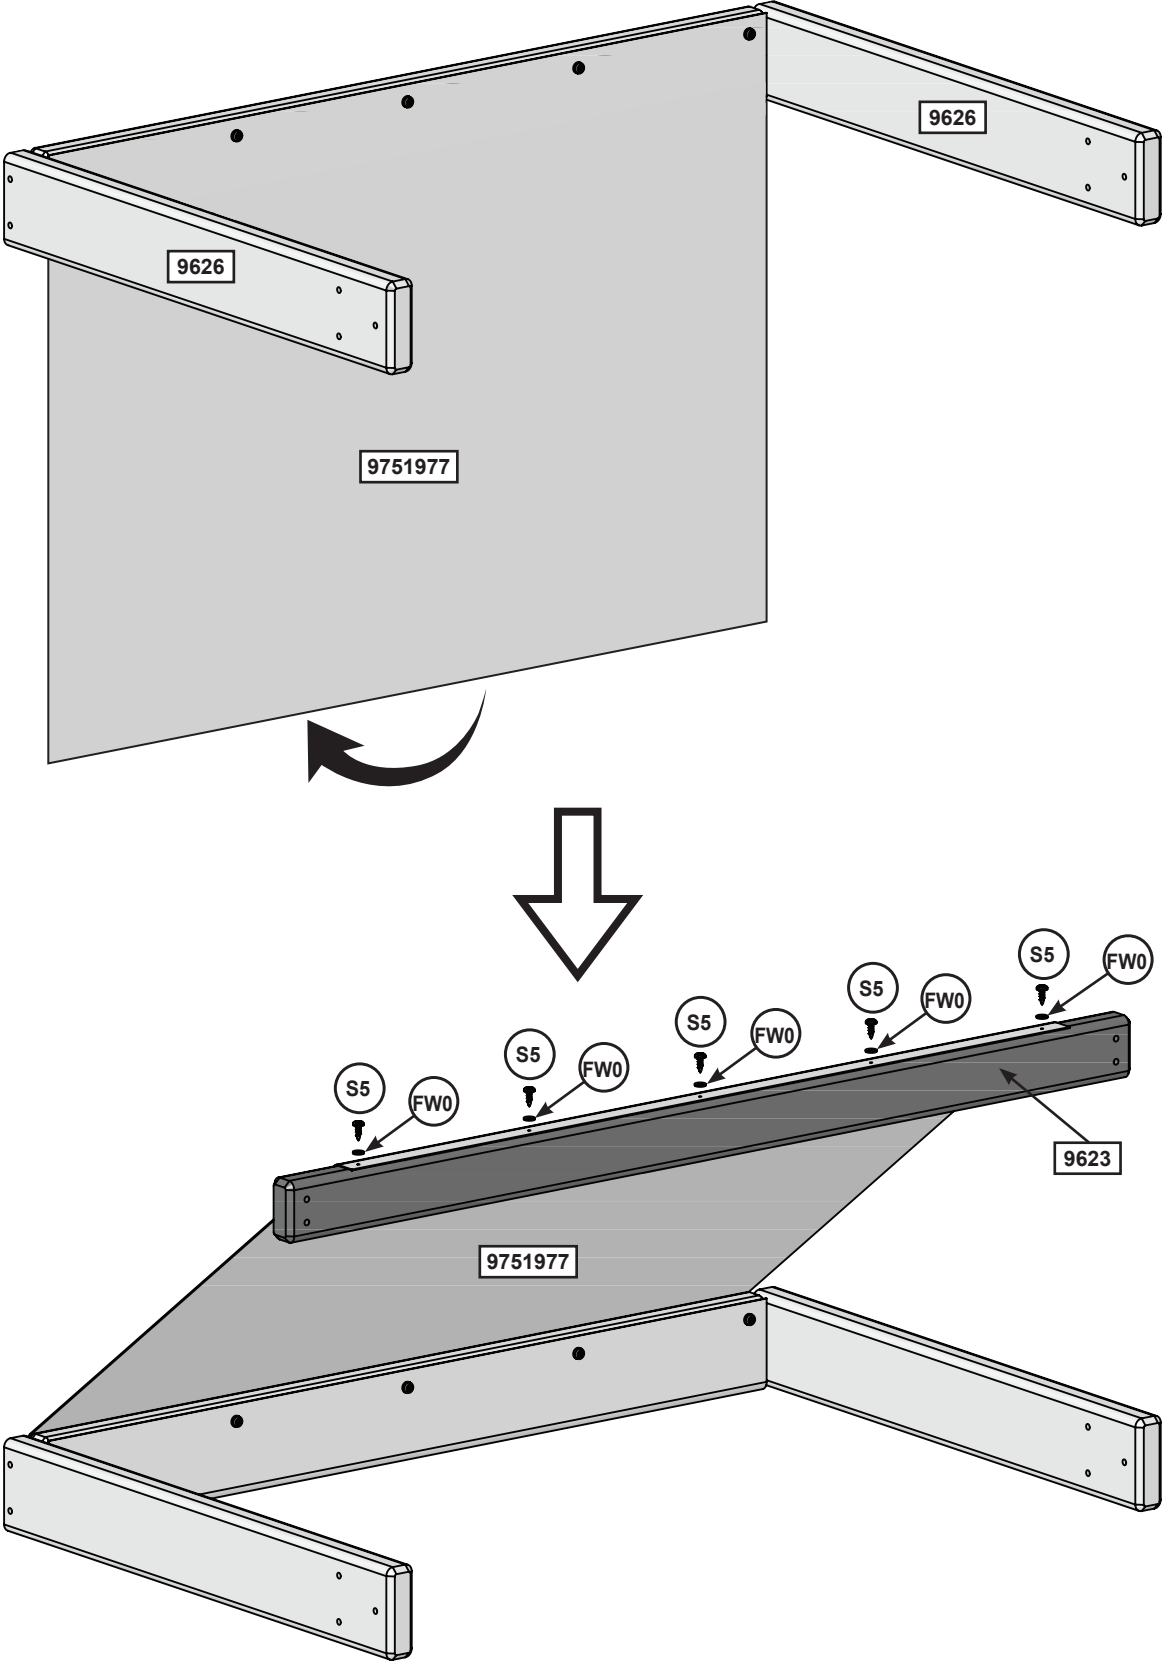



Wood Parts

1 x 9623 1 x 2 x 33-1/4" (25.4 x 50.8 x 844.6 mm)

Hardware

5 x S5 #8 x 1/2" (12.7 mm) (FW0)


Step 42

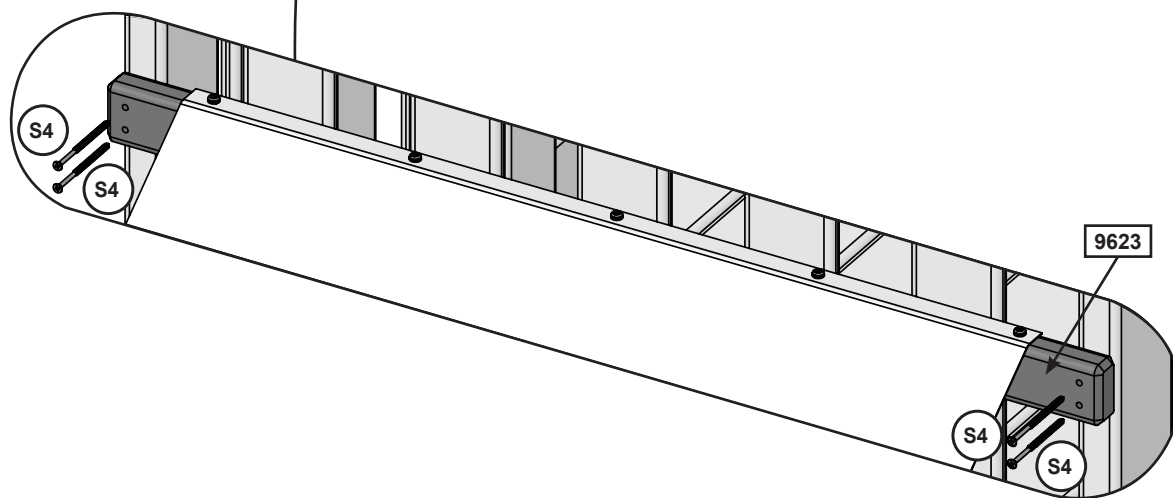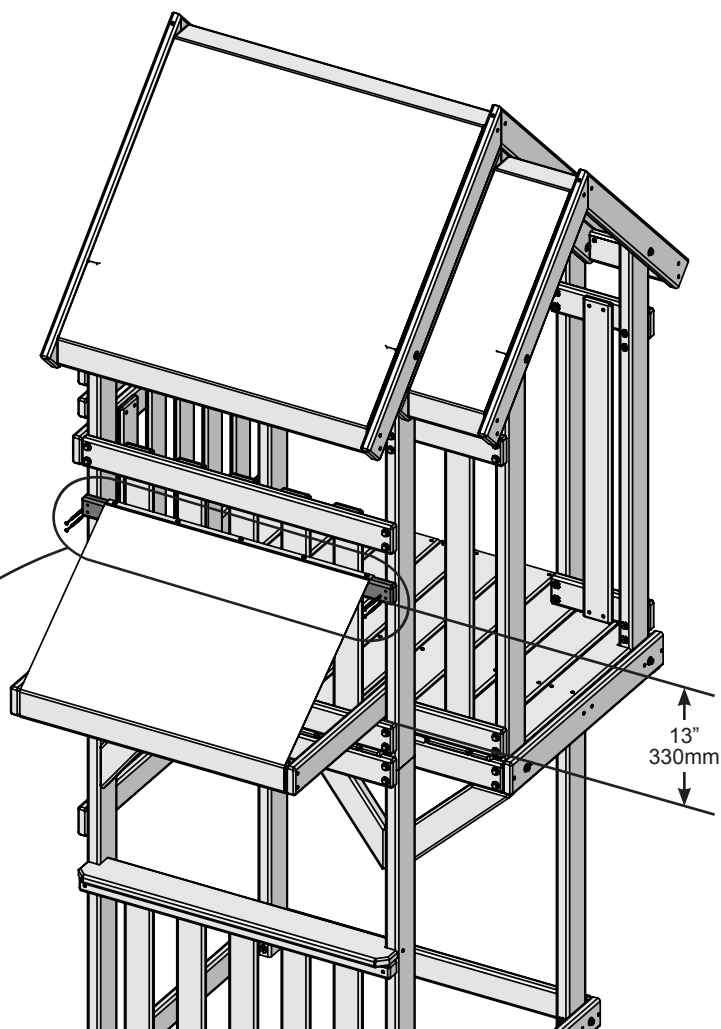

Hardware

4 x  #8 x 3" (76.2 mm)

Step 43

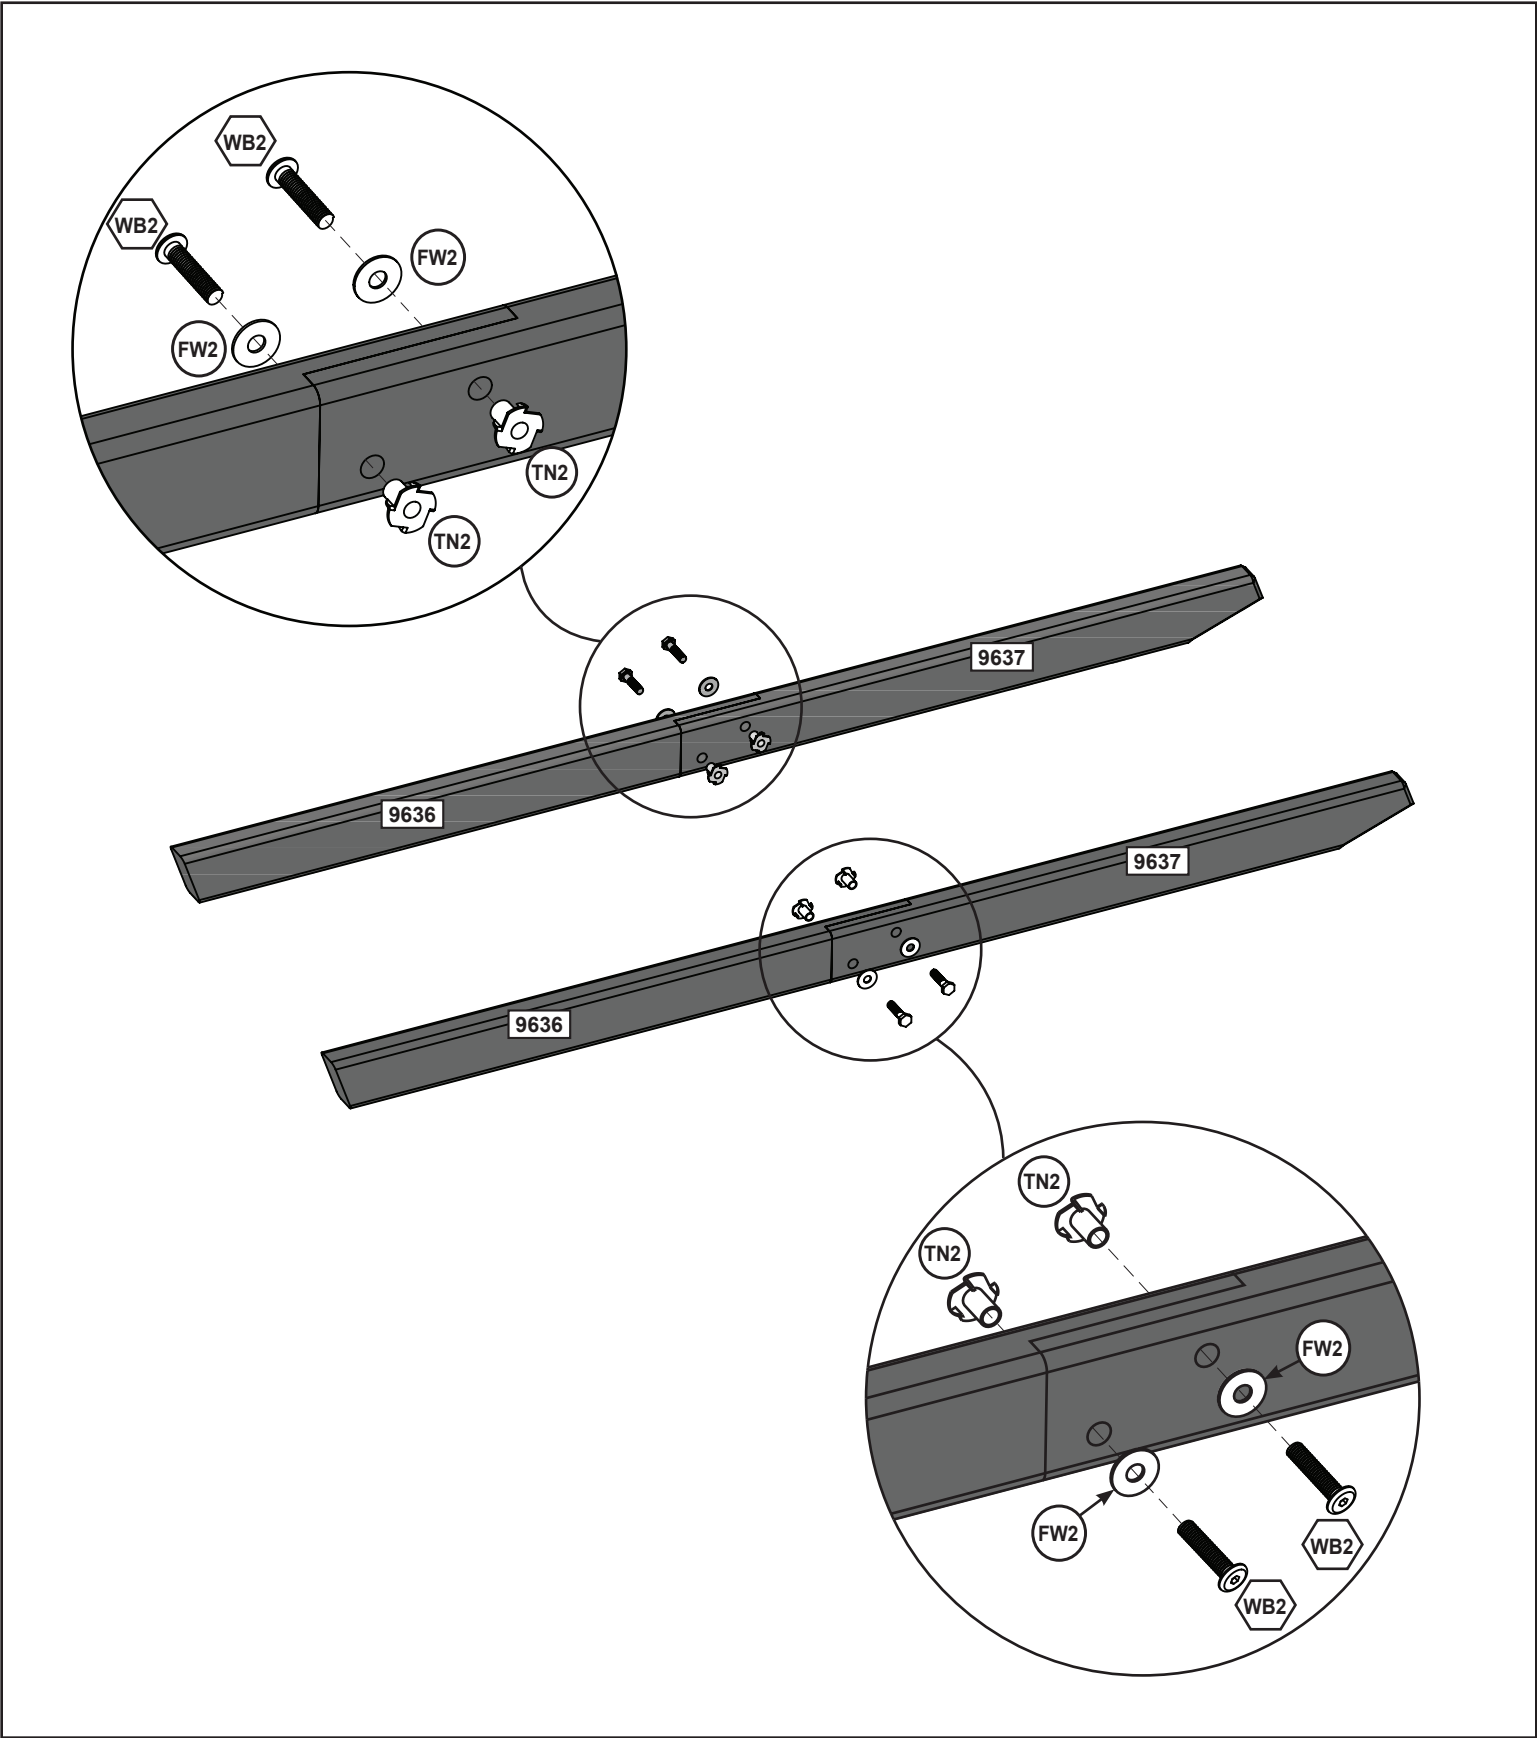

Wood Parts

- 2 x 9636 1-1/4 x 2-1/2 x 27-1/4" (31.8 x 63.5 x 692.2 mm)
2 x 9637 1-1/4 x 2-1/2 x 27-1/4" (31.8 x 63.5 x 692.2 mm)



Hardware

- 4 x WB2 5/16 x 1-3/8" (35 mm) (FW2, TN2)

Step 44



IMPORTANT!
Follow hole
pattern

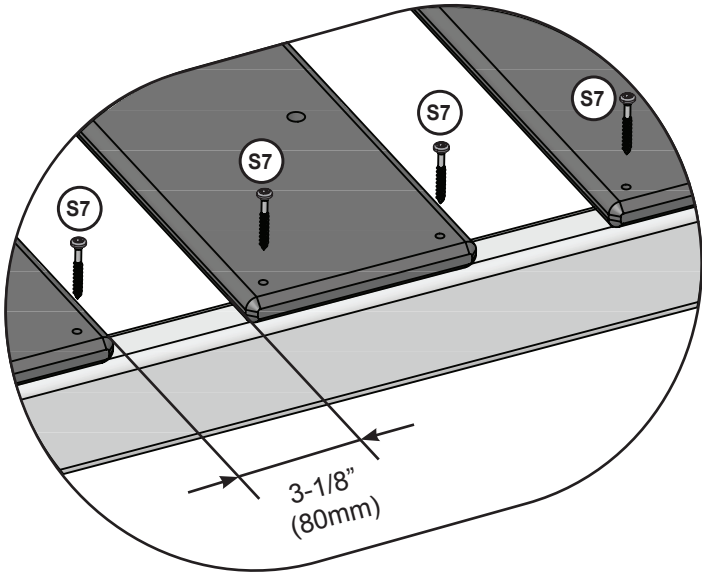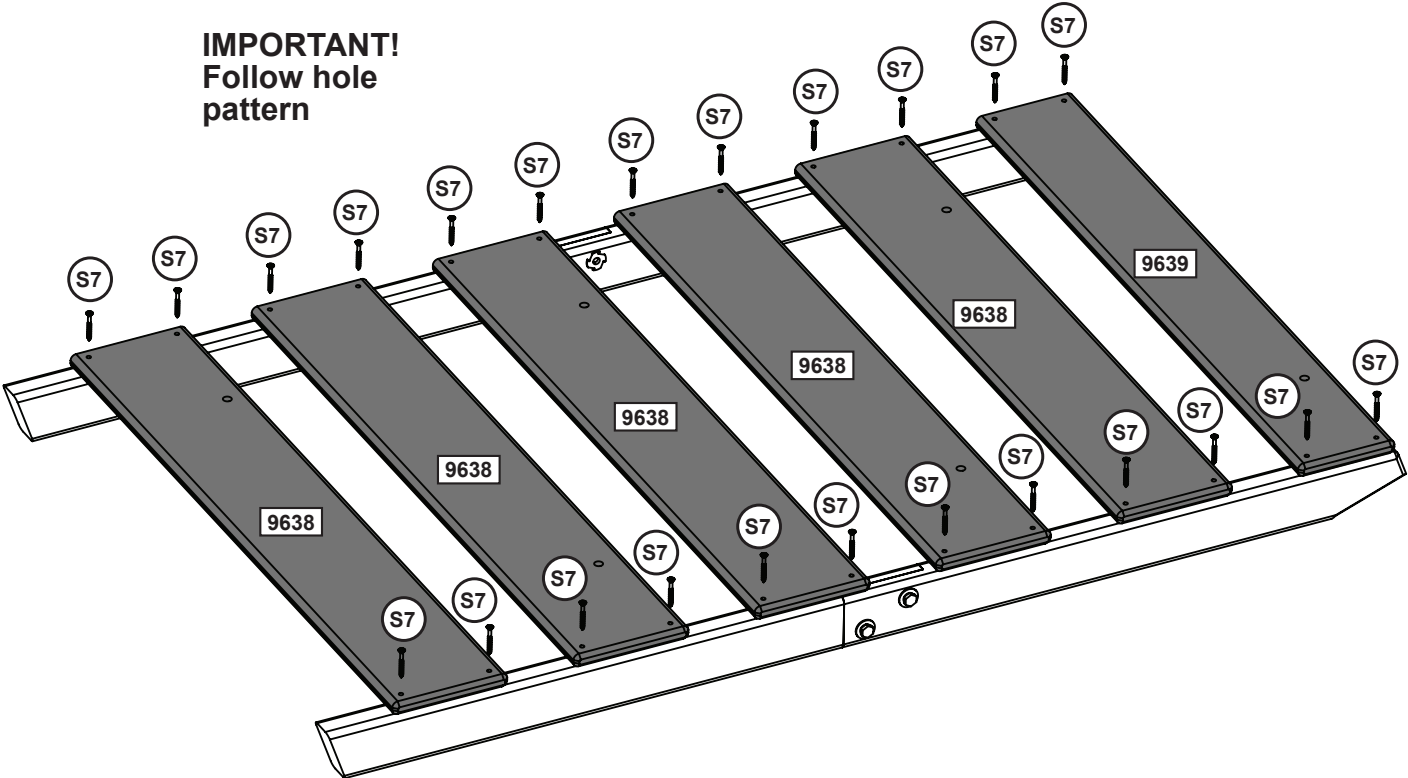





Wood Parts

- 5 x 9638 5/8 x 5-3/8 x 30" (15.9 x 136.5 x 762 mm)
1 x 9639 5/8 x 4-1/2 x 30" (15.9 x 114.3 x 762 mm)

Hardware

- 24 x S7 #12 x 2" (50.8 mm)

Step 45

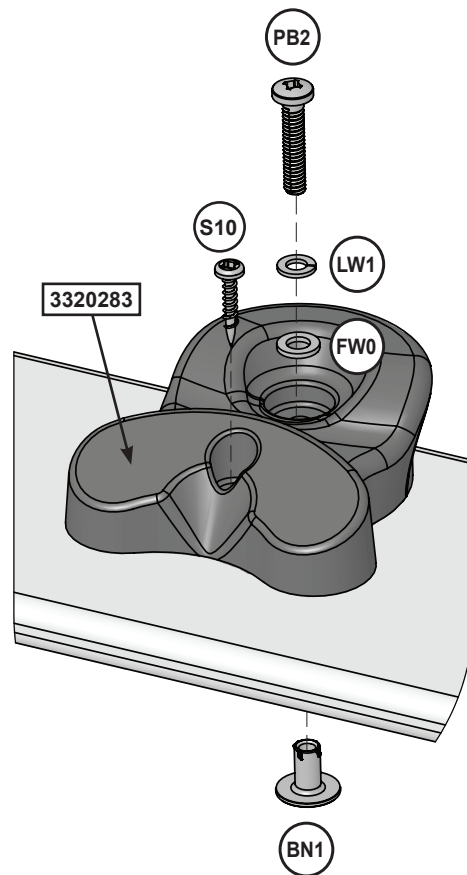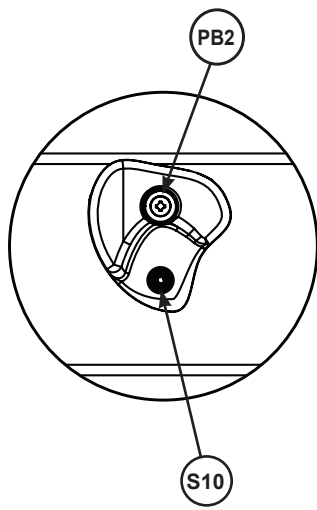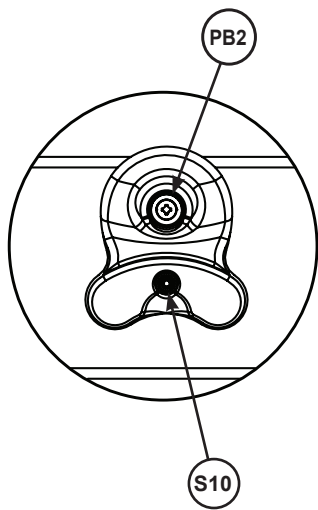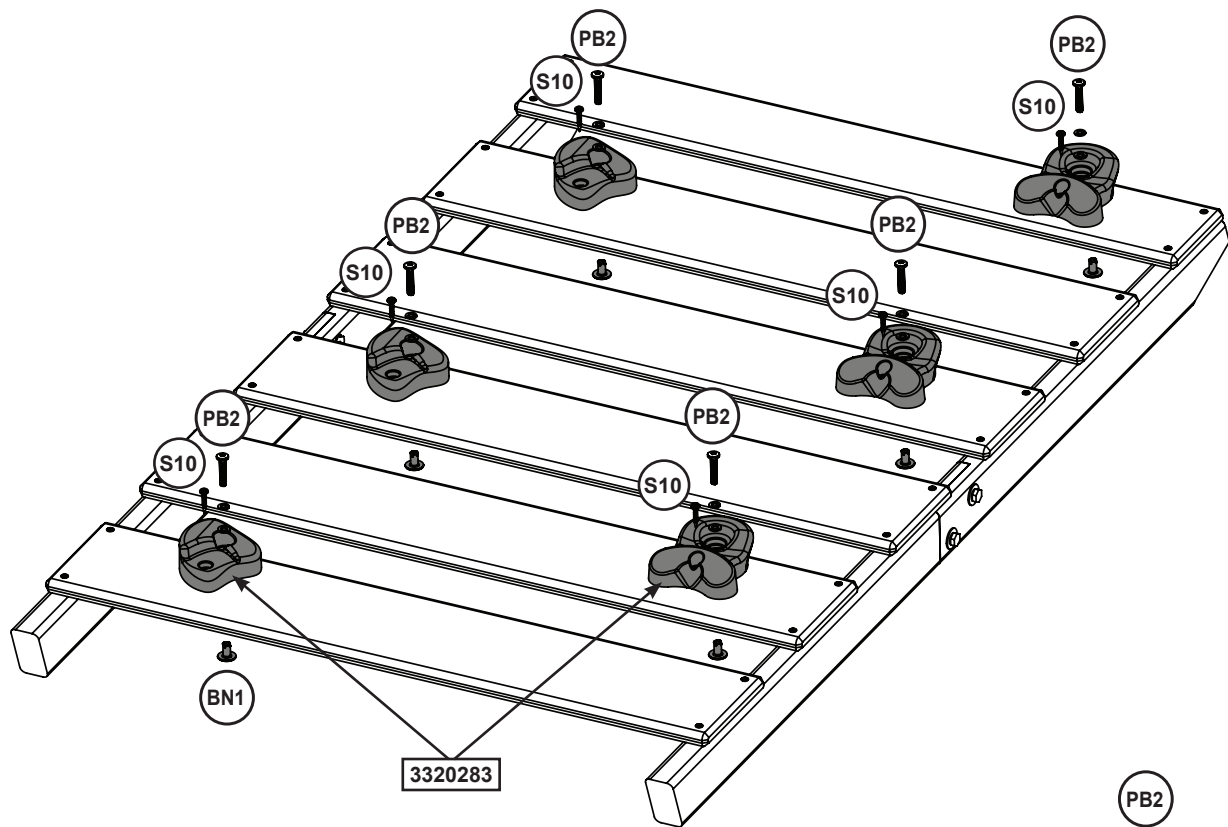


Hardware

- 6 x PB2 1/4 x 1-1/4" (32 mm) (FW0, LW1, BN1)
- 6 x S10 #8 x 1" (25.4 mm)

Other Parts

- 1 x 3320283 (6pk)

Step 46

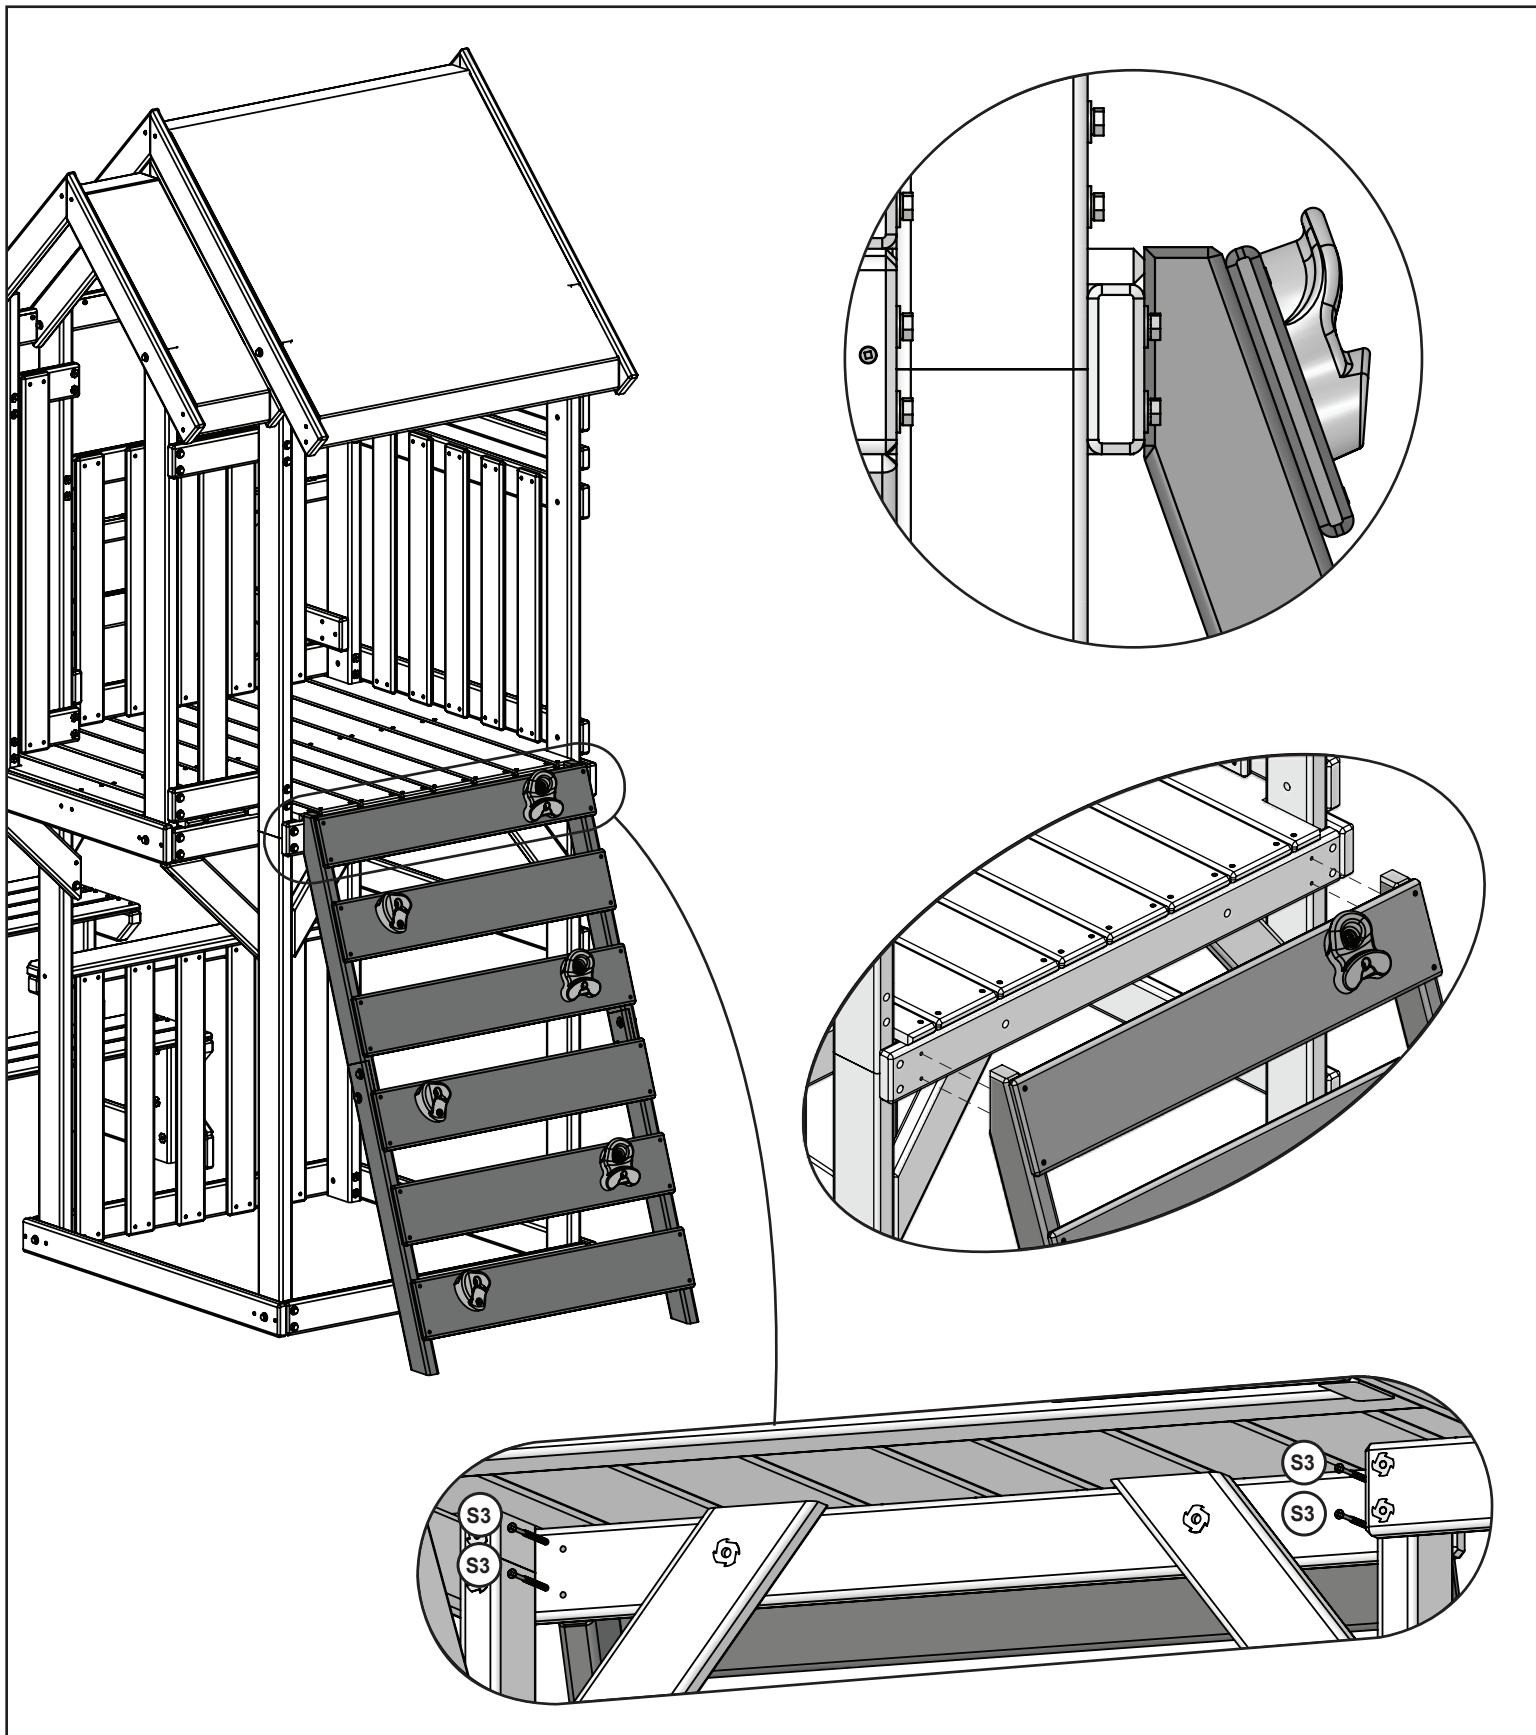


Hardware

4 x (S3) #8 x 2-1/2" (63.5 mm)

Step 47

Note: Keep all bolts loose until next step.

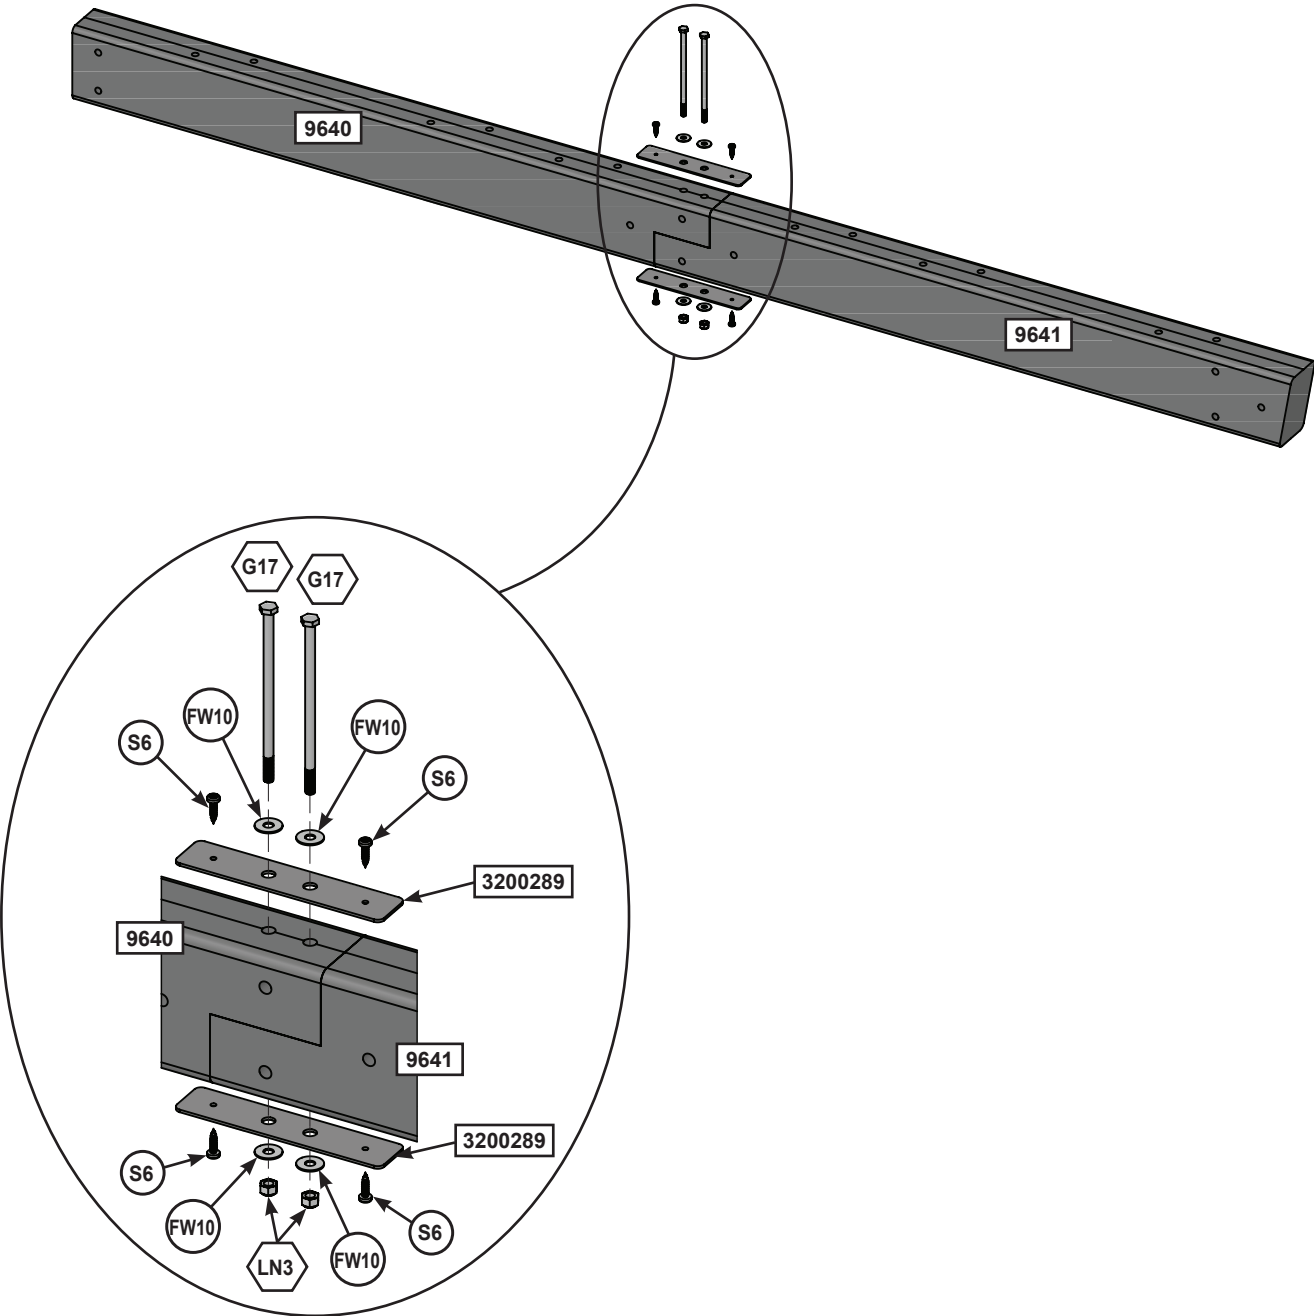

Wood Parts

- 1 x 9640 3 x 5-1/4 x 46" (76.2 x 133.4 x 1168.4 mm)
- 1 x 9641 3 x 5-1/4 x 46" (76.2 x 133.4 x 1168.4 mm)

Hardware


- 2 x G17 3/8 x 6" (152.4 mm) (2 x FW10, LN3)
- 4 x S6 #12 x 1" (25.4 mm)

Other Parts

- 1 x 3200289 (2pk)

Step 48


Note: Tighten all bolts.

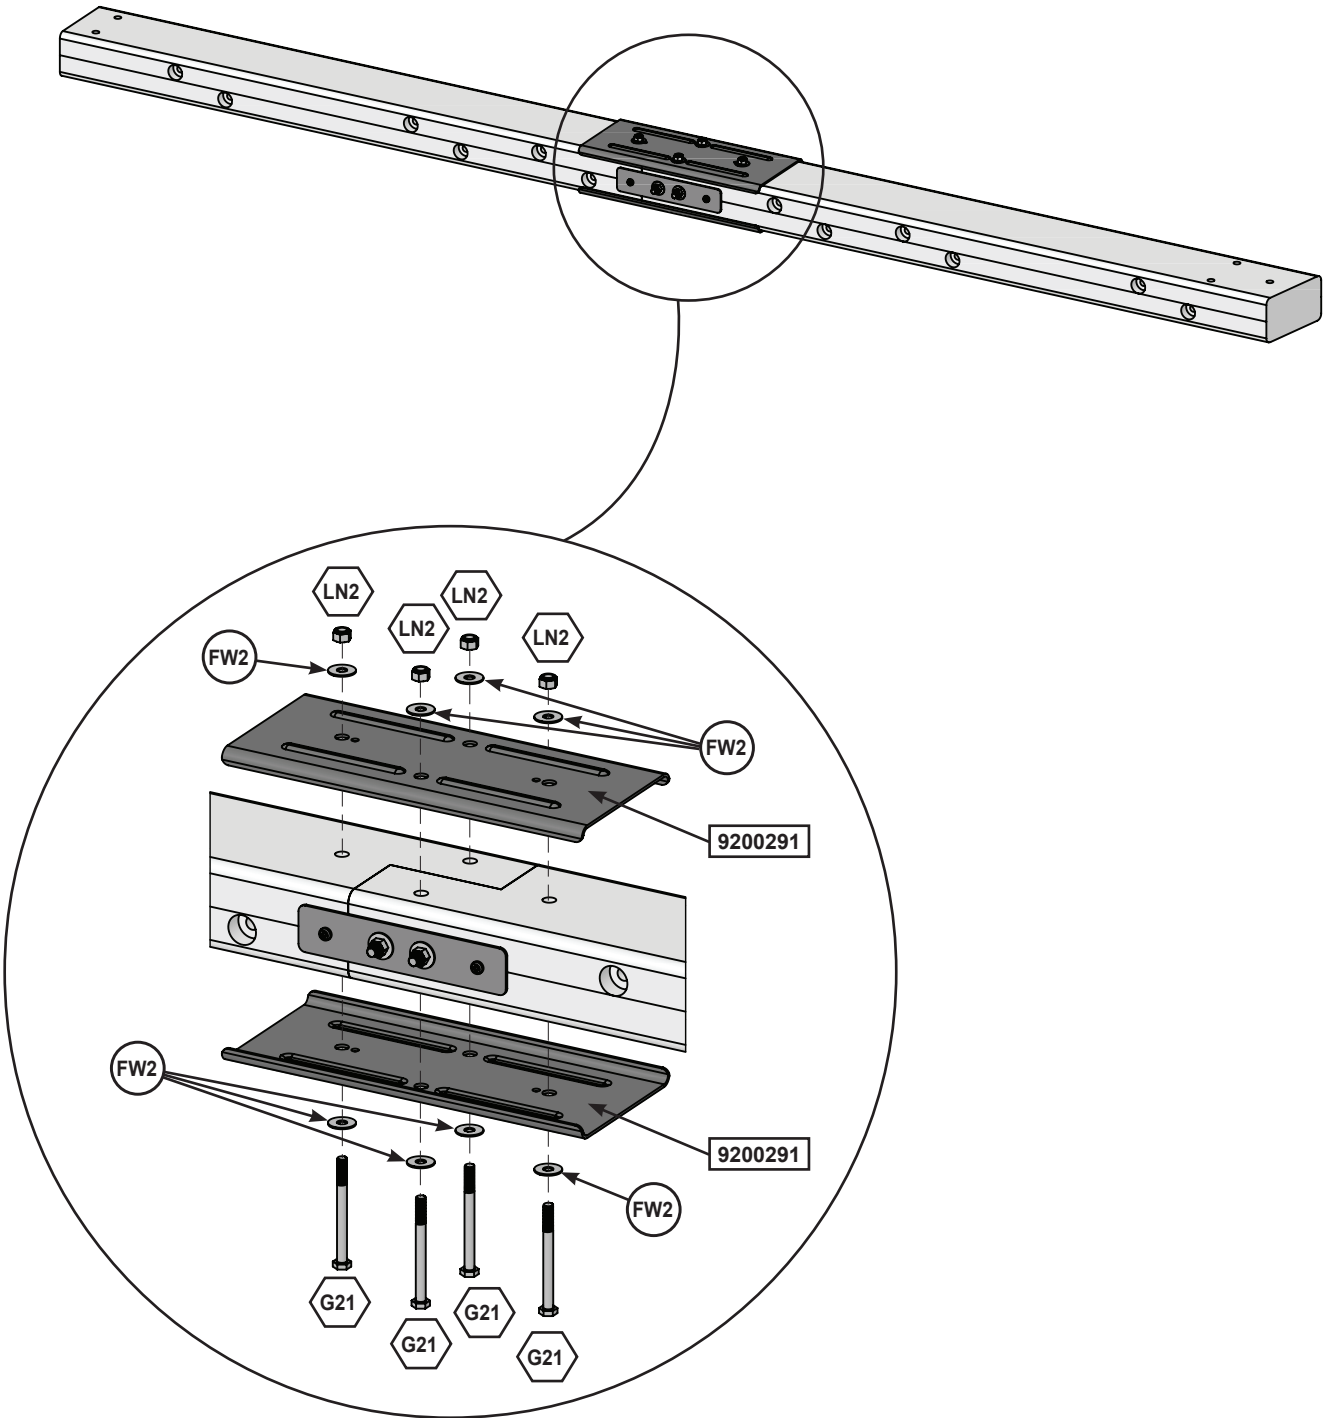

Hardware
4 x  5/16 x 3-3/4" (95.2 mm) (2 x FW2, LN2)

Other Parts
2 x 

Step 49

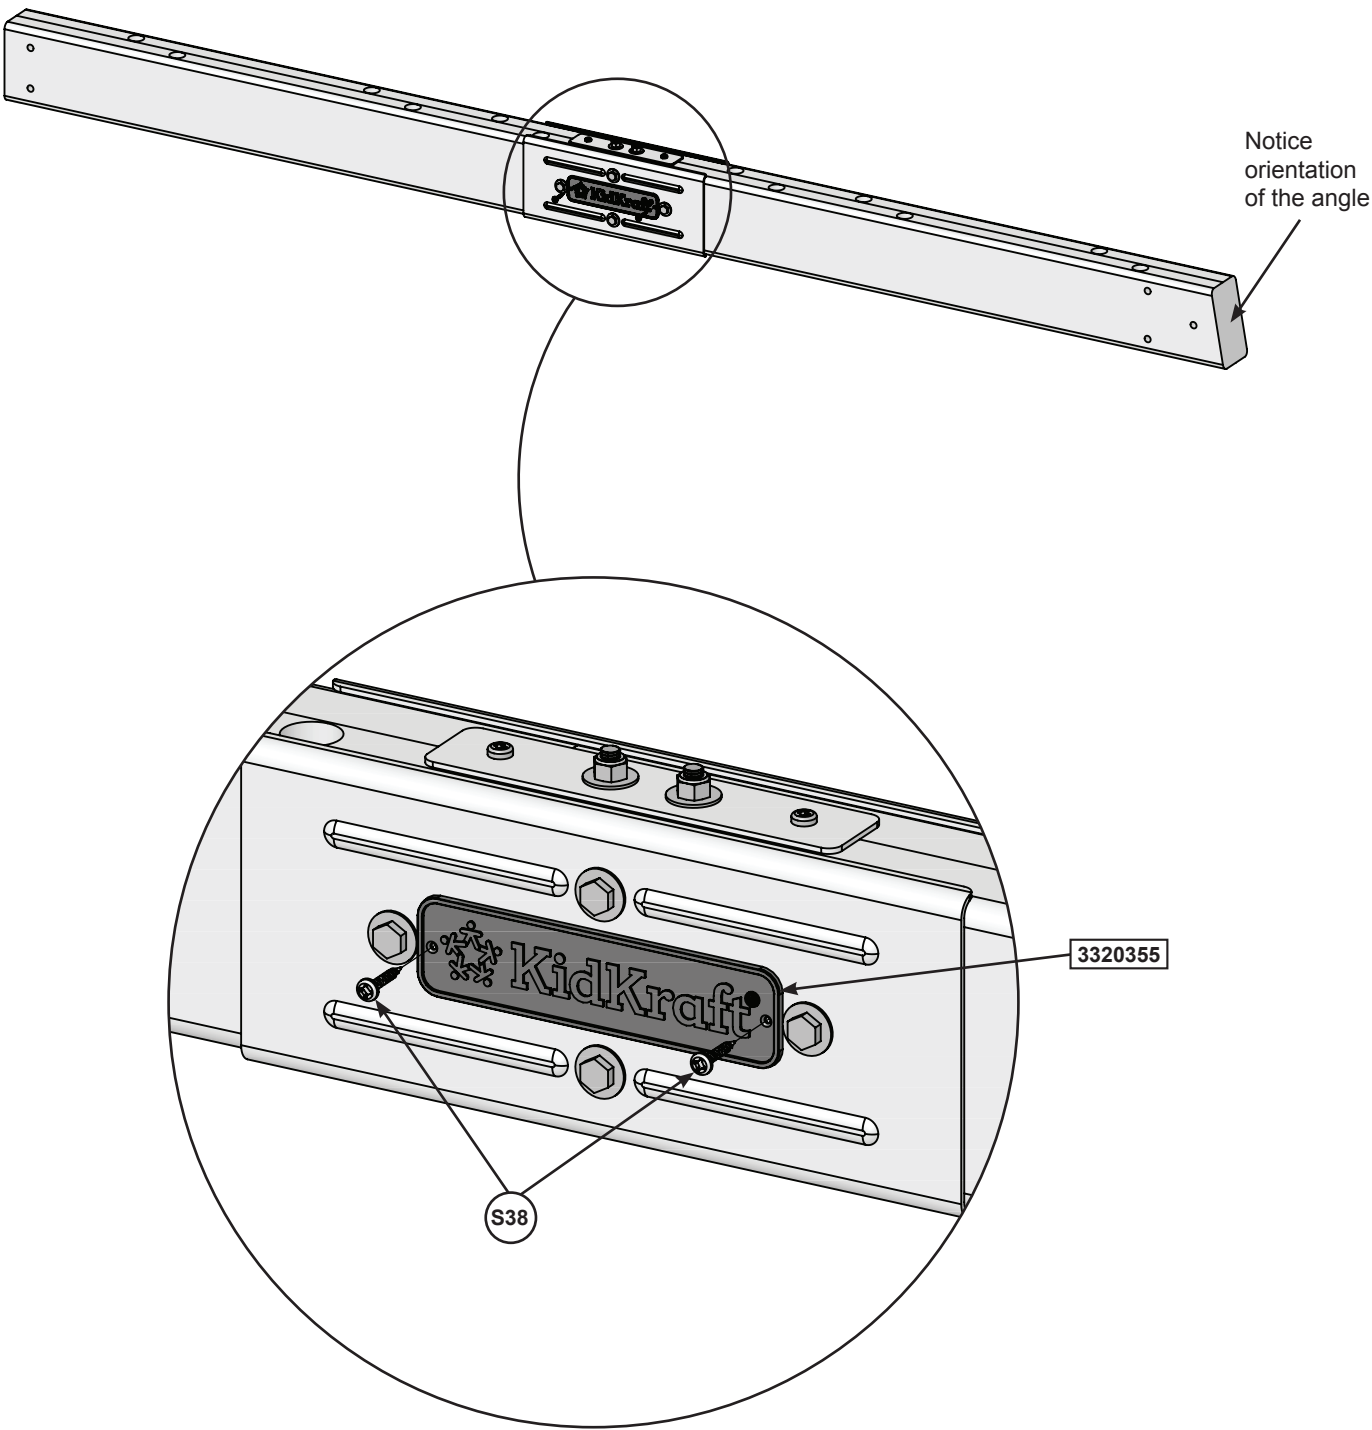



Hardware

2 x S38 #7 x 1-1/8" (28.5 mm)

Other Parts

1 x 3320355

Step 50

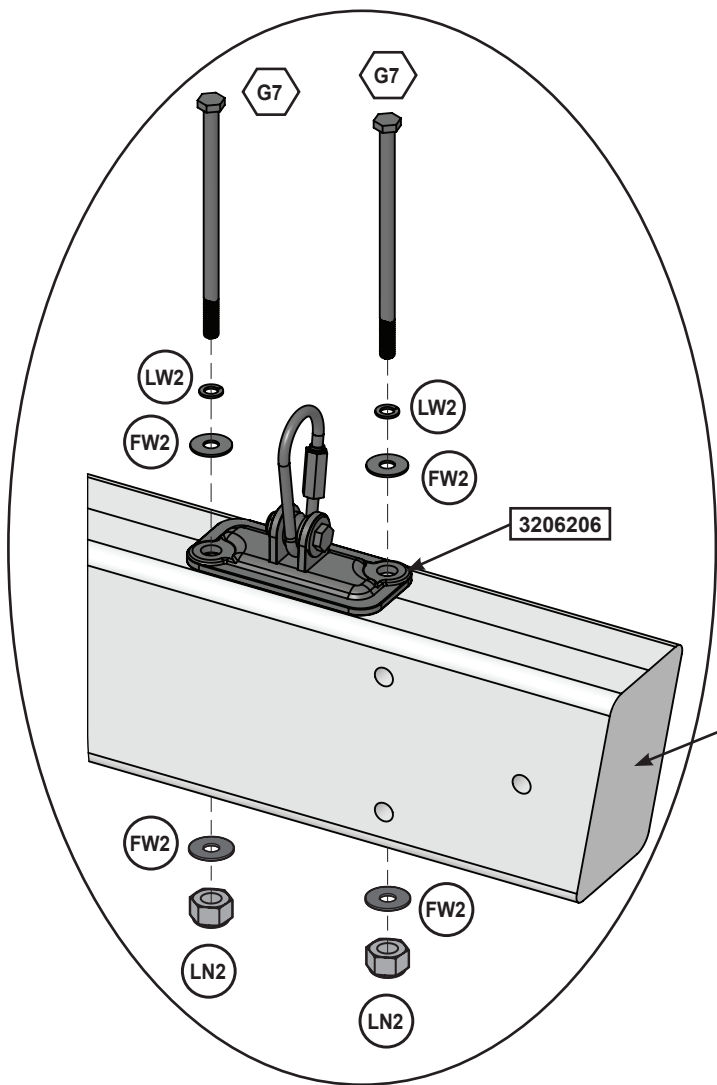
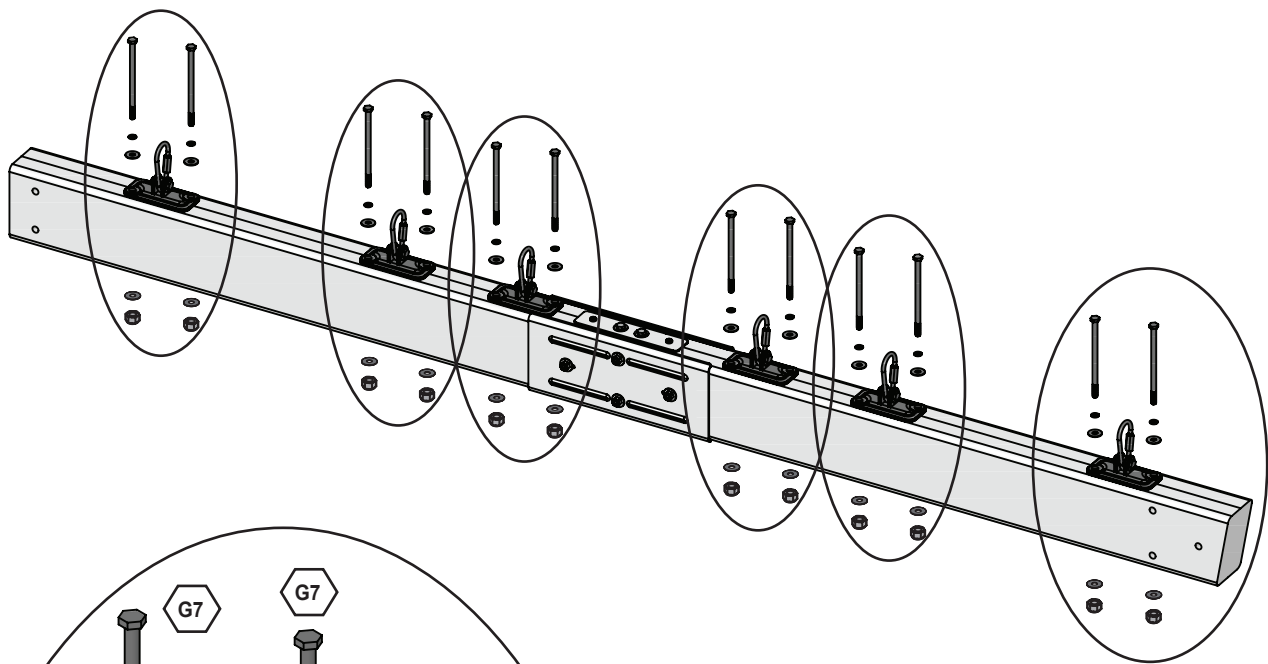


Notice
orientation of
the angle

Hardware
12 x  5/16 x 5-1/2" (140 mm) (2 x FW2, LW2, LN2)

Other Parts
1 x  (6pk)


Step 51

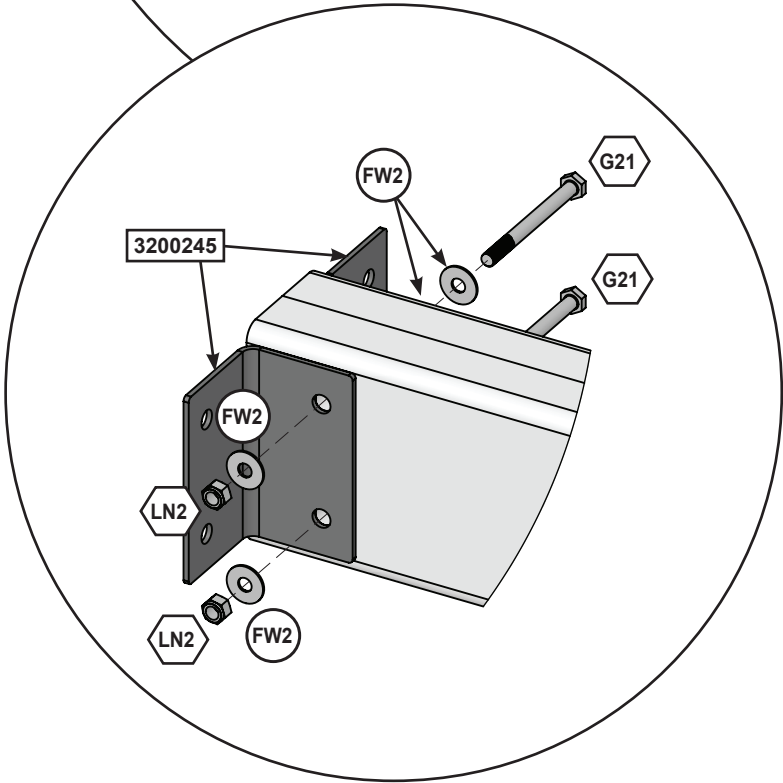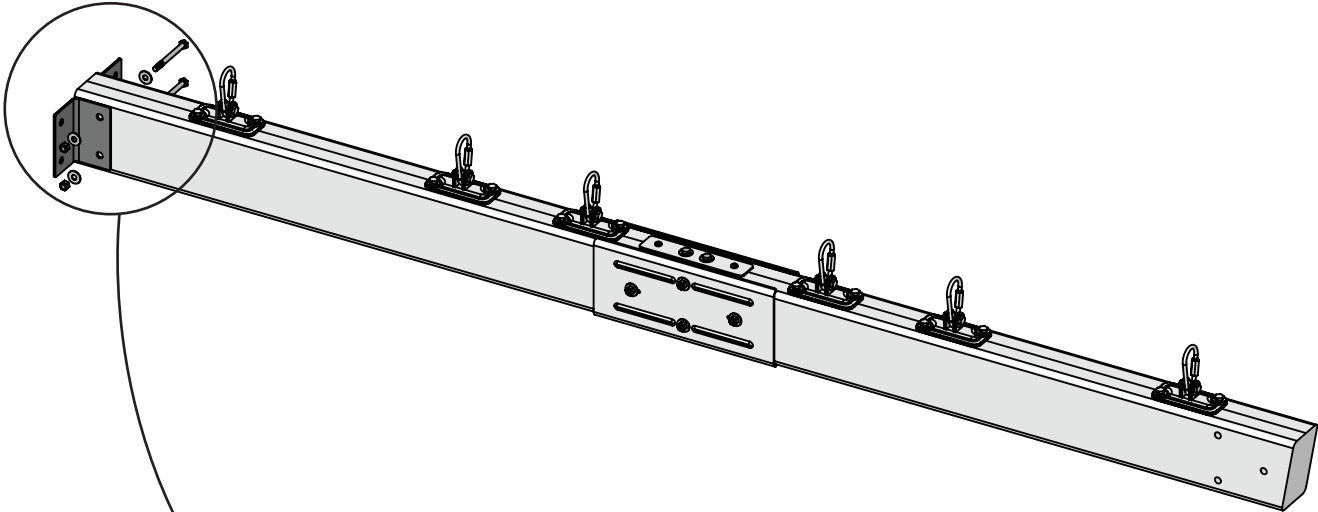

Hardware
2 x  5/16 x 3-3/4" (95.2 mm) (2 x FW2, LN2)

Other Parts
1 x  (2pk)

Step 52

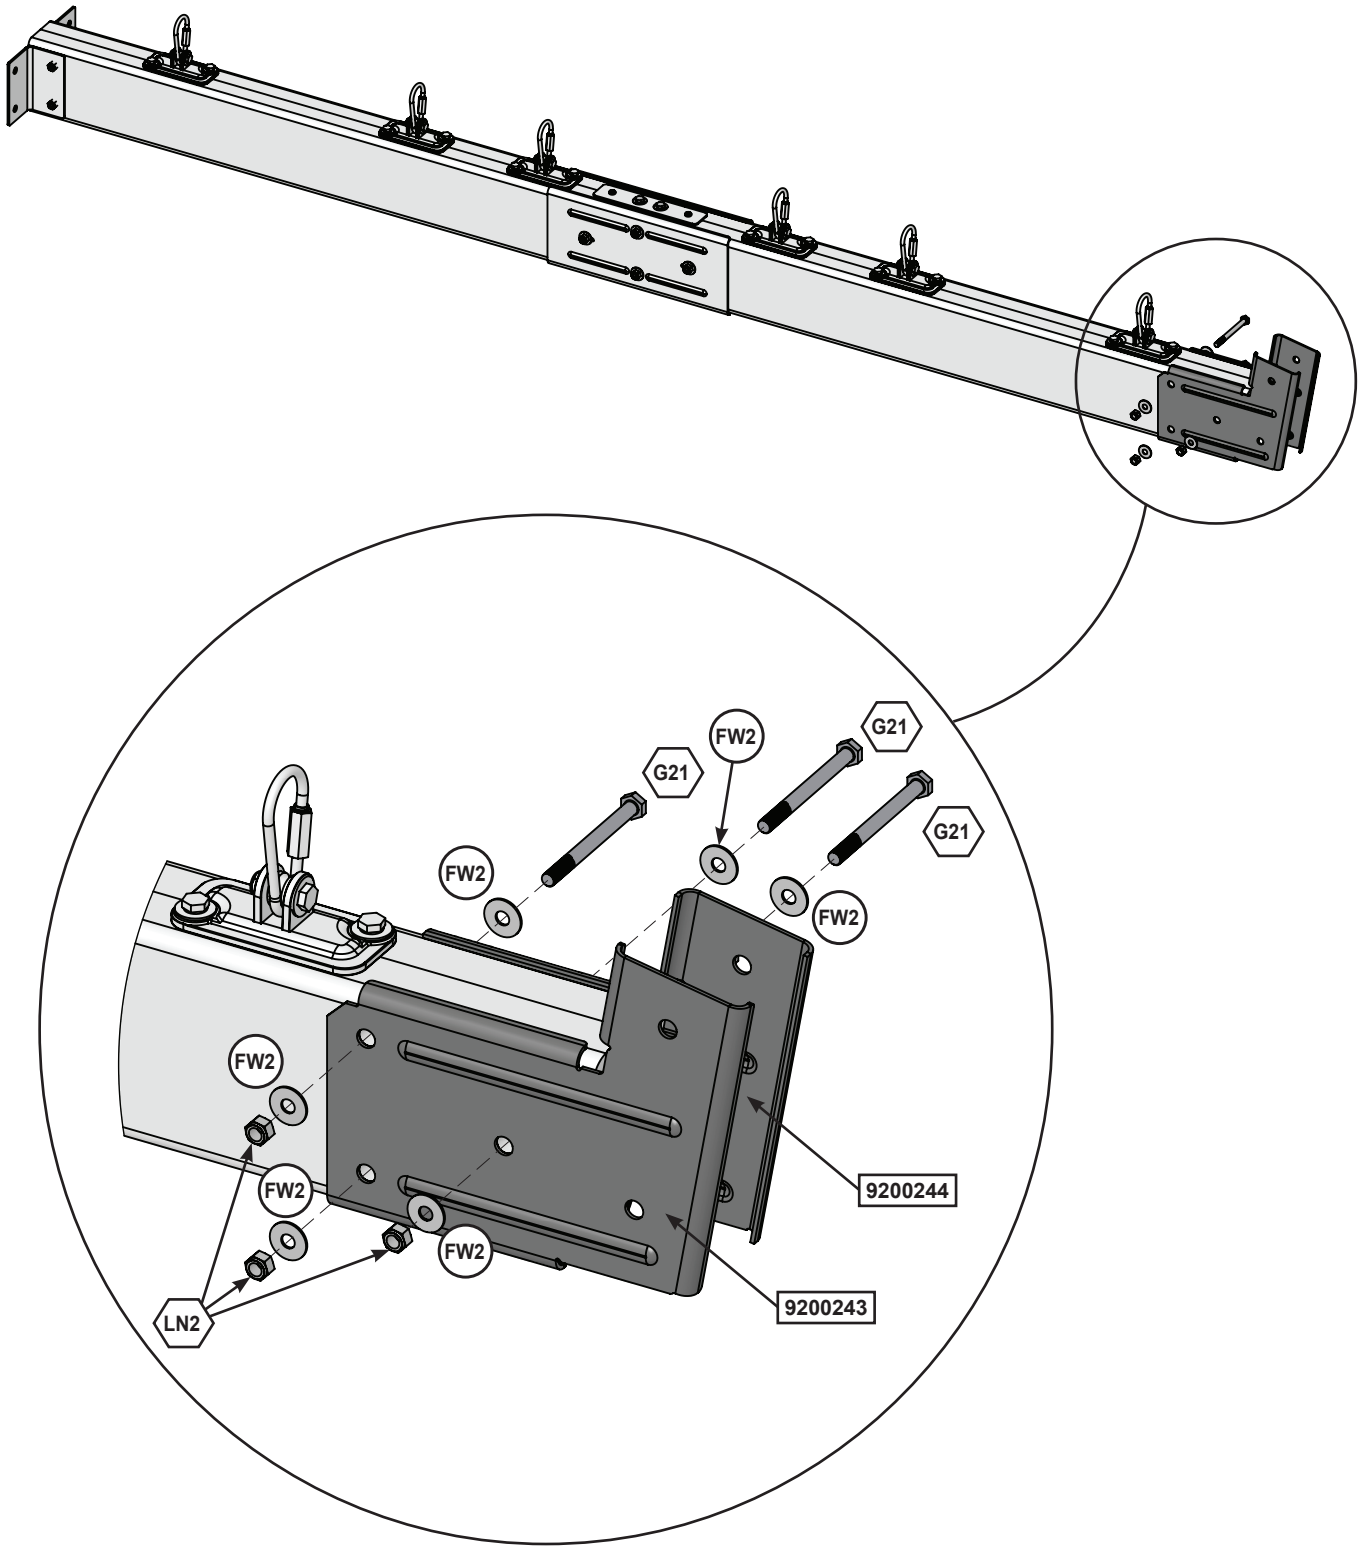

Hardware

3 x G21 5/16 x 3-3/4" (95.2 mm) (2 x FW2, LN2)


Other Parts

1 x 9200243

1 x 9200244

Step 53

Left Side

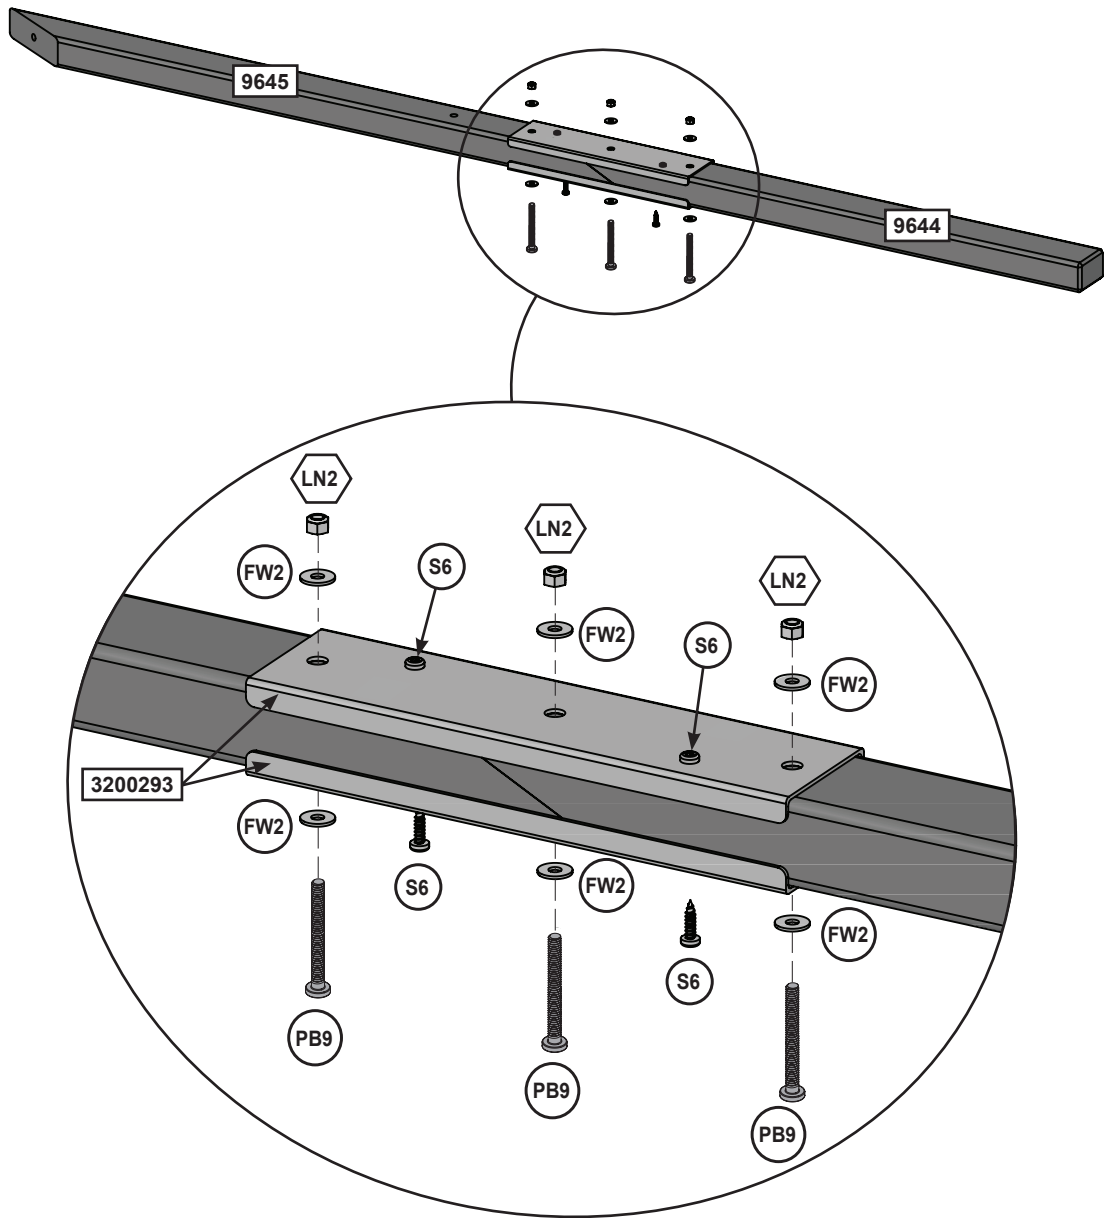

Wood Parts

- 1 x 9644 2 x 3 x 36-3/4" (50.8 x 76.2 x 933.5 mm)
1 x 9645 2 x 3 x 46-1/4" (50.8 x 76.2 x 1174.8 mm)

Hardware


- 3 x PB9 5/16 x 2-1/2" (63.5 mm) (2 x FW2, LN2)
4 x S6 #12 x 1" (25.4 mm)

Other Parts

- 1 x 3200293 (2pk)

Step 54

Right Side

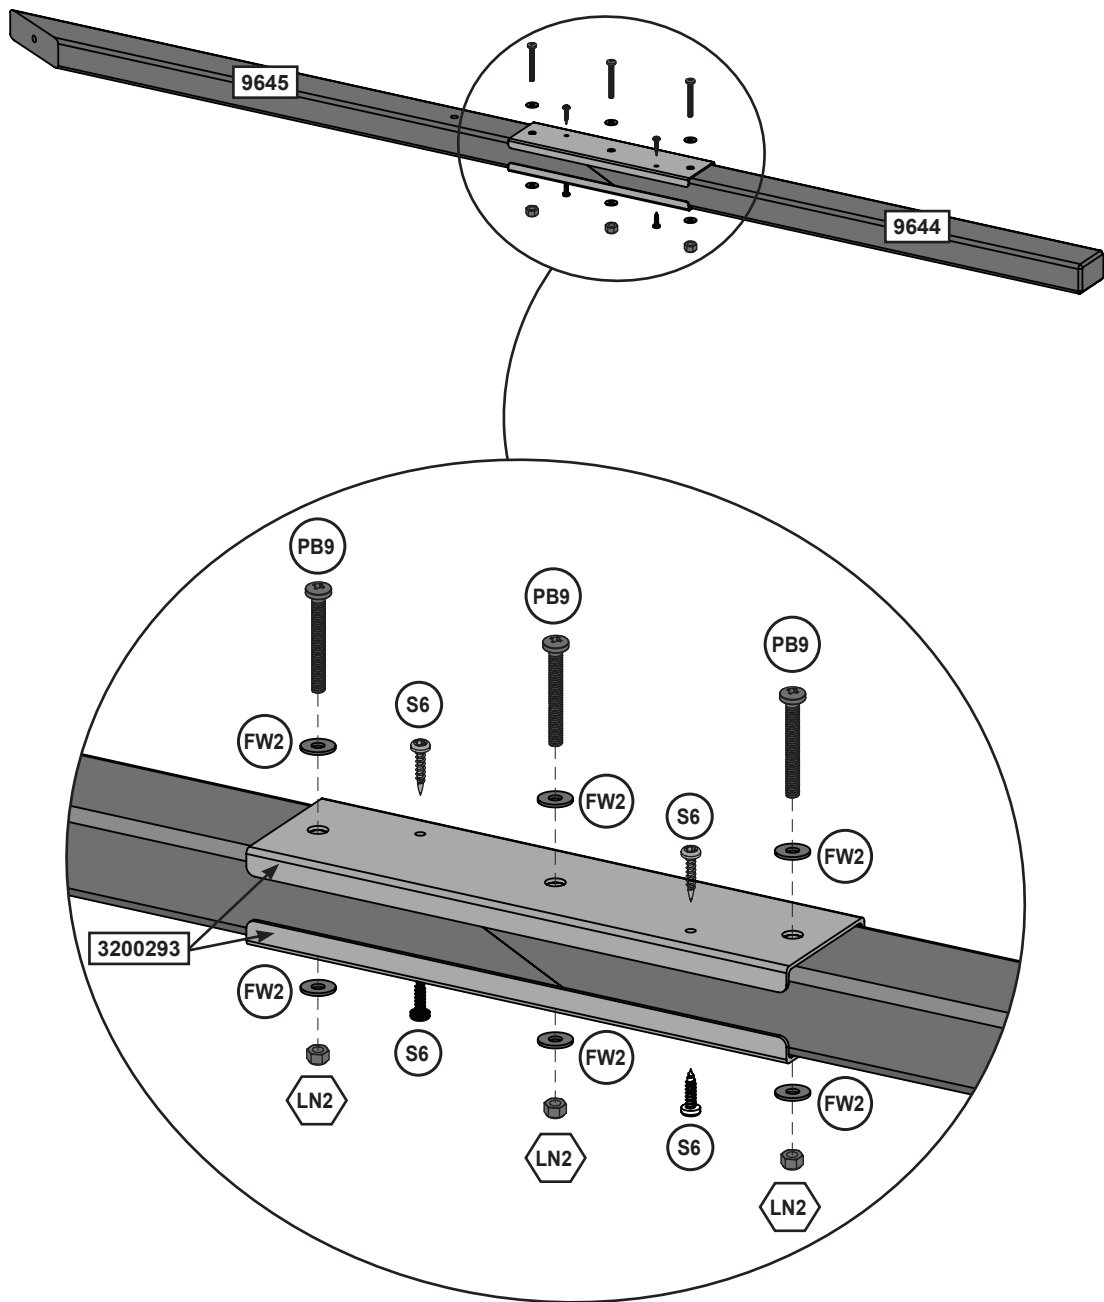

Wood Parts

- 1 x 9644 2 x 3 x 36-3/4" (50.8 x 76.2 x 933.5 mm)
1 x 9645 2 x 3 x 46-1/4" (50.8 x 76.2 x 1174.8 mm)


Hardware

- 3 x PB9 5/16 x 2-1/2" (63.5 mm) (2 x FW2, LN2)
4 x S6 #12 x 1" (25.4 mm)

Other Parts

- 1 x 3200293 (2pk)

Step 55

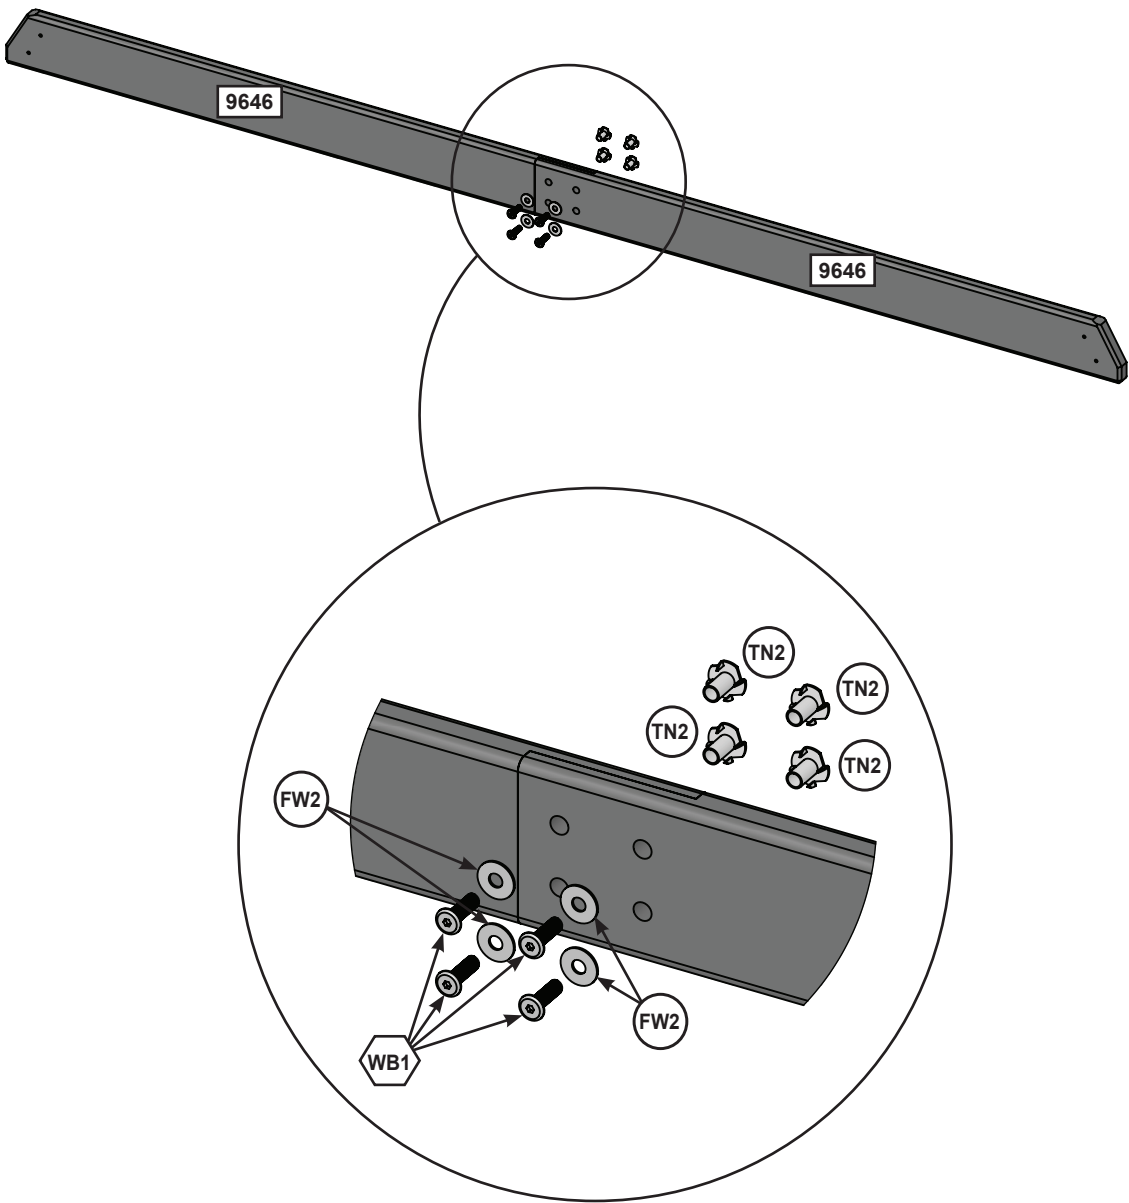


Wood Parts

2 x 9646 1 x 4 x 42-1/4" (25.4 x 101.6 x 1073.2 mm)


Hardware

4 x WB1 5/16 x 1" (25.4 mm) (FW2, TN2)

Step 56

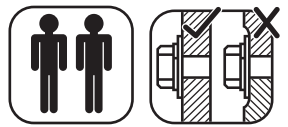

Notice
orientation of
the angle

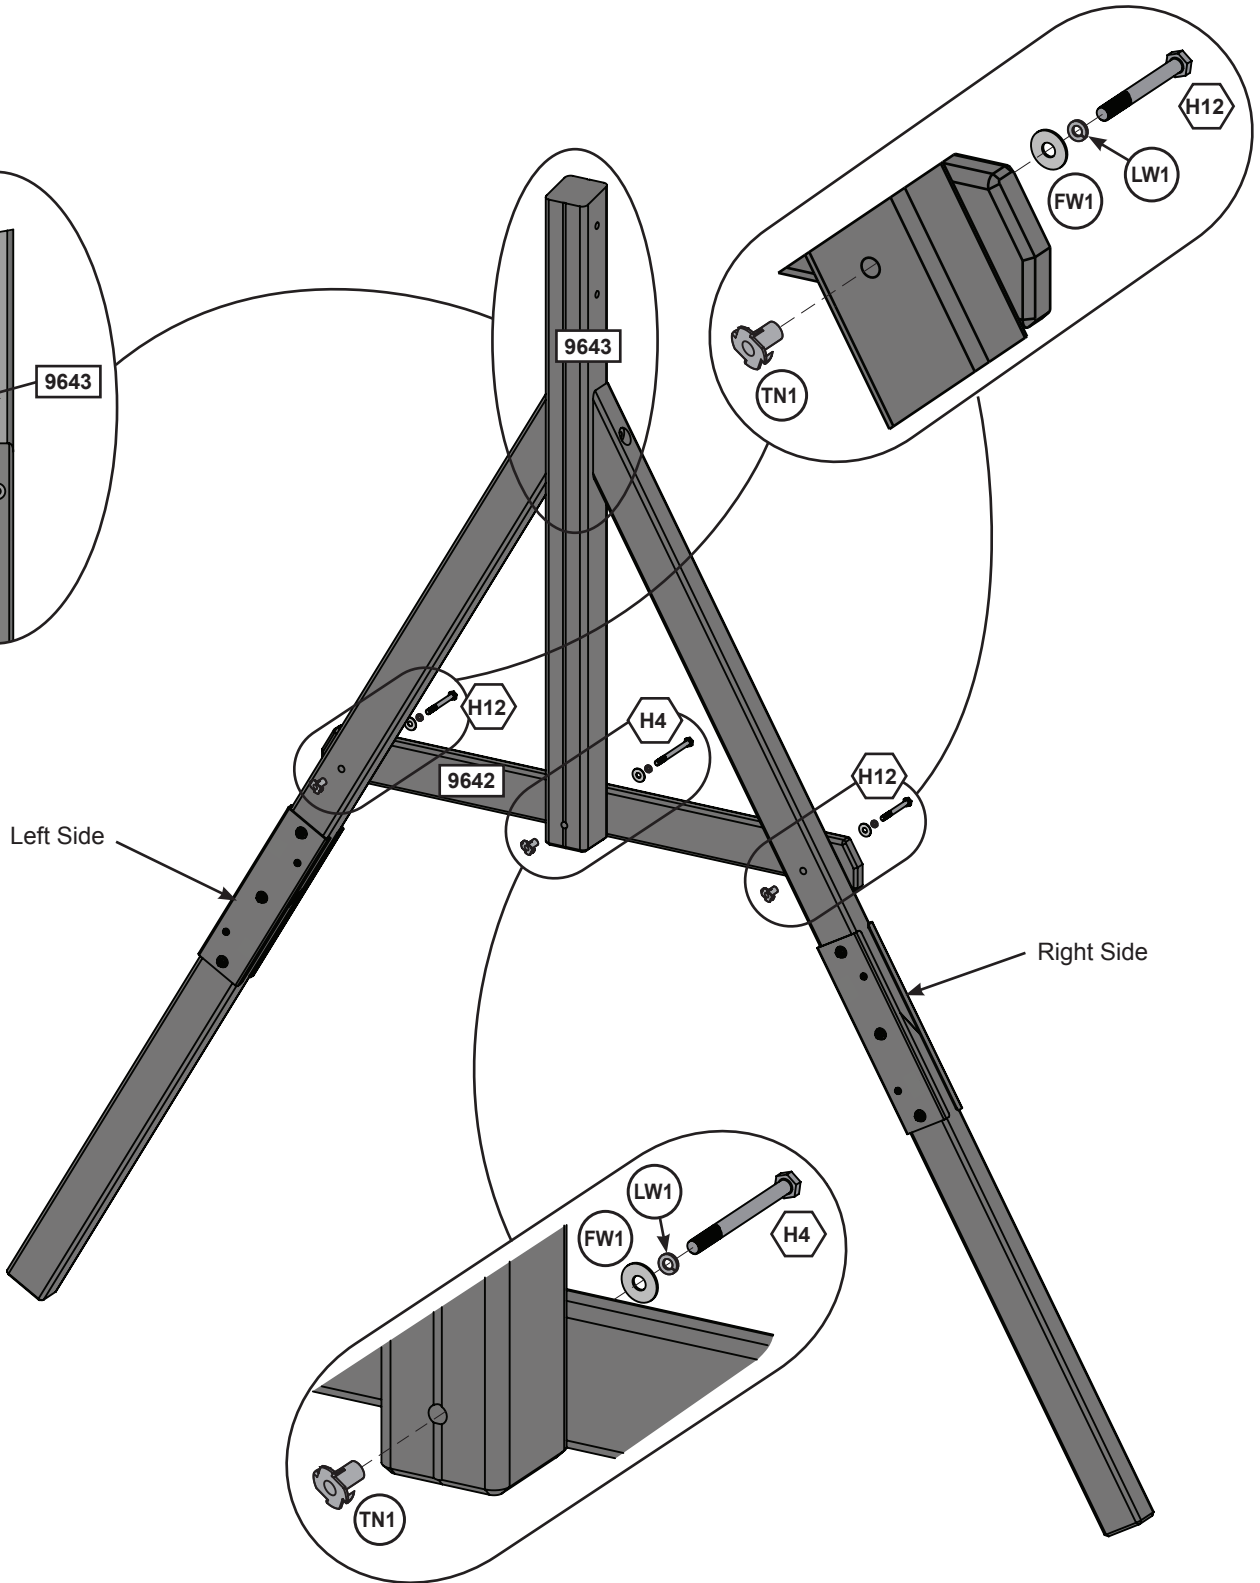


Wood Parts

- 1 x 9642 1 x 3-1/4 x 38-21/32" (25.4 x 82.6 x 982 mm)
- 1 x 9643 3 x 3 x 44-1/4" (76.2 x 76.2 x 1124 mm)

Hardware

- 1 x H4 1/4 x 4" (101.6 mm) (FW1, LW1, TN1)
- 2 x H12 1/4 x 3" (76.2 mm) (FW1, LW1, TN1)



Step 57

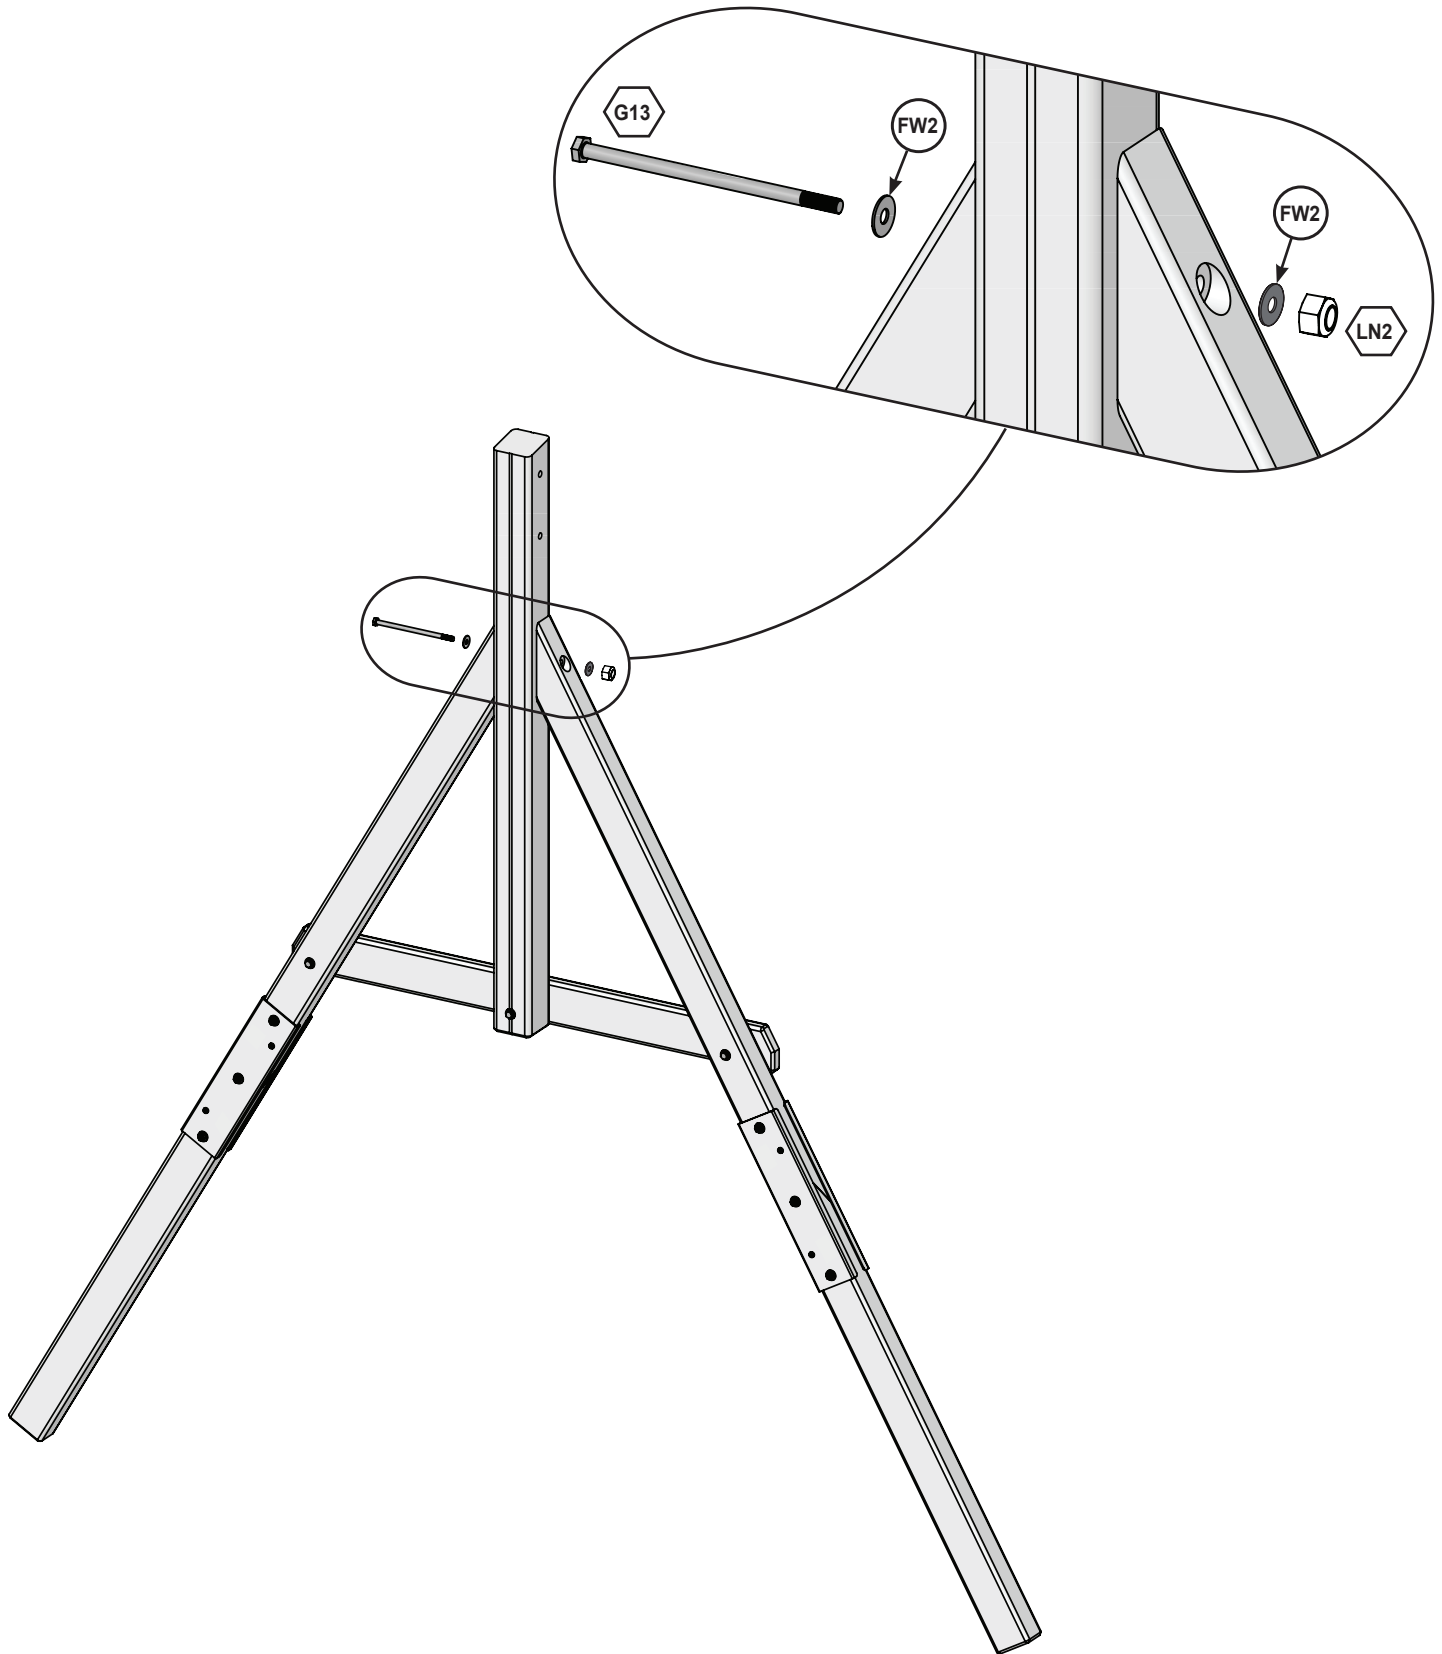

Hardware

1 x  G13 5/16 x 6-1/8" (155.6 mm) (2 x FW2, LN2)


Step 58

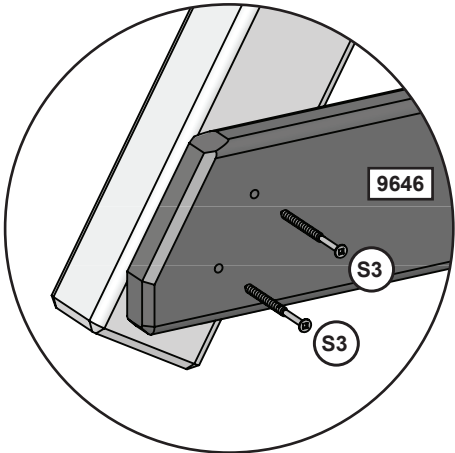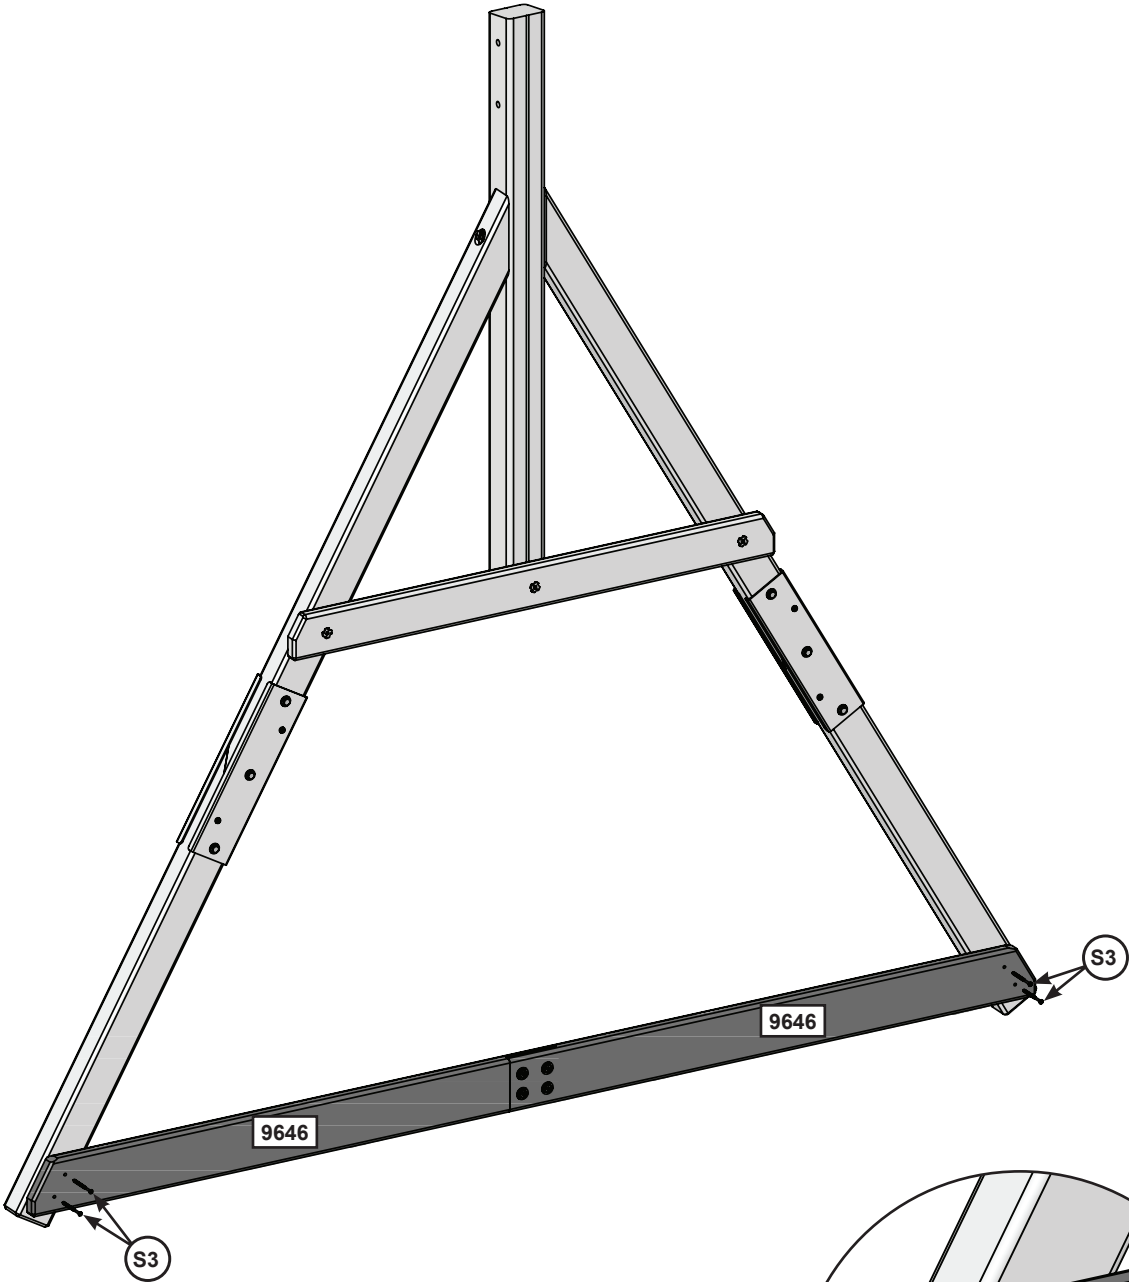

Hardware

4 x  #8 x 2-1/2" (63.5 mm)



Step 59

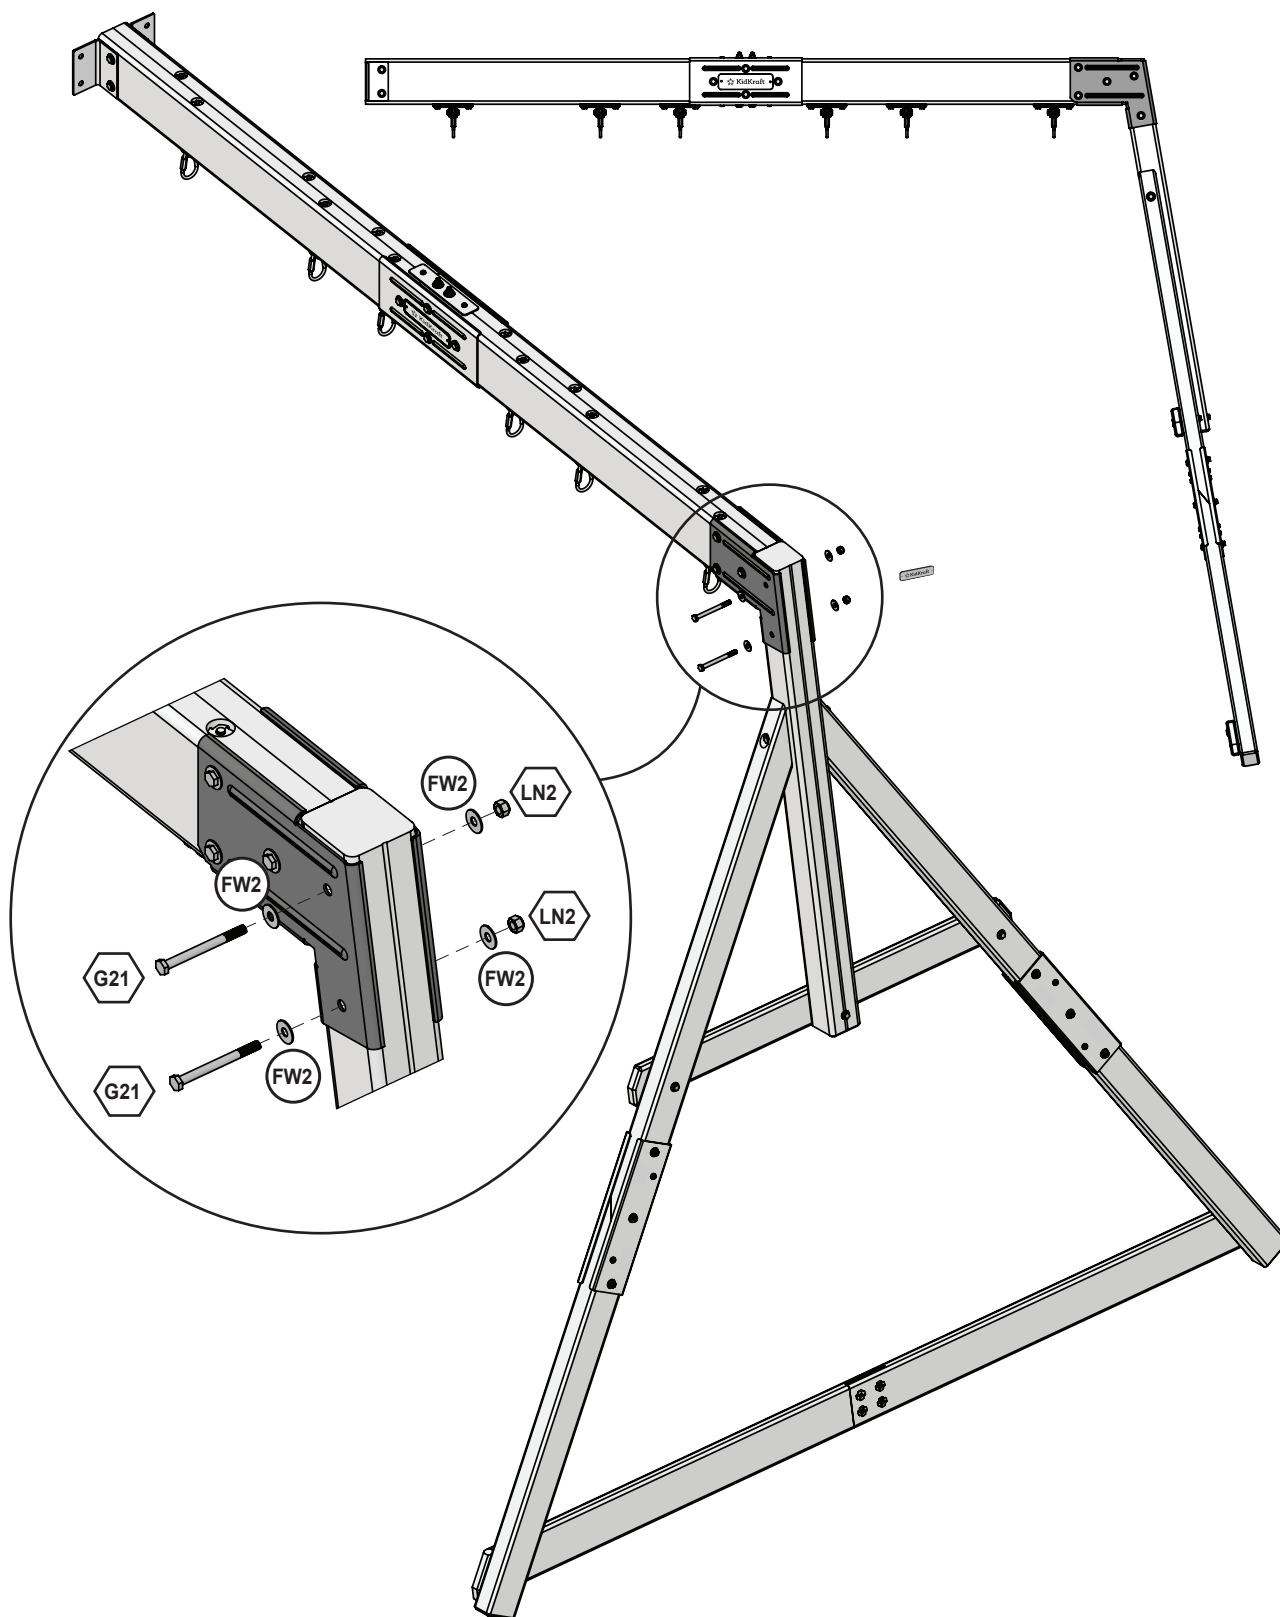

Hardware

2 x  5/16 x 3-3/4" (95.2 mm) (2 x FW2, LN2)



Step 60

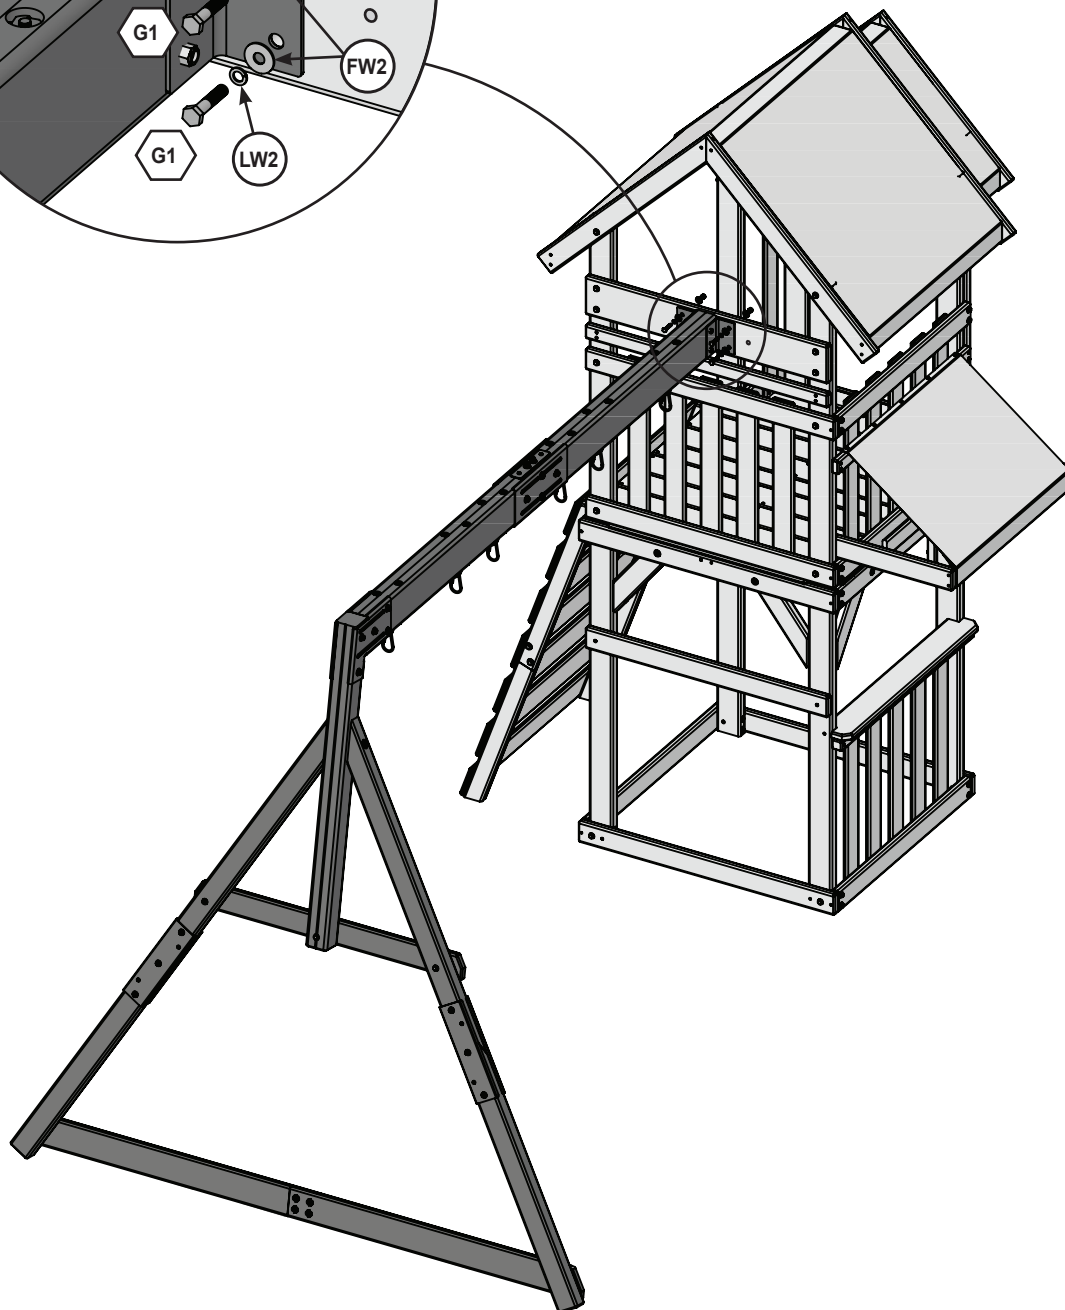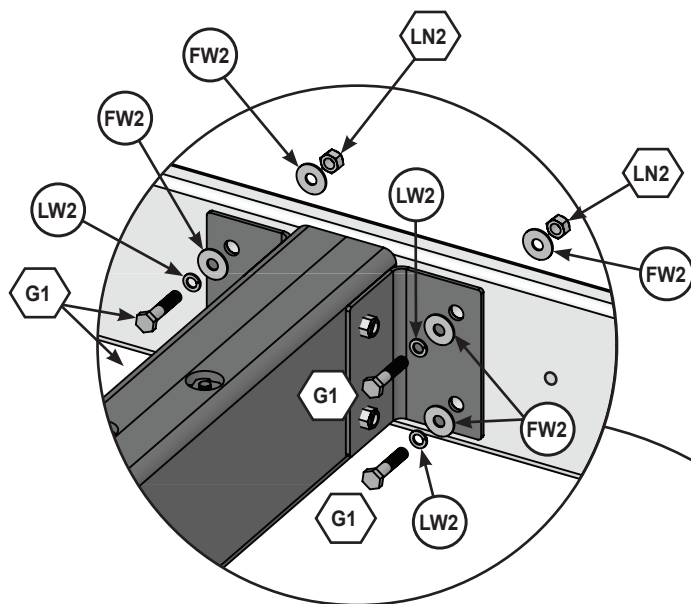

Hardware

4 x  5/16 x 1-1/2" (38.1 mm) (2 x FW2, LW2, LN2)

Step 61

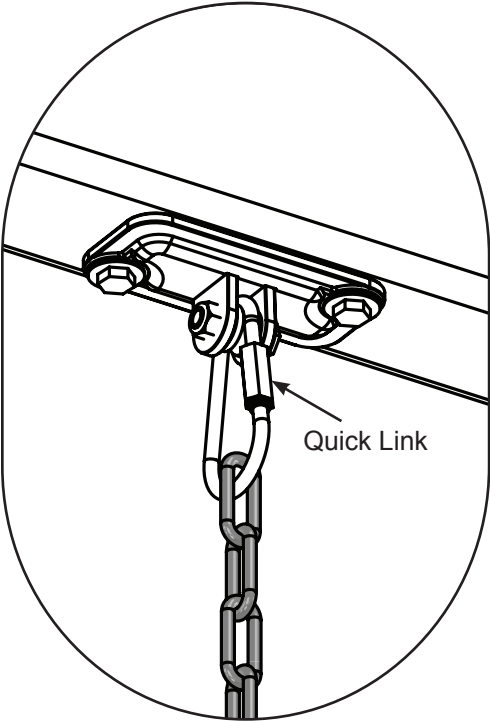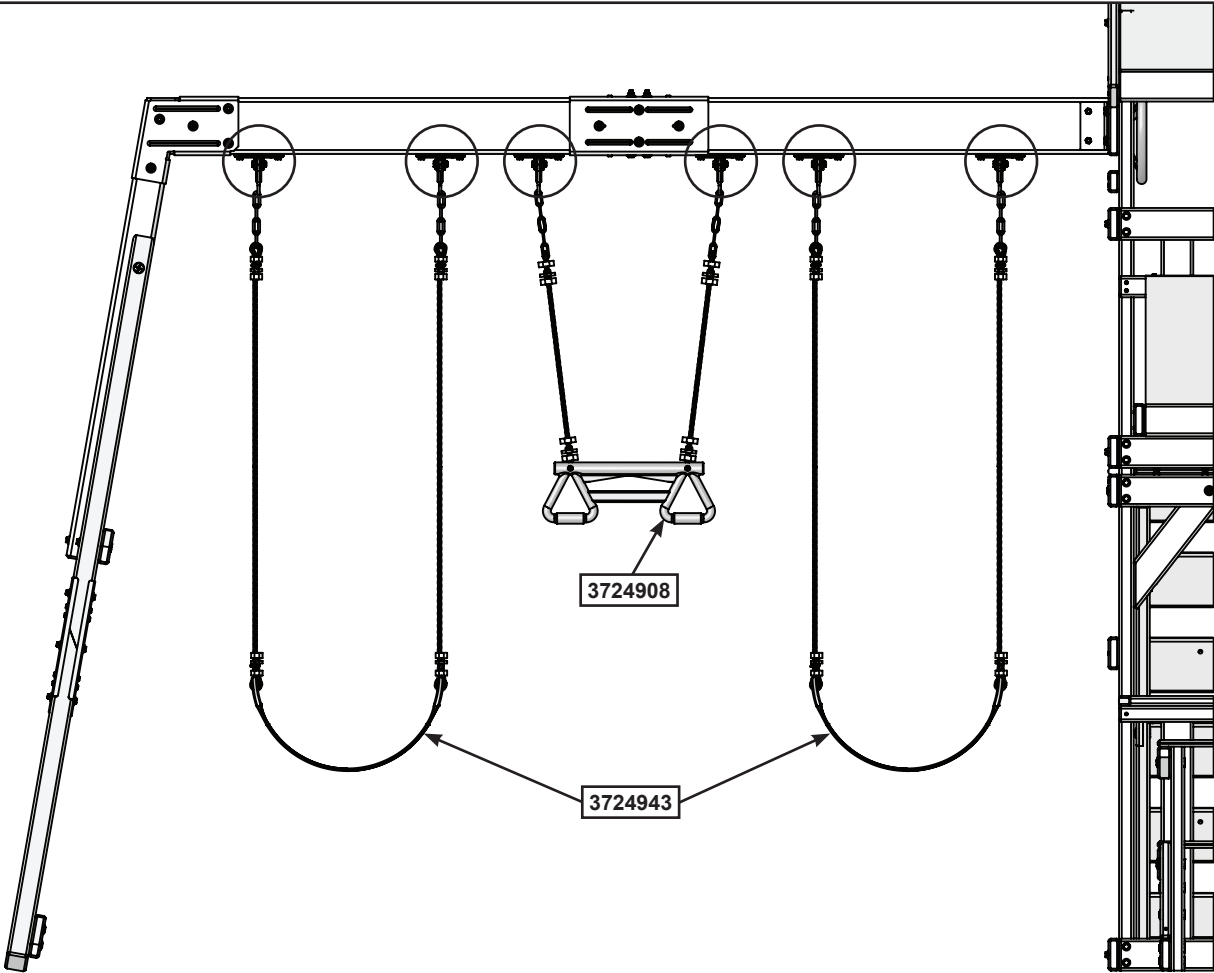


Caution: Threaded Quick Links must be installed with the gate completely down covering the threads and tighten as instructed.

Tighten
Threaded Link
using adjustable
wrench

Other Parts

- 1 x 3724908
- 2 x 3724943



Step 62

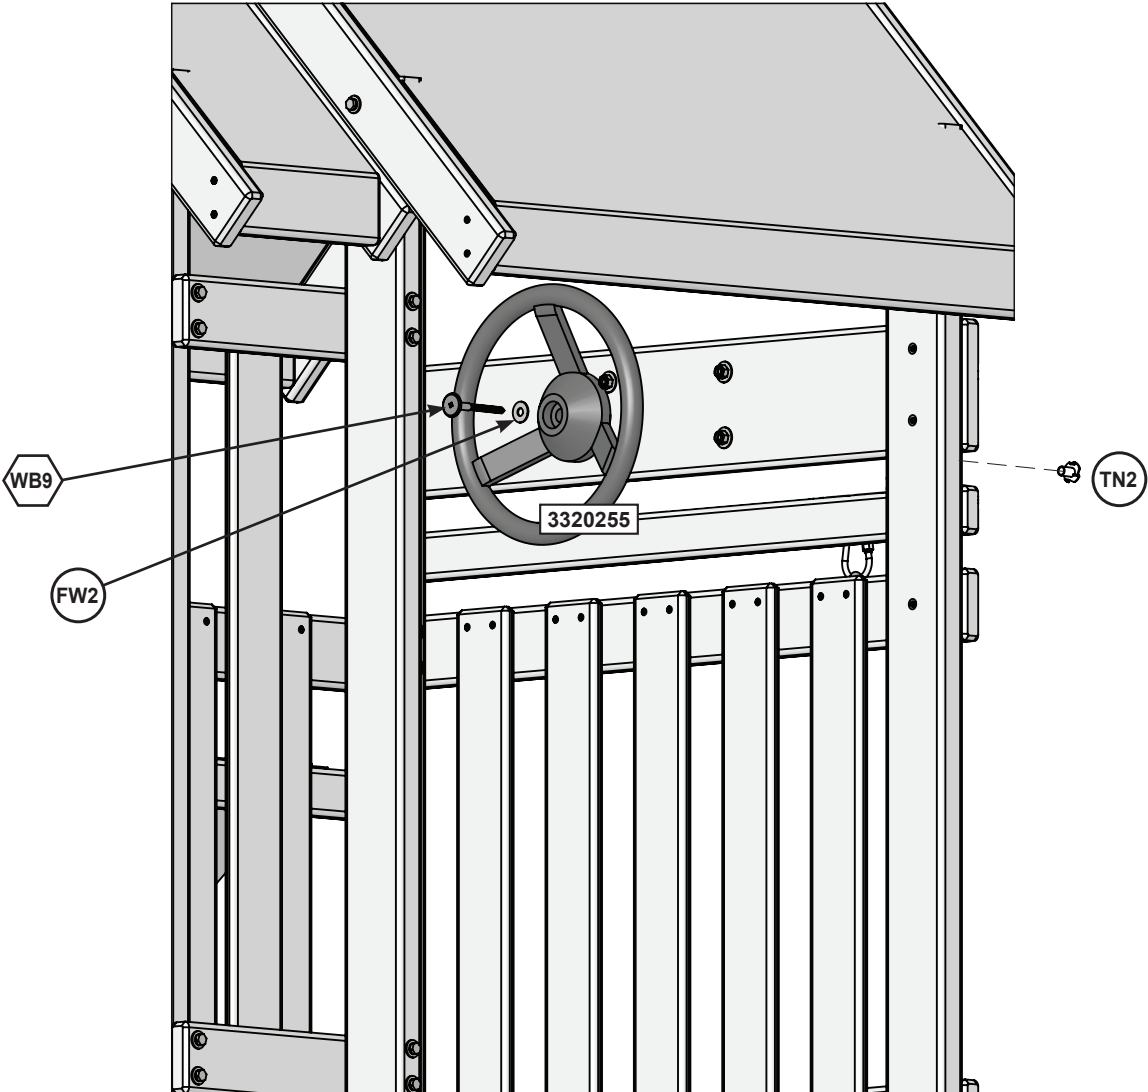

Hardware
1 x  5/16 x 2-1/8" (54 mm) (FW2, TN2)

Other Parts
1 x 

Step 63

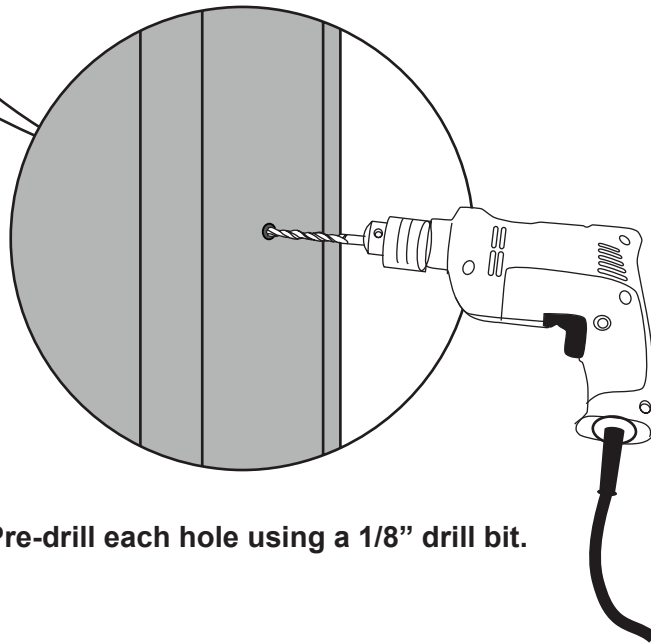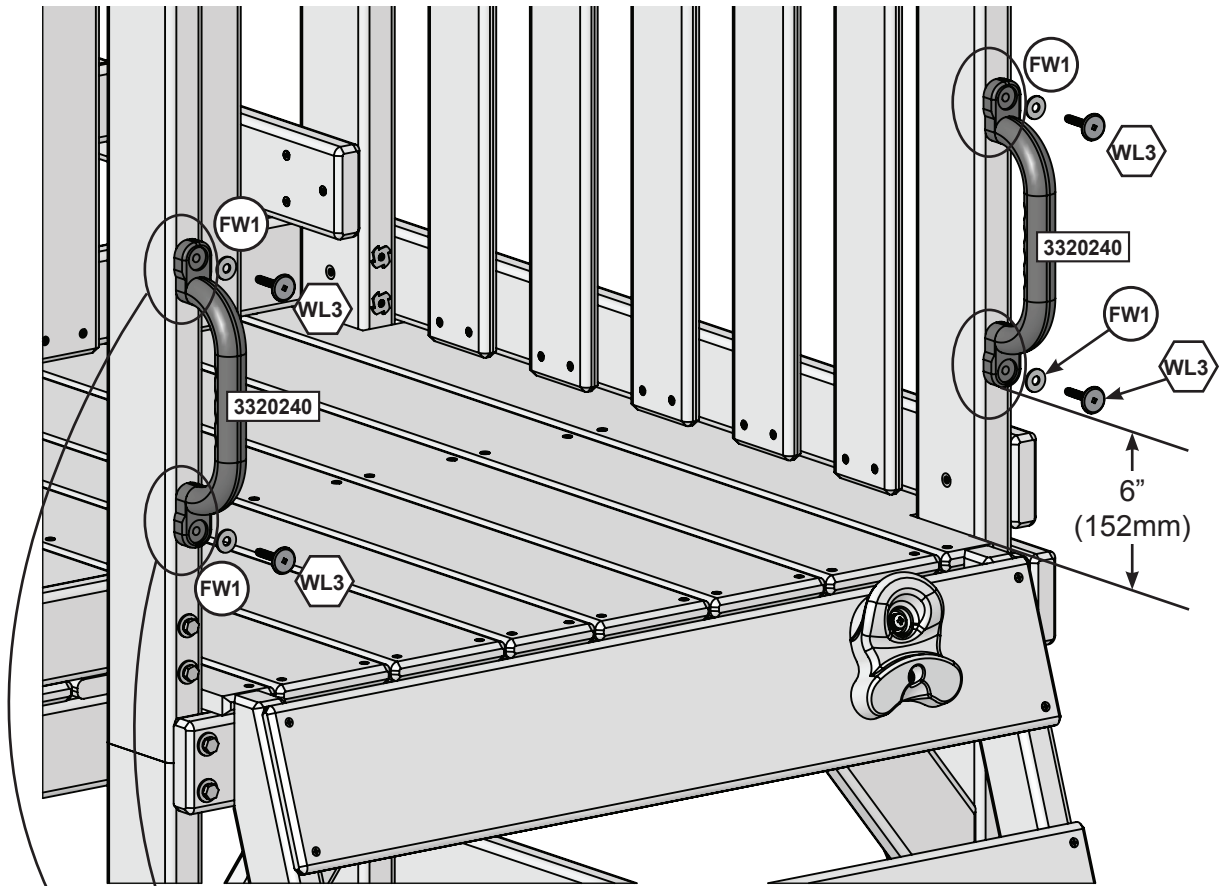

Pre-drill each hole using a 1/8" drill bit.



Hardware

4 x 1/4 x 1-3/8" (35 mm) (FW1)

Other Parts

1 x (2pk)

Step 64

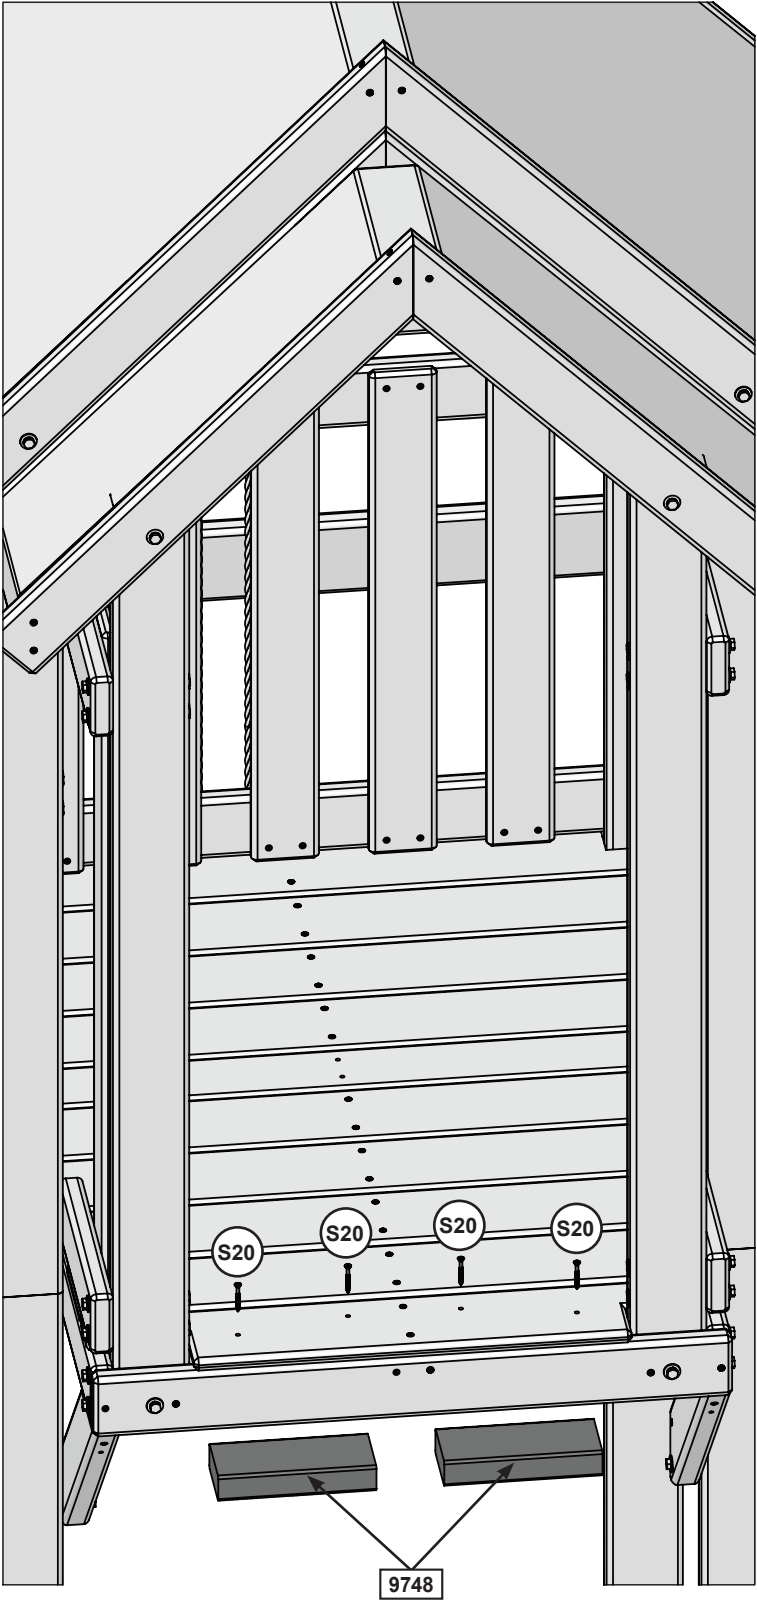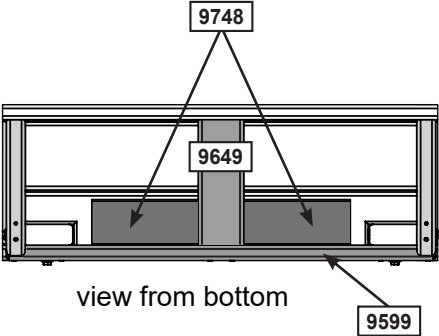


Wood Parts

2 x 9748 1-3/8 x 3 x 7" (34.9 x 76.2 x 177.8 mm)

Hardware

4 x S20 #8 x 1-3/8" (35 mm)


Step 65

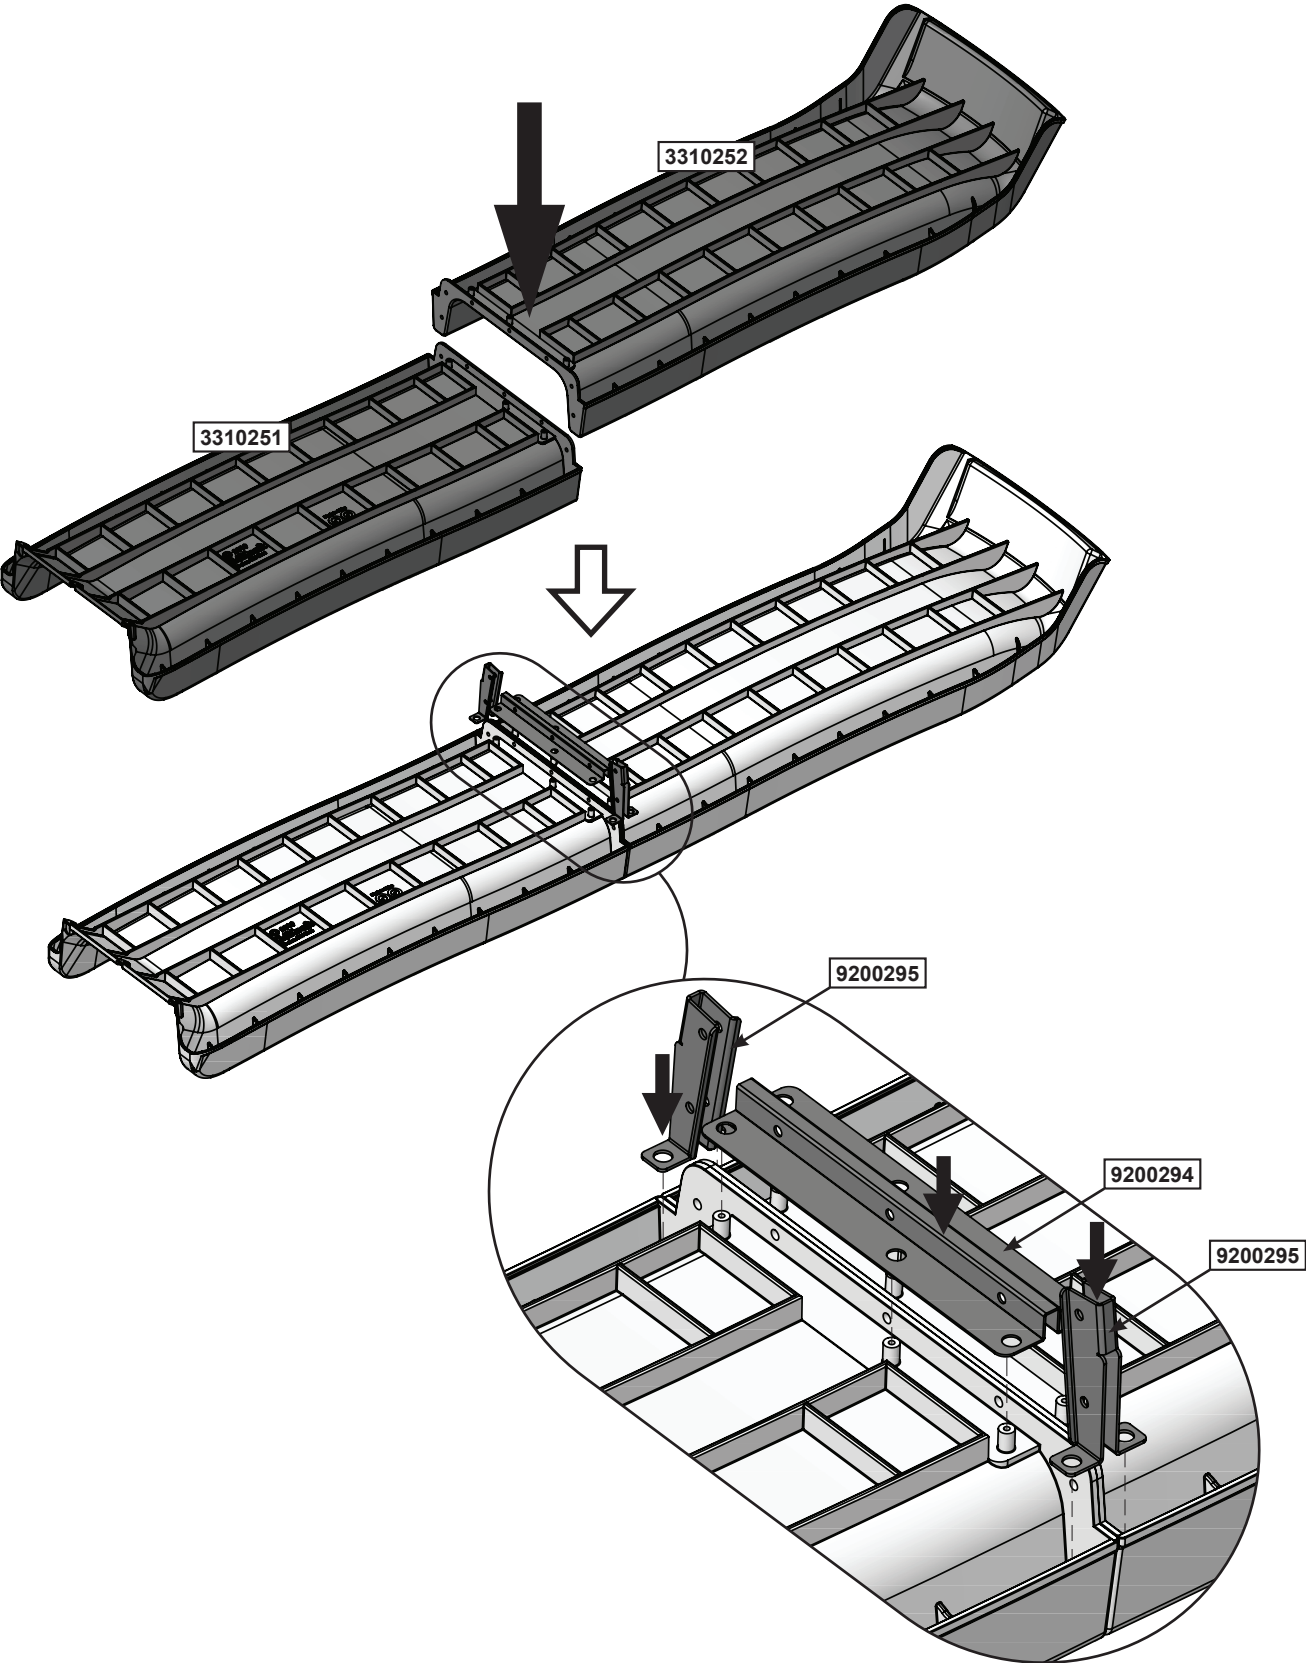

Other Parts

1 x 3310251	1 x 9200294
1 x 3310252	2 x 9200295

Step 66

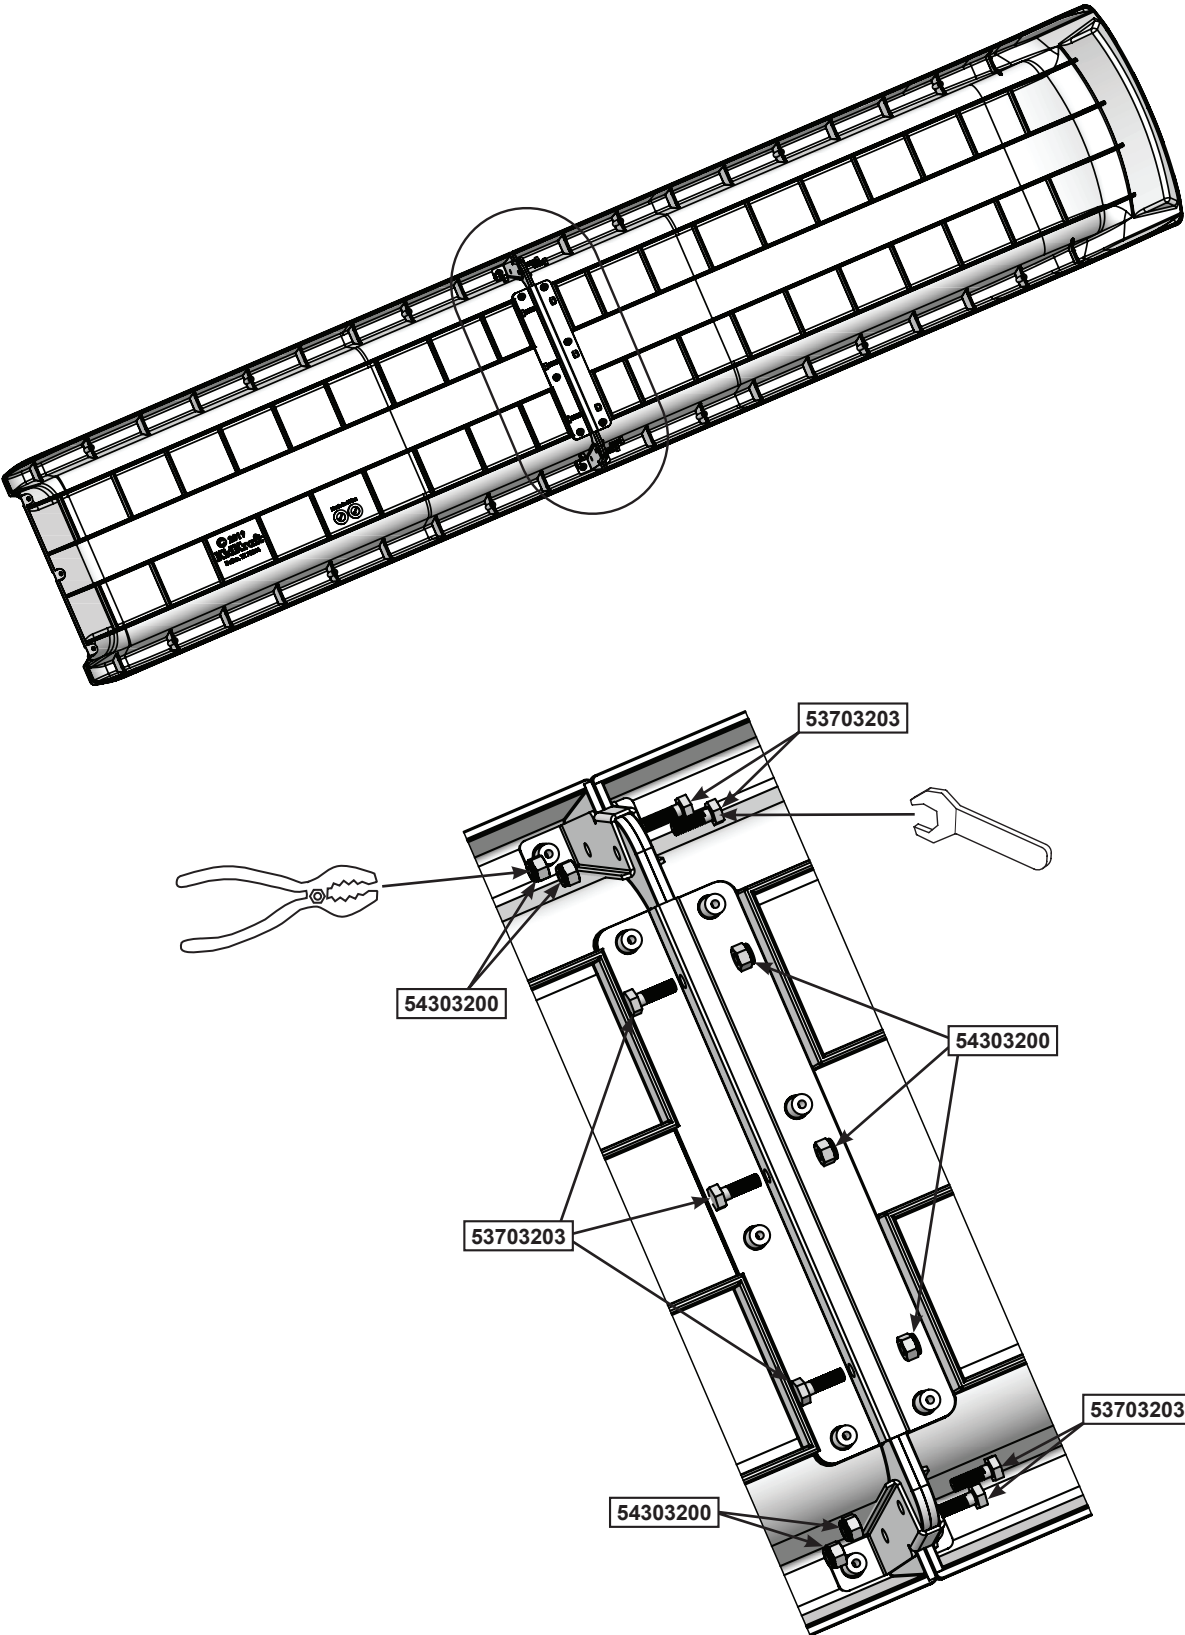

Other Parts

7 x 53703203 1/4 x 20mm

7 x 54303200

IMPORTANT: Do not over tighten.


10 x **52403603** #12 x 15mm
10 x **9330244**

Step 68



Note: Pre-drill all holes using a 1/8" drill bit before installing the pan screws.


Place Slide centred in the opening.

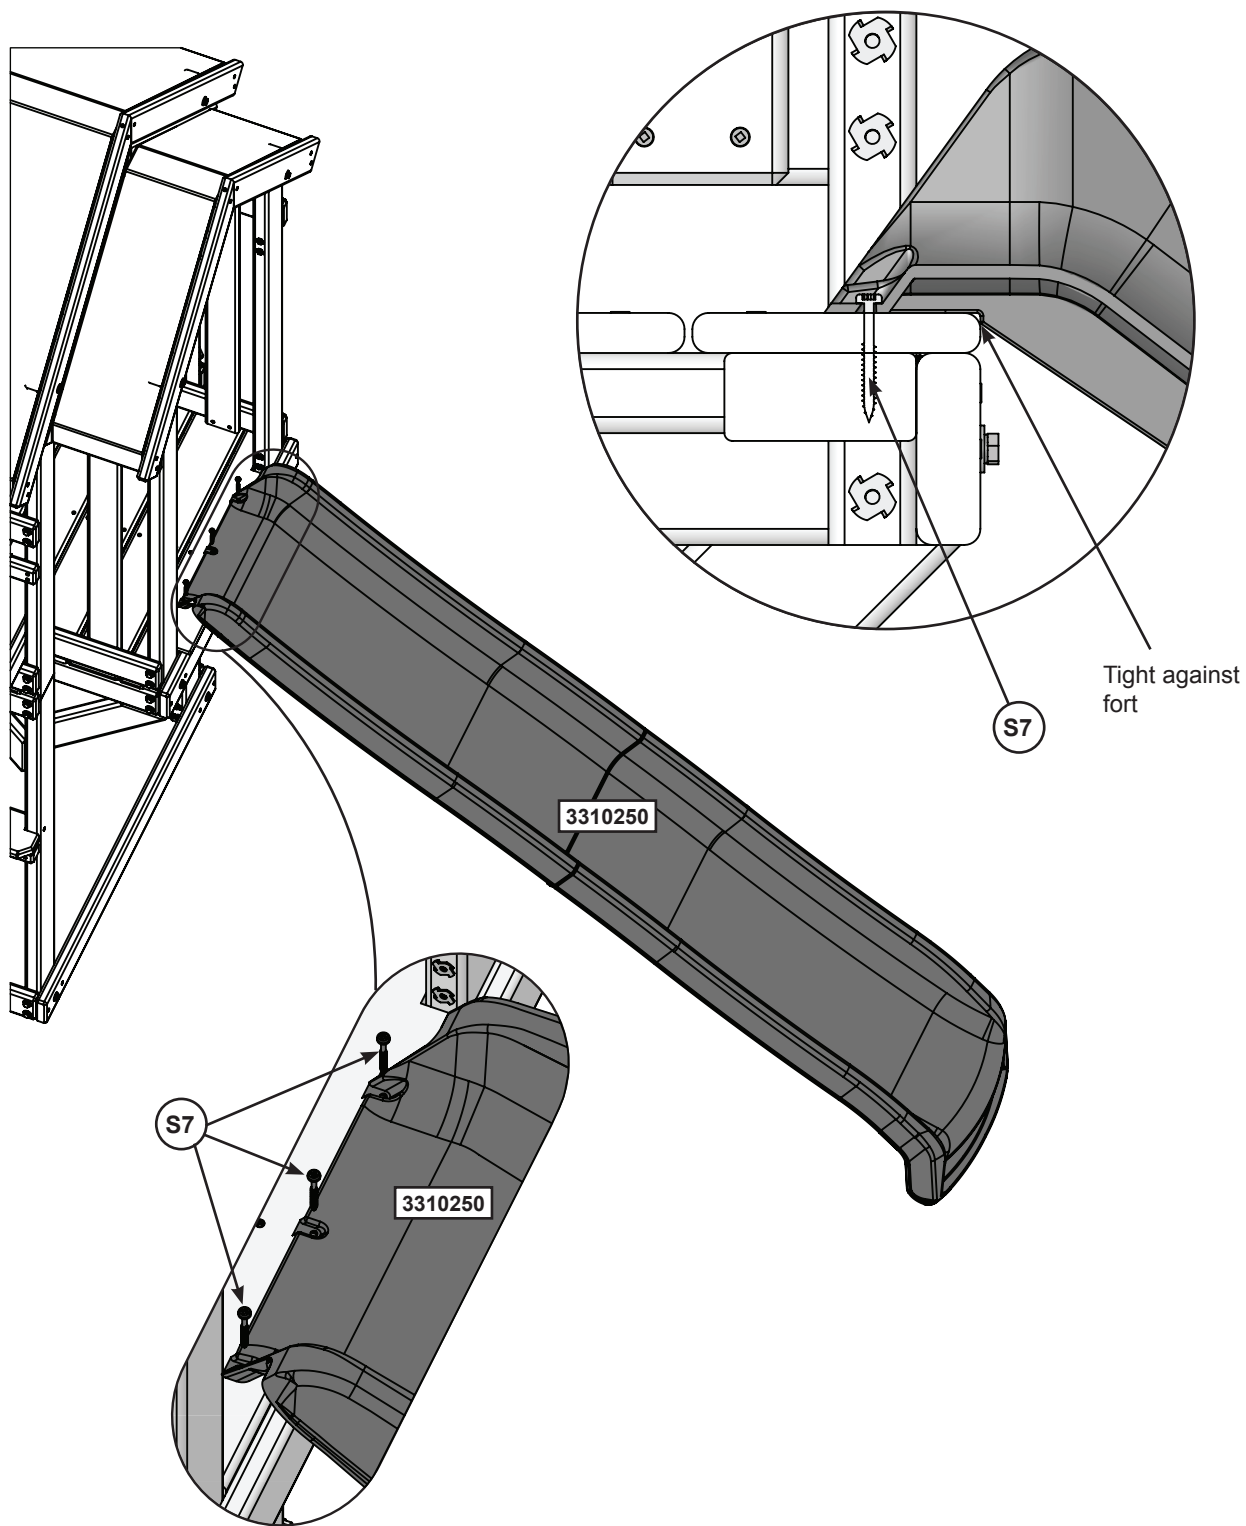

Hardware

3 x  #12 x 2" (50.8 mm)

Step 69

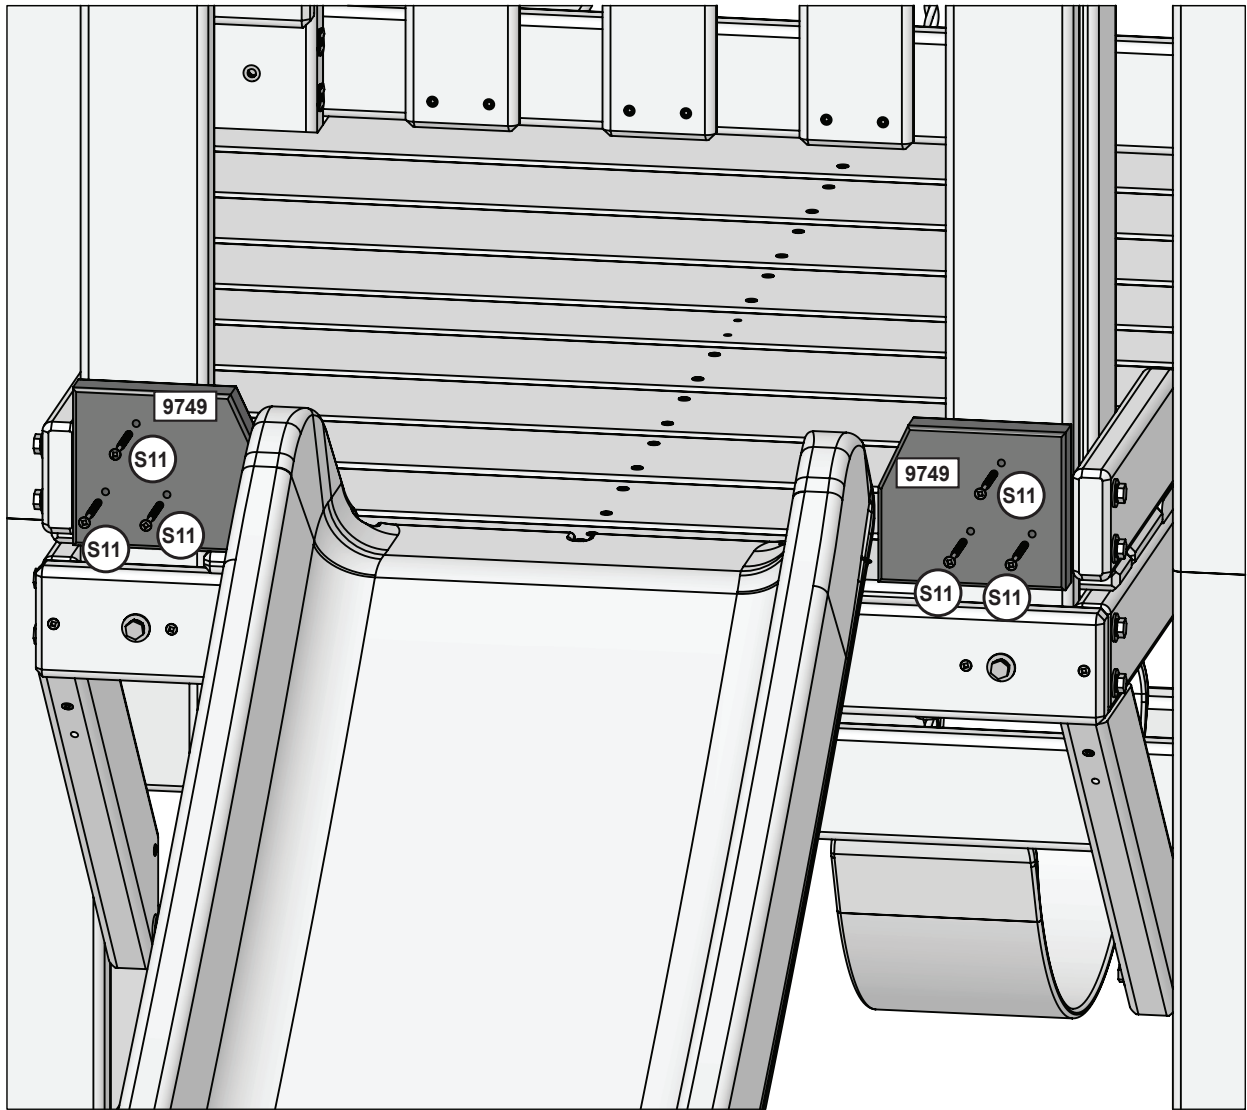


Wood Parts

2 x  1 x 4-1/4 x 4-15/16" (25.4 x 108 x 125.9 mm)

Hardware


6 x  #8 x 2" (50.8 mm)

Step 70

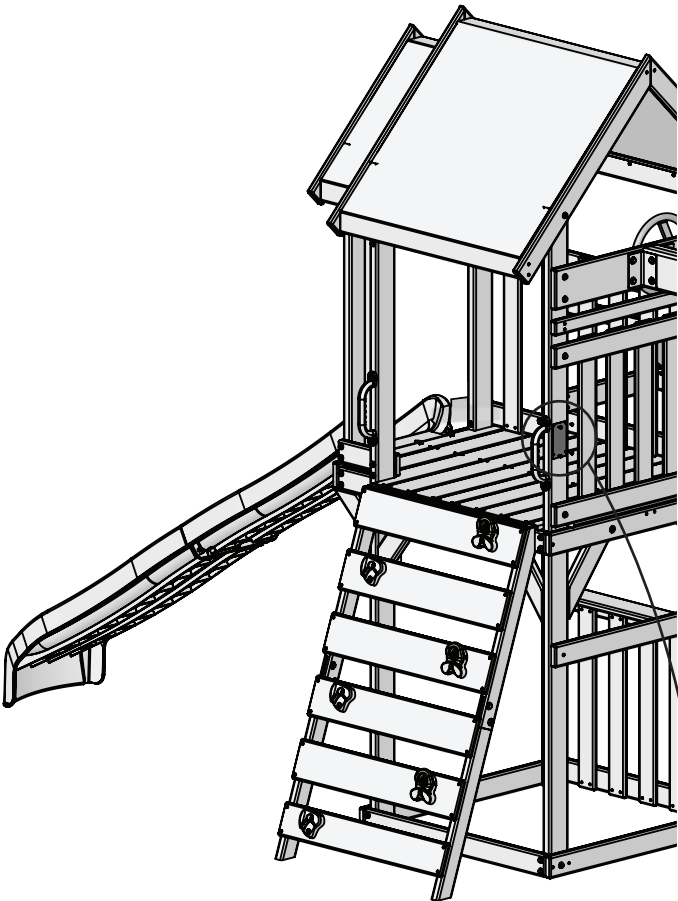

ATTACH THIS WARNING & I.D. PLAQUE TO THIS LOCATION ON YOUR PLAY EQUIPMENT!

This provides warnings concerning safety and important contact information. A Tracking Number is provided to allow you to get critical information or order replacement parts for this specific model.

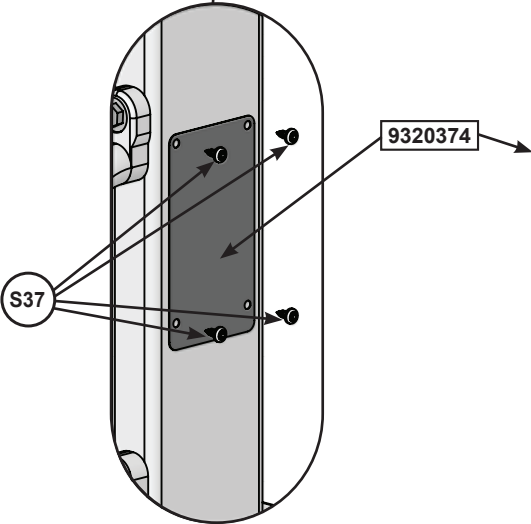

WARNING

AVERTISSEMENT

CONTINUOUS ADULT
SUPERVISION REQUIRED!

STRANGULATION HAZARDS
Never allow children to play with ropes, clotheslines, pet leashes, cables, chains or cord-like items when using this playset or to attach these items to play-set.
Never allow children to wear loose fitting clothing, ponchos, hoods, scarves, capes, necklaces, or items with draw-strings, cords or ties when using this play-set.
Never allow children to wear bike or sport helmets when using this play-set.
Failure to prohibit these items increases the risk of serious injury and death to children from entanglement and strangulation.

SERIOUS HEAD INJURY HAZARD
Maintain shock absorbing material under and around play-set as recommended in the Installation & Operating Instructions. Installation over concrete, asphalt, dirt, grass, carpet and other hard surfaces creates a risk of serious injury or death from falls to the ground.

SURVEILLANCE CONSTANTE
D'ADULTES EST REQUIS!

Risques D'étranglement
No jamais laisser les enfants jouer avec des cordes, cordes à linges, laisses pour animaux, des câbles, des chaînes ou ces type articles pendant de l'utilisation de cet portique de jeu ou à l'attaché de ces éléments à la portique de jeu.
No jamais laissez les enfants de porter des vêtements amples, des ponchos, des hottes, des foulards, capes, des colliers ou des articles avec cordes attirent ou les cordons pendant l'utilisation de cet portique de jeu.
No jamais laissez les enfants porter un casque de vélo ou de sport quand ils utilisent ce portique de jeu.
Défaut d'interdire ces éléments augmente le risque de blessures graves et de décès des enfants de enchevêtrement et d'étranglement.

RISQUE DE BLESSURES GRAVES DU TÊTE
Maintenir le matériau absorbant les chocs sous et autour de la portique de jeu comme recommandé dans les instructions d'installation. Installation sur béton, de l'asphalte, sol, de l'herbe, tapis et autres surfaces dure crée un risque de blessure à la tête graves ou la mort causé par tomber à la sol.

THIS PRODUCT IS INTENDED FOR USE BY CHILDREN FROM AGES 3 TO 10; weight limit of 110 lbs. per child. Maximum number of users, Installation & Operating Instructions; other information is available at:
POUR LES ENFANTS DE 3 À 10 ANS D'ÂGE; limite de 110 Livres par enfant. Nombre maximum d'utilisateurs, installation et d'utilisation; d'autres informations sont disponibles sur:

www.KidKraft.com

Contact us at: KidKraft
Dallas, TX 75244 USA
1-800-933-0771

Tracking Number:
Numéro de Suivi:

Hardware

4 x  #7 x 5/8" (16 mm)

Other Parts


1 x 

83

Step 71





MOVE FORT TO FINAL LOCATION PRIOR TO STAKING
FINAL LOCATION MUST BE LEVEL GROUND

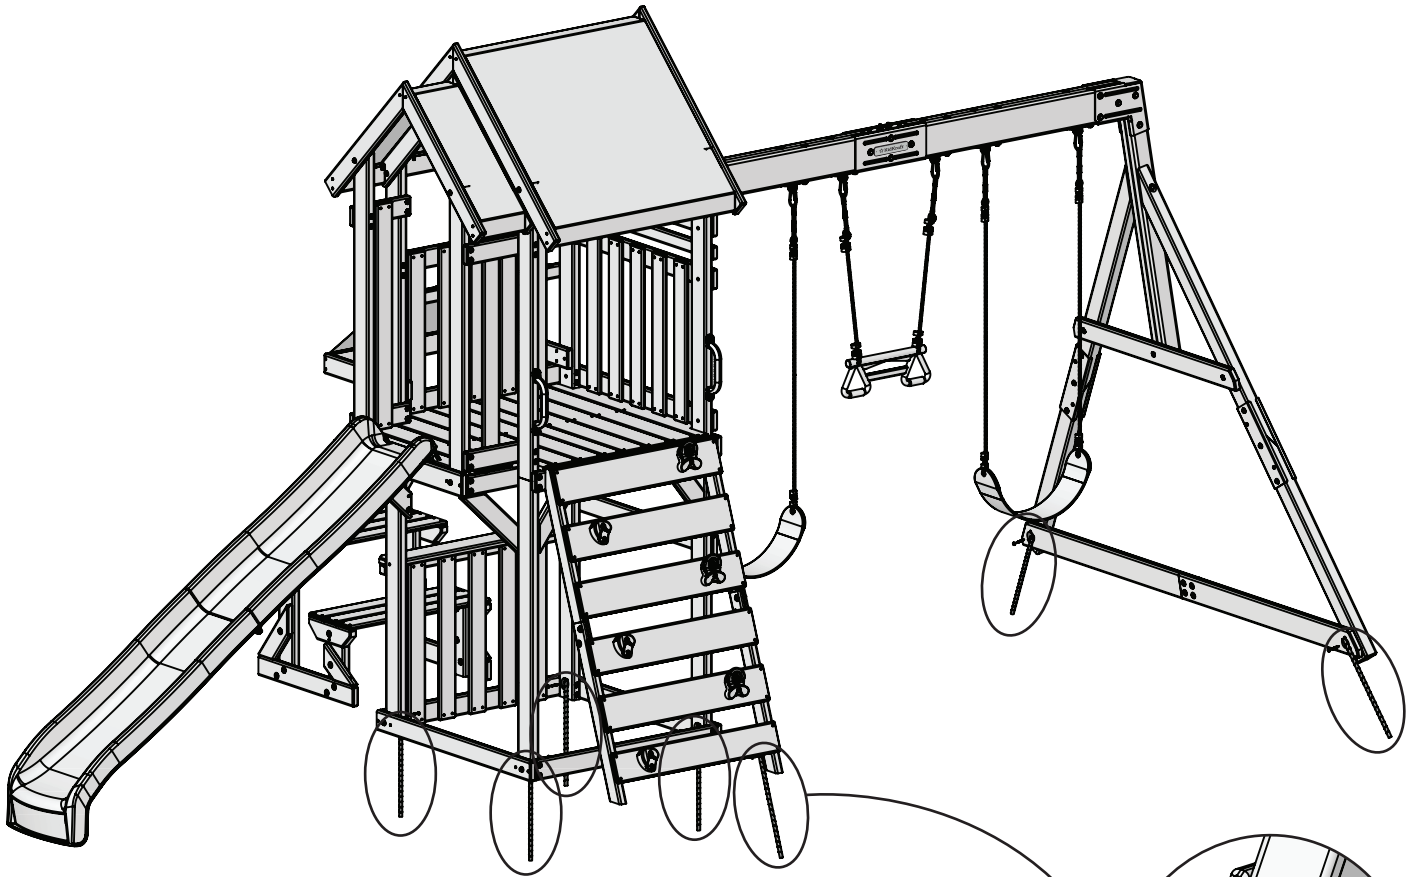

Warning! To prevent tipping and avoid potential injury, stakes must be driven 13" (330mm) into ground. Digging or driving stakes can be dangerous if you do not check first for under-ground wiring, cables or gas lines.

SEE FRONT COVER FOR SAFETY CLEARANCE

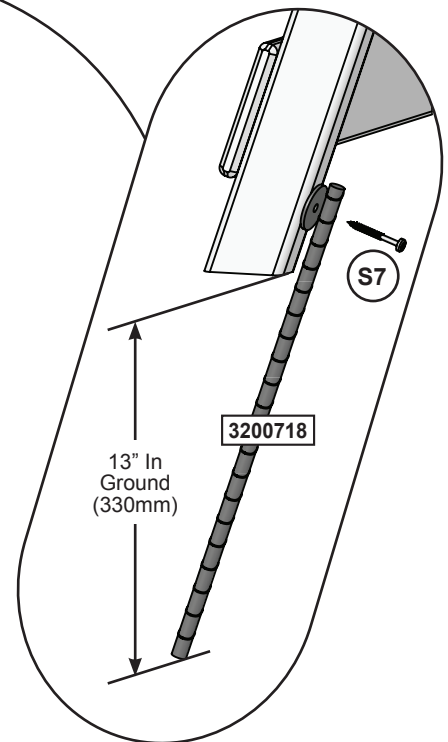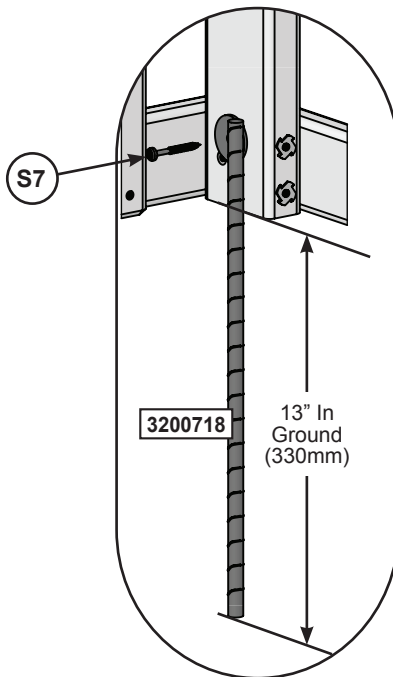

Hardware

7 x **S7** #12 x 2" (50.8 mm)

Other Parts

1 x **3200718** (7PK)

[illegible]

KIDKRAFT

Initial

[illegible]

--	--	--	--

[illegible]



KidKraft®

CLIT ALONG LINE

